

# CH13C REMOTE CONTROL Instructions

## 1. Product Overview

Product Name: REMOTE CONTROL

Product Model No.: CH13C

## 2. Environment requirement

Operation temperature: +10°C~+40°C.

Storage temperature: -10°C~65°C.

Operating Humidity: 10%~80%RH, non-condensing.

Storage Humidity: 10%~85%RH, non-condensing.

## 3. Directions for Operation

### 3.1 Pairing Remote


#### ADJUST

▲ This button lifts the head/foot/lumbar section of the foundation.

▼ This button lowers the head/foot/lumbar section of the foundation.



### 3.2 ADJUST:

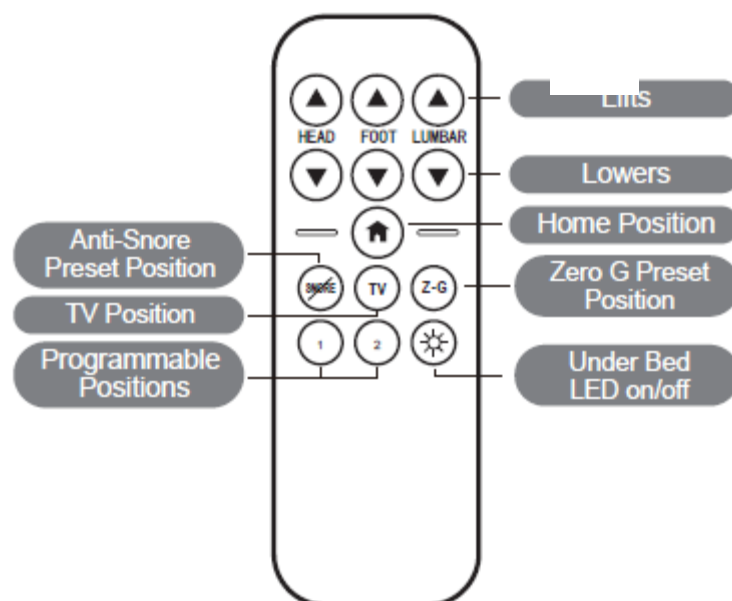

### 3.3 ONE TOUCH BUTTON:



One touch flat position.



One touch **ANTI-SNORE** preset position.



One touch **TV** preset position.



One touch **ZERO G** preset position.  
**ZERO G** adjusts your legs to a higher level than your heart, helping to relieve pressure of the lower back and promote circulation.



One touch programmable positions.

### 3.4 UNDERNEATH LED LIGHTING



One touch under bed **LED** lighting on/off.

#### 4. Matters needing attention:

- 4.1 The function will only work normally in proper working power conditions.
- 4.2 Remote Control needs three AAA batteries.
- 4.3 The control box is needed for proper control.
- 4.4 If problems are identified, they must be treated by professional personnel.

#### 5. Additional attention for user:

5.1 Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.