

Body Camera

Quick Start Guide

UD04974B

Quick Start Guide

COPYRIGHT ©2017 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to Body Camera.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory information

FCC information

FCC compliance: Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

After the laboratory measurement, the Max SAR value is 0.27W/kg for 2.4G Band which satisfies the RF exposure requirement

FCC conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53./EU, the

EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.



Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

After the laboratory measurement, the Max SAR value is 0.27W/kg for 2.4G Band which satisfies the RF exposure requirement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following

two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage, et
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut

fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions"

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

A	<u>.</u>
Warnings Follow these safeguards	Cautions Indicates a potentially hazardous situation,
to prevent serious injury or death.	which if not avoided, could result in equipment
	damage, data loss, performance degradation, or
	unexpected results.



Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 5 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Make sure that all the related equipment is power-off during the installation.
- Do not place the product in high-temperature or damp environment, and do not expose it to high electromagnetic radiation.
- If the product does not function properly, please contact your dealer or the nearest service center. Do not disassemble the product for repair or maintenance by yourself.
- Only use the battery, power adapter and assembly parts specified by the manufacturer.
- · Consult the authorized dealer or technician from Hikvision for any question and request for product using.

Applicable Models

This manual is applicable to the models listed in the following table.

Series	Model
	DS-MH2211/32G
	DS-MH2211/32G/GPS/WIFI
DS-MH2211 Series	DS-MH2211/64G
	DS-MH2211/64G/GPS/WIFI

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
<u>^</u>	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
NOTE	Provides additional information to emphasize or supplement
podentalism	important points of the main text.

TABLE OF CONTENTS

IABLE O	IABLE OF CONTENTS		
Chapter	r 1Introduction	7	
1.1	L Package List	7	
1.2	2 Buttons and Interfaces	7	
1.3	B How to Charge	8	
Chapter	r 2Start-up	9	
2.1	Start-up and Shutdown	9	
	2.1.1 Start-up	9	
	2.1.2 Sleep/Wakeup	9	
	2.1.3 Shutdown	9	
	2.1.4 Force to Shutdown	9	
2.2	2 Menu Operation	9	
2.3	·		
2.4	2.4 Taking Pictures		
2.5	2.5 Record and Capture		
2.6	2.6 Taping		
2.7	7 Playback	11	
Chapter	Chapter 3Configuration		
3.1			
	3.1.1 Turning on Wi-Fi	12	
	3.1.2 Network Transmission Parameters	12	
3.2	2 Camera Settings	13	
3.3	Positioning Settings	13	
Chapter	r 4Body Camera Assistant	14	
4.1	Assistant Installation	14	
4.2	2 Device and Assistant Connection		
4.3	Time Synchronization		
4.4	Platform Settings		
4.5	User Information Settings		
Chapter	r 5Troubleshooting	17	

Chapter 1 Introduction

Purpose:

Body camera is a video recording system that is typically used by law enforcement officers to record their interactions with the public and gather video evidences at crime scenes.

1.1 Package List

Following objects are included in package. If something loses, contact us or our supplier for it.

- 1 * Body camera.
- 1 * USB data cable.
- 1 * Charger.
- 1 * Demountable and angle adjustable clip
- 1 * CD which contains user manual and Body Camera Assistant.
- 1 * Printed quick start guide.

1.2 Buttons and Interfaces

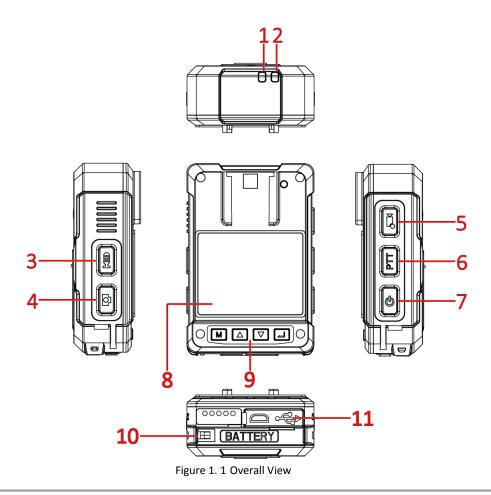


Table 1. 1 Button Description

No.	Button	Description
1	LED 1	When body camera is being charged, it is solid red.
		When body camera is in low battery, it flashes in red with high
		frequency.
		When body camera is recording, it flashes in red with low frequency.
2	LED 2	When body camera is starting up, it is solid green.
3	Taping	Press it to start/stop taping.
		Hold it for 3 seconds to turn on/off fluorescent.
4	Capture	Press it to capture current live view image.
5	Recording	Press it to start/stop recording.
		Hold it for 3 seconds to turn on IR positioning light.
		Hold it for 2 seconds to start up body camera and start recording.
6	PTT	Reserved.
7	Sleep/Wake	Press it for 3 seconds to start up.
		Hold it for 3 seconds to turn on.
		After device starts up, press it to inactivate/activate LCD.
8	LCD	It displays local menu and live view image.
9	Menu button	M _:
		In LCD live view mode, press it to enter main menu.
		In LCD menu, press it to exit.
		Δ/∇ :
		• In LCD menu, press it to navigate between fields and items in menus.
		• In LCD playback mode, press Δ/∇ to speed up/slow down
		playback speed.
		• In LCD live view mode, press \triangle/∇ to zoom in/out.
		<u></u> !:
		In LCD menu, press it to enter a sub-menu or confirm a selection.
		In LCD live view mode, hold it for 3 seconds to set a video tag.
10	Battery	Battery slot.
11	USB interface	USB interface for charging and data transmission.
	HDMI interface	HDMI interface.

1.3 How to Charge

Purpose:

Follow the steps to charge device.

Steps:

- 1. Open the cover of USB interface.
- 2. Connect body camera to the charger with the USB data cable.

Chapter 2 Start-up

2.1 Start-up and Shutdown

2.1.1 Start-up

Before you start:

Ensure the power is sufficient. If not, charge body camera. For details, refer to 1.3 How to Charge.

Step:

Hold **Sleep/Wake** for 3 seconds. Then the LED 2 turns green, the **HIKVISION** logo pops up, and you will hear an audible notification. All of these indicate the body camera starts successfully.

2.1.2 Sleep/Wakeup

Step:

The LCD goes to sleep automatically when there is no operation in the predefined auto-lock time. Press Sleep/Wake to manually inactivate or activate LCD.

2.1.3 Shutdown

Step:

Hold **Sleep/Wake** for 3 seconds. When you hear an audible notification, and the **HIKVISION** logo pops up on the LCD, the LCD shut down successfully.

2.1.4 Force to Shutdown

Step

If body camera crashed or it cannot be shut down normally, you can hold **Sleep/Wake** for 15 seconds to shutdown forcedly.



Body camera will be restored to default settings.

2.2 Menu Operation

Before you start:

Wake up LCD.

Steps:

- 1. Press M to enter main menu.
- 2. Press to enter the sub-menu.

Table 2. 1 Sub-Menu Description

Menu	Description
Playback	You can play back recorded videos, pictures, and audios.

Menu	Description
Camera Settings	You can set camera parameters including video resolution, bitrate, frame
	rate, pre-record time, post-record time, video clip time, picture quality, and
	video format.
Network Settings	You can set network transmission resolution, network transmission bitrate,
	network transmission frame rate, platform connection, and Wi-Fi
	parameters.
System Settings	You can set positioning parameters, time synchronization, system sound,
	language, and so on.

2.3 Turning on/off IR Lights

Purpose:

The body camera provides IR (Infrared Radiation) lights. At night or dark environment, the IR light helps to get a visible image.

Steps:

- 1. Enter System Settings sub-menu.
 - Main Menu > System Settings
- 2. Press \triangle/∇ to position the cursor on Infrared item. And press \longrightarrow to enter Infrared menu.
- 3. Press Δ/∇ to position the cursor on **ON**.
 - **OFF**: By default, IR light is off.
 - **ON**: In night period or dark environment, it is recommended to turn on IR light.
 - AUTO: Body camera automatically turns on/off IR light according to environment.
- 4. Press to save the settings.

2.4 Taking Pictures

Purpose:

You can take pictures of the crime scenes or other situations.

Step:

- 1. Enter live view mode.
- 2. Press to take a picture for current live view image.



The picture is saved in memory in .jpg format and named by taking picture date and time.

2.5 Record and Capture

Purpose:

You can record the videos in crime scenes or other situations. And during the recording, you can capture.

Steps:

1. Enter live view mode.

- 2. Press to start recording. Then in live view turns to and the LED 1 starts flashing in red.
- 3. Optionally, during the recording process, you can press to capture current live view image.
- 4. Press again to stop recording. Then turns to ...



The video is saved in meory in .mp4 format and named by recording starting time.

2.6 Taping

Purpose:

You can tape audios in crime scenes or other situations.

Steps:

- 1. Enter live view mode.
- 2. Press to start taping. Then pops up in live view interface.
- 3. Press 🗒 again to stop taping. Then 👤 disappears.



The audio file is saved in memory in .AAC format and is named by taping starting time.

2.7 Playback

Purpose:

You can play back the recorded videos, pictures, and audios.

Steps

- 1. Enter Playback interface.
 - Main Menu > Playback
- 2. If Verify function is on, you need to enter device password to get permission.



Figure 2. 1 Enter Password

- 3. Press \triangle/∇ to select the playback file type as **Video**, **Picture**, or **Audio**. And press \longrightarrow to enter selected type menu.
- 4. Press Δ/∇ to select data.
- 5. In file list, press Δ/∇ to select the file to play back.
- 6. Press _____ to start playback.
- 7. Press M to exit playback.

Chapter 3 Configuration

3.1 Network Settings

3.1.1 Turning on Wi-Fi

Purpose:

You can access internet by connecting to a Wi-Fi.

Before you start:

Configure Wi-Fi parameters in body camera assistant. For detailed steps, refer to user manual.

Steps:

1. Enter Network Settings interface.

Main Menu > Network Settings

2. Press \triangle/∇ to position the cursor on **Wi-Fi** item. And press \longrightarrow to enter Wi-Fi menu.



Figure 3. 1 Wi-Fi Settings

- 3. Press \triangle/∇ to select Wi-Fi as **On**.
- 4. Press ____ to save the settings.
- 5. Then the prompt "Reboot device to take effect." pops up. Press _____ to reboot.
- 6. You can view the Wi-Fi **Status**, **SSID**, and **IP** in Wi-Fi Information interface.

Main Menu > Network Settings > Wi-Fi Information



Figure 3. 2 Wi-Fi Information

3.1.2 Network Transmission Parameters

Purpose:

By setting network transmission parameters, you can determine the resolution, frame rate, and bitrate used by





1. Enter Network Settings interface.

Main Menu > Network Settings

- 2. Press \triangle/∇ to position the cursor on **Net Resolution**, **Net Bitrate**, or **Net Frame Rate**. And press to enter corresponding menu.
- 3. Press \triangle/∇ to select target parameter.
- 4. Press ____ to save the settings.

3.2 Camera Settings

Purpose:

You can set the video parameters, including resolution, frame rate, bitrate, and so on.

Steps:

Enter Camera Settings interface.

Main Menu > Camera Settings

- 2. Press \triangle/∇ to position the cursor on **Video Resolution**, **Bitrate**, **Frame Rate**, **Pre-Record**, **Post-Record**, or other items. And press ______ to enter corresponding menu.
- 3. Press Δ/∇ to select target parameter.
- 4. Press to save the settings.
- 5. Reboot device to take effect the new settings.

3.3 Positioning Settings

Purpose:

Body camera has a built-in positioning module. By turning on positioning function, the device can obtain the latitude, longitude, and speed information. The information will be displayed in live view.

Before you start:

Ensure the body camera locates in a place the positioning signal exists.

Steps:

1. Enter Camera Settings interface.

Main Menu > System Settings

- 2. Press Δ/∇ to position the cursor on **Positioning** item. And press \longrightarrow to enter Positioning menu.
- 3. Press \triangle/∇ to select positioning type as **Off**, **GPS**, **BeiDou**, or **GPS** and **BeiDou**.
- 4. Press ____ to save the settings. If positioning succeeded, the positioning icon in live view will turn from



Chapter 4 Body Camera Assistant

Purpose:

Log into body camera via the Body Camera Assistant to view device's logs, videos, audios, and pictures, and configure parameters remotely.



Assistant mentioned below refers to the Body Camera Assistant.

4.1 Assistant Installation

Purpose:

The installation package BodyCameraAssistant-win32.exe is delivered with the CD.

Steps

- 1. Double-click the BodyCameraAssistant-win32.exe to start installing.
- 2. Follow the wizard to install the assistant.

4.2 Device and Assistant Connection

Purpose:

You need to connect the assistant with body camera via the USB data cable.

Before vou start.

Connect the body camera to your computer with the USB cable.

Steps:



- Click the BodyCame... icon to start the assistant.
- 2. Click Recognize device button to start recognizing. Then the recognized device will be listed.



Figure 4. 1 Recognized Device

3. Click the recognized device, input device password, and then click **Login** to log in. Then the configuration interface shows.



STRONG PASSWORD RECOMMENDED—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

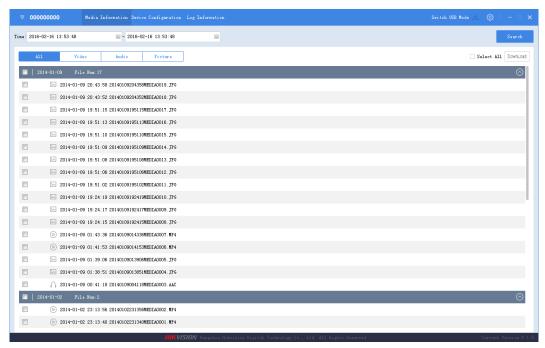


Figure 4. 2 Body Camera Assistant

4.3 Time Synchronization

Purpose:

You can synchronize device time with your custom time or network time.

Steps:

Click the Device Configuration tab, and click Time Settings item in the left menu list.



Figure 4. 3 Time Settings

- 2. You can select time synchronization type as **Auto Time Synchrony** or **Manual Time Synchrony** by checking corresponding checkbox.
 - Auto Time Synchrony: If selected, Device Time isn't configurable. Assistant will synchronize the
 device time with the NTP server time.
 - Manual Time Synchrony: If selected, you can synchronize device time according your custom time.
- If Auto Time Synchrony is selected, select the **Time Zone** according to your needs.
 If Manual Time Synchrony is selected, select the **Device Time** and **Time Zone** according to your needs.
- 4. Click **Save** to save the settings.

4.4 Platform Settings

Purpose:

You can log in device via iVMS platform, to monitor device, receive alarms, and so on.

Steps:

1. Click the **Device Configuration** tab, and click **Platform Settings** item in the left menu list.

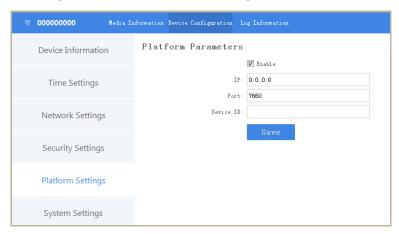


Figure 4. 4 Platform Settings

- 2. Check the checkbox of **Enable** to enable platform connection.
- 3. Edit IP, Port, and Device ID.
 - IP: The IP address of platform server you want to connect.
 - **Port**: The port of platform. The default port of iVMS is 7660.
 - **Device ID**: When adding device via platform, the ID is needed. It is device's unique identification.

4.5 User Information Settings

Purpose:

You can customize the police ID and device ID.

Steps:

1. Click the **Device Configuration** tab, and click **Device Information** item in the left menu list.



Figure 4. 5 User Information

2. You can edit the Police ID and Device ID.



Both Police ID and Device ID cannot be longer than 32 characters.

3. Click **Save** to save the settings.

Chapter 5 Troubleshooting

Unable to start up.

a) Possible Reason: Device runs out of power.

Solution: Get device be charged.

b) Possible Reason: Device is abnormal.

Solution: Hold the Sleep/Down button for 15 seconds to reset device.

Unable to start recording.

a) Possible Reason: Memory is full.

Solution: Back up device and clear device memory.

b) Possible Reason: Formatting memory error.

Solution: Format the memory via assistant. For detailed steps, refer to 7.5.7 Formatting in user manual.

Unable to log in.

a) Possible Reason: Password error.

Resolution: Reset your password. For detailed steps, refer to 7.5.8 System Resetting in user manual.

b) Possible Reason: Device is abnormal.

Resolution: Reboot device.

0100001060129

