

## PRODUCT INSTRUCTIONS

### 1.Download and install mobile phone APP

Method 1: Scan QR code to get the app.



Support both Android and iOS operating system

Method 2: Visit official website [www.bonbonbear.com](http://www.bonbonbear.com), enter "download" to get the app.

Method 3: Search "bonbonbear" from big application platforms (such as the APP store, peas, android APP market, etc.)

#### Download Alert:

( 1 ) Please use the Android (2.3 and above) or iOS (7.0 and above) smartphone to download "bonbonbear" APP;

( 2 ) Application involves the location information, APP download process may be prevented by security software, please close the security software before you download;

( 3 ) Because the application file is big, it is recommended to download it with WIFI, if encounter a failed download, please check the network status and re-download it

when network is unobstructed.

## 1、 **Activate and bind** Miotio children watch

(1) Bind account, activate device.

Method 1: Scan the device' s QR code to bind.

Turn on the watch, start the Miotio mobile phone APP, register a new user and log in successfully, then scan the following QR code to bind the watch.

About 20 seconds after activation, you can use when getting a successful prompt.



Note: this QR code is the unique identifier to bind watch, please safekeeping.


Method 2: Binding through the device ID (applicable to device in unactivated state)

When watch starts but in unactivated state, long press the record button 5 seconds to enter engineering model for device ID number and security code (Akey); start "bonbonbear" mobile phone APP, register a new user and log in successfully, click on the "device ID activation" and enter the correct ID number and security code, then the watch can be bound and activated. (long press the record button 5 seconds again to exit engineering mode).

( 2 ) Multiple accounts can be bound together

Device can support up to 6 APP accounts binding together (the first one is the default account as the administrator). After the success of the master account binding device, other accounts scan QR code and enter the correct verification code, then can bind the watch (verification code will be sent by the system to the main account phone)

## 2、 Device introduction

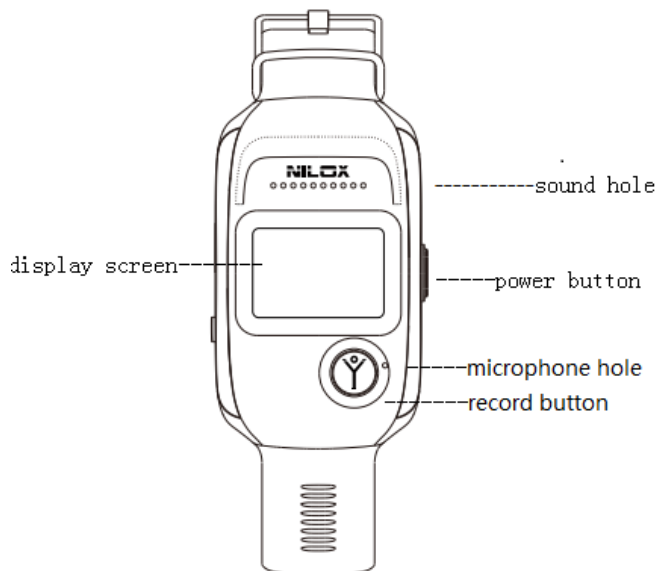

Turn on/off: Long press the power button 3 seconds (in order to ensure the safety of children, after activation watch can only be turned off through the APP remote shutdown function).

SOS help: When the current status of watch is on, long press call/record button 3 seconds to call master account, after which send SOS message and APP notifications to **the** binding mobile phone account and start **reciprocating positioning** and cancel the reciprocating positioning in APP.


Telephone answering: When the watch is called, short press record button to

answer phone calls, short press power key to reject/end calls; (in order to ensure the safety of children, only binding phone ID can call in).

Message view: When receiving new message, the watch will alert users to view message with slight vibration. After seeing, short press power key to delete this message; If have multiple unread messages, short press power key to delete the current message to get next one.

More operation: Scan "usinghelp" QR code on the back cover to view the detailed operation guide, common problems and the APP usinghelp.

### 3、Charging Method

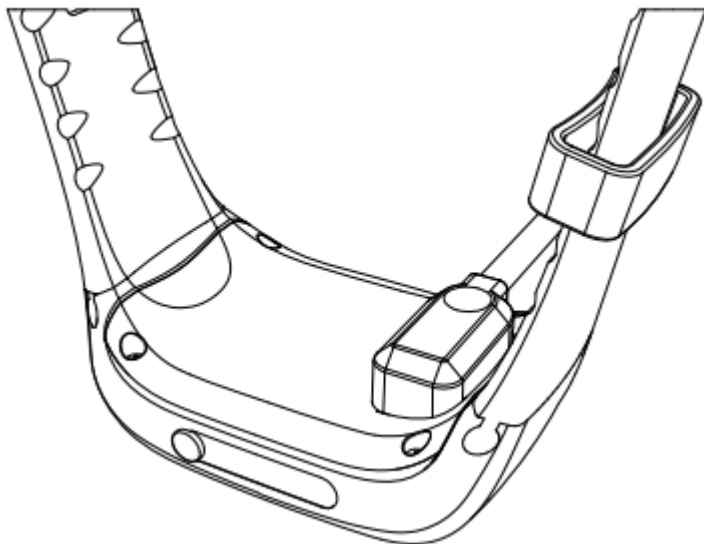

Connect one end of the charging cable to the charger of 5V output power that conforms to the national standard , or to USB interface on computer, mobile power charger, etc., then charge in a dry environment making sure that the magnetic suction charger and watch charging interface are coincided each other. Slight heat releasing from device in charging process belongs to the normal phenomenon. Generally battery can be filled with 2-3 hours charging.

#### 4、 Notes

( 1 ) Do not soak the watch in water or any other liquid (no **contacting with** corrosive liquid );

( 2 ) Please do not put the watch in dust, high temperature, high heat, extreme pressure, strong radiation environment;

( 3 ) Please use clean soft cotton cloth to clean the watch **to** avoid dirt deposition affecting device normal use or wearer' s health;

( 4 ) This product doesn't work without power and outside service area;

( 5 ) When the device shows low power or APP receives watch' s low power reminder, please recharge it;

( 6 )Please use 5V output power that conforms to the national standard and the original rechargeable cable to charge;

( 7 ) Don' t disassemble and remodel the device freely to avoid any trouble or danger.

Special statement: This product has the function of positioning, tracking and remote recording, only used for the guardian' s legal guardianship for their own children, please do not use it for any illegal way. All responsibility and consequences caused by user's improper operation or misuse will be taken by the users themselves, and has nothing to do with our company.

#### 5、 After-sales service

( 1 ) This product follows the national "three guarantees" policy, since the date of purchase, with shopping invoice and warranty card, users can enjoy

one-year free warranty service for device body (except appearance wear).

( 2 ) The division of the following situations caused by man-made fault will not **enjoy** free warranty service:

A、 All kinds of fault caused by disassembly and remodeling without authorization;

B、 Device failure due to the bad transport or other force majeure factors ;

C、 Device failure due to the lack of reasonable maintenance ;

D、 Fault caused by the violation of common sense or not according to instruction and improper operation;

( 3 ) Maintenance services outside the scope of the warranty will be charged according to the provisions of vendors.

( 4 ) For after-sales service or other advice, please call our customer service hotline at 400-807-0727.

### **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue for body, and 4 W/kg averaged over ten gram of tissue. Device types BODYGUARD (FCC ID: 2AGDI32NXBOTRGP00X) has been tested against this SAR limit. The highest reported SAR values for near to Mouth, Wrist-worn, and simultaneous transmission are 0.147 W/kg, 3.178 W/kg and 3.325W/kg respectively. This device was tested simulation typical 0mm wear on wrist and 10 mm to mouth. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above. This device is

restricted to worn on the wrist operations.

### **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.