



HunterDouglas

Instructions for PV1 Assembly

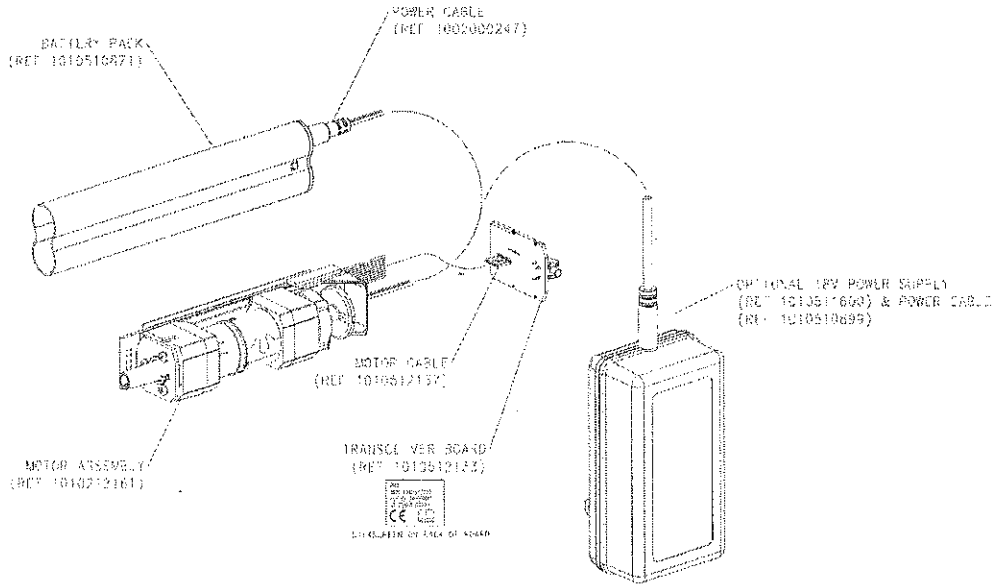

STANDARD

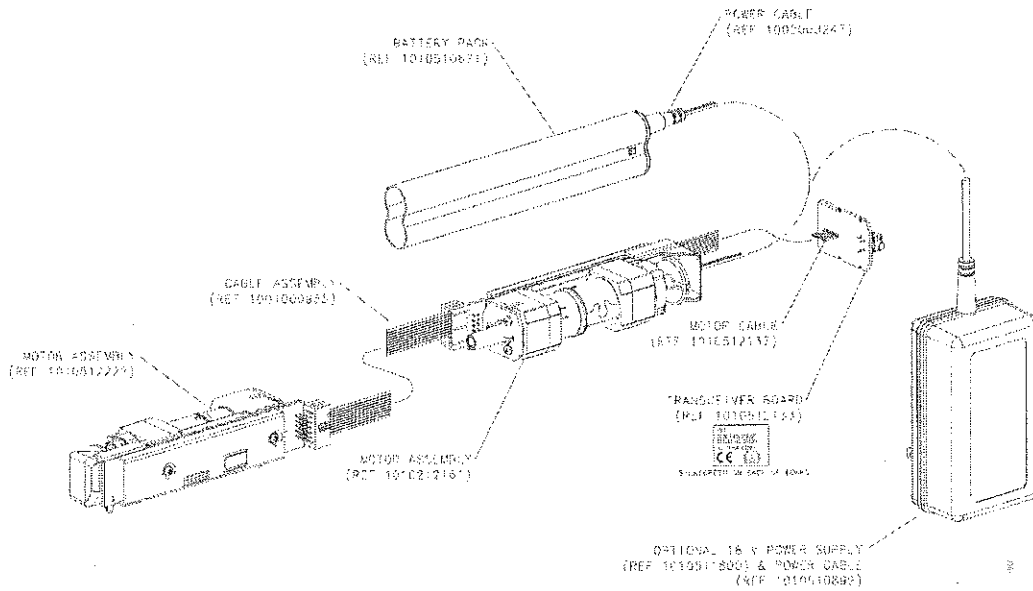

SEQUENTIAL

Connect the Power Source


- Refer to the appropriate section below based on your order.
 - > For a battery wand, see "If You Have a Battery Wand..." below.
 - > For an optional DC power supply, see "If You Have a DC Power Supply..."

If You Have a Battery Wand...

Install Batteries Into the Battery Wand


NOTE: Hunter Douglas recommends AA alkaline batteries for use with our battery-powered assemblies. These will provide more than one year of operation, depending on usage. Lithium and rechargeable batteries are not recommended.

- Squeeze the cap latch to release and remove the cap.
- Install the batteries according to the instructions on the battery wand label.
- Replace the cap.
 - > Align the tab with the end of the wand.
 - > Press the cap on until it latches.

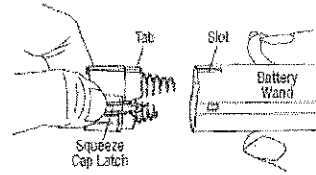

Plug the Power Cable into the Battery Wand

- Connect the power cable (coming from the end of the motor) into the socket on the battery wand.

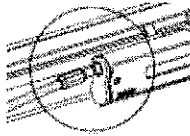

If You Have a DC Power Supply...

Connect the Power Supply

- Plug the power cable from the motor into the extension cable.
- Plug the other end of the extension cable into the DC power supply.
- Plug the DC power supply into a standard outlet.

WARNING: Keep cords and small parts out of the reach of children. They can wrap cords around their necks and **STRANGLE**. They can also put small parts in their mouths and **CHOKE**.

WARNING: Electric shock and/or a fire hazard may occur if the DC power supply and cables are not properly installed.

Operate the Assembly

Check the Power Cord


- Check to ensure the power cord is not pinched.

Test the Assembly Using the Manual Control Button

Testing the shade with the manual control button will allow you to ensure that the motor and power source are working correctly.


Press the manual control button to test operation

- > Press the button to alternately rotate motor, stop, and rotate the other way.

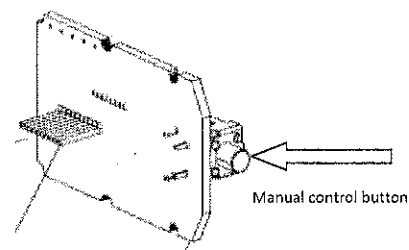

Test the Assembly Using the Remote

Refer to the PowerView™ Remote Guide for more information



To link a shade to a remote:

1. Press and hold ■ Stop for six seconds to put remote in program mode. The lights on remote will pulsate to indicate it is in program mode.
2. Press and hold the manual control button on the assembly.
3. While continuing to press the manual button, press ■ Stop on the remote. The motor will rotate slightly to indicate it has been linked to the network.
4. Press and hold ■ Stop for six seconds to exit program mode.

To join a shade to a GROUP:

1. Press and hold ■ Stop for six seconds to put remote in program mode. The lights on remote will pulsate to indicate it is in program mode.
2. Press desired group number (1 – 6) on the remote. The light for the group number selected will pulsate to show it is selected.
3. Press and hold the manual control button on the assembly.
4. While continuing to press the manual button, Press ▲ Open on the remote. The motor will rotate slightly to indicate it has joined the group.
5. Press and hold ■ Stop for six seconds to exit program mode.

To remove a shade from a group:

1. Press and hold ■ Stop for six seconds to put remote in program mode. The lights on remote will pulsate to indicate it is in program mode.
2. Press desired group number (1 – 6) on the remote. The light for the group number selected will pulsate to show it is selected.
3. Press and hold the manual control button on the assembly.
4. While continuing to press the manual button, Press ▼ Close on the remote. The shade will jog to indicate it has been removed from the group.

Radio Control Operation

Once the assembly has been joined to a group, radio control is used to operate the motor. There is no need to aim the remote toward the assembly being operated. Multiple assemblies can be operated at the same time.

Remote Functions:

1. To wake up remote, press ■ Stop. The last group(s) selected will be highlighted and active.
2. Press "All" or Groups 1-6 to select specific shade(s) to move. Selected groups will light to show they are selected.
 - a. Multiple Group number may be selected at a time.
 - b. To deselect a Group, press the Group number again. The light for that group will go out.
3. Select the ▲ OPEN button to move the motor in one direction.
4. Select the ▼ CLOSE button to move the motor in the other direction.
5. While a motor is in motion, press ▲ OPEN or ▼ CLOSE, the opposite of motor motion to reverse direction.