




Type No. C19F06110

ImageQuest F910

Perfect Flat  Monitor

User' Guide



U.S.A.

U.S.FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Connecting of peripherals requires the use of grounded shielded signal cables.

DECLARATION OF CONFORMITY

WE **HYUNDAI ELECTRONICS INDUSTRIES CO., LTD.**
Ami-ri Bubal-Eub Ichon-Si Kyungki-Do
467-860 KOREA

declare under our sole responsibility that the product:

Kind of equipment : COLOR MONITOR

Type-Designation : C19F06110

to which this declaration relates is in conformity with the following standard(s) or other normative document(s)


Safety : EN60950 : 1992 + A1, A2, A3, A4
EMC : EN 55 022/1994, EN 50 082-1/1992
IEC 801-2/1991, IEC 801-3/1984, IEC 801-4/1988

following the provisions of the Low Voltage Directive 73/23/EEC, 93/68/EEC and the EMC Directive 89/336/EEC.

Accredited testlaboratory:
TÜV Rheinland
Am Grauen Stein
51105 Köln

KOREA / JUNE. 16, 2000

(Place and date of issue)

HONG KI, KIM 

(Name and signature of authorized person)

F910

Perfectly Flat 3D Monitor

Contents

- 1. Introduction1/20
- 2. Safety Information1/20
- 3. Installing the monitor3/20
 - 3-1. Packing List3/20
 - 3-2. Fastening the swivel and tilt base ...4/20
 - 3-3. Selecting a suitable location4/20
 - 3-4. Connecting the monitor5/20
 - 3-5. Setting the refresh rate.....8/20
 - Preset Timing Table.....8/20



- 4. Adjusting the picture.....9/20
 - 4-1. Using the On Screen Display.....10/20
 - 4-2. Direct access buttons.....10/20
 - 4-3. OSD Adjustments.....11/20
- 5. Display power management.....16/20
 - Reducing power consumption.....16/20
- 6. Troubleshooting.....17/20
- 7. Specifications.....20/20



F910

Perfectly Flat 3D Monitor

1. Introduction

This manual contains instructions for installing and operating Hyundai DeluxScan F910.

Hyundai DeluxScan F910 is a highly ergonomic color display unit;

- 19" diagonal Flat 0.25mm dot pitch CDT
- Supporting high screen refresh rates and full scan flicker-free picture quality
- With On Screen Display menus for user control
- 100-240V AC input voltage
- VESA DPMS (Display Power Management Signaling)
- VESA DDC1/2B compatibility
- 3D Image view enabled function(By wearing 3D glasses)

2. Safety Information

When you set up and use your display unit, follow the safety instructions below.

- Do not use the display unit in humid environments like bathrooms, damp cellars, swimming pools, etc.
- This equipment must be connected to an earthed outlet which is close to the display unit and accessible in case you need to disconnect the display.
- Do not connect an extension cord.
- Never insert objects into the openings on the outside of the device as you can come into contact with live electrical components. This can cause fire or give strong electrical shocks.
- Slots in the cabinet are provided for ventilation. Do not block the ventilation slots in the display unit cabinet.
- Do not under any circumstances open the display unit cabinet.

F910

Perfectly Flat 3D Monitor

Cleaning and Maintenance

- To avoid risk of electric shock, do not disassemble the display unit cabinet. The unit is not user-serviceable. Remember to unplug the display unit from the power outlet before cleaning.
- Do not use alcohol (methyl, ethyl or isopropyl) or any strong dissolvent. Do not use thinner or benzene, abrasive cleaners or compressed air.
- Do not wipe the screen with a cloth or sponge that could scratch the surface.
- To clean your antistatic screen, use water and a special microfiber screen cleaning tissue used in optical lens cleaning, or lightly dampen a soft, clean cloth with water or a mild detergent.
- To clean display unit cabinet, use a cloth lightly dampened with a mild detergent.
- During the transportation of the monitor, the swivel base has to be removed in every case.

Please take more than 15 minutes rest in case headache or eye-strain occurs while enjoying 3D image for long time wearing 3D glasses.


F910

Perfectly Flat 3D Monitor

3. Installing the monitor

3-1. Packing List

The following items should be found in the packaging.

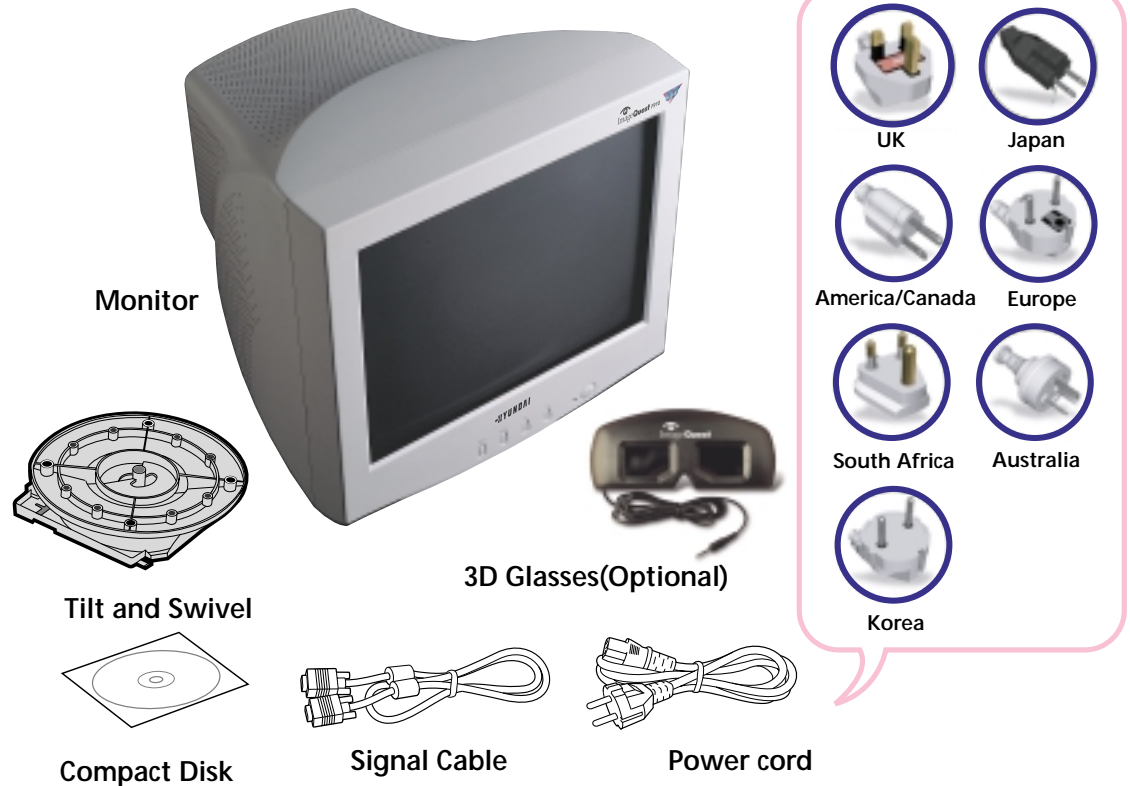


! Above power cord can be changed upon different voltage areas. Please contact your dealer if anything is missing or damaged.

F910

Perfectly Flat 3D Monitor

3-2. Fastening the swivel and tilt base

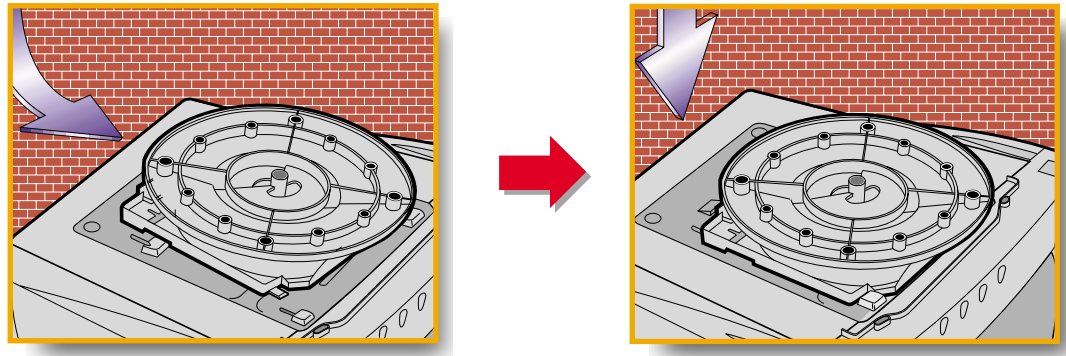

- Place the base against the bottom of the monitor so that the base fasteners are aligned with appropriate slots.
- Push the base towards the front of the monitor until the latch locks into position.
- Place the monitor at least 30cm from other electrical or heat-emitting equipment and allow at least 10cm on each side for ventilation.
- Place the monitor in a position where no light shines directly onto or is reflected on the screen.
- To reduce eye strain, avoid installing the display unit against a bright background such as a window.
- Position the monitor so that the top of the screen is no higher than eye level.
- Position the monitor directly in front of you at a comfortable reading distance (around 45 to 90cm)



Please set up refresh rate(vertical frequency) as more than 120Hz to decrease screen flicker coming through 3D glasses on performing 3D image.


3-3. Selecting a suitable location

F910


Perfectly Flat 3D Monitor

3-4. Connecting the monitor

! Before you start cabling your monitor, check that the power is off on all units. To avoid any possibility of electric shock, always connect your equipment to properly earthed outlets.

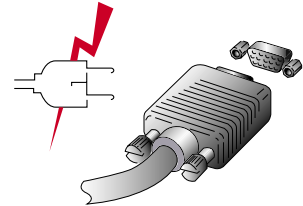


► P/C

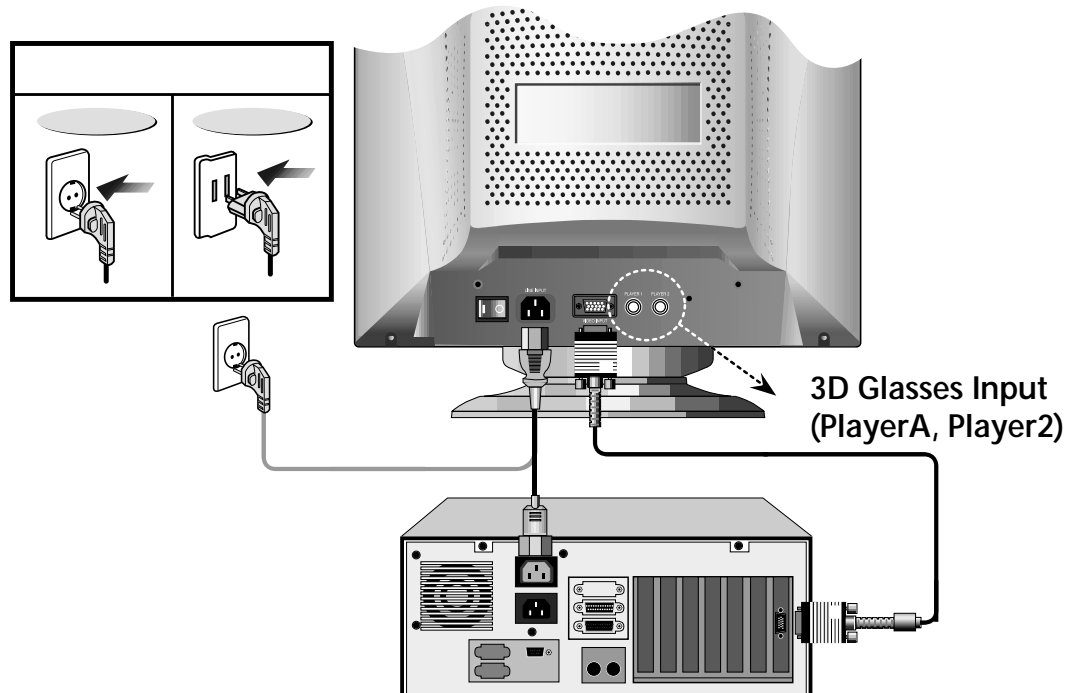

F910

Perfectly Flat 3D Monitor

► WORK STATION

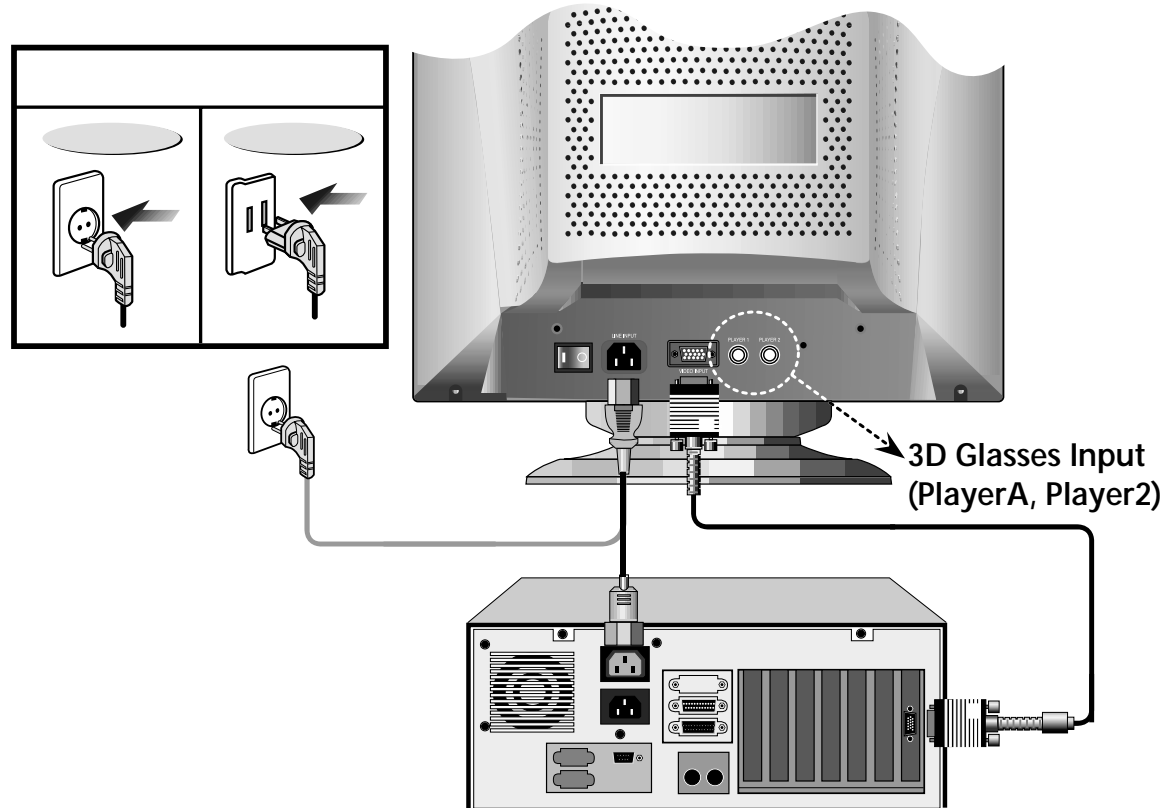

F910

Perfectly Flat 3D Monitor

1. Insert the 15-pin signal cable connector to the VGA connection on your computer and screw it down. (BNC OPTION : For BNC user, insert BNC connectors into the BNC connection on the monitor and PC)
2. Plug the display unit's power cable first to the back of the display unit.
3. *Then* plug the power cable to a 100V - 240V earthed electrical outlet or to the system unit, if it has an outlet for the display power cable.
4. Turn on the display unit using the Soft power switch and check that the power LED is on. If not, repeat steps 3, 4 and 5 or refer to the *Troubleshooting* section of this guide.



5. Turn on the power to the computer. The picture will appear within about 15 seconds. Adjust the picture to obtain optimum picture quality. See the section *Adjusting the picture* in this guide for more information.

F910

Perfectly Flat 3D Monitor

3-5. Setting the refresh rate

Follow the instructions below to set your refresh rate in Windows 98.

1. Go to the configuration window (Start-Settings-Configuration window).
2. Double click on the 'Display' icon.
3. Click on the 'Settings' tab.
4. Click on the 'Advanced' button.
5. Click on 'Adapter' and select 85Hz from the list.
6. Click on 'Apply' to accept the selected value.

The recommended setting is a resolution of 1280x1024(1600x1200) and a refresh rate of 85Hz.

Preset Timing Table

| No. | Resolution | Horizontal Frequency | Refresh rate |
|-----|-------------|----------------------|--------------|
| 1 | 720 x 400 | 31.5 KHz | 70 Hz |
| 2 | 640 x 480 | 31.5 KHz | 60 Hz |
| 3 | 640 x 480 | 63.7 KHz | 120 Hz |
| 4 | 800 x 600 | 53.7 KHz | 85 Hz |
| 5 | 1152 x 864 | 67.5 KHz | 75 Hz |
| 6 | 1024 x 768 | 68.7 KHz | 85 Hz |
| 7 | 1024 x 768 | 81.8 KHz | 100 Hz |
| 8 | 1280 x 1024 | 79.9 KHz | 75 Hz |
| 9 | 1280 x 1024 | 91.1 KHz | 85 Hz |
| 10 | 1600 x 1200 | 93.8 KHz | 75 Hz |
| 11 | 1600 x 1200 | 106.3 KHz | 85 Hz |


* 3D recommended resolution : 800x600@144Hz(This resolution gets rid of eye-strain through flicker free.)

F910

Perfectly Flat 3D Monitor

4. Adjusting the picture

You can adjust the screen display by using the buttons located below the screen.

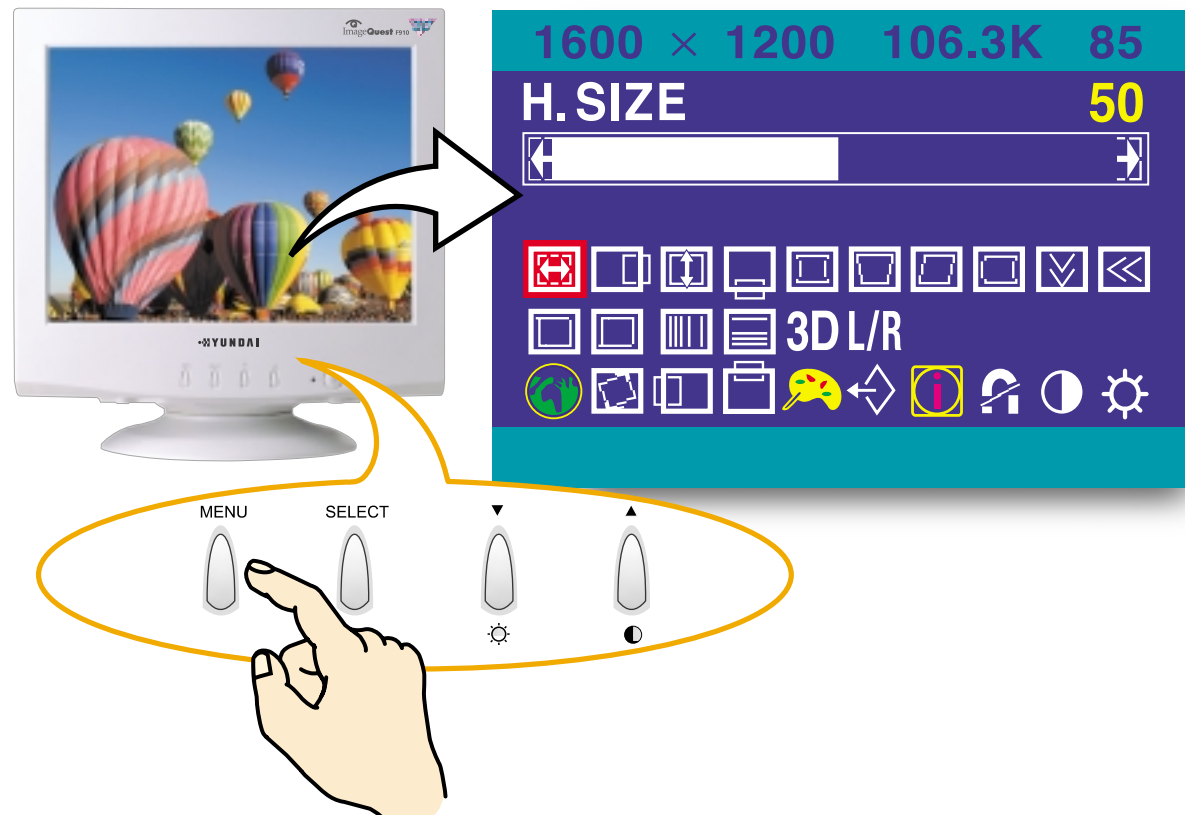

F910

Perfectly Flat 3D Monitor

4-1. Using the On Screen Display

1. Push the MENU button to call the OSD to the screen. The resolution and frequency are displayed at the top of the menu box for your information.
2. Push the ▲ or ▼ button to choose the item you want to adjust. The selected item is highlighted.
3. Push the SELECT button to adjust the highlighted item.
4. Use the ▲ or ▼ button to adjust the selection.
5. Push the SELECT button to return to the previous menu if you are in a submenu.
6. The display unit automatically saves the new settings in 3 to 4 seconds after your last adjustments and the menu disappears. You can also push the MENU button to make the menu disappear.

4-2. Direct access buttons



BRIGHTNESS

Use the button ▼ to select the brightness adjustment.
Adjust with ▲ or ▼ button.



CONTRAST

Use the button ▲ to select the contrast adjustment.
Adjust with ▲ or ▼ button.

4-3. OSD Adjustments

You can play the movie file to see how to adjust the picture image by clicking each icon or title hereunder.

The OSD adjustments available to you are listed below.



H. SIZE

Adjusts the horizontal size of the entire screen image.



H. POSITION

Adjusts the horizontal position of the entire screen image.



V. SIZE

Adjusts the vertical size of the entire screen image.



V. POSITION

Adjusts the vertical position of the entire screen image.



PINCUSHION

If the vertical sides of the picture curve in or bulge out, you can correct the pincushion distortion by using this adjustment.



TRAPEZOID

If the picture is wider at the top or at the bottom, you can correct the trapezoid distortion by using this adjustment.



PARALLEL

If the sides of the screen image are tilted, you can correct the parallel distortion by using this adjustment.

F910

Perfectly Flat 3D Monitor



PIN BALANCE

If the sides of the picture are bowed to the right or to the left, you can correct the pincushion balance by using this adjustment.



V. MOIRE

Clears vertical moire if a series of concentric circles or arcs appear on your screen.



H. MOIRE

Clears horizontal moire if a series of concentric circles or arcs appear on your screen.

Moire is an interference pattern that makes the screen seem to have faint lines. A picture that is rasterised or consists of (small) repeating figures is sensitive to moire interference. Strong colors are also liable to intensify moire.

The moire pattern on the screen does not affect the printout of the image.



TOP CORNER

If the top corner sides of the picture curve in or bulge out, you can correct the top corner distortion by using this adjustment.



BOTTOM CORNER

If the bottom correct sides of the picture curve in or bulge out, you can correct the bottom corner distortion by using this adjustment.

F910

Perfectly Flat 3D Monitor



H. LINEARITY

If either left or right side of the picture is out of proportion to the other, you can correct horizontal linearity by using this adjustment.



V. LINEARITY

If top and bottom side of the picture is out of proportion to the center area, you can correct vertical linearity by using this adjustment.



LANGUAGE

You can select the language in which adjustment menus are displayed. The following languages are available; English, French, German, Italian, Spanish, Swedish, Finnish, Danish and Portuguese.



ROTATION

If the entire screen image is tilted, you can correct the distortion by using this adjustment.



OSD H. POSITION

Adjusts the OSD menu's horizontal position on the screen.



OSD V. POSITION




Adjusts the OSD menu's vertical position on the screen.

F910

Perfectly Flat 3D Monitor



COLOR CONTROL

| | | | |
|-------------|--|--------|----|
| 1600 × 1200 | | 106.3K | 85 |
| USER | 6500 | 9300 | |
| R |  | | 78 |
| G |  | | 78 |
| B |  | | 78 |

Color temperature affects the tint of the image. With lower color temperatures the image turns reddish and with higher temperatures bluish.

There are three color settings available: 9300K, 6500K or USER. With the USER setting you can set individual values for red, green and blue.



RECALL

If you operate your display unit in a factory preset mode, this function deletes adjustments you made for size, position and shape, and restores the properties which have been set in the factory. If you operate your display unit in a user mode, this function has no effect except that the contrast will be reset to the maximum value and the brightness to the cut-off level.



INFORMATION

Information shows horizontal and vertical sync polarity of current timing set.



DEGAUSS

External magnetic fields may cause distortion or discoloration in the picture. Demagnetizing takes place automatically when the display unit is switched on, and the unit normally maintains faultless color purity during operation.

F910

Perfectly Flat 3D Monitor

If you have tilted, swiveled or moved the display unit, you can perform demagnetization. During this process the picture is distorted for a few seconds. After demagnetizing, the color impurities have disappeared if caused by stray magnetic fields.

Do not use the degauss feature more than once every half hour.



CONTRAST

Adjusts the contrast of the screen.



BRIGHTNESS

Adjusts the brightness of the screen.



FLIPPING / INTERLACE

.Flipping Mode : choose this mode when enjoying 3D game with vivid screen. (Factory set mode)

. Interlace Mode : choose this mode when surfing web or watch 3D film



It returns to flipping Mode of factory set mode if you switch off/on the monitor



START LEFT/RIGHT

This function gets rid of the dizziness by fitting synchronization to 3D glasses when watching 3D game or film.

F910

Perfectly Flat 3D Monitor

5. Display power management

Reducing power consumption

If the power management function of your computer is enabled, your monitor turns on and off automatically. You can control power management features from your computer.

Your computer may have power management features which enable the computer or monitor to enter a power saving mode when the system is idle. You can reactivate the system by pressing any key or moving the mouse.

| Mode | LED | Power consumption |
|-----------|---------------------------------|-------------------|
| Normal | Green | ≤ 130 W |
| Standby | Green/Orange blinking (1sec.) | ≤ 15 W |
| Suspend | Green/Orange blinking (0.5sec.) | ≤ 15 W |
| off | Orange | ≤ 5 W |
| Unplugged | Not illuminated | 0 W |

! The power button at the front bezel does not disconnect the display unit from the mains. There are two ways to isolate the display unit completely from the mains supply. One is to unplug the mains cable, and other is to turn off the power switch (option) at the rear bezel of the monitor.

F910

Perfectly Flat 3D Monitor

6. Troubleshooting

If your monitor is not functioning properly, you may be able to solve the problem by reading followings.

| Problem | Possible solution |
|--|---|
| Blank screen | <p>If the power LED is not lit, push the Soft power switch or Power switch(option) to turn the monitor on. If the display unit is powered through the computer, check that the computer is switched on.</p> <p>The display unit might be in standby mode. Push one of the keyboard keys. Check that the keyboard is properly connected to the computer.</p> <p>Check that the power cable is correctly connected to the display unit and to the power outlet.</p> |
| Error message: <i>OUT OF RANGE</i> | <p>The graphics adapter is set for too high refresh rate or line frequency. Select another display mode with lower frequencies in computer.</p> |
| Self diagnostics message <i>NO SIGNAL</i> | <p>This message indicates that the signal is missing or faulty. Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged. If the connector is loose, tighten the connector's screws.</p> |

F910

Perfectly Flat 3D Monitor

| Problem | Possible solution |
|--|---|
| The display does not enter power management mode | The video signal from the computer does not comply with VESA DPMS standard. Either the computer or the graphics adapter is not using the VESA DPMS power management function. |
| Screen flickers | The screen may seem to flicker when the refresh rate is less than 75Hz. See the list of recommended modes in the section <i>Preset timing table</i> . |
| Color defects | <p>If your color is not uniform, demagnetize the display unit as described in the section Degauss under <i>OSD adjustments</i>, and make sure that the display unit is at least 30cm from any other electrical equipment.</p> <p>Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged. Try another color temperature.</p> <p>If the picture has strong color defects, switch off the display unit and the computer.</p> |
| Size, position, shape or quality unsatisfactory | <p>Make sure that other electrical devices are at least quality 30cm away.</p> <p>Adjust the picture characteristics as described in the section <i>Adjusting the picture</i>.</p> |
| Duplicated images | A problem with your graphics adapter or display unit. Contact your service representative. |

F910

Perfectly Flat 3D Monitor

| Problem | Possible solution |
|--|--|
| Windows Plug and Play does not recognize the monitor | If your computer is DDC compatible, the display type is automatically correct. If, however, you need to change the display type, you will find the display units listed under Hyundai Electronics in the manufacture's list. |

Contacting service

If the above troubleshooting hints do not help you find a solution to the problem, contact an authorized service agent. If the monitor is sent for service, use the original package if possible.

Unplug the display unit from the power outlet and contact a service agent when:

- The monitor does not operate normally according to the operating instructions.
- The monitor exhibits a distinct change in performance.
- The monitor has been dropped or the cabinet has been damaged.
- The monitor has been exposed to rain, or water or liquid has been spilled onto the monitor.



If you select L/R function on OSD on upper screen "Warning" mark requiring rest will flicker five times.

This is not defective and doesn't give any effect to the screen.

F910

Perfectly Flat 3D Monitor

7. Specifications

| | |
|-------------------------------|---|
| Picture tube | 19"(viewable size : 18") Dot pitch 0.25 mm Anti-Static, Medium-short. |
| Display area | factory preset area : 352X264 mm |
| Number of color | Infinite |
| Input signals | R.G.B Analog, 15 pin D-sub |
| Frequency rate | Horizontal : 30 to 107kHz, Vertical : 50 to 150Hz |
| Maximum bandwidth | 261 MHz |
| Maximum resolution | 1600X1200@85Hz |
| Input voltage | 100-240 VAC, 2.5 A |
| Power consumption | 130W |
| Power Management | VESA DPMS |
| Plug & Play | Lower than EPA recommendation VESA DDC 1/2B |
| OSD menu | H/V SIZE, H/V POSITION, PINCUSHION, TRAPEZOID, PARALLEL, PIN BALANCE, H/V- MOIRE, TOP CORNER, BOTTOM CORNER, H/V LINEARITY, LANGUAGES, ROTATION, OSD H/V POSITION, COLOR CONTROL, RECALL, INFORMATION, DEGAUSS, BRIGHTNESS, CONTRAST, 3D, L/R |
| Ergonomics, Safety and EMC | TCO FCC Class B, CE, VCCI cULus, TÜV-GS, DHHS, NEMKO, DEMKO, FIMKO, SEMKO |
| Operating Temperature | 0 ~ 40°C |
| Weight | 22.0Kg unpacked, 23.5Kg packed |
| Dimensions (W X H X D mm) | 446 X 465.5 X 464 mm |

• Specification is subject to change without notice for performance improvement.