


## JLDK.30.06.01RemoteModel Function Description

### 1.1 Function Image

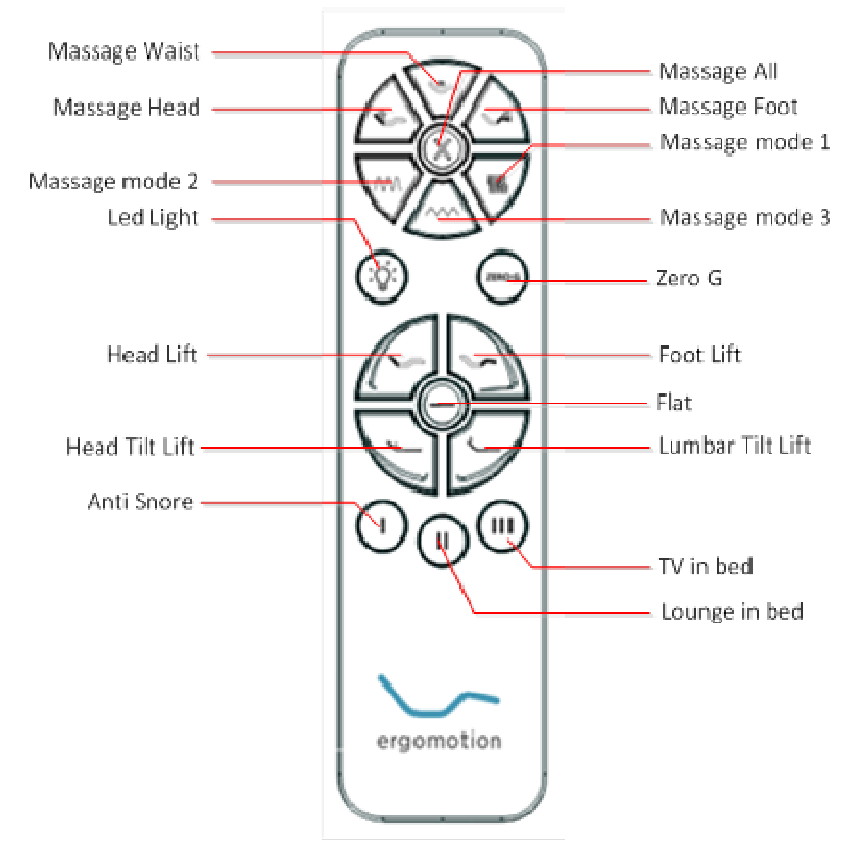

Corresponding Function Image

### 1.2 Function Description

Number	Key Value	Function Definition
1	Massage Head	3 kinds of strength of massagehead+stop status, cycle
2	Massage Foot	3 kinds of strength of massagefoot+stop status, cycle
3	Massage Waist	3 kinds of strength of massagewaist+stop status, cycle

4	Message All	3 kinds of strength of massagehead, massagefoot and massagewaist+stop status, cycle
5	Message mode 1	In other message mode, press and switch to message mode 1 (massagehead, massagefeet andmassage waist startintermittently, high frequency), otherwise, switch to normal mode
6	Message mode 2	In other message mode, press and switch to message mode 2 (massagehead, massagefeet andmassagewaist take turns to startintermittently, high frequency,move for 5 seconds and stop for 2 seconds), otherwise, switch to normal mode
7	Message mode 3	In other message mode, press and switch to message mode 1 (massagehead, massagefeet andmassage waist startintermittently, slow frequency), otherwise, switch to

		normal mode
8	LED Light	Light switch key
9	Zero-G	Release after press, 4 lifts move to Zero-G position
10	Head Lift +	Press and maintain, head lift stretches out
11	Head Lift -	Press and maintain, head lift retracts
12	Flat	Release after press, stop all massage, 4 lifts move to Flat position
13	Foot Lift +	Press and maintain, foot lift stretches out
14	Foot Lift -	Press and maintain, foot lift retracts
15	Head Tilt Lift+	Press and maintain, head tilt lift stretches out
16	Head Tilt Lift-	Press and maintain, head tilt lift retracts
17	Lumbar Tilt Lift+	Press and maintain, lumbar tilt lift stretches out
18	Lumbar Tilt Lift-	Press and maintain, lumbar tilt lift retracts
19	Anti Snore	Release after press, head lift and foot lift move to Anti Snore position, don't

		press other keys in 5 minutes, head&footlift flats
20	Lounge in bed	Release after press, head lift and foot lift move to Lounge in bed position
21	TV in bed	Release after press, head lift and foot lift move toTV in bed position

**FCC:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.