

SCAPE + REMOTE CONTROL FUNCTIONALITY

FLAT BUTTON

Press and hold to lower the base to flat position. This will also turn off massage motors

HEAD UP/DOWN BUTTONS

Press and hold to adjust the head section

UNDERBED LIGHT BUTTON

Press and release to toggle underbed light

SNORE BUTTON

Press and hold to adjust the head section of your partner's side to a 15° angle. This will go down to flat after 15 minutes

MEM 1 / MEM 2 BUTTONS

Press and hold to adjust the base to the programmed position. Massage settings can also be saved in these positions.

HEAD MASSAGE UP/DOWN BUTTONS

Press and release adjust the intensity of the head massage motor up or down. There are 3 levels: low, medium, and high. Pushing the DOWN button when in low level will turn the massage off. Massage will automatically shut off after 30 minutes.

LOCK BUTTON

Press and hold for 3 seconds to lock or unlock remote. Backlight will flash 3 times confirming the change.

FOOT UP/DOWN BUTTONS

Press and hold to adjust the foot section

SET BUTTON

Simultaneously press and hold this button AND "MEM1" or "MEM2" or "SNORE" or "ZGRAV" to program a new memory position. The massage motors will chirp once to confirm a new position has been set.

ZERO GRAVITY BUTTON


Press and hold to adjust the base to the "Zero Gravity" position. Massage setting can also be saved in this position.

WAVE BUTTON

Press and release to turn on the massage motors in wave mode. If already in wave mode, the massage motors will go back to constant mode.

FOOT MASSAGE UP/DOWN BUTTONS

Press and release adjust the intensity of the foot massage motor up or down. There are 3 levels: low, medium, and high. Pushing the DOWN button when in low level will turn the massage off. Massage will automatically shut off after 30 minutes.

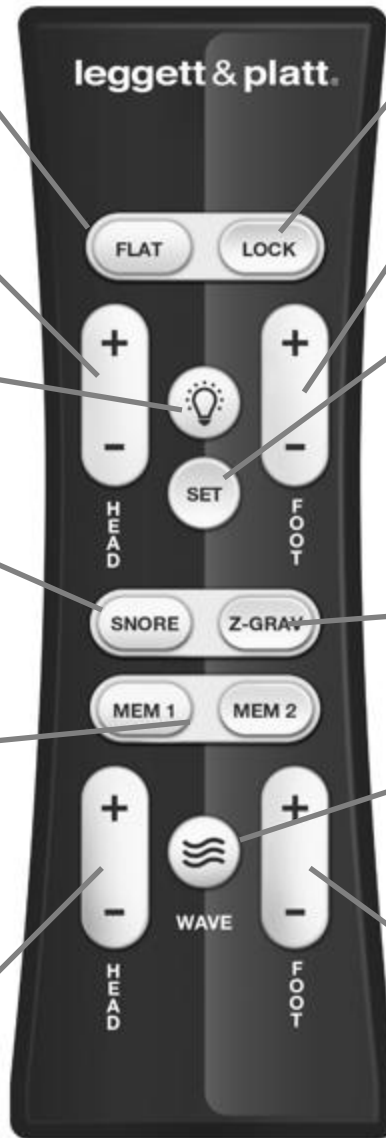

HBGL-U001-XX
Gladiator
remote

PRESS & HOLD TO ONE TOUCH

To change the remote from "press & hold" mode to "one touch" mode, simultaneously press the **FLAT** and **HEADUP** buttons for 3 seconds. The massage motors will chirp once to confirm the change. Use the same process to switch from "one touch" mode back to "press & hold" mode.

When in "one touch" mode:

- Press & release **Mem 1**, **Mem 2**, or **Z-GRAY** and the base will automatically adjust to the programmed memory position (including massage settings). Press any other button to stop the base during movement.
- Press & release **FLAT** and the base will turn off massage motors and automatically adjust the base to the flat position. Press any other button to stop the base during movement.

To revert back to **factory settings**, simultaneously press and hold the **FLAT** and **HEADDOWN** buttons for 3 seconds. The massage motors will chirp confirming the change and your base is now back to factory settings.

FCC ID: XBE-HBGL

IC: 12338B-HBGL

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Statement for digital devices for class B:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.