




Installation

Cordless Mini Optical Mouse Cordless Mini Optical Mouse



English Turn ON computer. Español ACTIVE el ordenador. Français Mettez l'ordinateur sous tension Português Lique o computador.

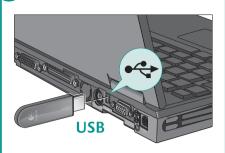

English Plug receiver into computer's USB port.

Español Conecte el receptor al puerto USB del ordenador.

Français Branchez le récepteur sur le port USB de l'ordinateur.

Português Ligue o receptor à porta USB do computador.





English Press button to open battery door, remove door, and install battery.

Español Press button to open battery door, remove door, and install battery.

Français Press button to open battery door, remove door, and install battery.

Português Press button to open battery door, remove door, and install battery.



English To enjoy all the features of your product, download software at http://www.logitech.com. Click Downloads, click Mice, and click on the picture of the Cordess Min Optical Mouse.

Français To enjoy all the features of your product, download software at http://www.logitech.com. Click Downloads, click Mice, and click on the picture of the Cordless Mini Optical Mouse.

Español To enjoy all the features of your product, download software at http://www.logitech.com. Click Downloads, click Mice, and click on the picture of the Cordless Mini Optical Mouse.

Português To enjoy all the features of your product, download software at http://www.logitech.com. Click Downloads, click Mice, and click on the picture of the Cordless Mini Optical Mouse.







English 1) Attach receiver to mouse for convenient storage when Francais 1) Attach receiver to mouse for convenient storage when Traveling, Mouse tims off. Remove receiver to turn mouse on 2) Reset button. 3) Power LED. When receiver is detached from base, mouse is turned on and the LED turns green.

Español 1) Attach receiver to mouse for convenient storage when traveling. Mouse turns off. Remove receiver to turn mouse on .2) Reset button .3) Power LED. When receiver is detached from base, mouse is turned on and the LED turns green.



English 1) Tilt wheel plus zoom. Enables scrölling up, down, left, and right. Click and tilt the wheel to zoom in and out. Install the software to activate side-to-side scrolling and zoom. 2) Battery LED Turns green bliefly when mouse to turned on. Battery tell wheel nouse is turned on. Battery tell when mouse butteries are low.

Español 1) Tilt wheel plus zoom. Enables scrolling up, down, left, and right. Click and till the wheel to zoom in and out. Install the software to activate side-to-side scrolling and zoom. 2) Battery LED. Turns green bnefly when mouse is turned on. Baise red when mouse batteries are low faisher set dwhen mouse batteries are low.