



## CONNECTION INSTRUCTIONS

## CONNECTION INSTRUCTIONS

### MS-890 Scanner with IB-890 Wiring Box

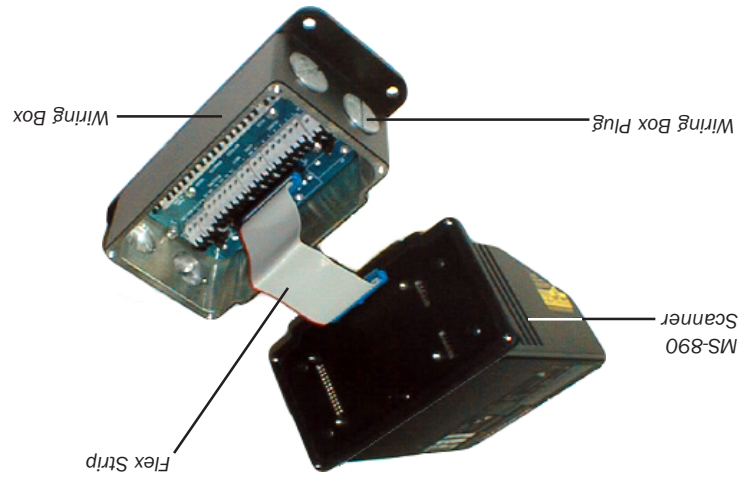

1. Mount the IB-890 Wiring Box.
2. Remove the Wiring Box Plug, and connect the wiring as required.
3. Apply power to the wiring box and confirm that the LED lamp next to the right side power terminal is green. The lamp is green if polarity is correct, red if reversed.
4. Turn off power, then plug in the flex strip to scanner as shown below.

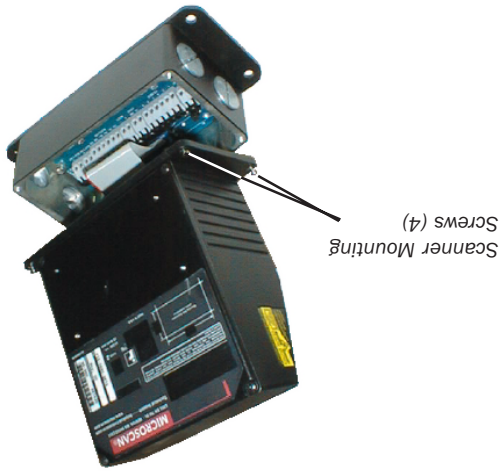

5. Set the scanner squarely on wiring box, as shown below.
6. Then, tighten four (4) retaining screws to secure scanner to wiring box.

#### Microscan Corporate Office

Tel 425 226 5700  
Fax 425 226 8250

#### Microscan Europe

Tel 31 172 423360 / Fax 31 172 423366

#### Microscan Asia Pacific RO

Tel 65 6846 1214 / Fax 65 6846 4641

[www.microscan.com](http://www.microscan.com)

©2015 Microscan Systems, Inc.