# welcome TheTalkyOne getting started how to ... signals care support safety & disposal certification & safety approvals

glossary

### welcome

Congratulations on your new speakerphone! We hope you will enjoy **TheTalkyOne** by novero.

This user guide will help you get started and will present you with all the outstanding features and accessories that provide for the ultimate, customized user experience.



## DOVERO

### welcome **The Talky One** getting started how to ... signals care support safety & disposal certification & safety approvals

## **TheTalkyOne**

**TheTalkyOne** is ready to use and designed perfectly for your car and your office.

It talks in many different languages and it fits perfectly into your car. You can make handsfree calls and stream music while in your car. You can clip it onto the sun visor, place it in the dashboard car holder, and use it as a speakerphone in the office.

### accessories

\_read more

### install

read more

### box contents

\_read more

### technical specifications

\_read more



glossary

### box contents

welcome **TheTalkyOne** getting started how to ... signals care support safety & disposal > certification & safety approvals glossary





## DOVERO

## accessories

To complete the concept of style, elegance and convenience, **TheTalkyOne** comes with a sun visor clip, a dashboard car holder and 3 Velcro® pads – one on the holder and 2 spares.

Both the sun visor clip and dashboard car holder place your speakerphone in arm's reach.



### dashboard car holder

read more

### sun visor clip

\_read more




welcome **TheTalkyOne** getting started how to ... signals care support safety & disposal > certification & safety approvals glossary






## getting started

welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>

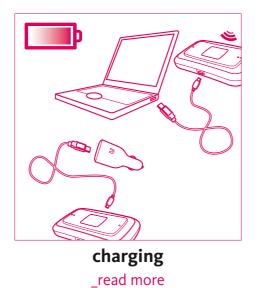

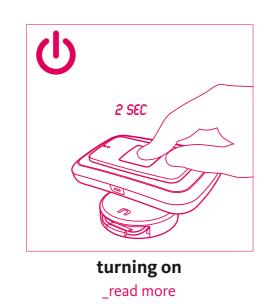



\_read more

glossary

## charging TheTalkyOne

welcome TheTalkyOne getting started how to ... signals care support

safety & disposal

certification & safety approvals


glossary

Before you can use **TheTalkyOne**, you must charge it. Please use only original novero charging devices. The following charging options are possible:

- Car charger (DC): Connect the car charger to the USB cable and to the DC outlet in your car. Connect the USB cable to the speakerphone.
- PC via USB cable: Connect your PC and the speakerphone with the USB cable.

### charging signals

read more

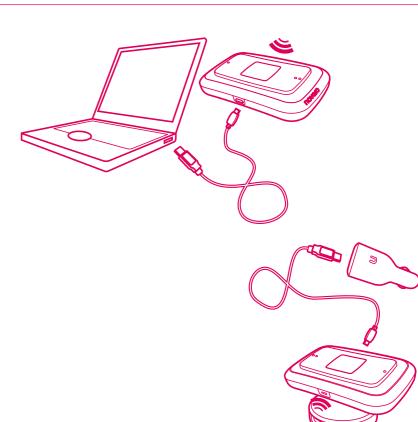





## welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

## turning The Talky One on/off


<u>ტ</u>

- To turn the speakerphone on, press and hold (2 sec) the multi-function button.
- To turn the speakerphone off, press and hold (2 sec) the multi-function button.

If your speakerphone is already paired with a device, it will automatically attempt to connect with this device when turned on.

power signals

read more

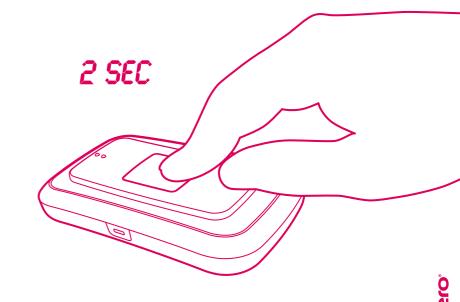



# OVE

## pairing The Talky One

\*

welcome
TheTalkyOne
getting started
how to ...

signals >

care >

support

safety & disposal >

certification & > safety approvals

glossary

If **TheTalkyOne** is not already paired with a Bluetooth device, it will automatically enter pairing mode when you turn it on.

• To pair the speakerphone with your mobile device, activate the Bluetooth feature of your mobile device and search for **TheTalkyOne**. See the user guide of your mobile device for instructions.

When your mobile device finds **TheTalkyOne**, select it and confirm your choice with the pass code or PIN=0000. Your device will confirm when pairing is complete.

Enable an automatic connection to prevent having to repeat this procedure every time. This device will now function as your primary device. Pairing mode will time out after 10 minutes and **TheTalkyOne** will automatically turn off. If pairing has not been completed by then, simply turn the speakerphone back on to re-enter pairing mode.

 To pair the speakerphone with a second mobile device, simply repeat the pairing instructions with the second device. This device will function as your secondary device.

### multipoint

\_read more

### pairing signals

\_read more

### software update

read more





## how to ...

### welcome TheTalkyOne getting started > how to ... > signals > > care support safety & disposal > certification &

safety approvals





\_read more



\_read more



adjust the volume make advanced calls

\_read more



update software

\_read more



install

\_read more

glossary

## make calls

- welcome TheTalkyOne getting started how to ... signals care support
- safety & disposal >
- certification & safety approvals glossary

• To reject an incoming call, double-press the multi-function button. – Depending on your mobile device settings, the call will either be directed to your voice mail or the caller will hear a busy signal.

• To redial the last number called, double-press the

multi-function button (applies to primary device only).

• To make a call, simply use your mobile device, and

the call will automatically transfer to your

speakerphone (subject to device settings).

• To make a call, you can also use voice dial by

• To answer a call, press the multi-function button.

• **To end a call**, press the multi-function button.

pressing the multi-function button.

### call signals

read more

### voice dial

read more

### text-to-speech

\_read more



# **NOVERO**°

## adjust the volume

**-(1)** 

- welcome TheTalkyOne
- getting started >
- how to ...
- signals
- care
- support
- safety & disposal >
- certification & > safety approvals
- glossary >


<

back

- To adjust the volume, press volume up (••) or volume down (•).
- To mute the microphone, press and hold (2 sec) volume up (••).
- To unmute the microphone, press and hold (2 sec) volume up (••) again.

### volume signals

read more

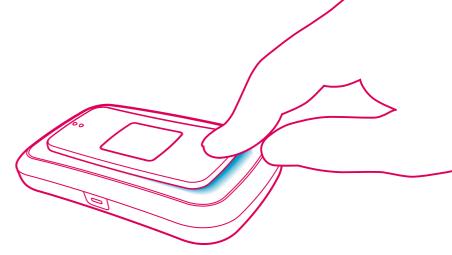

Listening to loud music while driving can be dangerous. Please adjust the volume so that it does not interfere with your driving or prevent you from hearing traffic.

## make advanced calls



welcome
TheTalkyOne
getting started
how to ...
signals
care
support
safety & disposal
certification &
safety approvals

voice dial \_read more

transfer call read more

multipoint \_read more

text-to-speech \_read more

back

glossary



## 6\*


## welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

### voice dial

**TheTalkyOne** supports and gives you easy access to the voice recognition features on your mobile phone – from voice dialing to more advanced features such as voice-controlled SMS or e-mail.

- **To activate voice dialing** (if supported by the primary device), press the multi-function button.
- To activate advanced voice features (if supported by the primary device), press the multi-function button depending on the mobile phone, you will hear a recognition tone.

The number of voice recognition features depends on your mobile phone – please check the user guide for your mobile phone for more information about voice dialing and advanced voice features.

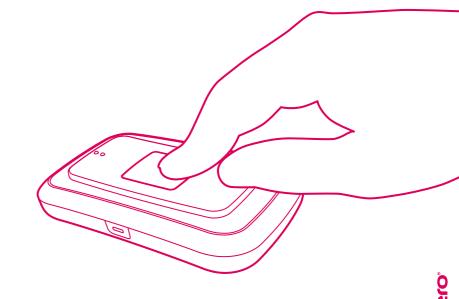




## transfer call

<u>(</u>\*

- welcome
  TheTalkyOne
  getting started
  how to ...
- signals
- care
- support
- safety & disposal >
- certification & safety approvals
- glossary

- To transfer an active call from your speakerphone to your mobile device, press and hold (2 sec) the multi-function button until the speakerphone switches off.
- To transfer an active call from your mobile phone to your speakerphone, press the multi-function button and turn the speakerphone on.

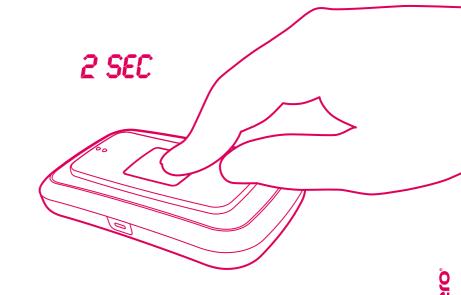



## multipoint

With multipoint (multiple connections), you can connect **TheTalkyOne** with two mobile devices at the same time. With the primary device, you can access all advanced functions, and with the secondary device you can access the basic call functions.

- To assign the primary status to a specific device, connect this device to your speakerphone first. The next device will automatically be assigned secondary status.
- During an active call, only one phone can be connected to TheTalkyOne. When an active call is connected to your speakerphone, and the second connected phone receives a call, your current call will not be interrupted. After you have ended your call, TheTalkyOne will reconnect to the second phone so that they both are reachable again.

- If you make an outgoing call from the secondary device, it will become the primary device for the duration of the call.
- To change the priority of the primary and secondary device, you must reset the pairing list. To do so, press and hold (4 sec) the multi-function button and volume up (••) at the same time. Then re-connect the devices to your speakerphone, starting with the one you want as your primary device.

### pairing

read more

### support

\_read more

### make advanced calls

read more

TheTalkyOne getting started how to ... signals care support safety & disposal certification & safety approvals glossary

welcome



# welcome TheTalkyOne getting started how to ... signals To all When to it will a you have speake of your speaker To all

safety & disposal >

support

- certification & > safety approvals
- glossary

## text-to-speech

When the speakerphone is turned on for the first time, it will automatically set the language to English. After you have paired your mobile device with your speakerphone, it will automatically check the language of your mobile device. If the language is available, the speakerphone will automatically switch to this language.

- To change the language of the speakerphone,
  press the multi-function button and volume down
   (•) once to hear the current language read aloud.
  Press the combination again for the next language.
  Repeat until you hear the language you wish to select. Then simply stop to activate the next language.
- To turn text-to-speech off, press the multi-function button and volume down (•) at the same time.

 To change the installed languages, please visit <u>www.novero.com</u> and check the service section. The novero software update tool allows software updates with different languages.

You can also change the text-to-speech language with the novero software update tool.







## update software

**TheTalkyOne** supports software updates which ensure that you always have the latest software and can enjoy the latest features. The novero software update tool is available on <a href="https://www.novero.com">www.novero.com</a>

 To update the software of TheTalkyOne, go to www.novero.com and install the novero software update tool. Please install it onto your PC, and then connect TheTalkyOne with the USB cable to the PC.

For more information on updating the software, go to <a href="https://www.novero.com">www.novero.com</a> and check the service section.

### support

\_read more

welcome	
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossary	>


back




## install



welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>

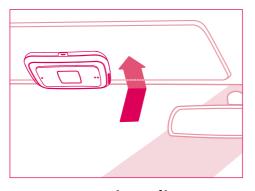

sun visor clip
\_read more

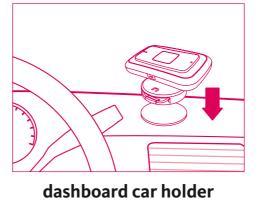

\_read more

glossary

# OVERO


## sun visor clip

welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

• To attach The Talky One to the sun visor, simply clip it on. When attaching the clip to the sun visor, make sure that the microphone points towards your mouth and the clip fits tightly. If it does not, please use the dashboard holder instead.

### dashboard holder

\_read more

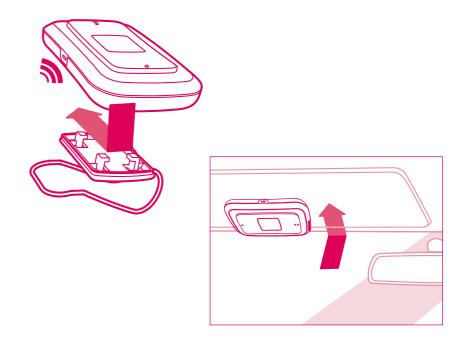

Attaching The Talky One can make small imprints on your sun visor, which usually disappear after detaching it. To avoid these imprints you can use the dashboard car holder instead.

Please check that you can still use the sun visor after installing TheTalkyOne. If not, please use the dashboard car holder instead.






# Jovero

### dashboard car holder

The Talky One comes with a dashboard car holder, which allows you to charge it via your car charger.

- To install the dashboard car holder in the right place, first check that the microphone points towards you. If you want to charge while driving, you should also connect the car charger to the DC outlet in your car. Then fasten the dashboard car holder to the dashboard in a place where:
  - 1) The dashboard car holder is not close to an airbag or area where it could harm you in case of a collision.
  - 2) It will hold your speakerphone in arm's reach from the driver's seat, and the microphone points towards you.
  - 3) You can easily detach the speakerphone when leaving the car.

You can use the spare Velcro® pads to change the positioning in the car.

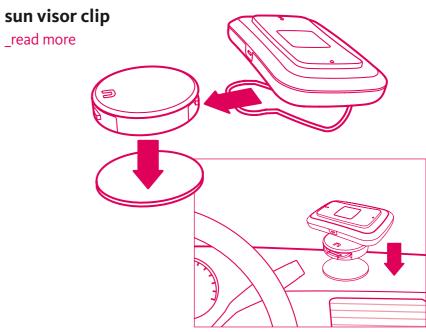

welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary



welcome	
TheTalkyOne	
getting started	2
how to	2
signals	
care	

safety & disposal > certification & > safety approvals

glossary

## signals

**TheTalkyOne** has various signals to indicate the status of your actions or inform you of different situations.











charging signals

\_read more

power signals

\_read more

pairing signals
\_read more

call signals
\_read more

volume signals
\_read more

back

support



# novero

## charging signals



welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossarv	>

Situation:	LED lights:			Sound:
Battery low	Red flash every five minutes	-	-	One beep every five minutes
Battery charging	Solid red	-		
Battery charged	One blue flash			Two beeps

The battery life will be significantly reduced if your speakerphone is left uncharged for a long period of time. It is therefore recommended that you recharge your speakerphone at least once a month.



## power signals

welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossary	>

Situation:	LED lights:		Sound:
Turning on	Blue fading in		One beep
Turning off	Red fading out	-	Two beeps

## 4

## pairing signals

welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossarv	>

Situation:	LED lights:	Sound:	
Pairing mode	Blue flashes		
Pairing successful	Solid blue		
Standby	Solid blue	-	
Idle (not paired)	Solid blue		
Bluetooth connection lost		Two short beeps	

## call signals

welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossary	>

Situation:	LED lights:		Sound:
Incoming call	Solid blue	-	Ring tone or caller ID read aloud (TTS)
Active call	Solid blue	-	
Reject call	One red flash	-	One beep
End call	One red flash	-	One beep

## volume signals

welcome	>
TheTalkyOne	>
getting started	>
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	>
glossary	>

Situation:	LED lights:	Sound:
Volume up	Blue flashes on volume up (••) side	 Volume goes up
Volume down	Blue flashes on volume down (•) side	Volume goes down
Mic. muted	Red flash every two seconds	 One short beep
Unmute mic.		One beep

# welcome TheTalkyOne getting started how to ... signals care support safety & disposal certification &

safety approvals

### care

- Store **TheTalkyOne** with the power off and safely protected when not in use. To avoid the risk of theft, do not leave your speakerphone or sun visor clip visible in the car.
- Store the speakerphone out of direct sunlight and extreme temperatures (above 40°c/113°f or below 10°c/14°f), as this may shorten the battery life, affect the operation or reduce the performance of your speakerphone. Do not leave your speakerphone in your glove box, as the temperature could be too high.
- Store the speakerphone away from magnetic strips (e.g. on credit cards) and electronic medical devices.

- Handle your speakerphone with care. Do not drop, knock or shake it, or expose it to heavy dust, dirt, moisture, rain or other liquids.
- Dispose of all product parts in accordance with local standards and regulations to protect the environment and promote sustainability.

glossary

# NOVERO

welcome	>
TheTalkyOne	•
getting started	•
how to	>
signals	>
care	>
support	>
safety & disposal	>
certification & safety approvals	•
glossary	>

back

## support

Please check the following suggestions if you experience any problems with **TheTalkyOne**.

### • If there is no sound in your speakerphone:

- Check that the volume is adjusted correctly.
- Check that your speakerphone is paired with your device.
- Check that your speakerphone and device are turned on.
   You should then hear a sound from your speakerphone.
- Check that your speakerphone and device are charged.

### • If you cannot pair your speakerphone:

 Check that the speakerphone is not already paired with your device. If not, then repeat the pairing procedure, or reset the list of paired devices, by pressing and holding (4 sec) the multi-function button and volume up (••) at the same time.

### • If you hear static or noise in your speakerphone:

- Check that the speakerphone is close to your mobile device and that the microphone is pointing towards you. If not, move the speakerphone closer to the device.
- If you cannot redial, voice dial, or reject a call with your speakerphone:
  - Check that these features are supported by the connected mobile device.

### If the speakerphone is not functioning properly,

 You may need to reset the hardware. To reset the speakerphone hardware, press and hold (10 sec) the multi-function button and volume up (••) at the same time.

software update

technical specifications

print user guide

read more

\_read more

### welcome TheTalkyOne getting started how to ... signals care support safety & disposal certification & safety approvals glossary

## technical specifications

- Speakerphone weight: 3.3 ounces
- Operating range: Up to approx. 33 feet
- **Battery**: Built-in, non-replaceable, rechargeable battery
- Battery power supply: Car charger (DC) or PC via USB cable
- **Talk-time** (with fully charged battery): Up to 15 hours
- **Standby time** (with fully charged battery): Approx. 180 hours

• **Bluetooth**: Multi-compatible with devices that support Bluetooth Specification 2.1 with EDR, Handsfree Profile 1.5, multipoint feature, A2DP (Advanced Audio Distribution Profile) and PBAP (Phonebook Access Profile)

# OVE

## print user guide

• To print the user guide for TheTalkyOne, press escape (esc) to exit full screen mode. Then go to the File menu and select Page Setup to adjust your preferred settings, e.g. A4 landscape format for normal copy size. Then select OK.

Now select Print and adjust the print settings, e.g. black and white, and then select OK.

welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

## novero products are trademarks or registered trademarks of novero GmbH. ©2009 novero all rights reserved For recycling companies only: To remove the battery, please remove the silicone from the bottom and unscrew the four screws in the corners. Now you can use the screwdriver to remove the battery. For more information, please go to www.novero.com

## welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

## safety & disposal

### 1. Preparing TheTalkyOne

- Make sure that, if installed, the dashboard car holder is fastened to the dashboard in a place where 1) The USB cable can reach from the car charger to the dashboard car holder
- 2) The dashboard car holder is not close to an airbag or area where it could harm you in case of a collision
- 3) It will hold your speakerphone in arm's reach from the driver's seat.

### 2. Using TheTalkyOne

- Be cautious about using your speakerphone while engaging in any activity that requires your full attention. The lights on **TheTalkyOne** can be bright and may disturb you while driving. Please turn off your speakerphone to keep you from being distracted and avoid accidents.
- Do not play music at the maximum level, as this may disturb you while driving. Please adjust the volume to an to an appropriate level so that it does not prevent you from hearing traffic, or interfere with your driving in any way.
- Do not leave **TheTalkyOne** visible in your car to avoid the risk of theft or exposure to excessive heat, which may shorten the battery life.
- Using your speakerphone while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous and is illegal in some jurisdictions. Please respect local laws.
- If you use a pacemaker, hearing aid or other electronic medical device, please consult your physician before using the speakerphone.
- Never try to dismantle the product yourself. None of the internal components can be replaced or repaired by users. – Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Do not charge **TheTalkyOne** while it is attached to the sun visor.

### 3. Keep out of reach of children

• The speakerphone and packaging contain small parts and are not toys for children. They may cause choking if ingested.

### 4. ACA TSo28 - ignition of flammable atmospheres

• Do not use your speakerphone in environments with risk of ignition of flammable gases.

### 5. Disposing of TheTalkyOne

- Do not attempt to replace the built-in battery in your speakerphone.
- Dispose of all product parts in accordance with local regulations. If in doubt, please consult vour local authorities.
- The crossed-out wheeled bin means that within the European Union the product must be taken to a separate collection facility at the product's end-of-life. Do not dispose of these products as unsorted municipal waste.



### 6. Warranty

• novero offers a limited manufacturer's warranty of 12 months from the date of purchase. In some cases/countries the warranty time can be extended to 24 months. Please visit www.novero.com to find more details on warranty extension and warranty return options.

The reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of novero is prohibited, novero<sup>®</sup> is a registered trademark. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

# OVERO

## welcome TheTalkyOne getting started how to ... signals care support safety & disposal > certification & > safety approvals glossary back

## certification & safety approvals

### **Declaration of Conformity**

Hereby, novero GmbH, declares that this NHFP-1 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The product is in conformity with the limits defined in Directive 2004/104/EC (amending Directives 72/245/EC), Annex I, paragraph 6.5, 6.6, 6.8 and 6.9.
A copy of the Declaration of Conformity can be found at <a href="https://www.novero.com/declaration\_of\_conformity">www.novero.com/declaration\_of\_conformity</a>

## **C€0560**

### FCC/Industry Canada notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference; and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: WJLNHFP-1 IC: 7847A-NHFP1

NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: Changes or modifications not expressly approved by novero could void the user's authority to operate the equipment.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
Velcro® is a registered trademark of Velcro Industries B.V.
The Bluetooth speakerphone supports Bluetooth Specification 2.1 with EDR, Handsfree Profile
1.5 and Multipoint
DC charger = NDCH-1
USB cable = NCAB-1

The availability of particular products may vary by region. Please check with the novero dealer nearest you. Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

Export controls: This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

### TheTalkyOne getting started how to ... signals care support safety & disposal > certification & safety approvals glossary

welcome

## glossary

**A2DP** is a Bluetooth profile that allows you to stream music in stereo quality from your mobile phone to your speakerphone.

**Bluetooth** is a radio technology that connects devices, such as mobile phones and speakerphones, without wires or cables over a short distance (approx. 33 feet). Bluetooth is safe to use and secure, too. Once two Bluetooth devices have been paired, no one can listen in and no other Bluetooth devices can interfere. Get more information at www.bluetooth.com

**Idle (not paired)** is the mode where your speakerphone is turned on but not paired to a Bluetooth-enabled mobile phone.

**LED** is short for light-emitting diode and refers to the light indicator of your speakerphone that sends different red or blue signals depending on specific actions, events or modes.

**Multipont** allows two mobile phones to be connected to your speakerphone. The first connected user is the main user, who can use all features. The second user can only use the basic functions, such as receiving calls.

**Pairing** creates a unique and encrypted connection between two Bluetooth devices. Bluetooth devices will not work together if they have not been paired.

**Pass code or PIN** is the code required to pair a Bluetooth device (e.g. a mobile phone) with your speakerphone.

**Standby** is the mode where your speakerphone is turned on, paired and ready for outgoing or incoming calls. When a call is ended, the speakerphone automatically returns to standby mode.

**Software update** allows you to change the software of your speakerphone. This should only be done if there are compatibility issues with your mobile device. Please check for more information on <a href="https://www.novero.com">www.novero.com</a> under services.

**Text-to-speech** means that the speakerphone reads information aloud, such as the caller ID and important status. Text-to-speech is available in different languages.

**Voice dial** means that you can dial a number by saying a name out loud, instead of entering a number manually or choosing it from the phone book. With speaker-independent voice recognition, no recording is required. The name can be spoken by anyone, and the phone will automatically match the spoken name with the closest name entered in the phone book.