


Explorer 240/242 243/245/395

Bluetooth headset quickstart guide



3.4 Charging the built-in battery

Explorer 240 has a built-in battery, which must be charged fully before using the headset. Charging takes about 2 hours. You can charge the headset through the ${\rm AC}$ adapter.



Using AC charging adapter

- (1) When you use Explorer 240 the first time, please assure to charge it over 2 hours until it is full charged.


 (2) When Red LED flashes once every 1 seconds with alert tone, it is low battery, please charge it.
- (3) The power source can be only connected to SELV circuit and
- complies with limited power source.

 (4) The external power adaptors listed below are in compliance with limited power source.

Vendor	Speedytech	Sunstrong
UK	7501SD-5018A-UK	SB050018
110	SECTOR SOLOT III	CHOROCIO

vendor	Speedytech	Sunstrong
UK	7501SD-5018A-UK	SB050018
US	7501SD-5018A-UL	SV050018
EU	7501SD-5018A-EU	SU050018
CHINA	7501SD-5018A-CCC	
AU/NZ	7501SD-5018A-SAA	
KOREA	7501SD-5018A-EK	
MEXICO	7501SD-5018A-UL	

(4) Type in the passkey (0000) and click OK (fig 3)



(5) Under Service Class, select headset and click Next (fig 4).





This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to part 15 of the FCC rules. These

limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipm

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that

Consult the dealer or an experienced radio/TV technician for help.

2) this device must accept any interference, including interference

-8-

15.105 (b)

(7) When you hear a signal tone on the headset, short-press ${\tt Multi-function\ button\ (fig\ 5)}.$

(4) Select 2XXPlantronics and when prompted input the default passkey (0000). When successfully paired, the red/blue LED on the



(9) A registration confirmation screen appears. Click Finish to complete the connection. The new connection is shown in the Bluetooth Settings window (fig 6).



7. TECHNICAL ASSISTANCE


Visit our Web site at www.plantronics.com/support for technical support including frequently asked questions, compatibility and accessibility information. The Plantronics Technical Assistance Centre (TAC) is also ready to assist you on 0800 410014 from the UK.

8. EXPOSURE TO RE RADIATION

The internal wireless radio operates within the guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. Independent studies have shown that the internal wireless radio is safe for use by consumers.

Modifications not expressly approved by Plantronics, Inc.

9. MODEL AND COUNTRY INFORMATION



FCC RF Radiation Exposure Statement:

Reorient or relocate the receiving antenna.

Canada and USA Regulatory Information:

1) this device may not cause interference and

that may cause undesired operation of the device.

Operation is subject to the following two conditions:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with

1. Safety information Note: Please read this information before you use the headset.

To avoid electromagnetic interference, please turn off the headset in

Note: Most modern electronic devices are susceptible to electromag-

netic interference (EMI) if inadequately shielded, designed, o otherwise configured for electromagnetic compatibility.

Turn off the headset when on board an aircraft. The use of this headset

If you use a medical device, such as a pacemaker, consult the manufacturer of your medical device to determine if it is adequately shielded from electromagnetic interference. Your physician can

You are advised to put the headset in a safe place where it will not be bent

or crushed when not in use otherwise it may bring harm to human body.

Keep the headset away from children. Some small or detachable

Any attempt to modify or remove of any part of the headset will void

In this guide, "Short press" refers to a time period of less than 2

seconds during which a functional button is being pressed.

second during which a functional button is being pressed. "Long press" refers to a time period of more than 4 second and less than $10\,$

Before you can use the headset to make calls, you must pair the headset

with your phone. Pairing creates a secure link between your phone and the unique ID of the headset. You only have to pair devices once,

(1) To put the headset in pairing mode, press and hold (about $\boldsymbol{6}$

(3) When the search completes, a list of devices found is displayed.

Connected to

conds) the Multi-function button until the LED flash red/blue. (2) Scroll to the Bluetooth menu in you phone and search for active

devices. (Refer to you phone's user manual for details)

(The screen examples here are from a Nokia 6230)

any place where posted notices instruct you to do so.

might interfere with the electrical system of an aircraft.

Only use the supplied power adapter with the headset.

assist you in obtaining this information.

parts might be swallowed and result in harm.

4. The function at a glance

Pairing the headset with a phone

Medical Instruments

Children

the warranty.

4.1 Phone operation

Search for audio Select

headset changes to flashing blue.


Use of a headset that covers both ears will impair your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and/or others, and is illegal in most regions.

2. General Descriptions

Explorer 240 is an ear clip type Bluetooth-enabled, wireless hands-free headset, which compiles with the Bluetooth V2.1 specification and supports the Headset Profile, Hands-free Profile.

3. Getting started

3.1 Identifying parts

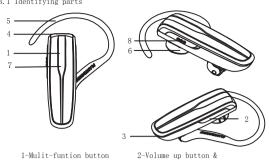

Volume down button

1-Mulit-funtion button

4-Charging Interface 3-Microphone 5-Earhook 6-Reciever 7-LED 8-Slide Switch

3.2 Adjusting the headset for comfort

The lightweight Explorer 240 can be worn comfortably on either ear. Adjust the headset according to the following figures.

	Headset state	Button
Power on	Power off	Push the slide switch to On state
Power off	Any state	Push the slide switch to Off state
Pairing	Power on	Press and hold multi-function button about 6 seconds
Answer incoming call	Incoming call	Short press multi-function button
Reject incoming call	Incoming call	Long press multi-function button
End a call	Ongoing call	Short press multi-function button
Volume +	Power on	Short press "Volume" button
Volume -	Power on	Short press "Volume" button
Voice divert between headset and phone	Ongoing call	Long press multi-function button
Voice dialing	Connected	Press multi-function button until a tone appears and then voice dialing
Redial	Standby	Double press multi-function button
Cancel calling out	Calling out	Short press multi-function button or long press multi-function button

(10) Right-click the headset icon and click Connect (fig 7)

Phone functions at glance

4.2 Make internet phone calls

wearing on left

3.3 Status LED

Headset state

Power on

Power off

Standby

Ongoing call

Low batter

Charging

Charging finishe

Pairing

careful in not to break the clip.

There are many internet phone services (VoIP) that let you make calls from your computer. You must add a new connection for this function.

3

You can adjust the ear-clip angle for comfort , but please be

LED color and status

Blue LED & Red LED flash alternately

Blue LED flashes once every 6s

Blue LED flashes once every 2s

Red LED flashes once every 10s

Red LED is light

Blue LED is light

Blue LED On more than 2 seconds

Red LED On about 4s

(1) To put the headset in pairing mode, press and hold (about 8 seconds) Multi-function buttonuntil the LED flashes red/blue.
(2) Right-click the Bluetooth Manager icon in the system tray and click Add New Connection (fig 1).



(3) Select the ${\tt Custom Mode\ radio\ button\ and\ click\ Next.}$ The wizard searches for device and the following screen appears, select the 2XXPlantronics and click Next(fig 2).



Octal... 24 Delete

Now you can make an internet phone call by using Explorer 240.

Note: The headset only controls volume, Use the Skype interface for all call functions

5. Specifications

Battery capacity	90 mAh
Talk time	up to 5 hours
Standby time	up to 200 hours
Weight	10.5 g (with ear clip)
S ize	49.5 * 17.5 * 10.5 m m

6. FCC RF Radiation Exposure Statement

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Plantronics Inc. **MODEL: Explorer 240**

Rating: 5 V===, 180 mA



CONFORMS TO ANSI/UL STD. 60950-1

CERTIFIED TO CAN/CSA STD. C22.2 NO. 60950-1

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

ATTENTION
IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE
PAR UNE BATTERIE DE TYPE INCORRECT.
METTRE AU REBUT LES BATTERIES USAGÉES
CONFORMÉMENT AUX INSTRUCTIONS

Plantronics Sound Innovation and Pulsar are trademarks or registered trademarks of Plantronics, Inc. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Plantronics, Inc. is under license.

Noisy-le-Grand, France No Indigo: 0825 082599 0, 15 4 TTC / mn +33 14167 4141 Hürth, Deutschland Tel: 0800 9323400 Österreich: 0800 242 500 Schweiz: 0800 932 340

Eastern Europe, and A Tel: +44 1793 842 443

© 2006 Plantronics, Inc. All rights reserved. Plantronics, the logo design

Printed in USA.

handshake (fig 8).

moderate levels.

Plantronics Ltd

Tel: 0800 410 014

Hoofddorp, Nederland

00800 752 687 66 (BE/LUX)

0800 752 6876 (NL)

Plantronics Sarl

Bincknoll Lane

Interface Business Park

Wiltshire SN4 8QQ, ENGLAND

-10-Do not use headphones / headsets at high volumes for an extended period of time. Doing so can cause hearing loss. Always listen at

Cancel

(11) When you hear a single tone on the headset, short-press ${\it Multi-function}$ button. Once connected the icon changes to a

> PLANTRONICS. Plantronics Acoustics Milano, Italia Numero Verde: 800 950 934

> > Plantronics Iberia, S.L. Madrid, España Tel: 902 415 191 +34 91 640 47 44 (ES) Tel: 800 844 517 (PT)

Nordic Region Tel: Finland: 0800 117 095 Tel: Sverige: 02002 14681 Tel: Danmark: 8088 4610 Tel: Norge: 800 113 36 Plantronics Middle East,

Plantronics, Inc. 345 Encinal Street Santa Cruz, CA 95060 USA Tel: 1 831 426 5868