


MAC OS X 10.7.4 Lion QC PSS Setup

Step 1) Download and Install UnrarX So you can open the PSS Download package


Open Safari, Go to www.unrarx.com Click on the stack of notebooks to start the download

Once the download is completed, Double Click on “UnRarX” It will install in the background

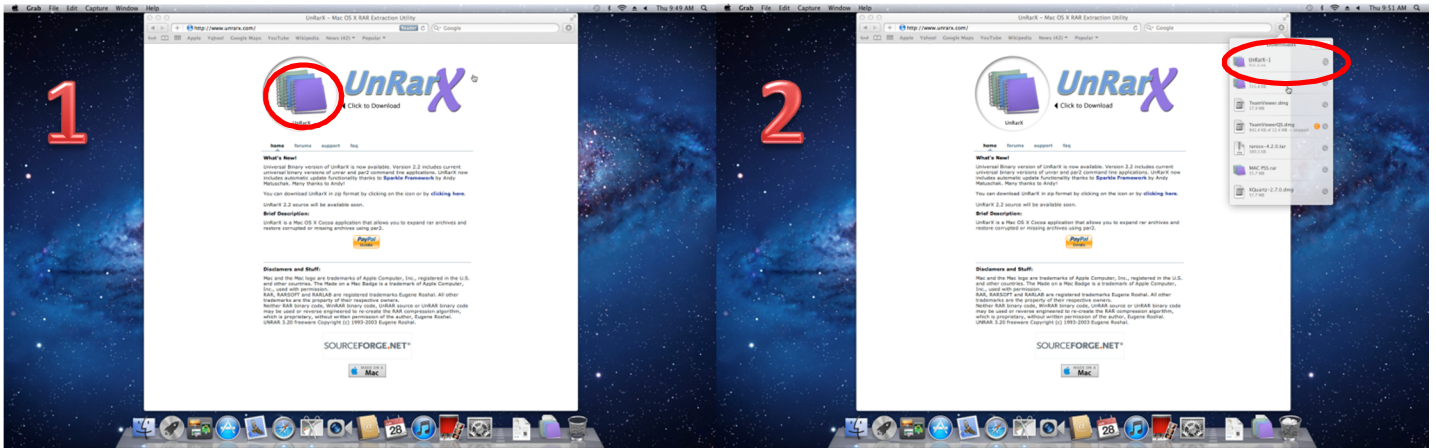


Step 2) Download and Install the XQuartz component


Go to www.q-see.com/support Search for “904” Click on the “XQuartz component” Link, the download will begin.

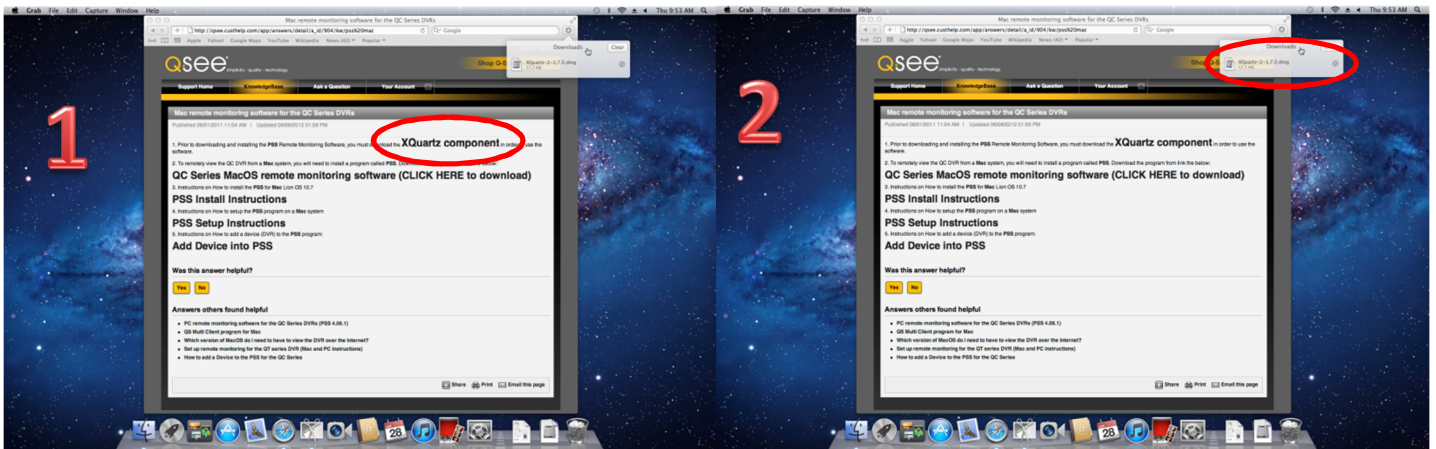

Once completed, Double Click “XQuartz-2-1.70.dmg from the “Downloads” tab, Double Click “XQuartz.pkg” to launch the Installer.

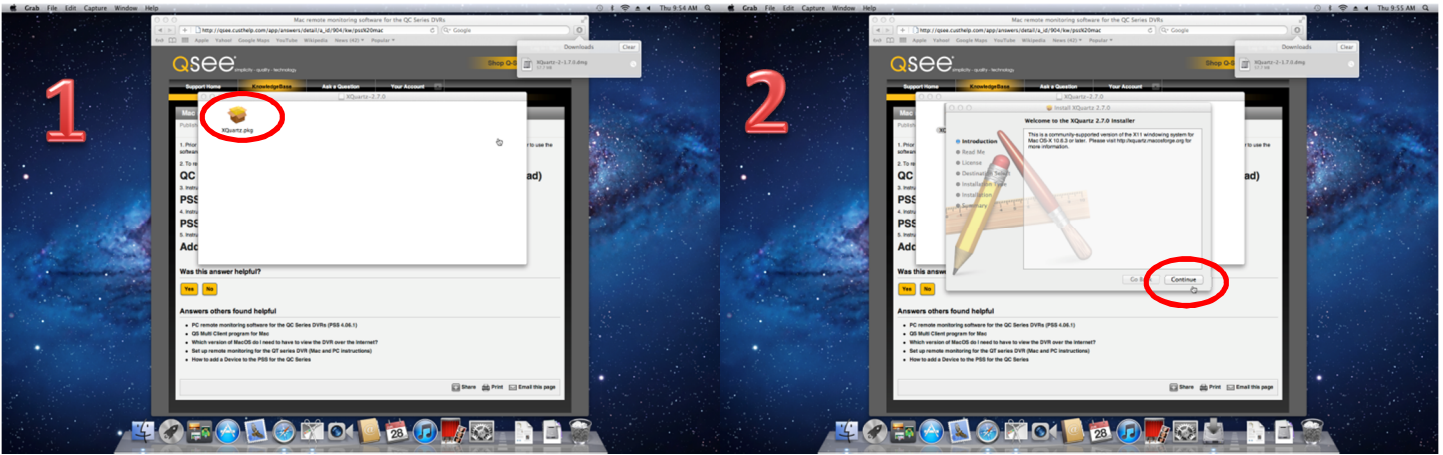

Proceed through the entire installation, clicking “Continue” when prompted, “Agree” to terms, and Click “Install”

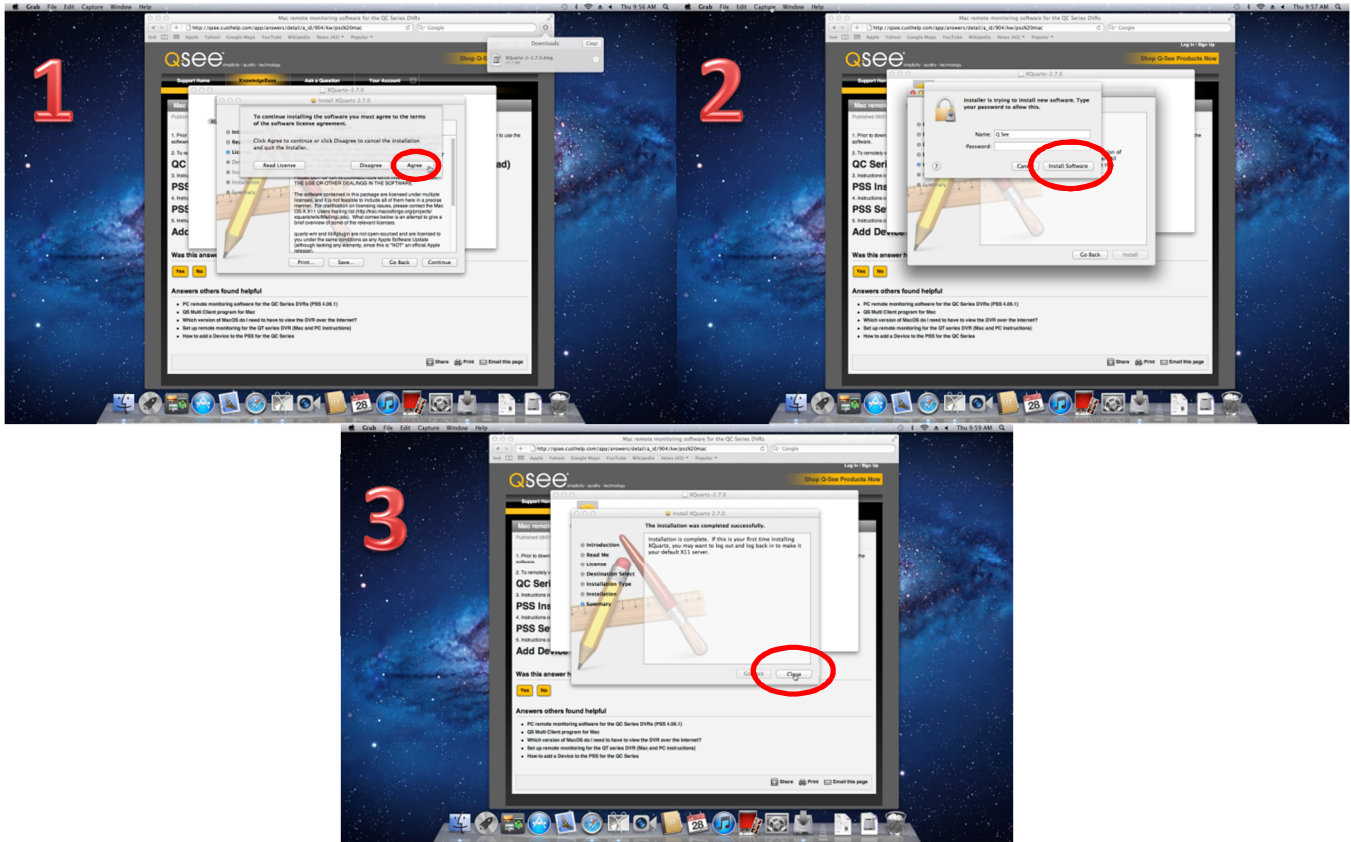


Now we have the Xquartz component Installed

Step 3 Update the XQuartz Component

Open “Finder” Go to “Applications” then Double Click “Utilities” Double Click “XQuartz”

It will prompt you to Update, YOU MUST PERFORM THE UPDATE

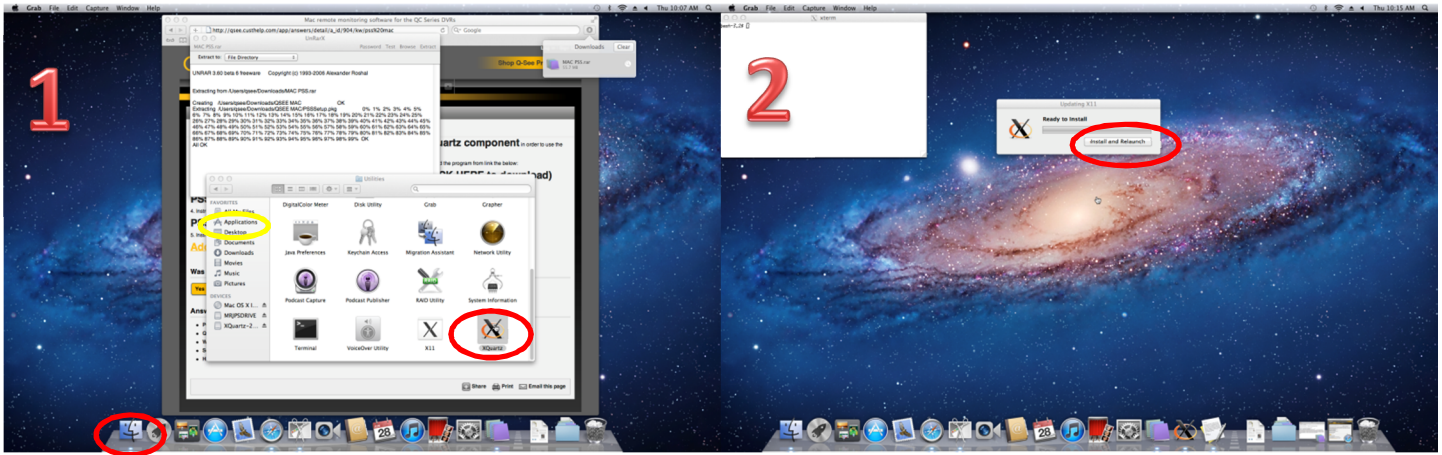


Once the Download completes, "Install and Re-launch"

Proceed through the entire installation, clicking "Continue" when prompted, "Agree" to terms, and Click "Install"





Step 4) Install QC Series MacOS Remote Monitoring Software (PSS)



Click on the Download link for "QC Series MacOS remote monitoring software" Double Click "MAC PSS.rar" to extract the software.

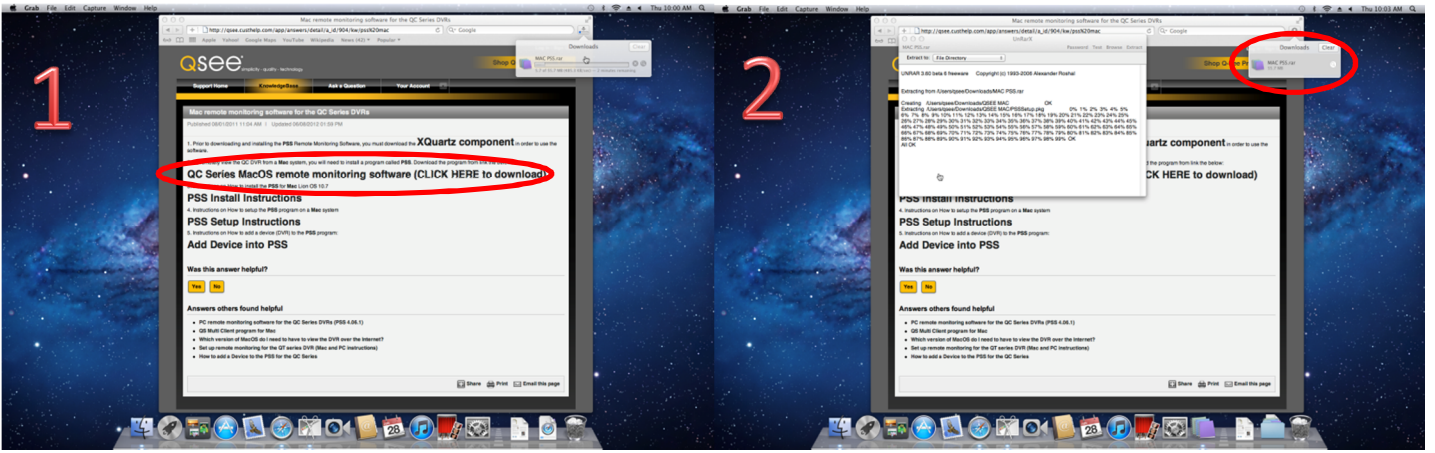




Once extracted, open "Finder" Go to "Downloads" Then locate and Double Click the folder "QSEE MAC"
 Double Click "PSSSetup.pkg" To start the Installation of PSS

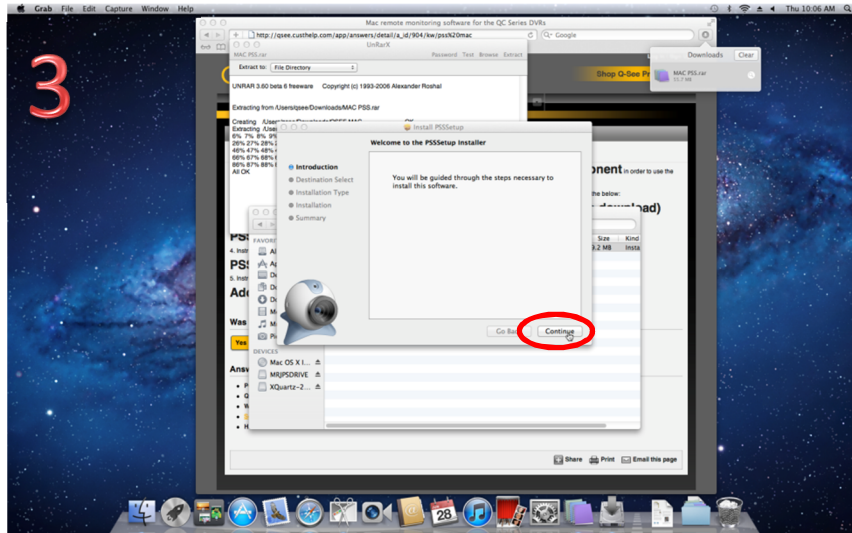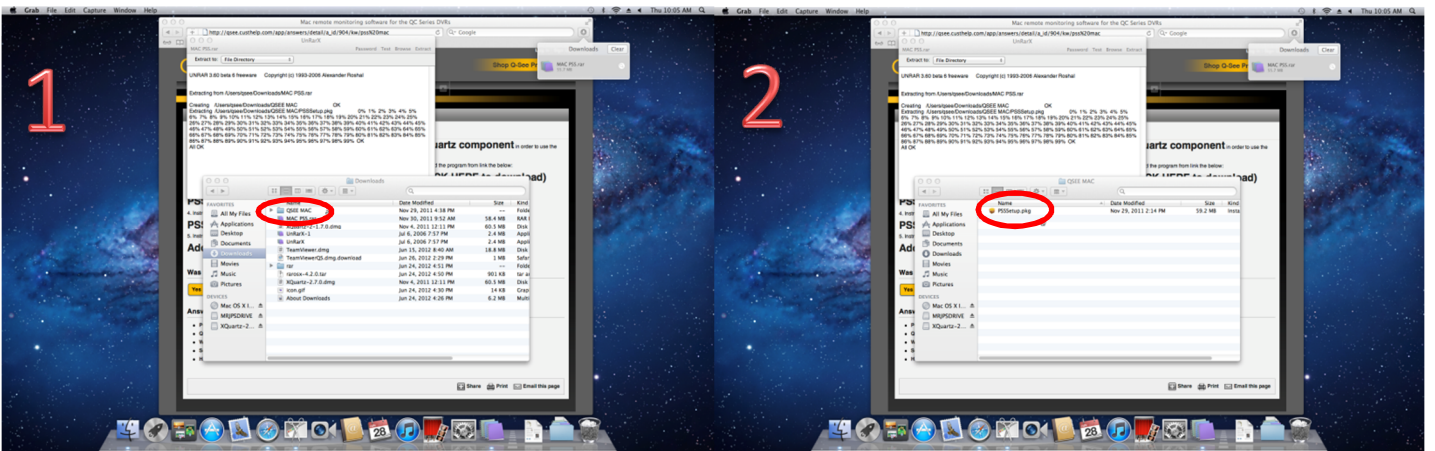

Click "Continue" and "Install" when prompted by the installation

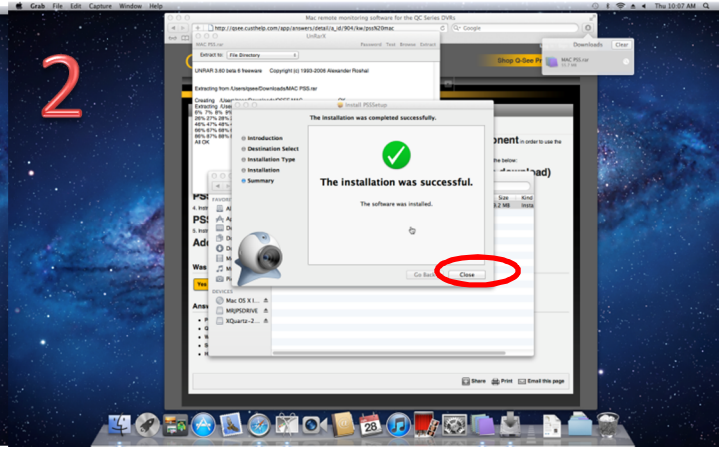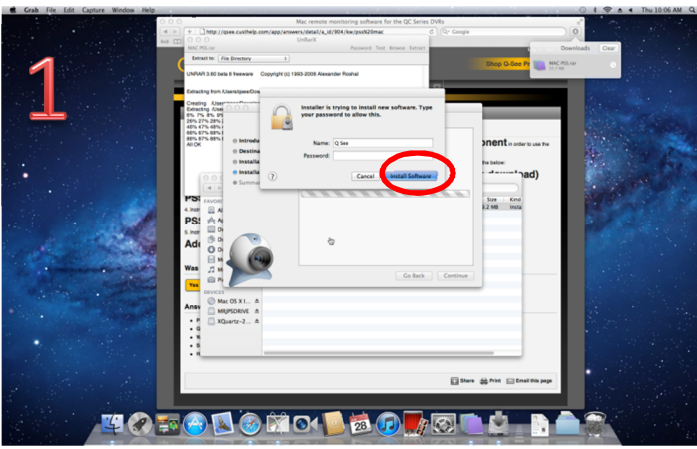

Once completed, go to "Finder" Click on "Applications" then Double Click on the PSS Camera Icon
The Software will now load (initial loading can take up to 5 minutes, be patient)

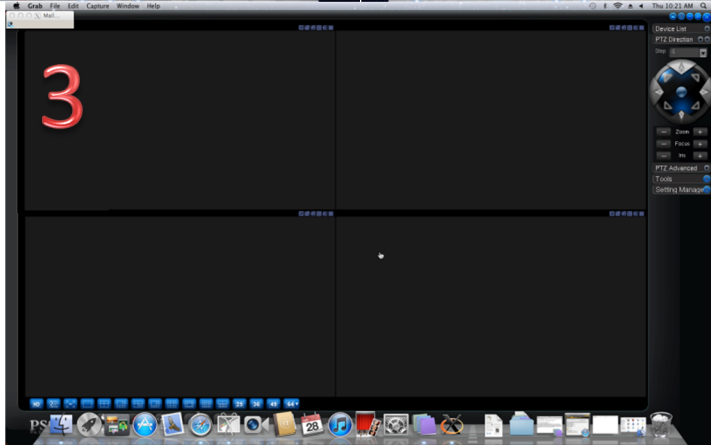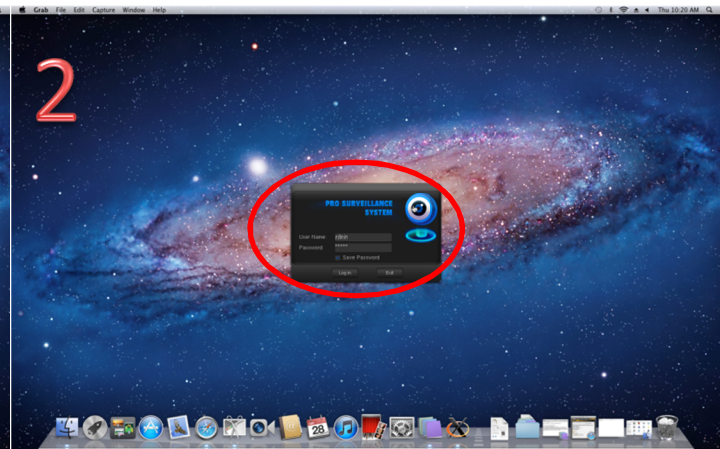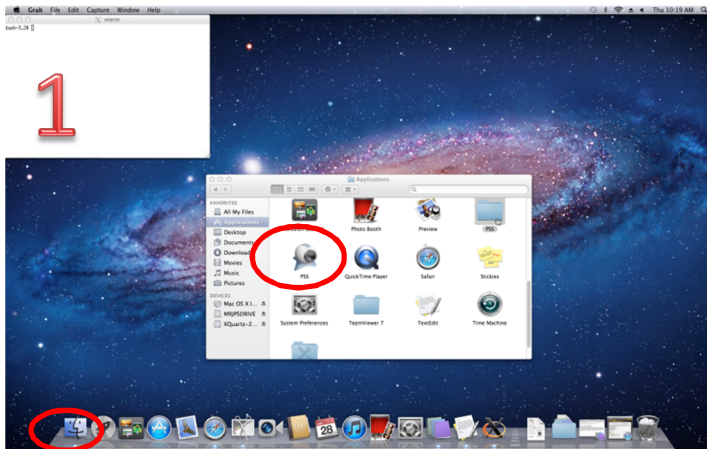

Congratulations, PSS is successfully Installed