Print Page 1 of 2

Multifunction Electronic Modules - Body Control Module (BCM)

B-MAX 2012.75 (01/2012-)

🖶 Print 📴 Report An Error

3.

Removal and Installation

General Equipment

Ford approved diagnostic tool

Removal

NOTICE: Modules are not interchangeable between vehicles.


NOTE: Removal steps in this procedure may contain installation details.

1. NOTE: This step is only necessary when installing a new component.

Upload the module information from the diagnostic tool to the module using the Programmable Modules Installation routine.


Use the General Equipment: Ford approved diagnostic tool


2. Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

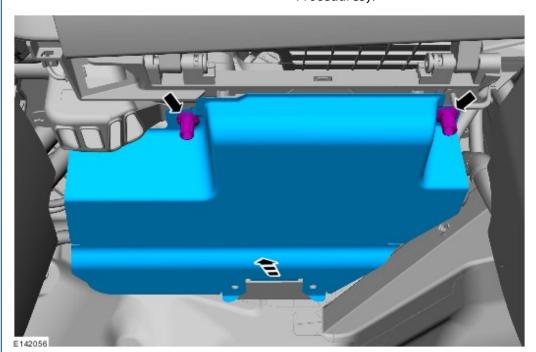

4. *Torque:* 3 Nm

Print Page 2 of 2

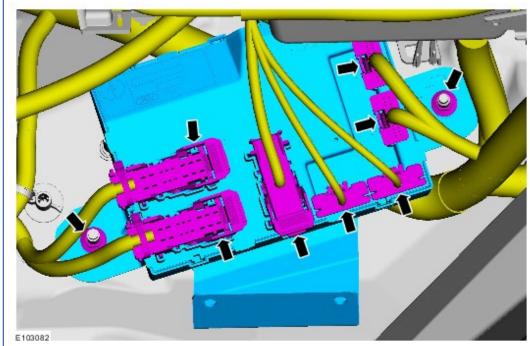

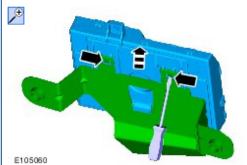

5.

Installation

- 1. To install, reverse the removal procedure.
- NOTE: This step is only necessary when installing a new component.
 Download the module information to the diagnostic tool using the Programmable Modules Installation routine.