



## The "CONTEMPORARY" Wireless Adjustable Bed



### *Safety Precautions*

#### **CONSUMERS WITH PACEMAKERS**

It is possible that the (optional) vibrating feature of this bed may be interpreted falsely by some pacemakers as movement and/or exercise. This is common with any product that produces a vibrating motion, and may or may not affect your pacemaker. Please consult your physician with any concerns.

#### **RADIO FREQUENCY IS 433.92 MHZ.**

FCC compliance device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's right to operate the device.

The input transformer voltage is AC120V 60HZ; the output voltage is DC24V 3A. In the case of a short-circuit, a fuse on the transformer will blow to protect the electrical equipment of the device (Fuse: 1A~1.5A.). Should this occur, you should seek professional assistance to fix the problem, and call Customer Care at: 1-877-826-8757

### **SAVE THESE INSTRUCTIONS!**

*Proper operation of your Rize Adjustable Bed® is necessary to ensure the long life and durability you expect from a high-quality product. The manufacturer has tested and inspected this product prior to shipment.*

#### **PRODUCT RATINGS**

**Lift Motor Restrictions:** The lift motors in this bed are NOT designed to operate continuously for more than three (3) minutes over a thirty (30) minute time period, or approximately 10% duty cycle. To ensure reliable functionality and full life of this product, do not attempt to exceed these limits.

**NOTE:** *Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.*

**Weight Restrictions:** The recommended weight limits on our adjustable beds are: Twin-300 lbs; Double-375 lbs; Queen-425 lbs.

The structure of the bed will support the recommended weight when distributed evenly across the bed.

**Maximum weight the bed can support per person is 250 lbs. The head and foot sections are not designed to individually support or lift this amount of weight.**

For optimal performance, entering and exiting the adjustable bed with the bed in the flat or level position is recommended.

**NOTE:** *Exceeding the recommended weight restrictions could damage your adjustable bed and void your warranty.*


#### **SMALL CHILDREN AND PETS WARNING**

Immediately dispose of all packing materials as it can pose a smother risk to small children and pets. Injury could occur also if children or pets are permitted to play on or under the bed. Do not allow children to operate this bed without adult supervision.



# The "CONTEMPORARY" Wireless Adjustable Bed

## Wireless Hand Remote Operation

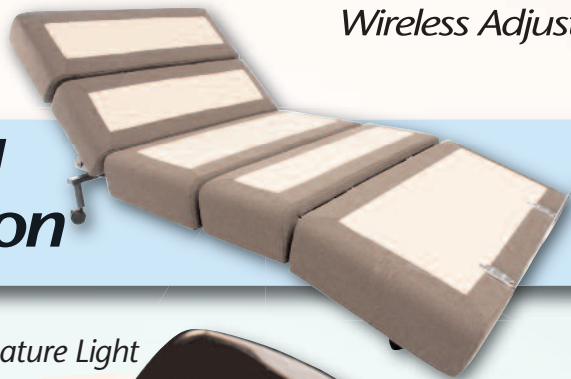

LED Signature Light

\*A. Raises the Head of the Bed

B. Lowers the Head of the Bed

E. Incline Watching TV/Reading

I. Increases the Intensity of Vibration (Head)

J. Decreases the Intensity of Vibration (Head)

O. Stops Massage

F. Returns Head & Foot to FLAT Position (hold 2 seconds)

C. Raises the Foot of the Bed

\*\*D. Lowers the Foot of the Bed

H. Lounge

G. Zero Gravity

M. Full Body Massage

K. Increases the Intensity of Vibration (Foot)

L. Decreases the Intensity of Vibration (Foot)

N. Turns on Massage Wave 1,2 or 3

P. Under Bed Light

### Head and Foot Position Adjustments (A, B, C, D)

• Press & Release button to raise or lower the head and foot sections of your adjustable bed. The premium "Wall-Glide" feature will automatically synchronize with all Head & Foot adjustments.

**NOTES:** \* "A" will automatically adjust headrest for perfect head & neck support. \*\* "D" will allow the lowering of the foot section for a "LOUNGE" position.

### Bed "Flat" Button (F)

• Press down and hold for 2 seconds to return bed to the flat position.

### Head and Foot Massage Adjustments (I, J, K, L)

• Press & Release button to activate the massage feature on the head and foot of the bed (starting at intensity 4 of 8). Gradually increase or decrease intensity of massage vibration by pressing the appropriate button. The lowest setting on each massage unit will turn off the respective vibration. The massage feature is programmed with an Auto Shut-Off Timer that will automatically turn off the massage after 15 minutes of continuous use.

**FOR YOUR SAFETY, READ THE OWNER'S MANUAL CAREFULLY AND COMPLETELY BEFORE OPERATING THIS PRODUCT. ELECTRIC SHOCK MAY OCCUR IF ELECTRICAL COMPONENTS ARE NOT INSTALLED OR OPERATED ACCORDING TO THESE GUIDELINES.**



# The "CONTEMPORARY"

## Wireless Hand Remote Operation *Continued*



Wireless  
Adjustable Bed

### Wave Massage Adjustments (N)

- Activates both units to wave mode massage. **NOTE:** You must stop the massage in order to activate another massage setting such as full body or another wave massage.

### Full Body Massage (M)

- Press to activate both the head and foot massages at the same time.

### Zero Gravity (G)

- This function allows your legs to be lifted to a position slightly higher than the chest. This allows blood to flow back to the heart, reducing stress and fatigue.

### Incline (E)

- Press to raise the head section to an ideal position for watching TV, reading or laptop use.

### Lounge (H)

- Press & Release to lower your legs, Raise your head and relax in a lounge position.

### Under Bed Light (O)

- Press the button to turn on or off the under bed light. (Button on back of Hand Wand)

**NOTE:** If the massage motors are operating and the "FLAT" button (F) is pressed, the massage motors will stop operating during the lowering of the bed frame. After 30 seconds, the massage motors will resume operation.

### Remote Features

- The "PRIVIA" Wireless Adjustable Bed uses a RF (Radio Frequency) hand control system.

**NOTE:** This bed may show minor intermittent performance because of typical RF interference. This is normal in the operation of the bed, not a defect.

- The buttons are backlit, when a button is pressed, to aid in the visibility of the remote in low light environments.
- It is not necessary to face the receiver to operate the remote control. Remote signal is best transmitted within 9 feet (3 meters) of the receiver.

### Safety

- In the case that an overload of weight is placed on the head or foot mechanism, the control unit will automatically stop all functions. The control unit will automatically resume all functions 30 seconds after excess weight is removed.
- Massage motors will automatically shut off after running continuously for 15 minutes. All massage functions will be operational again after 5 minutes. Automatic Shut Off will occur after 15 minutes of continuous use.
- The input transformer voltage is AC120V 60HZ, the output voltage is DC24V 3A. In the case of a short-circuit, a fuse on the transformer will blow to protect the electrical equipment (Fuse: 1A~1.5A.). Should this occur, you MUST seek professional assistance to replace the fuse. **Call Customer Care at: 1-877-826-8757**

**Notice:** The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Important Note:** To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.