

RC-RF11D-433

Remote Controller Operation Guide

HEAD UP BUTTON

Press and hold to raise the head section. Release to stop.

HEAD DOWN BUTTON

Press and hold to lower the head section. Release to stop.

LIGHT BAR BUTTON

Press to turn on and off the light bar at the bed.

MASSAGE BUTTON

Press to turn on and off the massage motor at the bed.

ANTI-SNORE BUTTON

Press to lift the bed to the "ANTU-SNORE" preset profile



FOOT UP BUTTON

Press and hold to raise the foot section. Release to stop.

FOOT DOWN BUTTON

Press and hold to lower the foot section. Release to stop.

FLAT BUTTON

Press and hold for 2 sec to the "FLAT" preset profile.

LED BUTTON

Press to turn on and off the flash light on the remote controller simultaneously.

ZERO-G BUTTON

Press to lift the bed to the "ZERO-G" preset profile

LOUNGE BUTTON

Press to lift the bed to the "LOUNGE" preset profile

IMPORTANT:

Read advisory information in the owner's manual carefully before using this product. The potential for electrical shock exists if electrical components are not installed or operated properly.




Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

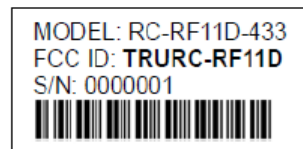

Ruoey Lung Enterprise Corp.

No.17, Lu-Kung South 2 Road, Chang-Pin Industrial Park, Lu-Kang, Changhua, Taiwan