



BluBand™ Installation Guide
(DRAFT INSTRUCTIONS – FEB08)

BluBand™

FCC ID: S5EBB02158

For body worn operation this device has been tested and meets the FCC RF exposure guidelines. The highest reported SAR value is: 0.0068(W/kg)

FCC regulatory statement for Part 15 devices -

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

VeriTracks™, BluTag®, BluHome™, BluDrive™, BluBand™ and various software icons are worldwide registered trademarks of Satellite Tracking of People LLC (STOP).

Software and Hardware described herein has U.S. and Foreign Patents Pending.

STOP provides this publication as is without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information contained herein; these changes will be incorporated in new editions of the publication. STOP may make improvements and/or changes to the products described in this publication at any time.

Reproduction of this document is expressly forbidden.

© 2007 Satellite Tracking of People LLC. All rights reserved.

Before You Begin

The BluBand™ will normally be supplied in SLEEP mode. This mode reduces power consumption to a minimum and allows the device to be stored between initial manufacture and first use for up to 6 months. The BluBand™ is activated by light and will enter normal monitoring mode by removing from its box. Once activated the BluBand™ device will operate for at least one year under normal operating conditions

The BluBand™ does not have a field replaceable or rechargeable battery. All units should be returned to Satellite Tracking of People (STOP) once the device indicates low battery. The device will last at least two weeks from first notification of low battery until it will cease operating. Please ensure a replacement is fitted during this period

The BluBand™ device operates in conjunction with the BluHome™ Device. For optimal performance locate the BluHome™ in the center of the home on the ground floor. It should be placed approximately two to three feet off the floor and away from electronics that may cause interference.

- ***Please refer to the BluDrive operating instruction on how to identify the device and confirm its operating mode and any alarm status being transmitted***
- ***Please refer to the BluHome™ installation manual on how to install a BluHome™ in the offenders home***
- ***Please refer to the Veritracks operating instructions on how to enter an offender details and to link the BluBand™ device to the offender via a BluHome.***

To install the BluBand™ device onto the leg you will require a strap, strap cutter and two clips

Quick Installation

Install one end of the supplied strap into the BluBand™ device ensuring the strap is cut exactly along the guides lines marked (Illustration 1)



Illustration 1

Insert the clip into the slot, lining up the clip with the two guide holes in the strap. Press firmly on the clip until the clip clicks into place, sitting just below the main case of the BluBand™ (Illustration 2)

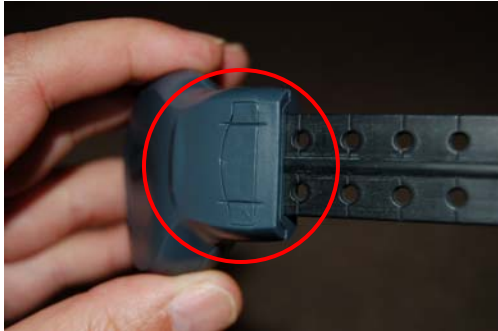


Illustration 2

Put the device round the ankle and cut the other end of the strap to fit ensuring the strap is cut along one of the guide lines marked. Insert the strap into the other side of the BluBand™ (Illustration 3)



Illustration 3

Insert the second clip into the slot, lining up the clip with the two guide holes in the strap. (Illustration 4)



Illustration 4

Press firmly on the clip until the clip clicks into place, sitting just below the main case of the BluBand™. (Illustration 5)



Illustration 5

Ensure the BluBand™ is a snug fit by inserting a finger between the BluBand™ and the leg. (Illustration 6)



Installation is complete. To ensure the Bluband is transmitting correctly and to confirm no alarms please refer to the DriveBy operating instructions