
128g铜版纸, 4折页, 正反面四色印刷

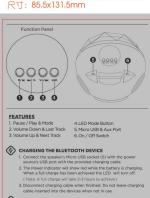

PAIRING / RECONNECTING THE DEVICE

- When the Speaker is switched into the "On" position it is automatically in searching / pairing / reconnect mode.
 Now, turn ON the Bluetooth function of your device.

- 2. Now, furn Ox the subetoom function or your device.
 3. Search for CYSTAL* and select it to pair.
 (for the first time pairing or pairing a new mebile device)
 4. The Speaker will reconnect automatically if your mobile phone has been paired previously.
 (Note: Depending on the device's type and configuration, manual reconnection may be require.)

If pairing is successful, "CRYSTAL" will make a tone to confirm.

AUXILIARY-IN FUNCTION

With the speaker powered on, connect the included Micro USB to auxiliary cable into the speakers Micro USB port (5) and plug the other end into your phones auxiliary port.

2. Now press the Mode button(1) in 2 second intervals until you enter "Aux In" mode.
(Note: "Aux in" mode follows FM Radio mode when selecting

Disconnect the Micro USB to Auxiliary cable when finished. (Note: If there is no sound while auxiliary cable is connected to bluetooth device, ensure all other bluetooth devices are not paired and repeat step one. If the problem persists replace cable.)

(ii) FM RADIO MODE

. With the speaker powered on, press and hold the Mode button(1) for 2 seconds to enter into Fm radio mode.

2. To navigate to through FM channels use the next and last track

(Next track(2): to go navigate up & Last track(3): to navigate down stations) 3. To exit FM radio mode press and hold the Mode button (1) for 2 seconds to return to Bluetooth mode or to enter "Aux In" mode if the Micro USB to Auxiliary cable is Connect.

LED LIGHTING MODES

- With the speaker powered on, press the LED button (4) this will cycle through the various LED lighting modes programmed on the CRYSTAL Speaker.
- You can also turn the LED lighting off completely by using the LED button (4) allowing you to listen to music without visuals.

? TROUBLE SHOOTING

Recharge your speaker using the micro USB cable. If the problem persists try using another micro USB cable

No Response From the Unit

- . Ensure your bluetooth device has an A2DP profile
- Check if both devices are paired and connected. Restart the device and try to reconnect.

Bluetooth device will not reconnect with the Speaker

 From your Devices bluetooth menu select the "CRYSTAL" speaker and choose "Forget". Now repeat the steps to pair. the speaker with your device.

Cannot find the devices name on the bluetooth menu

. Ensure you have paired the unit with your Bluetooth device.

- Cannot hear my media or it has very low volume Ensure the volume is turned up on your device.
- If problem persists, power off the speaker and charge it to

full battery capacity. Sound quality is weak or is being distorted

Connect and recharge the speaker, best sound quality will

come from a fully charged speaker.

SPECIFICATIONS:

- SPECIFICATIONS:

 Model No. SP2880 CRYSTAL

 Driver Unit size: DIA 2"

 DC Power Input: DC 3.7 V IA

 Biletooth V 21 e DR

 Output power: RMS 3W x 2

 Power Supply: Lithium Battery

CARE AND MAINTENANCE

- To clean the unit gently wipe with a soft, damp cloth.
- . Never use chemicals or hard abrasives, doing so may damage
- the speaker's functionality and finish.
- Do not play music at excessive levels. Damage to hearing and/or equipment may result.
- Do not tamper or opent the device, doing so may result in damage and personal harm.



SPEAKER CONTROLS AND FUNCTIONS

To pause and play media use the Mode button (1).

To increase the volume press and hold Volume Up button (3).

· Press the Volume Down button (2) to play the last track.

To decrease the volume press and hold Volume Down button (2).

Bluetooth

- A Warnings

 A Warnings was safety warnings and cast lines confinily to ensure your personal lateful and prevent importly damage. Fire and Excitor Books Hazard

 Do not drong, disassemble, open, crush, bend, deferre, receipt open, for the prevent form of the proper property in the separate. Fuch addition; could result in electric shock.

 The control of the property of the property of the property open of the property of the prop

- bod). Their servicing to qualified service personnel.

 ACANTON:

 On the service personnel of their your peaker, if could receive their services and disease.

 On their services are disease.

 On the services are disease.

 On the services are disease.

 On the services are disease.

 On their services are disease.

 On the ser

