


## LE5 LITE BODY WORN CAMERA

The LE5 Lite is an easy to operate wearable video camera designed specifically for law enforcement and security professionals.

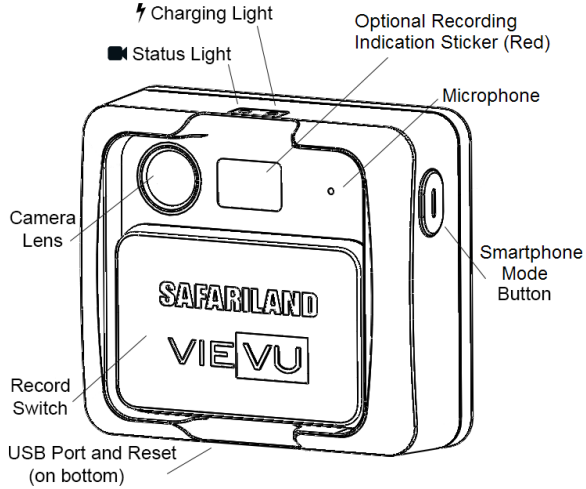

### Detailed Specifications

Video Resolution	1080 (FHD), 720 (HD) or 848x480 (SD)
Recording Speed	30 Frames Per Second
Recording Format	MPEG-4, H.264 Codec, AVI container
Lens Field of View	95 degrees (diagonal)
Recording Life	Up to 6 hours at SD Resolution*
Storage Capacity	32 GB (non-removable)
Video Storage	28 hours at SD Resolution*
Weight (no clip)	2.7 oz
Dimensions (no clip)	2.52" x 2.2" x .95"
Input	DC 5V
Temperature	-4°F - 122°F

\* Environmental conditions may increase or decrease specification

## LED LIGHTS

### STATUS LIGHT

Fast Blink Blue:

Solid Red:

Slow Blink Green:

Fast Blink Yellow:

Solid Yellow:

Slow Blink White:

Solid Blue:

Slow Blink Blue:

### CHARGING LIGHT

Solid Red:

Solid Green:



Camera is turning On.

Camera is in smartphone mode. Camera will communicate with a smartphone.

Camera is recording video and audio.

Camera is low on battery power or memory is almost full. Camera is recording video and audio.

Camera is not recording. Battery is out of power or memory is full.

Camera is installing firmware. Do not turn the camera Off or disconnect it from power or the camera firmware update may fail and cause the camera to become unresponsive.

Camera is connected and in queue to download.

Camera is downloading video.



Battery is charging.

Battery is fully charged.

## NEED HELP?


Phone: **888-285-4548** (24/7/365)

Email: [support@viewu.com](mailto:support@viewu.com)

Rev2

VIEVU

645 Elliott Ave W Ste 370 Seattle WA 98119

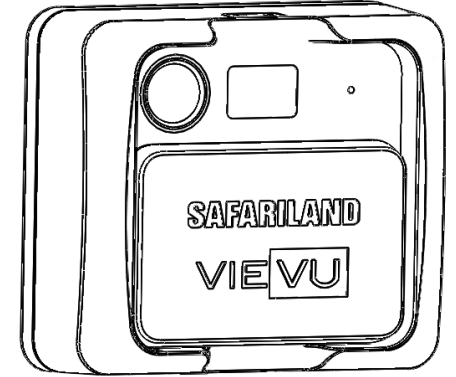

## LE5 LITE INSTRUCTIONS

# FIRST TIME SOFTWARE SETUP

## 1. SELECT YOUR SOFTWARE

Go to [www.vievu.com/LE5litesetup](http://www.vievu.com/LE5litesetup) and complete the sign-up process. After sign-up is complete, you will receive a welcome email with additional information.

## 2. INSTALL SOFTWARE ON COMPUTER

The welcome email will contain a link to the software to install. Contact VIEVU at 888-285-4548 if you need assistance.

## 3. ASSIGN CAMERA IN SOFTWARE

All cameras must be assigned before use.

**NOTE:** Failure to assign the camera will prevent downloading videos.

Using the supplied cable, connect the 2 large USB connectors to the computer. Connect the small connector to the bottom of the camera. Click the 'Assign Camera' button in the software. For complete steps, consult the User Guides found in the welcome email.

# USING THE CAMERA


## MOUNTING OPTIONS

The camera includes one universal attachment clip and one cable. The clip can rotate 360 degrees. The clip locks every 90 degrees, adjust the position by twisting the clip. If the clip becomes loose, you may need to tighten the locking screw using a Philips screwdriver. To maintain compliance with FCC RF exposure guidelines for body worn operation, do not use accessories contain metallic components.


## WEARING THE CAMERA

The camera must be worn with the LED lights facing up. The ideal position to attach the camera is level with the sternum but it will vary depending on the user.

**HINT:** Use the smartphone app to confirm placement on your body.

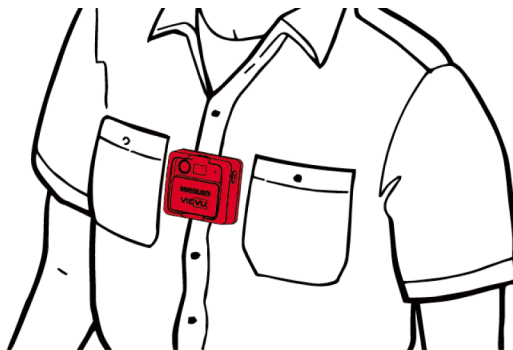


## RECORDING VIDEO

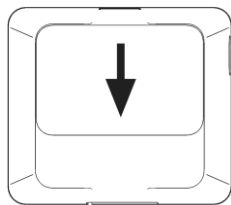

### START RECORDING

1. Slide the record switch down.
2. The camera will turn on. The status light will blink green while recording.

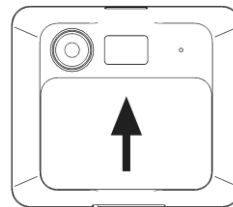

### STOP RECORDING

1. Slide the record switch up.
2. The camera will turn off.

## CONNECT TO SMARTPHONE

The LE5 Lite is designed to turn off between recordings. In order to interact with the camera using a smartphone, the camera needs to be switched into smartphone mode.

### ACTIVATE SMARTPHONE MODE

Press and hold the smartphone button on the side of the camera for 3 seconds. The status light will blink blue while activating and change to solid red when complete. You may now connect to the camera using a smartphone.

### DEACTIVATE SMARTPHONE MODE

Press and hold the smartphone button on the side of the camera for 3 seconds. Smartphone mode will turn off. The status light will turn off.

**NOTE:** While in smartphone mode, you can switch to recording video by sliding the record switch down.

**NOTE:** Deactivate smartphone mode as soon as possible for maximum battery life.

## DOWNLOADING VIDEO

### DOWNLOAD WITH CABLE

1. Using the supplied cable, connect the 2 large USB connectors to the computer. Connect the small connector to the bottom of the camera.
2. Login to the VIEVU software and click 'Download'. Consult the User Guide found at [www.vievu.com/support](http://www.vievu.com/support) for complete steps.

### MULTIDOCK DOWNLOAD

Insert the camera into an available port on the MultiDock. The status light will turn blue when the camera is in queue to download. The light will change to blinking blue when video files are being downloaded. The light will turn off when the download process is complete.