Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

VM5463 VM5463-2





vtech

Agner avitaalla lenimoM

Quick start guide

Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR 97223, United States Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada Communications, microsoft assessment of the processing of the proc

DISCLAIMER AND LIMITATION OF LIABILITY

Parent unit: 3.84 2100mAh Li-io

5" Color LCD (WQVGA 480x272 pixel)

eary unit power adapter: Output: 5V DC @ JA stent unit power adapter: Output: 5V DC @ JA

Maximum power allowed by FCC and JC. Actual operating range may vary according to environmental conditions at the time of use.

damage the product.

Power adapter inform Ferent unit output: 5V DC IA VTech Telecommunications Inc. Models: VTDSEUSSIOD Baby unit output: 5V DC IA, VTech Telecommunications Inc. Models: VTDSEUSSIOD Models: VTDSEUSSIOD Inc. Models: VTDSEUSSIOD Inc. VTech Telecommunications Inc. Models: VTDSEUSSIOD Inc. VTech Telecommunications Inc. Models: VTDSEUSSIOD Inc. VTech Telecommunications Inc. Models: VTDSEUSSIOD Inc. VTECH VTECH

Li-lon battery, 3.8V 2100mAh
Zhongshan Tianmao Battery Co., Ltd.
Model Number: 8P1763
The privacy arisinters are intervient to be

Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your disaler or local power company.

This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility Opening or premoving notes of the control of the contr is required. On not install the baby unit at a height above

used.
You should test the sound reception every time you turn
on the units or move one of the components.
Periodically examine all components for damage. fore you should not assume it will continue working inly for any given period of time. Further, this is not a ladevice and should not be used as such. This prod

tub or swimming pool, or in a wet basement or shower.

C AUTION Les only the bather provided. There my bo a risk of explosion if a winny type of bathery is used for the parent unit. The bathery cannot be subjected to high or flow authente temperature and low air pressure at high affluide during use, storage or transportation. Disposal of bathery into five or a hot own, or mechanically crushing or cutting of the battery can result in an explosion. Lessing the battery can result in an explosion. Lessing the battery in an ordermently

10. Perfordully assemine all components for demange. There is a very low wire of privacy loss when using certain the privacy loss of the privacy loss when using certain telephones, etc. To protect your privacy, make sure the selephones, etc. To protect your privacy, make sure the label privacy loss of the units, and power of the belay monitor. In the belay monitor protectically by powering off and them powering on the units, and power off the belay monitor. Light with the product. Light with the product off the properties of the properties of the product of the properties of the properties of the Light with the product. Light with the product of the properties and the product of the product of the properties and the product of the product of the properties and the product of the page of the application of the properties of the product of the product of the product of the properties of the product of

SAVE THESE INSTRUCTIONS


Cautions

L. Use and store the product at a temperature bet and 104°F.

Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.

 Batteries should not be exposed to excessive heat such as bright sunshine or fire. Warning-Strangulation Hazard— Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ff (0.9m) away). Do not remove this


WHAT'S IN THE BOX




CONNECT THE BABY MONITOR


- The rechard

The rechargeable battery in the parent unit is built-in. Use only the power subgress supplied with this product. Use only the power subgress supplied with this product in controlled electric outlet. Connect the power subgress is a vertical or floor mount position only. The subgress is program or not consider the power subgress is a vertical or floor mount position only. The subgress is given the controlled the power subgress is a vertical or floor mount position only. The subgress is created to the power subgress is a vertical or floor mount position only. The subgress is created to the power subgress is a vertical or floor mount position only. The subgress is created to the power subgress is a vertical to the power subgress or control or floor floor where the power subgress is the power subgress is created to the power subgress is c



POWER ON OR OFF THE BABY MONITOR

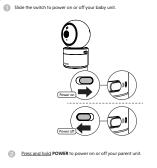



POSITIONING THE BABY MONITOR



Sub-menu

A

°F°C

ö

 \bigcirc

Sound activation - screen and audio

4 STATUS CHECK

Once you power on both your baby unit and parent unit, your parent unit displays image from the baby unit, and the LINK LED light turns on.

The ON LED light of baby unit turns on.



· Set the minimum temperature.

Set the parent unit to beep when the battery is low.

Set the parent unit to beep when the link between the parent unit and the baby unit is lost.

Set the confirmation tone on or off when selecting an option in the menus.

Set the parent unit to beep when the

baby unit detects sounds while in Split mode (For VM5463-2 only).

When on, once a sound is detected, the parent unit screen and speaker will automatically turn on. See Sound sensitivity and sound activation section to learn more.

When the parent unit screen is off

Press @ to zoom in or out.

TECHNICAL SPECIFICATIONS

BASIC OPERATION - PARENT UNIT

Adjust speaker volume Press ● vo. / vo. ● to adjust your parer


an (D).



Turn off the screen

Talk to your baby unit

Press and hold TALK and speak to your the baby unit. Release TALK when finish talking and hear your baby again



Press and hold LCD ON/OFF to switch off the baby unit.



∜ TIP

Press any key on the parent unit to turn on the screen again.

Use the menu

Press MENU:
no save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit Iuliaby, or to adjust the baby unit sound sensitivity.

While in the menu:

- Press < or > to scroll among the menu options. Press MENU to select an item, or to save a setting.
- Press ★ or ▼ to scroll among the sub-menus,
- or to adjust a setting. Press

 to return to the previous menu option:


Microphone

POWER

TALK

without changing the current setting. • Press ⊕ /EXIT to return to live video.

OVERVIEW - PARENT UNIT




O Volume O

VIEW /LCD ON/OFF

12 RESET

13 Stand

OVERVIEW - BABY UNIT



- Night light
- On/Off switch
- On/Off LED light
- On when the baby unit is turned on and is paired to the parent unit.
- Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost
- ¥ Projection light on/off key
- 10 'Ö' Night light on/off key
- 11 Power jack
- 12 Slots for wall mounting

NEED HELP?

For operations and guides to help you operate your video monitor, and for the latest information and support, check out our Use your smartphone or mobile device to access our online help.



Go to https://help.viechphones.com/vm5463 or https://help.viechphones.com/vm5462-2 cR Scan fhe QR code on the right. Launch fhe camera app or QR code scanner app on your smartphone or lablet. Hold the device's camera up to the QR code and farme it. Tap the po-up- unfolfication to be redirected to the online help page. If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until the image is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canadal for help.





60min 45min 30min 15min Set timer to stop playing the selected melody or soothing sound.

Main menu icons

Sub-menu

Quil

 \approx

-

▶ / ■ Play/Stop Iullaby

Main menu

-**D**-

Camera

Ó **(3)**

Lullaby

J

■ PARENT UNIT ICONS

Split mode

Baby unit speaker volume

Adjust the baby unit's

speaker volume

Select one of the soothing sounds, or white noise.

11 11 12 11 3 11 4 11 5

Select one of the five melodies

Play all melodies.

≋1≋2≋3≋4



60min 30min 15min

Set timer to turn the night light off.

AUTO

Auto turn on the night light when baby unit detects sound. It will turn off after 15 minutes of no sound detection. See Sound sensitivity and sound activation section to learn more.

baby unit detects the ambient light. If the room is bright, the night light adjusts itself to be brighter; if the room is dim, the night light adjusts itself to be less bright.

ON / OFF Turn on/off projection light 60min 45min 30min 15min

> Auto turn on the projection light when baby unit detects sound. It will turn off after 15 minutes of no sound detection See Sound sensitivity and sound





ON/OFF Turn on/off sound activation

₿Note

You can set VOX sensitivity level to activate parent unit screen and soun when baby unit detects sounds that exceed certain levels. See Sound sensitivity and sound activation section to learn more.







when the parent unit screen is off and it receives alerts, for example, link lost between parent unit and baby unit, the parent unit screen and speaker will turn on for 10 seconds.

PARENT UNIT ICONS (CONT'D)



Status icons

Tol

만

<u>@</u>1

@2

⊕.

n

Ý,

(*For VM5463-2 only)

Current view status The baby unit number that is being viewed when in: Single CAM mode.

Patrol mode ("For VM5463-2 only). Split mode ("For VM5463-2 only).

Night vision - On Zoom - On

Night light - On

Night light - Auto-on
- Color icon indicates the night light is set to auto-on, and is currently turned on by sound activities.

Grav icon indicates the night light is currently off but is set to auto-on. Night light will turn on when sound is detected by the baby unit.

Connection status Till - Strong signal strength.

*A Projection light - Auto on Color icon indicates the projection light is set to auto-on, and is currently turned on by sound activation.

by sound acrivation.

Gray icon indicates the projection light is currently off but is set to auto-on. Projection light will turn on when sound is detected by the baby unit.

Projection light - On

Real-time temperature Real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. 57°F or 14°C).

Temperature alert tone - On

9-level sound indicator indicates low sound leve detected by the baby unit.

indicates moderate sound level detected by the baby unit.

Mute alert

Displays when the parent unit speaker volume is set to off. Displays when the parent unit is talking to the baby unit. Battery status

when the battery is charging. (IIII) - battery is fully charged

Speaker volume - displays the parent unit speaker volume le while adjusting.

Alert icons $\langle \cdot \rangle$

)))§

· Displays when parent unit's battery is low and needs charging.

. Displays when connection between parent unit and baby unit is lost

 Displays when sound is detected at a baby unit when in Split view. (For VM5463-2 only)


Baby unit detects temperature reaches or exceeds the set maximum.

PROJECTION LIGHT



The projection light located on the top of the baby unit projects a starry soft night light scene onto the ceiling with a tilting angle. Adjust your baby unit's position with the projection light to help sooth your baby to sleep. For optimal performance, place the baby unit in upright position.





Sound sensitivity and sound activation

Adjust sound detection sensitivity

You can turn on **Sound activation** and adjust the **VOX sensitivity** to detect sounds and turn on the parent unit while its screen is switched off or dimmed. When the baby unit detects sounds that

when the baby unit detects sounds that exceed certain levels, the parent unit screen will turn on and the baby unit starts transmitting the sounds to the parent unit, and you can see and hear your baby. If you have turned on the Night light Auto-on and the Projection light Auto-on feature, they will turn on automatically to sooth your baby.

If you have turned on sound alert, the parent unit beeps when the baby unit detect soun while in **Split** mode (*For **VM5463-2** only).

NIGHT VISION

Default setting in papers in the papers of t and louder sounds from your baby. The parent unit remains quiet when your baby makes soft

The baby unit has infrared LEDs that

allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and appears on the screen.

It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment. When the infrared LEDs are on, the images are in black and white. This is normal.

■ Notes

O TIP

Sound activated screen and audio

When Sound activation is on, the parent unit screen stays off to save power when the baby unit detects no sound. Once the baby unit detects sounds that are louder than the chosen sound sensitivity level, the parent unit screen and speaker turn on automatically. The parent unit will then turn off again after 50 seconds of no sound detection




The parent unit display will dim to conserve energy after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

10 min inactivity

Press any hutton







Press VIEW in Single CAM or Patrol mode to switch to the baby unit you have powered on.

In Single CAM or VIEW to switch of baby units and @2

For VM5463-2 ONLY

Status check - Two baby units

If you are viewing baby unit 21, the

POWER LED light of baby unit 2 turns on. As baby unit 2 is not being

viewed, its POWER LED light flashes.

PINOTE





Change different views - Patrol

Select Patrol as your monitoring mode to rnately view the image from baby units



mode to view the images from both



MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

MOTES

MOLES

Check for reception strength and camera angle before drilling the holes. The types of screws and anchors you need depend on the composition of the wall. You may need to purchase the screws and anchors separately to mount your camera units.

1. Place the wall mount bracket on a wall and then use a pencil to mark two holes in parallel. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit)



bject other than a stud insert



Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.





3. Insert the screws into the holes and





You can maximize your camera unit's viewing angles by filting the wall mount bracket.Hold the camera unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your camera unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the



THE RBRC SEAL

indicates that VTech Communications, Inc. is voluntarily participating in an

The RBRC seal and 1-800-8-BATTERY® are registered trademarks of Califercycle, Inc.

FCC AND IC REGULATIONS

FCC Part 15

FCC Part II

The experiment has been helded and found to comply with the requirement for a Class E digital device under Part II of the
hamily interference in a registeral installation. This experiment generates, used and containe such brequency energy
hamily interference in a registeral installation. This experiment generates, used and containe such brequency energy
hamily interference in a registeral installation. This experiment generates, used and contained and brequency energy
hamily appropriate place in the contained and propriate place such as the contained and propriate gloss such as the contained place in the contained place in

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada

CANYLY.

The term "IC." before the certification/registration number only signifies that the Industry Canada technical specifications were met.

RF radiation exposure statement

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

FOR CETL COMPLIANCE ONLY

DIM MODE

sur l'appareit. L'installation par un adulte est requise. MISE EN GARDE: N'installez pas l'unité du bébé à une hauteur sundrieure à 7 môtres

superviser votre böbé. N'ufflisor pas cet appareil près de l'eau ni de toute autre source d'humidité, par exémple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide un près d'une piscine, dans un soussol humide ou une

Modelle: VIII.cbt/Johano.

Libien battery, 3 87 (200m/sh.

Libien battery, 3 87 (200m/sh.

Zhongshan Tianmao Battery Co., Ltd.

Model Namber: 891783.

Lenguill's sont branches dame une prise de courant, les adaptateurs sectiur one side concus pour site orientale courant de la coura

mesures de sécurité importantes La plaque signalétique appliquée est située au bas du socle de l'unité du bébé.

u : s les instructions et mises en garde inscrites

ni poice d'une piscine, dans un soussol humide au une MISE EN AGRE Utilises uniquement les piles (normires, Il asiste un riscipae d'exposicion d'un autre typis de batteries et utilisé pour l'unité Peients. Miriorier pa blis les plus de batteries et utilisé pour l'unité Peients. Miriorier pa blis les plus de renselignements sulvant le sceau de RBRC. Nutilisée que les despirations rische avec ce procluir sons il risadioquate risque d'endormaigne sérieusement le produit et métatre voire sécurité en polit.

middere : v f05EUS0S100 Adaptateur de l'unité du bébé : Sortie : SV DC 1A VTech Telecommunications Ltd. Modèle : VT05EUS0S100

produit, afin d'assurer une accessionte securiente en produit de la price de courant.
Décarative, monduir de la price de courant au de la courant de la cou

on from time, and decisions in conduct differentiation and an in-part time, and decisions in conduct differentiations are de-ail manufactured and included an included and included and production of the conduction of the conduc

NNLY Nemforces joining dissipint is more less coverstrains de classification de la confidence de la confide

relativement à l'utilisation de l'appareil par une per responsable de leur sécurité.

CONSERVEZ CES INSTRUCTIONS
Misse en garde

1. Utilisse se dentreposez le produit à une température 0° C (32° f) et 40° C (104° f).

N'emposez pas cet annareil à for troide ou de l'appareil per l'appareil p

Adaptateur de l'unité du parent : Sertie : SV DC 1A VTech Telecommunications Ltd.

VTech Telecommunications Ltd.

VTech Telecommunications Ltd.

0° C [32°F] et 40° C [104°F]. N'exposez pas cel appareil à des froids ou des chaleurs extrémes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas prés d'une source de chauffage. Le bloc-piles ne doit pas être exposé à la chaleur excessiv sille qu'à la lumière du soleil ou la fixe. where que is lamine du circili on la fee.

An extraorment - Riscan de transqualition
- Las enfantes so cond ETRANCES den fice.
Las enfantes so cond ETRANCES de la monitoria de la conditiona de

Siens fil.

Simulaturu cardiaques implantés dans l'organisme
Les simulaturu cardiaques implantés dans l'organisme
Les simulaturus que l'appeale qu'avant dispositifis
L'organisme Willeales Technology Ressauch, LLE (VITIK) une
firmé des recherches indépendantés, a mené une evaluation
les des recherches indépendantés, a mené une evaluation
les portaités et les internulateurs cardiaques implantés dans
l'organisme, Appuyée par l'Administration des aliments et
ordiges (TRA) des Estir-Units, à firme WiTi ne commande aux
designes (TRA) des Estir-Units, à firme WiTi ne commande aux

qu'ils ne jouent pas avec l'appareil.

Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacifés physiques, sensoriélée ou membles réduites ou qui manquant ait donné suffisiement de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

nus gens qui utilisent dispositifis sans fini à proximité du ceux-ci.
Champs électromagnétiques (EMF)
Ce produit de Vorde net conferme à toutes les normes se
rapportant aux champs électromagnétiques (EMF) standard, Si
voius le manaplus correctement en suivaire les instructions de ce
guide, son utilisation sera sécuritaire pendant de nombreuses
disposon auto-comment de la conferment de la confer

LIMITED WARRANTY

what does this similare warranty cover?

The manufacturer of this V Tech Product warrants to holder of a valid proof of purchase ("Consumer" or that the Product and all accessories provided in the package ("Product") are free from defects in matter and workmanchip, pursuant to the following terms conditions, when installed and used normally and I accordance with the Product operating instructions. To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511 In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

will return the replacement condition. You should expe approximately 30 days.

approximately 30 days.

The limited warranty period?

The limited warranty period for the Product extends for ONE
(1) YEAR from the date of purchase (90 days on products)
purchased as Refurbished; This limited warranty also
applies to the replacement Product for a period of either (a)
90 days from the date the replacement Product via

*Refurbished products purchased from our online store carry a 90-day replacement warranty.

What is not covered by this limited warranty?

Product returned without a valid proof of purchase (see item 2 helow/r or

What must you return with the Product to get warranty

service?

I. Return the entire original package and contents including the Product to the VFcch service location along with a description of the multianction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchase (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address; and telephone number.

or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability fau numerities warranty that the Product is fit for ordinary usely are limited to one year from the date of purchase. Some states' provinces do not allow initiations on how long an implied warranty lasts, so also also initiation may not apply to you include the province of the provi

Please retain your original sales receipt as proof of purchase.

