Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech



vtech







DISCLAIMER AND LIMITATION OF LIABILITY

Power requirements	Parent unit: 3.8V Li-ion battery Parent unit power adapter: Output: 5V DC ⊕ 1000mA Parent unit power adapter: Output: 5V DC ⊕ 1A
Aominal effective range	Maximum power allowed by PCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
rcp	S" Color LCD (WGVGA 480x272 pixel)
Channels	32
ransmit frequency	Baby unit: 2405 - 2475 MHz

Frequency control Crystal controlled PLL synthesizer **IECHNICAL SPECIFICATIONS**

Press ⊕ to zoom in or out

Zoom

IMPORTANT SAFETY INSTRUCTIONS

VM5255

VM5255-2

Manual Tilt

Remote Pan and

Video Baby Monitor

回数回 回数回

- i using your equipment, basic safety precautions ck and injury, including the following: Follow all warnings and instructions marked on the
- product. Adult setup is required. CAUTION: Do not install the baby unit at a height above
- infant. Supervising the infant is the parent's or caregiver's responsibility. This product could case operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a
- ubjected to extremery row air pressure may resum in am eplosion or the leakage of flammable liquid or gas. Dispo-sort hattery according to the information in **The RBRC seal**

utions Use and store the product at a temperature between 32°F and 104°F. Do not expose the product to extreme cold, heat or direct and 104°F. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive heat such as

damage the process
Power adapter inform
Power unit output: 5V DC 1A

Unplug this product from the wall outlet before cleaning.

Do not use liquid or aerosol cleaners, Use a clamp cloth for

ה היי היי causes a hazardous situation.

not allow anything to rest on the power cords. Do not all this product where the cords may be walked on or loed.

- /arning-Strangulation Hazard-in have STRANGLED in cords. Keep Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ff (0.9m) away). Do not remove this tag.

 Never place the baby unlift; inside the baby's crib or playpen. Never cover the baby unlift; or parent unit with anything such as a towel or a blanket.

Never push objects of any kind into this pro

Tody should not mis south rutulation ready this you can be precised by the post of the production of the product has ready marine or the product has never been used before purchase, need product has never been used before purchase, need product has never been used before purchase, need no powering on the units, and power off the Baby monitor if you will not use if for some time.

if you will not use it for some time.

22. Children should be supervised to ensure that they do not play with the product.


23. The product is not intended for use by persons (including

SAVE THESE INSTRUCTIONS

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless device Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that

Electromagnetic fields (EMF)

WHAT'S IN THE BOX

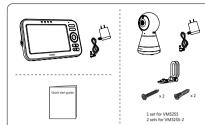

CONNECT THE BABY MONITOR

Use only the power adapters supplied with this product.

Make sure the baby monitor is not connected to a switch-controlled electric outlet.

Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not

designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.

Make sure the parent unit, the baby units and the power adapter cords are out of reach of children.

The rechargeable battery in the parent unit is built-in

2

CONNECT THE BABY MONITOR (CONT'D)

Charge the parent unit battery When you have connected and turned on the parent unit, the battery will be charged automatically.


- Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid (110).
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

The hattery icon indicates the hattery status (see the following table)

The screen displays The battery has very little charge and may be used for only a short time.

Charge without interruption (about 30 minutes). The battery icon becomes The battery is fully charged. To keep the battery charged, connect it to AC power when not in use.

2 POWER ON OR OFF THE BABY MONITOR

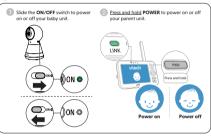

POSITIONING THE BABY MONITOR

> 3ft (1m)







PNOTE You can manually tilt the camera angle and down by pushing the lens portion upwards or downwards.

Temperature

To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless router, place. cell phones and computers.



∜ TIP

Once you power on both your baby unit and parent unit, your parent unit displays image

The ON LED light of baby unit turns on

ON/OFF

Turn on/off temperature alert tone

. Set the minimum temperature

Set the maximum temperature

Set sound activation on or off.

ON/OFF Turn on/off sound activation

Set the parent unit to beep whenever the room temperature detected by the baby unit falls outside of the set temperature

Set temperature display in Fahrenheit (°F) or Celsius (°C).

Set sound activation on or oft.
 When it is on, and the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen and speaker turns on automatically, and you can see and hear your baby. The parent unit will then turn off again after 50 seconds of no sound detection.

When the parent unit screen is off and it receives alerts, for example, link lost

between parent unit and baby unit, or battery is low, the parent unit screen and speaker will turn on for 10 seconds.


BASIC OPERATION - PARENT UNIT

Adjust speaker volume Press ● vol. / vol. ● to adjust your parent unit



Talk to your baby unit

Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit. Release TALK when finish talking and hear your baby again

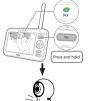

Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the baby unit.





Camera lens and surface may get warm during normal operation

Use the menu


Press MENU to enter the menu, choose a menu item, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit's lullaby, or to adjust the baby unit's sound sensitivity.

While in the menu:

- Press MENU to select an item, or to save a setting.
- Press ∧ or ∨ to scroll among the sub-menus, or to adjust a setting.

- changing the current setting.
- Press @ /EXIT to return to live video.


OVERVIEW - PARENT UNIT

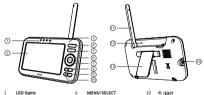

- 2 LCD display
- Microphone
- 4 POWER 5 TALK
- Arrow keys ∨ ∧ <>
 - While viewing image from the camera unit, press and hold to pan the camera unit leftward or rightward. 12 DESET
 - 8 V8L1 V0L (Volume) O VIEW /ICD ON/OFF
- 13 Stand 14 Power jack

11 Antenna

Overview - Baby unit

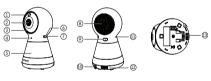

1 Light senso

MOTES

2 Camera 3 Gloss lens

NEED HELP?

and online FAQs

- 4 Microphone 5 Night light
- ON/OFF switch
- POWER LED light
- On when the baby unit is turned on and is paired to the parent unit. Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost.

Use your smartphone or mobile device to access our online help.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.

Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to be redirected to the online help page.

If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

- 9 Ö- Night light ON/OFF key 10 Power jack
- 11 Pair key
- 12 Temperature sensor









Set timer to stop playing the selected

Brightness ·**Ď**: Adjust the parent unit's LCD brightness.

Camera settings **Q Q**₁₁| volume.

PARENT UNIT ICONS

Main menu icons

Baby unit speaker volume

Monitoring mode (For VM5255-2 only)

 Split mode • Patrol mode

Lullaby Play/Stop Iuliaby







Night light ON/OFF Turn on/off night light

Select one of the night light colors. Change to all seven colors in cycles.

60min 30min 15min

Set timer to turn the night light off. Select to set the night light to always on.


AUTO

- Set to auto turn on the night light when baby unit detects sound. It will turn off after 15 minutes of no sound detection. You can set VOX sensitivity level to detect sounds that exceed certain levels. See Sound sensitivity and sound activation section.

ON/OFF ONY OFF

- Turn on/off the adaptive night light feature. When this feature is on, the feature with the control of the control

Alert tones



Set the parent unit to beep when the link between the parent unit and the baby unit is lost. \bigcirc



Set the parent unit to beep when the baby unit detects sounds while in Split mode (For VM5255-2 only).



°F°C

Sound activation - screen and audio

· You can set VOX sensitivity levels to when baby unit detects sounds that exceed certain levels. See Sound





activate parent unit screen and sound sensitivity and sound activation section

PARENT UNIT ICONS (CONT'D)

Status icons

 \blacksquare

P

Θ1

<u>@</u>2

(

П

<u>`</u>

Connection status

- Till Strong signal strength. Till - Moderate signal strength.
- Tn Low signal strength.
- . Y Weak signal strength.



(*For VM5255-2 only)



Current view status The baby unit number that is

- being viewed when in: Single CAM mode
- Patrol mode ("For VM5255-2 only).
- Split mode ('For VM5255-2 only).





Lullaby - On



Night light - Auto-on Color icon indicates the night light is set to auto-on, and is currently turned on by sound activation.

 Gray icon indicates the night light is currently off but is set to auto-on. Night light will turn on when sound is detected by the baby unit.

Status icons

°F or °C Real-time temperature Real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. 57 F or 14 °C).



· III indicates low sound level detected by the baby unit indicates moderate sound level detected by the baby unit.

indicates high sound level detected by the baby unit.





- . [2(=12(=12)(=12)(=12)] animates when the battery is charging.

 battery is fully charged - battery is low and needs

Alert icons

)))]

1

\Box . Displays when parent unit's hattery is low and needs charging

Displays when connection between parent unit and baby unit is lost.

Displays when sound is detected at a baby unit when in **Split** view (For

Baby unit detects temperature reaches or exceeds the set maximum.

Baby unit detects temperature is at or is lower than the set minimum.

Sound sensitivity and sound activation

Adjust sound detection sensitivity

You can turn on **Sound activation** and adjust the **VOX sensitivity** to detect sounds and turn on the parent unit while its screen is switched off or dimmed.

When the haby unit detects sounds that When the baby unit detects sounds that exceed certain levels, the parent unit screen urns on, the baby unit starts transmitting ounds to the parent unit, and you can see and hear your baby. If you have turned on

If you turn off **Sound activation**, you will he

NIGHT VISION

unit beeps when the baby unit detect sounds while in Split mode ("For VM5255-2 only).

Level 4 (High) Level 2 (Low) Level 1 (Lowest) Default setting) The parent

The haby unit has infrared LEDs that

allow you to see your baby clearly at night or in a dark room. When the baby

baby unit are in black and white, and (

It is normal to see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.

E 11P
Depending on the surroundings and other
interfering factors, like lighting, objects,
colors and backgrounds, the video quality
may vary. Adjust the baby unit's angle or

place the baby unit at a higher elevation to prevent glare and blurry displays.

are in black and white. This is norma

When the infrared LEDs are on, the images

unit being viewed detects low light levels, the infrared LEDs are switched

Notes

3% TIP

Sound activated screen and audio

When **Sound activation** is on, the parent unit screen stays off to save power when the baby unit detects no sound. Once the baby unit detects sounds that are louder than the chosen sound sensitivity level, the parent unit screen and speaker turn on automatically. The parent unit will then turn off again after 50 seconds of no sound detection.

Note If you have muted the parent unit speaker, only the parent unit screen will turn on when a sound is detected.



The parent unit display will turn off to conserve energy after 10 minutes of inactivity, in

(1) 10 min inactivity

which there is neither key pressed nor alert received from the baby unit.







If you power on only one baby unit, you may see the parent unit displaying T and then 2, and

Press VIEW in Single CAM or Patrol mode to switch to the baby unit you have powered on

Change different views - Patrol

Status check - Two baby units

If you are viewing baby unit 21,

the POWER LED light of baby unit

the LINK LED light flashing.

Select Patrol as your monitoring mode to alternately view the image from baby units 21 and 22 every 10 seconds.



Change different views - Split

√oñ:©:





MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

₽NOTES

Check for reception strength and camera angle before drilling the holes.

screw in the top hole.

The types of screws and anchors you need depend on the composition of the wall. You may need to purchase the crews and anchors separately to moun your camera units.

3. Align the wall mount bracket and screws with

4. Place the camera unit on the wall mount

bracket and then slide it forward until

it locks into place. Connect the power adapter to the camera unit and a power

supply not controlled by a wall switch.

the holes in the wall as shown. Tighten the screw

bracket position is fixed. You can tighten the other

in the middle hole first, so that the wall mount

1. Place the wall mount bracket on a wall and then use a pencil to mark two holes in parallel. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).



OR

2. If you drill the holes into a stud, go to step 3. If you drill the holes into an object

other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the









5. You can maximize your camera unit's viewing angles by tilting the wall mount bracket Hold the camera unit, and then rotate the knob in an anti-clockwise direction. This will loosen the joint of the wall mount bracket. Tilt your camera unit, and then rotate the knob in an anti-clockwise direction. This will loosen the joint of the wall mount bracket. Tilt your camera unit up or down to adjust to your preferred angle. Then, rotate the knob in a clockwise direction to tighten the joint and secure the angle.





THE RBRC SEAL



VTech's participation makes it easy for you to drop off the spent battery at local retailers participating in the program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY for information on Li-ion battery recycling an disposal bash/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our

The RBRC seal and 1-800-8-BATTERY® are registered trademarks of Call2recycle, Inc.

FCC AND IC REGULATIONS

FCC Part 15

mply with the requirements for a Class B digital device under Part 15 of the This equipment has been trend and found to comply with the requirement for a Cast 3 digital device under Part, harmly interference is expected in similation. The expected interference is expected in the property of the expected interference and property of the expected interference and property of the expected interference will not court in a particular installation. If the expected interference will not court in a particular installation, if this expected interference will not court in a particular installation. If this expected is the expected in the expected in the expected interference will not court in a particular installation. If this expected interference will not court in a particular installation. If this expected in the expected is the expected in the expected interference in order of the following installation is the expected in the expected interference in order of the following installation. If the expected interference is not one of the following installation in the expected interference is not more of the following installation.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

Industry Canada

The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were

This product mosts the applicable Inscustion, Science and Economic Development Canada technical specifications

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

FOR CETL COMPLIANCE ONLY

Mesures de sécurité importantes La plaque signalétique appliquée est située au bas du socie de l'unité du héhé ébé. Itilisez votre appareil, vous devriez toujours suivre Ires de précaution de base afin de réduire les

DIM MODE

auivent : toutes les instructions et mises en garde inscrites sur l'appareil.

L'Installation par un adulte est requise.

MISE EN GARDE i Ninstaller pas l'unité du bébé à une
hauteur supérieure à 2 mêtres.

Ce produit ne remplace pas la surveillance adulte du
nourriscon. La supervisión du nourrisson est la responsabilité
du parent ou de la personne qui s'occupe de l'erifant. Ce
produit pourreil cester de loctromer et par conséquent.

yous ne devriez pas présumer qu'il confinuera de fonction correctement nendant une période de temps donnée. De plus, il ne s'agit pas d'un instrument médical et ne devrait pas étre utilisé comme tel. Ce produit est destiné à vous aider à supen/ser votre bébé.

superviser votre bêbé.
N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidite, par exemple, près d'une balgnoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un sous-sol humide ou une

MISE EN GARDE: Utilisez uniquement les piles fournies. Il existe un risque d'explosion si un autre type de batterie est utilisé pour l'unité Parents. N'incinérez pas les piles. Cellesci risqueraient d'exploser. Jetez les piles usées tenseignements suivant le sceau du RRRC

Sental information sur les adaptateurs électriques Adaptateur de l'unité du parent : Sertie : SV DC 1A Adaptateur de l'unité u us pervo-Vieth felocommunications Ltd. Modèle : VT0SEUS03100 Adaptateur de l'unité du bébé : Sortie : SV DC 1000mA VTech Telecommunications Ltd. Modèle : VT0SEUS03100

meuble.
Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la pri

milliorges discritiques. In milliorges discritiques, in milliorges discritiques, in milliorges descritiques, in milliorges descritiques de la milliorge descritiques de la milliorge de la mil

des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risqu d'électrocution. Ne renversez jamais de liquide dans cé

produit.

18. Afin de réduire les risques d'électrocution, ne démontez 18. Mind nei reduire les ringuese d'allectrocution, ne démonntee par cet appearel, muit apponche les drais un ortere des avrevirs par cet appearel, a l'acception de l'a

téléphones sans fils etc.). Pour l'éviter, s'assurer que le produit n'a jamais été ufilisé avant l'achat, réinfailsier l'unité de façon périodique, étéindre l'écoute-bébé quand il n'est bas en cour d'utilisation. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil. 22. Les enfants deuranter des georgies ells de voca assurer de la contraction de la

A. A portissement - Riscaue de strangulation
 Les enfants se sont ETRANGLES dans des condons. Cardez ce condon hors de portée des enfants (à plus de 0,9 m). N'enlevez pas corte élequethe.

Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel une serviette ou une uipements électroniques per

sans te. Stimulateurs cardiaques implantés dans l'organisme Les simulateurs cardiaques (ne s'applique qu'aux dispositifs

Los animareas sa antiliados (ne apprinçar ya lab disposina numériques sans fil) :
L'organisme "Wireless Technology Research, LLC (WTRY, une firmé de recherche indépendante, a moné une évaluation pluridisciplinaire des interférences entre les téléphones sans fil nortatifs et les ctimulatieurs cardisques involuntés clans. l'organisme. Appuyée par l'Administration des all drogues (FDA) des États-Unis, la firme WTR recon

edecins: vis aux détenteurs de stimulateurs cardiaques Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.

pouces du simulateur cardisque.

Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardisique, tel que dans une poche de l'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les défenteurs de simulateurs cardiaques causés par gens qui l'illisent dispositifs sans fil à proximité de ceur-cul.

LIMITED WARRANTY

What does this limited warranty cover?

The manufacturer of this Vifech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you" that the Product and all accessories provided in the sales and warrantship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This accordance with the Product operating instructions. This How do you get warranty service!

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1800/1959-911. In Canada, go to www.vtechanads.com or call 1800/1927-937.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you as service all.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

uring the limited warranty period, VTech's authorized

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (I) YEAR from the date of purchase. If VIEA repairs or explaces a Maintainly Deleticher Product under the terms of explaces or replaces or the product of the product of repaired or replacement Product for a period of either (a) 90 days from the date the repeated or replacement Product is thipped to you or (b) the time remaining on the original one-year warranty whichever is longer.

What is not covered by this limited warranty? This limited warranty does not cover:

- Product that has been subjected to misuse, accident shipping or other physical damage, improper install abnormal operation or handling, neglect, inundation fire, water or other liquid intrusion, or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- service representative of VTech; or
 3. Product to the center that the problem experienced is
 caused by signal conditions, network reliability, or cable or
 caused by signal conditions, network reliability, or cable or
 4. Product not have never that the problem is caused by use
 with non-VTech accessories; or
 5. Product whose warranity/quality stickers, product serial
 number plates or electronic sential numbers have been
 removed, altered or rendered religibility or
 removed. Service or rendered religibility or
- Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- 7. Product returned without a valid proof of purchase (see

save you a service call.

Energel as provised by applicable law, you assume the risk of lost or demange during thrust law of transportation and service provised to the control of the responsibility of being from the law of the responsibility of the law of the responsibility of the resp

What must you return with the Product to get warranty

Return the entire original package and contents includ the Product to the VTech service location along with a description of the malfunction or difficulty; and

 Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written coral communications related to this Product. The warranty exclusing describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty a

or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability for unwritten for a particular purpose and merchantability for unwritten for a particular purpose and merchantability for unwritten for a foreign for the date of purchase. Some states!

provinces do not allow limitations on how long an implied warranty fast, so the above limitation may not apply to you in not event shall Vieth be labble for any indirect, special, but not limited to lost profits or revenue, inibility to use the Product or offiner associated equipment, the cost of substitute equipment, and claims by the partiest justified. substitute equipment, and claims by third parties) resultrom the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or

Please retain your original sales receipt as proof of purchase.



flashes

NOTE

In Single CAM or

of baby units @1

and 22