

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest Vtech product news.

VM819
VM819-2

Video Baby Monitor



For more support information




vtech®
Quick start guide

| Model | Frequency | Power | Dimensions | Weight | Range | Resolution | Screen | Camera | Microphone | Speaker | Power | Control | Features |
|---------|--------------|-------|-----------------------|--------|-------|------------|--------|--------|------------|---------|-------|---------|---|
| VM819 | 2.4 GHz FHSS | 3.0W | 100mm x 100mm x 100mm | 150g | 1000m | 720p | 3.5" | 2MP | 2 | 2 | 3.0V | 1.5" | Night vision, Lullaby, Talk back, Zoom, Infrared LEDs, Light sensor, ON/OFF switch, Speaker, Power jack, Slots for wall mounting. |
| VM819-2 | 2.4 GHz FHSS | 3.0W | 100mm x 100mm x 100mm | 150g | 1000m | 720p | 3.5" | 2MP | 2 | 2 | 3.0V | 1.5" | Night vision, Lullaby, Talk back, Zoom, Infrared LEDs, Light sensor, ON/OFF switch, Speaker, Power jack, Slots for wall mounting. |

IMPORTANT SAFETY INSTRUCTIONS

- Read the manual carefully. Do not use the product if you are unsure of any of the instructions. Do not use the product if you are unsure of any of the instructions.
- Follow all warnings and instructions marked on the product.
- CAUTION:** Do not install the baby unit at a height above 2 meters.
- The product is not a substitute for adult supervision of the infant. Exposing the infant to the parent or caregiver's mobile phone should always be followed to reduce the risk of fire, electric shock, damage or transportation. Do not use the product to transport the infant.
- Do not use this product near water. For swimming, do not use near a bathtub, wash basin, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- CAUTION:** Use only the battery provided. There may be a risk of fire if the battery is not used properly. Do not use the battery in a device that is not designed for it. Do not use the battery in a device that is not designed for it. Do not use the battery in a device that is not designed for it.
- The BRCB test:** Use only the battery provided. Do not use the battery in a device that is not designed for it. Do not use the battery in a device that is not designed for it.

WHAT'S IN THE BOX

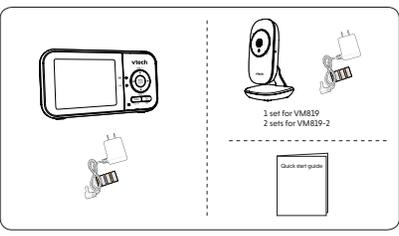

1 CONNECT THE BABY MONITOR (CONT'D)

Charge the parent unit battery
When you have connected and turned on the parent unit, the battery will be charged automatically.

NOTES

- Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

The battery icon indicates the battery status (see the following table).

| Battery icon | Meaning | Action |
|----------------------------|---|--|
| [Battery icon with 4 bars] | The screen displays [Battery icon with 4 bars]. | Charge without interruption (about 30 minutes). |
| [Battery icon with 3 bars] | The battery has very little charge and may be used for only a short time. | To keep the battery charged, connect it to AC power when not in use. |

3 POSITIONING THE BABY MONITOR

CAUTION

- Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.

NOTE

- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones and computers.

The baby unit's **POWER LED** light turns on.

1 CONNECT THE BABY MONITOR

NOTES

- The rechargeable battery in the parent unit is built-in.
- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to a switch-controlled electric outlet.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby units and the power adapter cords are out of reach of children.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (implies only to digital content).

Wireless Technology Research, LLC (WTR), an independent research entity, led a multi-disciplinary evaluation of the interference between portable wireless devices and cardiac pacemakers. The study was conducted in the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Other electronic products may cause interference with the baby monitor. If you are using your baby monitor as far away from these electronic devices as possible, including televisions, radios, cellular telephones, internet routers, mobile phones, satellite phones, computers, wireless headphones and other wireless devices.

2 POWER ON OR OFF THE BABY MONITOR

Slide the **ON/OFF** switch to power on or off your baby unit.

Press and hold **POWER** to power on or off your parent unit.

Power off **Power on**

4 STATUS CHECK

Once you power on both your baby unit and parent unit, your parent unit displays image from the baby unit, and the **LINK** LED light turns on.

BASIC OPERATION - PARENT UNIT

Use the menu

Press **MENU** to enter the menu, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit's lullaby, or to adjust the baby unit's sound sensitivity.

While in the menu:

- Press **Left** or **Right** to scroll among the menu options.
- Press **Up** or **Down** to select an item.
- Press **SELECT** to confirm your selection.
- Press **TALK/EXIT** to exit the menu and return to live view.

Talk to your baby unit

Press and hold **TALK** or speak to your parent unit. Your voice is transmitted to the baby unit. Release **TALK** when done talking and hear your baby again.

Turn off the screen

Press **POWER/LCD OFF** to switch off the screen. You can still hear sound from the selected baby unit.

Tip

- Press any keys on the parent unit to turn on the screen again.

OVERVIEW - BABY UNIT

Adjust parent unit speaker volume

- Press **VOL+ / VOL-** to adjust your parent unit speaker volume.

Zoom

- Press **MENU** when in idle mode.
- Choose **Zoom**.
- Press **Left** or **Right** to choose **2X** (Zoom in) or **0.5X** (Zoom out), then press **SELECT** to confirm your selection.

PAIR hole

POWER LED light

Microphone

Camera

Infrared LEDs

Light sensor

ON/OFF switch

Speaker

Power jack

Slots for wall mounting

PARENT UNIT ICONS

Status icons

Yield **Yield** displays when strong signal strength is detected between the baby unit and the parent unit.

Yield or **Yield** displays when moderate or low signal strength is detected between the baby unit and the parent unit.

Patrol mode

- Displays when the parent unit is in **PATROL** mode (For VM819-2 only).

Current view status

- Displays the baby unit number of the baby unit that is being viewed.

Zoom

- Displays when the current image on the parent unit has zoomed in.

Night vision

- Displays when the baby unit being viewed has activated the night vision feature.

Talk back

- Displays when talking back to the baby units from parent unit.

Lullaby

- Displays when a lullaby is playing.

Mute alert

- Displays when the parent unit speaker volume is set to zero.
- Displays when the parent unit is talking to the baby unit.

Real-time temperature

- Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. 97°F or 34°C).

Battery status

- Displays the battery level when the battery is charging.
- Displays solid when the battery is fully charged.
- Displays when the battery is low and needs charging.

Main menu icons

Zoom

- Zoom in and out of the video displayed from the baby unit.

Settings

- Screen off timer
- Brightness
- Temperature

Sound Detection

VOK (Voice Activated Alert)

- You can choose to hear sounds from the baby unit all the time, or to only hear sounds that exceed a certain level. Adjust the microphone sensitivity of your baby unit, the higher the sensitivity level, the more sensitive the baby unit is in detecting sounds to be transmitted to the parent unit. See **Sound sensitivity and sound activation** section.

Sound-activated screen

- When it is on, and the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen and speaker turns on automatically, and you can see and hear your baby. The parent unit will then turn off again after 50 seconds of no sound detection.

Note

- When the parent unit screen is off and it receives alerts, for example, link lost between parent unit and baby unit, or battery is low, the parent unit screen and speaker will turn on for 30 seconds.

NEED HELP?

For operations and guides to help you using your video monitor, and for latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

- Go to <https://help.vtechphones.com/vm819> or <https://help.vtechphones.com/vm819-2>
- OR
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 (in US) or 1 (800) 267-7377 (in Canada) for help.



