Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech

vtech

**→** 

Quick start guide



VM3258 VM3258-2

2.8" Video Monitor with Night Light

Follow all warnings and instructions marked on the

CAUTION: Do not install the baby unit at a height above 2 melors. a substant for a substant for activity supervision of the intant. Supervising the intent is the parent's or caregiver's resoposibility. This product could cases operating, and properly for any given period of firm a familier like in ord a melicial device and should not be used as such. This product is intended to acets you in supervising your baby. Do not use this product intent waster, for example, do loandity thus or work or the country of the loandity thus or work many products of the substantial to the country of the product is intended to acets you in supervising your baby. Do not use this product nate waster, for example, do loandity thus or evineming pool, or in a wet basement or shower.

or shower.

CAUTIONE. Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent util. The battery crimer to explosion for a wrong type of battery is used for the parent util. The battery crimer to explose the final or to high or low parent utility and the parent utility of the parent utility of the parent utility or the parent utility or the parent utility of the parent utility of

damage the product.

A Power adapter information Parent unit output: SV DC 1A

⚠ I Red Livin LIV Rechargeable battery information: Zhu Livin battery, 3.6V, 2600mAh, 9.36Wh; Model: ICR18650-2.6Ah-3.6V-1SIP The power adapters are intended to be correctly priented in a vertical or floor mount position. The

prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily

CONSIDER.

Unplug this product from the wall outlet before cleaning Do not use liquid or aerosol cleaners. Use a damp cloth

o not cut off the power adapters to replace them with her plugs, as this causes a hazardous situation. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimbed.

on or crimped.

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.

Do not overload wall outflist or use an extension cord.

Do not place this product on an unstable table, shelf, stand or other unstable surface.

Adjust parent unit speaker volume

Press ▲ VOL+ / ▼ VOL- to adjust your

IMPORTANT SAFFTY INSTRUCTIONS

of any kind on the product.

To reduce the tisk of electric shock, do not suthorized service facility. Opening or removing parts of the product other than specified access doors may incorporate the state of the product other than specified access doors may incorporate the state of the state

 Periodically examine all components for carriage.
 There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordiess telephones, etc. To protect your privacy, make sure the product has never been used befor purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for

come time.

Children shell be supensised to ensure that they do
children shell be supensised to ensure that they do
children shell be supensised to ensure that they do
children shell the product.

The product is not intended for use by persons
(including children) with reduced physical, sensory
or mental capabilities, or lack of experience and
knowledge, unless they have been given supervision or
instruction concerning use of the appliance by a person
restruction concerning use of the appliance by a person

le for their safety.

SAVE THESE INSTRUCTIONS

Use and store the product at a temperature between 32°F and 104°F Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a

as to legisl sunshine or frie.

Warning-Smaglation Hazard
Distates have TREANGE ID in code;
Children have TREANGE ID in code;
Children in have TREANGE ID in code;
Children in more last a 1 (10 Ami) away. Do
Nover place the baby until to inside the baby's cit to
Nover place the baby until to inside the baby's cit to
Nover place the baby until to inside the baby's cit to
influence the code of the baby's cit to
the electronic products may cause interference
with anything such as fowed or a babyer of the
more code of the way from these absorbed or earliers
in a fowed to the code of the code

achnology Research, LLC (WTR), an independentity, led a multidisciplinary evaluation of the nted cardiac pacemakers. Supported by the U.S. Food lrug Administration, WTR recommends to physicians

aker patients

All loons wireless devices at least six inches from the Should NOT place wireless devices directly over the naremaker, such as in a breast pocket, when it is turned

ON. When I is sufficient to the control of the cont

Press MENU when in idle mode.

confirm your selection.

# O T O U A E

Press ▲ or ▼ to choose 2X (Zoom in) or

(Zoom out), then press SELECT to

Choose 🗩.

## WHAT'S IN THE BOX



## CONNECT THE BABY MONITOR (CONT'D)


Charge the parent unit battery When you have connected and turned on the parent unit, the battery will be charged automatically. PNOTES

Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid (IIII).

It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging. The standby time varies depending on the sensitivity level you set, your actual use and the age of

	The battery icon indicates the battery status (see the following table).					
	The screen displays	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).			
	The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.			

## POWER ON OR OFF THE BABY MONITOR

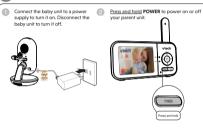

## POSITIONING THE BABY MONITOR



() CAUTION

The default volume of your parent is level 3, and the maximum volum level 5. If you experience high-pit screeching noise from your baby monitor while positioning:

Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart, OR Turn down the volume of your parent unit **₽**Note To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireles microwaves, cell phones and computers.



your baby unit and paren unit, your parent unit displays image from the baby unit, and the LINK LED light turns on.

The baby unit's POWER LED light turns on



# Basic operation - Parent unit

## Use the menu

## Press MENU to enter the menu, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit's lullaby, or to adjust the baby

Parent unit: 3.6V, 2600mBh Li-ion, 9.36Wh Li-ion battery
Baby unit power adapter: Output: 5V DC @ 600mA
AL @ DG VE :: Unitud :: 5V DC with the parent unit power adapter: Output: 5V DC with the parent unit power adapter: Output: 5V DC with the parent unit power adapter: Output: 5V DC with the parent unit power adapter: Output: 5V DC with the parent unit power adapter in the parent unit power adapter.

Barent unit: 2405 - 2475 MHz

TECHNICAL SPECIFICATIONS

Crystal controlled PLL synthesizer

Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the lime of use.

### While in the menu: Press 4 or > to scroll among

- Press A or ▼ to select an item Press SELECT to confirm your
- Press TALK/EXIT to exit the
- menu and return to live view.



parent unit. Your voice is transmitted to

the baby unit. Release TALK when done


talking and hear your baby again



screen. You can still hear sound from the selected baby unit.




### Turn off the screen




rensmit frequency

Frequency control

Press POWER/LCD OFF to switch off the





# 🔲 Overview - Parent unit

## Battery LED light 3-level sound indicator light A VOL+ / ▼ VOL-

- MENU/SELECT
- IINK LED light
   On when the parent unit is linked to the baby unit.
   Flashes when the link to the baby unit is lost.
- TALK/EXIT
- Press and hold to talk to the baby unit.

  While in a submenu, press to exit.

Power jack

RESET

# Overview - Baby unit

CONNECT THE BABY MONITOR


Make sure the baby monitor is not connected to a switch-controlled electric outlet

Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of a baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.

Make sure the parent unit, the baby units and the power adapter cords are out of reach of children

The rechargeable battery in the parent unit is built-in Use only the power adapters supplied with this product

**₽**MOTES



Light Sensor

Camera lens Infrared LEDs Night light

POWER LED light

Power jack

PAIR hole

The parent unit and baby unit(s) provide are already paired.

## NEED HELP?

For operations and guides to help you using your video monitor, and for latest information and supports, go and check the online help topics and online FAGs.

Use your smartphone or mobile device to access our online

Go to https://help.vtechphones.com/VM3258 or https://help.vtechphones.com/VM3258-2; OR

Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help. If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 fin Canadal for help.



10 - O-Night light ON/OFF

Slots for wall mounting

# ■ PARENT UNIT ICONS Status icons

## Connection status

Yill or Yil displays when strong signal strength is detected between the

Till or Til displays when moderate or low signal strength is detected between the baby unit and the parent unit. Patrol mode

### . Displays when the parent unit is in PATROL mode (For VM3258-2 only)

or Current view status Displays the baby unit number of the baby unit that is being viewed.

# Ð

· Displays when the current image on the parent unit has zoomed in.

# Night vision

Displays when the baby unit being viewed has activated the night vision

# Talkback

Displays when talking back to the baby units from parent unit.

### 13 Displays when a fullaby is playing.

Night light Displays when the baby unit's night light is turned on.

Displays when the parent unit speaker volume is set to zero. Displays when the parent unit is talking to the baby unit.

## Real-time temperature °C

Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. 57°F or 14°C).

displays when the battery is low and needs charging.

### Main menu icons

Volume

# OFF 5 30 60 min min

Screen off timer The parent unit display will dim to conserve energy after your chosen amount of time of inactivity. Brightness

Adjust the parent unit's LCD



Zoom in and out of the video displayed from the baby unit

OFF ON Turn on/off temperature alert

 Set the parent unit to beep whenever the room temperature detected by the baby unit falls outside of the set temperature



· Set the minimum/maximum emperature.



# Main Sub-menu menu

**₩** WX

# Sound Detection

Intion

VOX (Voice Activated Alert)

Southinty

- You can choose to hear

sounds from the baby unit
all the time, or to only hear

sounds find exceed a certain

sensitivity of your baby unit,
the higher the sensitivity
level, the more sensitivity
sounds to be transmitted
to the parent unit. See

Sound sensitivity and sound

activation section.

## OFF ON Sound-activated screen

Sound-activated screen

When it is on, and the baby
unit detects no sound, the
parent unit screen stays off
to save power. Once a sound
is detected, the parent unit
screen and speaker turns on
automatically, and you can
see and hear your baby. The
parent unit will then turn off
again after 50 seconds of no
sound detection.


## Note When the parent unit screen

is off and it receives alerts, for example, link lost between parent unit and baby unit, or battery is low, the parent unit screen and speaker will







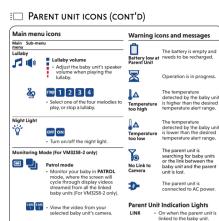

# Sound sensitivity and sound activation

### Adjust the sound sensitivity of the haby unit

You can choose to hear sounds from the baby unit all the time. or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the haby unit is in detecting sounds that transmit to the parent unit

Highest	High	Medium	Low	Lowest •
The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your babby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

### Sound activated screen

When sound activation is on, the parent unit screen stays off to save power when the baby unit detects no sound. Once the baby unit detects sounds that are louder than the chosen sound ensitivity level, the parent unit screen turns on automatically. It will then turn off again after 50



## DIM MODE

The dim mode helps you save parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the haby unit



### DNOTE

NIGHT VISION

4 O i 0 7 7 0

When the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will resume to dim mode.



The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and appears on the screen.

### Notes It is normal to see a short white glare on

- It is normal to see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment. When the infrared LEDs are on, the images are in black and white. This is normal.

The Depending on the surroundings and other interfering factors, like lighting, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher elevation to prevent glare and a black distribution.



### Status check - Two baby units

If you are viewing baby unit @ 1, the POWER LED light of baby unit @ 1 turns or As baby unit 2 2 is not being viewed, its POWER LED light flashes



MNOTE If you power on only one baby unit your parent unit may display to and the LINK LED light will flash

### Change different views - Patrol

- 1 Press MENII when the parent unit is idle
- Press ◀ or ▶ to choose □.
- Press ▼ or ▲ to choose then press SELECT to confirm your selection.




### Change different views - Single-cam

- 1 Press MENII when the parent unit is idle
- 2. Press ◀ or ▶ to choose 💷
- 3. Press ▼ or ▲ to choose between 👣 and 🛐 then press SELECT to confirm the baby unit you would like to view








## MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

■Note

0

MOTE

0

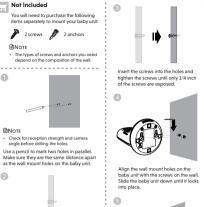



## $^{\mathrm{Q}_{_{\! b_{\!\scriptscriptstyle \Delta}}}}$ Frequently asked questions

Relow are the questions most frequently asked about the baby monitor Try the following (in the order listed) for common cure:

1. Disconnect the power to the baby units and the parent unit.

Why is the baby monit Why doesn't the

2. Wait for the parent unit to synchronize with the baby units. Allow up to one minute

4. Wait for the parent unit to synchronize with the baby units. Allow up to one minute. Perhaps the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then, press and hold POWER to

2 Wait a few seconds before connecting power back to the baby units and the parent unit

me parent unit and put me dispirer in a wail socket. Inen, <u>peets and noing Puth</u>, switch on the parent unit and to establish connection with the bably unit. Perhaps the bably unit is not connected to the power, insert the appliance plug the bably unit and put the adapter in a wall socket. The baby unit will switch on a establish a connection with the parent unit. Why doesn't my parent Make sure the power is not controlled by a wall switch. You may have used the battery for a long time. See Warranty for repair/replacement nected to AC power?

> During night-lime or in a dark room, the surroundings and other interfering factors, like lighting, objects, colors and backgrounds may affect the image quality on your parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher elevation to prevent glare and a blurry display.

The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet)

The temperature of your baby's room may be too high or too low.

The baby unit also picks up other sounds than those of your baby. Adjust the VOX sensitivity level to a lower level or decrease the parent unit speaker volume. The parent unit speaker volume may be too low. See Adjust parent unit speaker Why can't I hear sounds/

You may have set a low VOX sensitivity level. See **Adjust the sound sensitivity of the baby unit** to set to a higher level.

The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).

Other electronic products and wireless products may cause interference with your baby monitor. Try installing your baby monitor as far away from these devices as If you power on only one baby unit, your parent unit may display  $\sqrt[6]{8}$ , and the LINK LED light will flash.

## THE RBRC SEAL

Flashes when the link to the

baby unit being viewed is

connected to AC power, or

On when the parent unit is

the battery is charging.

unit battery is low and needs charging.

Off when the parent unit is disconnected from AC

Flashes when the na

The RRRC Seal and 1 (800) 8 RATTERY® are registered trademarks of California Inc.

## FCC AND IC REGULATIONS

### ECC Part 15

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radior/IV technical for help.
 WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to expert the equipment.

## Industry Canada

erm "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were

product meets the applicable Innovation, Science and Economic Development Canada technical specifications RF radiation exposure statement

## CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

This baby monitor meet the California Energy Commission (ECC) regulations for energy contumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the loss. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

## FOR CETL COMPLIANCE ONLY

Mesures de sécurité importantes La plaque signalétique appliquée est située au bas du socie de l'unité du bébé.

- ceux qui suivent : Observez toutes les instructions et mises en garde inscrites rur l'avescrall
- sur rappareii. L'installation par un adulte est requise. MISE FN GARDE: N'installez rass l'unité du héhé à une.
- hauteur supérieure à 2 mètres.

  Ce produit ne remplace par la surveillance aduite du nourisson est la responsabilité du perent ou de la personne qui Soccupe de l'enfent. Ce de la personne qui Soccupe de l'enfent. Ce vous ne devriez pas présumer qu'il continuer de forticionne correctement pendat rune période de trense donnée. De partie de la la continuer de l'enfent. Ce de l'enfent de l'e
- MISE EN GARDE: Utilise uniquement les piles fournies. Il oxiste un risque d'explosion d'un autre type de batterje coriste un risque d'explosion d'un autre type de batterje chi requirement regolares, afest les piles sudes s'aboli est ci requirement regolares, afest les piles sudes s'aboli en renseignements suivant le sceau du RBRC. N'utiliser que les d'abspletaurs intales avec co produit. N'utiliser que les d'abspletaurs intales avec co produit n'utiliser que les d'abspletaurs intales avec co produit n'utiliser que les voir securités en prés.

Adaptateur de l'unité du parent : Sorlie : SV DC 1A
VTech Telecommunications Ltd.
Modèle : VT0SEUS03100 Modele : VT05EUS0S100
Adaptateur de l'unité du bébé : Sortie : SV DC 600mA
VTech Telecommunications Ltd.
Modèle : VT05EUS0S060

- Models VTDSEUSOSOOD

  Tunhail Genat Power Energy Co., 15t.
  LU-Inchasting 304, 2000 (nd.) 304/n;
  Model: (CR38507-2.6Ah-3.6V-3.5T)
  Model: (CR38507-2.6Ah-3.6V-3.5T
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être instalée près du produit, afin d'assurer une accessibilité sécuritaire à la prise
- de courant.

  Débranchez ce produit de la prise de courant avant de procéder au netroyage. Nutiliser pas de netroyant se nécrosit. Utiliser pas de netroyant se nécrosit. Utiliser pas de netroyant sen aérosits utiliser un chiffrin humide pour le netroyar. Ne couper pas les cordons d'alimentation pour remplace fir fiches, car coci peut présenter un danger protentiel. Ne laisez aucun objet reposer ni appuyer sur le cordon d'alimentation. Nicitatiez pas cet a japariel distau un endroit d'alimentation. Nicitatiez pas cet a japariel distau un endroit
- plétiner. Ne faltes fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquerte. Si vous ne connaisse pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie pas le type d'alimentation que vous possédez à votre domicilie, consultez votre marchand ou votre compagi locale d'électricité. Ne surchargez pas les prises de courant murales ni les rellanges d'actriques.
- and darbitistiple, pure and the properties of th

- des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risqu d'électrocution. Ne renversez lamais de liquide dans ce
- . réduire les risques d'électrocution, ne démontez appareil, mais apportez-le dans un centre de sen pas cer appareir, mais apponers-re dans un centre de servir autorisé. L'ouverture du boîtier ou le retrait de toutes pièce que confient cet appareir, à l'exception de l'accès autorisé à certaines portes du ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter dès risque-
- d'électroculien. Vous devriez tester la réception chaque fois que vous mettre l'appareill en fonction. Examinez les composantes afin de vérifies si celles-ci ne sont pas endommagées. Il existe un très faible risque de perte de confidentialité avec certains appareils électroniques (suntres écoute-béb héléphones sens fils etc.). Pour l'éviter, s'assurer que le
- produit n'a jamais été utilisé avant l'achat, réinitialises de façon périodique, éteindre l'écoute-bébé quanc pas en cours d'utilisation
- pas en colars d'utilisation. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil. Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensoriolises ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personn sable de leur sécurité.

- Mises en garde

  1. Utilisez et entreposez le produit à une température entre
  0. C (32° F) et 40° C (304° F).
  2. Monages par est appareil à des froids ou des chalours. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage.
- Le bioc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
- telle que la lumière di solici lou Se 16u.

  Aventinennen "Resua de transquation"
   Les enfants es sont ETRANGES dancées
  condens Candes co corden hera de porties
  des enfants it plus de 0,0 m). N'enfants it plus de 0,0 m). N'enfants it
  plus de 0,0 m). N'enfants it
  bercaus où de part de bébé. Ne jamais couvrir le montieu
  bercaus où de part de bébé. Ne jamais couvrir le montieu
  me couvertime.

considers personnel, well-reminingers in insepticine sarts fit.

Service of the s prundisciprinaire des interterences entre les telephones sans Il portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et frobues (FDA) des Fats-Unis, la firme WTR recommande au

- medecins: Avis aux détenteurs de stimulateurs cardiaques Vous devriez maintenir les dispositifs sans fil à au moins six vous devinez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque. Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-c' est en marche. L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés pa les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

### LIMITED WARRANTY

## What does this limited warranty cover?

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized servici representative will replace at VTech's option, without charge, a Materially Defective Product. If we choose to replace a Materially Defective Product. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Replacement of the Product, at Vifech's option, is your exclusive remedy. Vifech will return the replacement Product to you in working condition. You should expect the replacement to take approximately 30 days.

### How long is the limited warranty period?

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase (P0 days on products purchase) and the purchase (P0 days on products purchased as Reinschherder). This timed warranty also (6) 90 days from the date the replacement Product is shipped to you cot (b) the time remaining on the original one-year warranty (90-day limited warranty on products that are purchased as Reinschherder); whicheven's longer.

\*Refurbished products purchased from our online store carry a 90-day replacement warranty.

## What is not covered by this limited warranty? This limited warranty does not cover:

- Inst immed warrany does not cover:

  1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation abnormal operation or handling, neglect, hundstion, fire, water or other liquid intrusion; or

  2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of Viect; or
- Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- antenna systems; or A Product to the extent that the problem is caused by use with non-VTech accessories; or 5. Product whose warrantly (quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- removed, arrered or rendered inlegible; or 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- Product returned without a valid proof of purchase (see item 2 below); or Charges for installation or set up, adjustment of custome controls, and installation or repair of systems outside the

### How do you get warranty service?

To obtain warranty service? To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 675-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-397.

save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Productify to the service location. Vifich will return replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. Vifich assumes no raik for dramage or loss of the Product in

- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

Other limitations
This warranty is the complete and exclusive agreement between you and Viech. It superrades all other written or cal communications related to their Pock. Viech provides on other warranties for the Product. The warranty exclusively Product. There are on other warranties and exclusively Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State (Provincia, Law Rights: This warranty gives you specific legal rights, and you may glot have don't only the other products.

or province to province.

Limitation: Implied warminets, including those of fitness for a particular purpose and invendentiability for unwritten for a particular purpose and invendentiability for unwritten for a particular purpose and invendentiability for unwritten for the province and particular purpose and particular purpose and particular provinces do not allow limitation on how long as implied an object of the province and particular provinces and particular par

Please retain your original sales receipt as proof of purchase.

## DISCLAIMER AND LIMITATION OF LIABILITY

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third pariers that may arise through the use of this product.