

Go to www.vtechcanada.com for latest VTech product news.

vtech

Quick Start Guide (Canada version)

TECHNICAL SPECIFICATIONS

Frequency	2402 - 2480 MHz
Channels	79
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Soothing power adapter: Input: 100-240V-50/60Hz 0.5A; Output: 5V DC 1.5A Non-replaceable built-in Battery: 3.6V, 2600mAh Li-Ion, 9.5Wh Li-Ion battery

WHAT'S IN THE BOX



BC8213 Baby Sleep Soother



IMPORTANT SAFETY INSTRUCTIONS


- The applied nameplate is located at the bottom of the soother's base.
- When using your equipment, basic safety precautions should always be followed to reduce the risk of electric shock and injury, including the following:
 - Follow all warnings and instructions marked on the product.
 - The product plug is required.
 - Adult supervision is required for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. The product should cease operation, and therefore you should not assume it will continue working properly for any given period of time. Further, this is a medical device and should not be used as such.
 - Do not use this product near water. For example, do not use it near a bath tub, wash bowl, kitchen sink, laundry tub, or swimming pool, or in a wet location of shower.
 - Do not use the battery provided. There may be a risk of explosion if a wrong type of battery is used for the soother. The battery cannot be subjected to high or low altitude, temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery may fire or an explosion, or mechanically crushing or cutting the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. Battery subjected to extremely low all possible may result in an explosion or the leakage of flammable liquid or gas. Disposal of used battery according to the information in **The BATTERY** section of the user manual.
- Use only the adapters included with the product. Incorrect adapter polarity or voltage can seriously damage the product.
- Do not use the power adapters to replace than with other plugs, as this causes a hazardous condition. Do not use anything to rest on the power cords. Do not rest the product where the cords may be walked on or tripped.
- This product should be operated only from the type of power source indicated on the marking label. If not one side of the type of power supply is your home, consult your dealer or local power company.
- Do not overload wall outlets or use an extension cord.
- Do not place the product on an unstable table, shelf, stand or other unstable surface.
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of the product are provided for ventilation. To prevent them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heater.
- Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never pull out of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to

- an authorized service facility. Opening or removing parts of the product other than specified Access doors may expose you to dangerous voltage or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
 - Periodically examine all components for damage. There is a very low risk of fire when using certain electronic devices, such as soothers, baby monitors, etc. To protect your privacy, make sure the product has never been used before purchase, reset the soother periodically by power off and then powering on the unit, and power off the soother if you will not use it for 30 days.
 - Do not play with the product.
 - The product is not intended for use by persons including children with reduced physical, sensory and knowledge unless they have been given supervision of instruction concerning use of the appliance or a person responsible for their safety.
- SAFETY INSTRUCTIONS**
- Use and store the product at a temperature between 0°C (32°F) and 40°C (104°F).
 - Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to heating source.
 - Warning-Strangulation Hazard—Children have strangled in cords. Keep this cord out of the reach of children (more than 15 ft away). Do not remove the tag.
 - Never place the soother inside the baby's crib or playpen. Always cover the soother with anything soft such as a towel or blanket.
 - Other electronic products may cause interference with this soother. Try resetting your soother at 1ft away from these electronic devices as possible: wireless routers, mobile cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances, and cordless telephones.
 - Do not allow your child or anyone to look directly into the projector lens while it is turned on to avoid possible eye damage.
- Precautions for users of implanted cardiac pacemakers**
- Caution: Pacemakers applies only to digital cordless devices.
- Winnipeg Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers, supported by the U.S. Food and Drug Administration. WTR recommends to physicians that:
- Particular patients**
- Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket.
 - Should NOT turn on a breast pump.
 - Should NOT turn on a fan.
- WTR's evaluation did not identify any risks to bystanders with pacemakers from other persons using wireless devices.
- Electromagnetic fields (EMF)**
- This VTech product complies with all standards regarding electromagnetic fields (EMF). If wireless products and accessories in the proximity of the product are used according to the instructions in the user's manual, the product is safe to be used based on scientific evidence available today.

1 CONNECT AND CHARGE THE SOOTHER

- NOTES**
- The rechargeable battery in the soother is built-in.
 - Only use the power adapter supplied with this product.
 - If the soother is connected to a switch controlled electric outlet, make sure the switch is on.
 - Connect the power adapter in a vertical or floor mount position only. The adapter prongs are not designed to hold the weight of the soother, so do not connect it to any ceiling, under-table, or cabinet outlets. Otherwise, the adapter may not properly connect to the outlet.
 - Make sure the soother and the power adapter cord are out of reach of children.

Connect the power adapter to the soother and a power supply, then the soother powers on automatically.

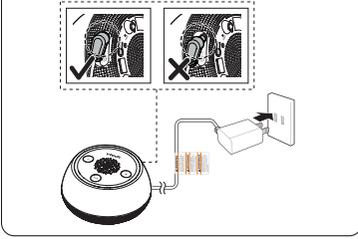


2 POWER ON THE SOOTHER



3 BEFORE USE

- Positioning the soother**
- Place the soother more than 3 feet (1 metre) away from your baby.
 - Keep the soother out of the reach of your baby. Never place the soother inside the baby's crib or playpen.
- NOTE**
- To avoid interference from other electronic devices, place your soother at least 3 feet (1 metre) away from devices such as wireless routers, microwaves, cell phones and computers.



4 DOWNLOAD THE APP

Download MyVTech Soother App for more premium features

- Download **MyVTech Soother App** to your mobile device from Apple Store or Google Play store to gain full access of features and conveniently control your soother. Put advanced functions to action, like customizing a routine, with just a few taps of the finger.
- With **MyVTech Soother App**, you can pamper your baby.
- TIP**
- Make sure your mobile device meets the minimum requirement for the mobile app.
- NOTE**
- The mobile app is compatible with:
- Android™ 6.0 or later; and
 - iOS 12 or later.

- Step 1**
- Install MyVTech Soother App**
- Browse the App Store or the Google Play store.
 - Search for the mobile app with the keyword "MyVTech Soother".
 - Download and install the **MyVTech Soother App** to your mobile device.
- OR-**
- Scan the QR code below to install the app.



Step 2

Connect both devices via Bluetooth


- Follow the instructions in the mobile app to set up and pair your soother.
- Tap the app icon to run the mobile app in your mobile device, and set your mobile device to Bluetooth discoverable mode.
 - Sooother will start searching nearby device automatically after being powered on.
 - Select **V-Hush Mini** under the list of available devices and wait for a while for the pairing process.

- NOTES**
- Make sure your soother is powered on before pairing.
 - Place your mobile phone near the soother for better connection.

APP FEATURES



4 OVERVIEW

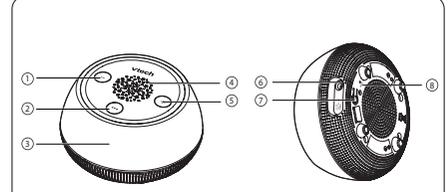


- VOLUME**
 - Press to lower the soother speaker volume.
- Magic key**
- Night light**
- Slow-on-the-ceiling night light projector**
- VOLUME**
 - Press to increase the soother speaker volume.
- Power jack**
- On/Off switch / Bluetooth pairing key**
 - Press and hold to turn on or turn off the soother.
 - Press and hold for 5 seconds to enter the Bluetooth pairing mode.
- RESET key**

USE THE SOOTHER

★ Glow-on-the-ceiling night light projector

The projection light is located on the top of the soother. Use **MyVtech Soother App** to turn on and select a light color to soothe your little baby.

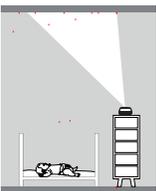

🎧 Audio streaming from your mobile device


The soother is able to function as a Bluetooth speaker after pairing with a mobile device via Bluetooth so you can play your own music from your mobile device through the soother.

Connect your device with the soother via Bluetooth audio

To use a Bluetooth enabled mobile device with your soother, you must first pair and connect your Bluetooth mobile device with the soother. Before you begin, make sure that your Bluetooth enabled mobile device is not connected to any other Bluetooth device.

On the soother

- Press and hold the Bluetooth pairing key for 5 seconds to enter Bluetooth pairing mode.



On your device

- Set your mobile device to discoverable mode before pairing.
- Place your mobile device next to the soother during the whole pairing process.
- Select "V-Hush Mini" under the device list.

NOTE

- After the soother enters Bluetooth pairing mode, the soother will keep facing in and out blue light until it is connected to a device.



●●● Magic Key

Several functions can be performed using **Magic key** located on the top of the soother.

Start or stop the soother

- When inactive, tap **Magic key** to start and resume the Soother to its previous settings.
- When active, tap **Magic key** to stop the soother.

Change your favorite mode

- Tap **Magic key** twice to go to the next favorite mode.

Adjust the night light brightness

With the night light, the soother can illuminate a soft hue to calm your baby in a dark room. You can control the brightness level of its glow directly on the soother and adjust the night light color remotely in **MyVtech Soother App**.

- Tap and hold **Magic key** to adjust the night light's brightness level.

CABLE MANAGEMENT



NEED HELP?

- For more guides to help you operate your soother, check out the latest **online help topics and FAQs** by going to <https://phones.vtechcanada.com/manuals>
- Alternatively, you can scan the QR code on the right.
- Search for the model - BC8213
- You can also call our Customer Support at 1 (800) 267-7377 (in Canada) for help.



FCC AND IC REGULATIONS

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The soother shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more.

This Class B digital apparatus complies with Canadian requirements.

CAN ICES 5 (B) NAB 3(B)

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSI. Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

RF radiation exposure statement
The soother complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The soother should be installed and operated with a minimum distance of 8 in (20 cm) between the soother and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The equipment complies also with Industry Canada RSS-302 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

LIMITED WARRANTY

What does this limited warranty cover?

The manufacturer of this Vtech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the same package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will Vtech do for the Product if it is free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, Vtech's authorized service representative will replace a Vtech's option, without charge, a Materially Defective Product. You choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Replacement of the Product, at Vtech's option, is your exclusive remedy. Vtech will return the replacement Products to you in working condition. You should expect the replacement to take approximately 30 days.

What is not covered by this limited warranty?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase (90 days on products purchased as Refurbished). This limited warranty also applies to the replacement Product for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year warranty (90-day limited warranty on products that are purchased as Refurbished), whichever is longer. *Refurbished products purchased from our online store carry a 90-day replacement warranty.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion, or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of Vtech; or
- Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- Product to the extent that the problem is caused by use with non-Vtech accessories; or
- Product whose warranty quality sticker, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- Product returned without a valid proof of purchase (see item 2 below); or
- Charges for installation or set-up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may solve a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. Vtech will return replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. Vtech assumes no risk for damage or loss of the Product in transit.

What must you return with the Product to get warranty service?

- Return the entire original package and contents including the Product to the Vtech service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and Vtech. It supersedes all other written or oral communications related to this Product. Vtech provides no other warranties for this Product. The warranty exclusively describes all of Vtech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial laws apply. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not have limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall Vtech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.



Specifications are subject to change without notice.
© 2023 Vtech Technologies Canada Ltd.
All rights reserved. 01/23_BCR213_CA_QSG_V1