




Visit http://support.yealink.com/ or scan the QR code to obtain the latest support information.

W59R DECT IP Phone

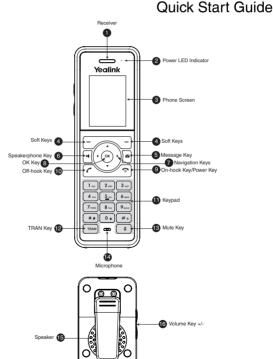

For W59R firmware: 115.83.254.20 or later

Package Contents









W59R Handset

Charging Cradle

Power Adapter

Battery Cover







Rechargeable Battery

Decorative Cover

Quick Start Guide




We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

Assembling W59R


1. Insert the battery into the handset.



2. (Optional) Mount the charging cradle to the wall.



3. Connect the charging cradle and charge the handset.





- Use Yealink-supplied power adapter (5V/600mA). A third-party power adapter may damage the handset.
- Check the charging status on the top-right corner of the LCD screen.

Technical Specifications

Item	Specification
Frequency band	1880-1900 MHz (Europe), 1920-1930 MHz (Ameri-
	ca), 1910-1920 MHZ (Brazil)
Battery type	1460mAh Lithium-ion 3.7v 5.4WH
Talk time	28hours/24hours(with bluetooth)
Standby time	360 hours (15 days)/240 hours(with bluetooth)
Charging time	Less than 4 hours
Charger	DC 5V/600mA Input
Power adapter	Input:100-240V~50/60Hz 0.2A
	Output:5V 0.6A
Security	IEC 62133-2:2017

For more information, see the specific user guide or contact your system administrator.

Regulatory Notices

Operating Ambient Temperatures

Operating temperature: +32 to 104°F (0 to 40°C)

Relative humidity: 5% to 90%, noncondensing

Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for dramage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

is the DC voltage symbol.

· WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic

equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEFE as unsorted municipal waste and have to collect such WEFE senarately

of compliance can be obtained by contacting support@yealink.com.

Restriction of Hazardous Substances Directive (RoHS)
This device complies with the requirements of the EU RoHS Directive. Statements

Safety Instructions

Save these instructions. Read these safety instructions before use!

⚠ General Requirements

 Before you install and use the device, read the safety instructions carefully and observe the situation during operation.

 During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
 Please attempt not to dismantle the device by yourself. In case of any dis-

crepancy, please contact the appointed maintenance center for repair.

• Please refer to the relevant laws and statutes while using the device. Legal

rights of others should be respected as well.

Environmental Requirements

 Place the device at a well-ventilated place. Do not expose the device under direct sunlight.

Keep the device dry and free of dusts.
 Do not place the device on or near any inflammable or fire-vulnerable object,

such as rubber-made materials.

• Keep the device away from any heat source or bare fire, such as a candle or

△ an electric heater. Operating Requirements

. Do not let a child operate the device without guidance.

- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
 The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket.
- Before plugging or unplugging any cable, make sure that your hands are completely dry
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the
 power supply. Unplug the power plug and the Asymmetric Digital Subscriber
 Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
 If the device is left unused for a rather long time, disconnect it from the power
- supply and unplug the power plug.

 When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power
- smell, disconnect the device from the power supply, and unplug the power plug immediately.
 Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first.
 Do not disconnect the grounding cable until you disconnect all other cables.
- WARNGING: Do not place any small or light metallic object near the earcap region.

A Battery Requirements

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
 Do not try to use the battery for the power supply of any device other than
- this handset.

 Do not open or mutilate the battery, released electrolyte is corrosive and may
- cause damage to your eyes or skin.

 Use only the rechargeable battery pack delivered with the handset or those
- rechargeable battery packs expressly recommended by Yealink.

 Defective or exhausted battery should never be disposed of as municipal
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Cleaning Requirements

Before cleaning the device, disconnect it from the power supply.
 Use a piece of soft, dry and anti-static cloth to clean the device.
 Keep the power pluc clean and dry.

ECC Statement

This device compiles with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- —Increase the separation between the equipment and receiver.

 —Connect the equipment into an outlet on a circuit different from that to which the receiver.
- —Consult the dealer or an experienced radio/TV technician for help.
- FCC ID:T2C-W59R

IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device

 L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils
- radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est
- L'appareil doit accepter tout brouillage radioelectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

This device meets CS03 Part V. This device meets the applicable Innovation. Science and Economic Development.

Canada technical specifications. / Ce produit répond à la innovation, des sciences et de .Développement économique Canada spécifications techniques applicables."

Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet émetteur ne doit pas être Co-parés ou ne fronctionant en même temps qu'aucune autre antenne ou émetteur. Cet équipment devrait être installé et actionné were une distance minimum de 20 certimitéres entre le radiateur et vorte corps.

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

309, 3rd Floor, No.16, Yun Ding North Road, Hull District, Xiamen City, Fujian, P.R.C. YEALINK (EUROPE) NETWORK TECHNOLOGY B.X Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherstrawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, 1077ZX Amster

Strawinskylaan 3127, Atrium Building, 8th floor, 10772X Amsterdam, The Net lands
YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD. 999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA Made in China