

Zephyr™ HxM™ Smart

USER GUIDE



PACKAGE CONTENTS

Congratulations on purchasing a Zephyr™ HxM™ Smart Heart Rate Monitor. This package contains the following:

1. Zephyr™ HxM™ Smart, Bluetooth™ Smart enabled heart rate monitor
2. Zephyr™ Smart Silicon sensing strap.

COMPATIBLE PHONES

The Zephyr™ HxM™ Smart Heart Rate Monitor utilizes Bluetooth 4.0 also known as Bluetooth™ Smart or Bluetooth™ Low Energy.

Works with iPhone 4s, iPhone 5 and certain Android based Smartphones.

Check the web for phone compatibility
www.ZephyrAnywhere.com/ConsumerFitness



FEATURES

- Heart Rate and R-R data
- Accessibility to features will depend on the app being used to receive transmitted data.


APPS

Zephyr™ HxM™ Smart Heart Rate Monitor works with a wide variety of Smartphone apps. For the latest list of compatible apps, go to www.ZephyrAnywhere.com/ConsumerFitness or the Apple Apps Store or Google Play.


OPERATING INSTRUCTIONS

Wearing your device

- Snap your HxM™ Smart device to your chest strap

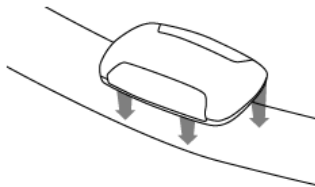


- Moisten the sensor pads on the inside of the chest strap and put it on

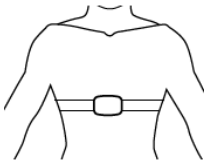


DOWNLOAD THE APP AND CONNECT YOUR HxM™ SMART

- Select, download and install the app on your Smartphone.



- Make sure you are wearing your HxM™ Smart device so that it is turned on. A green LED will flash every 3 seconds.
- Start your app and connect it to your HxM™ Smart device. The LED will flash twice every 3 seconds when connected to your Smartphone.



SPECIFICATIONS

HR Range:	25 – 240 BPM
Battery Type:	CR2032
Transmit Range:	10m
Frequency:	2.4 – 2.4835GHz
Garment Washes:	50
Operating Limits:	
Temperature:	-10 – 50°C
Humidity:	5 – 95%

GUIDE TO SAFE & EFFECTIVE USE

- Please consult your physician before exercising with this device
- Please do not use this device around other medical equipment without permission
- Please do not use this device in places where wireless devices are prohibited, such as on aircraft

CARE AND MAINTENANCE

- As required, wipe clean with a moist cloth
- Do not leave in direct sunlight
- Please do not expose to chemicals
- Can be immersed in water (1m) for short periods (20 min)
- Keep away from fire or other heat sources

STRAP



- Wash after every 30 days of use
- Machine wash cool (<math><40^{\circ}\text{C}</math>)
- Delicate setting
- Hang (NOT tumble) dry
- Do not bleach or iron
- Do not dry clean

WARRANTY

- 1 Zephyr provides a limited 12 month warranty for the HxM™ BT product. Zephyr warrants to the original purchaser of this product that it will replace, repair or refund the cost of this product or any part proven to be defective in material or workmanship. In no event shall Zephyr be liable for direct, incidental or consequential damages arising out of use of this product, and any recovery is limited to the purchase price.
- 2 Warranty claims will be initiated by emailing support@zephyrtech.zendesk.com
- 3 During the warranty period, if this product does not work properly under normal use and care conditions, and if this is caused by a design, material or workmanship defect, Zephyr will decide to replace or repair the product at their discretion according to the following conditions. If a returned product is found not within the

range of the warranty, Zephyr retains the right to charge a handling fee.

- a. The warranty is effective only when proof of purchase can be provided.
- b. If Zephyr repairs or replaces the product, the repaired or replaced product will continue to be covered for the balance of the warranty period.
- c. If it is deemed that the device has not yet been used or maintained as recommended, and is considered reasonable, the warranty will not apply to this product.
- d. If the product has been altered in any way by non-Zephyr authorized personnel, the warranty will not apply to this product.
- e. A malfunction or damage caused by use of the Zephyr product with other products will not be covered by the warranty.



This device has been designed to conform to the following:

- FCC Part 15
- RTTE Directive 1999/4/EC
- This product complies with RoHS 2002/95/EC
- This device contains transmitter module
FCC ID: VZ6-7566
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:
 - This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil s'accorde avec Industrie Canada licence-exempte RSS standard. (1) cet appareil ne peut pas causer l'intervention, et (2) cet appareil doit accepter de l'intervention, y compris l'intervention qui peut causer l'opération non désirée de.

This Class **[B]** digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Contact:

Zephyr Technology

1 Annapolis St

Suite 200

Annapolis

MD 21401

USA

Tel: +1 (443) 569-3603

Fax: +1 (443) 926-9402

Email: support@zephyrtech.zendesk.com

info@zephyranywhere.com

sales@zephyranywhere.com

Web: www.zephyranywhere.com