



Bluetooth™ USB Printer Adapter

*Print to your USB printers via
Bluetooth wireless technology*



User Manual

F8T031

TABLE OF CONTENTS

Introduction	2
Overview	
Product Features	3
System Requirements	4
Package Contents.	4
Supported Profiles	5
Specifications	6
Hardware Installation	8
FAQs	15
Information	17

INTRODUCTION

Congratulations and thank you for purchasing the *Bluetooth* USB Printer Adapter from Belkin. This breakthrough Adapter adds *Bluetooth* technology to your existing USB printer, allowing it to connect with all devices enabled with *Bluetooth* v1.1 technology. Wirelessly print from your PDA, desktop, or laptop computer via *Bluetooth* technology.

Please be sure to review this User Manual carefully to ensure that you take advantage of all the features and capabilities of your new *Bluetooth* USB Printer Adapter.



OVERVIEW

Product Features

The *Bluetooth* USB Printer Adapter is compliant with *Bluetooth* standard version 1.1 and provides:

- Compliance with *Bluetooth* specification v1.1 devices
- Support of USB 1.1-compliant printers*
- Operating distance of up to 100 meters
- Compact design
- Support for data rates up to 721Kbps
- Hardcopy Cable Replacement and Serial Port Profiles

*Multifunctional printers will not operate when used with this Adapter

OVERVIEW

System Requirements

- PDA or PC enabled with *Bluetooth* technology
- Serial Port or Hardcopy Cable Replacement Profile support
- USB v1.1-compliant printer

Package Contents

- *Bluetooth* USB Printer Adapter
- User Manual
- Quick Installation Guide
- Registration Card

OVERVIEW

Supported Profiles

The services supported by your *Bluetooth* USB Printer Adapter are defined as “Profiles”.

Available Profiles include:

- Generic Access
- Service Discovery
- Serial Port
- Hardcopy Cable Replacement

OVERVIEW

Specifications


<i>Bluetooth</i> Compliance	Version 1.1 Compatible to <i>Bluetooth</i> SPP and HCRP Profile
Physical Interface:	USB v1.1-compliant, A-type
Operating Frequency:	2.4 to 2.4835GHz
Output Power:	Class I (0-20 dBm) RF
Data Rate:	723/56Kbps
Operation Range:	100m (333 ft.) radius indoors
Antenna:	Integrated
LED:	<i>Bluetooth</i> Activity, USB Status

Dimensions:	81 (W) x 81 (L) x 26mm (H)
Weight:	108g
Operating Temp:	0 to 50 degrees Celsius
Storage Temp:	10 to 70 degrees Celsius
Humidity:	5~90% non-condensing
Supported Profiles:	GAP, SDP, HCRP, Serial

Specifications subject to change without notice.

OVERVIEW

LED:
USB

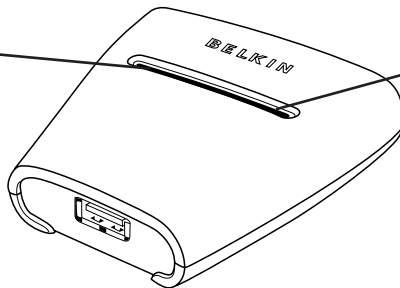

LED:
Bluetooth

LEDs

Bluetooth LED (Blue)

On/Blinking: *Bluetooth* device is connected to the Adapter

Off: No *Bluetooth* devices are connected to the Adapter

USB LED (Amber)

Fast Blinking: No printer detected

Slow Blinking: Printer detected

HARDWARE INSTALLATION

Installing the USB Printer

Please do not connect any devices other than a USB printer directly to the USB port of the Adapter.

1. With the printer powered off, connect one end of a standard USB cable to the USB B-type connector of your USB printer and connect the other end to the USB type A printer connector on the Adapter.

Note: You must have the printer driver installed in each computer you wish to print from prior to use. Go to the Control Panel in Windows and open the "Printers" folder. Select "Add a Printer" and choose a "Local Printer" (not network printer or USB printer). Then select the "Bluetooth Port" as its' port.

2. Connect the included power adapter into an available power outlet. Attach the barrel plug into the power jack of the Adapter. You should see the *Bluetooth* and USB LED blink rapidly for three seconds and then the USB (Amber) LED will remain blinking.
3. Power on the connected USB printer.


Your *Bluetooth* USB Printer Adapter is now installed and ready for use.

HARDWARE INSTALLATION

Connecting Via Serial Port Profile


The method of connecting to the printer described below is for use of the Serial Port Profile. For example, using the *Bluetooth* PC Card (part number F8T002), or the *Bluetooth* USB Adapter (part number F8T001 or F8T003) from Belkin on Windows or devices that use WIDCOMM BTW software.

1. Double-click on the *Bluetooth* icon on your desktop.
2. Choose *Bluetooth* from the menu bar. Click “Search for devices”. The “Belkin USB Printer” icon should appear.
3. Double-click on the icon. You should see “Discovering Services”. Icons will appear symbolizing the services your device offers.

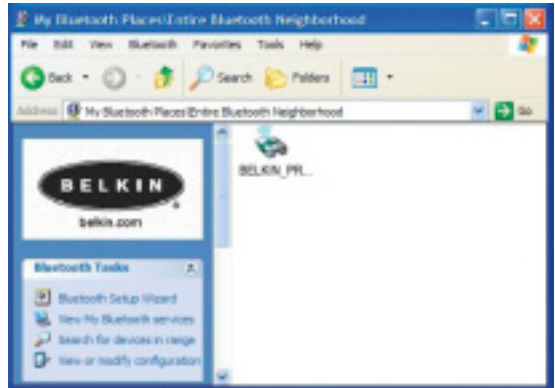


HARDWARE INSTALLATION

4. Double-click on the “Virtual Printer” icon.

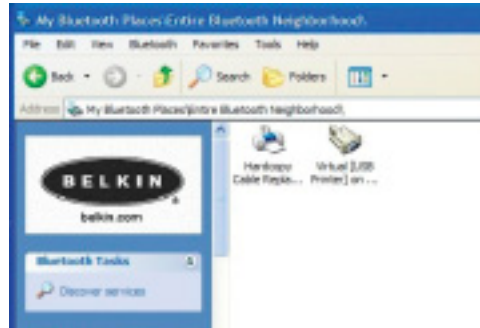

5. A connection via Serial Port Profile over the virtual COM port will be created. This is usually “COM3” or “COM4” but can be configured to another port. Make note of the COM port for your specific application.

6. Go to Control Panel in Windows and open the “Printers” folder.

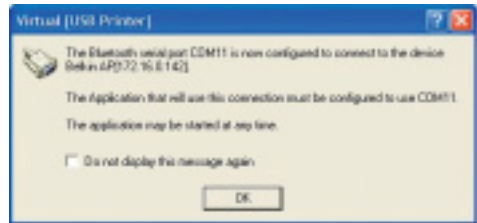


HARDWARE INSTALLATION

7. Right-click on the printer you pre-installed and choose “Properties”.
8. Select the “Ports” tab.
9. Under the “Ports” section, select the printer for the virtual COM port created in step 5.

You are now ready to print via *Bluetooth* technology to your USB printer.

Note: Each time you would like to print via the printer connected to the Adapter, you will have to double-click on the “Virtual [USB Printer]” icon first to make a connection, unless you set the printer you created above to be your default printer. In that case, the PC stack will automatically send the print job via virtual COM port.

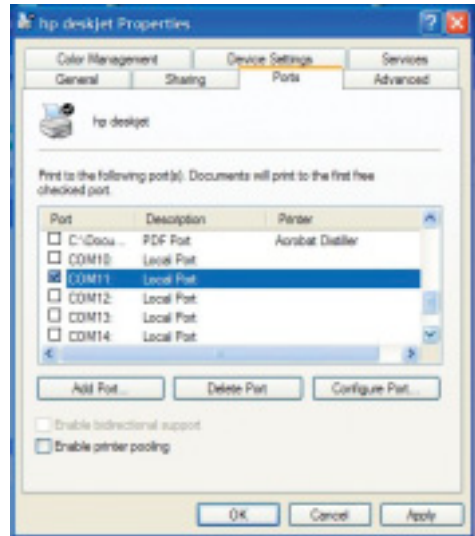


HARDWARE INSTALLATION

Connecting Via Hardcopy Replacement Profile


The method of connecting to the printer described below is for use of the Hardcopy Replacement Profile. For example, using the *Bluetooth* PC Card (part number F8T002), or the *Bluetooth* USB Adapter (part number F8T001 or F8T003) from Belkin on Windows or devices that use WIDCOMM BTW software.

1. Double-click on the *Bluetooth* icon on your desktop.
2. Choose “*Bluetooth*” from the menu bar. Click “Search for devices”. The “Belkin USB Printer” icon should appear.
3. Double-click on the icon. You should see “Discovering Services”. Icons will appear symbolizing the services your device offers.

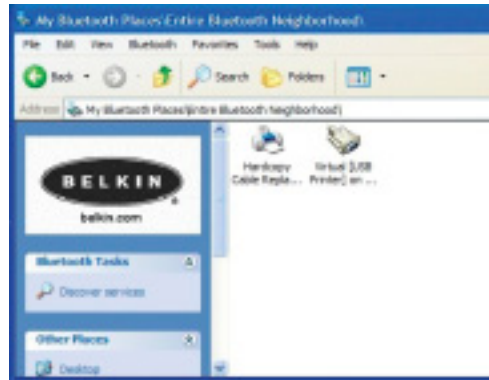


HARDWARE INSTALLATION

4. Double-click on the “Hardcopy Cable Replacement” icon.

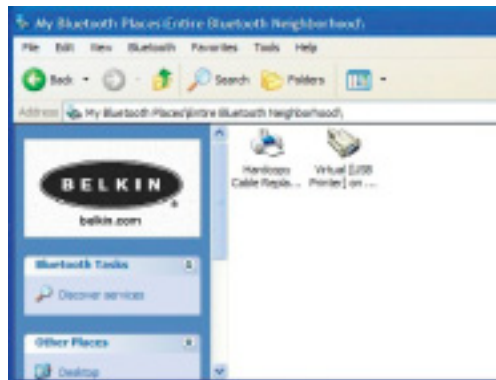

5. You will be prompted to add a printer. Click “OK”.

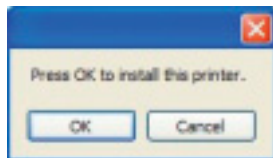

HARDWARE INSTALLATION

6. The “Add Printer Wizard” will appear. Select the printer from the list or browse for the printer connected to your Adapter.
7. Follow the wizard to complete the printer installation.



FAQs

Which *Bluetooth* Profiles does the USB Printer Adapter support?

The Adapter supports the Serial Port Profile and the Hardcopy Replacement Profile.

Can I connect multiple *Bluetooth* devices to the Adapter?

Yes, you may. Every time a print job is sent, your computing device will create a connection with the Adapter. Once the print job is complete, your computing device will disconnect and make the Adapter available for other devices to use.

My Printer Status Monitor Utility indicates that there is no connection with the printer. Is my Adapter functioning properly?

Because the Adapter disconnects after every print job to make itself available to other devices, there is no constant communication between your Adapter and your computing device. This may conflict with some printer monitor utilities. We recommend that you disable any printer monitor utilities for your printer or disable bidirectional support for the connected printer.

FAQs

Does the Adapter support multifunctional printers?

We recommend that you do not use multifunctional printers that support other non-printing functions. The Adapter only supports printing via *Bluetooth*. Other functions like scanning will not work through the Adapter.

Can I print from my Pocket PC or Palm™ handheld enabled with *Bluetooth* technology?

Yes, you can. You will need to install a print utility on your PDA first. For example, “PrintPocketCE” for Pocket PCs from Field Software or “PrintBoy” for Palm OS® by Pearson Software.

INFORMATION

DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Corporation, of 501 West Walnut Street, Compton, CA 90220, declare under our sole responsibility that the product,

F8T031

to which this declaration relates, complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Exposure to Radio Frequency Radiation.

The radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such manner that the potential for human contact normal operation is minimized.

When connecting an external antenna to the device, the antenna shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

INFORMATION

This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications to this device that are not expressly approved by Belkin Corporation may void the users authority to operate the equipment.


Canada-Industry Canada (IC)

The wireless radio of this device complies with RSS 139 & RSS 210 Industry Canada. This Class B digital complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme á la norme NMB-003 du Canada.

Europe-European Union Notice

Radio products with the CE 0560 or CE alert marking comply with the R&TTE Directive (1995/5/EC) issued by the Commission of the European Community.




INFORMATION

Compliance with this directive implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 60950 (IEC60950) – Product Safety
- EN 300 328 Technical requirement for radio equipment
- ETS 300 826 General EMC requirements for radio equipment.

To determine the type of transmitter, check the identification label on your Belkin product.



Products with the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (72/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 55022 (CISPR 22) – Electromagnetic Interference
- EN 55024 (IEC61000-4-2,3,4,5,6,8,11)- Electromagnetic Immunity
- EN 61000-3-2 (IEC61000-3-2) - Power Line Harmonics
- EN 61000-3-3 (IEC610000) – Power Line Flicker
- EN 60950 (IEC60950) – Product Safety

Products that contain the radio transmitter are labeled with the CE 0560 or CE alert marking and may also carry the CE logo.



INFORMATION

Belkin Corporation Limited Two-Year Product Warranty

Belkin Corporation warrants this product against defects in materials and workmanship for its warranty period. If a defect is discovered, Belkin will, at its option, repair or replace the product at no charge provided it is returned during the warranty period, with transportation charges prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; if the product has been modified without the written permission of Belkin; or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN, OR USED WITH, BELKIN PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations of exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



belkin.com

Belkin Corporation

501 West Walnut Street
Compton • CA • 90220 • USA
Tel: 310.898.1100
Fax: 310.898.1111

Belkin Components, Ltd.

Express Business Park • Shipton Way
Rushden • NN10 6GL • United Kingdom
Tel: +44 (0) 1933 35 2000
Fax: +44 (0) 1933 31 2000

Belkin, Ltd.

7 Bowen Crescent • West Gosford
NSW 2250 • Australia
Tel: +61 (0) 2 4372 8600
Fax: +61 (0) 2 4372 8603

Belkin Tech Support

US: 310.898.1100 ext. 2263
800.223.5546 ext. 2263
Europe: 00 800 223 55 460
Australia: 1800 666 040

P74376

© 2003 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. The *Bluetooth* name and the *Bluetooth* trademarks are owned by *Bluetooth SIG, Inc.*, and are used by Belkin Corporation under license.