




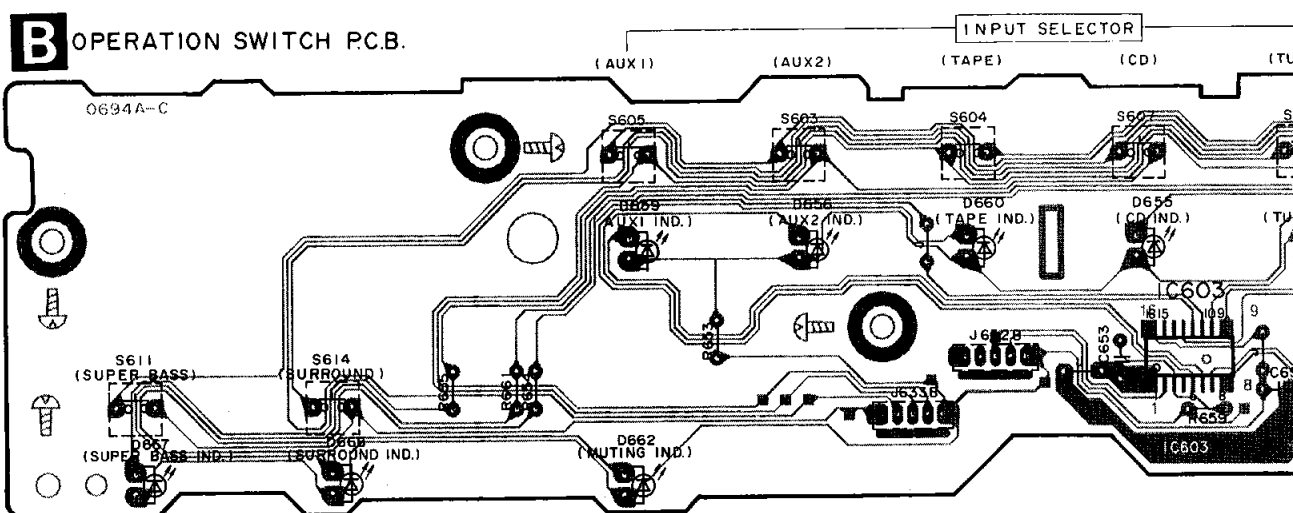


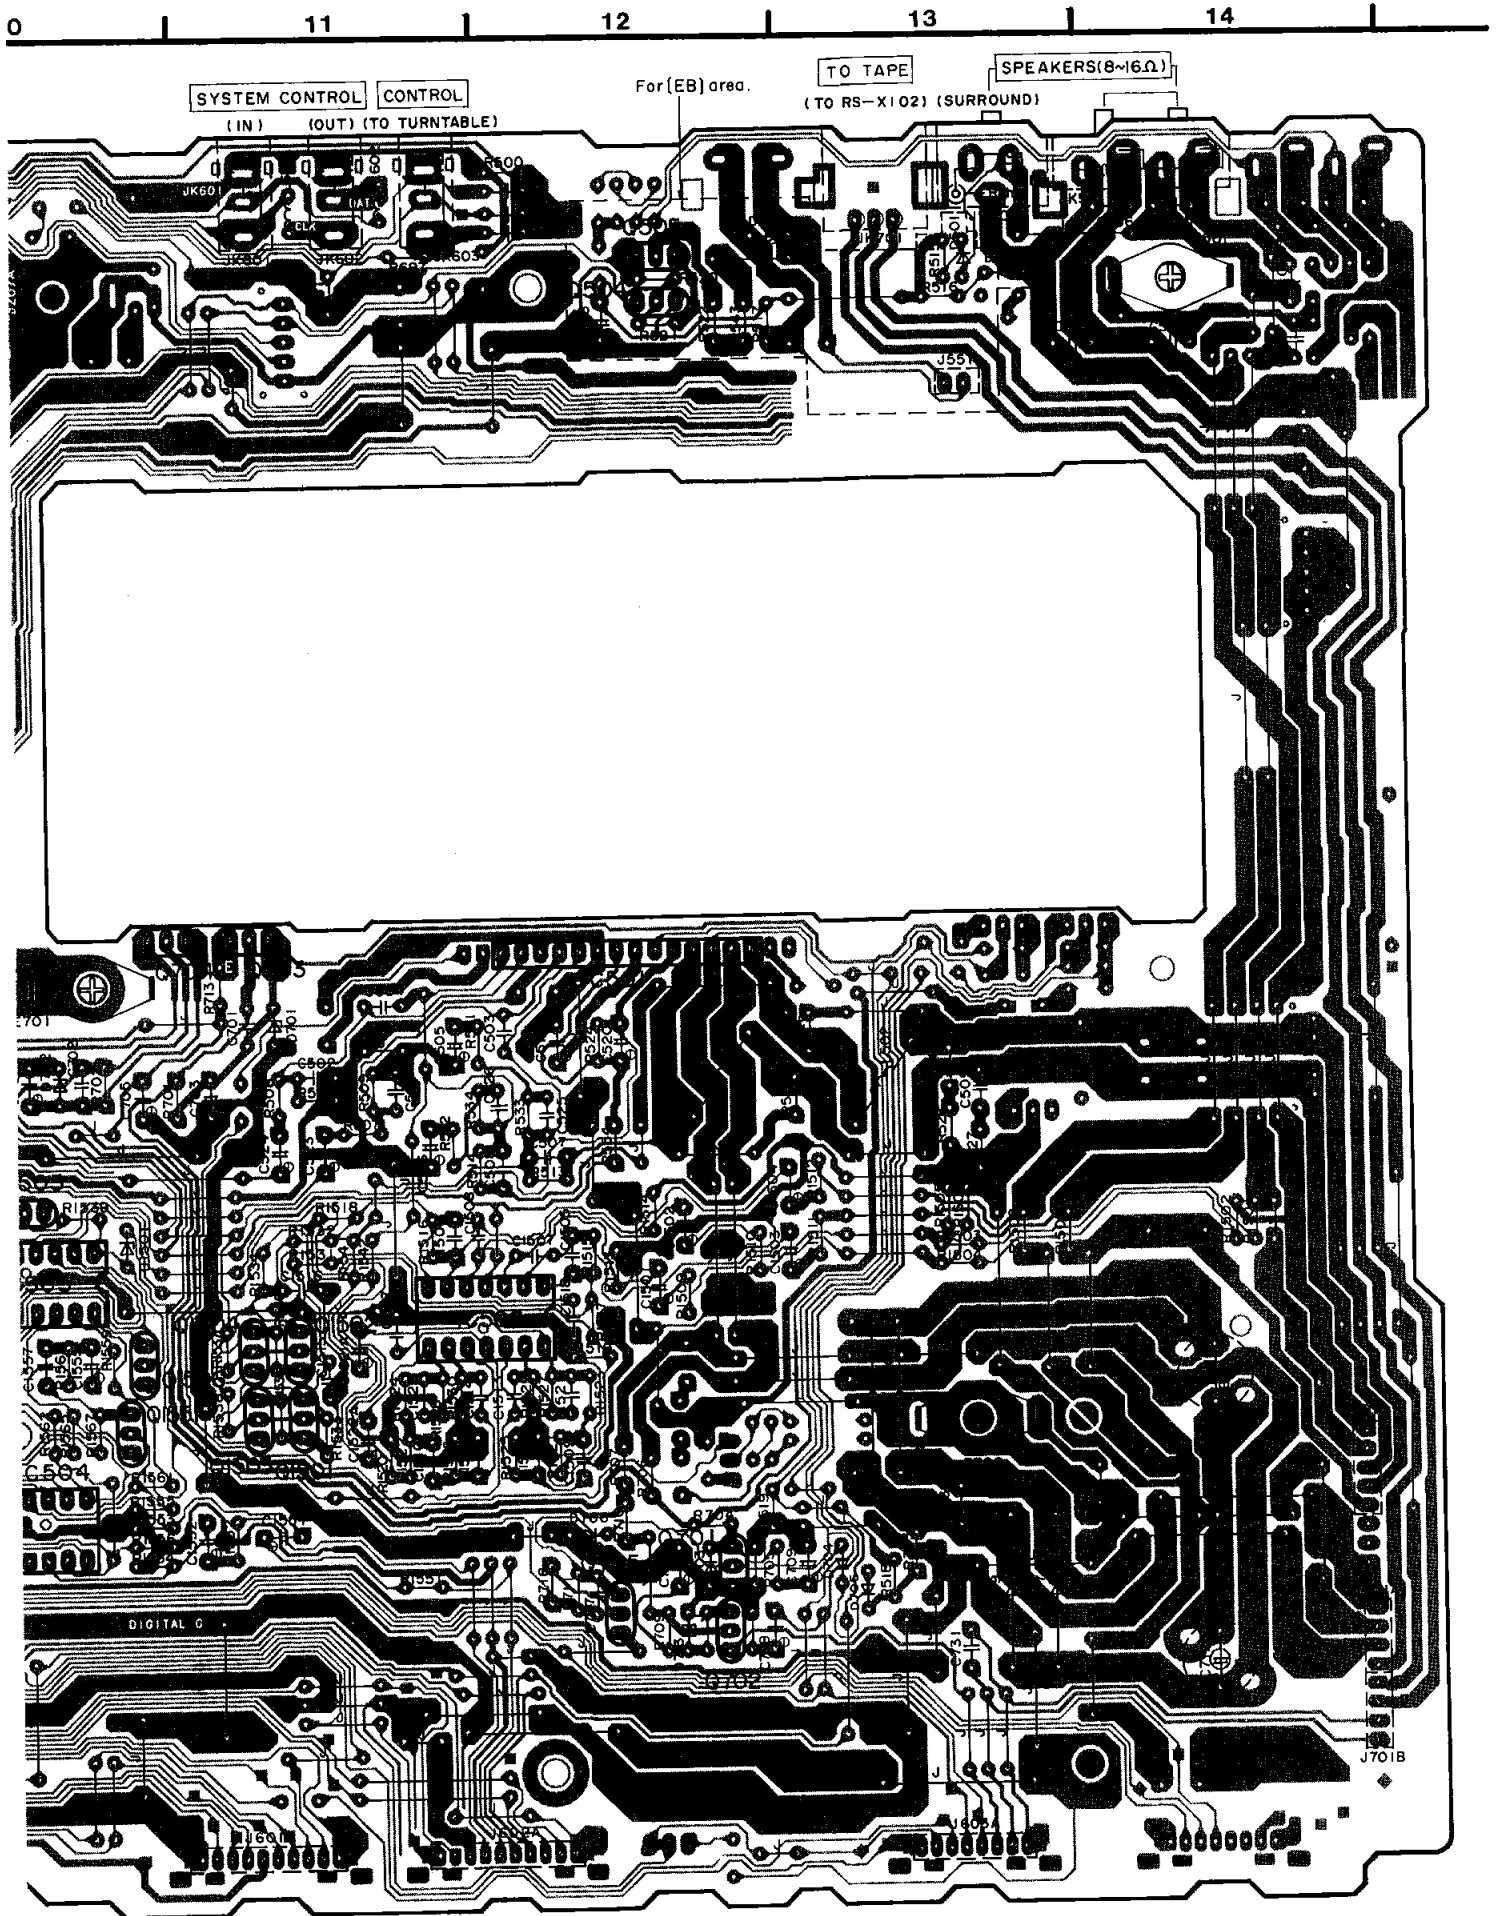


■ CIRCUIT BOARD DIAGRAM

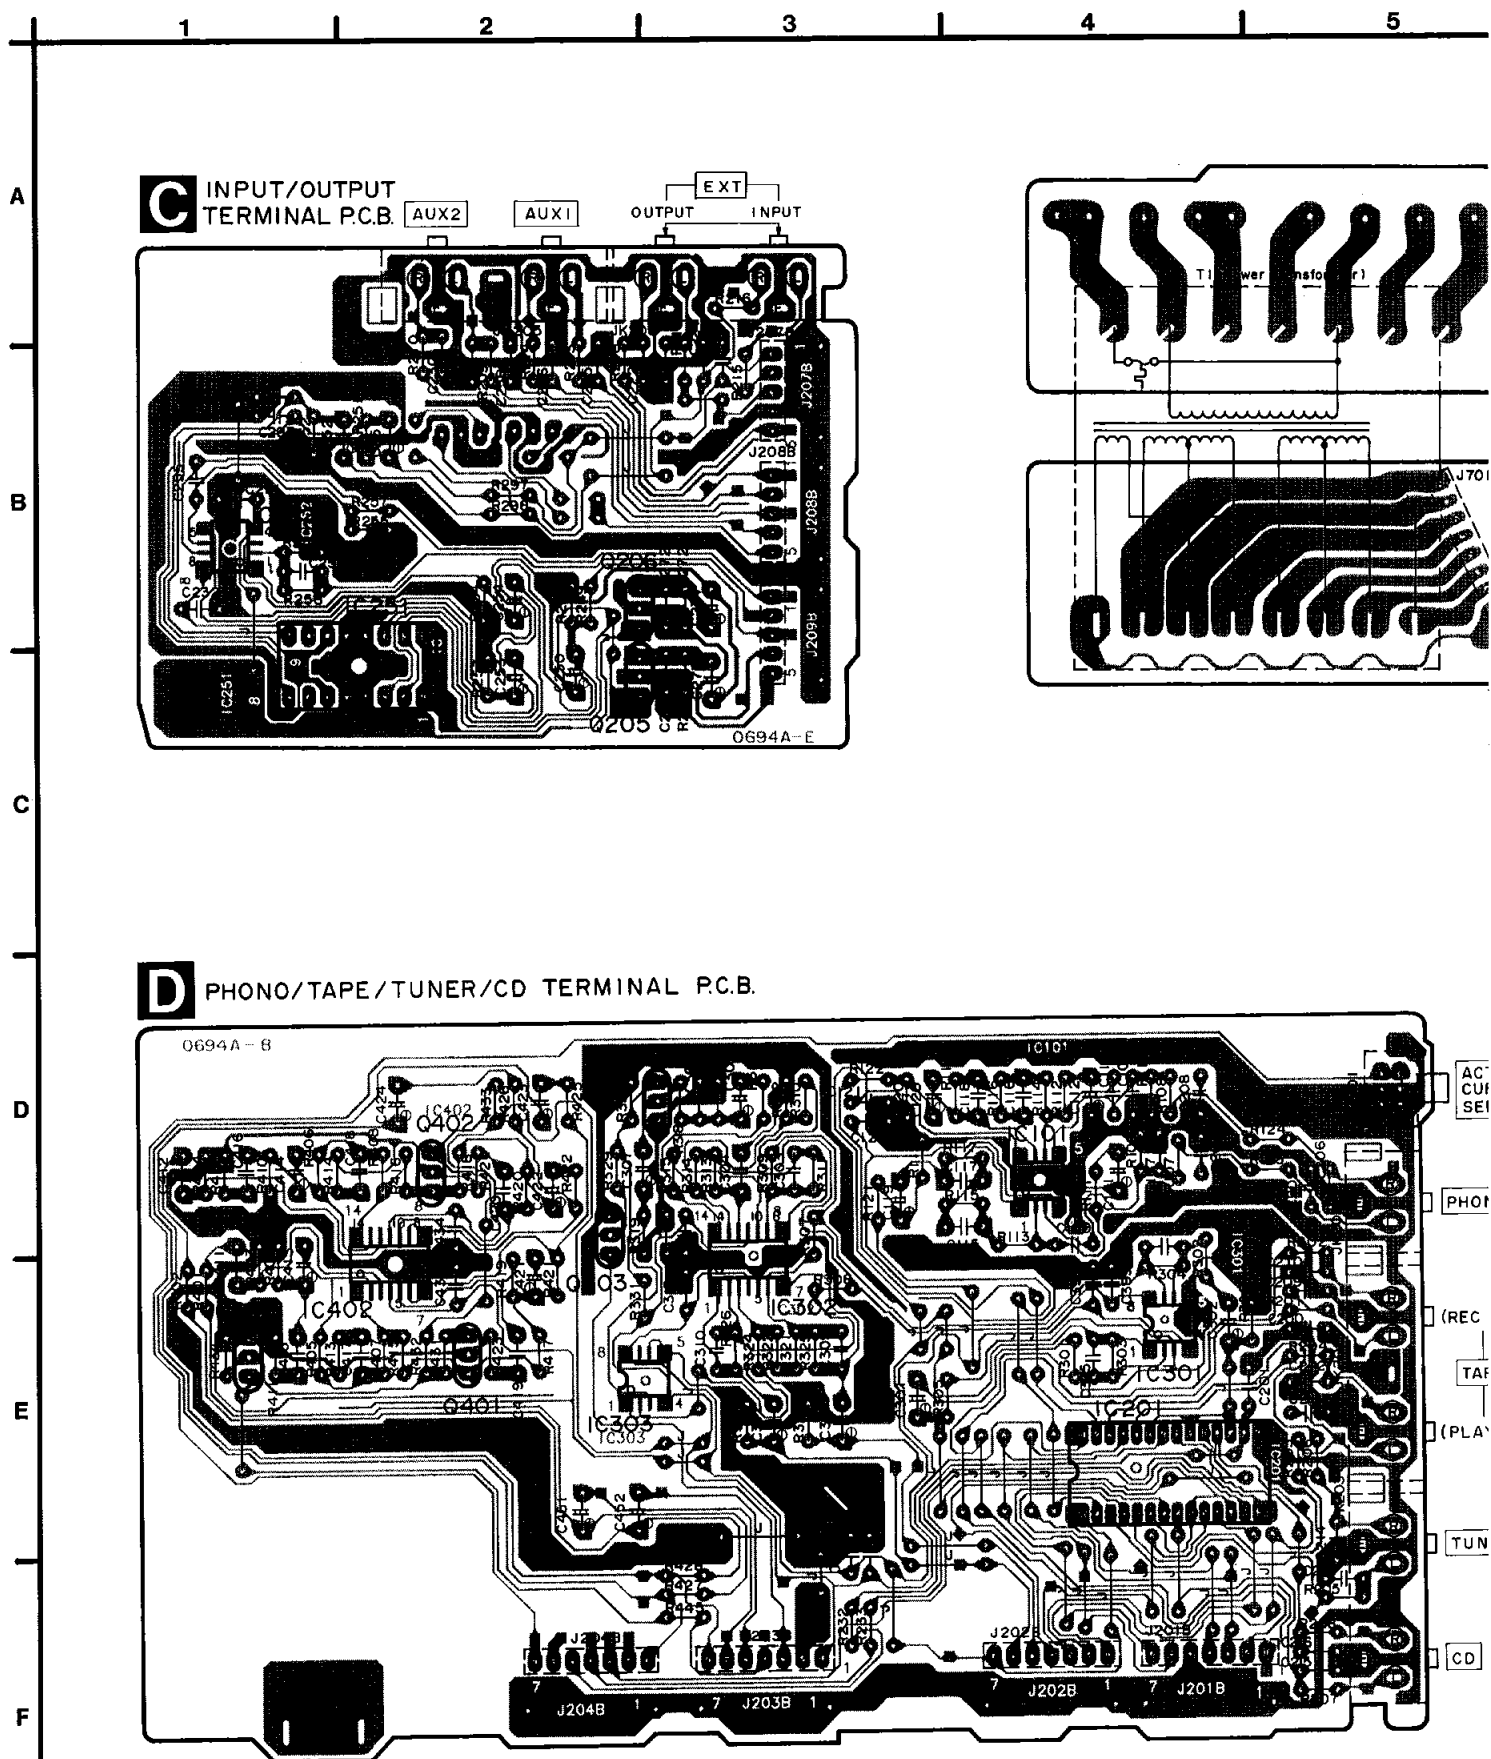


G AC IN/AC OUTLET P.C.B. For[E,EB,EG]AREAS.

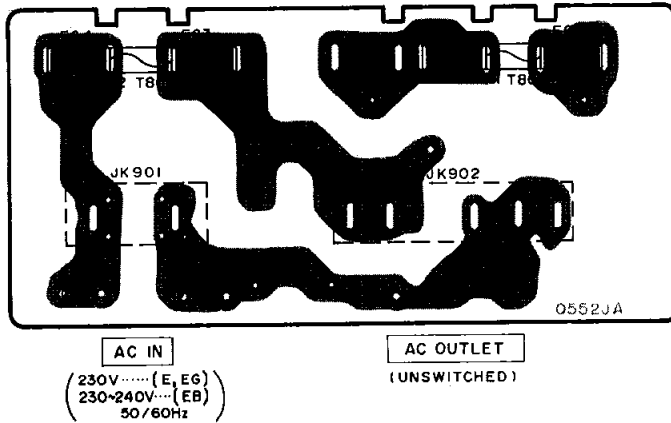

G AC IN/AC OUTLET P.C.B. For[G]AREAS.

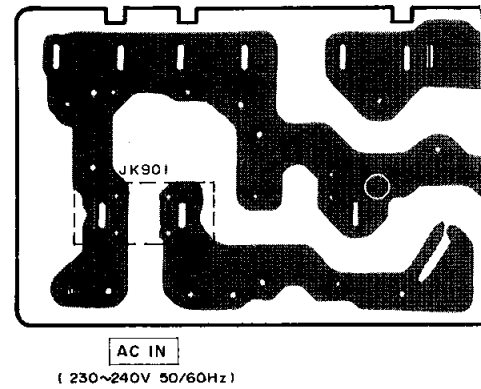

Power Source P.C.B. For[GC]area.

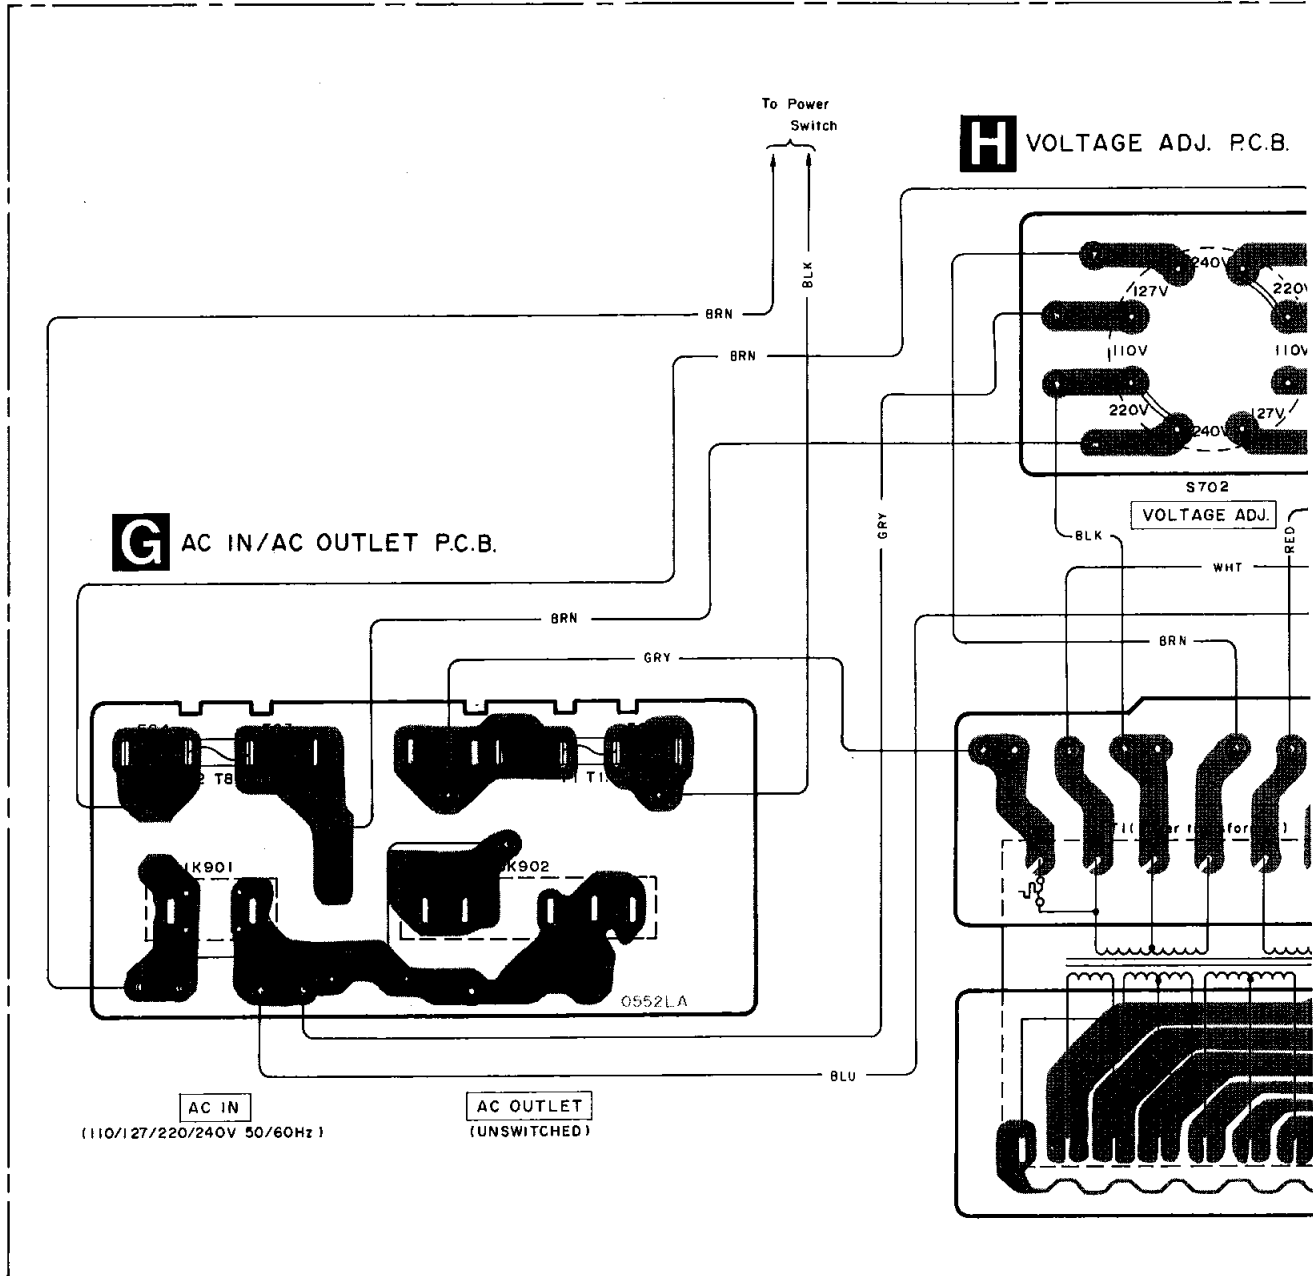

11



12

13

14


■ TERMINAL GUIDE OF IC'S, TRANSISTOR AND DIODES

N) AREA .

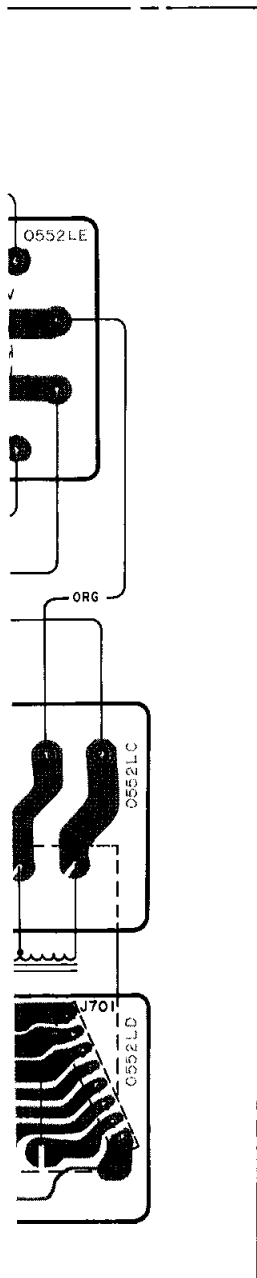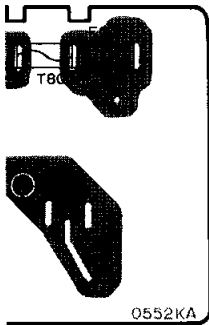


AN6558SFE2 	BA4558FDXT1 	AN6554NSFE2 	BU2040F-T2
M5218AP 	AN6554F 	TC4066B 	M5283P
TC9164N 	M50754-180SP 	SVI3102C 	2SB621AQRSTA KSD471ACYGTA
	2SA1309AQSTA 2SC3311AQSTA 2SC3312RSTA 2SD1450STTA UN4215TA		2SD2144STA DTA114ESTP DTC114ESTP DTC144ESTP
2SB1187DEF 2SD1761DEF 		MA165TA MA167TA MA700TA 1SS291TA	P300DLF
MA4150MTA MA4240MTA 		MA4047MTA MA4051MTA MA4062HTA MA4082MTA	LN873RP-C

WIRING CONNECTION DIAGRAM

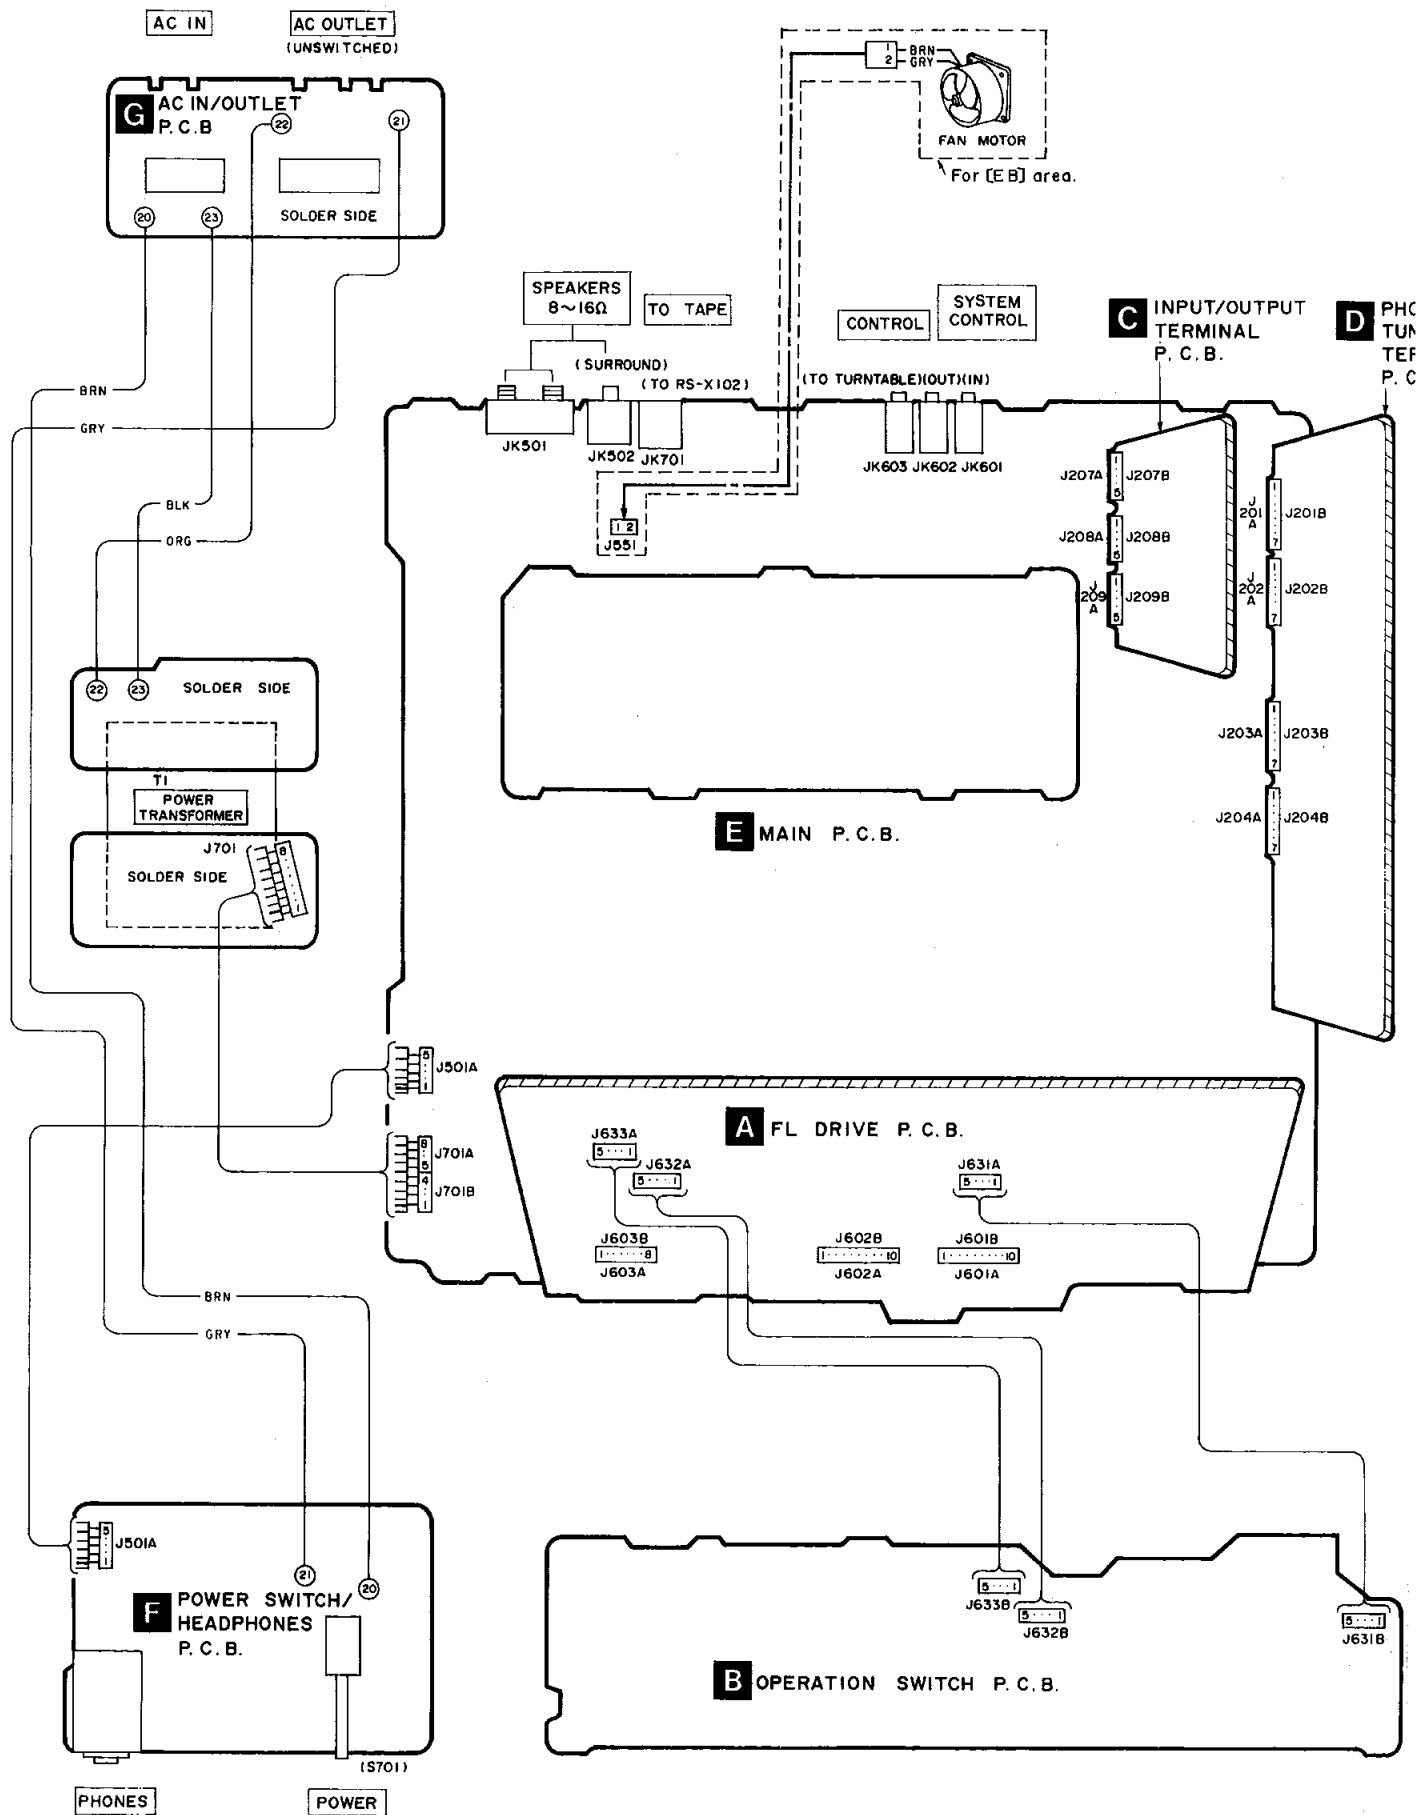



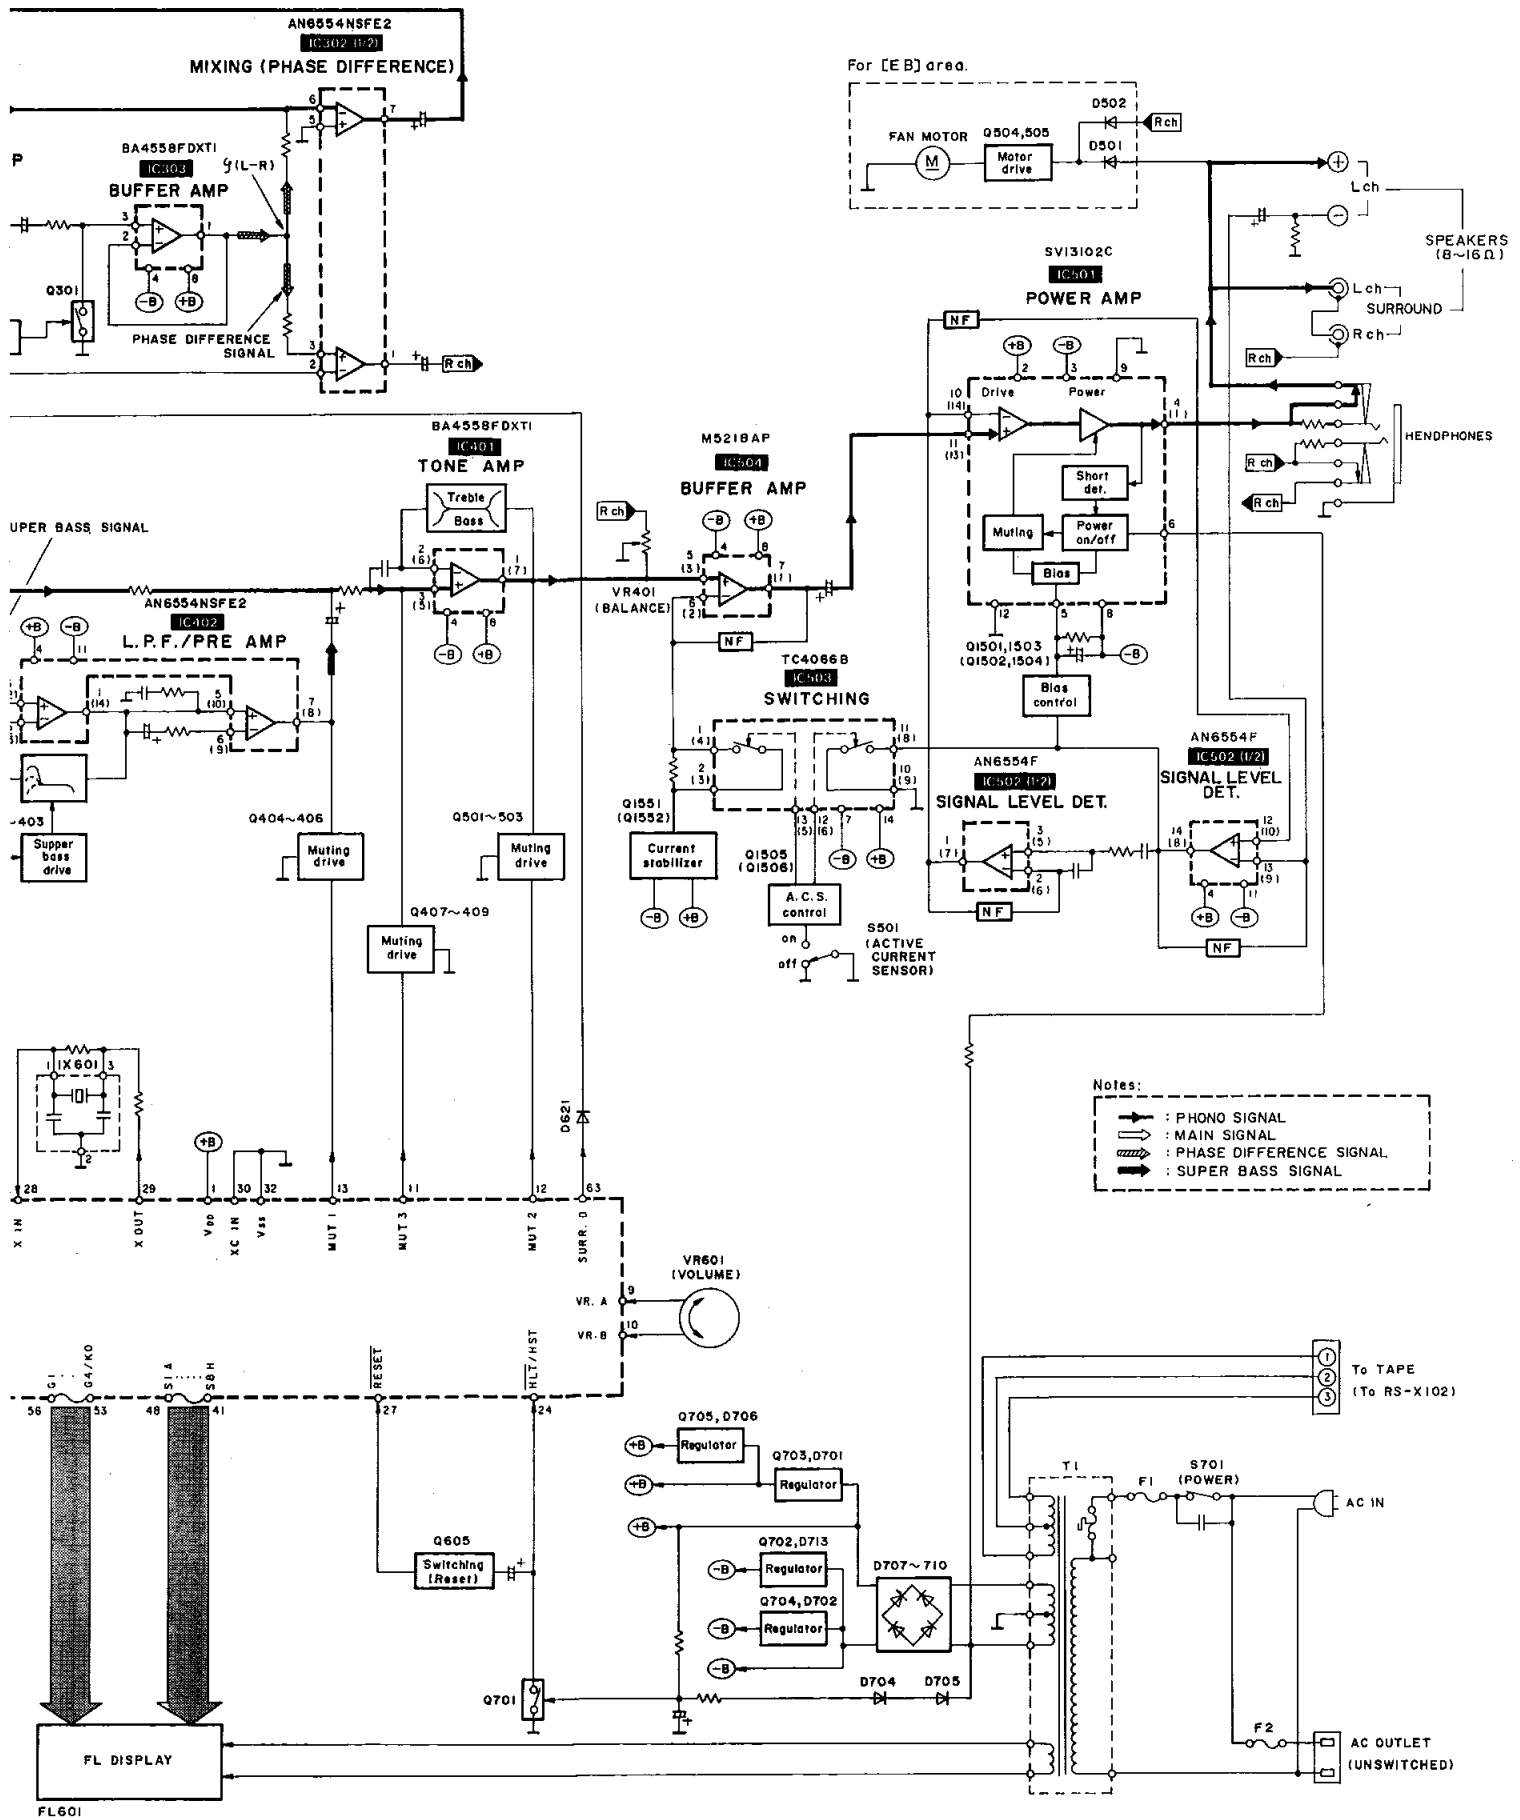

■ FUNCTIONS OF IC TERMINALS

● IC601 (M50754-180SP: MICRO COMPUTER)

Pin No.	Symbol	I/O	Function Description
1	VDD	—	To be connected to a power supply (+5 V).
2	B.DATA OUT	O	This is the output terminal for the bus data signal.
3	B.CLK OUT	O	This is the output terminal for the bus clock signal.
5	S.BASS PWM	O	This is the output terminal for the super bass control signal.
6	VR PWM	O	This terminal outputs the signal for the control of the volume.
7	B.DATA IN	I	This is the input terminal for the bus data signal.
8	B.CLK IN	I	This is the input terminal for the bus clock signal.
9	VR A	I	These are the terminals for the rotary encoder of the volume of VR601.
10	VR B		
11	MUT 3	O	Outputs the -6 dB signal for control of attenuated muting.
12	MUT 2		
13	MUT 1	O	Output the signal for the control of muting.
15	REC M	O	Output the signal for muting the VTR 1 recording.
16	DATA	O	These are output terminal for data and clock signals.
17	CLK		
18	STB 1	O	The serial data inputted into IC201 is latched by the STB pulse and the switch is set to ON according to data.
19	DATA 2	O	These are output terminal for data and clock signals.
20	CLK 2		
21	PLSTOP	I	These are the terminals for sync recording on the player.
22	PLST/PHONO	O	
23	PLSY	I	
24	HLT/HST	I	This is the terminal for the detection of power supply.
25	KS4	I	This is the key scan terminal.
27	RESET	I	This is the input terminal for the reset signal.
28	X IN	I	These are the I/O terminals for the oscillating clock signal.
29	X OUT	O	
34 37	KS 3 KS 0	I	These are the key scan terminals.
41 48	S8 S1	O	These terminals output signals for the control of the FL display.
49 56	G5/K4 G1/K0		
63	SURR.D	O	This is the output terminal for the surround signal.

REPLACEMENT PARTS LIST

Notes : * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

- * The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)

Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		Q1506	DTA114ESTP	TRANSISTOR	
				Q1551, 1552	2SC3312RSTA	TRANSISTOR	
						DIODE(S)	
IC101	AN6558SFE2	I. C, PHONO EQ AMP		D501, 502	MA167TA	DIODE	(EB)
IC201	TC9164N	I. C, INPUT SELECTOR		D504	MA4051MTA	DIODE	(EB)
IC251	M5283P	I. C, ATTENUATOR		D601, 602	MA700	DIODE	
IC252	BA4558FDXT1	I. C, BUFFER AMP		D603	MA4047MTA	DIODE	
IC301	BA4558FDXT1	I. C, PHASE SHIFT		D605-608	MA165	DIODE	
IC302	AN6554NSFE2	I. C, MIXING/SURROUND AMP		D612, 613	MA165	DIODE	
IC303	BA4558FDXT1	I. C, BUFFER AMP		D615	ISS291TA	DIODE	
IC401	BA4558FDXT1	I. C, TONE AMP		D617, 618	MA165	DIODE	
IC402	AN6554NSFE2	I. C, L. P. F/PRE AMP		D620, 621	MA165	DIODE	
IC501	SV13102C	I. C, POWER AMP		D655-660	LN873RP-C	LED	
IC502	AN6554F	I. C, SIGNAL LIVEL DET.		D662	LN873RP-C	LED	
IC503	TC4066B	I. C, SWITCHING		D667, 668	LN873RP-C	LED	
IC504	M5218AP	I. C, BUFFER AMP		D701, 702	MA4150M	DIODE	
IC601	M50754-180SP	I. C, MICRO COMPUTER		D703	MA165	DIODE	
IC602	BA4558FDXT1	I. C, BUFFER AMP		D704, 705	MA167	DIODE	
IC603	BU2040F-T2	I. C, LED DRIVE		D706	MA4062-H	DIODE	
		TRANSISTOR(S)		D707-710 Δ	P300DLF	DIODE	
Q205	2SC3311A-Q	TRANSISTOR		D713	MA4240H	DIODE	
Q206	2SA1309A-R	TRANSISTOR		D1501, 1502	MA4082MTA	DIODE	
Q301	2SD2144S	TRANSISTOR				VARIABLE RESISTOR(S)	
Q303	DTA114ESTP	TRANSISTOR					
Q401, 402	2SD2144S	TRANSISTOR		VR401	EWHFDAF20G15	V. R	
Q403	DTA114ESTP	TRANSISTOR		VR601	EVQWQAF2524B	V. R	
Q404	DTA114ESTP	TRANSISTOR		VR1301, 302	ENC2XAF20C15	V. R	
Q405-408	2SD2144S	TRANSISTOR				COIL(S)	
Q409	2SA1309A-R	TRANSISTOR					
Q501, 502	2SD1450STTA	TRANSISTOR		L501, 502	SLQY07G-40	COIL	
Q503	2SA1309A-R	TRANSISTOR		L601	ELEXT100KA9	COIL	
Q504	2SC3311AQSTA	TRANSISTOR	(EB)	L602, 603	RLQZP101KT-Y	COIL	
Q505	2SA1309AQSTA	TRANSISTOR	(EB)			TRANSFORMER	
Q601	2SC3311A-Q	TRANSISTOR		T1 Δ	RTP1M5E008-V	POWER TRANSFORMER	(E, EG)
Q602	DTC144EKT96	TRANSISTOR		T1 Δ	RTP1M5B002-V	POWER TRANSFORMER	(EB, GN)
Q603	2SC3311A-Q	TRANSISTOR		T1 Δ	RTP1M5G002-V	POWER TRANSFORMER	(GC)
Q604	DTC144EKT96	TRANSISTOR				OSCILLATOR(S)	
Q605	DTC114ESTP	TRANSISTOR					
Q701	UN4215	TRANSISTOR		X601	EFOGC6004T4	CERAMIC FILTER	
Q702	2SB621A-R	TRANSISTOR					
Q703	2SD1761DEF	TRANSISTOR					
Q704	2SB1187DEF	TRANSISTOR					
Q705	KSD471ACYGTA	TRANSISTOR					
Q1501-1504	2SA1309A-R	TRANSISTOR					
Q1505	DTC114ESTP	TRANSISTOR					


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		DISPLAY TUBE		J603B	RJT003K008M1	CONNECTOR (8P)	
				J631B	SJS50581BB	SOCKET (5P)	
FL601	RSL0074-F	DISPLAY TUBE		J632B	SJS50581BB	SOCKET (5P)	
		FUSE (S)		J633B	SJS50581BB	SOCKET (5P)	
				J701B	RJS1A1704	SOCKET (4P)	
						JACK (S)	
F1 △	XBA2C08TB0	FUSE		JK201	SJF3068N	TERMINAL, PHONO	
F1 △	XBA2C16TB0	FUSE	(GC)	JK202	SJF3069-5N	TERMINAL, TAPE	
F2 △	XBA2C08TB0	FUSE	(E, EB, EG)	JK203	SJF3069N	TERMINAL, TUNER/CD	
		SWITCH (ES)		JK205	SJF3069-5N	TERMINAL, AUX 1/2	
				JK206	SJF3069N	TERMINAL, EXT OUT/IN	
S501	RSS2B006-M	SW, ACTIVE CURRENT SENSOR		JK501	RJR0054M	TERMINZL, SPEAKER	
S601	EVQ21405R	SW, SPEAKER ON/OFF		JK502	SJF3068-4N	TERMINAL, SURROUND	
S602	EVQ21405R	SW, TUNER		JK504	SJJ145A-1	JACK, HEADPHONES	
S603	EVQ21405R	SW, AUX 2		JK601	RJJ33T01	SYNCHRO, SYSTEM CONT. IN	
S604	EVQ21405R	SW, TAPE		JK602	RJJ33T01	SYNCHRO, SYSTEM CONT. OUT	
S605	EVQ21405R	SW, AUX 1		JK603	RJJ33T01	SYNCHRO, CONTROL TO TURNTABL	
S607	EVQ21405R	SW, CD		JK701	RJS1A0203-0	CONNECTOR, TAPE	
S610	EVQ21405R	SW, VOLUME PRESET		JK901 △	SJS9231-1B	AC INLET	(E, EB, EG, GC)
S611	EVQ21405R	SW, SUPER BASS		JK901 △	SJS9234B	AC INLET	(GN)
S614	EVQ21405R	SW, SURROUND		JK902 △	SJS9333B	AC OUTLET	(E, EG)
S701 △	ESB8249V	SW, POWER		JK902 △	SJS9332B	AC OUTLET	(EB)
S702 △	ESE37263	SW, VOLTAGE SELECTOR	(GC)	JK902 △	SJS9233B	AC OUTLET	(GC)
		CONNECTOR				FUSE HOLDER	
J201A	RJU060G07T	SOCKET		FC1, 2 △	SJT388	FUSE HOLDER	
J202A	RJU060G07T	SOCKET		FC3, 4 △	SJT388	FUSE HOLDER	(E, EB, EG, GC)
J203A	RJU060G07T	SOCKET					
J204A	RJU060G07T	SOCKET					
J207A	RJU060G05T	SOCKET					
J208A	RJU060G05T	SOCKET					
J209A	RJU060G05T	SOCKET					
J501A	RJS1A1705	CONNECTOR (5P)					
J551	SJT3213	CONNECTOR	(EB)				
J601A	RJU003K010M1	SOCKET (10P)					
J602A	RJU003K010M1	SOCKET (10P)					
J603A	RJU003K008M1	SOCKET (8P)					
J631A	SJT30549BB1	CONNECTOR					
J632A	SJT30549BB1	CONNECTOR					
J633A	SJT30549BB1	CONNECTOR					
J701A	RJS1A1704	SOCKET (4P)					
J201B	RJT060B07	CONNECTOR					
J202B	RJT060B07	CONNECTOR					
J203B	RJT060B07	CONNECTOR					
J204B	RJT060B07	CONNECTOR					
J207B	RJT060B05	CONNECTOR					
J208B	RJT060B05	CONNECTOR					
J209B	RJT060B05	CONNECTOR					
J601B	RJT003K010M1	CONNECTOR (10P)					
J602B	RJT003K010M1	CONNECTOR (10P)					


Notes : * Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1K=1,000(OHM) , 1M=1,000k(OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R107, 108	ERDS2TJ471	1/4W 470	R413, 414	ERDS2TJ153	1/4W 15K	R550	ERDS2TJ102	1/4W 1K
R109, 110	ERDS2TJ473	1/4W 47K	R415, 416	ERDS2TJ222	1/4W 2. 2K	R551	ERDS2TJ104	1/4W 100K
R111, 112	ERDS2TJ331	1/4W 330	R417, 418	ERDS2TJ221	1/4W 220	R554	ERD25FJ470	1/4W 47 Δ
R113, 114	ERDS2TJ560T	1/4W 56	R419, 420	ERDS2TJ273	1/4W 27K	R601	ERDS2TJ223	1/4W 22K
R115, 116	ERDS2TJ184T	1/4W 180K	R421, 422	ERDS2TJ470	1/4W 47	R602-604	ERDS2TJ393	1/4W 39K
R117, 118	ERDS2TJ123	1/4W 12K	R423, 424	ERDS2TJ153	1/4W 15K	R605	ERDS2TJ223	1/4W 22K
R119, 120	ERDS2TJ224T	1/4W 220K	R425-428	ERDS2TJ152	1/4W 1. 5K	R606-608	ERDS2TJ393	1/4W 39K
R121, 122	ERDS2TJ102	1/4W 1K	R429, 430	ERDS2TJ333	1/4W 33K	R609-612	ERDS2TJ100	1/4W 10
R123, 124	ERDS2TJ471	1/4W 470	R431, 432	ERDS2TJ102	1/4W 1K	R613	ERDS2TJ120T	1/4W 12
R201, 202	ERDS2TJ472	1/4W 4. 7K	R433	ERDS2TJ105T	1/4W 1M	R614	ERDS2TJ150T	1/4W 15
R203-206	ERDS2TJ102	1/4W 1K	R434	ERDS2TJ334	1/4W 330K	R615, 616	ERDS2TJ151	1/4W 150
R207-210	ERDS2TJ822	1/4W 8. 2K	R435, 436	ERDS2TJ102	1/4W 1K	R617-620	ERDS2TJ104	1/4W 100K
R213, 214	ERDS2TJ822	1/4W 8. 2K	R437	ERDS2TJ105T	1/4W 1M	R621, 622	ERDS2TJ103	1/4W 10K
R215-218	ERDS2TJ102	1/4W 1K	R438	ERDS2TJ334	1/4W 330K	R623	ERDS2TJ222	1/4W 2. 2K
R232, 233	ERDS2TJ272T	1/4W 2. 7K	R439, 440	ERDS2TJ152	1/4W 1. 5K	R624	ERDS2TJ332	1/4W 3. 3K
R249	ERDS2TJ103	1/4W 10K	R441, 442	ERDS2TJ222	1/4W 2. 2K	R625	ERDS2TJ103	1/4W 10K
R250	ERDS2TJ223	1/4W 22K	R443, 444	ERDS2TJ102	1/4W 1K	R626	ERDS2TJ332	1/4W 3. 3K
R251, 252	ERDS2TJ473	1/4W 47K	R445	ERDS2TJ222	1/4W 2. 2K	R627	ERDS2TJ222	1/4W 2. 2K
R253, 254	ERDS2TJ183T	1/4W 18K	R446	ERDS2TJ104	1/4W 100K	R628	ERDS2TJ332	1/4W 3. 3K
R255, 256	ERDS2TJ153	1/4W 15K	R447	ERDS2TJ334	1/4W 330K	R629	ERDS2TJ103	1/4W 10K
R257, 258	ERDS2TJ473	1/4W 47K	R448	ERDS2TJ105T	1/4W 1M	R630	ERDS2TJ102	1/4W 1K
R271, 272	ERDS2TJ152	1/4W 1. 5K	R449	ERDS2TJ332	1/4W 3. 3K	R631	ERDS2TJ103	1/4W 10K
R297, 298	ERDS2TJ182	1/4W 1. 8K	R450	ERDS2TJ103	1/4W 10K	R632	ERDS2TJ222	1/4W 2. 2K
R301-304	ERDS2TJ223	1/4W 22K	R471-474	ERDS2TJ334	1/4W 330K	R633	ERDS2TJ103	1/4W 10K
R305, 306	ERDS2TJ224T	1/4W 220K	R477, 478	ERDS2TJ102	1/4W 1K	R634	ERDS2TJ822	1/4W 8. 2K
R307, 308	ERDS2TJ332	1/4W 3. 3K	R500	ERDS2TJ100	1/4W 10	R635	ERDS2TJ393	1/4W 39K
R309, 310	ERDS2TJ223	1/4W 22K	R501	ERDS2TJ104	1/4W 100K	R636	ERDS2TJ332	1/4W 3. 3K
R311, 312	ERDS2TJ393	1/4W 39K	R502	ERDS2TJ105T	1/4W 1M	R637	ERDS2TJ103	1/4W 10K
R313-315	ERDS2TJ223	1/4W 22K	R507, 508	ERDS2TJ222	1/4W 2. 2K	R638	ERDS2TJ104	1/4W 100K
R316	ERDS2TJ622T	1/4W 6. 2K	R509, 510	ERDS2TJ563	1/4W 56K	R639	ERDS2TJ105T	1/4W 1M
R317	ERDS2TJ562	1/4W 5. 6K	R511, 512	ERDS2TJ182	1/4W 1. 8K	R640	ERDS2TJ102	1/4W 1K
R318	ERDS2TJ123	1/4W 12K	R513, 514	ERDS2TJ563	1/4W 56K	R641	ERDS2TJ223	1/4W 22K
R319	ERDS2TJ224T	1/4W 220K	R515, 516	ERDS2TJ223T	1/4W 22K (EB)	R642	ERDS2TJ103	1/4W 10K
R321, 322	ERDS2TJ332	1/4W 3. 3K	R517	ERDS2TJ563T	1/4W 56K (EB)	R643	ERDS2TJ105T	1/4W 1M
R324	ERDS2TJ332	1/4W 3. 3K	R518	ERDS2TJ684	1/4W 680K	R646	ERDS2TJ223	1/4W 22K
R325, 326	ERDS2TJ392T	1/4W 3. 9K	R519	ERDS2TJ154	1/4W 150K	R653-655	ERDS2TJ331	1/4W 330
R327, 328	ERDS2TJ104	1/4W 100K	R520	ERDS2TJ153T	1/4W 15K (EB)	R659	ERDS2TJ272T	1/4W 2. 7K
R329	ERDS2TJ332	1/4W 3. 3K	R521	ERDS2TJ103T	1/4W 10K (EB)	R661	ERDS2TJ331	1/4W 330
R331	ERDS2TJ105T	1/4W 1M	R522	ERDS1FVJ680T	1/2W 68 (EB) Δ	R662	ERDS2TJ101	1/4W 100
R332	ERDS2TJ334	1/4W 330K	R524	ERDS2TJ105T	1/4W 1M	R697-699	ERDS2TJ101	1/4W 100
R401, 402	ERDS2TJ823T	1/4W 82K	R525, 526	ERD25FVJ100T	1/4W 10 Δ	R701, 702	ERDS1FVJ332T	1/2W 3. 3K Δ
R403, 404	ERDS2TJ683	1/4W 68K	R527, 528	ERDS1FVJ100T	1/2W 10 Δ	R703	ERD25FJ101	1/4W 100 Δ
R405, 406	ERDS2TJ393	1/4W 39K	R531, 532	ERG2SJ331P	2W 330	R704	ERDS2TJ473	1/4W 47K
R407, 408	ERDS2TJ333	1/4W 33K	R533, 534	ERDS2TJ562	1/4W 5. 6K	R705	ERDS2TJ103	1/4W 10K
R409, 410	ERDS2TJ103	1/4W 10K	R535-538	ERDS2TJ472	1/4W 4. 7K	R706	ERDS1FVJ2R2T	1/2W 2. 2 Δ
R411, 412	ERDS2TJ332	1/4W 3. 3K	R539	ERDS2TJ102	1/4W 1K	R707	ERDS1FVJ3R3T	1/2W 3. 3 Δ
			R540	ERDS2TJ334	1/4W 330K	R709	ERDS2TJ332	1/4W 3. 3K
			R542	ERDS2TJ103	1/4W 10K	R710	ERDS1FVJ331T	1/2W 330 Δ
			R543	ERDS1FVJ560T	1/2W 56 (EB) Δ	R711	ERDS2TJ102	1/4W 1K

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R713	ERDS2TJ2R2T	1/4W 2.2	C221-226	ECBT1H101KB5	50V 100P	C537, 538	ECBT1H102KB5	50V 1000P
R718	ERDS1FVJ820T	1/2W 82 Δ	C229, 230	ECBT1H101KB5	50V 100P	C543, 544	ECBT1H102KB5	50V 1000P
R727	ERDS2TJ104	1/4W 100K	C231, 232	ECBT1E103ZF	25V 0.01U	C597, 598	ECBT1H102KB5	50V 1000P
R1301, 1302	ERDS2TJ102	1/4W 1K	C250	ECEA1CKA220B	16V 22U	C601	ECBT1E103ZF	25V 0.01U
R1303, 1304	ERDS2TJ822	1/4W 8.2K	C251, 252	ECEA1HKA3R3B	50V 3.3U	C602	ECEA0JU102	6.3V 1000U
R1305, 1306	ERDS2TJ223	1/4W 22K	C253, 254	ECEA1HKA47B	50V 0.47U	C603	ECEA1HKA3R3B	50V 3.3U
R1307, 1308	ERDS2TJ392T	1/4W 3.9K	C255, 256	ECBT1H180J5	50V 18P	C604	ECEA1VKA100B	35V 10U
R1309, 1310	ERDS2TJ182	1/4W 1.8K	C258	ECBT1E223ZF	25V 0.022U	C605	ECBT1E103ZF	25V 0.01U
R1311, 1312	ERDS2TJ821	1/4W 820	C271, 272	ECBT1H101KB5	50V 100P	C606, 607	ECEA1HKA010B	50V 1U
R1313, 1314	ERDS2TJ333	1/4W 33K	C273, 274	ECEA1CKA220B	16V 22U	C608	ECBT1H101KB5	50V 100P
R1501, 1502	ERDS2TJ123	1/4W 12K	C297, 298	ECBT1H151KB5	50V 150P	C651	ECBT1H104ZF5	50V 0.1U
R1503, 1504	ERDS2TJ103	1/4W 10K	C301, 302	ECA1HAP3R3B	50V 3.3U	C653	ECBT1H470J5	50V 47P
R1505, 1506	ERDS2TJ101	1/4W 100	C303	ECBT1H680J5	50V 68P	C700	ECKWNS103ZV	500V 0.01U Δ
R1507, 1508	RREEMKR10VC	2W 0.1	C304	ECQV1H823JZ	50V 0.082U	C701	ECBT1H102KB5	50V 1000P
R1509-1512	ERDS2TJ103	1/4W 10K	C305	ECEA1HKA3R3B	50V 3.3U	C702	ECKR1H103ZF5	50V 0.01U
R1513-1516	ERDS2TJ104	1/4W 100K	C306	ECBT1H221KB5	50V 220P	C703, 704	ECEA1EKA100B	25V 10U
R1517, 1518	ERDS2TJ472	1/4W 4.7K	C307	ECEA1HKA3R3B	50V 3.3U	C705, 706	ECEA1CKA100B	16V 10U
R1519, 1520	ERDS2TJ272T	1/4W 2.7K	C309, 310	ECBT1H820KB5	50V 82P	C707	ECBT1E103ZF	25V 0.01U
R1521-1526	ERDS2TJ563	1/4W 56K	C311, 312	ECA1HAP3R3B	50V 3.3U	C708	ECEA1CKA100B	16V 100U
R1527, 1528	ERDS2TJ103	1/4W 10K	C313, 314	ECBT1E103ZF	25V 0.01U	C709	ECEA1HKA2R2B	50V 2.2U
R1529, 1530	ERDS2TJ392T	1/4W 3.9K	C395, 396	ECBT1H120J5	50V 12P	C710	ECBT1E223ZF	25V 0.022U
R1531, 1532	ERDS2TJ223	1/4W 22K	C398, 399	ECBT1E103ZF	25V 0.01U	C711, 712	ECEA1HJ332UB	50V 3300U
R1533, 1534	ERDS2TJ472	1/4W 4.7K	C411, 412	ECFR1E123KR	25V 0.012U	C713	ECQE1104KF3	100V 0.1U
R1535, 1536	ERDS2TJ223	1/4W 22K	C413, 414	ECEA1HKA2R2B	50V 0.22U	C715	ECEA1VKA100B	35V 10U
R1537, 1538	ERDS2TJ103	1/4W 10K	C415, 416	ECFR1E682KR	25V 6800P	C731	ECFR1E104ZF5	25V 0.1U
R1539	ERDS2TJ333	1/4W 33K	C417, 418	ECFR1E272KR	25V 2700P	C1301, 1302	ECFR1E123KR	25V 0.012U
R1540	ERDS2TJ102	1/4W 1K	C419, 420	ECFR1E333KR	25V 0.033U	C1303, 1304	ECFR1E683KR	25V 0.068U
R1541, 1542	ERDS2TJ752T	1/4W 7.5K	C421, 422	ECEA1HKA3R3B	50V 3.3U	C1305, 1306	ECFR1E472KR	25V 4700P
R1551, 1552	ERDS2TJ223	1/4W 22K	C423, 424	ECA1HAP100B	50V 10U	C1307, 1308	ECFR1E223KR	25V 0.022U
R1553, 1554	ERDS2TJ103	1/4W 10K	C427	ECEA0JKA470B	6.3V 47U	C1309, 1310	ECA1HAP010B	50V 1U
R1555, 1556	ERDS2TJ562	1/4W 5.6K	C432	ECEA1CKA100B	16V 10U	C1501-1504	ECEA1HKA2R2B	50V 2.2U
R1557, 1558	ERDS2TJ103	1/4W 10K	C433, 434	ECBT1E103ZF	25V 0.01U	C1505, 1506	ECFR1E223KR	25V 0.022U
R1559, 1560	ERDS2TJ273	1/4W 27K	C451, 452	ECEA1CKA220B	16V 22U	C1507, 1508	ECBT1H820KB5	50V 82P
R1561-1564	ERDS2TJ102	1/4W 1K	C471, 472	ECA1HAP3R3B	50V 3.3U	C1509-1512	ECFR1E104KR	25V 0.1U
R1565, 1566	ERDS2TJ123	1/4W 12K	C473, 474	ECBT1H101KB5	50V 100P	C1513, 1514	ECBT1H331KB5	50V 330P
R1567, 1568	ERDS2TJ683	1/4W 68K	C475, 476	ECBT1H821KB5	50V 820P	C1515, 1516	ECBT1C103MS5	16V 0.01U
			C477, 478	ECBT1H680J5	50V 68P	C1517, 1518	ECBT1E103ZF	25V 0.01U
			C479, 480	ECEA1HKA3R3B	50V 3.3U	C1521A	ECA1HAP2R2B	50V 2.2U
			C483, 484	ECBT1E103ZF	25V 0.01U	C1521	ECBT1H102KB5	50V 1000P
C107, 108	ECBT1H101KB5	50V 100P	C501, 502	ECBT1H331KB5	50V 330P	C1522A	ECA1HAP2R2B	50V 2.2U
C109, 110	ECBT1H102KB5	50V 1000P	C503, 504	ECBT1H151KB5	50V 150P	C1522	ECBT1H102KB5	50V 1000P
C111, 112	ECA1EAP330B	25V 33P	C505, 506	ECA1HAP2R2B	50V 2.2U	C1551, 1552	ECA1HAP3R3B	50V 3.3U
C115, 116	ECFR1E223KR	25V 0.022U	C507, 508	ECBT1H688K5	50V 6.8P	C1553, 1554	ECBT1H151KB5	50V 150P
C117, 118	ECFR1E682KR	25V 6800P	C509, 510	ECKT1H223ZF	50V 0.022U	C1555, 1556	ECEA1HKA2R2B	50V 2.2U
C119, 120	ECA1HAP010B	50V 1U	C513	ECEA1CKA100B	16V 10U (EB)	C1557, 1558	ECQV1H124JZ3	50V 0.12U
C121, 122	ECBT1E103ZF	25V 0.01U	C514	ECEA0JKA470B	6.3V 47U	C1559, 1560	ECBT1E103ZF	25V 0.01U
C200	ECBT1E223ZF	25V 0.022U	C516-518	ECBT1E103ZF	25V 0.01U			
C201	ECBT1H470J5	50V 47P	C519	ECA1HAP330B	55V 33U			
C203, 204	ECBT1E103ZF	25V 0.01U	C520	ECA2AAP100B	100V 10U			
C205, 206	ECBT1H180J5	50V 18P	C523, 524	ECA1HAP3R3B	50V 3.3U			
C207, 208	ECBT1H151KB5	50V 150P	C525, 526	ECBT1H331KB5	50V 330P			
C209-216	ECBT1H101KB5	50V 100P	C535, 536	ECBT1E223ZF	25V 0.022U			

CABINET PARTS LOCATION

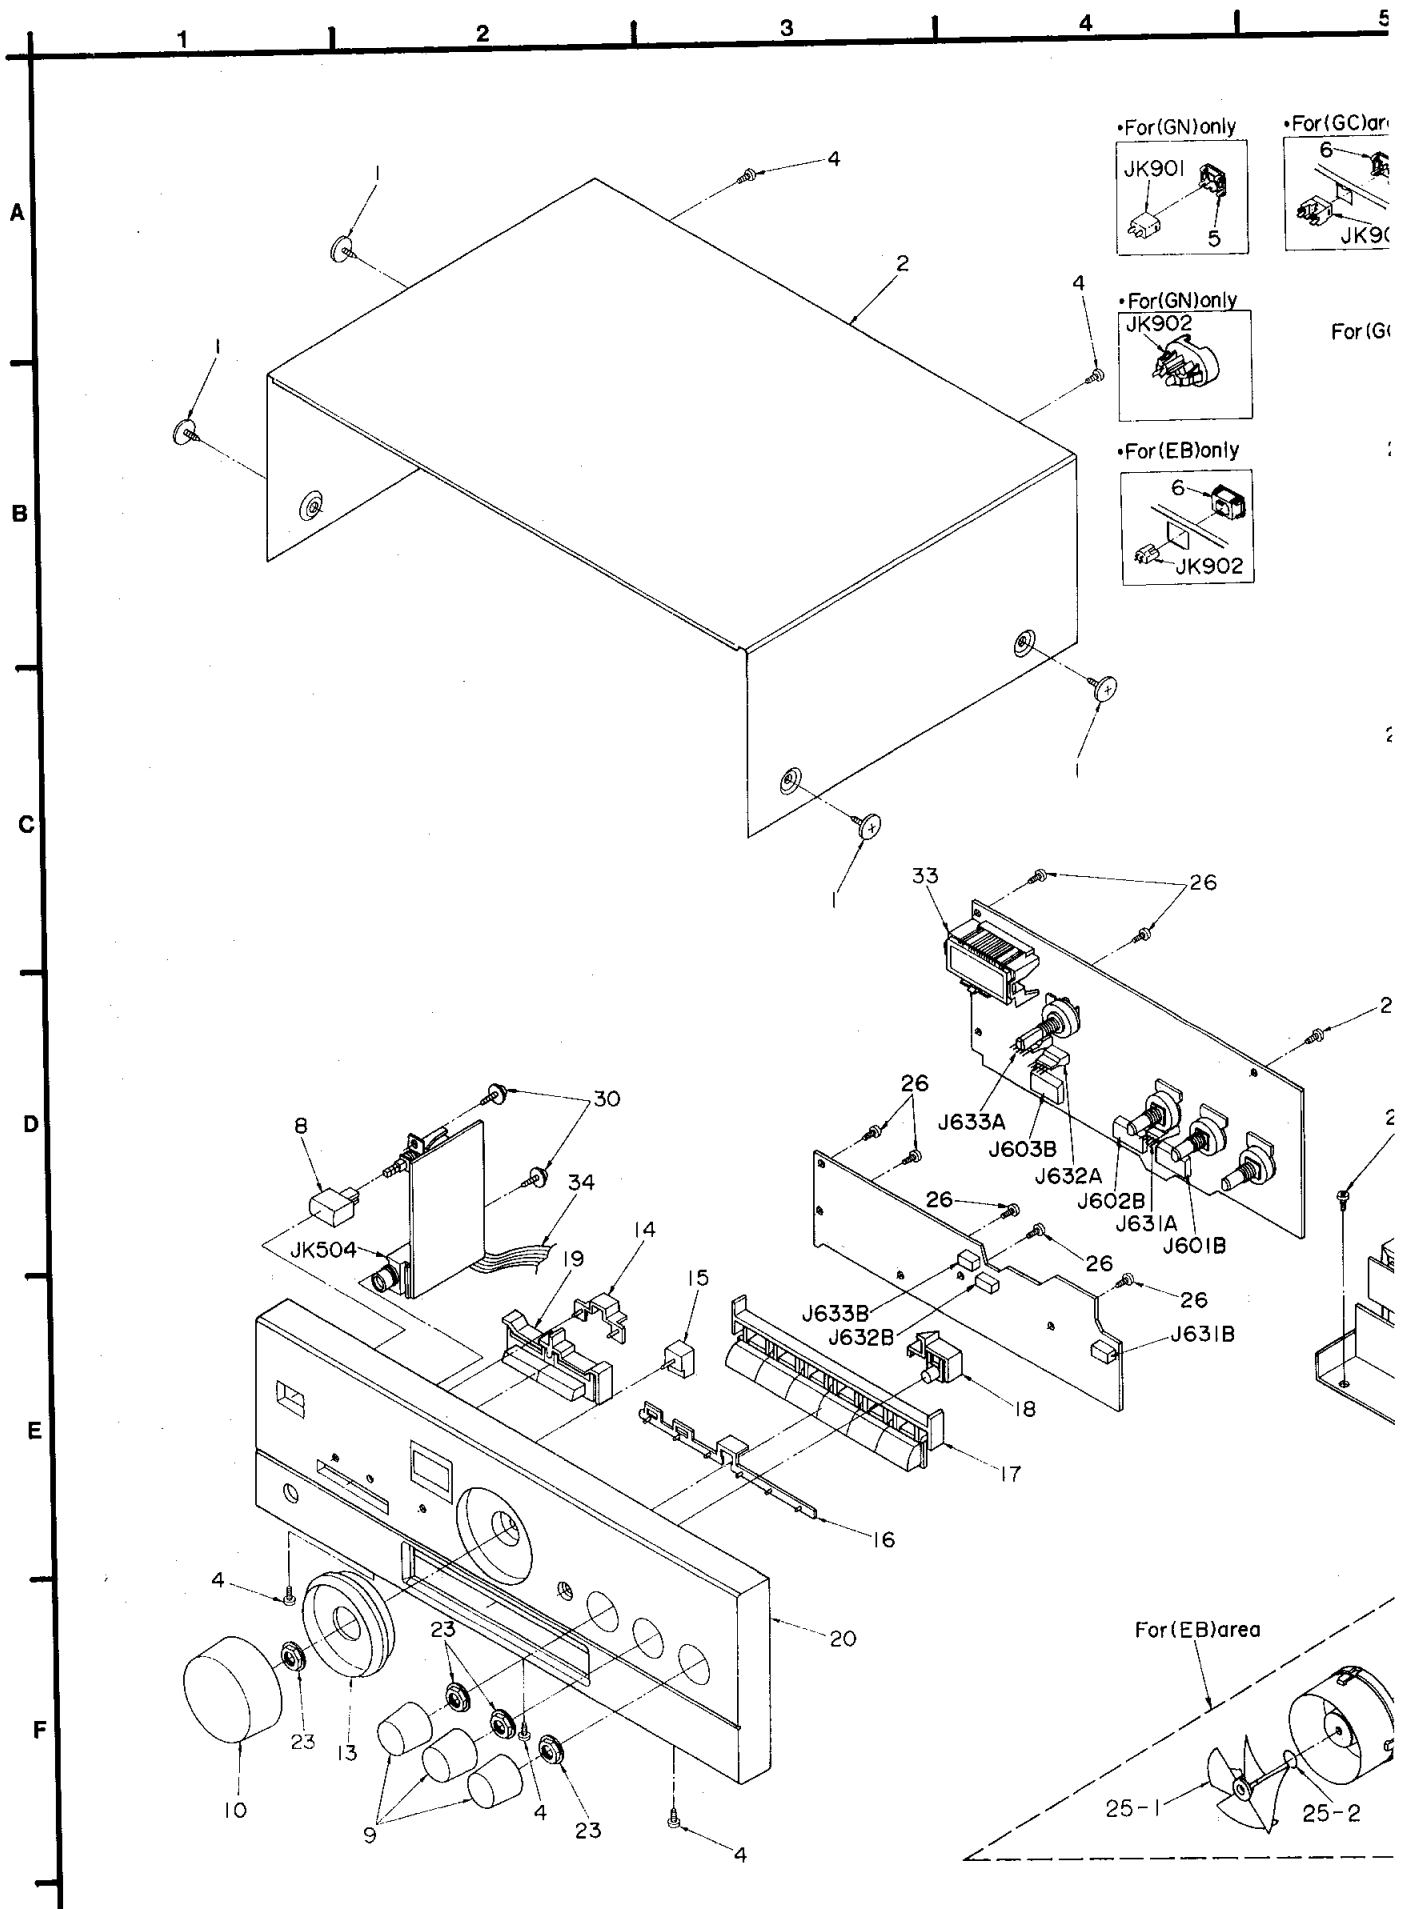


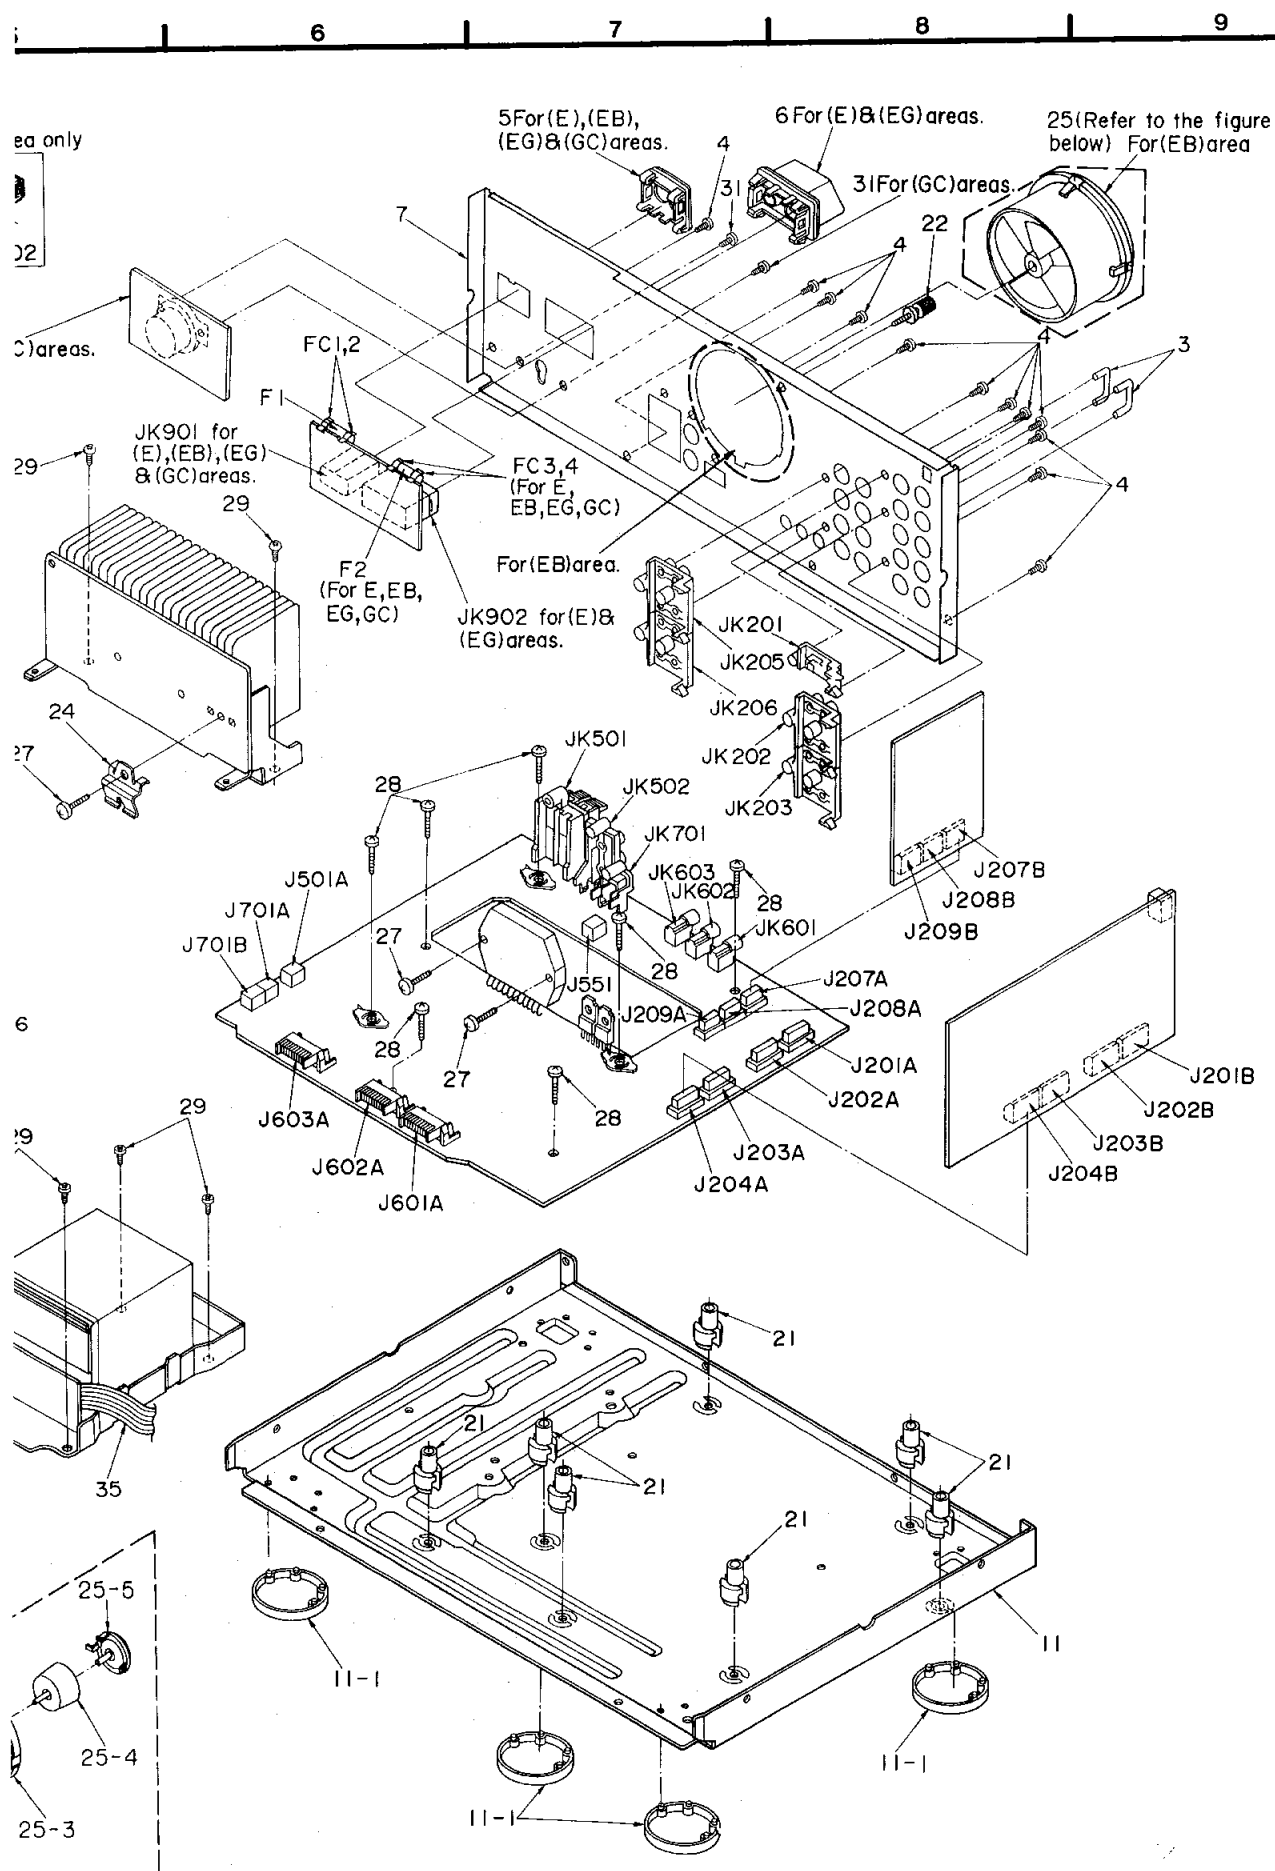

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS	
1	RHD30007	SCREW	
2	RKMD024A-2K	CABINET	
3	SJP9205-2Y	SHORTING PIN	
4	XTBS3+8JFZ1	SCREW	
5	SJS9234A	AC INLET COVER	(GN)
5	SJS9231A	AC INLET COVER	(E, EB, EG, GC)
6	SJS9332A	AC OUTLET COVER	(EB)
6	SJS9233A	AC OUTLET COVER	(GC)
6	RJS1A4602	AC OUTLET COVER	(GN)
6	SJS9333A	AC OUTLET COVER	(E, EG)
7	RGR0105F-B1	REAR PANEL	(EB)
7	RGR0105K-B1	REAR PANEL	(EG)
7	RGR0105L-1	REAR PANEL	(GC)
7	RGR0105M-1	REAR PANEL	(GN)
7	RGR0105K-A1	REAR PANEL	(E)
8	RGU0030	POWER BUTTON	
9	RGW0072	KNOB, TONE	
10	RGW0076-1	KNOB, MAIN VOL	
11	RFKJUX502E-K	CHASSIS ASS'Y	
11-1	RKA0011-2	FOOT	
13	RGK0315A-K	ORNAMENT	
14	RGL0132-C	PANEL LIGHT	
15	RGL0133-C	PANEL LIGHT	
16	RGL0137-C	PANEL LIGHT	
17	RGU0470B-K	BUTTON, SELECT	
18	RGU0471-K1	BUTTON, VOL PRESET	
19	RGU0591A-K	BUTTON, SUPER BASS	
20	RFKGUX102E	FRONT PANEL ASS'Y	
21	SHE187-2	HOLDER	
22	SNE2123	GND SCREW	
23	SNE4021-1	NUT	
24	SUS894-1	ANGLE	
25	SYE1128-2	FAN ASS'Y	(EB)
25-1	SHE232	FAN	(EB)
25-2	SUS271	SPRING	(EB)
25-3	SHE233	FAN CASE	(EB)
25-4	MDN-4RB4MRC	MOTOR	(EB)
25-5	SHE234	CAP	(EB)
26	XTBS26+8J	SCREW	
27	XTB3+16JFZ	SCREW	
28	XTB3+20JFZ	SCREW	
29	XTB3+8JFZ	SCREW	
30	XTWS3+8T	SCREW	
31	XYN3+C6FZ	SCREW	(GC)
33	RMN0102	FL HOLDER	
34	RWJ1805130KQ	FLAT CABLE	
35	RWJ1808110KQ	FLAT CABLE	

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIAL	
P1	RPG0838	PACKING CASE	
P2	RPND412	PAD ASS'Y	
P3	SPSD152	ACCESSORY BOX	
P4	XZB60X65A01Z	PROTECTION COVER	
		ACCESSORIES	
A1	RQF1081	INSTRUCTION MANUAL ASS'Y	(E)
A1	RQF1082	INSTRUCTION MANUAL ASS'Y	(EB)
A1	RQF1083	INSTRUCTION MANUAL ASS'Y	(EG)
A1	RQF1084	INSTRUCTION MANUAL ASS'Y	(GC)
A1	RQF1085	INSTRUCTION MANUAL ASS'Y	(GN)
A1-1	RQA0013	WARRANTY CARD	(E, EG, EB)
A1-1	SQX7186	WARRANTY CARD	(GN)
A1-2	RQCB0169	CERVICENTER LIST	
A1-3	RFKSUX102E-K	INSTRUCTION MANUAL	(E)
A1-3	RQT0988-B	INSTRUCTION MANUAL	(EB, GN)
A1-3	RQT0989-D	INSTRUCTION MANUAL	(EG)
A1-3	RQT0986-G	INSTRUCTION MANUAL	(GC)
A1-4	SPB1061	POLYETHYLENE COVER	
A2 △	SJA187	AC CORD	(E, EG)
A2 △	SJA188	AC CORD	(EB)
A2 △	RJA0004	AC CORD	(GC)
A2 △	SJA173	AC CORD	(GN)
A3 △	SJP9215	AC PLUG ADAPTOR	(GC)

■ PACKAGING

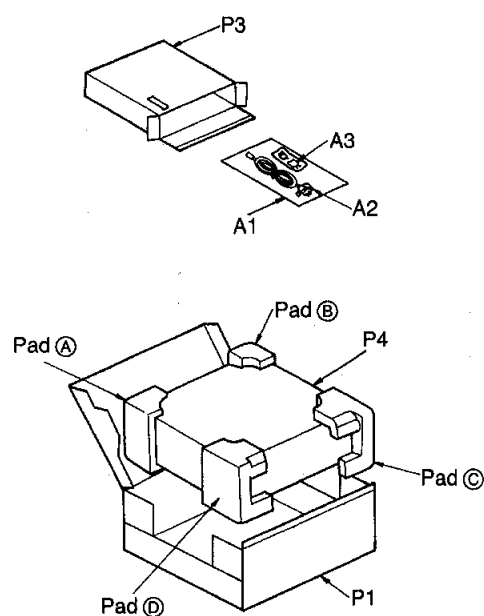

Pad (A) (B) (C) (D) Assembly: RPN0412