

# ZB-UPS01

# ZigBee Transceiver Module

User Manual

Version 0.9

---

## TABLE OF CONTENTS

<b>1</b>	<b>GENERAL INFORMATION .....</b>	<b>3</b>
<b>2</b>	<b>POWER SAVING MODES .....</b>	<b>4</b>
<b>3</b>	<b>CONNECTORS PIN CONFIGURATION ... ..</b>	<b>5</b>
<b>4</b>	<b>ELECTRICAL SPECIFICATIONS .....</b>	<b>6</b>
<b>5</b>	<b>DESIGN GUIDE TO AVOID RF INTERFERENCE .....</b>	<b>7</b>
<b>6</b>	<b>RF PERFORMANCE TEST DATA .....</b>	<b>10</b>
<b>7</b>	<b>REFERENCE REFLOW TEMPETURE CURVE.....</b>	<b>11</b>
<b>8</b>	<b>REFERENCE DOCUMENTS.....</b>	<b>11</b>

Revised Date: Apr.14, 2010

## 1. GENERAL INFORMATION

The ZB-UPS01 is a miniature 2.4 GHz Direct Sequence Spread Spectrum 802.15.4 transceiver. It includes all RF hardware and a micro-controller to manage the communications link. The micro-controller manages all communications task including configuration, data packaging, and clear channel selection. The result is a complete wireless data communications solution.

The ZB-UPS01 package is unique because of its small form factor (32 x 23 mm<sup>2</sup>), It has an on-board chip antenna and the availability of external dipole antenna I-PEX connector. No competitive products can offer a solution as flexible, convenient, and easy to integrate.

### Models

- ZB-UPS01: Includes PA/LNA, on-board chip antenna, MCU SiliconLabs C8051F340

### Features

- 32 x 23 mm<sup>2</sup> PCBA package with 2 connectors
- Utilizes globally available 2.4 GHz ISM band
- Programmable Transmit Power Output, max. 9dBm.
- Complete IEEE 802.15.4 Spec. compliant.
- Typical Receiver Sensitivity –101dBm.
- Typical Data Rate 250Kbps.
- Multiple Low Power Operating modes
- Meet RoHS Requirement

## 2. POWER SAVING MODES

The ZB-UPS01 includes several low power operating modes to permit the most efficient use of the available power. Below are descriptions of the available selections.

**ACTIVE:** In Active Mode, all ZB-UPS01 circuits are powered and available for immediate action. This includes the RF receiver which actively monitors the air for an incoming communications request. Two sub-modes are classified as TX-ACTIVE and RX-ACTIVE. The current consumption of TX-ACTIVE is 44 mA while RX-ACTIVE is 38 mA.

### 3. CONNECTORS PIN CONFIGURATION

ZB-UPS01/ZB-UPH01 uses Silicon-Lab C8051F340 as MCU. It is an 8051 base MCU and reserves 10 GPIO pins for external controlling by application. Each pin can be a general I/O pin and programmed it by user directly. Furthermore, most of these pins can be used as special purpose function. Thereof TX, RX pins can be programmed as UART for data communication. For example, user is easy to connect these pins with RS485 transceivers such as 75176, MAX485.

#### J1 Pin Configuration

Signal	Pin	Description
C2CK	1	Clock signal for the C2 Debug Interface.
C2D	2	Bi-directional data signal for the C2 Debug Interface.
VCC	3	3.3 Volt power for the ZB-UPS01
TX	4	GPIO, also used as UART TX.
GND	5	Ground
RX	6	GPIO, also used as UART RX.
GPIO1	7	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC1)
GPIO2	8	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC2)

#### J2 Pin Configuration

Signal	Pin	Description
GPIO3	1	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC3)
GPIO4	2	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC4)
GPIO5	3	Bidirectional input/output Pin.
GPIO6	4	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC5)
GPIO7	5	Bidirectional input/output Pin. It also can be programmed as analog to digital converter (ADC6)
GPIO8	6	Bidirectional input/output Pin.

#### 4. ELECTRICAL SPECIFICATIONS

Absolute Maximum Rating	
VCC	3.6V
Storage temperature	-40°C to +120°C
Operating temperature Range	-30°C to +80°C


WARNING: Exceeding any of these ratings will void the warranty and may damage the device

Parameters	Min	Typ	Max	Units
Supply Voltage for RF, analog and digital circuits	3	3.3	3.6	V
Digital I/O Pin Input High Voltage	2.0			V
Digital I/O Pin Input Low Voltage			0.8	V
Analog Input Pin Input Voltage	0		3.3	V
I/O Pin Output High Current	4	8		mA
I/O Pin Output Low Current	8	14		mA
I/O Pin Input High Current		0	10	uA
I/O Pin Input Low Current		0	10	uA
Current Consumption				
ACTIVE TX Mode @ 9 dBm		44		mA
ACTIVE RX Mode		38		mA
Output Power		9		dBm
Wireless Receive Sensitivity		-101		dBm
Selectable Channels		16		channel
Frequency Band	2.400		2.835	GHz
Antenna Output Impedance		50		Ohms


**5. DESIGN GUIDE TO AVOID RF INTERFERENCE**

When RF module put on an application board(mother board), to minimize the RF signal interference, the best way is to define an isolation area. This area should have no any trace or grounding pad. Here are some layout suggestions for mother board.


Suggestion 1: Place RF board aside mother board. (Let antenna part outside mother board is better) Make sure no trace and grounding pad under the must isolate area. Please see the drawing as below.

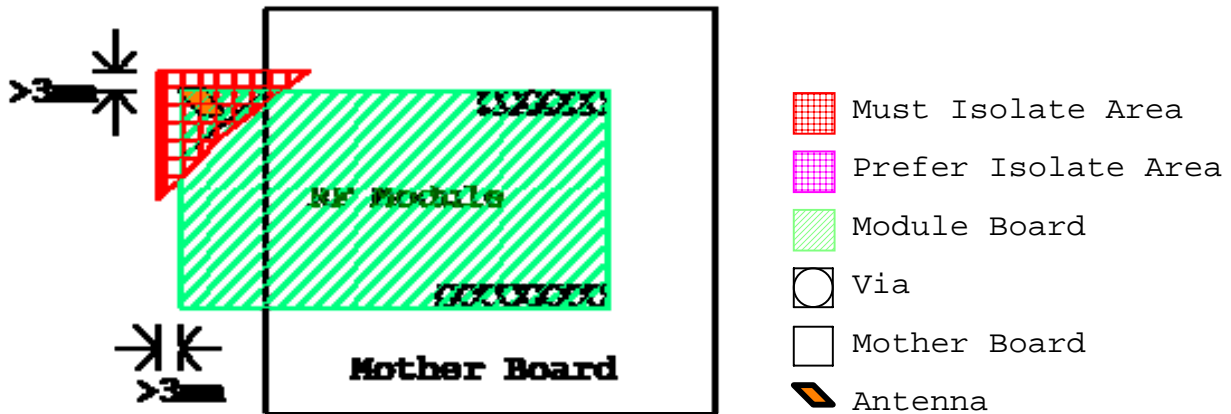



Suggestion 2: Place RF board at the corner of mother board. Make sure no trace and grounding pad under the must isolate area. Please see the drawing as below.

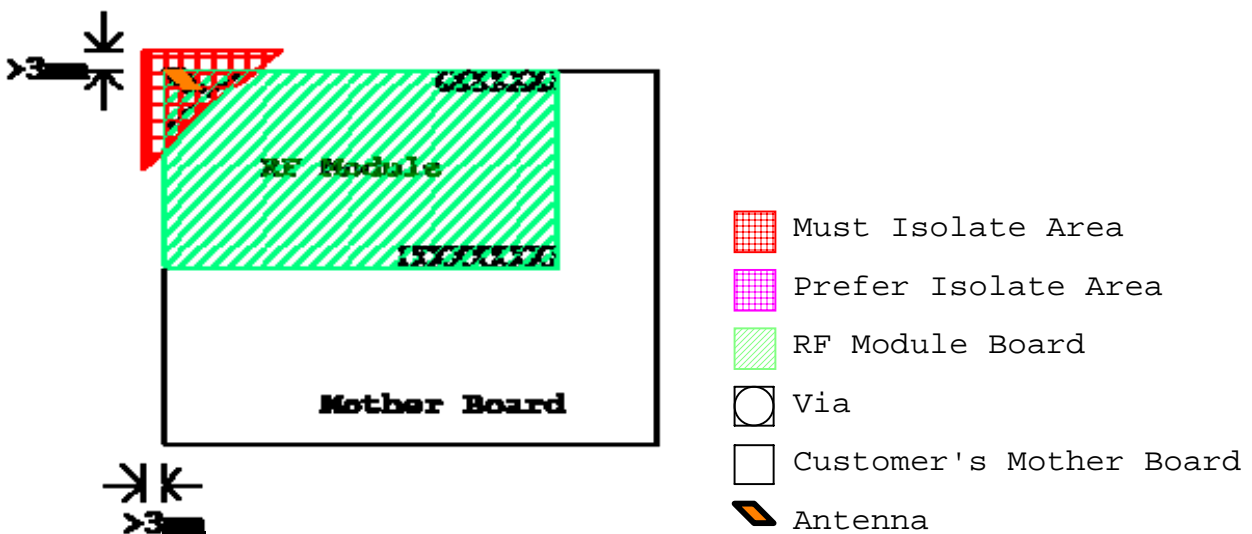



Suggestion 3: If you couldn't put RF board at one side or at the corner of mother board. You must make sure no circuit trace and grounding pad under the must isolate area, and at least reserve extra 3 mm space as safety area. Please see the drawing as below.

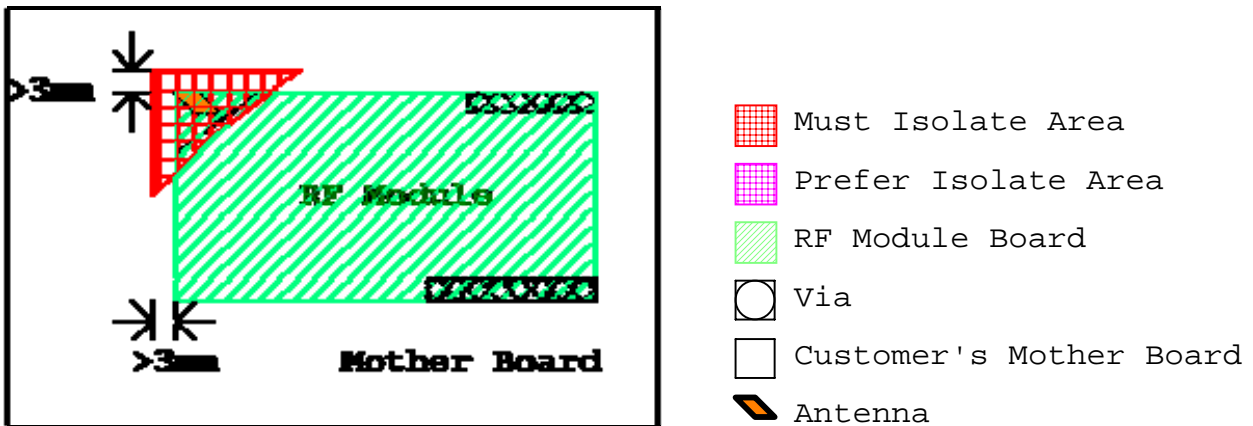



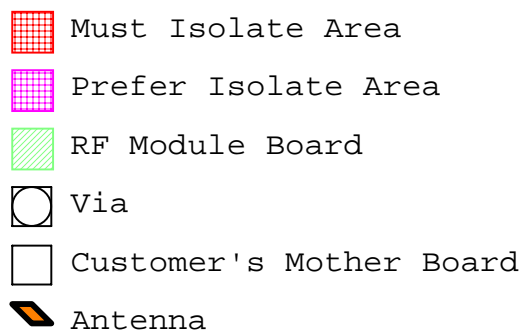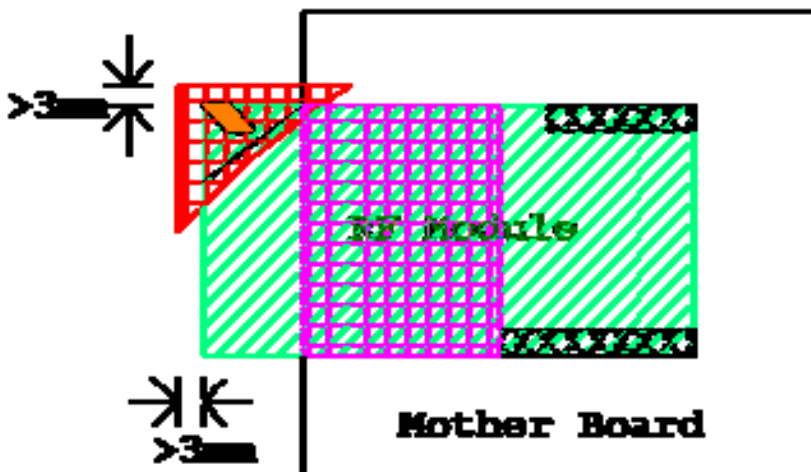



For all of above suggestions, try to extend isolation area from must area to prefer area. Please see the drawing as below. The more isolation area, the better RF performance.



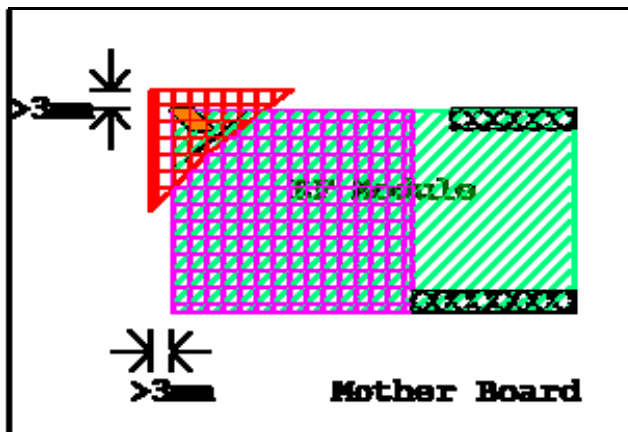
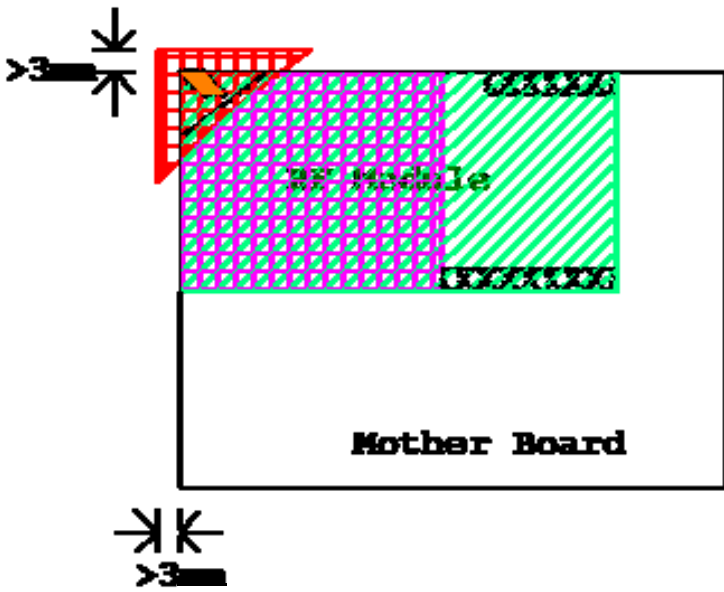





-  Must Isolate Area
-  Prefer Isolate Area
-  RF Module Board
-  Via
-  Customer's Mother Board
-  Antenna

6. RF PERFORMANCE TEST DATA

Return Loss: -17.5dB

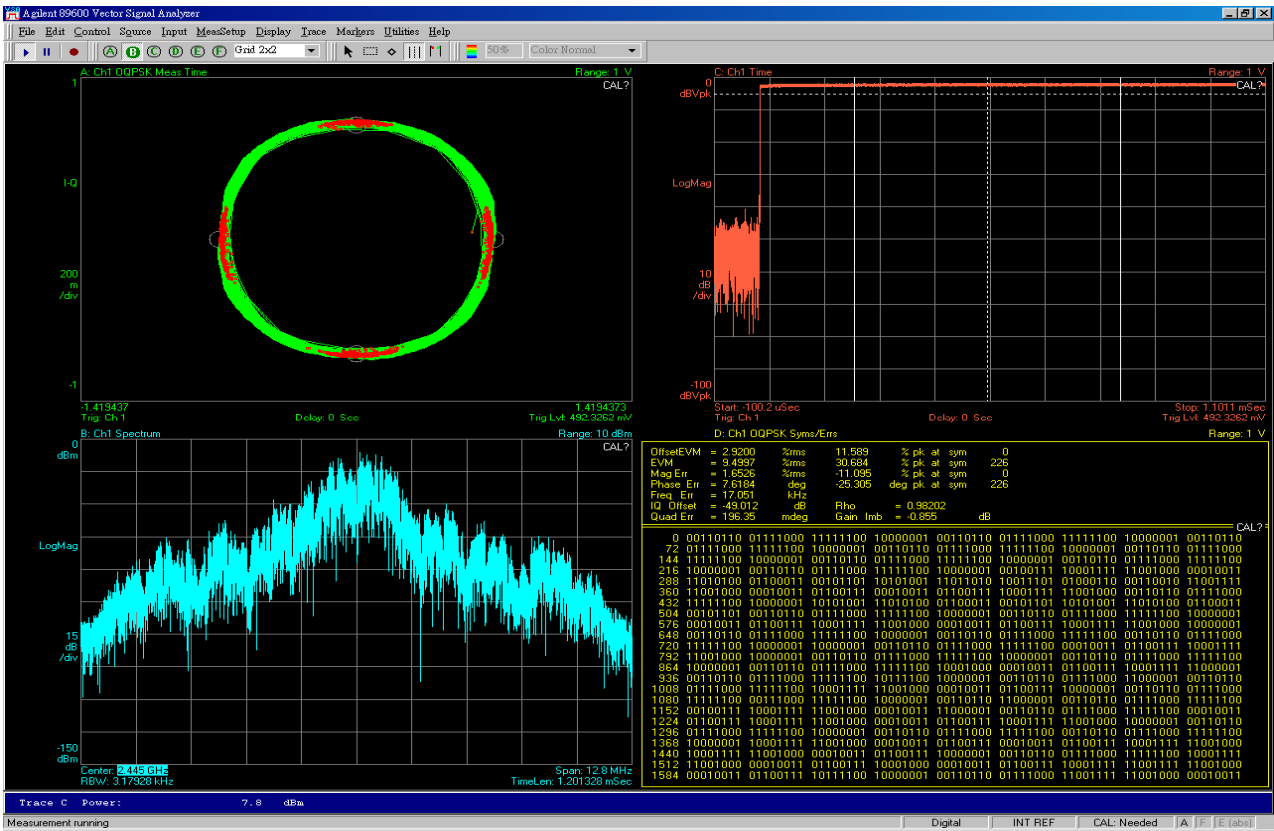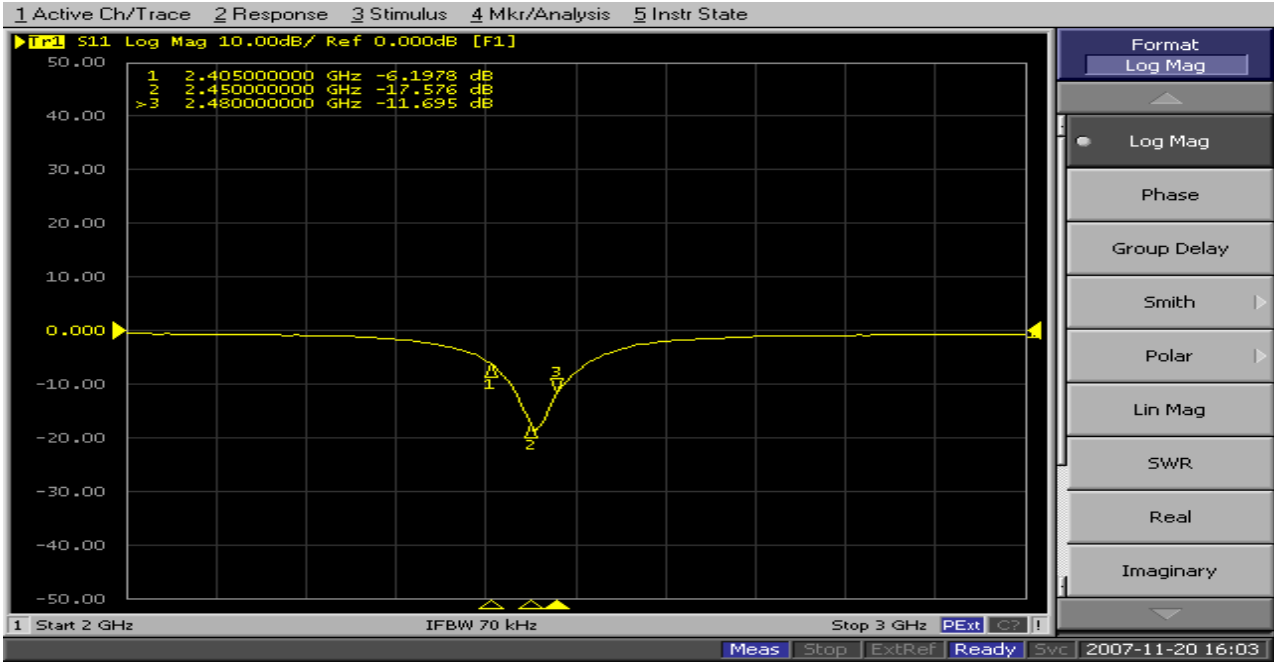

**7. REFERENCE REFLOW TEMPERATURE CURVE**

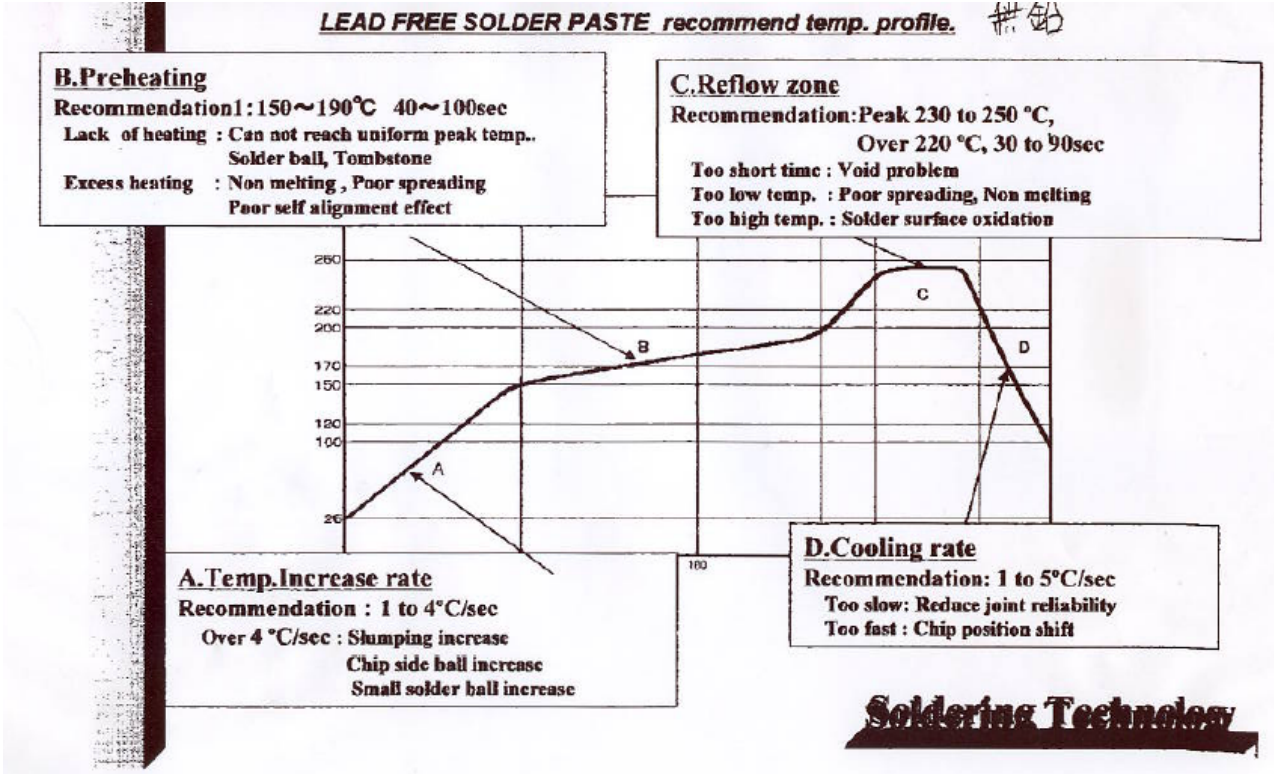

---

## 8. Reference Documents

13.1 UBEC UZ2400 datasheet

13.2 UBEC UP2268 datasheet

13.3 ACX AT5020 datasheet

---

### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

---

**IMPORTANT NOTE:**

This module is intended for OEM integrator. The OEM integrator is still responsible for the FCC compliance requirement of the end product, which integrates this module.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

**USERS MANUAL OF THE END PRODUCT:**

In the users manual of the end product, the end user has to be informed to keep at least 20cm separation with the antenna while this end product is installed and operated. The end user has to be informed that the FCC radio-frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. If the size of the end product is smaller than 8x10cm, then additional FCC part 15.19 statement is required to be available in the users manual: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**LABEL OF THE END PRODUCT:**

The final end product must be labeled in a visible area with the following " Contains TX FCC ID: Q6MZBUPS0001 ". If the size of the end product is larger than 8x10cm, then the following FCC part 15.19 statement has to also be available on the label: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.