

Eclipse Series

RF Technology
rfinfo@rftechnology.com.au

September 2003 Revision 2

T800 Transmitter Operation and Maintenance Manual

This manual is produced by RF Technology Pty Ltd
10/8 Leighton Place, Hornsby NSW 2077 Australia
Copyright © 1997, 1998, 2003 RF Technology

| | |
|--|-----------|
| 1. Operating Instructions | 5 |
| 1.1 Front Panel controls and Indicators | 5 |
| 1.1.1 PTT | 5 |
| 1.1.2 Line | 5 |
| 1.1.3 PWR LED | 5 |
| 1.1.4 TX LED | 5 |
| 1.1.5 ALARM LED | 6 |
| 1.1.6 ALC LED | 6 |
| 1.1.7 REF LED | 6 |
| 1.1.8 TEST MIC | 6 |
| 2. Transmitter Internal Jumper Options | 7 |
| 2.1 JP2: EPROM Type | 7 |
| 2.2 JP3: Dc Loop PTT | 7 |
| 2.3 JP4: Audio Input source | 7 |
| 2.4 JP5: 600 Ω Termination | 7 |
| 2.5 JP6: Input Level Attenuation | 8 |
| 2.6 JP7: Audio Frequency Response | 8 |
| 2.7 JP8: Subaudible Tone Source | 8 |
| 2.8 JP9, JP10, JP11 dc Loop PTT Input Configuration JP3 (1-2) | 8 |
| 2.9 JP16: Direct Digital Input (Rev 4 or Higher) | 8 |
| 2.10 JP17: Bypass Low Pass Filter (Rev 4 or Higher) | 9 |
| 2.11 JP19: Alarm Output (Rev 4 or Higher) | 9 |
| 2.12 JP22: Use Tone- as a Direct Digital Input (Rev 4 or Higher) | 9 |
| 2.13 JP23: Connection of DMTX Board (Rev 4 or Higher) | 9 |
| 3. Transmitter Internal Jumper Options | |
| 3.1 25 Pin Connector | 10 |
| 3.2 Rear Panel Connectors | 11 |
| 4. Channel and Tone Frequency Programming | 12 |
| 5. Circuit Description | 13 |
| 5.1 VCO Section | 13 |
| 5.2 PLL Section | 13 |
| 5.3 Power Amplifier | 14 |
| 5.4 Temperature Protection | 14 |
| 5.5 600 Ω Line Input | 14 |
| 5.6 Direct coupled Audio Input | 14 |
| 5.7 Local Microphone Input | 15 |
| 5.8 CTCSS and Tone Filter | 15 |
| 5.9 Audio Signal Processing | 15 |
| 5.10 PTT and DC Remote Control | 16 |
| 5.11 Microprocessor Controller | 16 |
| 5.12 Voltage Regulator | 17 |
| 6. Field Alignment Procedure | 17 |
| 6.1 Standard Test Conditions | 18 |
| 6.2 VCO Alignment | 18 |
| 6.3 TCXO Calibration | 18 |
| 6.4 Modulation Balance | 19 |

| | | |
|------------|---|-----------|
| 6.5 | Tone Deviation | 19 |
| 6.6 | Deviation | 20 |
| 6.7 | Line Input Level | 20 |
| 6.8 | Output Power | 20 |
| 7 | Specifications | 21 |
| 7.1 | Overall Description | 21 |
| 7.1.1 | Channel Capacity | 21 |
| 7.1.2 | CTCSS | 21 |
| 7.1.3 | Channel Programming | 21 |
| 7.1.4 | Channel Selection | 21 |
| 7.1.5 | Microprocessor | 21 |
| 7.2 | Physical Configuration | 22 |
| 7.3 | Front Panel Controls, Indicators and Test Points | 22 |
| 7.3.1 | Controls | 22 |
| 7.3.2 | Indicators | 22 |
| 7.3.3 | Test Points | 22 |
| 7.4 | Electrical Specifications | 22 |
| 7.4.1 | Power Requirements | 22 |
| 7.4.2 | Frequency Range and Channel Spacing | 23 |
| 7.4.3 | Frequency Synthesizer Step Size | 23 |
| 7.4.4 | Frequency Stability | 23 |
| 7.4.5 | Number of Channels | 23 |
| 7.4.6 | Antenna Impedance | 23 |
| 7.4.7 | Output Power | 23 |
| 7.4.8 | Transmit Duty Cycle | 23 |
| 7.4.9 | Spurious and Harmonics | 23 |
| 7.4.10 | Carrier and Modulation Attack Time | 23 |
| 7.4.11 | Modulation | 23 |
| 7.4.12 | Distortion | 24 |
| 7.4.13 | Residual Modulation and Noise | 24 |
| 7.4.14 | 600 Ω Line Input Sensitivity | 24 |
| 7.4.15 | HI-Z Input | 24 |
| 7.4.16 | Test Microphone Input | 24 |
| 7.4.17 | External Tone Input | 24 |
| 7.4.18 | External ALC Input | 24 |
| 7.4.19 | T/R Relay Driver | 24 |
| 7.4.20 | Channel Select Input/Output | 24 |
| 7.4.21 | DC Remote Keying | 25 |
| 7.4.22 | Programmable No-Tone Period | 25 |
| 7.4.23 | Firmware Timers | 25 |
| 7.4.24 | CTCSS | 25 |
| 7.5 | Connectors | 25 |
| 7.5.1 | Antenna Connector | 25 |
| 7.5.2 | Power and I/O Connector | 27 |
| 7.5.3 | Test Connector | 27 |

A Engineering Diagrams

- A1 Block Diagram
- A2 Circuit Diagram
- A3 Component Overlay Diagram

B Parts List

WARNING

Changes or modifications not expressly approved by RF Technology could void your authority to operate this equipment. Specifications may vary from those given in this document in accordance with requirements of local authorities. RF Technology equipment is subject to continual improvement and RF Technology reserves the right to change performance and specification without further notice.

1 Operating Instructions

1.1 Front Panel Controls and Indicators

1.1.1 PTT

A front-panel push-to-talk (PTT) button is provided to facilitate bench and field tests and adjustments. The button is a momentary action type. When keyed, audio from the line input is disabled so that a carrier with sub-tone is transmitted. The front-panel microphone input is not enabled in this mode, but it is enabled when the PTT line on that socket is pulled to ground.

1.1.2 Line

The LINE trimpot is accessible by means of a small screwdriver from the front panel of the module. It is used to set the correct sensitivity of the line and direct audio inputs. It is factory preset to give 60% of rated deviation with an input of 0dBm (1mW on 600Ω equivalent to 775mV RMS or about 2.2V peak-to-peak) at 1kHz. The nominal 60% deviation level may be adjusted by measuring between pins 6 and 1 on the test socket, and adjusting the pot. By this means an input sensitivity from approximately -30dBm to +10dBm may be established.

An internal jumper provides a coarse adjustment step of 20dB. Between the jumper and the trimpot, a wide range of input levels may be accommodated.

1.1.3 POWER LED

The PWR LED shows that the dc supply is connected to the receiver.

1.1.4 TX LED

The TX LED illuminates when the transmitter is keyed. It will not illuminate (and an Alarm cadence will be shown) if the synthesizer becomes unlocked, or the output amplifier supply is interrupted by the microprocessor.

1.1.5 ALARM LED

The Alarm LED can indicate several fault conditions if they are detected by the self test program. The alarm indicator shows the highest priority fault present. Receivers using software issue 5 and higher use the cadence of the LED flash sequence to indicate the alarm condition. Refer to table 1. Receivers using software issue 4 and lower use the LED flash rate to indicate the alarm condition. Refer to table 2.

| LED Flash Cadence | Fault Condition |
|--------------------------|--------------------------------|
| 5 flashes, pause | Synthesizer unlocked |
| 4 flashes, pause | Tuning voltage out of range |
| 3 flashes, pause | Low forward power |
| 2 flashes, pause | High reverse (reflected) power |
| 1 flash, pause | Low dc supply voltage |
| LED ON continuously | Transmitter timed out |

Table 1: Interpretations of LED flash cadence

| Indication | Fault Condition |
|------------------------|--------------------------------------|
| Flashing, 8 per second | Synthesizer unlocked |
| Flashing, 4 per second | Tuning voltage outside correct range |
| Flashing, 2 per second | Low forward power |
| Flashing, 1 per second | High reverse power |
| Continuous | dc supply voltage low or high |

Table 2: Interpretations of LED flash speed, for early models

1.1.6 ALC LED

The ALC LED indicates that the transmitter output power is being controlled by an external amplifier through the external ALC input.

1.1.7 REF LED

The REF LED indicates that the synthesizer frequency reference is locked to an external reference.

1.1.8 TEST MIC.

The TEST MIC. DIN socket is provided for use with a standard mobile or handset 200 Ohm dynamic microphone. The external audio inputs are disabled when the TEST MIC'S PTT is on.

2 Transmitter Internal Jumper Options

In the following subsections an asterisk (*) signifies the standard (Ex-Factory) configuration of a jumper.

2.1 JP2: EPROM Type

| Condition | Position |
|-----------|----------|
| 27C256 | 2-3 * |
| 27C64 | 1-2 |

2.2 JP3: 600 Ohm Line Dc Loop PTT Input

By default, Eclipse excitors can be keyed up by pulling the PTT signal low, or by dc loop signalling on the audio pair.

This jumper enables or disables this second method.

| Condition | Position |
|----------------------------------|----------|
| dc loop connected (enabled) | 1-2 * |
| dc loop not connected (bypassed) | 2-3 |

2.3 JP4: Audio Input Source Selection

Either the 600Ω or the high-Z balanced inputs may be selected.

| Condition | Position |
|----------------------|----------|
| 600Ω Input | 2-3 * |
| High-impedance Input | 1-2 |

2.4 JP5: 600 Ω Termination

Normally the Line Input is terminated in 600 Ω. The 600 ohm termination can be removed by choosing the alternate position.

| Condition | Position |
|------------------|----------|
| 600Ω Termination | 1-2* |
| No Termination | 2-3 |

2.5 JP6: Input Level Attenuation

This jumper permits coarse input sensitivity to be set. In the default position, the unit expects a line level of 0dBm (nominal) at its Line Input. In the alternate position, levels of +20dBm(nominal) can be accepted.

| Condition | Position |
|------------------|----------|
| 0dB attenuation | 1-2 * |
| 20dB attenuation | 2-3 |

2.6 JP7: Audio Frequency Response

| Condition | Position |
|------------------------|----------|
| 750 uSec. Pre-emphasis | 1-2 * |
| Flat Response | 2-3 |

2.7 JP8: Sub-audible Tone Source

| Condition | Position |
|----------------|------------|
| Internal CTCSS | 1-2, 4-5 * |
| External input | 2-3, 5-6 |

2.8 JP9/10/11: dc Loop Configuration

Dc loop current on the audio pair is normally sourced externally. The Eclipse excitors loop the current through an opto-isolator. When the current flows the exciter keys up.

An alternative arrangement is possible. The excitors can source the current and an external device can provide the dc loop.

These three jumpers select the appropriate mode.

| Condition | JP9 | JP10 | JP11 |
|--------------------|-----|------|-------|
| Current Loop Input | ON | OFF | OFF * |
| 12Vdc Loop source | OFF | ON | ON |

2.9 JP16: Direct Digital Input (Rev 4 or Higher)

Some trunking controllers have digital encoding schemes which operate to very low frequencies. The elliptical filter, used as a 250Hz low pass filter in the tone section, can

cause excessive pulse edge distortion of the trunking controller's digital signals. In such circumstances, JP16 allows a user to bypass the low and high pass filters in the tone input section. See also 2.12 - JP22: If direct tone input is selected, then JP22 should be removed (open)

| Condition | Position |
|-------------------|----------|
| Normal Tone Input | 1-2* |
| Direct Tone Input | 2-3 |

2.10 JP17: Bypass Low Pass Filter (Rev 4 or higher)

Some trunking controllers have digital encoding schemes that require the low pass filter in the tone input section to be bypassed. JP17 allows this. Normally JP17 is open circuit. Placing a link across it will bypass the low pass filter.

In conjunction with this change, it sometimes may be necessary, depending on the type of trunking controller used, to add a 100K resistor in the place reserved for R157.

2.11 JP19: Alarm Output (Rev 4 or higher)

The main audio transformer (T1), is connected to the Line IP1 and Line IP4 pins on P3.

These two pins constitute the main audio input for the exciter. The centre taps of the audio transformer, though, are brought out on Line IP2, and Line IP3. These can be used as alternate audio pins for larger signals, or to directly access the dc loop sense circuitry. JP19 allows an alternate use for Line IP2 (pin 7 of P3). In the alternate position for JP19, the ALARM signal (the signal that drives the ALARM LED itself) is connected to pin 7 of P3. The ALARM signal when asserted is low active; when unasserted, it pulls high to +9.4V through an LED and a 680 ohm resistor.

| Condition | Position |
|--|----------|
| P3, pin 7 connects to center tap of transformer T1 | 1-2* |
| P3, pin 7 connects to ALARM signal | 2-3 |

2.12 JP22: Use Tone- as a Direct Digital Input (Rev 4 or higher)

JP22 is normally shunted with a jumper, which connects Tone- on P3 (pin 18), as the negative leg of the Tone input pair. Removing this jumper disconnects Tone- from this path and allows the use of the Tone- pin to be used as a direct digital input. See also 2.9 - JP16: If this jumper is removed, then JP16 should be in the alternative position (Direct Tone Input).

2.13 JP23: Connection of DMTX Board (Rev 4 or higher)

When a DMTX board is connected to an exciter, there is provision for digital or audio modulation of the reference oscillator and the VCO. The digital signal is input via the DB9 rear connector and the audio input signal is via the Line inputs on the standard DB25 rear panel connector.

| Condition | Position |
|----------------------|-----------|
| No DMTX board | 1-2, 5-6* |
| DMTX board connected | 2-3, 4-5 |

In addition to the jumper changes, a wire link or zero ohm resistor must be connected in the place marked for R159.

3 Transmitter I/O Connections

3.1 25 Pin Connector

The D-shell 25 pin connector is the main interface to the transmitter. The pin connections are described in table 3.

| Function | Signal | Pins | Specification |
|-------------------------|--|---|--|
| DC power | +12 Vdc 0 Vdc | 1, 14 13, 25 | +11.4 to 16 Vdc Ground |
| Channel Select | 1 2 4 8 10 20 40 80 | 21 9 22 10 23 11 24 12 | BCD Coded 0 = Open Circuit or 0 Vdc 1 = +5 to +16 Vdc |
| RS232 Data | In Out | 15 2 | Test and Programming use 9600, 8 data 2 stop bits |
| 600Ω Line | High Low | 20 6 | Transformer Isolated Balanced 0dBm Output |
| 150Ω / Hybrid | | 7 19 | |
| Direct PTT input | | 3 | Ground to key PTT |
| T/R Relay driver output | | 16 | Open collector, 250mA/30V |
| Sub-Audible Tone Input | [+] | 5 | >10kΩ, AC coupled |
| | [−] | 18 | (1-250Hz) |
| High-Z Audio Input | [+] | 4 | >10kΩ, AC coupled |
| | [−] | 17 | (10Hz-3kHz) |
| External ALC input | | 8 | <0.5V/1mA to obtain >30dB attenuation, O/C for maximum power |

Table 3: Pin connections and explanations for the main 25-pin, D connector.

3.2 Rear Panel Connectors

The exciter and receiver can be supplied with optional rear panel connectors that bring out the more important signals available on P1, the rear panel DB25 connector.

Figures 1 and 2 show the rear panel connectors, and Table 4 shows the signals that are brought out to the spade connectors. The spade connectors (2.1x0.6x7mm) are captive/soldered at the labelled points.

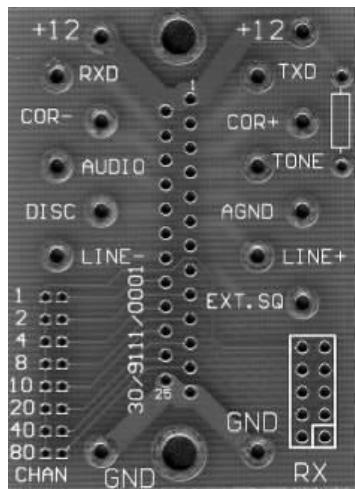


Fig 1
RX PCB

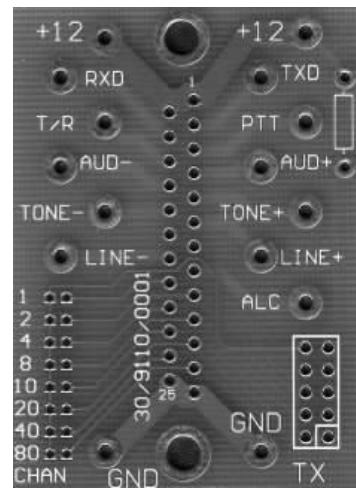


Fig 2
TX PCB

The Receiver and Transmitter modules plug into the back plane DB25/F connectors

To configure: Solder wire connections between appropriate points.

| Receiver DB25/F | RX PCB | DESCRIPTION | | TX PCB | Transmitter DB25/F |
|----------------------------|-------------------|---------------------------|--------------------|-------------------|-------------------------------|
| 1, 14 | +12V | +12V DC SUPPLY | | +12V | 1, 14 |
| 2 | TXD | TX Data | | TXD | 2 |
| 15 | RXD | RX Data | | RXD | 15 |
| 3 | COR+ | Carrier Operate Sw+ | PressToTalk input | PTT | 3 |
| 16 | COR- | Carrier Operate Sw- | Tx/Rx output | T/R | 16 |
| 4 | TONE | Subtone output | Hi Z audio input+ | AUD+ | 4 |
| 17 | AUDIO | Audio output | Hi Z audio input- | AUD- | 17 |
| 5 | AGND | Audio Ground | Ext tone input+ | TONE+ | 5 |
| 18 | DISC | Discriminator output | Ext tone input- | TONE- | 18 |
| 6 | LINE+ | Line output+ | Line input+ | LINE+ | 6 |
| 20 | LINE- | Line output- | Line input- | LINE- | 20 |
| 8 | EXT SQ | Ext Squelch input | Auto Level Control | ALC | 8 |
| 13, 25 | GND | Ground, 0V | | GND | 13, 25 |
| 21 | BCD 1 | Channel select 1's digit | | BCD 1 | 21 |
| 9 | BCD 2 | Channel select 1's digit | | BCD 2 | 9 |
| 22 | BCD 4 | Channel select 1's digit | | BCD 4 | 22 |
| 10 | BCD 8 | Channel select 1's digit | | BCD 8 | 10 |
| 23 | BCD 10 | Channel select 10's digit | | BCD 10 | 23 |
| 11 | BCD 20 | Channel select 10's digit | | BCD 20 | 11 |
| 24 | BCD 40 | Channel select 10's digit | | BCD 40 | 24 |
| 12 | BCD 80 | Channel select 10's digit | | BCD 80 | 12 |

4 Channel and Tone Frequency Programming

Channel and tone frequency programming is most easily accomplished with RF Technology TecHelp software or the Service Monitor 2000 software. This software can be run on an IBM compatible PC and provides a number of additional useful facilities. DOS and 32-bit versions are available.

TecHelp allows setting of the adaptive noise squelch threshold, provides a simple means of calibrating the forward and reverse power detectors, setting the power alarm preset levels, and enabling transmitter hang time and timeout time limits. TecHelp can be supplied by your dealer, distributor or by contacting RF Technology directly.

5 Circuit Description

The following descriptions should be read as an aid to understanding the block and schematic diagrams given in the appendix of this manual.

5.1 VCO Section

The Voltage Controlled Oscillator uses a bipolar junction FET Q19 which oscillates at the required transmitter output frequency. Varactor diodes D25 and D26 are used by the PLL circuit to keep the oscillator on the desired frequency. A second varactor diode D3 is used to frequency modulate the VCO. Transistor Q20 is used as an active filter to reduce the noise on the oscillator supply voltage.

The VCO is keyed ON by the microcontroller through Q10. It is keyed ON when any of the PTT inputs are active and OFF at all other times.

The VCO output is amplified and buffered by monolithic amplifiers MA2 and MA3 before being fed to the PLL IC U6.

Amplifiers MA1, MA4 and MA5 increase the VCO output to approximately 10 mW to drive the power amplifier. MA1 is not switched on until the PLL has locked and had time to settle. This prevents any momentary off channel transmission when the transmitter is keyed.

5.2 PLL Section

The frequency reference for the synthesiser is a crystal oscillator using transistors Q26 and Q27 and crystal Y3. The temperature stability is better than 5 ppm and it can be synchronised to an external reference for improved stability. External reference option board 11/9119 is required when using an external reference.

A positive temperature coefficient thermistor, XH1, is used in versions intended for operation down to -30 degrees Celsius. The thermistor heats the crystal's case to maintain its temperature above -10 degrees thus extending the oscillator stability of 5 ppm down to -30 degrees ambient.

Varactor diodes D27-30 are used to frequency modulate the oscillator. The processed transmit audio signal from U7b varies the diodes bias voltage to modulate the reference frequency. This extends the modulation capability down to a few Hz for sub-audible tones and digital squelch codes. A two point modulation scheme is used with the audio also being fed to the VCO to modulate the higher audio frequencies.

The 12.8 MHz output of Q27 is amplified by Q28 and Q29 to drive the reference input of the PLL synthesiser IC U6. This IC is a single chip synthesiser which includes a 1.1 GHz prescaler, programmable divider, reference divider and phase/frequency detector. The frequency data for U6 is supplied via a serial data link by the microcontroller.

The phase detector output signals of U6 are used to control two switched current sources. The output of the positive and negative sources Q3 and Q6, produce the tuning voltage which is smoothed by the loop filter components to bias the V.C.O. varactor diode D3.

5.3 Power Amplifier

The 10 mW output from the main board connects to the power amplifier board through a short miniature 50Ω coaxial cable.

Q2 on the power amplifier board increases the signal to approximately 200mW. The bias of Q2 is controlled by Q1 and the power leveling circuitry to adjust the drive to the output module U2.

U2 increases the power from the driver to 30 watts before it is fed to the directional coupler, low pass filter and output connector. The directional coupler detects the forward and reverse power components and provides proportional dc voltages which are amplified by U1a and U1b.

The forward power voltage from U1a and U1b are compared to the present DC reference voltage from RV1. The difference is amplified by U1c, Q3 and Q4. The resulting control voltage supplies Q2 through R10, R12 and completes the power levelling control loop.

5.4 Temperature Protection

Thermistor RT1 on the power amplifier board is used to sense the case temperature of the output module U2. If the case temperature rises above 90 degrees C, the voltage across RT1 will increase and transistor Q5 will be turned on. This reduces the dc reference voltage to the power regulator which inturn reduces the outpower by 6-10dB.

5.5 600 Ω Line Input

The 600Ω balanced line input connects to line isolation transformer T1. T1 has two 150Ω primary windings which are normally connected in series for 600Ω lines. The dual primary windings can be used to provide DC loop PTT signaling or a 2/4 wire hybrid connection. All four leads are available at the rear panel system connector.

The secondary of T1 can be terminated with an internal 600Ω load through JP5 or left un-terminated in high impedance applications.

5.6 Direct Coupled Audio Input

A high impedance ($10k\Omega$) direct AC coupled input is available at the system connector. The direct coupled input connects to U9a which is configured as a unity gain bridge amplifier.

The bridge configuration allows audio signal inversion by interchanging the positive and negative inputs and minimizes ground loop problems. Both inputs should be connected, with one lead going to the source output pin and the other connected to the source audio ground.

5.7 Local Microphone Input

The local microphone input is provided for use with a standard low impedance dynamic microphone. The microphone output is amplified by U9a before connecting to analogue switch U10a. U10b inverts the local microphone PTT input to switch U10a ON when the microphone PTT button is pressed. U10a is OFF at all other times.

The local microphone audio has priority over the other inputs. Activation of the local microphone PTT input switches OFF the audio from the line or direct inputs through D16 and U10c

5.8 CTCSS and Tone Filter

The CTCSS encoder module H1, under control of the main microprocessor U13, can encode all 38 EIA tones and (on some models) additional commonly-used tones.

The tone output of H1 connects to jumper JP8 which is used to select either H1 or an external tone source. The selected source is coupled to U9c which is a balanced input unity gain amplifier. The buffered tone from U9c is fed to 300 Hz low pass filter U7c.

On Rev 4 or later revisions, the low pass filter can be bypassed by inserting a jumper onto JP17.

RV3, the tone deviation trimmer, is used to adjust the level of the tone from U7c before it is combined with the voice audio signal in the summing amplifier U7a.

Back to back diodes D4 and D5 limit the maximum tone signal amplitude to prevent excessive tone deviation when external tone sources are used.

The subtone amplifier, filter and limiter can be bypassed on Rev 4 or later exciters by removing the link from JP22 and moving the link in JP16 to the alternate position.

5.9 Audio Signal Processing

Jumper JP4 selects either the line or direct input source. The selected source is then connected to JP6. JP6 can be removed to provide 20 dB attenuation when the input level is above 10 dBm to expand the useful range of the line level trimmer RV4. The wiper of RV4 is coupled to the input of the input amplifier U9d. U9d provides a voltage gain of ten before connecting to the input of analogue switch U10c.

The outputs of U10a and U10c are connected to the frequency response shaping networks C52, R133 (for 750-s pre-emphasis) and C61, R55 (for flat response). JP7 selects the pre-emphasized or flat response.

The audio signal is further amplified 100 times by U7d. U7d also provides the symmetrical clipping required to limit the maximum deviation. The output level from U7d is adjusted by RV1, the deviation adjustment, before being combined with the tone audio signal in the summing amplifier U7a.

The composite audio from U7a is fed through the 3Khz low pass filter U7b. When the links on JP23 are in their default state, the filtered audio is coupled to the TCXO voltage tuning input and the modulation balance trimmer RV2. RV2, R99 and R98 attenuate the modulation signal before applying it to the VCO via varactor D3.

When DMTX board option is required, Jumper JP23 allows the audio paths to be re-routed. The DMTX board provides for an external digital modulation input signal. When the two links on JP23 are positioned in the middle of the 6 pin header, the audio from the exciter is passed to the DMTX board via pin 5 of JP15, where the signal is conditioned and then returned from the DMTX board via pin 2 of JP15, and passed to the two modulation points.

RV2 adjusts level of the audio used to modulate the VCO. This primarily effects the deviation of audio frequencies above 500 Hz. RV2 is used to balance the high and low frequency deviation to obtain a flat frequency response relative to the desired characteristic.

5.10 PTT and DC Remote Control

Two main PTT inputs are provided. The first, a direct logic level input, is connected to pin 3 of the system connector. The transmitter can be keyed by applying a logic low or ground on pin 3. Pin 3 connects to the PTT logic and microprocessor through D10.

DC current loop control can be used for remote PTT operation. The current loop can be configured by JP9, JP10 and JP11 for use with either a remote free switch or a remote switched source.

Opto-isolator ISO1 is used to isolate the loop current signal from the transmitter PTT logic. The loop current passes through the input of ISO1 and the output of ISO1 connects to the PTT logic.

A bridge consisting of diodes D6, D8, D9 and D14 ensures correct operation regardless of the current polarity. Q17 limits the current and D7 limits the voltage input of ISO1. Any low voltage current source capable of providing 2mA at 4V or switching circuit with less than $4.8k\Omega$ loop resistance can be used to switch the DC loop.

The test PTT button on the front panel and the local microphone PTT button will also key the transmitter. Both of these also mute the line audio input. The microphone line also enables that audio input.

A DMTX board can also cause the exciter to key up. When TX (or TTL_TX) signal is received by the DMTX board, it pulls pin 6 of JP15 low, which in turn asserts the PTT_WIRE-OR signal, causing the microprocessor (U13) to key the exciter up.

5.11 Microprocessor Controller

The microprocessor controller circuit uses a single-chip eight bit processor and several support chips. The processor U13 includes non-volatile EE memory for channel frequencies, tones, and other information. It also has an asynchronous serial port, a synchronous serial port and an eight bit analogue to digital converter.

The program is stored in U5, a CMOS EPROM. U4 is an address latch for the low order address bits. U2 is used to read the channel select lines onto the data bus. U11 is an address decoder for U5 and U2. U3 is a supervisory chip which keeps the processor reset unless the +5 Volt supply is within operating limits. U1 translates the asynchronous serial port data to standard RS232 levels.

The analogue to digital converter is used to measure the forward and reverse power, tuning voltage and dc supply voltage.

If the processor detects that the PTT_WIRE_OR signal is asserted low, it will attempt to key the exciter up. It will first attempt to key the VCO through Q10, and if the LD pin goes high, it will switch the 9.2 Volt transmit line through Q14 and Q16. Asserting Q16 has the effect of also asserting the yellow Tx LED (D12) on the front panel, enabling the local 25W power amplifier, and causing the T/R Relay output to be pulled low. D24 is 30 volt zener which protects Q25 from both excessive voltages or reverse voltages.

Should there be a problem with either the tuning volts, or the battery voltage, the VCO locking, the forward power, or the reverse power, the microprocessor will assert the ALARM LED, through Q1. Depending on the setting of Jumper JP19, the ALARM signal can be brought out on pin 7 of P3.

5.12 Voltage Regulator

The dc input voltage is regulated down to 9.4 Vdc by a discrete regulator circuit. The series pass transistor Q23 is driven by error amplifiers Q8 and Q18. Q9 is used to start up the regulator and once the circuit turns on, it plays no further part in the operation.

The +5 Volt supply for the logic circuits is provided by an integrated circuit regulator U14 which is run from the regulated 9.4 Volt supply.

Jumper JP18 is not normally fitted to the board, and is bridged with a 12mil track on the component side of the board. It is provided so that the 9.4V load can be isolated from the supply by the service department to aid in fault finding.

Jumpers JP20 and JP21 are also not normally fitted on the board, and are usually bridged with a 12mil track on the component side. They allow U14 to be isolated from its input, or its output or both.

6 Field Alignment Procedure

The procedures given below may be used to align the transmitter in the field. Normally, alignment is only required when changing operating frequencies, or after component replacement.

The procedures below do not constitute an exhaustive test or a complete alignment of the module, but if successfully carried out are adequate in most circumstances.

TCXO calibration may be periodically required owing to normal quartz crystal aging. A drift of 1ppm/year is to be expected.

Each alignment phase assumes that the preceding phase has been successfully carried out, or at least that the module is already in properly aligned state with respect to preceding conditions.

6.1 Standard Test Condition

The following equipment and conditions are assumed unless stated otherwise:

- AF signal generator with 600Ω impedance, 50-3000Hz frequency range, with level set to 387mV RMS.
- Power supply set to 13.8Vdc, with a current capable of >5A.
- RF 50Ω load, 30W rated, return loss <-20dB.
- Jumpers set to factory default positions.

| Alignment Frequency | | |
|---------------------|---------|---------|
| Model | Range | Align F |
| T800A | 806-830 | 818MHz |
| T800B | 850-870 | 860MHz |
| T800C | 928-942 | 935MHz |

6.2 VCO Alignment

1. Select a channel at the center frequency (half way between the highest and lowest frequencies for the model in question).
2. Disconnect the Audio input (no signal input).
3. Key the PTT line.
4. Measure the voltage between pins 9 and 1 of the test socket (TUNE V), and adjust C99 to obtain 4.5 ± 0.25 V, while the TX LED is ON and the ALARM LED is OFF.

6.3 TCXO Calibration

1. Select a channel at the center frequency (half way between the highest and lowest frequencies for the model in question).
2. Disconnect the Audio input (no signal input).

3. Key the PTT line.
4. Measure the carrier frequency at the output connector, and adjust XO1 until the correct carrier frequency is measured, $\pm 50\text{Hz}$.

6.4 Modulation Balance

1. Set RV3 fully counter clockwise (CCW) (sub-tone off).
2. Set RV1 fully clockwise (CW) (maximum deviation)
3. Set RV2 mid-position
4. Set JP7 for flat response
5. Set JP4 for Hi-Z input
6. Key the transmitter on
7. Set the audio input to 150Hz, 0dBm.(387mV)
8. Measure deviation and adjust RV4 (line Level) for a deviation of 5kHz (2.5kHz for narrow band transmitters).
9. Set the audio input to 1.5kHz, 0dBm.
10. Adjust RV2 (Mod. Bal.) for a deviation of 5kHz (2.5kHz for narrow band transmitters).
11. Repeat steps 6-9 until balance is achieved.
12. Key the transmitter off.
13. Return JP7 to its correct setting.
14. Carry out the Deviation (section 6.6) and Tone Deviation (section 6.5) alignment procedures.

6.5 Tone Deviation

1. Remove the audio input.
2. Key the transmitter on
3. Adjust RV3 for the desired deviation in the range 0-1kHz.¹ If sub-tone (CTCSS) coding is not to be used, adjust RV3 fully CCW.

¹ The factory default is 500Hz for wide band (5kHz maximum deviation) and 250Hz for narrow band channels.

6.6 Deviation

1. Set RV4 (Line Level) fully clockwise (CW).
2. Set the audio to 1kHz, 0dBm, on the line input.
3. Key the transmitter on.
4. Adjust RV1 (Set Max. Deviation) for a deviation of 5kHz (2.5kHz for narrow band transmitters).
5. Key the transmitter off.
6. Carry out the Line Input Level alignment procedure (section 6.7)

6.7 Line Input Level

1. Set the audio to 1kHz, 0dBm, on the line input, or use the actual signal to be transmitted.
2. Key the transmitter on.
3. Adjust RV4 (line level) for 60% of system deviation (3kHz or 1.5kHz for narrow band systems).
4. If the test signal is varying, RV4 may be adjusted to produce a level of 234mV RMS or 660mV_{p-p} at the audio voltage test connector pin 6 to pin 1.
5. Key the transmitter off.

6.8 Output Power

1. No audio input is required
2. Key the transmitter on.
3. Adjust RV1 on the power amplifier PCB for the desired power level *at the output connector.*²
4. Key the transmitter off.

² Be sure to set the power below the rated maximum for the model of transmitter. If in doubt, allow 1.5dB cable and connector losses, and assume that the maximum rated power is 15W. This means no more than 10W at the end of a 1m length of test cable. This pessimistic procedure is safe on all models manufactured at the time of writing.

7 SPECIFICATIONS

7.1 Overall Description

The transmitter is a frequency synthesized, narrow band FM unit, normally used to drive a 50 watt amplifier. It can also be used alone in lower power applications. Various models allow 2-25W of output power to be set across a number of UHF frequency bands. All necessary control and 600Ω line interface circuitry is included.

7.1.1 Channel Capacity

Although most applications are single channel, it can be programmed for up to 100 channels, numbered 0 - 99. This is to provide the capability of programming all channels into all of the transmitters used at a given site. Where this facility is used in conjunction with channel-setting in the rack, exciter modules may be "hot-jockeyed" or used interchangeably. This can be convenient in maintenance situations.

7.1.2 CTCSS

Full EIA sub-tone capability is built into the modules. The CTCSS tone can be programmed for each channel. This means that each channel number can represent a unique RF and tone frequency combination.

7.1.3 Channel Programming

The channel information is stored in non-volatile memory and can be programmed via the front panel test connector using a PC and RF Technology software.

7.1.4 Channel Selection

Channel selection is by eight channel select lines. These are available through the rear panel connector. Internal presetting is also possible. The default (open-circuit) state is to select channel 00.

A BCD active high code applied to the lines selects the required channel. This can be supplied by pre-wiring the rack connector so that each rack position is dedicated to a fixed channel. Alternatively, thumb-wheel switch panels are available.

7.1.5 Microprocessor

A microprocessor is used to control the synthesizer, tone squelch, PTT function and facilitate channel frequency programming. With the standard software, RF Technology modules also provide fault monitoring and reporting.

7.2 Physical Configuration

The transmitter is designed to fit in a 19 inch rack mounted sub-frame. The installed height is 4 RU (178 mm) and the depth is 350 mm. The transmitter is 63.5 mm or two Eclipse modules wide.

7.3 Front Panel Controls, Indicators, and Test Points

7.3.1 Controls

Transmitter Key - Momentary Contact Push Button

Line Input Level - screwdriver adjust multi-turn pot

7.3.2 Indicators

Power ON - Green LED

Tx Indicator - Yellow LED

Fault Indicator - Flashing Red LED

External ALC - Green LED

External Reference - Green LED

7.3.3 Test Points

Line Input – Pin 6 + Ground (pin 1)

Forward Power – Pin 8 + Ground (pin 1)

Reverse Power – Pin 4 + Ground (pin 1)

Tuning Voltage – Pin 9 + Ground (pin 1)

Serial Data (RS-232) – Pins 2 / 3 + Ground (pin 1)

7.4 Electrical Specifications

7.4.1 Power Requirements

Operating Voltage - 10.5 to 16 Vdc with output power reduced below 12 Vdc

Current Drain - 5A Maximum, typically 0.25A Standby

Polarity - Negative Ground

7.4.2 Frequency Range and Channel Spacing

| Frequency | 25 kHz | 12.5 kHz |
|-------------|--------|----------|
| 806-830 MHz | T800A | T800AN |
| 850-870 MHz | T800B | T800BN |
| 928-942 MHz | T800C | T800CN |

7.4.3 Frequency Synthesizer Step Size

Step size is 10 / 12.5kHz or 5 / 6.25kHz, fixed, depending upon model

7.4.4 Frequency Stability

±1 ppm over 0 to +60 C, standard

±1ppm over -20 to +60 C, optional

7.4.5 Number of Channels

100, numbered 00 - 99

7.4.6 Antenna Impedance

50Ω

7.4.7 Output power

Preset for 2-15 or 2-25W depending upon model

7.4.8 Transmit Duty Cycle

100% to 40C, de-rating to zero at 60C.

100% to 5000ft altitude, de-rating to zero at 15,000ft.

7.4.9 Spurious and Harmonics

Less than 0.25~W

7.4.10 Carrier and Modulation Attack Time

Less than 20ms. Certain models have RF envelope attack and decay times controlled in the range $200 \sim s < t_{r/f} < 2\text{ms}$ according to regulatory requirements.

7.4.11 Modulation

Type - Two point direct FM with optional pre-emphasis

Frequency Response - ±1 dB of the selected characteristic from 300 - 3000 Hz

Maximum Deviation - Maximum deviation preset to 2.5 or 5 kHz

7.4.12 Distortion

Modulation distortion is less than 3% at 1 kHz and 60% of rated system deviation.

7.4.13 Residual Modulation and Noise

The residual modulation and noise in the range 300 - 3000 Hz is typically less than -50dB referenced to rated system deviation.

7.4.14 600 Ω Line Input Sensitivity

Adjustable from -30 to +10 dBm for rated deviation

7.4.15 HI-Z Input

Impedance - 10K Ω Nominal, balanced input

Input Level - 25mV to 1V RMS

7.4.16 Test Microphone Input

200 Ω dynamic, with PTT

7.4.17 External Tone Input

Compatible with R500 tone output

7.4.18 External ALC Input

Output will be reduced 20dB by pulling the input down to below 1V. (Typically more than 40dB attenuation is available.) The input impedance is $\geq 10k\Omega$, internally pulled up to rail.

The external ALC input can be connected to the power control circuit in Eclipse external power amplifiers.

7.4.19 T/R Relay Driver

An open collector transistor output is provided to operate an antenna change over relay or solid state switch. The transistor can sink up to 250mA.

7.4.20 Channel Select Input / Output

Coding - 8 lines, BCD coded 00 - 99

Logic Input Levels - Low for <1.5V, High for >3.5V

Internal 10K pull down resistors select channel 00 when all inputs are O/C.

7.4.21 DC Remote Keying

An opto-coupler input is provided to enable dc loop keying over balanced lines or local connections. The circuit can be connected to operate through the 600Ω line or through a separate isolated pair.

7.4.22 Programmable No-Tone Period

A No-Tone period can be appended to the end of each transmission to aid in eliminating squelch tail noise which may be heard in mobiles with slow turn off decoders. The No-Tone period can be set from 0--5 seconds in 0.1 second increments. The No Tone period operates in addition to the reverse phase burst at the end of each transmission.³

7.4.23 Firmware Timers

The controller firmware includes some programmable timer functions.

Repeater Hang Time - A short delay or ``Hang Time'' can be programmed to be added to the end of transmissions. This is usually used in talk through repeater applications to prevent the repeater from dropping out between mobile transmissions. The Hang Time can be individually set on each channel for 0 - 15 seconds.

Time Out Timer - A time-out or transmission time limit can be programmed to automatically turn the transmitter off. The time limit can be set from 0-254 minutes in increments of one minute. The timer is automatically reset when the PTT input is released.

7.4.24 CTCSS

CTCSS tones can be provided by an internal encoder or by an external source connected to the external tone input. The internal CTCSS encoding is provided by a subassembly PCB module. This provides programmable encoding of all EIA tones.

Some models encode certain extra tones.

Tone frequencies are given in table 4.

7.5 Connectors

7.5.1 Antenna Connector

Type N Female Mounted on the module rear panel

³ The reverse phase burst is usually sufficient to eliminate squelch tail noise in higher-quality mobiles

| Frequency | EIA Number |
|-----------|------------|
| No Tone | |
| 67.0 | A1 |
| 69.4 | |
| 71.9 | B1 |
| 74.4 | C1 |
| 77.0 | A2 |
| 79.7 | C2 |
| 82.5 | B2 |
| 85.4 | C3 |
| 88.5 | A3 |
| 91.5 | C4 |
| 94.8 | B3 |
| 97.4 | |
| 100.0 | A4 |
| 103.5 | B4 |
| 107.2 | A5 |
| 110.9 | B5 |
| 114.8 | A6 |
| 118.8 | B6 |
| 123.0 | A7 |
| 127.3 | B7 |
| 131.8 | A8 |
| 136.5 | B8 |
| 141.3 | A9 |
| 146.2 | B9 |
| 151.4 | A10 |
| 156.7 | B10 |
| 159.8 | |
| 162.2 | A11 |
| 165.5 | |
| 167.9 | B11 |
| 171.3 | |
| 173.8 | A12 |
| 177.3 | |
| 179.9 | B12 |
| 183.5 | |
| 186.2 | A13 |
| 189.9 | |
| 192.8 | B13 |
| 196.6 | |
| 199.5 | |
| 203.5 | A14 |
| 206.5 | |
| 210.7 | B14 |
| 218.1 | A15 |
| 225.7 | B15 |
| 229.1 | |
| 233.6 | A16 |
| 241.8 | B16 |
| 250.3 | A17 |
| 254.1 | |

Table 4: Tone Squelch Frequencies

7.5.2 Power & I/O Connector

25-pin “D” Male Mounted on the rear panel

7.5.3 Test Connector

9-pin “D” Female mounted on the front panel

B T800 Parts List**Main PCB Assembly Parts**

| Ref. | Description | Part Number |
|-------------|----------------------------------|--------------------|
| C1 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C2 | Capacitor 18P 2% 100V NPO Rad.1 | 45/2680/018P |
| C3 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C4 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C5 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C6 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C7 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C8 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C9 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C10 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C11 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C12 | Capacitor 47N 20% 50V X7R Rad.2 | 46/2001/047N |
| C13 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C14 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C15 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C16 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C17 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C18 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C19 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C20 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C21 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C23 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C24 | Capacitor 22P 5% 63V NP0 SM1206 | 46/3300/022P |
| C25 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C26 | Capacitor 6.8uF 10% 10V SMD Tant | 42/3009/06u8 |
| C27 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C28 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C29 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C30 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C31 | Capacitor 2U2 10% 100V MKT Rad.2 | 47/2010/02U2 |
| C32 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C33 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |
| C34 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C35 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C36 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C37 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C38 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C39 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C40 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C41 | Capacitor 100N 5% 50V MKT Rad.2 | 47/2007/100N |
| C42 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C43 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C44 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C45 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C46 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C47 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C48 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C49 | Capacitor 22N 5% 63V MKT Rad.2 | 47/2010/022N |
| C50 | Capacitor 100N 5% 50V MKT Rad.2 | 47/2007/100N |
| C51 | Capacitor 1N2 5% NPO Rad.2 | 46/2000/01N2 |
| C52 | Capacitor 1N5 10% 50V COG Rad.2 | 46/2000/01N5 |
| C53 | Capacitor 1U 35V Rad Electro | 41/2001/001U |
| C54 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C55 | Capacitor 10N 10% 63V X7R SM1206 | 46/3310/010N |
| C56 | Capacitor 1N2 5% NPO Rad.2 | 46/2000/01N2 |
| C57 | Capacitor 100N 5% 50V MKT Rad.2 | 47/2007/100N |
| C58 | Capacitor 22N 5% 63V MKT Rad.2 | 47/2010/022N |
| C59 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C60 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |

| Ref. | Description | Part Number |
|-------------|----------------------------------|--------------------|
| C61 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C62 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C63 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C64 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C65 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C66 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C67 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C68 | Capacitor 470U 25V RB Electro | 41/2001/470U |
| C69 | Capacitor 470U 25V RB Electro | 41/2001/470U |
| C70 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C71 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C72 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C73 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C74 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C75 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C76 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C77 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C78 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C79 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C80 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C81 | Capacitor 18P 2% 100V NPO Rad.1 | 45/2680/018P |
| C82 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C83 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C84 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C85 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C86 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C87 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C88 | Capacitor 10P 5% 63V NPO SM1206 | 46/3300/010P |
| C89 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C90 | Capacitor 10P 5% 63V NPO SM1206 | 46/3300/010P |
| C91 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C92 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C93 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C94 | Capacitor 1P8 5% 63V NPO SM1206 | 46/3300/01P8 |
| C95 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C96 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C97 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C98 | Capacitor 4P7 5% 63V NPO SM1206 | 46/3300/04P7 |
| C99 | Capacitor Trim 5-25P | 49/3000/025P |
| C100 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C101 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C102 | Capacitor 10N 10% 63V X7R 1206 | 46/3310/010N |
| C103 | Capacitor 47N 20% 50V X7R Rad.2 | 46/2001/047N |
| C104 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C105 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C106 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C107 | Capacitor 47N 20% 50V X7R Rad.2 | 46/2001/047N |
| C108 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |
| C109 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C110 | Capacitor 47P 2% 100V NPO Rad.1 | 45/2680/047P |
| C111 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C112 | Capacitor 100U 25V RB Electro | 41/1025/100U |
| C113 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |
| C114 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |
| C115 | Capacitor 100U 25V RB Electro | 41/1025/100U |
| C116 | Capacitor 1UO 10% 63V MKT Rad.2 | 47/2007/01U0 |
| C117 | Capacitor 100U 25V RB Electro | 41/1025/100U |
| C118 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C119 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C132 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| D1 | Diode Led RED T1 3/4 | 21/1010/LEDR |

| Ref. | Description | Part Number |
|-------------|-------------------------------------|--------------------|
| D2 | Diode 3Amplifier 1KV Rectifier | 21/1080/5408 |
| D3 | Diode VCapacitor MMBV105G SOT23 | 21/3060/105G |
| D4 | Diode Silicon 1N4148 | 21/1010/4148 |
| D5 | Diode Silicon 1N4148 | 21/1010/4148 |
| D6 | Diode Silicon GP | 21/1010/4002 |
| D7 | Diode Zener 1N4751 30V 1W Axial | 21/1040/4751 |
| D8 | Diode Silicon GP | 21/1010/4002 |
| D9 | Diode Silicon GP | 21/1010/4002 |
| D10 | Diode Silicon 1N4148 | 21/1010/4148 |
| D11 | Diode Silicon 1N4148 | 21/1010/4148 |
| D12 | Diode Led Yellow T1 3/4 | 21/1010/LEDY |
| D13 | Diode Silicon 1N4148 | 21/1010/4148 |
| D14 | Diode Silicon GP | 21/1010/4002 |
| D15 | Diode Silicon 1N4148 | 21/1010/4148 |
| D16 | Diode Silicon 1N4148 | 21/1010/4148 |
| D17 | Diode Silicon 1N4148 | 21/1010/4148 |
| D18 | Diode Led Green T1 3/4 | 21/1010/LEDG |
| D19 | Diode Schottkey BAT17 SOT23 | 21/3030/0017 |
| D20 | Diode 8V2 Zener | 21/1040/B8V2 |
| D21 | Diode Led Green T1 3/4 | 21/1010/LEDG |
| D22 | Diode Led Green T1 3/4 | 21/1010/LEDG |
| D23 | Diode Silicon 1N4148 | 21/1010/4148 |
| D24 | Diode Zener 1N4751 30V 1W AXI | 21/1040/4751 |
| D25 | SMD Diode Silicon 100ma 50V | 21/3009/AS85 |
| H1 | Hybrid CTCSS | 18/9150/0002 |
| ISO1 | IC Opto-Isolator 4N33 | 25/1010/4N33 |
| J1 | Connector Coax SKT SMB Vertical PCB | 35/2004/0001 |
| JP2 | Connector 3Way Header | 35/2501/0003 |
| JP3 | Connector 3Way Header | 35/2501/0003 |
| JP4 | Connector 3Way Header | 35/2501/0003 |
| JP5 | Connector 3Way Header | 35/2501/0003 |
| JP6 | Connector 3Way Header | 35/2501/0003 |
| JP7 | Connector 3Way Header | 35/2501/0003 |
| JP8 | Connector 6Way Header | 35/2501/0006 |
| JP9 | Connector 2Way Header | 35/2501/0002 |
| JP10 | Connector 2Way Header | 35/2501/0002 |
| JP11 | Connector 2Way Header | 35/2501/0002 |
| JP13 | Connector 2Way Header | 35/2501/0002 |
| JP14 | Connector 16Way Shrouded Header | 35/2502/0016 |
| JP15 | Connector 10Way Header | 35/2501/0010 |
| L1 | Ferrite Bead SMD | 37/3321/LM31 |
| L2 | Inductor 1uH Axial | 37/2021/001U |
| L3 | Ferrite Bead SMD | 37/3321/LM31 |
| L4 | Ferrite Bead SMD | 37/3321/LM31 |
| L5 | Inductor 150mH 10RBH | 37/2021/1RBH |
| L6 | Inductor 220N 10% Choke SM1206 | 37/3320/220N |
| L7 | Ferrite Bead SMD | 37/3321/LM31 |
| L8 | Ferrite Bead SMD | 37/3321/LM31 |
| L10 | Inductor 6 Hole Ferrite RFC | 37/1021/0001 |
| L11 | Inductor 220N 10% Choke SM1206 | 37/3320/220N |
| L12 | Inductor 220N 10% Choke SM1206 | 37/3320/220N |
| L13 | Inductor 220N 10% Choke SM1206 | 37/3320/220N |
| L14 | Inductor 220N 10% Choke SM1206 | 37/3320/220N |
| L15 | Inductor 47N Air Core Coil | 37/MIDI/47NJ |
| MA1 | Amplifier MMIC MWA0311 SOT143 | 24/3010/0311 |
| MA2 | Amplifier MMIC MWA0311 SOT143 | 24/3010/0311 |
| MA3 | Amplifier MMIC MWA0311 SOT143 | 24/3010/0311 |
| MA4 | Amplifier MMIC VAM6 SOT143 | 24/3010/VAM6 |
| MA5 | Amplifier MMIC MWA0311 SOT143 | 24/3010/0311 |
| P1 | Filter D RT AGL 9W F Ferrite | 35/5012/009F |
| P3 | Filter D RT AGL 25W M Ferrite | 35/5012/025M |
| Q1 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |

| Ref. | Description | Part Number |
|-------------|----------------------------------|--------------------|
| Q2 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q3 | Transistor GP PNP MMBT3906 SOT23 | 27/3020/3906 |
| Q4 | Transistor GP PNP MPS 3640 SOT23 | 27/3020/3640 |
| Q5 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q6 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q7 | Transistor GP PNP MMBT3906 SOT23 | 27/3020/3906 |
| Q8 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q9 | Transistor MMBF5459 LT1 SOT23 | 27/3020/5459 |
| Q10 | Transistor GP NPN MPS2369 SOT23 | 27/3020/2369 |
| Q11 | Transistor GP NPN MPS2369 SOT23 | 27/3020/2369 |
| Q12 | Transistor GP PNP MMBT3906 SOT23 | 27/3020/3906 |
| Q13 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q14 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q15 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q16 | Transistor GP PNP MMBT3906 SOT23 | 27/3020/3906 |
| Q17 | Transistor MMBF5459 LT1 SOT23 | 27/3020/5459 |
| Q18 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q19 | FET NJ MMBFJ309 SOT23 | 27/3030/J309 |
| Q20 | Transistor GP NPN MMBT3904 SOT23 | 27/3020/3904 |
| Q21 | Transistor GP PNP MPS 3640 SOT23 | 27/3020/3640 |
| Q22 | Transistor GP NPN MPS2369 SOT23 | 27/3020/2369 |
| Q23 | Transistor PNP MJF6107 TO220 | 27/2010/6107 |
| Q24 | Transistor GP PNP MMBT3906 SOT23 | 27/3020/3906 |
| Q25 | Transistor NPN GP MPSA06 TO92 | 27/2010/PA06 |
| R1 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R2 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R3 | Resistor 100R 5% 0.25W SM1206 | 51/3380/0100 |
| R4 | Resistor 100R 5% 0.25W SM1206 | 51/3380/0100 |
| R5 | Resistor 100R 5% 0.25W SM1206 | 51/3380/0100 |
| R6 | Resistor 15R 5% 0.25W SM1206 | 51/3380/0015 |
| R7 | Resistor 68R 5% 0.25W Axial | 51/1040/0068 |
| R8 | Resistor 3K3 5% 0.25W Axial | 51/1040/03K3 |
| R9 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R10 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R11 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R12 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R13 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R14 | Resistor 680R 5% 0.25W Axial | 51/1040/0680 |
| R15 | Resistor 6K8 5% 0.25W Axial | 51/1040/06K8 |
| R16 | Resistor 680R 5% 0.25W Axial | 51/1040/0680 |
| R17 | Resistor 270R 5% 0.25W SM1206 | 51/3380/0270 |
| R18 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R19 | Resistor 47K 5% 0.25W Axial | 51/1040/047K |
| R20 | Resistor 1M0 5% 0.25W Axial | 51/1040/01M0 |
| R21 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R22 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R23 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R24 | Resistor 330R 5% 0.25W Axial | 51/1040/0330 |
| R25 | Resistor 330R 5% 0.25W Axial | 51/1040/0330 |
| R26 | Resistor 18K 5% 0.25W Axial | 51/1040/018K |
| R27 | Resistor 10K0 1% 0.25W Axial | 51/1010/010K |
| R28 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R29 | Resistor 2K2 5% 0.25W Axial | 51/1040/02K2 |
| R30 | Resistor 470K 5% 0.25W Axial | 51/1040/470K |
| R31 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R32 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R33 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R34 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R35 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R36 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R37 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R38 | Resistor 91K 5% 0.25W Axial | 51/1040/091K |

| Ref. | Description | Part Number |
|-------------|-------------------------------|--------------------|
| R39 | Resistor 22R 5% 0.25W Axial | 51/1040/0022 |
| R40 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R41 | Resistor 2K2 5% 0.25W Axial | 51/1040/02K2 |
| R42 | Resistor 100R 5% 0.25W SM1206 | 51/3380/0100 |
| R43 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R44 | Resistor 6K8 5% 0.25W Axial | 51/1040/06K8 |
| R45 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R46 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R47 | Resistor 64K9 1% 0.25W Axial | 51/1010/64K9 |
| R48 | Resistor 64K9 1% 0.25W Axial | 51/1010/64K9 |
| R49 | Resistor 7K50 1% 0.25W Axial | 51/1010/07K5 |
| R50 | Resistor 1M0 5% 0.25W Axial | 51/1040/01M0 |
| R51 | Resistor 10K 5% 0.25W SM1206 | 51/3380/010K |
| R52 | Resistor 10K 5% 0.25W SM1206 | 51/3380/010K |
| R53 | Resistor 7K50 1% 0.25W Axial | 51/1010/07K5 |
| R54 | Resistor 10K0 1% 0.25W Axial | 51/1010/010K |
| R55 | Resistor 91K 5% 0.25W Axial | 51/1040/091K |
| R56 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R57 | Resistor 91K 5% 0.25W Axial | 51/1040/091K |
| R58 | Resistor 64K9 1% 0.25W Axial | 51/1010/64K9 |
| R59 | Resistor 64K9 1% 0.25W Axial | 51/1010/64K9 |
| R60 | Resistor 1K2 5% 0.25W Axial | 51/1040/01K2 |
| R61 | Resistor 1K2 5% 0.25W Axial | 51/1040/01K2 |
| R62 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R63 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R64 | Resistor 390R 5% 0.25W Axial | 51/1040/0390 |
| R65 | Resistor 47K 5% 0.25W Axial | 51/1040/047K |
| R66 | Resistor 47K 5% 0.25W Axial | 51/1040/047K |
| R67 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R68 | Resistor 680R 5% 0.25W Axial | 51/1040/0680 |
| R69 | Resistor 1K 5% 0.25W Axial | 51/1040/001K |
| R70 | Resistor 680R 5% 0.25W Axial | 51/1040/0680 |
| R71 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R72 | Resistor 47R 5% 0.25W Axial | 51/1040/0047 |
| R73 | Resistor 10M 5% 0.25W Axial | 51/1040/010M |
| R74 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R75 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R76 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R77 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R78 | Resistor 6K49 1% 0.25W Axial | 51/1010/6K49 |
| R79 | Resistor 28K7 1% 0.25W Axial | 51/1010/28K7 |
| R80 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R81 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R82 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R83 | Resistor 5K11 1% 0.25W Axial | 51/1010/5K11 |
| R84 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R85 | Resistor 2K2 5% 0.25W Axial | 51/1040/02K2 |
| R86 | Resistor 680R 5% 0.25W Axial | 51/1040/0680 |
| R87 | Resistor 2K2 5% 0.25W SM1206 | 51/3380/02K2 |
| R88 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R89 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R90 | Resistor 180R 5% 0.25W Axial | 51/1040/0180 |
| R91 | Resistor 100R 5% 0.25W SM1206 | 51/3380/0100 |
| R92 | Resistor 180R 5% 0.25W SM1206 | 51/3380/0180 |
| R93 | Resistor 270R 5% 0.25W SM1206 | 51/3380/0270 |
| R94 | Resistor 1K8 5% 0.25W Axial | 51/1040/01K8 |
| R95 | Resistor 1K 5% 0.25W Axial | 51/1040/01K0 |
| R96 | Resistor 15R 5% 0.25W SM1206 | 51/3380/0015 |
| R97 | Resistor 470R 5% 0.25W SM1206 | 51/3380/0470 |
| R98 | Resistor 47R 5% 0.25W SM1206 | 51/3380/0047 |
| R99 | Resistor 10K 5% 0.25W SM1206 | 51/3380/010K |
| R100 | Resistor 47R 5% 0.25W SM1206 | 51/3380/0047 |

| Ref. | Description | Part Number |
|-------------|---------------------------------|--------------------|
| R101 | Resistor 4K32 1% 0.25W Axial | 51/1010/4K32 |
| R102 | Resistor 4K32 1% 0.25W Axial | 51/1010/4K32 |
| R103 | Resistor 4K32 1% 0.25W Axial | 51/1010/4K32 |
| R104 | Resistor 470K 5% 0.25W Axial | 51/1040/470K |
| R105 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R106 | Resistor 560R 5% 0.25W Axial | 51/1040/0560 |
| R107 | Resistor 3K3 5% 0.25W Axial | 51/1040/03K3 |
| R108 | Resistor 560R 5% 0.25W Axial | 51/1040/0560 |
| R109 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R110 | Resistor 100R 5% 0.25W Axial | 51/1040/0100 |
| R111 | Resistor 2K2 5% 0.25W Axial | 51/1040/02K2 |
| R112 | Resistor 220K 5% 0.25W Axial | 51/1040/220K |
| R113 | Resistor 68R 5% 0.25W Axial | 51/1040/0068 |
| R114 | Resistor 47K 5% 0.25W Axial | 51/1040/047K |
| R115 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R116 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R117 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R119 | Resistor 22R 5% 0.25W Axial | 51/1040/0022 |
| R120 | Resistor 220R 5% 0.25W Axial | 51/1040/0220 |
| R121 | Resistor 120K 5% 0.25W Axial | 51/1040/120K |
| R123 | Resistor 150K 5% 0.25W Axial | 51/1040/150K |
| R124 | Resistor 150K 5% 0.25W Axial | 51/1040/150K |
| R125 | Resistor 680K 5% 0.25W Axial | 51/1040/680K |
| R126 | Resistor 680K 5% 0.25W Axial | 51/1040/680K |
| R127 | Resistor 470K 5% 0.25W Axial | 51/1040/470K |
| R128 | Resistor 560K 5% 0.25W Axial | 51/1040/560K |
| R129 | Resistor 470K 5% 0.25W Axial | 51/1040/470K |
| R130 | Resistor 470R 5% 0.25W SM1206 | 51/3380/0470 |
| R131 | Resistor 47R 5% 0.25W SM1206 | 51/3380/0047 |
| R132 | Resistor 47R 5% 0.25W SM1206 | 51/3380/0047 |
| R133 | Resistor 510K 5% 0.25W Axial | 51/1040/510K |
| R134 | Resistor 270R 5% 0.25W Axial | 51/1040/0270 |
| R135 | Resistor 470R 5% 0.25W Axial | 51/1040/0470 |
| R136 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R137 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R138 | Resistor 22K 5% 0.25W Axial | 51/1040/022K |
| R139 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R140 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R141 | Resistor 10R 5% 0.25W Axial | 51/1040/0010 |
| R142 | Resistor 470K 5% 0.25W SM1206 | 51/3380/470K |
| RN1 | Resistor PACK 100K X8 DIP16 | 52/2002/100K |
| RN2 | Resistor PACK 10K SIP10 | 52/2002/010K |
| RV1 | Trimpot 10K 1 Turn Vertical | 53/1020/010K |
| RV2 | Trimpot 10K 1 Turn Vertical | 53/1020/010K |
| RV3 | Trimpot 10K 1 Turn Vertical | 53/1020/010K |
| RV4 | Trimpot 10K Multiurn HOR | 53/2060/010K |
| S1 | Switch PSH BTN SPDT & Capacitor | 31/0005/E121 |
| T1 | Transformer Line 600 Ohm | 37/2040/5065 |
| U1 | IC RS232 Inter MAX232C | 26/2001/232C |
| U2 | IC 3 State BUF 74HC244N | 26/2030/244N |
| U3 | IC Micro Super MC34064P-5 | 26/2000/064P |
| U4 | IC 8 Bit Latch 74HC573N | 26/2030/C573 |
| U5 | IC Eprom 27C256 | 26/2090/C256 |
| U6 | IC Frequency SYN MB1501 SO16X | 26/2000/1501 |
| U7 | IC Quad OP Amplifier TLC274 | 25/2050/274C |
| U8 | IC Dual FET OP Amplifier DIP8 | 25/1050/272C |
| U9 | IC Quad OP Amplifier TLC274 | 25/2050/274C |
| U10 | IC Analogue GATE MC14066B | 26/2040/4066 |
| U11 | IC Quad Nand 74C00 DIP14 | 26/2031/4C00 |
| U13 | IC Micro 68HC11A1P | 26/2000/HC11 |
| U14 | IC Volt Regulator LM7805 | 25/2040/7805 |
| XO1 | TCXO 12.8 MHz O91/143-2 | 32/2030/12.8 |

| Ref. | Description | Part Number |
|-------------|--------------------|--------------------|
| Y1 | Crystal 8.0MHz | 32/2049/08M0 |
| Y2 | Crystal 4.0MHz | 32/2049/04M0 |

Power Amplifier Assembly

| Ref. | Description | Part Number |
|-------------|---|--------------------|
| C1 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C2 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C3 | Capacitor 18P 5% NPO SM1206 | 46/3300/018P |
| C4 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C5 | Capacitor 10N 10% 50V X7R Rad.2 | 46/2001/010N |
| C6 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C7 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C8* | Capacitor 15P 500V Mica SM1210 | 48/3003/015P |
| C9 | Capacitor 27P 500V Mica SM1210 | 48/3003/027P |
| C10 | Capacitor 27P 500V Mica SM1210 | 48/3003/027P |
| C11* | Capacitor 15P 500V Mica SM1210 | 48/3003/015P |
| C12 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C13 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C14 | Capacitor 22N 5% 63V MKT Rad.2 | 47/2010/022N |
| C15 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C16 | Capacitor 100P 5% 63V NPO 1206 | 46/3300/100P |
| C17 | Capacitor 100P 5% 63V NPO 1206 | 46/3300/100P |
| C18 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C20 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C21 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C23 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C24 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| C25 | Capacitor 10P 5% 63V NPO SM1206 | 46/3300/010P |
| C26 | Capacitor 10P 5% 63V NPO SM1206 | 46/3300/010P |
| C27 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C28 | Capacitor 100N 10% 63V X7R 1206 | 46/3310/100N |
| C29 | Capacitor 10U 35V Rad Electro | 41/2001/010U |
| C30 | Capacitor 1N0 5% 63V NPO SM1206 | 46/3300/01N0 |
| C31 | Capacitor 100N 10% 50V X7R Rad.2 | 46/2001/100N |
| C32 | Capacitor 1N0 5% 100V NPO Rad.2 | 46/2000/01N0 |
| D1 | Diode Schottkey BAT17 SOT23 | 21/3030/0017 |
| D2 | Diode Schottkey BAT17 SOT23 | 21/3030/0017 |
| D3 | Diode Silicon 1N4148 | 21/1010/4148 |
| D4 | Diode Silicon 1N4148 | 21/1010/4148 |
| J2 | Connector Coax SMB PCB Horizontal | 35/2001/0001 |
| L1 | In Molded 4.5 Turn | 37/2021/0004 |
| L2 | In Molded 4.5 Turn | 37/2021/0004 |
| L3 | In Molded 4.5 Turn | 37/2021/0004 |
| L4 | Ferrite Beads (4) | 37/1022/0001 |
| L5 | Ind 3U3 10% Choke SM1008 | 7/3320/03U3 |
| L6 | Ind 6 Hole Ferrite RFC | 37/1021/0001 |
| L7 | Ind 6 Hole Ferrite RFC | 37/1021/0001 |
| L8 | Ind Molded 1.5 Turn | 37/2021/0001 |
| L9 | Ind Molded 2.5 Turn | 37/2021/0002 |
| P1 | Connector 16 Way Horizontal Shrouded Header | 35/2503/0016 |
| Q2 | Transistor RF NPN MRF5812 SO8 | 27/3020/5812 |
| Q3 | Transistor GP PNP 1A MPSW51A | 27/2010/PW51 |
| Q4 | Transistor GP NPN 2N3904 TO92 | 27/2020/3904 |
| Q5 | Transistor GP NPN 2N3904 TO92 | 27/2020/3904 |
| R1 | Resistor 220R 5% 0.25W SM1206 | 51/3380/0220 |
| R2 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R3 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R4 | Resistor 100R 5% 0.25W Axial | 51/1040/0100 |
| R5 | Resistor 220R 5% 0.25W SM1206 | 51/3380/0220 |
| R6 | Resistor 15K 5% 0.25W Axial | 51/1040/015K |

| Ref. | Description | Part Number |
|-------------|-------------------------------|--------------------|
| R7 | Resistor 47K 5% 0.25W Axial | 51/1040/047K |
| R10 | Resistor 10R 5% 0.25W Axial | 51/1040/0010 |
| R11 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R12 | Resistor 10R 5% 0.25W Axial | 51/1040/0010 |
| R13 | Resistor 470R 5% 0.25W Axial | 51/1040/0470 |
| R14 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R15 | Resistor 470R 5% 0.25W Axial | 51/1040/0470 |
| R16 | Resistor 470R 5% 0.25W SM1206 | 51/3380/0470 |
| R17 | Resistor 7K5 1% 0.25W Axial | 51/1010/07K5 |
| R18 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R19 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R20 | Resistor 100R 5% 0.25W Axial | 51/1040/0100 |
| R21 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R22 | Resistor 1K0 5% 0.25W Axial | 51/1040/01K0 |
| R23 | Resistor 47K 5% 0.25W SM1206 | 51/3380/047K |
| R24 | Resistor 47K 5% 0.25W SM1206 | 51/3380/047K |
| R25 | Resistor 220R 5% 0.25W SM1206 | 51/3380/0220 |
| R26 | Resistor 220R 5% 0.25W SM1206 | 51/3380/0220 |
| R27 | Resistor 100K 5% 0.25W Axial | 51/1040/100K |
| R28 | Resistor 1M0 5% 0.25W Axial | 51/1040/01M0 |
| R29 | Resistor 10K 5% 0.25W Axial | 51/1040/010K |
| R30 | Resistor 4K7 5% 0.25W Axial | 51/1040/04K7 |
| R33(Q1) | Resistor 10R 5% 0.25W Axial | 51/1040/0010 |
| RT1 | Thermistor | 54/0400/0080 |
| RV1 | Trimpot 10K 1 Turn Vertical | 53/1020/010K |
| U1 | IC Quad Op Amp MC3403P | 25/1050/3403 |
| U2 | Amp 20W 220-245MHz | 18/M687/0029 |

*C8 and C11 are not located as per PCB reference designators.

