



Kasa Smart Wi-Fi Light Switch, Single Pole


Quick Start Guide

If you are unsure, consult a qualified electrician.

2 Disconnect wires from the old switch.

Wire Your Switch


Turn off the circuit breaker. Then remove the old wallplate of the wall switch and label the wires.

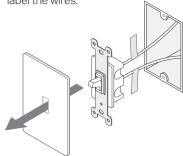

Ground: Usually green or copper.


Neutral: Usually white, not connected to the dumb switch. Line/Load: Usually black, and connected to the dumb switch

Connect the wires to the smart switch as shown below.

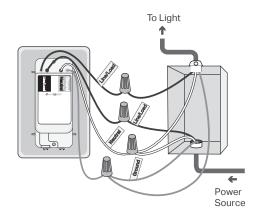


Note: No need to distinguish between Line and Load wires.

Line up the switch with the mounting holes. Secure it with screws.

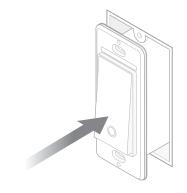

Attach the wallplate. Then the wiring is

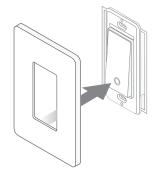

*Images may differ from your actual product.

?

Need some help?

Visit www.tp-link.com/support

for technical support, user guides, FAQs, warranty & more

Set Up Your Switch

STEP 1 DOWNLOAD APP

Get the **Kasa Smart** app from the App Store or Google Play.






STEP 2 SET UP

Tap the \oplus button in the app and select **Smart Switches**. Then follow the step-by-step app instructions to set up your smart switch.





Appearance

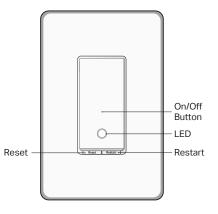

Button Explanations

Reset	Press and hold for about 5s to reset Wi-Fi while keeping other settings. Press and hold for about 10s to restore your switch to factory default settings.
Restart	Press to restart your switch.

LED Status

Solid amber	Starting up.
Blinking amber & green	Ready for setup.
Blinking green	Connecting to Wi-Fi.
Stay green for 30s	Connected to Wi-Fi.
Solid red	Disconnected from Wi-Fi.
Blinking amber	Device resetting.
White	Light fixture is off.

Specifications

Rating: 120V~ 60Hz

Load: 600W Incandescent, 1/6 HP Motor

Operation temperature: 0~40°C

Method of mounting included: Independently mounted

(Vertically position only);

Operating control, Type 1.C action

Pollution Degree 2, Rated Impulse Voltage 2500 V

Software Class A, NEMA Type 1

CAUTION

High Voltage-Disconnect power supply before servicing

Safety Notice

Before installing, servicing or removing the switch, read and follow all safety precautions including the following:

- CAUTION Risk of Electric Shock More than one disconnect switch may be required to de-energize the equipment before servicing. A circuit breaker which disconnects the Line and Neutral conductor simultaneously is suitable. Ensure power is off at the circuit breaker before removing or installing any switch. Use a non-contact voltage tester to ensure the power is off.
- The Smart Switch must be installed and used in accordance with the National Electric Code (NEC) or your local electrical code. If you are unfamiliar with these codes and requirements, or are uncomfortable performing the installation, consult a qualified electrician.
- Do not install the Smart Switch with wet hands or when standing on wet or damp surfaces.
- Install only in a suitable UL Listed outlet box (suitable dimensions: H > 2.95 in/75 mm, W > 1.81 in/46 mm, D > 2 in/51 mm).

FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

—Consult the dealer or an experienced radio/TV technician for help.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device

may cause undesired operation.

authority to operate the equipment.

FCC Radiation Exposure Statement

may not cause harmful interference, and (2) this device must accept any interference received, including interference that

Caution!

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with

Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and

the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's