




INSTALLATION & OWNER'S MANUAL

MODEL: TST-LCACWIFIKP

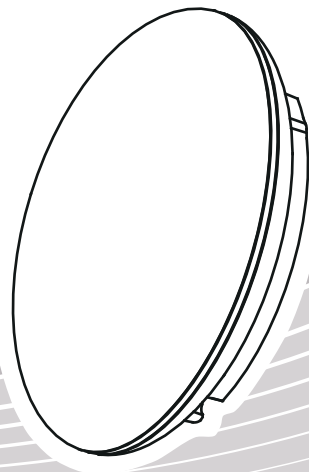

IMPORTANT NOTICE: Thank you very much for purchasing our product. Before using your unit, please read this manual carefully and keep it for future reference.

- This manual gives detailed description of the precautions that should be brought to your attention during operation.
- In order to ensure correct service of the smart port, please read this manual carefully before using the unit.
- For convenience of future reference, keep this manual after reading it.

CONTENTS

| | |
|----------------------------------|----|
| 1. SAFETY PRECAUTION..... | 1 |
| 2. DOWNLOAD AND INSTALL APP..... | 3 |
| 3. INSTALLATION ACCESSORY..... | 4 |
| 4. INSTALLATION METHOD..... | 5 |
| 5. SPECIFICATION..... | 11 |
| 6. USER REGISTRATION | 12 |
| 7. NETWORK CONFIGURATION..... | 13 |
| 8. HOW TO USE APP | 23 |
| 9. SPECIAL FUNCTIONS..... | 25 |

1. SAFETY PRECAUTION

- Read the safety precautions carefully before installing the unit.
- Stated below are important safety issues that must be obeyed.

Applicable system: IOS, Android.

(Suggest:IOS 10.3, Android 6.0)

Note:

- APP can not support the latest software version of Android and IOS system.
- Due to special situation may be occurred, we explicitly claim below: Not all of the Android and IOS systems are compatible with APP. We will not be responsible for any issues as a result of the incompatibility.

Wireless safety strategy

- Smart kit only support WPA-PSK/WPA2-PSK encryption and none encryption . WPA-PSK/WPA2-PSK encryption is recommended..

CAUTION

- Please Check The Service Website For More Information.
- Smart Phone camera needs to be 5 million pixels or above to make sure scan QR code well.
- Due to different network situation, sometimes, request time-out could happen, thus, it is necessary to do network configuration again.
- Due to different network situation, control process may return time-out sometimes. If this situation occurs, the display between board and App may not be the same, please do not feel confused.

NOTE: Company will not be liable for any issues and problems caused by Internet, Wi-Fi Router and Smart Devices. Please contact the original provider to get further help.

2. DOWNLOAD AND INSTALL APP



QR Code A



QR Code B

Caution: QR Code A and QR Code B is only available for downloading APP.

- Android Phone users: scan QR Code A or go to google play, search 'Nethome Plus' app and download it.
- Iphone Users: scan QR Code B or go to App Store, search 'Nethome Plus' app and download it.

3. INSTALLATION ACCESSORY

Select the installation location

Don't install at the place which is covered with heavy oil, vapor or sulfured gas, otherwise, this product would be deformed that would lead to system malfunction.

Preparation before installation

1. Please confirm that all the following parts have been supplied.


| No. | Name | Qty. | Remarks |
|-----|---------------------------------|------|----------------------------------|
| 1 | Smart port | 1 | _____ |
| 2 | Installation and owner's manual | 1 | _____ |
| 3 | Screws | 3 | M4X20 (For Mounting on the Wall) |
| 4 | Wall plugs | 3 | For Mounting on the Wall |
| 5 | Smart kit | 1 | _____ |
| 6 | The connective wires group-1 | 1 | See Fig.4-3 |

2. Prepare the following assemblies on the site.


| No. | Name | Qty.(embedded into wall) | Specification (only for reference) | Remarks |
|-----|---|--------------------------|------------------------------------|---------|
| 1 | Wiring Tube(Insulating Sleeve and Tightening Screw) | 1 | _____ | _____ |

4. INSTALLATION METHOD

1. Wifi controller structure size figure

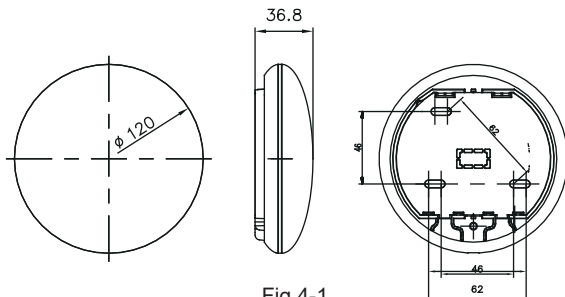


2. Wiring Principle Sketch:

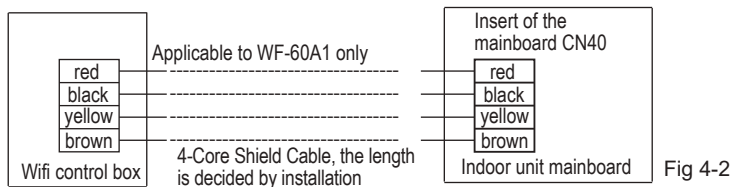

4. INSTALLATION METHOD

3.Wiring figure

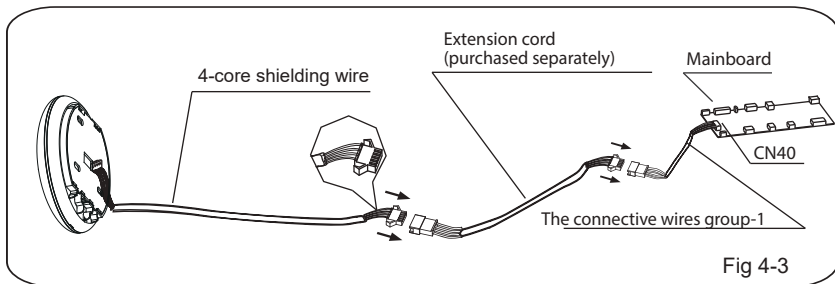

- Connect the male joint of the connective wires group-1 to the mainboard, then connect the other side of the connective wires group-1 to the 4-core shielding wire of the smart port.(See Fig.4-3)
- If want to extent the wire ,please use extension cord (purchased separately) . (See Fig.4-3)

4.Remove the upper part of the smart port

- Insert a slot screwdriver into the slots in the lower part of the smart port (2 places), and remove the upper part of the smart port. (Fig.4-4)

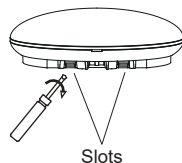


Fig 4-4

4. INSTALLATION METHOD

5. Fasten the back plate of the smart port
- For exposed mounting, fasten the back plate on the wall with the 3 screws (M4×20) and plugs. (Fig.4-5)

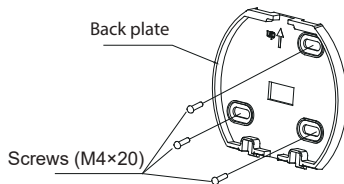


Fig 4-5

6. Insert the smart kit with slightly strength into the main PCB of the smart port. (Fig.4-6)

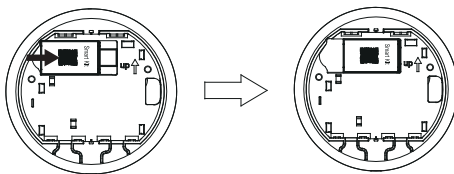


Fig 4-6

4. INSTALLATION METHOD

7. Wiring

A. For exposed mounting, two outletting positions.

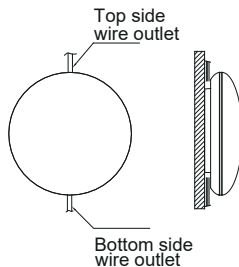


Fig 4-7

B. Shielded wiring

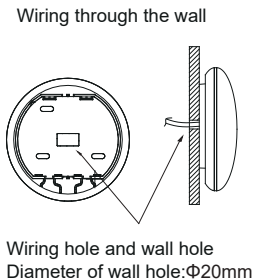


Fig 4-8

4. INSTALLATION METHOD

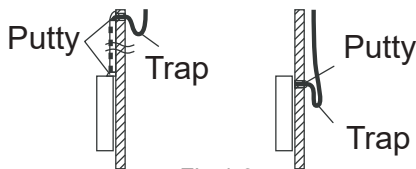


Fig 4-9



CAUTION

Avoid the water enter into the smart port, use trap and putty to seal the connectors of wires during wiring installation. (Fig. 4-9) When under installation, reserve certain length of the connecting wire for convenient to take down the smart port while during maintenance.

8. Reattach the upper part of the smart port

- After adjusting the upper case and then buckle the upper case; avoid clamping the wiring during installation. (Fig 4-10)

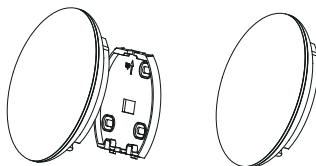


Fig 4-10

4. INSTALLATION METHOD

9. Connect the smart port to the wire controller (if needed)

- ① Remove the top cover from the gap between the top cover and bottom by a tool with flat head. (See Fig.4-11)
- ② Use the connective cable to connect the wire controller and CN3 of the smart port. (See Fig.4-12)(refer to the Wire controller manual for details)

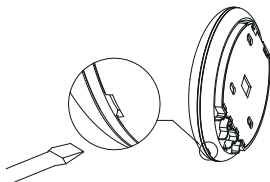


Fig 4-11

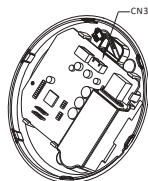


Fig 4-12

NOTE:


- Connection for wired control function by KJR-120C/TF-E
KJR-120G2/TFBG-E

5. SPECIFICATION


| | |
|---------------------------|----------------------------------|
| Model | TST-LCACWIFIKP |
| Standard | IEEE802.11b/g/n |
| Antenna Type | Wxternal omnidirectional Antenna |
| Frequency | WIFI:2.4G |
| Maximum Transmitted Power | 15dBm Max |
| Operation Temperature | 0OC~45OC/32OF~113OF. |
| Operation Humidity | 10%~85% |
| Power Input | DC 5V/300mA |

6. USER REGISTRATION

- Please ensure your mobile device is connected to Wifi router. Also, the Wifi router has already connected to Internet before doing user registration and network configuration.
- It is better to log in your email box and active your registration account by clicking link in case you forget the password.

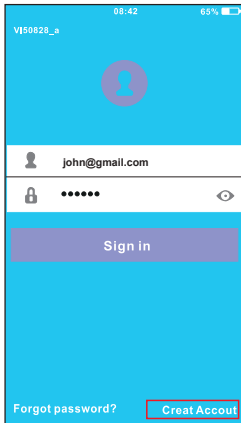

①Click 'Create Account'.

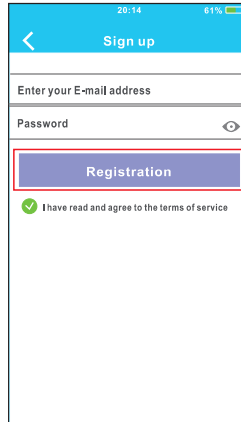

②Enter your email address and password, and then click 'Regietration'.

7. NETWORK CONFIGURATION

CAUTION

- It is necessary to forget any other around network and make sure the Android or IOS device just connect to the WIFI network you want to configure.
- Make sure the Android or IOS device WIFI function works well and can be connected back to your original WIFI network automatically.

Kindly reminder:


- When AC enters into AP mode, the air-conditioning remote controller can't control it. It is necessary to finish network configuration or power the AC again in order to control it. Alternatively, you need to wait 8 minutes to let the AC quit AP mode automatically.

7. NETWORK CONFIGURATION

■ Using Android device to do network configuration.

- ① Make sure your mobile device has already been connected to the wifi network which you want to use. Also, you need to forget other irrelative wifi network in case it influences your cofiguration process.
- ② Disconnect the power supply of AC.
- ③ Connect the power supply of AC, and continuously press the digital display button or do not disturb button seven times in 3 minutes.
- ④ When the AC displays AP , it means that the AC WIFI has already entered into AP Mode.
 - Some type of AC do not need the step to be in AP mode.

7. NETWORK CONFIGURATION

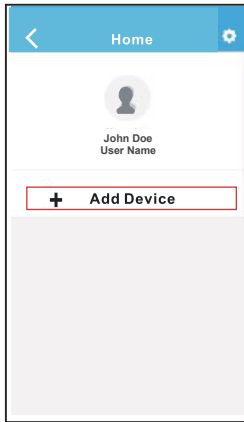


⑤ Press '+ Add Device'




⑥ Scan QR Code which is packed with smart kit

7. NETWORK CONFIGURATION

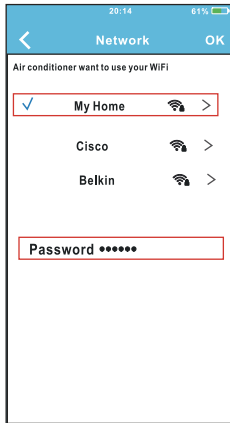

- ⑦ Select your own WiFi network, for example My Home (the picture is only for reference)
- ⑧ Enter your own WiFi router password and click OK;

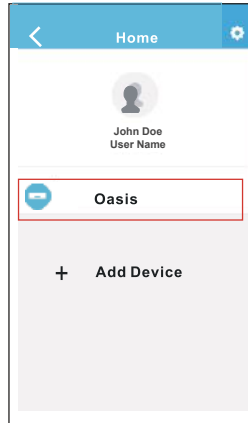


- ⑨ Configuration Success, you can see the device on the list.

7. NETWORK CONFIGURATION


■ Using IOS device to do network configuration

- ① Make sure your mobile device has already been connected to the wifi network which you want to use. Also, you need to forget other irrelative wifi network in case it influences your cofiguration process.
- ② Disconnect the power supply of AC(some units).
- ③ Connect the power supply of AC, and continuously press the digital display button or do not disturb button seven times in 3 minutes.
- ④ When the AC displays AP , it means that the AC WIFI has already entered into AP Mode.

7. NETWORK CONFIGURATION

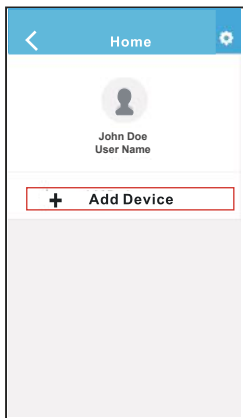


⑤ Press '+ Add Device'

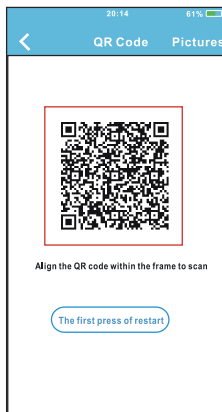

⑥ Scan QR Code which is packed with smart kit

7. NETWORK CONFIGURATION

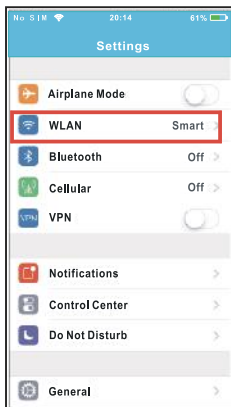


- ⑦ Read the instruction above and press the 'Home' button to return to the device interface.
- ⑧ Click settings to enter the setting page, select WLAN/WIFI.

7. NETWORK CONFIGURATION



⑨ Choose net_ac_XXXX.

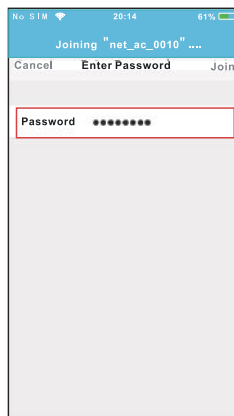


⑩ Type default password: 12345678 and click "Join " .

7. NETWORK CONFIGURATION




- ⑪ Return to APP and click Next

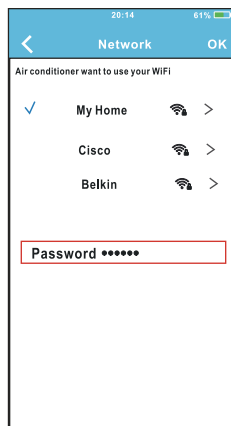

- ⑫ Select your own WiFi network, for example My Home (the picture is only for reference)
- ⑬ Enter your own WiFi router password and click OK;

7. NETWORK CONFIGURATION

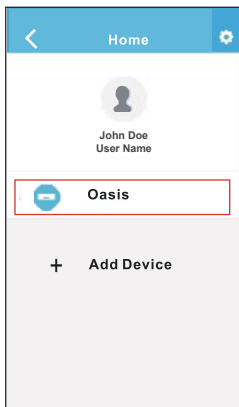



- ⑭ Configuration Success, you can see the device on the list.

NOTE:

- When finishing network configuration, APP will display success cue words on the screen.
- Due to different internet environment, it is possible that the device status still display "offline". If this situation occurs, it is necessary to pull and refresh the device list on the APP and make sure the device status become "online". Alternatively, user can turn off the AC power and turn on it again, the device status will become "online" after a few minutes.

8. HOW TO USE APP

Please ensure both your mobile device and air conditioner are connected to the Internet before using app to control the air conditioner via internet, please follow the next steps:

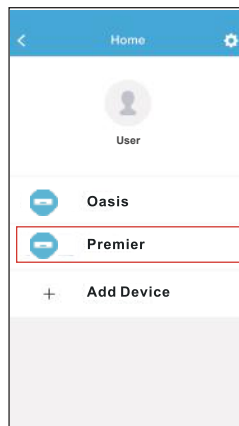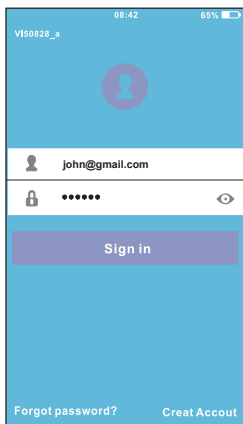

- ① Type your own account and password, Click "Sign in".
- ② Select the target air conditioner to enter into the main control interface.

8. HOW TO USE APP



- ③ Thus, user can control air conditioners on/off status, operation mode, temperature, fan speed and so on.

NOTE:

- Not all the functions of the APP are available on air conditioner. For example: ECO, Turbo, Left and Right Swing, Up and Down swing function, please check the user manual to find more information.

9. SPECIAL FUNCTIONS


Including: Timer on, Timer off, 8OC Heat, Sleep, Check.

NOTE:

- If the air conditioner do not support the above functions, the functions will be hid from the function list.

■ Timer on/ Timer off

Weekly, user can make an appointment to turn on or off AC on specific time. User also can choose circulation to keep the AC under schedule control every week.

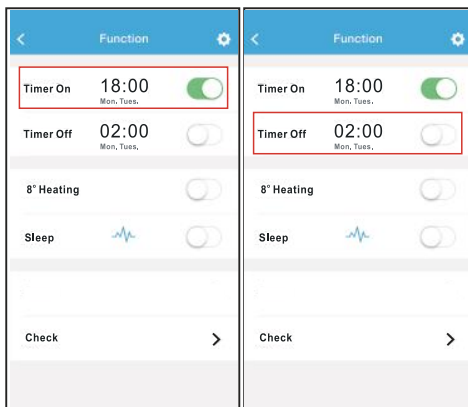

9. SPECIAL FUNCTIONS

<Timer OnOK

0848

0949

1050

1151

1252

Repeat

Mon,Tue

<Repeat

Monday

Tuesday

Wednesday

Thursday

Friday


Saturday

Sunday

9. SPECIAL FUNCTIONS

■ 8°C Heat



User can let the AC run under 8°C Heat by one-click.
When people go outside, this function can protect your furniture from frost damage.

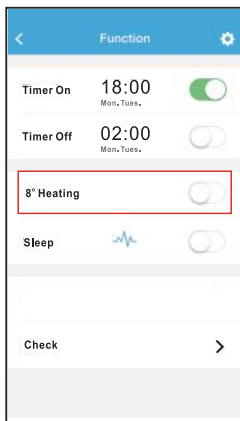

9. SPECIAL FUNCTIONS

■ Sleep


User can customize their own comfortable sleep by setting target temperature.

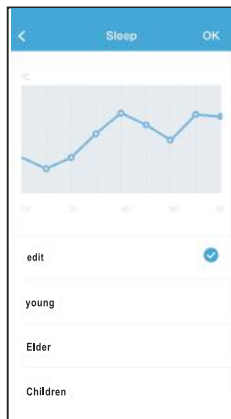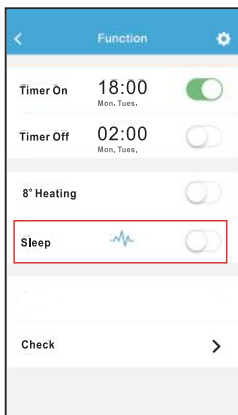

9. SPECIAL FUNCTIONS

■ Check

User can simply check the AC running status with this function. When finishing this procedure, it can display the normal items, abnormal items, and detail information.

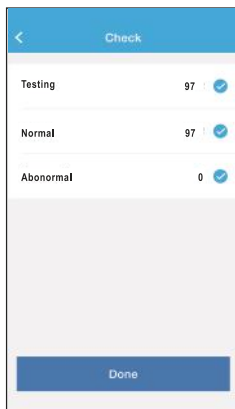

9. SPECIAL FUNCTIONS

<

Detail

Abnormal:0

Normal:97

Compressor frequency

Compressor current

Outdoor machine current

Evaporator temperature

Condenser temperature

Exhaust temperature

Outdoor temperature



CAUTION

- This device complies with Part 15 of the FCC Rules and RSS 210 of Industry & Science Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - Only operate the device in accordance with the instructions supplied. This device complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC and IC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.
 - Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
-

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.