

Rhein Tech Laboratories
360 Herndon Parkway
Suite 1400
Herndon, VA 20170
<http://www.rheintech.com>

Report #: 2004164
FCC ID: ATH2425111
Model: 242-51xx
Standards: FCC Part 90 & IC RSS-119
Date: November 4, 2004

APPENDIX K: USER'S MANUAL

Please refer to the Operator's Manual.

5100 Series

OPERATING MANUAL

DIGITAL/ANALOG PORTABLE RADIO

5100 SERIES PORTABLE RADIO

VHF/UHF/700 and 800 MHz
PROJECT 25 CONVENTIONAL
SMARTNET®/SMARTZONE®

7.2 VDC,
1 and 5 Watts (VHF);
1 and 4 Watts (UHF);
1 and 3 Watts (700/800 MHz)
Part No. 242-51xx-xxx



RF ENERGY EXPOSURE AWARENESS AND CONTROL INFORMATION, AND OPERATIONAL INSTRUCTIONS FOR FCC OCCUPATIONAL USE REQUIREMENTS

BEFORE USING YOUR PORTABLE 2-WAY RADIO, READ THIS IMPORTANT RF ENERGY AWARENESS AND CONTROL INFORMATION AND OPERATIONAL INSTRUCTIONS TO ENSURE COMPLIANCE WITH THE FCC'S RF EXPOSURE GUIDELINES.

NOTICE: This radio is intended for use in occupational/controlled conditions, where users have full knowledge of their exposure and can exercise control over their exposure to meet FCC limits. This radio device is NOT authorized for general population, consumer, or any other use.

This 2-way radio uses electromagnetic energy in the radio frequency (RF) spectrum to provide communications between two or more users over a distance. It uses radio frequency (RF) energy or radio waves to send and receive calls. RF energy is one form of electromagnetic energy. Other forms include, but are not limited to, electric power, sunlight and x-rays. RF energy, however, should not be confused with these other forms of electromagnetic energy, which when used improperly can cause biological damage. Very high levels of x-rays, for example, can damage tissues and genetic material.

Experts in science, engineering, medicine, health and industry work with organizations to develop standards for exposure to RF energy. These standards provide recommended levels of RF exposure for both workers and the general public. These recommended RF exposure levels include substantial margins of protection. All 2-way radios marketed in North America are designed, manufactured and tested to ensure they meet government established RF exposure levels. In addition, manufacturers also recommend specific operating instructions to users of 2-way radios. These instructions are important because they inform users about RF energy exposure and provide simple procedures on how to control it. Please refer to the following websites for more information on what RF energy exposure is and how to control your exposure to assure compliance with established RF exposure limits.

- <http://www.fcc.gov/oet/rfsafety/rf-faqs.html>
- <http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>

FEDERAL COMMUNICATIONS COMMISSION REGULATIONS

The FCC rules require manufacturers to comply with the FCC RF energy exposure limits for portable 2-way radios before they can be marketed in the U.S. When 2-way radios are used as a consequence of employment, the FCC requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your EFJohnson 2-way radio has a RF exposure product label. Also, your EFJohnson user manual, or product manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.

COMPLIANCE WITH RF EXPOSURE STANDARDS

Your EFJohnson 2-way radio is designed and tested to comply with a number of national and international standards and guidelines (listed below) for human exposure to radio frequency electromagnetic energy. This radio complies with the IEEE and ICNIRP exposure limits for occupational/controlled RF exposure environment at operating duty factors of up to 50% transmitting and is authorized by the FCC for occupational use only. In terms of measuring RF energy for compliance with the FCC exposure guidelines, your radio radiates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode. Note: The approved batteries supplied with this radio are rated for a 5-5-90 duty factor (5% talk-5% listen - 90% standby), even though this radio complies with the FCC occupational RF exposure limits and may operate at duty factors of up to 50% talk.

Your EFJohnson 2-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR §§ 1.1307, 1.1310, 2.1091 and 2.1093
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition

RF EXPOSURE COMPLIANCE AND CONTROL GUIDELINES AND OPERATING INSTRUCTIONS

To control your exposure and ensure compliance with the occupational/controlled environment exposure limits always adhere to the following procedures.

Guidelines:

- Do not remove the RF Exposure Label from the device.
- User awareness instructions should accompany device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

Operating Instructions:

- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting 50% of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).
- Hold the radio in a vertical position in front of face with the microphone (and the other parts of the radio, including the antenna) at least one inch (2.5 cm) away from the nose. Keeping the radio at the proper distance is important because RF exposures

decrease with distance from the antenna. Antenna should be kept away from eyes.

- When worn on the body, always place the radio in an EFJohnson approved clip, holder, holster, case, or body harness for this product. Using approved body-worn accessories is important because the use of EFJohnson or other manufacturer's non-approved accessories may result in exposure levels, which exceed the FCC's occupational/controlled environment RF exposure limits.
- If you are not using a body-worn accessory and are not using the radio in the intended use position in front of the face, then ensure the antenna and the radio are kept at least 2.5 cm (one inch) from the body when transmitting. Keeping the radio at the proper distance is important because RF exposures decrease with increasing distance from the antenna.
- Use only EFJohnson approved supplied or replacement antennas, batteries, and accessories. Use of non-EFJohnson approved antennas, batteries, and accessories may exceed the FCC RF exposure guidelines.
- For a list of EFJohnson approved accessories, see the service manual or marketing accessory lists or contact the EFJohnson Company

CONTACT INFORMATION

Toll-Free: 800-328-3911

FAX: 507-835-6969

E-Mail: customerservice@efjohnson.com You can also e-mail a person directly if you know their first initial/last name (example: jsmith@efjohnson.com).

You may also contact the Customer Service Department by mail. Please include all information that may be helpful in solving your problem. The mailing address is as follows:

E.F. Johnson Company
Customer Service Department
299 Johnson Avenue
P.O. Box 1249
Waseca, MN 56093-0514

ELECTROMAGNETIC INTERFERENCE

This device complies with Part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference. In addition, changes or modification to this equipment not expressly approved by the EFJohnson Company could void the user's authority to operate this equipment (FCC Rules, 47CFR Part 15.19).

USAGE COMPATIBILITY

DO NOT operate it in areas that are sensitive to RF energy such as aircraft, hospitals, blasting sites,

and fuel storage sites. Areas with potentially flammable atmospheres are usually, but not always, clearly posted. These may include gas stations, fuel and chemical storage and transfer stations, below deck on boats, and areas where the air contains flammable chemicals or particles such as grain dust or metal powders.

BATTERY DISPOSAL

Dispose of the nickel metal-hydride (NiMH) or nickel-cadmium (NiCd) battery used by this radio in accordance with local regulations. DO NOT dispose of it in fire because it can explode. Also, do not short the terminals because it may become very hot.



51xx SERIES PORTABLE OPERATING MANUAL

VHF/UHF/700 AND 800 MHz PROJECT 25 (DIGITAL) AND ANALOG SMARTNET[®]/SmartZone[®]

Copyright© 2004 by the EFJohnson Company

The EFJohnson Company, which was founded in 1923, provides wireless communication systems solutions for public safety, government, and commercial customers. The company designs, manufactures, and markets conventional and trunked radio systems, mobile and portable subscriber radios, repeaters, and Project 25 digital radio products. EFJohnson is a wholly owned subsidiary of EFJ, Inc.

Viking Head/EFJohnson logo, PCConfigure[™], and Call Guard[®] are trademarks of the EFJohnson Company. SMARTNET[®], SmartZone[®], SecureNet[™], Call Alert[™], Enhanced Private Conversation[™], and Private Conversation II[™] are trademarks of Motorola, Inc. All other company and/or product names used in this manual are trademarks and/or registered trademarks of their respective manufacturer. The IMBE[™] voice coding technology embodied in this product is protected by intellectual property rights including patent rights of Digital Voice Systems, Inc.

LAND MOBILE PRODUCT WARRANTY - The manufacturer's warranty statement for this product is available from your product supplier or from EFJohnson Company, 299 Johnson Avenue, Box 1249, Waseca, MN 56093-0514. Phone (507) 835-6222.

Information in this manual is subject to change without notice.

TABLE OF CONTENTS

RF EXPOSURE INFORMATION

1 FEATURES

1.1 General Features 9
 1.2 Conventional Features 9
 1.3 SMARTNET/SmartZone Features 10
 1.4 Project 25 Trunked Features 10

2 CONTROLS AND DISPLAY

2.1 Front Panel Controls 11
 2.2 Top Panel Controls 11
 2.3 Side Controls 12
 2.4 Display 12

3 GENERAL OPERATION

3.1 Turning Power On and Setting Volume 13
 Power Up 13
 Standard and Soft Power Down 13
 Setting Volume Level 13
 3.2 Power-Up Password 13
 3.3 Zone and Channel Select 14
 3.4 Low Battery Indication 15
 3.5 Backlight 16
 3.6 Keypad Lock 16
 3.7 Setting Squelch 16
 3.8 Transceiver Operating Modes 16
 General 16
 Conventional Mode 16
 SMARTNET/SmartZone Mode 17
 P25 Trunked Mode 17
 Systems, Channels, and Zones 17

4 RADIO-WIDE FEATURES

4.1 Option Switches 18
 4.2 Menu Mode 18
 4.3 Time-Out Timer 19
 4.4 Home Zone/Channel Select 19
 4.5 Power Output Select 19
 4.6 Alert Tone Select 19
 4.7 Surveillance Mode 21
 4.8 Scanning 21
 Introduction 21
 Standard Scanning 21
 Radio Wide Scanning 21
 Scan Hold Time 22

Transmitting in the Scan Mode 22
 Nuisance Channel Add/Delete 22
 4.9 Scan Lists 22
 Standard Mode Scan Lists 22
 Radio Wide Scan List 22
 Determining Which Channels are in Scan List 23
 Selecting a Scan List 23
 Editing a Scan List 23

5 CONVENTIONAL MODE FEATURES

5.1 Introduction 24
 5.2 Monitoring Before Transmitting 24
 5.3 Monitor Mode 24
 5.4 Busy Channel Lockout 25
 5.5 Call Guard Squelch 25
 Introduction 25
 Call Guard Squelch Enable/Disable 25
 Tone Call Guard Squelch 25
 Digital Call Guard Squelch 26
 Selective Squelch Code Select 26
 5.6 Penalty Timer 26
 5.7 Conversation Timer 27
 5.8 Repeater Talk-Around 27
 5.9 Displaying Transmit/Receive Frequency 27
 5.10 Emergency Alarm and Call 27
 Introduction 27
 Emergency Alarms 27
 Emergency Calls 28
 5.11 Conventional Mode Scanning 28
 General 28
 Transmitting in Scan Mode 28
 Priority Channel Sampling 28
 Changing the Priority Channel 29
 5.12 Standard Conventional Calls 29
 5.13 DTMF/ANI Signaling 30
 5.14 Clone Mode 30
 5.15 Single Tone Encoder 31
 5.16 Project 25 Mode Features 31
 Unit ID Code 31
 Group ID Code 31
 Network Access Code 31
 P25 Group Calls 31
 P25 Unit Calls 31
 Call Alert 32
 Messaging 33
 Status Messaging 33
 5.17 Keypad Programming 33
 Introduction 33
 Menu Description 34

Zone Password	34	6.8	Messaging.	41
Zone Change Parameter	34	6.9	Sending Status Conditions	41
Channel Change Parameter.	34	6.10	Emergency Alarm and Call	41
System Parameters	34		Introduction	41
Channel Parameters	35		Emergency Alarms	42
			Emergency Calls	42
6 SMARTNET/SMARTZONE/P25		6.11	Failsoft Operation.	42
TRUNKED FEATURES		6.12	SMARTNET/Smartzone/P25 Trunked Scanning	
6.1	Introduction		Features.	42
6.2	Analog and Digital Operation		General.	42
6.3	Viewing Unit ID	6.13	Priority Talk Group Sampling.	43
6.4	Standard Group Calls.	6.14	Dynamic Regrouping	43
	Introduction.		SmartZone and P25 Trunked Unique Features.	43
	Placing a Standard Group Call		Introduction	43
	Receiving a Standard Group Call		Busy Override	43
6.5	Private (Unit-To-Unit) Calls		Site Trunking	44
	General		Determining Current Site and Searching For	
	Placing an Enhanced Private Conversation Call		New Site	44
	Placing a Standard Private Conversation Call		Locking/Unlocking a Site	44
	Receiving a Private Call (All Types)			
6.6	Telephone Calls			
	General			
	Placing a Telephone Call			
	Answering a Telephone Call.			
6.7	Call Alert			
	General			
	Answering a Page			
	Initiating a Page			
		7 MISCELLANEOUS		
		7.1	Supervisory Tones	44
		7.2	System Operator Programming	45
		7.3	Speaking Into Microphone	45
		7.4	Operation At Extended Range	45
		7.5	Licensing	45
		7.6	Transceiver Service	45

SECTION 1 FEATURES



Figure 1-1 Front Panel Controls

NOTE: The availability of many of the following features is controlled by factory coding of your transceiver, installed options, and field programming. Refer to Section 9 for more information.

1.1 GENERAL FEATURES

- The following operating modes are programmable:
 - Conventional analog
 - Conventional Project 25 (digital)
 - Trunked Project 25 (digital)
 - SMARTNET™/SmartZone® trunked (analog or digital)
- Up to 16 zones with 16 channels each (256 channels total) are standard. Up to 32 zones and 512 channels total are optional.
- Large graphic display with backlight
- Up to 9 (limited keypad) or 21 (DTMF keypad) programmable option switches

- Menu mode
- Standard and radio-wide scan modes
- Time-out timer
- User selectable high and low power output
- Keypad lock to prevent accidental key presses
- Operates on both wide and narrow band channels
- Power-up password to prevent unauthorized use
- Adjustable tone volume (with Flash code 1.9.0 or later only)
- Soft power down (with Flash code 1.9.0 or later only)

1.2 CONVENTIONAL FEATURES

- Up to 512 channels or talk groups programmable
- Repeater talk-around
- Carrier or Call Guard® controlled squelch on analog channels, NAC and talk group IDs on P25 channels.

- Normal/selective squelch selectable by option switch or menu
- Monitor mode selectable by option switch or menu
- Penalty and conversation timers
- Dual priority channel sampling when scanning (analog channels only)
- Busy channel lockout (transmit disable on busy)
- Unit calls on P25 channels
- Cloning capability
- Emergency alarms and calls to alert a dispatcher of an emergency condition (analog emergency available only with Flash code 1.8.0 or later).
- Single tone encoder controllable by user on analog channels
- ANI (Automatic Number Identification) on analog channels
- Call Alert™ on P25 channels (send and receive pages) with Flash code 1.8.0 or later.
- Predefined messages (up to 16) can be sent to a dispatcher (P25 mode with Flash code 1.8.0 or later only)
- Predefined status conditions (up to 8) can be sent to a dispatcher (P25 mode with Flash code 1.8.0 or later only)
- SecureNet™ DES/DES-XL voice encryption available on analog channels, DES-OFB and AES on P25 channels (see Section 8.1.4 for more information).
- OTAR (Over-The-Air-Rekeying) compatible (P25 channels with Flash code 1.5.0 or later).
- Keypad programming with password access (Federal Government users only)

1.3 SMARTNET/SMARTZONE FEATURES

- Up to 512 talk groups programmable (channels select talk groups)
- Group, Enhanced Private Conversation™, standard Private Conversation, and Telephone* Calls
- Emergency alarms to alert a dispatcher of emergency conditions

- Emergency calls for high priority system access
- Failsoft operation on a predefined conventional channel if trunked system fails
- Priority group calls detected while listening to other group calls when scanning
- Call Alert™ (send and receive pages)
- Predefined messages (up to 16) can be sent to a dispatcher
- Predefined status conditions (up to 8) can be sent to a dispatcher
- Dynamic regrouping (dispatcher can automatically gather users on a channel to receive a message)
- Roaming (SmartZone only)
- SecureNet™ DES secure communication available on analog channels (SmartZone requires Flash code 1.7.0 or later). DES-OFB and AES on digital channels (AES encryption available only with Flash code 1.8.0 or later).

1.4 PROJECT 25 TRUNKED FEATURES

- Up to 512 talk groups programmable (channels select talk groups)
- Group and Unit Calls
- Emergency alarms to alert a dispatcher of emergency conditions
- Emergency calls for high priority system access
- Failsoft operation on a predefined conventional channel if trunked system fails
- Priority group calls detected while listening to other group calls when scanning
- Call Alert™ (send and receive pages)
- Predefined status conditions (up to 8) can be sent to a dispatcher
- Dynamic regrouping (dispatcher can automatically gather users on a channel to receive a message)
- Roaming
- SecureNet™ DES-OFB and AES secure communication available (AES encryption available only with Flash code 1.8.0 or later)

* Telephone calling is currently not available.

SECTION 2 CONTROLS AND DISPLAY

2.1 FRONT PANEL CONTROLS

NOTE: The location of these controls is shown in Figure 1-1.

Microphone - The microphone is located behind the small opening shown in Figure 1-1. For best results, hold the transceiver 2-3 inches from your mouth and speak at a normal conversational level. Do not shout since it distorts your voice and does not increase range.

Display - This is a graphical LCD (Liquid Crystal Display). The display backlight can be programmed to turn on when any key is pressed or when the Backlight option switch is pressed or menu parameter selected (see Section 3.5).

Up/Down Switch - Selects zones when multiple zones are programmed (see Section 3.3). Pressing the upper part of the switch selects the next higher number and pressing the lower part selects the next lower number. This control also provides up/down select in the menu mode and in other modes when up/down select is required.

F1 - In menu mode (see Section 4.2), functions as a step back and exit switch. If menu mode is not used, it is a programmable option switch.

F2 - Selects the menu mode when it is enabled by programming. Also functions as an Enter or Select switch in the menu and other modes. If menu mode is not used, it is a programmable option switch.

F3, F4 - Programmable option switches.

DTMF Keypad - The full keypad DTMF models include the 12 keys required to dial telephone and unit ID numbers.

Speaker - The transceiver speaker is located near the bottom of the front panel. When a speaker/microphone is used, it is automatically detected when the Opt Sel 1 line of the accessory connector is pulled low. The logic then automatically disables the internal speaker.

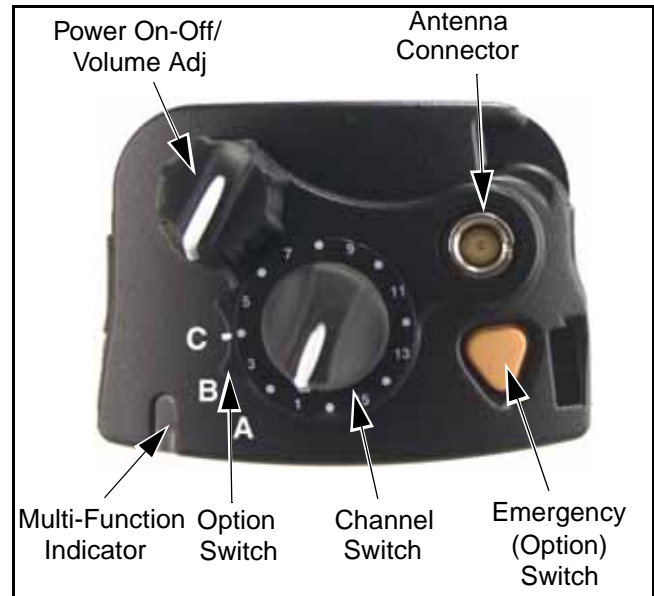


Figure 2-1 Top Panel Controls

2.2 TOP PANEL CONTROLS

Multi-Function Indicator - Indicates the following conditions:

Steady Red - Transmitter keyed.

Flashing Red - Low battery in receive mode.

Steady Green - Carrier detected in receive mode.

NOTE: This indicator is disabled if the Surveillance mode is programmed (see Section 4.7).

On-Off/Volume - Turning the knob clockwise turns power on and sets the volume level. Turning it counterclockwise to the detent turns power off. The minimum volume level can be set by programming.

Channel Switch - This 16-position switch selects up to 16 channels in the current zone. Additional zones can be programmed to allow up to 512 channels to be selected by this switch.

Rotary Option Switch - This is a three-position switch that can be programmed to control various options. The “A” position is “off” and the “B” and “C” positions are “on” (see Section 4.1). When this switch

is programmed to select zones, “A” selects Zone 1, “B” Zone 2, and “C” Zone 3 if applicable (available only with Flash code 1.7.0 or later).

Antenna Connector - Connection point for the antenna. Make sure the antenna is tight before using the radio.

Emergency Switch - This switch or some other option switch can be programmed as an Emergency switch to alert a dispatcher of an emergency condition. Refer to Sections 5.10 and 6.10 for more information. This switch can also be programmed for other functions.

2.3 SIDE CONTROLS



Figure 2-2 Side Controls and Jacks

PTT (Push-To-Talk) Switch - This switch is pressed to turn the transmitter on to transmit a message. It is then released to listen. Transmitting is indicated when the top panel indicator is constant red.

Option Switches 1, 2, and 3 - Each of these switches can be programmed to control a specific function (see Section 4.1). In addition, they can also be programmed for soft power down (see Section 3.1.2).

Battery - To remove the battery, press the release button on the bottom and pivot the bottom of the battery outward.

Accessory Connector - Connection point for optional accessories such as a speaker/microphone or earphone. It is also used for connecting the computer when programming the transceiver.

2.4 DISPLAY

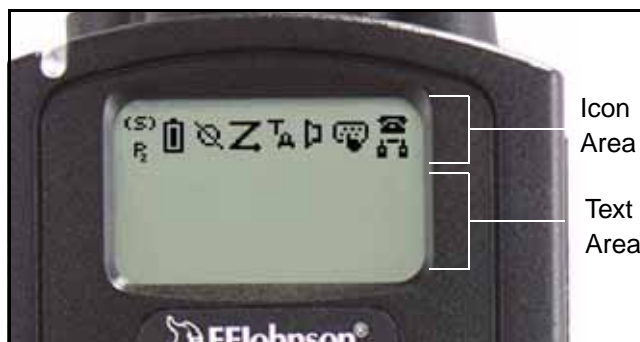




Figure 2-3 Graphical Display


The front panel display is shown above. Icons are typically shown in the upper part of the display and text messages in the lower part. The default icons are as follows:


(S) - When the scan or the scan list edit mode is enabled, indicates that the displayed channel is in the scan list and scanned normally (see Section 4.8).


P - When the scan or the scan list edit mode is enabled, indicates that the displayed channel is a priority channel. If dual priority is used, **F₂** indicates that it is a second priority channel.


 - Low battery indication (see Section 3.4).


 - Voice encryption is enabled (see Section 8.1).


 - Standard or radio wide scanning is enabled (see Section 4.8).

 - Repeater talk-around is enabled (see Section 5.8).

 - Monitor mode is enabled by the Monitor option switch or menu parameter (see Section 5.3).

 - Keypad programming or another mode is enabled which allows the user to edit radio parameters.

 - A SMARTNET/SmartZone interconnect* (telephone) call is in progress (see Section 6.6).

 - A Project 25 or SMARTNET/SmartZone private (unit-to-unit) call is in progress.

* Telephone calling is currently not available.

SECTION 3 GENERAL OPERATION

3.1 TURNING POWER ON AND SETTING VOLUME

3.1.1 POWER UP

Power is turned on and off by the top panel On-Off/Volume switch. When power is initially turned on, the following events occur:

- The software version number is displayed.
- A self test is performed.
- The currently selected zone is displayed.
- If a conventional P25 channel is selected, the Individual ID of the radio is displayed.
- If a SMARTNET/SmartZone or P25 Trunked channel is selected, the Unit ID of the radio is displayed.
- A tone sounds (if tones are enabled)
- The selected channel alias is displayed continuously when power-up is complete.

Programming determines if the transceiver powers up on the last selected zone or the pre-programmed home zone. Refer to Section 3.3 for information on the channel that is selected. The minimum volume level may be set by programming. This can prevent missed messages resulting from inadvertently turning the volume to an inaudible level.

3.1.2 STANDARD AND SOFT POWER DOWN

To turn power off, rotate the On-Off/Volume control counterclockwise until a click occurs. Power may remain on for an instant after turn-off occurs.

A soft power down feature* can be programmed to prevent radio power from being turned off by accidentally turning the on-off/volume control. Any side button can be programmed for this function (in addition to the normal function). Then for power to turn off, this button must be pressed during or after power is turned off in the normal manner using the knob. When this feature is programmed, turning the on-off/volume knob to off has no affect.

* This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

3.1.3 SETTING VOLUME LEVEL

The volume level is adjusted by the top panel volume control knob or by option buttons programmed for the Up/Down volume function**. When the buttons are used, the volume control function of the knob is disabled (it is still used to switch power). Volume buttons may be used instead of the knob, for example, if accidental turning of the volume knob occurs.

When the volume control buttons are used, the number of steps (ticks) the volume changes from minimum to maximum is programmable for 1-50. For example, if “20” is programmed, there are 20 adjustment steps from minimum to maximum volume. Only one volume control button can be programmed if desired and wrap-around then occurs after the maximum or minimum level is selected.

The relative volume level can be determined by the position of the index on the volume knob or by a reference tone as follows:

- If a key press tone is enabled, a short tone sounds when a key is pressed.
- If a conventional channel is selected and the Monitor option switch or menu parameter is programmed, pressing that switch unquelsches the receiver and either voice or background noise is heard (see Section 5.3). If a SMARTNET/SmartZone or P25 Trunked channel is selected, the receiver cannot be manually unquelsched.

3.2 POWER-UP PASSWORD

The power-up password feature prevents unauthorized use of the transceiver by locking the keypad on power up until the proper password is entered. This feature is enabled or disabled by programming.

When it is enabled, “ENTER PSWD” is briefly displayed when power is turned on. The eight-digit numeric password must be then be entered as follows. In addition, since the logic resets each time program-

** This feature requires 51xx operating (Flash) software 1.11.0 or later and PCConfigure 1.21 or later.

ming data is read or written, it must be entered after performing those functions. If an incorrect password is entered, "INCORRECT" is displayed and it must be re-entered.

DTMF Keypad Models - Enter the password using the 1-8 keys and then press the Enter (F2) key when finished. If a mistake is made, the last digit can be erased by pressing the F1 (Clear) key.

Limited Keypad Models - Select the proper number for each position by pressing the Up/Down switch. When the proper number for a position is displayed, select it and move on to the next position by pressing the F2 (Enter) key.

This password can be changed only by the programmer (see Section 4 of the 5100 Service Manual). It cannot be changed by the user. If it is lost, all programming must be erased to make the transceiver operational again. This is done using the "EEPROM Erase" function of the PCTune program (see Section 6.3.3 of the 5100 Service Manual). This password is displayed by the programmer when data is read. However, data cannot be read (or written) when the transceiver is locked, so the lost password cannot be determined using the programmer.

3.3 ZONE AND CHANNEL SELECT

The selected zone and channel are selected and displayed as follows. For more information on zones and channels, refer to Section 3.8.5.

Zone Select

The front panel Up/Down switch changes and displays the current zone. When not in special modes such as the menu mode, pressing either the top or bottom part of this switch once displays the alias of the current zone. Then quickly pressing it again changes the selected zone up or down. The rotary A/B/C switch on the top panel can also be programmed for zone select (with Flash code 1.7.0 or later). The "A" position then selects Zone 1, "B" Zone 2, and "C" Zone 3 (if applicable).

After the highest programmed zone is displayed, wrap-around to the lowest programmed zone occurs and vice versa. The selected zone is also displayed

briefly on power up. If the selected zone alias needs to be displayed continuously, it must be programmed as part of the channel alias.

Channel Select

Channels are selected by the rotary 16-position switch on the top panel. The alias (identification) for the selected channel/group is displayed continuously during normal operation.

When an unprogrammed channel is selected, "UNPROGRAMD" is displayed and a tone sounds (if tones are enabled). When conventional channels are selected and the Display Information option key or menu parameter is programmed, either the channel frequency or alias can be displayed (see Section 5.9).

The channel selector knob can also be disabled by programming. Channels must then be directly selected as described next (if applicable). This knob may be disabled when direct selection is used to prevent confusion because it then may not correctly indicate the selected channel.

Direct Zone/Channel Selection*

The direct Channel Select feature is available if the Channel Select option switch or menu parameter is programmed. This feature allows channels to be directly selected using the DTMF keypad numeric keys (DTMF models only) or Up/Down switch (all models).

For direct selection purposes, channels are numbered sequentially starting with the lowest zone. Each zone can be programmed with up to 16 channels, so Zone 1 channels are numbered 1-16, Zone 2 channels 17-32, and so on as shown below. For example, Zone 1/Channel 16 is selected by Channel 16, and Zone 2/Channel 16 is selected by Channel 32.

Proceed as follows to select channels using this mode:

1. Enable the direct Channel Select mode by pressing the Channel Select option switch or selecting the "Chan Selct" menu parameter. The alias and sequential number of the current channel are alternately displayed.

* This feature requires 51xx operating (Flash) software 1.5.0 or later and PCConfigure 1.17 or later.

Zone	Ch.	Seq. Ch. No.
1	1 ↓ 16	1 ↓ 16
2	1 ↓ 16	17 ↓ 32
3	1 ↓	33 ↓

- Select the desired channel using the Up/Down keys or directly enter it using the 0-9 keys (if available). If using the 0-9 keys, the radio attempts to display the entered number after the 3rd digit is entered or approximately 2 seconds after the last key is pressed.
- To exit this mode and select the entered channel, press the Channel Select switch again or the F2 key. To exit without changing the channel, press the F1 key. This mode is also exited automatically without changing the channel after approximately 1 minute of no activity.

NOTE: The Channel Select function should probably not be assigned to a number key because pressing that key to select a channel then exits the select mode.

Other features of this mode are as follows:

- When using the Up/Down keys, wrap-around to the lowest zone/channel occurs after the last channel in the highest programmed zone is displayed and vice versa. For example, if Zone 1/Channel 5 is the highest programmed channel, wraparound occurs after Zone 1/Channel 16 is displayed.
- When an unprogrammed channel is displayed, the sequential channel number and “Unprogramd” are alternately displayed.
- If an invalid channel number is entered using the 0-9 keys, or the F2 or Channel Select open switch is pressed with “Unprogrammed” displayed, an error


tones sounds, “Invalid” is briefly displayed, and the displayed channel does not change.

- The rotary Channel Select switch may not correctly indicate the selected channel after direct channel selection is used. However, if this switch is enabled by programming and rotated, it selects the channel it is indicating. For example, if the switch index is pointing to channel 3 and channel 15 of the current zone is being displayed, rotating it to channel 4 selects channel 4 of the current zone.
- If the rotary Channel Select switch is enabled, the radio always powers up on the channel it is selecting.

If it is disabled, the radio can be programmed to power-up on the last selected or home channel number of the last selected or home zone*. With the “Last Zone”/“Home Channel” configuration, the programmed home channel number of the last active zone is selected. If it is not programmed, “Unprogrammd” is displayed. With earlier models, the last selected channel is displayed when powering up on the last selected zone, and channel 1 is displayed when powering up on the home zone.

3.4 LOW BATTERY INDICATION

NOTE: If the transceiver contains encryption (hardware) keys, be sure to reattach a battery within approximately one minute to prevent the loss of these keys.

A low-battery condition is indicated by the  icon in the display. The battery should be recharged or replaced as soon after this indication appears. Once this indication appears, it stays on until power is cycled.

The following additional low battery indications and conditions may be enabled by programming:

- A chirp sounds once a minute in the standby and transmit modes.
- A chirp sounds each time the PTT switch is pressed.
- The top panel LED indicator flashes red every 30 seconds in the receive mode.
- Low power is selected when transmitting.

* This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

As indicated in the preceding “Note”, the transceiver must be connected to a constant power source to preserve the encryption (hardware) keys in memory. To allow the battery to be changed without losing these keys, storage capacitors maintain the supply voltage to memory for approximately 1 minute without a battery attached. Therefore, when changing the battery of a transceiver that has these keys stored, be sure to reattach a battery within that time. Refer to Section 8.1.6 for more information on encryption keys.

There is a battery saver feature that can be enabled by programming. This feature functions on trunked channels and Flash code 1.7.0 or later only, and it causes low transmit power to be selected when the receive signal strength (RSSI) indicates that the site is nearby.

3.5 BACKLIGHT

The backlight for the display and option keys can be programmed to automatically turn on when any key is pressed. It then automatically turns off after a programmed delay of 0-7.5 seconds so that battery drain is minimized. If the Backlight option switch or menu parameter is programmed, the user can manually turn the backlight on and off (it then stays on). If the Surveillance mode is programmed, the backlight is disabled (see Section 4.7).

3.6 KEYPAD LOCK

The Keypad Lock feature temporarily disables the front panel keys to prevent accidental key presses. This feature is available if the Keypad Lock option switch is programmed.

To lock the keypad, simply press the Keypad Lock option switch. Then to unlock the keypad again, press and hold this switch until a tone sounds or for approximately 1 second.

With DTMF models, the DTMF keys can be totally disabled by programming. In addition, they can be selectively enabled or disabled on conventional analog channels.

3.7 SETTING SQUELCH

This transceiver does not have a squelch control. The squelch level is preset during alignment. If the

keypad programming feature is available (see Section 5.17), the squelch level can be changed by the user on each conventional analog channel.

3.8 TRANSCEIVER OPERATING MODES

3.8.1 GENERAL

Each selectable channel can be programmed for the conventional (analog or Project 25 digital), SMARTNET/SmartZone, or Project 25 digital trunked operating mode. For example, Zone 1/Channel 1 could be a conventional channel, Zone 1/Channel 2 a SMARTNET channel, and so on. More information on these modes follows.

3.8.2 CONVENTIONAL MODE

This is a non-trunked operating mode which accesses independent radio channels. There is no automatic access to several channels. Selecting a conventional channel selects a transmit and receive frequency and other channel parameters such as squelch control coding.

Conventional channels can be either standard (analog) or Project 25 (digital). With digital operation, the DSP (Digital Signal Processor) converts the audio signal to digital data which is sent over the air as complex tones. Another difference is that analog channels use Call Guard (CTCSS/DCS) squelch control and Project 25 channels use a NAC (Network Access Code) and talk group ID codes.

With Project 25 operation, a NAC is transmitted and it must match the NAC programmed in the base equipment and the mobile(s) being called for communication to occur. In addition, to receive standard group calls, the receiving mobile must be programmed to detect the transmitted talk group ID code.

With conventional operation, a busy channel condition is detected automatically if the busy channel lockout (transmit disable on busy) feature is programmed. Otherwise, it must be detected manually. An out-of-range condition is not indicated by special tones or messages as with SMARTNET operation because there is no initial data exchange with the repeater that allows this condition to be detected. Operating features unique to conventional channels are described in Section 5.

3.8.3 SMARTNET/SMARTZONE MODE

This is a trunked operating mode in which automatic access is provided to several RF channels. ID codes are used to select what mobiles are being called and what calls are received. Monitoring is performed automatically and special messages and tones indicate busy and out-of-range conditions.

SMARTNET and SmartZone operation and programming is very similar. Basically, SMARTNET operation is limited to a single repeater site and SmartZone operation allows automatic roaming between sites. Enhanced SMARTNET/SmartZone features include roaming (SmartZone only), telephone*, private, and emergency calls, Call Alert™, and messaging. Either analog or digital signaling may be used.

When a SMARTNET or SmartZone channel is selected or the radio is powered up on one of those channels, it searches for a control channel. Once a control channel is found, the alias (name) of the selected channel is displayed and the radio attempts to register on the radio system. If a control channel could not be found (because of an out of range condition or the system ID is not correct, for example), “NO SYS” (early units) or “Out Rnge” (later units) is displayed and the radio continues to search for a control channel.

The control channel transmits and receives system information to and from all radios registered on the system. Therefore, once a control channel is found, it is continuously monitored for incoming call information and is used to make call requests. The radio automatically changes to a traffic channel to place and receive calls and then returns to the control channel when the call is complete. Operating features unique to SMARTNET/SmartZone channels are described in Section 6.

3.8.4 P25 TRUNKED MODE

The P25 Trunked operating features are very similar to the SmartZone type just described. Since SmartZone features are also similar to SMARTNET features, all three modes are described in the Section 6. Some differences between the P25 Trunking and SmartZone modes are as follows:

- Digital signaling is always used with P25 calls. Either analog or digital signaling may be used for SmartZone calls.
- Calls made to a specific mobile in the P25 mode are called Unit Calls. In the SMARTNET/SmartZone mode they are called Private Calls.
- Messaging is not available with P25 calls.
- Telephone calls are currently not available in this mode.
- The P25 control channel data rate is 9600 baud and the digital voice data rate is also 9600 baud. With SmartZone operation, the control channel data rate is 3600 baud (both digital and analog calls) and the narrowband digital voice data rate is 9600 baud.
- The P25 mode uses a system ID, Wide Area Communications Network (WACN) ID, and RF Subsystem ID (RFSS). The SmartZone mode does not use the WACN and RFSS IDs.
- P25 Unit IDs can be 1-16,777,215 (000001-FFFFFF hex) and SmartZone Unit IDs can be 1-65,535 (0001-FFFF hex).

3.8.5 SYSTEMS, CHANNELS, AND ZONES

A zone and channel are selected to place and receive calls. The following describes the relationship between systems, channels, and zones.

Systems

A system is a collection of channels or talk groups belonging to the same repeater site. It defines all the parameters and protocol information required to access a site. Up to 16 systems of any type can be programmed.

The maximum number of channels assignable to a system is limited to 256 with standard models or to approximately 512 with the 512-channel option. Channels may also be limited by available memory space as described in the following information.

* Telephone calling is currently not available.

Channels

A channel selects a radio (RF) channel or talk group as follows:

Conventional Analog Mode - A channel selects a specific radio channel, Call Guard (CTCSS/DCS) squelch coding, and other parameters unique to that channel.

Conventional Project 25 Mode - A channel selects a specific radio channel, NAC squelch coding, talk group ID, and other parameters unique to that channel.

Mode - A channel selects a specific talk group ID and other parameters unique to that talk group.

SMARTNET/SmartZone and Trunked Project 25 Modes - A channel selects a specific talk group, announcement group, emergency group, and other parameters unique to that talk group.

A maximum of up to 512 channels can be programmed with the preceding modes (with the 512-channel option). These channels can belong to a single system or multiple systems. The maximum number is also limited by the available memory. For example, since more memory is required to program a SMARTNET system than a conventional system, the total number of channels decreases as the number of SMARTNET channels increases. The programming software displays a bar graph which shows the amount of available memory space that is used by the current data.

Zones

A zone is a collection of up to 16 channels of any type. For example, a zone could include 12 conventional channels and 4 SMARTNET channels. One use of zones may be to program the channels used for operation in a different geographical areas. The maximum number of zones is limited to 16 with standard models or to 32 with the 512-channel option.

SECTION 4 RADIO-WIDE FEATURES

4.1 OPTION SWITCHES

Almost all the buttons on this transceiver are programmable. The programmable switches are as follows:

- On the side panel, the three switches above the PTT switch (see Figure 2-2 on page 12).
- On the top panel, the rotary three-position switch and the orange switch (see Figure 2-1 on page 11).
- On the front panel, F1 and F2 unless the menu mode is used (see next section), and F3 and F4.
- With DTMF keypad models, all 12 DTMF keys.

The functions that can be controlled by option switches are shown in Table 4-1. Each option switch can be programmed to control a different function in each of the three operating modes. For example, F3 can control one function when a conventional channel is selected, another when a SMARTNET/SmartZone channel is selected, and still another when a Project 25 trunked channel is selected.

4.2 MENU MODE

Most functions that can be controlled by an option switch can also be controlled by the menu mode. The functions that can be controlled by the menu mode are shown in Table 4-1. Functions can be controlled by both an option switch and a menu parameter if desired.



Menu Mode Buttons

When the menu mode is used, the F1 and F2 switches become dedicated menu mode control

switches. The F1 switch is Back/Clear, and the F2 switch is Menu Select/Enter. If the menu mode is disabled, these switches can be programmed for other functions.

Only the enabled menu items which apply to the selected channel type are displayed. For example, if a conventional channel is selected, only the enabled functions for conventional channels are displayed.

When in the menu mode, messages continue to be received on the selected channel. However, the display does not indicate who is calling. Pressing the PTT switch exits the menu mode and keys the transmitter.

The menu mode operates as follows:

1. To select the menu mode, press the F2 key. Up to three menu parameters are then displayed as shown in the preceding photo.
2. To scroll up or down through the menu parameter list, press the Up/Down switch. The selected parameter is indicated by a dark bar.
3. To display the available modes for a highlighted parameter, press the F2 switch. The currently selected mode is indicated by an asterisk.
4. Press the Up/Down switch to highlight the desired mode. Then press the F2 key to select that mode.
5. To step back to the previous level or exit the menu mode, press the F1 (Clear) key.

4.3 TIME-OUT TIMER

The time-out timer disables the transmitter if it is keyed continuously for longer than the programmed time. It can be programmed for 15 seconds to 3 minutes, 45 seconds or it can be disabled.

If the transmitter is keyed for longer than the programmed time, the transmitter is disabled, a continuous tone sounds, and “TX TIMEOUT” is displayed. Five seconds before time-out occurs, a warning beep sounds to indicate that time-out is approaching. The timer and tone are reset by releasing the PTT switch.

A different time can be programmed for each system, and the timer can be enabled or disabled on

each conventional channel. With conventional channels, a penalty time may also be programmed that prevents transmissions for a certain time after the transmitter is disabled (see Section 5.6).

One use of this feature is to prevent a channel from being kept busy for an extended period by an accidentally keyed transmitter. It can also prevent possible transmitter damage caused by transmitting for an excessively long period.

4.4 HOME ZONE/CHANNEL SELECT

If the Home Zone option switch or menu parameter is programmed, it selects the preprogrammed home zone. The selected channel is displayed if the channel switch is enabled, and the preprogrammed home channel is selected if it is disabled. The transceiver is also programmed so that either the home or last selected zone is selected when power is turned on. Refer to Section 3.3 for more information.

4.5 POWER OUTPUT SELECT

Each conventional channel and SMARTNET/SmartZone and P25 Trunked system can be programmed for high, low, or switchable power. If the High/Low Power option switch or menu parameter is programmed and selectable power is programmed on the current channel or system, high and low transmitter power can be selected. All models support high and low power.

The new level is flashed in the display as either “HI POWER” or “LOW POWER”. If selectable power is not permitted on the current channel, “FIXED LOW” or “FIXED HIGH” is flashed and no change occurs. The selected power level for a channel is permanent until it is manually changed again. The low power mode may be automatically selected during a low battery condition (see Section 3.4).

4.6 ALERT TONE SELECT

The various alert tones that sound are described in Section 7.1. These tones can be turned on and off if the Alert Tone option switch or Tones menu parameter is programmed. When all tones are off, “TONE OFF” is momentarily displayed, and when all tones are on, “TONE ON” is momentarily displayed. If this switch or menu parameter is not programmed, tones are fixed

* This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

Table 4-1 Programmable Option Switch and Menu Mode Functions

Function	Menu Display	Available in Mode:				See Descript. in Section:
		Conv.	P25 Trk	SMARTNET	SmartZone	
Alert tones On-Off	Tones	X	X	X	X	4.6
Backlight On-Off	Backlight	X	X	X	X	3.5
Call Alert Select	Call Alert	X	X	X	X	5.16.6, 6.7
Call Response Select	Call Rsp		X	X	X	6.5
Change Keypad	Chg Keypad	X				8.2.10
Channel Select	Chan Selct	X	X	X	X	3.3
Clear/Secure Select	Security	X	X	X	X	8.1.7
Clone Select (menu only)	Clone	X				5.14
Configure (menu only)	Config	X	X	X	X	Not curr. used
Digital Talk Group Select	Select TG	X				5.16
Display Information Select	Display	X				5.9
Emergency Select	Emergency	X	X	X	X	5.10, 6.10
Erase Keys (menu only)	Erase Keys	X	X	X	X	8.2.10
High/Low Power Select	Tx Power	X	X	X	X	4.5
Home Zone Select	Home Zone	X	X	X	X	4.4
Key Select	Key Select	X				8.2.10
Keypad Lock Select	(Opt sw only)	X	X	X	X	3.6
Keypad Programming Select	Keypad Prg	X				5.17
Messaging	Message	X		X	X	5.16.7, 6.8
Monitor Mode Select	Monitor	X				5.3
Normal/Selective Select	Squelch	X				5.5
OTAR Rekey Request	OTAR Rekey	X				8.2.10
Phone Call Select	Phone			X	X	6.6
Priority Channel Select	Priority	X				5.11.3
Private Call Select	Priv Call			X	X	6.5
Radio Wide Scan Select	RW Scan	X	X	X	X	4.8
Repeater Talk-Around Select	Talk Arnd	X				5.8
Scan Mode Select	Scan	X	X	X	X	4.8
Scan List Edit Select	Scan Edit	X	X	X	X	4.8
Scan List Select	Scan Selct	X	X	X	X	4.8
Squelch Select List	Sqlch Code	X				5.5
Single Tone Encoder	Tone Encdr	X				5.15
Site Lock Select	Site Lock		X		X	6.14
Site Search Select	Site Srch		X		X	6.14
Status Select	Status	X	X	X	X	5.16.8, 6.9
Surveillance Mode Select	Surv Mode	X	X	X	X	4.7
Tone Volume Edit	Tone Vol	X	X	X	X	4.6
Unit Call Select	Unit Call	X	X			5.16
Unprogrammed (not used)	-	X	X	X	X	-
Volume Down	(Opt sw only)	X	X	X	X	3.1.3
Volume Up	(Opt sw only)	X	X	X	X	3.1.3

in the on or off mode by programming. If the Surveillance mode is programmed (see following), tones are totally disabled.

The Alert Tone volume** can be adjusted relative to the volume control setting. This is done by programming and also by the user if the Tone Volume Adjust option button or menu parameter is programmed. Relative levels of -170 to +170 can be set with “0” the default setting. A minus value decreases the tone volume and a plus value increases it. The user adjusted level permanently overrides the programmed level if applicable.

4.7 SURVEILLANCE MODE

If the Surveillance mode* is programmed, the backlight, all alert tones, and front panel LED indicator are totally disabled in all operating modes. This feature can be turned on and off** by the user if the Surveillance Mode option button or menu parameter are programmed. The user selected mode permanently overrides the programmed mode if applicable.

4.8 SCANNING

4.8.1 INTRODUCTION

Scanning monitors the channels in the scan list for messages that the transceiver is programmed to receive. When a message is detected, scanning stops and the message is received. Shortly after the message is complete, scanning resumes (unless it has been disabled).

There are two basic scan modes available: Standard and Radio Wide. The operation of the standard type is unique to the type of channel selected, and the operation of Radio Wide type is the same regardless of the type of channel selected. Only one type can be enabled at a time. For example, if standard scanning is enabled and radio wide scanning is selected, standard scanning is automatically disabled and vice versa. More information on these types of scanning follows.

4.8.2 STANDARD SCANNING



Standard scanning monitors only channels that are the same type as that currently selected. For

example, if a conventional channel is selected, only conventional channels are scanned and likewise for SMARTNET/SmartZone and Project 25 Trunked channels. More information on how standard scanning operates in these modes is located in the following sections:

Conventional Mode - Section 5.11

Other Modes - Section 6.12

Standard scanning is turned on and off by the Scan option switch or menu parameter as follows. If this switch or menu parameter is not programmed, standard scanning is not available.

- Enable scanning using the Scan option switch or menu parameter. Scanning is enabled when the  icon is displayed.
- To turn scanning off, press the Scan option switch again or select “Off” in the scan menu. Scanning is disabled when the  icon is no longer displayed.
- If the zone or channel is changed while scanning is selected, scanning continues on the same or a different scan list (see “Standard Mode Scan Lists” on page 22).

NOTE: Each SMARTNET/SmartZone and P25 trunked channel can be programmed so that scanning is automatically enabled when the channel is selected.

4.8.3 RADIO WIDE SCANNING

NOTE: Use radio wide scanning only if two types of channels need to be scanned at the same time such as conventional and SMARTNET/SmartZone. Otherwise, use the more efficient standard scanning because there is less chance of missed calls.

Radio wide scanning monitors the channels in the preprogrammed radio-wide scan list. This scan list can include up to 16 channels of any type and assigned to any zone (see “Radio Wide Scan List” on page 22). Radio wide scanning is turned on and off by the Radio Wide Scan option switch or menu parameter as follows. If this switch or menu parameter is not programmed, radio wide scanning is not available.

* This feature requires 51xx operating (Flash) software 1.5.0 or later and PCConfigure 1.17 or later.

** This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

- Enable Radio Wide Scanning using the Radio Wide Scan option switch or menu parameter. As with standard scanning, radio wide scanning is indicated when the **Z** icon is displayed.
- To turn radio wide scanning off, press the Radio Wide Scan option switch again or select “Off” in the menu. Scanning is disabled when the **Z** icon is no longer displayed.
- If the zone or channel is changed while radio wide scanning, scanning continues normally.

4.8.4 SCAN HOLD TIME

When a message is received or transmitted while scanning, there is a delay before scanning resumes. The delay after receiving a call prevents another message from being received before a response can be made. The delay after transmitting a call ensures that a response is heard instead of another message occurring on some other channel.

Separate delay times are programmable for Radio Wide and Standard scanning. With radio wide and conventional standard scanning, delays of 0-7.5 seconds are programmable in 0.5-second steps. With SMARTNET/SmartZone and P25 Trunked standard scanning, a scan delay of 2-10 seconds can be programmed in 0.5-second steps.

4.8.5 TRANSMITTING IN THE SCAN MODE

When the transmitter is keyed while scanning is enabled, the transmission may occur on various channels as follows.

Conventional Operation - Transmissions can be programmed to occur on the priority, selected, or receive channel. Refer to Section 5.11 for more information.

SMARTNET/SmartZone/P25 Trunked Operation - If scanning is halted to receive a message, programming determines if transmissions occur on the selected or active channel. Transmissions at other times occur on the selected channel.

4.8.6 NUISANCE CHANNEL ADD/DELETE

With standard scanning, channels can be temporarily deleted from the scan list, for example, if messages become annoying. This feature is not available with radio wide scanning. Channels can also be permanently added or deleted from a scan list as described in Section 4.9.5. Proceed as follows to temporarily delete a nuisance channel:

NOTE: The selected channel and also priority channels cannot be deleted from the scan list.

1. While receiving a message on the channel to be deleted, press and hold the Scan option switch until a tone sounds (about 1 second).
2. The channel is then deleted and scanning of the remaining channels in the scan list resumes.
3. Deleted channels are added back into the scan list if any of the following occur:
 - Scanning is turned off and then on again using the Scan option switch or menu parameter.
 - Transceiver power is turned off and then on again.
 - The selected channel is changed.

4.9 SCAN LISTS

4.9.1 STANDARD MODE SCAN LISTS

NOTE: The selected channel is always scanned.


A scan list is simply the channels that are scanned when scanning is enabled. With all operating modes, as many standard scan lists as are required can usually be programmed (up to 256). The only limitation is the available memory. Each scan list can include up to 256 channels/talk groups (or optionally up to 512). Refer to Sections 4.9.4 and 4.9.5 which follow for information on selecting and editing standard scan lists.

4.9.2 RADIO WIDE SCAN LIST

With radio wide scanning, there is only one scan list available regardless of the type of channel selected, and it is not user programmable. This scan list can contain up to 16 channels of any type. For example, it could include six conventional channels and ten SMARTNET/SmartZone channels.

4.9.3 DETERMINING WHICH CHANNELS ARE IN SCAN LIST

The channels in the radio-wide and conventional scan lists are indicated as follows. Channels in the SMARTNET/SmartZone/P25 Trunked lists are indicated only when editing a scan list.

1. To view the conventional scan list, enable standard scanning using the Scan switch or menu parameter. Likewise, to view the radio wide scan list, enable radio wide scanning using the Radio Wide Scan switch or menu parameter. Also select the scan list if applicable as described in the following “Selecting a Scan List” description.
2. Select the desired zone and then scroll through the channels by rotating the channel switch. When the displayed channel is in the scan list (scanned normally), the  icon is displayed.


4.9.4 SELECTING A SCAN LIST

NOTE: Only standard scan lists are selectable.

With conventional operation, selecting another conventional channel does not change the scan list. However, the scan list can be temporarily changed by the user if the Scan (List) Select option switch or menu parameter is programmed (see following). The programmed default scan list is automatically reselected on power up.



With SMARTNET/SmartZone operation and Project 25 trunked operation, each channel (talk group) can be programmed to select one of the programmed lists or so that scanning is disabled (No List). In addition, each channel can be programmed so that scanning is automatically enabled (Auto Scan) when it is selected. If the Scan (List) Select option switch or menu parameter is programmed, the list that is selected by all talk and announcement groups in the current system can be temporarily changed by the user as follows. “No List” (scanning disabled) or “Programmed” (default list) can also be selected if desired). The programmed default scan list is automatically reselected on power up.

Change the currently scan list as follows.


1. With scanning disabled ( icon not displayed), press the Scan List option switch or select the Scan Select menu parameter.
2. The currently selected list is displayed as “List x”, where “x” is the currently selected list. To exit without changing the selected list, simply press the Scan List option switch again or the F1 key.
3. To select another list, press the Up/Down switch. When the desired list is displayed, select it and exit this mode by pressing the Scan List option switch again or the F1 or F2 key.

4.9.5 EDITING A SCAN LIST



If the Scan Edit option switch or menu parameter is programmed, conventional, SMARTNET/SmartZone, and P25 Trunked standard scan lists can be user programmed as follows. Changes are permanent (cycling power does not reselect a default condition).

1. Make sure that both standard and radio wide scanning are off ( icon not displayed). Select a conventional or SMARTNET/SmartZone/P25 Trunked channel corresponding to the scan list being programmed.
2. Select the scan edit mode using the Scan Edit option switch or menu parameter. This mode is indicated by  in the display.
3. If applicable, select the list to be edited by pressing the Up/Down switch. Select the desired list by pressing the F2 key. The selected list is indicated as “LIST x”. If user programming is disabled on a list, (conventional only) “NO EDIT” is momentarily displayed and it cannot be edited.
4. Select the channel you want to add or delete by pressing the Up/Down switch. After the last channel in the current zone is displayed, the first valid channel in the next zone is displayed and vice versa. Lists are limited to 256 channels (or optionally up to 512). If an attempt is made to add more than 256 or 512, “LIST FULL” is displayed and a channel must be deleted before another can be added.

NOTE: Priority channels can be deleted.

5. If the selected channel is in the scan list (scanned), the  icon is displayed. To change the status of the displayed channel, press the F2 (Enter) switch.

With conventional channels only, if the selected scan list is programmed with fixed priority channel(s), the next press of F2 makes the current

channel the priority channel indicated by . If dual priority channels are used, pressing F2 again makes it the second priority channel indicated by . Then pressing F2 again takes the channel out of the scan list. Refer to Sections 5.11.3 and 5.11.4 for more information on priority channel sampling.

6. To exit this mode and save the changes, press the F1 (Exit) key or the Scan Edit option switch again.

SECTION 5 CONVENTIONAL MODE FEATURES

5.1 INTRODUCTION

An overview of the conventional operating mode is located in Section 3.8.2. The following information describes the features unique to analog and digital (Project 25) conventional operation. Refer to the preceding “Radio Wide Features” section (4) for information on features common to all operating modes.

5.2 MONITORING BEFORE TRANSMITTING

With conventional operation, you may need to manually monitor the channel before transmitting to make sure that it is not be used by someone else. If you were to transmit while someone else was using the channel, you would probably disrupt their conversation. With SMARTNET/SmartZone and P25 Trunked operation, monitoring is performed automatically. Monitor conventional channels automatically or manually as follows:

Automatic Channel Monitoring

If the selected channel is programmed for Busy Channel Lockout (also called Transmit Disable On Busy), monitoring is performed automatically. Refer to Section 5.4 for more information on this feature.

Manual Channel Monitoring

The automatic monitoring just described may occasionally disable the transmitter when the channel is not in use, such as if the repeater has extended hang time. In this case, you may not want to use it and the channel must then be monitored manually as follows:

Busy Indicator - With scanning disabled, note if the multi-function indicator on the front panel is steady green. If it is not, the channel is not being used and a call can be transmitted. If it is green, a carrier is being detected, so the channel may be busy (see following).


Monitor Mode - There may be times when a busy condition is indicated even though no one is using the channel. Monitoring should then be performed by disabling Call Guard squelch (or group ID detect on Project 25 channels). This is usually done by selecting the Monitor Mode (see following) or by the Normal/Selective option switch or menu parameter (see Section 5.5.5).

5.3 MONITOR MODE

The monitor mode unsquelches the receiver and monitors the channel even if a carrier is not detected. Other features of this mode are as follows:

- Call Guard (CTCSS/DCS) squelch is disabled on analog channels and NAC and group ID detect are disabled on P25 (conventional) channels.
- Busy Channel Lockout is overridden (see next section)
- Scanning temporarily halts

The Monitor Mode operates as follows:

1. To monitor the transmit frequency for activity before transmitting, briefly press the Monitor option switch or select the Monitor menu “Tx Channel” parameter. The  icon is then displayed to indicate the monitor mode and the receiver unsquelches.

2. To monitor the receive frequency instead, press and hold the Monitor option switch until a tone sounds or approximately 2 seconds, or select the Monitor menu “Sqch Ovr” parameter. This can be used, for example, to improve reception if intermittent squelching is making a weak message difficult to understand.
3. To disable the monitor mode and return to normal operation, press the Monitor option switch again of select the Monitor menu “Off” parameter.

The Normal/Selective function disables Call Guard squelch and P25 group ID detect but not scanning and P25 NAC detect (see Section 5.5.5).

5.4 BUSY CHANNEL LOCKOUT

The Busy Channel Lockout feature (also called Transmit Disable on Busy) automatically disables the transmitter if the channel is busy when the PTT switch is pressed. When the transmitter is disabled by this feature, “BUSY” is displayed, a busy tone sounds, and the transmitter is disabled.

The Busy Channel Lockout feature can be programmed to operate as follows. Each conventional channel can be programmed differently.

Off - Busy channel lockout is disabled and the transmitter keys even if the channel is busy.

Noise - If a carrier is detected on the channel, the transmitter is disabled when the PTT switch is pressed.

Tone (NAC) - If an incorrect Call Guard (CTCSS/DCS) or NAC code (see Section 5.16) is detected, the transmitter is disabled when the PTT switch is pressed. An incorrect code is any code other than the one programmed for the current channel.

If Busy Channel Override is permitted by programming, it is possible to transmit even when the transmitter is disabled by this feature. Simply release the PTT switch and then quickly press it again.

5.5 CALL GUARD SQUELCH

5.5.1 INTRODUCTION

Tone or digital Call Guard squelch (also called CTCSS/DCS signaling) can be programmed on each conventional analog transmit and receive channel in any order desired. The reverse burst and turn-off code are always transmitted and also detected on channels programmed with Call Guard squelch.

The Call Guard squelch feature eliminates distracting messages intended for others using the channel. This is done by using a subaudible tone or digital code to control the squelch. This tone or code is unique to a user or a group on that channel. This tone or code is transmitted with the voice signal but is not heard because it is in the subaudible range and is attenuated by a filter. Call Guard squelch must be used in both the transmitting and receiving transceiver to be functional.

5.5.2 CALL GUARD SQUELCH ENABLE/DISABLE

The Normal/Selective option switch or menu parameter (if programmed) can be used to disable receive Call Guard squelch on analog channels or group ID code detection on P25 channels. When selective squelch is disabled, “Sq Normal” is flashed in the display, and when it is enabled, “Sq Select” is flashed.

When “Normal” is selected, the receiver unsquelches only if a carrier is detected, and scanning and Project 25 NAC detection are not disabled. The selected mode is in effect until it is manually changed again. Selecting another channel or cycling power does not reselect a default condition.

5.5.3 TONE CALL GUARD SQUELCH

Tone-type Call Guard squelch utilizes subaudible CTCSS tones from 67-254.1 Hz. Although there are 42 tones assigned, those above 33 (210.7 Hz) are normally not used because of their close proximity to the voice band which starts at 300 Hz. In addition, tones 11 (97.4 Hz), 39 (69.3 Hz), 40 (206.5 Hz), 41 (229.1 Hz), and 42 (254.1 Hz) are normally not used because they may cause interference with adjacent tones.

A reverse burst is transmitted when the push-to-talk switch is released and also detected when calls are received. It is a 180-degree phase reversal for a period of time determined by the tone frequency, and it eliminates the squelch tail (noise burst) in the receiving transceiver. Both the transmitting and receiving transceiver must be equipped with this feature for it to be utilized.

5.5.4 DIGITAL CALL GUARD SQUELCH

Digital Call Guard squelch (DCS) uses digital data instead of subaudible tones to control the squelch. This data consists of continuous repetitions of 23-bit words. No bit or word synchronization information is used. When the push-to-talk switch is released, a turn-off code is transmitted which eliminates the squelch tail similar to the reverse burst.

Although there are thousands of possible code combinations with 23 bits, only 83 are unique with the data scheme used. The number specified when the code is programmed is actually a seed for a special algorithm used to generate the 23-bit data word. The data is transmitted at a rate of 134.4 bits per second. Therefore, approximately six words are transmitted each second. When the data is decoded, 23-bit samples are taken and then the bits are rotated to determine if a valid code was received.

5.5.5 SELECTIVE SQUELCH CODE SELECT (CTCSS/DCS/NAC)

NOTE: Call Guard codes can be permanently reprogrammed by keypad programming (see Section 5.17).

A different CTCSS/DCS/NAC squelch code can be temporarily selected if the Selective Squelch option switch or menu parameter and a CTCSS/NAC code list have been programmed. This feature allows the normal transmit and receive Call Guard programming to be temporarily overridden with a code selected from this list.

The CTCSS/DCS/NAC list is programmed with up to sixteen tone (CTCSS) or digital (DCS) Call Guard codes. In addition, for operation on Project 25 channels, each position can be programmed with an NAC code.

When the Call Guard code is changed using this feature, it remains selected even if other channels are selected. However, if transceiver power is cycled or a talk-around channel is selected, the normal codes are reselected. When scanning, the selected code also applies to all scanned channels. If both analog and digital (Project 25) channels can be selected or scanned, the CTCSS/DCS code for the selected position is used for analog channels and the NAC code for the selected position is used for P25 channels. If a channel is programmed for mixed mode operation, the selective squelch type (analog or digital) programmed for the transmit mode determines the selective squelch type used.

Proceed as follows to select a preprogrammed Call Guard code:

1. Press the Selective Squelch option switch or select the Sqlch Code menu mode parameter. Then press the Up/Down switch to select the desired code. The display indicates "SEL SQ xx" where, "xx" is the selected code from 1-16.
2. To select the displayed code and return to the normal display, press the F2 (Select) key or the Selective Squelch switch again.
3. To check which code is selected, press the Selective Squelch switch once to display the current selection and then again to return to normal operation.
4. To return to the normal selective squelch codes, select "DEFAULT" in this mode. As previously described, the normal codes are also automatically reselected whenever transceiver power is cycled or a talk-around channel is selected.

5.6 PENALTY TIMER

A penalty timer may be programmed on conventional systems to prevent transmissions for the programmed time after the time-out timer disables the transmitter (see Section 4.3). The penalty timer can be programmed for the same times as the time-out timer, and timing starts when the PTT switch is released. If the PTT switch is pressed during the penalty time, the time-out indication occurs again and the transmitter remains disabled. When the penalty timer expires, a beep sounds and the transmitter can be keyed.

5.7 CONVERSATION TIMER

A conversation timer can be programmed on conventional systems in addition to the time-out timer (see Section 4.3). This timer limits the total length of a conversation rather than just the length of each transmission as with the time-out timer. The following is more information on this timer.

- It can be programmed for times up to 7.5 minutes.
- It is reset when the time between transmissions exceeds the time programmed for the penalty timer.
- A warning beep sounds 5 seconds before this timer disables the transmitter.
- When this timer disables the transmitter, a continuous tone sounds and the red transmit indicator turns off. The PTT switch must then be released until the penalty timer expires (indicated by a beep).

5.8 REPEATER TALK-AROUND

Normally, all transmissions go through a repeater which usually increases range. However, there may be times when a mobile is out of range of the repeater and therefore unable to talk to anyone even though the mobile being called is only a short distance away. To allow communication in this situation, repeater talk-around can be selected. Transmissions then occur on the receive frequency which permits direct mobile-to-mobile communication.

Repeater talk-around can be selected if the RTA option switch or menu parameter is programmed. When talk-around is enabled by this switch, T_A is displayed. This feature remains enabled during scanning, and changing channels or turning power off does not change the selected condition. Talk-around is available on conventional channels only.

5.9 DISPLAYING TRANSMIT/RECEIVE FREQUENCY

If the Displayed Information option switch or menu parameter is programmed (see Section 4.1), it can be used to display the channel frequency in megahertz. Pressing this switch toggles between displaying the standard channel alias and the channel frequency. The receive frequency is displayed when receiving and the transmit frequency is displayed when transmitting. This feature is available on conventional channels only.

5.10 EMERGENCY ALARM AND CALL

NOTE: The following enhanced conventional emergency features require 5100 operating (Flash) software 1.8.0 or later and PCConfigure 1.19 or later.

5.10.1 INTRODUCTION

Emergency Alarms and Calls are separate functions that can be individually enabled or disabled on each analog and P25 conventional system. The Emergency option switch or menu parameter is required for these functions. Emergency Alarms and Calls are transmitted on the last selected talk group.

The emergency hot microphone function can also be programmed with emergency alarms and calls. Then when the emergency switch is pressed, the microphone audio is enabled and the transmitter automatically keyed for the programmed hot microphone time (10-120 seconds). If “silent” emergency is programmed, no tones sound but the transmit indicator still lights. If the “Surveillance Mode” is enabled (see Section 4.7), all indicators, lights, and tones are disabled.

5.10.2 EMERGENCY ALARMS

An emergency alarm is a special transmission on the selected talk group that alerts a dispatcher of an emergency situation. It is sent by simply pressing Emergency option switch or selecting the Emergency menu parameter on channel of a system programmed for emergency alarms.

In the P25 conventional mode, a special emergency data transmission is sent, and in the conventional analog mode, it is a DTMF number that is sent in place of the Pre/Post ANI programming if applicable. If ANI is not programmed, it defaults to the “Pre” condition. The DTMF Emergency ID is programmed on the Conventional Radio Wide screen when programming the radio. Proceed as follows to activate an emergency alarm:

1. Select a channel of a system on which the Emergency Alarm is enabled and then press the Emergency option switch or select that menu parameter. The radio then begins automatically transmitting an emergency alarm and “EMERGENCY” is indicated in the display for 3 seconds.

2. When the emergency alarm is acknowledged, “ACK RCVD” is briefly displayed and the emergency acknowledge tone (two beeps) sounds. This alert tone can be disabled if desired. Silent operation may also be programmed in which case no tone sounds and there is no indication that an acknowledgment occurred.
3. The radio continues to transmit this message until an acknowledgment is received or until 30 attempts have been made. To exit this mode, power must be turned off.

5.10.3 EMERGENCY CALLS

An emergency call occurs if the PTT switch is pressed after pressing the Emergency switch or selecting the menu parameter as above and the system of the selected channel is programmed for emergency calls.

If the PTT switch is pressed on a P25 channel, an emergency indication is sent according to the P25 standard (the emergency bit is set in the Common Air Interface). If it is pressed on an analog channel, the DTMF emergency ID is sent in place of the ANI DTMF PTT ID if applicable. To place this call, proceed as follows:

1. Select a channel of a system on which the Emergency Call is enabled and press the Emergency option switch or select that menu parameter.
2. To place the emergency call, manually press the PTT switch and begin speaking as with a standard call. If the channel is changed, operation continues on the new channel in the emergency mode.
3. To exit this mode, power must be turned off.

5.11 CONVENTIONAL MODE SCANNING

5.11.1 GENERAL

Channel scanning features common to all operating modes are described in Sections 4.8 and 4.9. The following information describes features unique to conventional operation.

5.11.2 TRANSMITTING IN SCAN MODE

Each conventional scan list can be programmed for one of the following modes. These modes determine if priority sampling occurs and also the channel on which transmissions occur while scanning. Refer to the next section for more information on priority sampling.

No Priority - No priority channel sampling occurs when the list is selected. The radio transmits on the selected channel.

Priority/Tx Selected - Priority sampling occurs and the priority channel or channels are those programmed in the selected scan list. The radio transmits on the selected channel.

Priority/Tx Priority (1) - Priority sampling occurs and the priority channel or channels are those programmed in the selected scan list. The radio transmits on the priority (1) channel.

Priority (1) on Selected - The priority (1) channel is always the selected channel. The radio transmits on the selected channel.

Talkback - No priority sampling occurs. The radio transmits on the channel of a call while scanning is halted. Then once scanning resumes, it transmits on the selected channel.

5.11.3 PRIORITY CHANNEL SAMPLING

NOTE: The following describes priority sampling when scanning conventional channels. Priority sampling when scanning SMARTNET/SmartZone/P25 Trunked channels is described in Section 6.12.

General

The priority channel sampling feature ensures that when standard scanning, messages on the priority channel are not missed while listening to a message on some other channel. The transceiver can be programmed as just described so that the priority channel is a fixed channel programmed in the current scan list, the currently selected channel, or not used.

NOTE: Priority channel sampling (both analog and P25 channels) currently does not occur when receiving encrypted calls, and also when receiving P25 calls if equipped with Flash code 1.10 or earlier. In addition, the priority channel is not scanned if the active channel is an analog channel on the same frequency programmed with CTCSS/DCS squelch control.

Either a single or dual priority* channels can be programmed if desired. With dual priority, a call on the second priority channel is interrupted by a call on the first priority channel but not vice versa. When scanning and the selected channel is a single or first priority channel, **F** is indicated in the display. This indication is displayed regardless of whether the priority channel is fixed or always the selected channel. When it is a second priority channel, **F₂** is displayed.

The priority channel sampling frequency is determined by the programmed Priority Lookback Time A (see description which follows). For example, if 2.0 seconds is programmed, the priority channel is sampled every 2.0 seconds when listening to a message on a non-priority channel. When not listening to a message, the priority channels are scanned in the normal scan sequence. With dual priority, the first and second priority channels are alternately sampled at the Lookback Time.

Priority channel sampling occurs only with standard conventional scanning. It does not occur with radio-wide scanning, when listening to any type of SMARTNET/SmartZone/P25 trunked call, encrypted call, or when transmitting (see preceding note). A series of “ticks” may be heard when the priority channel is sampled while listening to a message on some other conventional channel.

The priority sampling times are programmed by the following parameters:

Lookback Time A - This time determines how often the priority channel is checked for activity. Times of 0.25-4.00 seconds in 0.25-second steps can be programmed.

Lookback Time B - This time determines how often the priority channel is checked once an incorrect Call

Guard (CTCSS/DCS) or NAC code is detected. Since it takes much longer to detect an incorrect Call Guard signal than a carrier, this time should be relatively long to prevent the interruptions from making a message difficult to understand. Times of 0.5-8.0 seconds can be programmed in 0.5-second steps.

5.11.4 CHANGING THE PRIORITY CHANNEL

If a fixed priority channel is associated with the current scan list, it can be changed if the Priority option switch or menu parameter is programmed. With dual priority, this function changes only the first priority channel. To change both priority channels, use the Scan List Edit function described in Section 4.9.5.

Proceed as follows to change the priority channel using the Priority option switch/menu parameter:

1. Make sure scanning is disabled (**Z** icon not displayed) and the desired scan list is selected (see Section 4.9).
2. Select the channel you want to be the priority channel and then press the Priority option switch or select that menu parameter. “Priority” is then flashed to indicate that the current channel is now the priority channel when scanning that list. Other indications that may occur are as follows:
 - If “No Priority” is displayed, priority sampling may not be enabled on the scan list.
 - If “Sel Chan” is displayed, the priority channel is always the selected channel and cannot be changed.
 - If no indication displayed, the scan list may not be user editable or the channel may not be in the scan list.

5.12 STANDARD CONVENTIONAL CALLS

Standard conventional calls are placed to other mobile units monitoring the selected channel. The proper coded Call Guard squelch tone or code or P25 NAC may need to be transmitted by your radio for them to receive a call (see Sections 5.5 and 5.16.3).

* This feature requires 51xx operating (Flash) software 1.5.0 or later and PCConfigure 1.17 or later.

Placing a Standard Conventional Call

1. Turn power on and set the volume as described in Section 3.1. Select the channel programmed for the mobile you want to call as described in Section 3.3.
2. Monitor the channel automatically or manually as described in Section 5.2.
3. Press the PTT switch and if the Busy Channel Lockout feature is programmed on the channel (see Section 5.4), the transmitter is automatically disabled if the channel is busy. Otherwise, busy and out-of-range conditions are not indicated.
4. Press (and hold) the PTT switch to talk and release it to listen.

Receiving a Standard Conventional Call

1. Select or scan the channel programmed for the call you want to receive (refer to Sections 4.8 and 4.9 for more scanning information).
2. When the call is received, press the PTT switch to talk and release it to listen. If scanning, responses may occur on the priority, selected, or receive channel as described in Section 5.11.2.

5.13 DTMF/ANI SIGNALING

DTMF (Dual Tone Multi-Frequency) tones can be generated for ANI (Automatic Number Identification) and other purposes on conventional analog channels. One of the following options may be enabled on each channel:

Pre-Tx ANI - A preprogrammed ANI sequence is automatically sent each time the PTT switch is pressed.

Post-Tx ANI - A preprogrammed ANI sequence is automatically sent each time the PTT switch is released.

When an emergency alarm or call is placed, this ANI signaling is replaced by the Emergency DTMF ID (see Section 5.10).

5.14 CLONE MODE

The Clone feature* enables one radio to program another with identical information. The PCConfigure programming software is not required. This feature is available with 51xx portables only. Other requirements are as follows:

- The Clone menu parameter must be selectable by the master (sending) radio. This parameter is not required with the slave (receiving) radio.
- The master and slave radios must be identical models (same frequency range and options).
- Flash code Version 1.5.0 or higher is required with both radios (the version number is display briefly at power up). PCConfigure Version 1.17 or higher is also required to program the Clone menu parameter.

Only zones with conventional analog and P25 channels can be transferred using this function. Any SMARTNET/SmartZone and P25 trunked information is not transferred. In addition, the P25 Unit ID, encryption keys, and the RSI ID and other OTAR information is not transferred. Cloned zones are indicated in the slave radio by an asterisk in the first character position of the zone alias.

Proceed as follows to program a radio using this feature:

1. Turn the slave (receiving) radio off and connect it to the master (sending) radio using Cloning Cable, Part No. 023-5100-930. Turn the slave radio back on.
2. On the master radio, select the Clone menu parameter and press the F2 key. Either the “Zone” or “Complete” mode can then be selected. Operation in these modes is as follows:

Zone - This mode allows channel information for only the selected zones to be transferred. Information programmed on the Global, Radio Wide, and By System screens is not changed. A list of the available conventional zones is displayed, and then to select a zone, highlight it and press the F2 key. A selected zone is indicated by an asterisk (*). After the desired zones are selected, scroll to “OK” and press F2 to begin the data transfer.

* This feature requires 51xx operating (Flash) software 1.5.0 or later and PCConfigure 1.17 or later.

Complete - This mode transfers all conventional programming information from the master radio. This includes information on the Global, Radio Wide, and By System screens. Simply highlight “Complete” and press the F2 key to begin the data transfer.

5.15 SINGLE TONE ENCODER

This feature allows the user to transmit a single tone by pressing the Single Tone Encoder option switch or selecting that menu parameter. Each conventional system can be programmed for a tone of 500-2500 Hz in 1 Hz steps with a duration of 0.5-2.5 seconds in 0.1 second steps. This feature is available only with Flash code 1.7.0 or later.

5.16 PROJECT 25 MODE FEATURES

5.16.1 UNIT ID CODE

Each transceiver that operates on Project 25 (digital) channels is programmed with an eight-digit unit ID. This ID is unique for each transceiver and can be any number from 1-16,777,216. When power is turned on with a Project 25 channel selected, this ID is briefly displayed.

5.16.2 GROUP ID CODE

Each Project 25 channel is programmed with a group ID that determines which group of mobiles will receive the call. A call is received on a channel if a selected or scanned channel is programmed with that ID and the correct NAC is detected (see following). Group IDs can be any number from 0-65,535. Group ID detect can be disabled by the Normal/Selective squelch function described in Section 5.5.2 or the monitor mode described in Section 5.3

5.16.3 NETWORK ACCESS CODE

Project 25 conventional channels also use a NAC (Network Access Code) to control which calls are received on a channel. The NAC can be 0-4095, and each transmit and receive channel can be programmed for a different code. Other operation, such as monitoring before transmitting, is similar to that of analog channels. NAC (and group ID) detect can be disabled by the monitor mode described in Section 5.3.

5.16.4 P25 GROUP CALLS

P25 group calls are placed by simply selecting the channel programmed for the desired group, monitoring the channel if required, and transmitting.

Changing a Channel Talk Group

If the Digital Talk Group Select option switch or Select TG menu parameter is programmed, the talk group assigned to a channel can be changed by the user. The new talk group continues to be assigned to the channel until it is manually changed again (cycling radio power or selecting another channel does not reselect a default talk group). Change the talk group assigned to a channel as follows:

1. Select the channel to be changed and then press the Talk Group Select option switch or select the Select TG menu parameter.
2. Press the Up/Down switch until the alias (alphanum) of the desired talk group is displayed.
3. To select that talk group and return to normal operation, press the Talk Group Select option switch again or the F2 switch. If talk group selection has been disabled on the channel by programming, “NO LIST” is displayed, a tone sounds, and no change occurs.

5.16.5 P25 UNIT CALLS

Unit Calls (also called Individual Calls) can be placed to a specific radio on a Project 25 channel if the Unit Call option switch or menu parameter is programmed. Only the individual ID of the target radio is sent (a talk group ID is not sent). The mobiles that can be called are preprogrammed in the unit call list.

To receive a Unit Call, the RF channel of the call must be selected or scanned and the correct NAC and unit ID must be detected. The ID of the calling mobile is then transmitted back. To respond to the call, the transceiver must be programmed with the Unit ID option switch or menu parameter, and have a Unit Call programmed for the ID of the calling mobile.

* This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

Place and receive a Unit Call as follows:

1. To transmit a Unit Call, press the Unit Call option switch or select the Unit Call menu parameter. The alias (tag) of the last Unit Call is displayed.
2. If required, press the Up/Down switch to display the desired call. The alias and ID of the calls that have been programmed are alternately displayed.
3. Press and then release the PTT switch. Ringing is then heard and "WAIT" displayed to indicate that the mobile is being rung. To disable this ringing but not the call, briefly press the PTT switch again. Ringing occurs for 20 seconds or until the call is answered, whichever occurs first.
4. When a Unit Call is received, two beeps sound (if tones are enabled), and "Call Rcvd" and the alias or frequency of the currently selected talk group are alternately flashed.

In addition, the transceiver can be programmed to display the alias of the talk group on which the call is being received (if it is not the same as the selected talk group) and/or the ID of the mobile placing the call. The time each is displayed is programmable** for 0.5-7.0 seconds or infinite.

5. To respond, select the Unit Call mode by pressing the Unit Call option switch or selecting the menu parameter. The following operation then occurs:
 - If a unit call has been programmed with the ID of the calling mobile, it is automatically selected. A response can then be made without changing the selected channel.
 - If no Unit Call has been programmed with the ID of the calling mobile, a response cannot be made in this mode.
 - If the call timer times out (set by programming) or the channel is changed before a response is made, the unit call mode is exited.

5.16.6 CALL ALERT

General

The Call Alert™ feature* allows pages to be sent and received on P25 conventional channels. Operation is similar to SMARTNET/SmartZone and P25 Trunked channels.

Answering a Page

1. When a page is received, five beeps sound and "PAGE" is displayed. The ID of the mobile paging you is stored as the last ID received.
2. To clear or ignore the page, press any option switch. If the PTT switch is pressed, a group call is placed on the selected channel.
3. To answer the page as a unit call (see Section 5.16.5), press the Unit Call option switch or select that menu parameter and the alias of the mobile paging you is displayed. Press the PTT switch and respond. One of the following conditions then occur:
 - If the mobile being called is on the air, ringing is heard until the called party answers or for 20 seconds, whichever occurs first. If no answer occurs within 20 seconds, a continuous tone sounds and "NO ANS" is displayed.
 - If the mobile being called is not on the air, a continuous tone is heard instead of ringing and "NO ACK" is displayed.
4. When the call is finished or if it could not be completed for some reason, end it by pressing the Unit Call option switch or the F1 (Exit) key.

Initiating a Page

1. With a P25 conventional channel selected, momentarily press the Call Alert option switch or select that menu parameter. The alias of the last ID called is displayed.
2. If required, press the Up/Down switch to display the desired mobile. The alias of each number is displayed.

* This feature requires 51xx operating (Flash) software 1.8.0 or later and PCConfigure 1.19 or later.

** This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

3. Press the PTT switch or the F2 key and one of the following occur:
 - If five beeps sound, the system received the page and the paged mobile is on the air and received it. The page mode is automatically exited.
 - If the system received the page but the called mobile is not on the air, a single beep sounds and “NO ACK” is displayed 6 seconds after the PTT switch is pressed. Auto exit then occurs.

5.16.7 MESSAGING

The messaging feature* allows preprogrammed messages to be sent to a dispatcher on P25 channels. Up to 16 messages can be preprogrammed, and they are identified by an alias. If a Message option switch or menu parameter is programmed, messages are sent as follows:

1. Momentarily press the Message option switch or select that menu parameter. The alias of the last message sent is displayed.
2. If required, press the Up/Down switch to display the desired message. Then send the message by pressing the F2 key or momentarily pressing the PTT switch. One of the following events then occurs:
 - If five beeps sound and “ACK RECVD” is displayed, the message was received and automatically acknowledged by the system.
 - If after five tries the message is not acknowledged, a tone sounds and “NO ACK” is displayed.

5.16.8 STATUS MESSAGING

The status feature* allows you to manually or automatically send your current status to your dispatcher on P25 channels. Up to eight status conditions can be preprogrammed, and they are identified by an alias. If the Status option switch or menu parameter is programmed, status conditions are sent as follows:

1. Momentarily press the Status option switch or select that menu parameter. The alias of the current status condition is displayed.

* This feature requires 51xx operating (Flash) software 1.8.0 or later and PCConfigure 1.19 or later.

2. To change the current status, press the Up/Down switch until the desired status is displayed. Then to send the status, press the F2 (Select) switch or momentarily press the PTT switch. One of the following events then occurs:
 - If five beeps sound and “ACK RCVD” is displayed, the status was received and acknowledged by the system.
 - If after five tries the message is not acknowledged, a tone sounds and “NO ACK” is displayed.

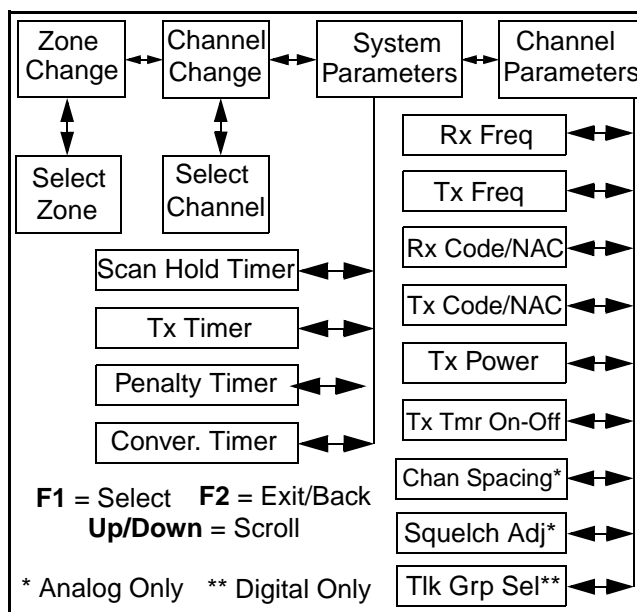



Figure 5-1 Keypad Programming Menu Flowchart

5.17 KEYPAD PROGRAMMING

NOTE: The Keypad programming feature is available to Federal Government users only. Users regulated by the Federal Communications Commission are not allowed to have this feature.

5.17.1 INTRODUCTION

Keypad programming can be enabled only with transceivers that have been factory coded as Federal models. It is then available if a conventional mode option switch or menu parameter is programmed for the “Keypad Programming” function. The keypad programming mode is indicated by “CHNG ZONE” and  in the display.

Keypad programming allows conventional channel parameters such as the transmit and receive frequency and Call Guard squelch code to be changed. In addition, several conventional mode timers can be changed. It cannot be used to reprogram disabled channels or any SMARTNET/SmartZone/P25 Trunked information.

5.17.2 MENU DESCRIPTION

A menu system is used to select parameters in the keypad programming mode. A flowchart showing the keypad programming mode menu structure is located in Figure 5-1. When the keypad programming mode is selected by the Keypad Programming option switch or menu parameter, the first menu parameter “CHNG ZONE” is displayed as just described. Press the Up/Down switch to scroll through the available parameters which are listed below.

- **CHNG ZONE**
- **CHNG CHAN**
- **SYS PARMS**
- **CHAN PARMS**

Press the F2 (Select) key to select a highlighted parameter, and press the F1 key from one of the main menus to exit keypad programming. Pressing it in the other menus returns to the previous menu. Additional information on this parameters is located in the following sections.

5.17.3 ZONE PASSWORD

***NOTE:** Make sure that the zone password(s) are not lost because they cannot be overridden in the field. The PCConfigure software must be used to display the lost password or program a new password.*

Each zone can be programmed with a password by the PCConfigure software to prevent unauthorized reprogramming of zone by keypad programming. When this password is programmed, it must be entered before system or channel parameters in that zone can be changed by keypad programming. The zone password is programmed in the Zones > Edit Zone screen of the PCConfigure programmer. This screen is displayed by clicking the Edit Zone button. A different password can be programmed for each zone.

When an attempt is made to select a system or channel parameter in a password protected zone, “PASSWORD” is flashed. The password is always eight digits long and is entered using the same procedure as used for the power-up password described in Section 3.2. After the password is entered, system and channel parameters for that zone can be reprogrammed normally.

5.17.4 ZONE CHANGE PARAMETER

The “CHNG ZONE” menu parameter selects the zone containing the conventional channel to be reprogrammed. It does not change the zone selected for normal operation.

Press the F2 switch to select the “ZONE CHG” parameter and then scroll through the programmed zones by pressing the Up/Down switch. When the desired zone is displayed, select it by pressing the F2 switch.

5.17.5 CHANNEL CHANGE PARAMETER

The “CHNG CHAN” menu parameter selects the conventional channel to be reprogrammed. Disabled or SMARTNET/SmartZone/P25 Trunked channels cannot be selected. This does not change the channel selected for normal operation.

Press the Select switch to select the “CHNG CHAN” parameter and then scroll through the programmed channels by pressing the Up/Down switch. When the desired channel is displayed, select it by pressing F2 switch.

5.17.6 SYSTEM PARAMETERS

***NOTE:** If “PASSWORD” is briefly displayed when attempting to select a parameter, see Section 5.17.3.*

The “SYS PARMS” menu parameter selects the conventional mode timers to be reprogrammed (see following). Press the F2 switch to select the “SYS PARMS” parameter and then press the Up/Down switch to display the desired parameter. Then press the F2 switch again to select it.

SCAN TIMER - Selects the Scan Hold timer.
Press the Up/Down switch to increment/decrement

the timer in 0.5-second steps or set it to 0 seconds to disable it. When the desired value is displayed, store it by pressing the F2 switch.

TX TIMER - Selects the transmit time-out timer. Press the Up/Down switch to increment/decrement the timer in 15-second steps or disable it by selecting 0 seconds. When the desired value is displayed, store it by pressing the F2 switch.

PEN TIMER - Selects the penalty timer. Press the Up/Down switch to increment/decrement the timer in 15-second steps. When the desired value is displayed, store it by pressing the F2 switch.

CONV TIMER - Selects the conversation timer. Press the Up/Down switch to increment/decrement the timer in 30-second steps or disable it by selecting 0 seconds. When the desired value is displayed, store it by pressing the F2 switch.

5.17.7 CHANNEL PARAMETERS

NOTE: If “ENTER PSWD” is briefly displayed when attempting to select a parameter, see Section 5.17.3.

The “CHAN PARMS” menu parameter selects the following conventional channel parameters that can be reprogrammed. Press F2 switch to select the “CHAN PARMS” parameter and then press the Up/Down switch to display the desired parameter. Then press the F2 switch to select it. The squelch control parameters are unique to the type of conventional channel selected (analog or Project 25).

RX FREQ - Programs the receive channel frequency. The digit being changed flashes, and press the Up/Down switch to select the desired number for that digit. Then press the F2 switch to move to the next digit. If an invalid frequency is entered, a beep sounds, “INVALID” is briefly displayed, and the number must be re-entered.

TX FREQ - Programs the transmit frequency the same as the preceding RX FREQ.

CTCSS/DCS Squelch Control (Analog Channel)

RX CODE - Programs the receive Call Guard (CTCSS/DCS) code. The currently selected code

and is initially displayed. Press the Up/Down switch to select the desired code type (CTCSS analog or DCS digital Call Guard). Then press F2 to select it and enter the code number similar to programming a channel frequency as just described.

TX CODE - Selects the transmit codes the same as RX CODE above.

NAC Squelch Control (Project 25 Channel)

RX NAC - Programs the Network Access Code (NAC) which can be any number from 0-4095. The procedure is similar to programming a RX FREQ just described. If an invalid code is entered, a beep sounds, “INVALID” is briefly displayed, and the code must be re-entered.

TX NAC - Selects the transmit NAC the same as RX NAC above.

TX POWER - Selects the desired power output level. Press the Up/Down switch to scroll through the following choices. When the desired setting is displayed, store it by pressing the F2 switch.

- POWER HI - High transmit power
- POWER LO - Low transmit power
- POWER SW - Switchable power selectable by the High/Low power switch. This choice is not available if that switch is not programmed.

TX TIMER - Enables or disables the time-out timer on the current channel. Press the Up/Down switch to select the on and off mode, and when the desired setting is displayed, store it by pressing the F2 switch.

CHAN SPC (Analog Only) - Selects either wide or narrow band channel spacing. Press the Up/Down switch to select “WIDE” or “NARROW”, and when the desired setting is displayed, store it by pressing the F2 switch.

SQ ADJ (Analog Only) - Changes the preset squelch setting on that channel. The default setting is “0” and values of -7 to +7 can be selected. Increasing this setting toward +7 causes the squelch to open sooner so that weaker signals can be received, and decreasing it toward -7 causes the opposite to occur.

NOTE: The channel spacing is not set with P25 channels because it is always narrow, and the squelch cannot be changed because the setting is critical for proper receiver operation.

TG ID (P25 Only) - Selects the talk group for the selected channel. Press the Up/Down switch to display the alias of each preprogrammed talk group and then store it by pressing the F2 switch.

SECTION 6 SMARTNET/SMARTZONE/P25 TRUNKED FEATURES

6.1 INTRODUCTION

An overview of the SMARTNET/SmartZone and P25 Trunked operating modes is located in Section 3.8. The following information describes the features unique to these modes of operation. Refer to the “Radio Wide Features” section starting on page 18 for information on features common to all operating modes.

6.2 ANALOG AND DIGITAL OPERATION

Either analog or digital operation can be selected for communication on SMARTNET traffic channels. Each talk group can be programmed for either type of operation. Digital operation may be an optional feature.

6.3 VIEWING UNIT ID

When power is turned on with a SMARTNET/SmartZone channel selected, the five-digit Unit ID from 1-65,535 is briefly displayed as IDxxxxx. When a P25 channel is selected, the eight-digit unit ID from 1-16,777,216 is briefly displayed (see Section 5.16.1).

6.4 STANDARD GROUP CALLS

6.4.1 INTRODUCTION

Standard group calls may be placed to another mobile, group of mobiles, or a dispatcher, depending on programming. Most calls are probably this type. Proceed as follows to place and receive group calls:

6.4.2 PLACING A STANDARD GROUP CALL

1. Turn power on and set the volume as described in Section 3.1. Select the channel programmed for the talk group you want to call (see Section 3.3).

2. If the talk group is programmed for encryption and is not strapped to Clear or Coded, select the desired mode by pressing the Clear/Secure option switch or selecting that menu parameter. The status cannot be changed if the talk group is strapped to Clear or Coded. Refer to Section 8.1.7 for more information.
3. Press the PTT switch and begin talking. An optional talk permit tone may sound to indicate when talking can begin. Events that may occur are as follows:
 - If in the secure mode and your transceiver is not programmed with the proper encryption key, “KEYFAIL” is displayed and the call must be made in the clear mode or the proper key must be programmed.
 - If the busy tone sounds and “BUSY” is displayed, the system is busy. Release the PTT switch and wait for the call back tone to sound. Then press the PTT switch within 3 seconds.
 - If a continuous tone sounds and “NO SYS” is displayed, you may be out-of-range. Drive closer or away from shielding objects and try again.
 - If your unit ID is invalid, the call is being made to an invalid group ID, or group calls are not enabled, “DISABLED ID” is displayed and an alert tone sounds.
 - If an attempt is made to change an analog call from the clear to secure mode and there is no available secure channel, “NO SEC” is flashed, an error tone sounds, and the call is terminated.
 - If an attempt is made to change an analog channel from the secure to clear mode, “SEC ONLY” is displayed, an error tone sounds, and the call is terminated. (Calls on digital channels can be changed if not strapped to clear or secure.)

- If the secure mode is selected by the Secure/Clear option switch or menu parameter and an attempt is made to transmit on a channel strapped as clear, “Clear Only” is displayed and the transmitter is disabled. Likewise, if the clear mode is selected and the channel is strapped as secure, “Secure Only” is displayed and the transmitter is disabled.

6.4.3 RECEIVING A STANDARD GROUP CALL

Calls are received on only the talk group and/or announcement group programmed for the selected channel (with scanning disabled). When the selected channel is programmed with both Talk and Announcement groups, only the Talk and Announcement group IDs are detected. Other IDs in the Announcement group are detected only if no talk group is programmed.

The display indicates the selected channel alias when a call is received. The transceiver can also be programmed so that the received talk group alias and/or Individual ID of the calling mobile are displayed. The received talk group alias and the selected talk group alias are alternately displayed if they are different, and the Individual ID of the calling mobile is displayed briefly when the call is received. The time each is displayed is programmable* for 0.5-7.0 seconds or infinite.

6.5 PRIVATE (UNIT-TO-UNIT) CALLS

NOTE: With P25 Trunked operation, these calls are called Unit Calls, and they function the same as Enhanced Private Conversation calls described in the following information.

6.5.1 GENERAL

Private calls allow calls to be placed to a specific mobile unit. Either the Enhanced Private Conversation™ or standard Private Conversation modes may be programmed depending on the capabilities of the radio system. One difference between these call types is that the Enhanced type provides an indication that the called mobile is not on the air and the standard version does not. Operation in each of these modes is described in the following information.


The Private Call option key is required to place these calls, and either that key or the Call Response option key is required to receive them. Private calls are programmed to operate in one of the following modes:

- Disabled
- Answer-only capability
- List only - Unit IDs can be selected from a preprogrammed list only (direct entry using the keypad is not allowed)
- Unlimited - Unit IDs can be selected from a list and also dialed directly entered using the keypad.

Both limited and DTMF keypad models can be programmed to recall the unit IDs from a preprogrammed list. However, only DTMF keypad models can be programmed to directly dial unit IDs.


6.5.2 PLACING AN ENHANCED PRIVATE CONVERSATION CALL

Recalling From List

1. Momentarily press the Private Call option key or select that menu parameter and the alias of the last called mobile is displayed. The private call mode is indicated by  in the display.
2. If required, select another mobile by pressing the Up/Down switch until the alias of the desired mobile is displayed.
3. Press the PTT switch of the F2 key to initiate the call.

(Proceed to the bulleted list which follows Item 3 in the next section for events that may occur next.)

Direct Entry Using DTMF Keypad

1. Press and hold the Private Call option key until a tone sounds (approximately 1 second). The last ID called is displayed, and the private call mode is indicated by  in the display.
2. Using the 0-9 keys, dial the ID of the mobile you are calling (five digits must be entered). To erase the last digit, press the Down key, and to cancel the call, press the Private Call Option key again.

* This feature requires 51xx operating (Flash) software 1.9.0 or later and PCConfigure 1.20 or later.

- Press the PTT switch to initiate the call. If the entered number is valid, the display indicates the alias of the ID if it matches an ID in the call list. Otherwise, the ID you entered continues to be displayed.


Events that may then occur are as follows:

- If the mobile being called is on the air, “WAIT” is displayed and ringing is heard until the called party answers or for 20 seconds, whichever occurs first. Pressing the PTT switch or an option key stops the ringing but not the call. When the call is answered, the voice of the called party is heard.
 - If the called mobile does not answer within 20 seconds, a continuous tone sounds and “NO ANS” is displayed.
 - If the called mobile is not on the air, a continuous tone sounds instead of the ringing tone and “NO ACK” is displayed.
 - If the busy tone sounds and “BUSY” is displayed, the called mobile has answered the call but the system is busy. When the system is no longer busy, the call back tone sounds.
 - If your transceiver or the called transceiver is inhibited or not programmed to make this type of call or for the requested secure mode, “Rspns Only” is displayed and an alert tone sounds.
 - If your transceiver does not have the proper encryption key, “KEYFAIL” is displayed and the call must be made in the clear mode by pressing the Clear/Secure option key (if strapped to switchable). Otherwise, load the correct key.
- When the call is finished or is not answered, end it by pressing the Private Call option key or the F1 (Exit) key.

6.5.3 PLACING A STANDARD PRIVATE CONVERSATION CALL

Recalling From List


- Momentarily press the Private Call option key or select that menu parameter. The alias of the last

called mobile is displayed, and the private call mode is indicated by  in the display.

- If required, select another mobile by pressing the Up/Down switch until the alias of the desired mobile is displayed.
- Press the PTT switch or the F2 key to initiate the call.

(Proceed to the bulleted list which follows Item 3 in the next section for events that may occur next.)

Direct Entry Using DTMF Keypad

- Press and hold the Private Call option key until a tone sounds (approximately 1 second). The last ID called is displayed, and the private call mode is indicated by  in the display.
- Using the 0-9 keys, dial the ID of the mobile you are calling (all six digits). To erase the last digit, press the Down key, and to cancel the call, press the Private Call Option key again.
- Press the PTT switch to initiate the call. If the entered number is valid, the display indicates the alias of the ID if it matches an ID in the call list. Otherwise, the ID you entered continues to be displayed.

Events that may then occur are as follows:

- The called party answers the call.
- The called party does not answer. Press the Private Call option key or F1 (Exit) to end the call.
- If the selected mobile ID is not valid, “INVALID ID” is displayed and an alert tone sounds.
- If the radio system is busy, four low tones sound and “BUSY” is displayed. When the system is no longer busy, the call back tone (four beeps) is heard and the channel is automatically acquired. Press the PTT switch to continue the call.

- If the call is in the secure mode and the transceiver does not have the proper encryption key, “KEYFAIL” is displayed and the call must be made in the clear mode by pressing the Clear/Secure option key or selecting that menu parameter (if strapped to switchable). Otherwise, load the correct key.
4. When the call is finished or if it is not answered, end it by pressing the Private Call option key or the F1 (Exit) key.

6.5.4 RECEIVING A PRIVATE CALL (ALL TYPES)

1. When a private call is received, “CALL RCVD” is displayed and the call tone sounds once.
2. To answer the call, press the Private Call option key or select that menu parameter and then press the PTT switch and begin speaking. The unit ID of the calling mobile is displayed. More information follows:
 - If the PTT switch is pressed before the Private Call option key, the call is transmitted as a group call.
 - If private calls are not permitted (the Private Call option key/menu parameter is not programmed), press the Call Response option key or select that menu parameter to answer the call.
 - The call must be answered within 20 seconds or it is automatically terminated.
 - If the system is busy when a response is made, “BUSY” is displayed and the busy tone sounds.

6.6 TELEPHONE CALLS

NOTE: Telephone calls are currently not available in the P25 trunked mode or any secure mode.

6.6.1 GENERAL


The telephone call feature allows telephone calls to be placed and received over the public telephone system using your transceiver. Telephone calls are programmed to operate in one of the following modes:

- Disabled
- Answer-only capability
- List only - Telephone numbers can be selected from a preprogrammed list only (direct entry using the keypad is not allowed)
- Unlimited - Telephone numbers can be selected from a list and also dialed directly entered using the keypad.

Both limited and DTMF keypad models can place telephone calls by recalling the telephone number from a preprogrammed list as just described. However, only DTMF keypad models can directly dial telephone numbers using the keypad.


6.6.2 PLACING A TELEPHONE CALL

Recalling From List

1. Momentarily press the Phone option key or select that menu parameter. The alias of the last called telephone number is displayed. The interconnect call mode is indicated by  in the display.
2. If required, press the Up/Down switch to display the desired number. The alias of each number is displayed.
3. Press and release the PTT switch and “DIALING” is displayed. Events that may occur are as follows:

(Proceed to the bulleted list which follows Item 3 in the next section for events that may occur next.)

Direct Entry Using DTMF Keypad

1. Press and hold the Phone option key until a tone sounds (approximately 1 second). The alias of the last called telephone number is displayed if it is in the phone number list. Otherwise, the last eight digits of the last called telephone number are displayed. The interconnect call mode is indicated by  in the display.
2. Enter the telephone number using the 0-9, *, and # keys. To enter a pause (indicated by “P”), press * and then #. To erase the last digit, press the F1 key. The number scrolls to the left in the display so that the eight right-most digits are always displayed. Numbers up to sixteen digits (including pauses) can

be entered. Press the Phone option key to cancel the call.

3. Press and release the PTT switch and “DIALING” is displayed. Events that may occur are as follows:

- If the access is successful, a dial tone sounds and the dialed number is displayed and sent. Either ringing or a busy signal is then heard as with a standard telephone call. When the called party answers, press the PTT switch to talk and release it to listen (since the transceiver is half-duplex, it is not possible to talk and listen at the same time). Each time the PTT switch is released, a go-ahead tone is sent to the landside party to indicate when they can respond. To dial a number after the connection is made, press the PTT switch and dial the number using the microphone keypad.
- If the selected telephone number is not valid, “INVALID” is displayed and an alert tone sounds. Select a valid number.
- If the system is busy, “BUSY” is displayed and the busy tone sounds. The call will automatically proceed when the system becomes available.
- If you are out-of-range or the radio cannot be accessed for some reason, “NO PHONE” is displayed and an alert tone sounds.
- If the interconnect call you are making on the selected secure mode is not authorized, “REJECT” is displayed and an alert tone sounds.
- If your transceiver does not have the proper encryption key, “KEYFAIL” is displayed and the call must be made in the clear mode using the Clear/Secure option key or menu parameter (if encryption is selectable on the channel). Otherwise, load the proper encryption key.

4. When the telephone call is finished or if it could not be completed for some reason, end it by pressing the Phone option key or F1 (Exit) key.

6.6.3 ANSWERING A TELEPHONE CALL

1. When a telephone call is received, “ringing” similar to a standard telephone is heard and “PHONE” is displayed.

2. To answer the call, press the Phone option switch or select that menu parameter and press the PTT switch to talk and release it to listen. Since the transceiver operates half duplex, it is not possible to talk and listen at the same time.

3. When the call is finished, end it by pressing the PHONE option switch or F1 (Exit) key.

6.7 CALL ALERT

6.7.1 GENERAL

The Call Alert™ feature allows pages to be sent and received. With SMARTNET/SmartZone operation, either the Enhanced Private Conversation™ or Standard Private Conversation mode may be programmed depending on the capabilities of the radio system. With P25 Trunked operation, operation is similar to the enhanced mode.

6.7.2 ANSWERING A PAGE

1. When a page is received, five beeps sound and “PAGE” is displayed. The ID of the mobile paging you is stored as the last ID received.
2. To clear or ignore the page, press any option switch. If the PTT switch is pressed, a group call is placed on the selected channel.
3. To answer the page as a private call (see Section 6.5), press the Private Call option switch or select that menu parameter and the alias of the mobile paging you is displayed. Press the PTT switch and respond. One of the conditions that follow may also occur:

Enhanced Private Conversation Mode

- If the mobile being called is on the air, ringing is heard until the called party answers or for 20 seconds, whichever occurs first. If no answer occurs within 20 seconds, a continuous tone sounds and “NO ANS” is displayed.
- If the mobile being called is not on the air, a continuous tone is heard instead of ringing and “NO ACK” is displayed.

Standard Private Conversation Mode

- If the mobile being called is not on the air or does not answer, you will simply not hear a response.
4. When the call is finished or it could not be completed for some reason, end it by pressing the Private Call option switch or the F1 (Exit) key.

6.7.3 INITIATING A PAGE

1. With a SMARTNET/SmartZone channel selected, momentarily press the Call Alert option switch or select that menu parameter. The alias of the last ID called is displayed.
2. If required, press the Up/Down switch to display the desired mobile. The alias of each number is displayed.
3. Press the PTT switch or the F2 key and one of the following occur:
 - If five beeps sound, the system received the page and the paged mobile is on the air and received it. The page mode is automatically exited.
 - If the system received the page but the called mobile is not on the air, a single beep sounds and “NO ACK” is displayed 6 seconds after the PTT switch is pressed. Auto exit then occurs.

6.8 MESSAGING

NOTE: This feature is not available with P25 trunked operation.

The messaging feature allows preprogrammed messages to be sent to a dispatcher. Up to 16 messages can be preprogrammed, and they are identified by an alias. If a Message option switch or menu parameter is programmed, messages are sent as follows:

1. Momentarily press the Message option switch or select that menu parameter. The alias of the last message sent is displayed.
2. If required, press the Up/Down switch to display the desired message. Then send the message by pressing the F2 key or momentarily pressing the

PTT switch. One of the following events then occurs:

- If five beeps sound and “ACK RECVD” is displayed, the message was received and automatically acknowledged by the system.
- If after five tries the message is not acknowledged, a tone sounds and “NO ACK” is displayed.

6.9 SENDING STATUS CONDITIONS

The status feature allows you to manually or automatically send your current status to your dispatcher. Up to eight status conditions can be preprogrammed, and they are identified by an alias. If the Status option switch or menu parameter is programmed, status conditions are sent as follows:

1. Momentarily press the Status option switch or select that menu parameter. The alias of the current status condition is displayed.
2. To change the current status, press the Up/Down switch until the desired status is displayed. Then to send the status, press the F2 (Select) switch or momentarily press the PTT switch. One of the following events then occurs:
 - If five beeps sound and “ACK RCVD” is displayed, the status was received and acknowledged by the system.
 - If after five tries the message is not acknowledged, a tone sounds and “NO ACK” is displayed.

6.10 EMERGENCY ALARM AND CALL

6.10.1 INTRODUCTION

Emergency Alarms and Calls are separate functions that can be individually enabled or disabled on each SMARTNET/SmartZone and P25 Trunked system. The Emergency option switch (or menu parameter) is also required for these functions. Emergency Alarms are transmitted on the last selected talk group, and Emergency Calls are transmitted on the emergency talk group programmed on the selected system (or the selected talk group if none is programmed).

The emergency hot microphone function can be programmed with emergency alarms and calls. Then when the emergency switch is pressed, the microphone audio is enabled and the transmitter keyed for the programmed hot microphone time (10-120 seconds). If “silent” emergency is programmed, no tones sound but the transmit indicator still lights. If the “Surveillance Mode” is enabled (see Section 4.7), all indicators, lights, and tones are disabled.

6.10.2 EMERGENCY ALARMS

An emergency alarm is a special data transmission on the selected talk group that alerts a dispatcher of an emergency situation (an emergency tone usually sounds at the console). Proceed as follows to activate an emergency alarm:

1. Select a SMARTNET/SmartZone or P25 Trunked channel that has this feature enabled and then press the Emergency option switch or select that menu parameter. The radio then begins automatically transmitting an emergency alarm data message and “EMERGENCY” is indicated in the display for 3 seconds.
2. When the emergency alarm is acknowledged, “ACK RCVD” is briefly displayed and the emergency acknowledge tone (two beeps) sounds. Silent operation may also be programmed in which case no tone sounds and there is no indication that an acknowledgment occurred.
3. The radio continues to transmit this message until an acknowledgment is received or the programmed number of attempts have been made. To exit this mode, power must be turned off.

6.10.3 EMERGENCY CALLS

An emergency call urgently requests access to a voice channel (an emergency tone usually does not sound at the console). To place this call, proceed as follows:

1. Select a SMARTNET/SmartZone or P25 Trunked channel that has this feature enabled and press the Emergency option switch or select that menu parameter. The emergency mode is indicated when “ACK RCVD” is briefly displayed and then

“EMERGENCY” and the emergency talk group are alternately displayed.

2. To place the emergency call, manually press the PTT switch and begin speaking as with a standard call. All group calls which follow are then emergency calls (private, telephone, and call alert calls are not allowed). If the channel is changed, the call is made on the emergency talk group programmed for the new channel.
3. To exit this mode, power must be turned off.

6.11 FAILSOFT OPERATION

If a failure occurs in the SMARTNET/SmartZone or P25 Trunked system so that it cannot be used, the system directs the transceiver to automatically enter the failsoft mode. When in this mode, “FAIL-SOFT” and the alias of the selected channel are alternately displayed. A failsoft tone may also be heard, depending on how the repeater is programmed.

When in the failsoft mode, operation is in the conventional mode on the preprogrammed failsoft channel (a different failsoft channel can be programmed on each talk group). If a transmission is attempted before a failsoft channel is located, a continuous tones sounds until the PTT switch is released. When the radio system returns to normal operation, this is automatically detected and normal operation resumes.

6.12 SMARTNET/SMARTZONE/P25 TRUNKED SCANNING FEATURES

6.12.1 GENERAL

Scanning on a SMARTNET/Smartzone and P25 Trunked systems is called Priority Monitor Scan. The following are unique features of this type of scanning. For general scanning information applicable to all operating modes, refer to Sections 4.8 and 4.9.

- Scanning is turned on and off by the Scan option switch or menu parameter. Talk groups (channels) can be programmed so that scanning automatically starts when the talk group is selected (Autoscan).

- When responding to calls in the scan mode, the programming of the Talkback Scan parameter determines if a response always occurs on the talk group of the call (Active Group) or the Selected Group if they are different. Transmissions at other times always occur on the selected talk group.
- Each talk group can be programmed to select one of the programmed scan lists or “No List” (scanning is disabled). If scanning is enabled and the selected channel does not permit scanning, it is automatically enabled again when a channel is selected that permits scanning.
- Up to 256 scan lists, each with up to 256 talk groups from the same system can be programmed. The selected scan list can be temporarily changed as described in Section 4.9.4 and edited as described in Section 4.9.5.
- In addition to calls on channels in the scan list, pages, private/unit calls, and telephone* calls are received while scanning. Private and telephone calls are not interrupted by priority messages.

6.12.2 PRIORITY TALK GROUP SAMPLING

One talk group in the scan list can be designated a priority talk group by programming or it can be the selected talk group. When scanning, messages on a non-priority talk group are interrupted by messages on the priority talk group. Priority scanning must also be supported at the system level for it to occur as programmed in the radio.

6.13 DYNAMIC REGROUPING

The dynamic regrouping feature allows a dispatcher to change the current talk group or switch mobiles to a predefined regrouping channel to receive an important message. When the console issues a regroup order, the transceiver switches to the preprogrammed regroup talk group. If the lock mode was not specified, the selected talk group can be manually changed and the previous talk group is reselected if power is cycled. If a locked regroup command is received, the displayed talk group cannot be changed manually or by cycling power. It can be changed only after a clear order is received from the console.

Dynamic regrouping operates as follows:

1. When this command is received, alternating tones sound and the transceiver automatically changes to the regrouping channel and “DYN REGRP” is displayed.
2. Manually select the channel corresponding to that alias. If this is not done, transmission still occurs on the new channel, but the alternating tones sound each time the PTT switch is pressed.
3. Talk and listen as usual. The dispatcher cancels dynamic regrouping which is indicated by a short tone. If a standard channel is not selected after this occurs, transmission is not allowed if the talk group is assigned as a dynamic regrouping talk group only. If it is assigned as a normal talk group, normal transmissions are allowed.

6.14 SMARTZONE AND P25 TRUNKED UNIQUE FEATURES

6.14.1 INTRODUCTION

As described in Section 3.8.3, the SmartZone[®] mode provides wide area coverage by allowing roaming between SMARTNET and conventional sites. The P25 Trunked mode can provide access to a single trunked site or roaming between several trunked sites. Operation in these modes is the same as just described in the preceding sections (6.1-6.13) with the following additional features:

6.14.2 BUSY OVERRIDE

The busy override feature is enabled at the system level by the system manager and is not a programmable radio feature. It allows a call to be placed even if not all sites you are calling have a free traffic channel. The only sites guaranteed to be included are the Critical Sites and the sites where a Critical User is located. This feature operates as follows:

1. Assume that you have attempted to place a call and the system was busy (“BUSY” displayed and busy tone sounded).
2. Release the PTT switch and then press it for 5 seconds or more. If a chirp tone sounds with the PTT switch pressed, busy override is occurring.

* Telephone calling is currently not available.

NOTE: Remember that not all members of the talk group are receiving your message. Missing members will start receiving your message as channels become available.

6.14.3 SITE TRUNKING

Site trunking occurs when a site can no longer participate in wide area trunking. When site trunking is occurring, the radio searches for other sites that may provide wide area coverage. Site trunking ends when a wide area coverage site is located, the current site is operating again as a wide area coverage site, an out-of-range condition occurs, or the failsoft mode is entered.

6.14.4 DETERMINING CURRENT SITE AND SEARCHING FOR NEW SITE

To display the RSSI level of the current site, press the Site Search option switch or select that menu parameter. The display then indicates the current site

number as “SITE xx” and the RSSI level as “RSSI xx”. This mode is then automatically exited.

To scroll through the other programmed sites, press and hold the Site Search option switch while “SITE xx” or “RSSI xx” is displayed. If site lock is on when site search is entered (see following), the radio will be locked on the new site when this function is exited.

6.14.5 LOCKING/UNLOCKING A SITE

It is sometimes desirable to stay on a site. To prevent the transceiver from searching for a new site, lock it on the current site by pressing the Site Lock option switch or selecting that menu parameter. The display then momentarily indicates the site alias to indicate that the current site is locked (“x” is the current site number). To unlock the site, press the Site Lock switch again or the F2 (Select) key and “UNLOCK” is momentarily displayed.

SECTION 7 MISCELLANEOUS

7.1 SUPERVISORY TONES

Single Beep (Alert Tone)

- Power was turned on and a successful power-up sequence occurred (Section 3.1).
- The time-out timer is about to expire or the penalty timer has expired (Section 4.3).
- The conversation timer is about to expire (Section 5.7).
- The system received your page but the paged mobile is not on the air (Section 6.7).
- Telephone interconnect is not operational (Section 6.6).

Continuous Tone (Invalid Condition)

- A transmission is being attempted on a conventional channel programmed as receive-only.
- The transmitter is disabled by the busy channel lockout feature (Section 5.4).

- The transmitter has been disabled by the time-out timer feature (Section 4.3).
- The transmitter has been disabled by the conversation timer (Section 5.7).
- An out-of-range condition exists (SMARTNET/SmartZone and P25 trunking only).
- A transmission is being attempted before the penalty timer has expired (Section 5.6).
- Dynamic regrouping has been exited but the dynamic regrouping channel is still selected (Section 6.13).

Single Short Medium-Pitch Tone

- A valid key has been pressed.

Single Short Low-Pitch Tone

- An invalid key has been pressed.

Medium Tone (No Acknowledge)

- The paged mobile did not acknowledge the page (Section 6.7).
- The message that was sent has not been acknowledged (Section 6.8).
- The status condition that was sent has not been acknowledged (Section 6.9).

Five Beeps (Recurring)

- The page was received (Section 6.7).

Two Short Tones

- A private call was received (Section 6.5).

Five Beeps

- The paged mobile received the page and acknowledged it (Section 6.7).
- The message that was sent has been received and acknowledged (Section 6.8).
- The status condition that was sent has been received and acknowledged (Section 6.9).

Four Beeps

- The emergency alarm condition was acknowledged (Section 6.10).
- Four low tone beeps indicate call back mode (the system is no longer busy)

Alternating Tone

- Dynamic regrouping has occurred (Section 6.13).
- Dynamic regrouping has occurred but the regrouping channel is not selected (Section 6.13).

Busy Signal

- The radio system is busy or a busy condition exists when making a telephone call.

Three Medium Pitch Tones

- A channel is available after a busy condition occurred (SMARTNET/SmartZone only).

7.2 SYSTEM OPERATOR PROGRAMMING

As noted several times in this manual, programming determines the availability and specific operation of many features. This usually refers to the programming performed by the PCConfigure programmer when the radio was set up, not to any programming a user can perform. If a feature is controlled by a front panel option switch and that switch is not available, it is probably not available.

If the Keypad Programming option switch is available, you can reprogram some conventional channel parameters. Refer to Section 5.17 for more information.

7.3 SPEAKING INTO MICROPHONE

For best results, hold the transceiver about 1-2 inches from your mouth and speak at a normal conversational level. Do not shout since it distorts your voice and does not increase range. Make sure that the PTT (push-to-talk) switch is pressed before you begin to speak and released as soon as the message is complete.

7.4 OPERATION AT EXTENDED RANGE

When approaching the limits of radio range, the other party may not be able to hear your transmissions and there may be an increase in background noise when messages are received. You may still be out of range even though you can hear a message. The reason for this is that the signal you are receiving is usually transmitted at a higher power level than the one transmitted by your transceiver. Communication may be improved by moving to higher ground or away from shielding objects such as tall buildings or hills.

7.5 LICENSING

A government license is usually required to operate this transceiver on the air.

7.6 TRANSCEIVER SERVICE

If the transceiver is not responding to any key presses, the keypad may be locked. Refer to Section 3.6 for more information.

If “PASSWORD” is briefly displayed when power is turned on and you are prompted to enter a password, the Power-Up Password feature is enabled. Refer to Section 3.2 for more information.

If “UNPROGRAMD” is displayed, the cause could be any of the following:

- An unprogrammed channel is selected. Select a programmed channel.
- The selected channel is programmed for an option that is not installed or an error in programming was detected. Reprogram the radio.

If no characters appear in the display, the battery may be discharged or defective. Try another battery. If some other problem is occurring, turn power off and then on again to reset the control logic. Also make sure that the controls are properly set. If it still does not operate correctly, return it for service.

NOTE: There are no user-serviceable components in the transceiver. Altering internal adjustments can cause illegal emissions, void the warranty, and result in improper operation that can seriously damage the transceiver.

