1323x Development Hardware

Reference Manual

Document Number: 1323xDHRM

Rev. 1.0

04/2011



How to Reach Us:

Home Page:

www.freescale.com

E-mail:

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

Europe, Middle East, and Africa: Freescale Halbleiter Deutschland GmbH Technical Information Center Schatzbogen 7 81829 Muenchen, Germany +44 1296 380 456 (English) +46 8 52200080 (English) +49 89 92103 559 (German) +33 1 69 35 48 48 (French) support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15F 1-8-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064, Japan 0120 191014 or +81 3 5437 9125 support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd. Technical Information Center 2 Dai King Street Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 2666 8080 support.asia@freescale.com

For Literature Requests Only: Freescale Semiconductor Literature Distribution Center P.O. Box 5405 Denver, Colorado 80217 1-800-521-6274 or 303-675-2140 Fax: 303-675-2150 LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 2007, 2008, 2009, 2010. All rights reserved.

Contents

Abou	ıt This Book
	Audience
Chap Safet	oter 1 by Information
1.1 1.1.1 1.1.2 1.1.3 1.1.4 1.2 1.2.1 1.3 1.4	FCC Guidelines1-1Labeling1-1Operating Conditions1-1Exposure Limits1-1Antenna Restrictions1-1Regulatory Approval For Canada (IC RSS 210)1-226 PART 5 – Appendix1-2Electrostatic Discharge Considerations1-2Disposal Instructions1-2
Chap MC13	oter 2 323x Development Platform Overview and Description
2.1 2.2 2.3 2.4	Introduction2-1Features2-2Driver Considerations2-5General System Specifications2-5
Chap 1323	oter 3 x-Modular Reference Board
3.1 3.1.1 3.1.2 3.1.3 3.2 3.2.1 3.2.2 3.3 3.3.1 3.3.2 3.3.3 3.4 3.4.1	1323x-MRB Overview 3-1 Features 3-1 Form Factor 3-2 Board Level Specifications 3-4 Functional Description 3-5 RF Performance and Considerations 3-6 Clocks 3-7 Reset and BDM Debug Port 3-8 Power Management 3-9 IO Connectors J2 and J3 3-11 1323x-MRB Onboard Peripheral Functions 3-13 Schematic, Board Layout, and Bill of Material 3-15 Bill of Materials 3-18

1323x Remote Control Motherboard

4.1	1323x-RCM Overview	4-1
4.1.1	Features	4-1
4.1.2	Form Factor	
4.1.3	Board Level Specifications	
4.2	Functional Description	4-4
4.2.1	Power Management	4-5
4.2.2	GPIO Connection to 1323x-MRB	4-7
4.2.3	1323x-RCM Onboard Peripheral Functions	
4.3	Schematic, Board Layout, and Bill of Material	4-14
4.3.1	1323x-RCM Bill of Materials	4-21
Chap	pter 5	
1323	x Remote Extender Motherboard	
5.1	1323x-REM Overview	
5.1.1	Features	
5.1.2	Form Factor.	
5.1.3	Board Level Specifications.	
5.2	Functional Description	
5.2.1	Power Management	
5.2.2	GPIO Connection to 1323x-MRB	
5.2.3	1323x-REM Onboard Peripheral Functions	
5.2.4	USB Interface	
5.2.5	IR Receiver	
5.2.6	Pushbutton 2x4 Switch Matrix	
5.2.7	Blue Indicator LEDs	
5.3 5.3.1	Schematic, Board Layout, and Bill of Material	
	pter 6	
PCB	Manufacturing Specifications	
6.1	Single PCB Construction	
6.2	Panelization	
6.3	Materials	
6.4	Solder Mask	
6.5	Silk Screen	
6.6	Electrical PCB Testing	
6.7	Packaging	
6.8	Hole Specification/Tool Table	
6.9	File Description.	6-4

ii Freescale Semiconductor

About This Book

This manual describes Freescale's MC1323x development platform hardware. The MC1323x development platform is an IEEE 802.15.4 compliant evaluation environment based on the Freescale MC1323x device. The heart of the MC1323x platform is Freescale's low cost System-on-Chip (SoC) for the IEEE® 802.15.4 Standard that incorporates a complete, low power, 2.4 GHz radio frequency transceiver with Tx/Rx switch, an 8-bit HCS08 CPU, and a functional set of MCU peripherals into a 48-pin LGA package. This family of products is targeted for wireless RF remote control and other cost-sensitive applications ranging from home TV and entertainment systems such as ZigBee BeeStack Consumer (RF4CE) to low cost, low power, IEEE 802.15.4 and ZigBee end nodes.

Audience

This manual is intended for system designers.

Organization

This document is organized into 6 chapters.

11112 010 011110111 12 01801	neva mo o vimpovio.
Chapter 1	Safety Information — Highlights some of the FCC requirements.
Chapter 2	HCS08 Development Platform Overview and Description — Provides an overview of the three boards that comprise the MC1323x development platform.
Chapter 3	Modular Reference Board — This chapter details the 1323x-MRB which is an IEEE, 802.15.4 compliant evaluation board based on the Freescale MC1323x device.
Chapter 4	1323x-Remote Control Module — This chapter details the 1323x-RCM motherboard that accepts the 1323x-Modular Reference Board (1323x-MRB) plug-in module (daughter card) and supplies a power supply and a rich set of interface peripherals.
Chapter 5	1323x-Remote Extender Board — This chapter details the 1323x REM motherboard that accepts the 1323x-Modular Reference Board (1323x-MRB) plug-in module (daughter card) and supplies a power supply and set of interface peripherals.
Chapter 6	PCB Manufacturing Specifications — This chapter provides the specifications used to manufacture the various MC1323x printed circuit boards (PCBs).

Revision History

The following table summarizes revisions to this document since the previous release (Rev 0.0).

Revision History

Location	Revision
Entire document	Edited Chapter 1, Table 3-1, Table 4-1, Table 5-1, Section 4.2.1 and Section 5.2.1.

Freescale Semiconductor iii

Definitions, Acronyms, and Abbreviations

The following list defines the acronyms and abbreviations used in this document.

ADC Analog to Digital Converter
AES Advanced Encryption Standard

ARM Advanced RISC Machine

CTS Clear to Send

DAC Digital to Analog Converter
DMA Direct Memory Access

I2C Inter-Integrated Circuit is a multi-master serial computer bus ISM Industrial Scientific Medical 2.4 GHz radio frequency band

JTAG Joint Test Action Group

LGA Land Grid Array

MAC Media Access Controller
MCU Microcontroller Unit

NEXUS An embedded processor development tool interface that helps design engineers

identify software and hardware-level issues.

PCB Printed circuit board
PiP Platform in Package
PWM Pulse-width modulation
RCM Remote Control Module
REM Remote Extender Board

RTS Request to Send

SMA Connector SubMiniature version "A" connector

SPI Serial Peripheral Interface SSI Synchronous Serial Interface

TACT Switch A switch that provides a slight "snap" or "click" to the user to indicate function.

TELCO Telephone Company
USB Universal Serial Bus
VCP Virtual Com Port

iv Freescale Semiconductor

Chapter 1 Safety Information

1.1 FCC Guidelines

This equipment is for use by developers for evaluation purposes only and must not be incorporated into any other device or system. This device may not be sold to the general public. Integrators will be responsible for reevaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

FCC approval of this device only covers the original configuration of this device as supplied. Any modifications to this product, including changes shown in this manual, may violate the rules of the Federal Communications Commission and Industry Canada and make operation of the product unlawful.

1.1.1 Labeling

FCC labels are physically located on the back of the board.

1.1.2 Operating Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

1.1.3 Exposure Limits

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least 8 inches (20cm) from all persons.

1.1.4 Antenna Restrictions

An intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device. The use of a permanently attached antenna or of an antenna that uses a unique coupling to the intentional radiator shall be considered sufficient to comply with the provisions of this Section. The manufacturer may design the unit so that a broken antenna can be replaced by the user, but the use of a standard antenna jack or electrical connector is prohibited. This requirement does not apply to carrier current devices or to devices operated under the provisions of Sections 15.211, 15.213, 15.217, 15.219, or 15.221. Further, this requirement does not apply to intentional

Freescale Semiconductor 1-1

Safety Information

radiators that must be professionally installed, such as perimeter protection systems and some field disturbance sensors, or to other intentional radiators which, in accordance with Section 15.31(d), must be measured at the installation site. However, the installer shall be responsible for ensuring that the proper antenna is employed so that the limits in this Part are not exceeded.

1.2 Regulatory Approval For Canada (IC RSS 210)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

1.2.1 26 PART 5 - Appendix

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. l'appareil ne doit pas produire de brouillage, et
- 2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1.3 Electrostatic Discharge Considerations

Although damage from electrostatic discharge (ESD) is much less common on these devices than on early CMOS circuits, normal handling precautions should be used to avoid exposure to static discharge. Qualification tests are performed to ensure that these devices can withstand exposure to reasonable levels of static without suffering any permanent damage.

All ESD testing is in conformity with the JESD22 Stress Test Qualification for Commercial Grade Integrated Circuits. During the device qualification ESD stresses were performed for the human body model (HBM), the machine model (MM) and the charge device model (CDM).

All latch-up test testing is in conformity with the JESD78 IC Latch-Up Test.

When operating or handling the development boards or components, Freescale strongly recommends using at least the grounding wrist straps plus any or all of the following ESD dissipation methods:

- Flexible fabric, solid fixed size, or disposable ESD wrist straps
- Static control workstations, static control monitors and table or floor static control systems
- Static control packaging and transportation materials and environmental systems

1.4 Disposal Instructions

This product may be subject to special disposal requirements. For product disposal instructions, refer to www.freescale.com/productdisposal.

1-2 Freescale Semiconductor

Chapter 2 MC1323x Development Platform Overview and Description

2.1 Introduction

The MC1323x development platform is an IEEE 802.15.4 compliant evaluation environment based on the Freescale MC1323x device. The heart of the MC1323x platform is Freescale's low cost System-on-Chip (SoC) for the IEEE® 802.15.4 Standard that incorporates a complete, low power, 2.4 GHz radio frequency transceiver with Tx/Rx switch, an 8-bit HCS08 CPU, and a functional set of MCU peripherals into a 48-pin LGA package. This family of products is targeted for wireless RF remote control and other cost-sensitive applications ranging from home TV and entertainment systems such as ZigBee BeeStack Consumer (RF4CE) to low cost, low power, IEEE 802.15.4 and ZigBee end nodes.

The MC1323x development platform is comprised of three boards:

- 1323x-Modular Reference Board (1323x-MRB) this board contains the MC1323x device with 32 MHz reference oscillator crystal, RF circuitry including antenna, and supporting circuitry. The board can be used as a simple standalone evaluation platform or as a daughter card to the other MC1323x development platform boards or to a custom, application specific motherboard. See Chapter 3, "1323x-Modular Reference Board" for detailed information.
 - Provides compact reference design for device footprint and RF layout
 - Provides pre-designed MC1323x hardware (device and function)
 - Provides access to the MC1323x full set of GPIO
 - Provides MCU BDM debug port
 - Provides optional local 2 Mbit serial FLASH, 32.768 kHz oscillator crystal, IR "blaster" LED and power management.
- 1323x-Remote Control Motherboard (1323x-RCM) this board accepts the 1323x-MRB as a
 plug-in module (daughter card) and supplies a variety of peripheral functions to the MC1323x
 through the IO connectors. The peripheral functions are targeted primarily to a consumer TV or
 entertainment remote control application. See Chapter 4, "1323x Remote Control Motherboard"
 for detailed information.
 - Provides 36-switch matrix for remote control pushbuttons
 - USB \Leftrightarrow serial interface for communication to a PC and provides board power
 - Touchpad for user interface
 - Onboard 128 x 32 pixel graphic LCD for menus and host feedback a unique feature to RF-based remote controls
 - Accelerometer for motion detection and game play
- 1323x-Remote Extender Motherboard (1323x-REM) this board also accepts the 1323x-MRB plug-in module (daughter card) and supplies a very simple set of peripheral functionality. See

Freescale Semiconductor 2-1

Chapter 5, "1323x Remote Extender Motherboard" for detailed information. A small 8-switch matrix, IR receiver, and USB interface provides means for communication to the MC1323x for:

- Simple keypad-only applications
- Connection to a PC
- Host connection such as for a remote control extender or remote control receiver

Whether the 1323x-MRB is used in a simple standalone application or in combination with another host card, Freescale provides a complete software development environment called the Freescale BeeKit Wireless Connectivity Toolkit (BeeKit). BeeKit is a comprehensive codebase of wireless networking libraries, application templates, and sample applications. The BeeKit Graphical User Interface (GUI) allows users to create, modify, and update various wireless networking implementations. A wide range of software functionality is available to complement the 1323x-MRB and these are provided as codebases within BeeKit.

2.2 **Features**

The MC1323x development platform is built around the concept of having a single daughter card (1323x-MRB) that contains the MC1323x IC and all necessary I/O connections for use as a self-contained module or for connection to an application motherboard. Figure 2-1 shows a simplified block diagram of the more powerful Freescale configuration of the 1323x-MRB combined with the 1323x-RCM.

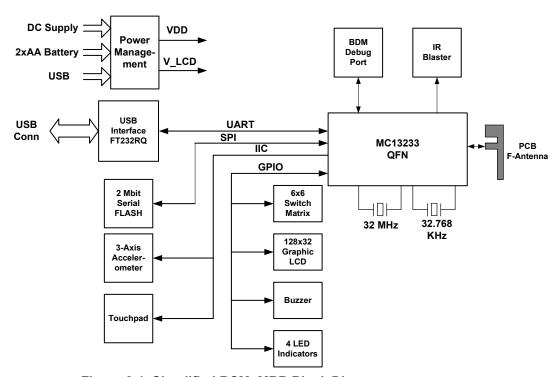


Figure 2-1. Simplified RCM+MRB Block Diagram

Figure 2-2 shows a photo of the combined boards with the 1323x-MRB mounted on the 1323x-RCM.

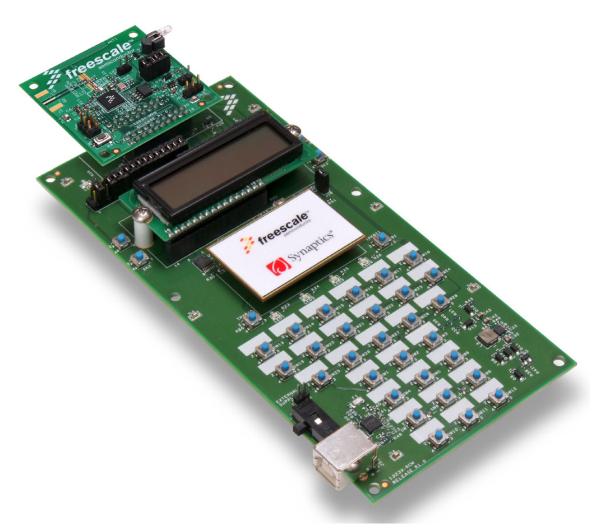


Figure 2-2. 1323x-MRB Mounted on the 1323x-RCM

Features of the MC1323x development platform include:

- Full IEEE 802.15.4 compliant wireless node; ZigBee capable with Freescale's BeeStack software stack
- Based on Freescale's low-cost MC1323x IEEE® 802.15.4 SoC platform which incorporates a complete, low power, 2.4 GHz radio frequency transceiver with Tx/Rx switch, an 8-bit HCS08 CPU, and a functional set of MCU peripherals into a 48-pin LGA package
- Reference design area with small footprint, low cost RF node
 - Integrated transmit/receive switch
 - Differential input/output port (typically used with a balun)
 - Low external component count
 - Programmable output power with 0 dBm nominal output power, programmable from -30 dBm to +3 dBm typical
 - Receive sensitivity of -93 dBm (typical) at 1% PER, 20-byte packet, much better than the IEEE 802.15.4 Standard of -85 dBm

1323x Development Hardware Reference Manual, Rev. 1.0

Freescale Semiconductor 2-3

MC1323x Development Platform Overview and Description

- Onboard printed metal F-Antenna
- 32 MHz reference oscillator
- BDM serial MCU debug port
- Optional secondary 32.768 kHz crystal oscillator for accurate low power timing
- IR blaster
- 2 Mbit serial FLASH (uses SPI interface)
- Master reset switch
- Full power regulation and management
- 1323x-MRB board provides
 - Required circuitry for MC13233 crystals and RF circuitry including F-Antenna and optional SMA connector
 - Local power supply regulation
 - Access to all GPIO
 - Standalone or daughter card use models
 - Serial FLASH, IR blaster, and BDM functions
- 1323x-RCM when used with 1323x-MRB provides
 - USB to UART serial interface that is USB bus-powered and full-speed compatible to the USB 2.0 and 1.1 specifications
 - Power supply source from two AA batteries, USB connector, or DC source
 - 128x32 pixel graphic LCD
 - 3-axis Accelerometer (uses IIC interface)
 - Touch pad interface with interrupt capability (uses IIC interface)
 - 6x6 Switch matrix
 - Single tone buzzer
 - 4 Blue LED indicators
- 1323x-REM when used with 1323x-MRB provides
 - USB to UART serial interface that is USB bus-powered and full-speed compatible to the USB 2.0 and 1.1 specifications
 - Power supply source from two AA batteries, USB connector, or DC source
 - IR receiver
 - 4x2 Switch matrix
 - 4 Blue LED indicators

2-4 Freescale Semiconductor

2.3 Driver Considerations

When users first connect a 1323x-RCM or 1323x-REM based platform to a PC, they may be prompted to install drivers. If BeeKit is installed and this occurs, do not allow Windows to automatically search for and install the drivers. Instead, select manual installation and steer Windows to the following directory:

C:\Program Files\Freescale\Drivers

If installing the BeeKit software package to another drive or directory, indicate the Drivers directory created by the installer in the custom location where BeeKit was installed.

Follow the instructions as they appear on the screen to complete driver installation.

If BeeKit is not installed, be aware of the following:

- The boards use the FTDI serial to USB converter, Virtual COM Port (VCP) driver for Windows, available at www.ftdichip.com/ftdrivers.htm.
 (Direct (D2XX) drivers are also available.)
- The FTDI web site offers drivers for other platforms including Windows® (98 through Vista x64 and CE), MAC OS (8 through X) and Linux.
- Download the appropriate driver and follow the instructions to complete driver installation.

2.4 General System Specifications

Table 2-1. MC1323x Platform Specifications

Parameter				Units	Notes/Conditions
	MIN	TYP	MAX		
Power					
Voltage supply (DC)	2.5	5	6	V	When using REM or RCM
Voltage supply (USB)	4.4	5	5.25	V	USB 2.0/1.1 standard specification
Voltage supply (Batteries)		2.8	3.2	V	
Temperature	.				
Operating temperature; non-battery operation (see note)	-20	+25	+70	°C	Operating temperature is limited to +70 °C due to switches. Basic circuit is good for a maximum temperature of +85 °C.
Operating temperature; battery operation (see note)	0	+25	+50	°C	Operating temperature is limited by battery temperature range
Storage temperature	-30	+25	+70	°C	
USB interface					USB 2.0 and 1.1 full-speed compatible
RF (1323x-MRB)				<u> </u>	
802.15.4 Frequency range	2405		2480	MHz	All 16 channels in the 2450 MHz band
Range (outdoor / line of sight)		300		Meter	<1% PER for 20-byte packets (point-to-point in communications with 1322X Sensor Reference Board)

1323x Development Hardware Reference Manual, Rev. 1.0

Freescale Semiconductor 2-5

MC1323x Development Platform Overview and Description

Table 2-1. MC1323x Platform Specifications

Parameter				Units	Notes/Conditions
RF Transmitter					1
802.15.4 Output power	-30	0	+3	dBm	Over range of Pout from IC control in 2 dB steps. Note: On channel 26, output power should not exceed -5 dBm (power setting 0x0E) to meet FCC Part 15 requirements.
Harmonics 2 nd harmonics 3 rd harmonics			-30? -30?	dBm dBm	Harmonics are compliant to ETSI and FCC regulatory approval standards
RF Receiver	,			l	
802.15.4 sensitivity		-93		dBm	<1% PER for 20-byte packets
Regulatory Approval	· ·			1	
FCC					Not yet certified.
CE (ETSI)					Product is approved accordingly to the EN 300 328 V1.7.1 (2006-10) standard
CE (EMC)					Product is approved accordingly to the EN 301 489-1 V1.6.1 (2005-09) and EN 301 489-17 V1.2.1 (2002-08) standards
Safety	· ·			1	
UL					Product is approved accordingly to the IEC 60950-1 and EN 60950-1, First Edition standards
Environment	•			•	
RoHS					Product complies with the EU Directive 2002/95/EC of 27 January 2003
WEEE					Product complies with the EU Directive 2002/95/EC of 27 January 2003

2-6 Freescale Semiconductor

Chapter 3 1323x-Modular Reference Board

3.1 1323x-MRB Overview

The 1323x-Modular Reference Board (1323x-MRB) is an IEEE 802.15.4 compliant evaluation board based on the Freescale MC1323x device. The 1323x-MRB provides a platform to evaluate the MC1323x device, develop software and applications, and demonstrate IEEE 802.15.4 based networking capabilities. The core device is accompanied by the 32 MHz reference oscillator crystal, RF circuitry including antenna, and supporting circuitry.

This basic board is intended as the core module for MC1323x evaluation and application development and can be used in the following modes:

- Simple standalone evaluation platform
- Daughtercard to the other MC1323x Development Platform boards (1323x-RCM or 1323x-REM)
- Daughtercard to an application specific motherboard.

3.1.1 Features

The 1323x-MRB provides the following features:

- Small form factor (2 x 2 inches)
- 4-Layer metal, 0.034 inch thick FR4 board
- MC1323x reference design area
 - LGA footprint and power supply bypass
 - 32 MHz reference oscillator crystal
 - RF components and layout
- Low cost RF node
 - Integrated transmit/receive switch
 - Differential input/output port (typically used with a balun)
 - Programmable output power with 0 dBm nominal output power, programmable from -30 dBm to +3 dBm typical
 - Receive sensitivity of -93 dBm (typical) at 1% PER, 20-byte packet
 - Printed metal F-Antenna
- 32.768 kHz crystal provided for optional timing oscillator
- Two connectors provided daughter card mounting
 - 20-Pin primary connector

Freescale Semiconductor 3-1

1323x-Modular Reference Board

- 18-Pin secondary connector
- Provide main supply voltage to board
- Provide access to all MC1323x GPIO
- Flexible board power supply
 - 3.3 V LDO series regulator supplied
 - Regulator bypass jumper option
 - Separate external voltage source option
 - Power-on green LED
 - Jumpers allow various block current measurements
- 6-Pin BDM serial MCU debug port
- MC1323x reset switch
- Onboard peripheral functions
 - IR blaster (The MC1323x CMT port is employed as a GPIO to drive large IR blasters. For IR blasters under 20ma, use the CMT port directly.)
 - 2 Mbit serial FLASH (uses SPI interface)

3.1.2 Form Factor

Figure 3-1 shows the 1323x-MRB connector and header locations.

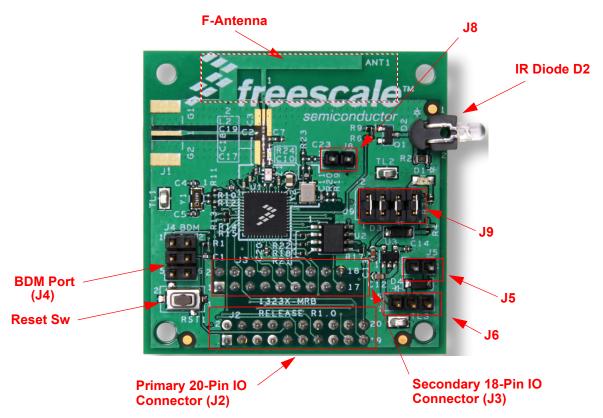


Figure 3-1. 1323x-Modular Reference Board (1323x-MRB)

1323x Development Hardware Reference Manual, Rev. 1.0

3-2 Freescale Semiconductor

Figure 3-2 shows a footprint of the 1323x-MRB with the location of the IO Headers J2 and J3. The user may desire to create a motherboard on which the 1323x-MRB would be mounted, and headers J2 and J3 are used for connection to the motherboard:

- Both headers have standard 0.10in / 2.54 mm pin spacing
- J2 is 20-pin and J3 is 18-pin
- Both are pin headers mounted on the bottom side of the 1323x-MRB and are intended to plug into matching receptacles on the motherboard.
- It is recommended that 1323x-MRB be located such that it extends beyond edge of the motherboard (see Figure 3-2) so that the entire F-Antenna is exposed with no motherboard ground or voltage plane beneath it. This is to allow best results transmitting and receiving with the radio.
- With the 1323x-MRB oriented as shown in Figure 3-2, the IR blaster transmits to the right.

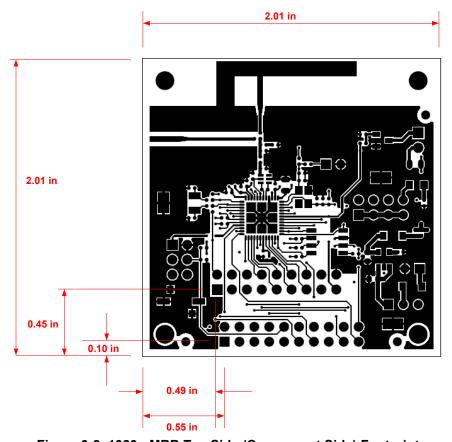


Figure 3-2. 1323x-MRB Top Side (Component Side) Footprint

1323x Development Hardware Reference Manual, Rev. 1.0

Freescale Semiconductor 3-3

3.1.3 Board Level Specifications

Table 3-1. 1323x-MRB Specifications

Parameter				Units	Notes/Conditions
	MIN	TYP	MAX		
General	I	I		1	
Size (PCB: X, Y)			51 x 51 2.01 x 2.01	mm inches	
Layer build (PCB)		0.8 0.034		mm inches	4-Layer
Dielectric material (PCB)					FR4
Power					
Voltage supply (DC)					
With 3.3 V regulator in use	3.50		16	V	Full module use
Not using regulator with serial FLASH and IR	2.7		3.6		Not regulated - using all features
Not using regulator with MC1323x only	1.8		3.6		Lower voltage usable only by MC1323x
Current consumption			TBD	mA	
Temperature	1			•	
Operating temperature (see note)	-20	+25	+70	°C	 Operating temperature is limited to +70 °C due to switches. Basic circuit is good for a maximum temperature of +85 °C. Operating temperature may also be further limited when used in conjunction with REM or RCM having a battery supplied voltage source. See Table 4-1 and Table 5-1.
Storage temperature	-30	+25	+70	°C	
IR Transmitter	·I				
Current		63		mA	
Range		10		m	
RF					
802.15.4 Frequency range	2405		2480	MHz	All 16 channels in the 2450 MHz band
Range (outdoor / line of sight)		300		Meter	<1% PER for 20-byte packets (point-to-point in communications with 1323x Sensor Reference Board)
RF Transmitter		•		•	
802.15.4 Output power	-30	0	+3	dBm	

1323x Development Hardware Reference Manual, Rev. 1.0

3-4 Freescale Semiconductor

Table 3-1. 1323x-MRB Specifications (continued)

Parameter			Units	Notes/Conditions
Harmonics 2 nd harmonics 3 rd harmonics		-38 -35	dBm dBm	Harmonics are compliant to ETSI and FCC regulatory approval standards
RF Receiver	-	•		
802.15.4 sensitivity	-93		dBm	<1% PER for 20-byte packets
Regulatory Approval	<u>.</u>		•	
FCC				Product is approved accordingly to the FCC part 15 standard
CE (ETSI)				Product is approved accordingly to the EN 300 328 V1.7.1 (2006-10) standard
CE (EMC)				Product is approved accordingly to the EN 301 489-1 V1.6.1 (2005-09) and EN 301 489-17 V1.2.1 (2002-08) standards
Safety			l .	
UL				Product is approved accordingly to the IEC 60950-1 and EN 60950-1, First Edition standards
Environment	<u>.</u>		•	
RoHS				Product complies with the EU Directive 2002/95/EC of 27 January 2003
WEEE				Product complies with the EU Directive 2002/95/EC of 27 January 2003

3.2 **Functional Description**

The 1323x-MRB is built around Freescale's MC1323x 48-pin LGA IEEE 802.15.4 platform. Figure 3-2 shows a simple block diagram. This board is intended as a simple evaluation platform and as a building block for application development. The 4-layer board provides the MC1323x with its required RF circuitry, 32 Mhz reference oscillator crystal, and power supply bypassing. The layout for this base level functionality can be used as a reference layout by the user target board.

In additional to the base MC1323x functionality, the 1323x-MRB provides features to assist in debug, an IR blaster, a 2 Mbit serial FLASH, reset button, simple power manager, and expansion connectors for the GPIO. In the following sections, refer to:

- Figure 3-1 for location of connectors and features
- Figure 3-3 for the functional blocks
- Figure 3-11 for the board schematic

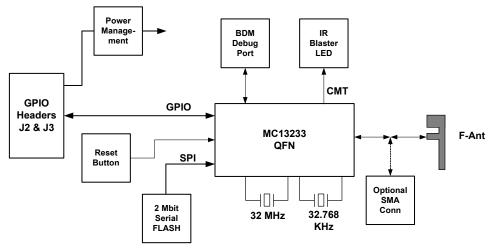


Figure 3-3. 1323x-MRB Block Diagram

3.2.1 RF Performance and Considerations

The MC1323x transceiver includes a low noise amplifier, 1mW nominal output power, PA with internal voltage controlled oscillator (VCO), integrated transmit/receive switch, on-board power supply regulation, and full spread-spectrum encoding and decoding.

- Nominal output power is 0 dBm, with +3 dBm max
- Typical sensitivity is -93 dBm
- Frequency range is 2405 to 2480 MHz
- Typical range (outdoors, line of sight) is 130 meters

The 1323x Modular Reference Board utilizes a minimum number of components while providing good RF performance:

- Uses a minimum number of RF matching components and external 50:100 balun
- "F" printed metal antenna for a small footprint, low cost design

An external 50 (unbal):100 (bal) balun connects a single-ended 50- Ω port to the differential RF port of the MC1323x radio. The layout has provision for out-of-band signal suppression (components L2 and C7) if required. Also note that control pin CT_Bias switches reference voltage to the balun as required for TX (CT_Bias = 1.5V) or RX (CT_Bias = ground).

The default RF mode is use of the "F" antenna coupled through 10 pF C3 to the single-end RF port. An alternative mode is to connect an SMA RF connector (not provided; must be mounted). This is useful for connected measurements to test radio performance.

NOTE

See the MC1323x Data Sheet and Reference Manual for more RF design information.

1323x Development Hardware Reference Manual, Rev. 1.0

3-6 Freescale Semiconductor

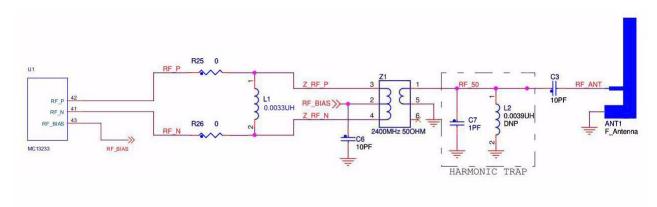


Figure 3-4. 1323x-MRB RF Circuitry

3.2.2 Clocks

The MC1323x provides for two clocks:

- 32 MHz Reference Oscillator Figure 3-5 shows the external 32 MHz external crystal Y2. This mounted crystal must meet the MC1323x specifications. The IEEE 802.15.4 Standard requires that the frequency be accurate to less that +/-40 ppm.
 - Capacitors C10 and C11 provide the bulk of the crystal load capacitance. Onboard trim capacitors can be programmed to center the frequency. At 25°C, it is desired to have the frequency accurate to +/-10 ppm or less to allow for temperature variation.
 - To measure the 32 MHz oscillator frequency, signal PTD7/XTAL_32MOUT can optionally be programmed to provide a buffered output clock signal
 - The 1323x-MRB has provision for injecting an external 32 MHz clock source as an alternative to use of the onboard crystal:
 - The crystal Y2 should be removed
 - Resistors R23, R24, R19, and R20 must be mounted
 - C23 must be mounted
 - The external 32 MHz source is connected to 2-pin header J8; the frequency accuracy of the external source must meet the +/-40 ppm of the IEEE 802.15.4
- Optional 32.768 kHz Crystal Oscillator Provision is also made for a secondary 32.768 kHz crystal X2 (see Figure 3-6). This oscillator can be used for a low power accurate time base.
 - The module comes provided with this Y1 crystal and its load capacitors C4 and C15.
 - Load capacitors C4 and C15 provide the entire crystal load capacitance; there is no onboard trim capacitance.
 - The 32 kHz oscillator components are supplied, but un-enabled. Zero-ohm resistors R11 and R13 enable use of IO signals PTA0 and PTA1 via the IO connector and are supplied as mounted. These must be unmounted and moved to resistor sites R10 and R12 to enable the 32.768 kHz crystal and disable PTAO and PTA1.

Freescale Semiconductor 3-7

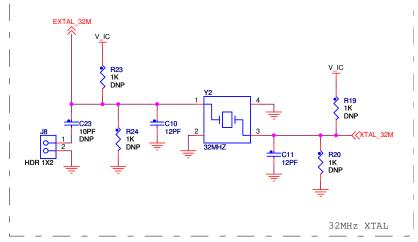


Figure 3-5. 1323x-MRB 32 MHz Reference Oscillator Circuit

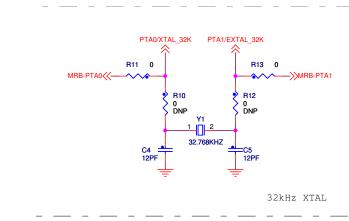


Figure 3-6. 1323x-MRB 32.768 kHz Optional Oscillator Circuit

3.3 Reset and BDM Debug Port

The reset circuit and BDM port connector are shown in Figure 3-7. See Figure 3-1 for switch and header locations.

- Reset switch RST2 is active low and provides a hardware reset to the MC1323x
- The 6-pin BDM 2x3 header J10 is provided to connect the MC1323x serial debug port to a standard HC9S08 debug module.

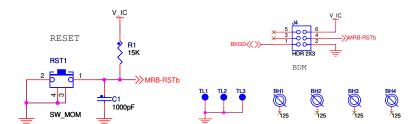


Figure 3-7. 1323x-MRB Reset Switch and BDM Port

1323x Development Hardware Reference Manual, Rev. 1.0

3-8 Freescale Semiconductor

3.3.1 Power Management

The 1323x-MRB power management circuit is shown in Figure 3-8.

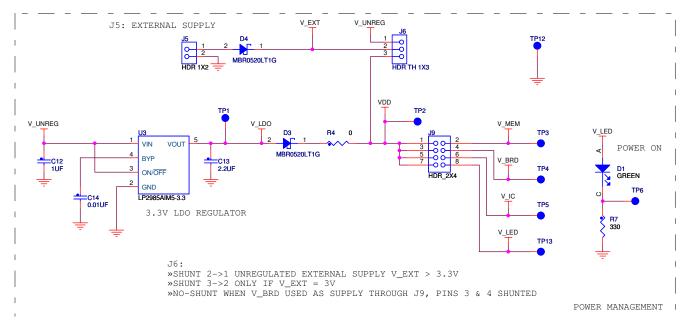


Figure 3-8. 1323x-MRB Power Management Circuit

Power to the 1323x-MRB can be configured in several ways and the circuit has the following features:

- Board can be supplied through the IO headers (V BRD)
- Board can be supplied from an external DC supply (J5)
 - The external supply can be unregulated (V_UNREG) and make use of the onboard 3.3 V LDO regulator
 - The external supply voltage can be used directly without use of the LDO
- 8-Pin 2x4 header J9 provides means to supply current to various board components and also measure current if desired
- Green LED D1 is available as a power indicator.

Table 3-2 shows the header configuration information for the various power supply modes.

NOTE

- The Freescale 1323x-RCM and 1323x-REM development boards generate the system power supply on the motherboard and supply the voltage to the 1323x-MRB through the V_BRD pin of Headers J2 and J3. In this mode, the current flows to the 1323x-MRB through the pins.
- If an external supply is used via 1323x-MRB header J5, current flows to the motherboard through the V_BRD pin of Headers J2 and J3. THE MOTHERBOARD SUPPLY SHOULD NOT BE USED.
- In all modes, the IO voltage supply of peripherals on a motherboard must be the same voltage as V_BRD, which is also the voltage applied to the IC MC1323x.

1323x Development Hardware Reference Manual, Rev. 1.0

Freescale Semiconductor 3-9

Table 3-2. 1323x-MRB Power Configurations

Mode	Voltage Range	External Source J5	Ext Mode Select J6	Current Enable J9	Description
Source V_BRD	2.7 - 3.6 V ¹	Not used	Not used - all pins open	Short Pins 3-4 - short other desired supplies	Normal Operation - The 1323x-MRB main supply is supplied by the motherboard through the J2 and J3 Headers
External Source - Using LDO	3.5 - 16 V	Connected - supplies DC Voltage	Short Pins 1-2	Short pins for all desired supplies	External voltage w/regulation - Input range is set by the LDO regulator. 3.3 V is supplied to 1323x-MRB; do not use motherboard supply J2 and J3 Headers supply voltage to V_BRD pins when J9, Pins 3-4 are shorted
External Source - Not Using LDO	2.7 - 3.6 V ¹	Connected - supplies DC Voltage	Short Pins 2-3	Short pins for all desired supplies	External voltage w/o regulation - Input range is set by the onboard circuitry 2.7 - 3.3 V is supplied to 1323x-MRB J2 and J3 Headers supply voltage to V_BRD pins

The MC1323x can run as low as 1.8 V, however, the serial FLASH and IR blaster require 2.7 V or greater

Header J9 provides means to disable different sub-circuits or measure current and connections are described in Table 3-3. Current measurements can be made by inserting a current meter in place of a designated jumper.

Table 3-3. Power Distribution Header J9

Supply Designation	Header Pins	Description
V_MEM	1 - 2	Supply voltage to serial FLASH memory - • Jumper pins to supply memory. • If memory is not powered, it can load MC1323x SPI port
V_BRD	3 - 4	Supply voltage connected to IO Connectors J2 and J3 - • This supplies J2 and J3 if an external MRB supply is used • This voltage supplies the MRB if the motherboard is the main power • This connection is normally always jumpered
V_IC	5 - 6	Supply voltage to MC1323x - Normally jumpered Supplies only the MC1323x IC Normally always same voltage as V_BRD
V_LED	7 - 8	Supply voltage to power indicator LED and IR blaster LED - • Jumper to use indicator or IR blaster • Leave open for lowest power

3-10 Freescale Semiconductor

3.3.2 IO Connectors J2 and J3

The two IO connectors J2 and J3 are standard 100 mil pin headers mounted on the back (non-component side) of the 1323x-MRB. The primary header J2 is 20-pin and the secondary header J3 is 18-pin, and they are mounted physically in such a manner as to prevent reverse insertion of the 1323x-MRB into a motherboard receptacle (see Figure 3-2). When the 1323x-RCM or 1323x-REM or custom motherboard is plugged into these connectors, they allow access to MC1323x MCU GPIO.

- V BRD is the connector supply voltage.
 - Depending on power supply configuration, this voltage may supply the 1323x-MRB from the motherboard or the 1323x-MRB may supply this voltage to the motherboard. See Section 3.3.1, "Power Management".
 - Peripherals IO to the MC1323x and the MC1323x supply should use this same voltage

NOTE

The 1323x-RCM and 1323x-REM and 1323x-MRB are supplied configured for the motherboard to supply main power.

- Some of the GPIO are shared with onboard devices. Check for the 1323x-MRB schematic and Table 3-4 and Table 3-5 for any conflict.
- BDM port signal PTA7/BKGD is NOT connected to the IO headers to prevent possible interference with the debug port.

Header Pin Number	MC1323x Pin Name	Description
1	V_BRD	VDD supply to module
2	PTC5/SS	SPI Bus Slave Select (SS) - shared with serial FLASH
3	GND	Module ground
4	PTC7/MOSI	SPI Bus MOSI signal - shared with serial FLASH
5	PTD5/RXD	UART RXD input to MCU
6	PTC6/MISO	SPI Bus MISO signal - shared with serial FLASH
7	PTD6/TXD	UART TXD Output from MCU
8	PTC4/SPICLK	SPI Clock (SPISCK) - shared with serial FLASH
9	PTD0/TPM0	GPIO / Timer IO
10	RESET	Reset
11	PTA5/SDA	I2C Bus data signal (SDA)
12	PTB7/KBI1P7	UART flow control RTS input into MCU (implemented in Freescale software)
13	PTA6/SCL	I2C Bus clock signal (SCL)
14	PTD2/TPM2	UART flow control CTS output from MCU (implemented in Freescale software)
15	GND	Module ground
16	PTD7/XTAL_32MOUT	Port D Bit 7

Table 3-4, 20 Pin Connector

1323x Development Hardware Reference Manual, Rev. 1.0

Freescale Semiconductor 3-11

1323x-Modular Reference Board

Table 3-4. 20 Pin Connector

Header Pin Number	MC1323x Pin Name	Description
17	PTB0/KBI1P0	Port B Bit 0 / KBI1 Input Bit 0
18	PTB1/KBI1P1	Port B Bit 1 / KBI1 Input Bit 1
19	PTB2/KBI1P2	Port B Bit 2 / KBI1 Input Bit 2
20	PTB3/KBI1P3	Port B Bit 3 / KBI1 Input Bit 3

Table 3-5. 18 Pin Connector

Header Pin Number	MC1323x Pin Name	Description	
1	V_BRD	VDD supply to module	
2	PTA1/EXTAL_32K	Port A Bit 1 - signal shared with 32.768 kHz oscillator	
3	PTA0/XTAL_32K	Port A Bit 0 - signal shared with 32.768 kHz oscillator	
4	GND	Module Ground	
5	PTA2	Port A Bit 2 - MC1323x test mode enable; SPECIAL SIGNAL REFER TO MC1323x Reference Manual	
6	PTA3/IRQ	Port A Bit 3 / IRQ (active low)	
7	PTA4/XTAL_32KOUT	Port A Bit 4 / optional buffered 32.768 kHz clock output	
8	PTB4/KBI1P4	Port B Bit 4 / KBI1 Input Bit 4	
9	PTB5/KBI1P5	Port B Bit 5 / KBI1 Input Bit 5	
10	PTB6/KBI1P6	Port B Bit 6 / KBI1 Input Bit 6	
11	PTC0/KBI2P0	Port C Bit 0 / KBI2 Input Bit 0	
12	PTC1/KBI2P1	Port C Bit 1 / KBI2 Input Bit 1	
13	PTC2/KBI2P2	Port C Bit 2 / KBI2 Input Bit 2	
14	PTC3/KBI2P3	Port C Bit 3 / KBI2 Input Bit 3	
15	PTD1/TPM1	Port D Bit 1/ TPM1	
16	PTD3/TPM3	Port D Bit 3/ TPM3	
17	PTD4/CMT	Port D Bit 4/ CMT output - signal shared with IR blaster	
18	GND	Module ground	

3-12 Freescale Semiconductor

3.3.3 1323x-MRB Onboard Peripheral Functions

The 1323x-MRB has two onboard peripheral functions to assist in implementing targeted applications.

NOTE

To use the peripherals, a minimum power supply voltage of 2.7 V must be maintained.

3.3.3.1 2 Mbit Serial FLASH (SPI Interface)

Component U2 is an Atmel AT45DB021D 2 Mbit (256 kbyte) serial FLASH memory with SPI interface. The memory is useful for over-the-air programming (OTAP) and for storage of non-volatile system data or parameters. Figure 3-9 shows the memory circuit.

- Memory power supply is V_MEM (Header J9, Pin 1-2)
- Disabling the memory supply V_MEM may load the MC1323x SPI port through the U2 ESD diodes
- Discrete pullup resistors for the SPI port are provided
- The SPI can be shared with another peripheral an additional IO signal would be required as a chip enable (CS or SS) for the peripheral. The normal SPI_SS and the second chip select should NOT be active at the same time.

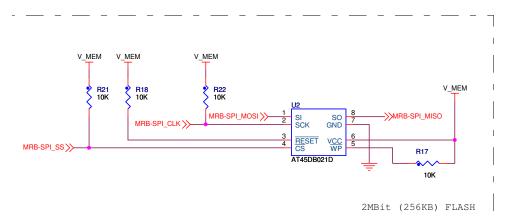


Figure 3-9. AT45DB021D 2 Mbit (256 kbyte) Serial FLASH memory

Freescale Semiconductor 3-13

3.3.3.2 IR Transmitter (Blaster)

An IR transmitter or blaster is provided to control IR legacy components (see Figure 3-10).

- The IR power supply is V LED (Header J9, Pin 7-8)
- The IR transmitter has approximately a 10 meter range.
- Current draw is approximately 80 mA when active.
- To reduce the peak current consumption, it is recommended that the IR transmitter only be active when the MC1323x RF transceiver is in-active.
- When using the blaster in an application, observe proper orientation (see Figure 3-2)

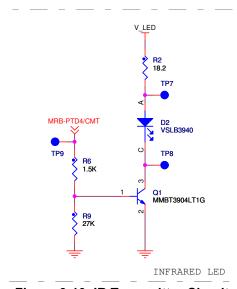


Figure 3-10. IR Transmitter Circuit

3-14 Freescale Semiconductor

1323x Development Hardware Reference Manual, Rev. 1.0

3.4 Schematic, Board Layout, and Bill of Material

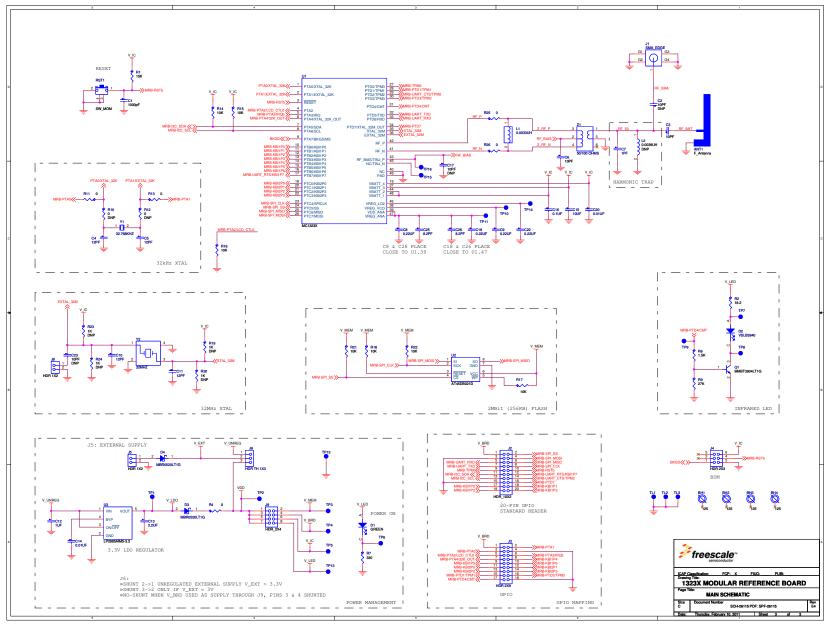


Figure 3-11. 1323x-MRB Schematic

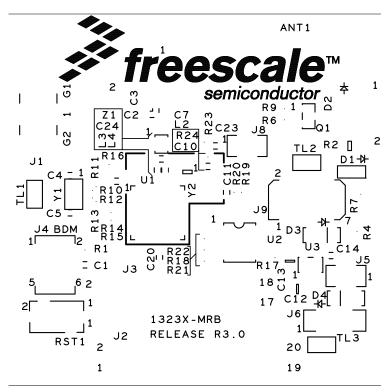


Figure 3-12. Modular Reference Board PCB Component Location (Top View)

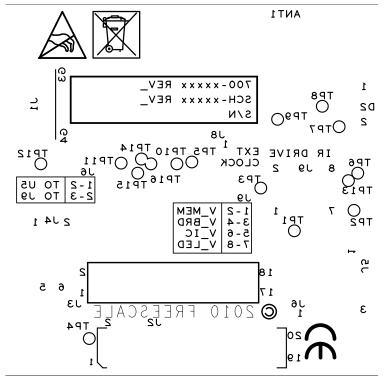


Figure 3-13. Modular Reference Board PCB Test Points

1323x Development Hardware Reference Manual, Rev. 1.0

3-16 Freescale Semiconductor

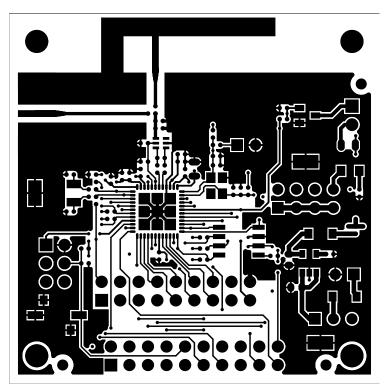


Figure 3-14. Modular Reference Board PCB Layout (Top View)

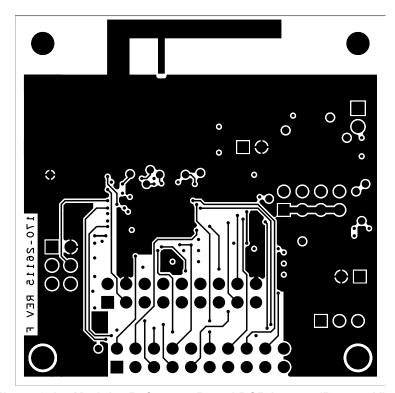


Figure 3-15. Modular Reference Board PCB Layout (Bottom View)

3.4.1 Bill of Materials

Table 3-6. Bill of Materials

Item	Qty	Reference	Value	Description	Mfg Name	Mfg Part Number	
1	1	ANT1	F_Antenna	PCB F ANTENNA, NO PART ORDER	Not A Part	NOT A PART	
2	4	BH1,BH2,BH3, BH4	125	NON-PLATED MOUNTING HOLE 125 DRILL / 160 KEEPOUT NO PART TO ORDER			
3	1	C1	1000pF	CAP CER 1000PF 50V 5% C0G 0402	Murata	GRM1555C1H102JA01 D	
4	3	C2,C17,C23 (No Not {Place)	10PF	CAP CER 10PF 50V 5% C0G 0402	Murata	GJM1555C1H100JB01	
5	2	C3,C6	10PF	CAP CER 10PF 50V 5% C0G 0402	Murata	GJM1555C1H100JB01	
6	4	C4,C5,C10,C1	12PF	CAP CER 12PF 50V 5% C0G 0402	Murata	GRM1555C1H120JZ01 D	
7	1	C7	1PF	CAP CER 1.0PF 50V +/-0.25PF C0G 0402	Murata	GJM1555C1H1R0CB01 D	
8	4	C8,C9,C18,C2 2	0.22UF	CAP CER 0.22UF 10V 10% X5R 0402	Murata	GRM155R61A224KE19 B	
9	1	C12	1UF	CAP CER 1.0UF 10V 10% X7R 0603	Murata	GRM188R71A105KA61 D	
10	1	C13	2.2UF	CAP CER 2.2UF 10V 10% X7R 0603	Murata	GRM188R71A225KE15 D	
11	2	C14,C20	0.01UF	CAP CER 0.01UF 50V 10% X7R 0402	Murata	GCM155R71H103KA55 D	
12	1	C15	10UF	CAP CER 10UF 10V 10% X5R 0805	Murata	GRM21BR61A106KE19	
13	1	C16	0.1UF	CAP CER 0.1UF 16V 10% X7R 0402	Tdk	C1005X7R1C104KT	
14	2	C25,C26	8.2PF	CAP CER 8.2PF 50V 0.25PF C0G 0402	Avx	04025A8R2CAT2A	
15	1	D1	GREEN	LED GRN SGL 30MA SMT 0805	Lite On	LTST-C171KGKT	
16	1	D2	VSLB3940	LED IR SGL 100MA RA TH	Vishay Intertechnology	VSLB3940	
17	2	D3,D4	MBR0520LT1G	DIODE SCH 0.5A 20V SOD-123	On Semiconductor	MBR0520LT1G	
18	1	J1	SMA_EDGE	CON 1 SKT SMA EDGE 34MIL BOARD SMT 50 OHM 171H AU 104L	Johnson Components Inc	142-0701-881	

3-18 Freescale Semiconductor

Table 3-6. Bill of Materials

19	1	J2	HDR_10X2	HDR 2X10 TH 100MIL CTR 330H AU 100L	Samtec	TSW-110-07-S-D
20	1	J3	HDR 2X9	HDR 2X9 TH 100MIL CTR 330H AU	Samtec	TSW-109-07-S-D
21	1	J4	HDR 2X3	HDR 2X3 TH 100MIL CTR 335H AU 95L	Samtec	TSW-103-07-S-D
22	2	J5,J8	HDR 1X2	HDR 1X2 TH 100MIL SP 330H SN 115L	Samtec	TSW-102-07-T-S
23	1	J6	HDR TH 1X3	HDR 1X3 TH 100MIL SP 339H AU 100L	Samtec	TSW-103-07-G-S
24	1	J9	HDR_2X4	HDR 2X4 TH 100MIL CTR 330H AU 100L	Samtec	TSW-104-07-S-D
25	1	L1	0.0033UH	IND 0.0027UH@100MHZ 300MA +/-0.3NH 0402	Murata	LQG15HS2N7S02D
26	1	L2 (No Not {Place)	0.0039UH	IND 0.0039UH@100MHZ 300MA +/-0.3NH 0402	Murata	LQG15HN3N9S02D
27	1	Q1	MMBT3904LT1G	TRAN NPN GEN 200MA 40V SOT-23	On Semiconductor	MMBT3904LT1G
28	1	RST1	SW_MOM	SW SPST MOM PB 50MA 12V SMT	Alps Electric (Usa) Inc.	SKQYPDE010
29	1	R1	15K	RES MF 15K 1/16W 5% 0402	Vishay Intertechnology	CRCW040215K0JNED
30	1	R2	18.2	RES MF 18.2 OHM 1/4W 1% 0805	Rohm	ESR10EZPF18R2
31	5	R4,R11,R13,R 25,R26	0	RES MF ZERO OHM 1/16W 5% 0402	Rohm	MCR01MZPJ000
32	1	R6	1.5K	RES MF 1.5K 1/16W 5% 0402	Vishay Intertechnology	CRCW04021K50JNED
33	1	R7	330	RES MF 330 OHM 1/16W 5% 0402	Vishay Intertechnology	CRCW0402330RJNED
34	1	R9	27K	RES MF 27K 1/16W 5% 0402	Vishay Intertechnology	CRCW040227K0JNED
35	2	R10,R12 (No Not {Place)	0	RES MF ZERO OHM 1/16W 5% 0402	Rohm	MCR01MZPJ000
36	7	R14,R15,R16, R17,R18,R21, R22	10K	RES MF 10K 1/16W 5% 0402	Vishay Intertechnology	CRCW040210K0JNED
37	4	R19,R20,R23, R24 (No Not {Place)	1K	RES MF 1.0K 1/16W 5% 0402	Vishay Intertechnology	CRCW04021K00JNED
38	3	TL1,TL2,TL3	TESTLOOP	TEST POINT PAD SIZE 3.4MM X 1.8MM SMT	Keystone Electronics	5015

Freescale Semiconductor 3-19

1323x-Modular Reference Board

Table 3-6. Bill of Materials

39	16	TP1,TP2,TP3,T P4,TP5,TP6,T P7,TP8,TP9,T P10,TP11,TP1 2,TP13,TP14,T P15,TP16	TPAD_040	TEST POINT PAD 40MIL DIA SMT, NO PART TO ORDER	Notacomponent	NOTACOMPONENT
40	1	U1	MC1323X	IC MCU+XCVR 8BITS 2.4GHZ 1.8-3.6V LGA48	Freescale Semiconductor	PC13233C
41	1	U2	AT45DB021D	IC MEM FLASH 256KX8 66MHz 2.7-3.6V 8S1	Atmel	AT45DB021D-SSH-T
42	1	U3	LP2985AIM5-3.3	IC VREG LDO 3.3V 150MA 3.8-16V SOT-23-5	National Semiconductor	LP2985AIM5-3.3/NOPB
43	1	Y1	32.768KHZ	XTAL 32.768KHZ SMT ROHS COMPLIANT	Epson Electronics	FC-135 32.7680KA-A3
44	1	Y2	32MHZ	XTAL 32MHZ 9PF SMT 3.2X2.5MM	Ndk	EXS00A-CS02368
45	1	Z1	50/100 OHMS	XFMR BALUN 2.45GHZ +/-50MHZ 50/100OHM 3W SMT	Johanson Technology	2450BL15B100_

3-20 Freescale Semiconductor

Chapter 4 1323x Remote Control Motherboard

4.1 1323x-RCM Overview

The Remote Control Motherboard (1323x-RCM) is a motherboard that accepts the 1323x-Modular Reference Board (1323x-MRB) plug-in module (daughter card) and supplies a power supply and a rich set of interface peripherals. The two boards in combination provide a complete platform to evaluate the MC1323x, write software, and develop a full featured IEEE 802.15.4 based wireless remote control.

4.1.1 Features

The 1323x-RCM provides the following features:

- 4-Layer metal, 0.034 inch thick FR4 board
- Two connectors provide daughter card mounting
 - 20-Pin primary connector
 - 18-Pin secondary connector
 - Provide main supply voltage to board
 - Provide access to all MC13233 GPIO
- Handheld battery operation
- Flexible power supply
 - Sources include USB port, two AA batteries, or DC source
 - Power-On green LED
 - On-Off switch
- Used in conjunction with 1323x-MRB where MRB provides -
 - 2.4 GHz IEEE 802.15.4 wireless node
 - 2 Mbit serial FLASH for over-the-air programming (OTAP)
 - IR blaster
- USB interface is bus-powered and full-speed compatible to the USB 2.0 and 1.1 specifications
- 36 Pushbutton 6x6 switch matrix
- 128x32 pixel monochrome graphic/alphanumeric LCD uses SPI serial interface
- Synaptics[®] Touchpad[™] capacitive touch sensor
- 3-Axis accelerometer with IIC serial interface
- Four application-controlled blue indicator LEDs
- Single tone buzzer

Freescale Semiconductor 4-1

4.1.2 Form Factor

Figure 4-1 shows a photo of the 1323x-RCM with the location of connectors and headers designated.

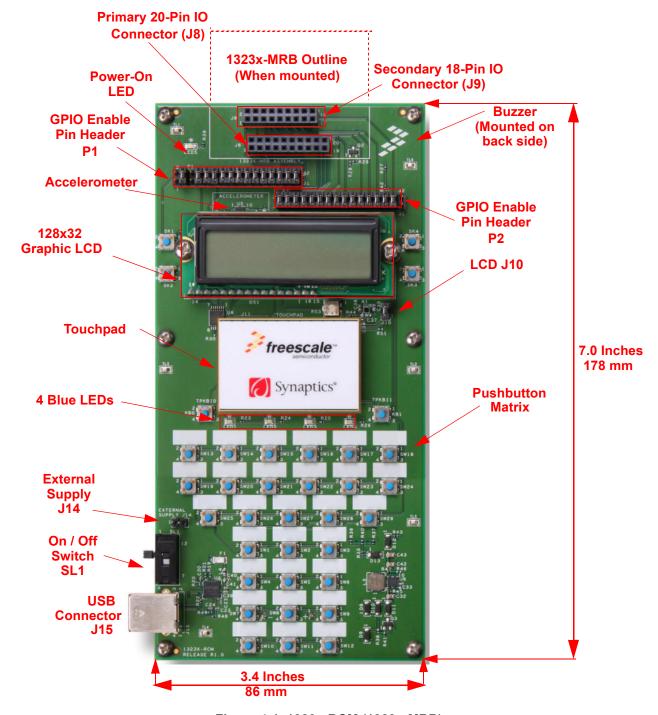


Figure 4-1. 1323x-RCM (1323x-MRB)

The 1323x-Modular Reference Board (1323x-MRB) mounts on the 1323x-RCM via receptacles J8 and J9. Figure 4-1 shows an outline of the 1323x-MRB placement when mounted.

4-2 Freescale Semiconductor

4.1.3 Board Level Specifications

NOTE

Temperature range specifications apply to RCM used in combination with MRB.

Table 4-1. 1323x-RCM Specifications

Parameter				Units	Notes/Conditions
	MIN	TYP	MAX		
General				1	
Size (PCB: X, Y)			86 x 178 3.40 x 7.00	mm inches	
Layer build (PCB)		0.8 0.034		mm inches	4-Layer
Dielectric material (PCB)					FR4
Power	•	•			
Voltage supply (DC)	2.3	5	6	V	
Voltage supply (USB)	4.4	5	5.25	V	USB 2.0/1.1 standard specification
Voltage supply (Batteries)		2.8	3.2	V	
Current consumption			100	mA	
Temperature					
Operating temperature; non-battery operation (see note)	-20	+25	+70	°C	Operating temperature is limited to +70 °C due to switches. Basic circuit is good for a maximum temperature of +85 °C.
Operating temperature; battery operation (see note)	0	+25	+50	°C	Operating temperature is limited by battery temperature range
Storage temperature	-30	+25	+70	°C	
USB interface					USB 2.0 and 1.1 full-speed compatible
Buzzer		ı			
CUI #CMI-1240					See data sheet
Touchpad	•	•			
Synaptics					Semi-custom
Tri-axis Low-g Accelerometer		1		1	
MMA7660FC (Freescale Semi)					See data sheet
LCD	U	1			
CRYSTALFONZ #CFAG12832A-YGH-N					See data sheet
Regulatory Approval					

Freescale Semiconductor 4-3

Table 4-1. 1323x-RCM Specifications (continued)

Parameter	Units	Notes/Conditions
CE (ETSI)		Product is approved accordingly to the EN 300 328 V1.7.1 (2006-10) standard
CE (EMC)		Product is approved accordingly to the EN 301 489-1 V1.6.1 (2005-09) and EN 301 489-17 V1.2.1 (2002-08) standards
Safety		
UL		Product is approved accordingly to the IEC 60950-1 and EN 60950-1, First Edition standards
Environment		
RoHS		Product complies with the EU Directive 2002/95/EC of 27 January 2003
WEEE		Product complies with the EU Directive 2002/95/EC of 27 January 2003

4.2 Functional Description

The 1323x-RCM is a host motherboard for the 1323x-MRB. The two-board combination provides a powerful evaluation and development platform for the MC13233. Figure 4-2 shows a simple block diagram. The 4-layer board provides a flexible power supply, 36 pushbutton matrix, 128x32 LCD, Touchpad sensor, 3-axis accelerometer, four indicator LEDs, buzzer, and a USB \Leftrightarrow UART serial port.

As the board name implies this platform is useful to develop an RF remote control application for a DTV, entertainment console, or similar function. The 1323x-MRB provides the RF node and an IR transmitter is available to support legacy IR protocol remote controls. The rich set of peripherals of the 1323x-RCM allows a user to develop a remote control ranging from a simple input device to a higher end unit with display.

In the following sections, refer to:

- Figure 4-1 for location of connectors and features
- Figure 4-2 for the functional blocks
- Figure 4-10 for the board schematic

4-4 Freescale Semiconductor

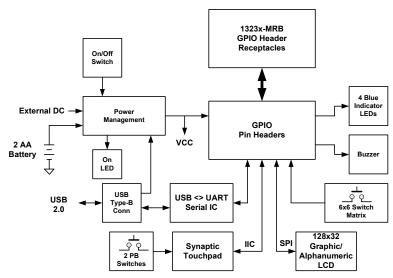


Figure 4-2. 1323x-RCM Block Diagram

4.2.1 Power Management

The 1323x-RCM can be powered from two AA batteries, the USB connector 5 V supply, or an external DC supply and is also intended to power the 1323x-MRB. Figure 4-3 shows the power management circuit.

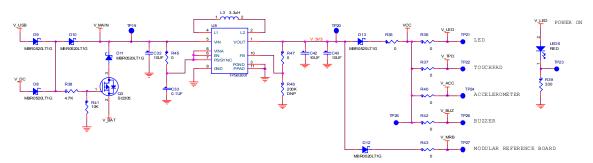


Figure 4-3. 1323x-RCM Power Management Circuit

A boost-buck voltage regulator U8 is used in this design to allow operation over a relatively wide, low voltage input range, i.e., the TPS63001 regulator has an input voltage range from 1.8 V to 5.5V. This allows a broad range of power supply sources. The regulated output voltage of the TPS63001 is 3.3 V which delivers about 3.05 V to the board due to the drop across the isolation Schottky diodes.

Attributes of the power management circuit include:

- Switch SL1 provides an ON/OFF function for all input voltage sources
- Red LED5 provides a POWER-ON indicator for all sources
- The 1323x-RCM can derive power from three different sources -
 - 1. USB port Type-B connector J15 power can be supplied from an actual USB port connection or from an AC to DC converter that uses the USB connector to supply power.

Freescale Semiconductor 4-5

1323x Remote Control Motherboard

- 2. External DC source via header J14 a standard 0.1 in. spacing 1x2 pin header allows for connection of an external DC supply.
- 3. Battery Operation a battery holder that accommodates two AA batteries is mounted on the non-component (back) side of the board and provides for battery operation.
 - If either the USB or external DC source is present, the battery source is disabled by MOSFET transistor Q3
 - The sources are all isolated and protected by Schottky diodes
 - The minimum effective battery operating voltage is controlled by the use the FTDI FT232RQ USB <> UART device leakage current back through the FT232RQ UART connections to the MC13233 on the MRB can cause the Q3 MOSFET to partially turnoff at battery voltage below approximately 2.7-2.8 Vdc.

NOTE

To avoid current leakage through the USB device and to have lowest minimum battery operating voltage for battery-only operation, remove the following jumpers:

- P1, Pins 7-8
- P1, Pins 11-12
- P1, Pins 17-18
- P1, Pins 21-22

NOTE

When battery operation is used, the temperature range of the two board system should be limited to within the specified temperature range of the battery technology. Table 4-1 limits temperature range from $0 \, ^{\circ}\text{C}$ to $+50 \, ^{\circ}\text{C}$ when battery operation is applied.

Table 4-2 lists the voltage source attributes.

Table 4-2. 1323x-RCM Voltage Sources

Source	Connector	Input Voltage Range	Description
USB Port	USB Type-B J15	4.4 V - 5.25 V	The input voltage range is set the USB Spec The voltage can be supplied by either a standard USB cable connection or an AC to DC power adaptor that uses the USB connector J15 If a power adaptor is in use, the USB serial port cannot be used

4-6 Freescale Semiconductor