

Getac

MH132

USER MANUAL

Rugged Mobile Computing Solutions

Dec. 2010

Trademarks

Microsoft, Windows, the Windows logo, Windows Media, Outlook and ActiveSync are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Disclaimer

Specifications and manuals are subject to change without notice. Getac assumes no liability for damage incurred directly or indirectly from errors, omissions, or discrepancies between the device and the manuals.

Notes

Depending upon the specific model purchased, the color and look of your device and accessories may not exactly match the graphics shown in this document.

The screenshots and other presentations shown in this document are for reference

only. They may differ from the actual screens and presentations generated by the actual product.



ENERGY STAR[®] is a government program that offers businesses and consumers energy-efficient solutions, making it easy to save money while protecting the environment for future generations.

Please reference ENERGY STAR[®] related information from www.energystar.gov.

As an ENERGY STAR[®] Partner, Getac Technology Corporation has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

An ENERGY STAR[®] qualified computer uses 70 % less electricity than computers without enabled power management features.

Earning the ENERGY STAR[®]

- When every home office is powered by equipment that has earned the ENERGY STAR[®], the change will keep over 289 billion pounds of greenhouse gases out of the air.
- If left inactive, ENERGY STAR[®] qualified computers enter a low-power mode and may use 15 watts or less. New chip technologies make power management features more reliable, dependable, and user-friendly than even just a few years ago.
- Spending a large portion of time in low-power mode not only saves energy, but helps equipment run cooler and last longer.
- Businesses that use ENERGY STAR[®] enabled office equipment may realize additional savings on air conditioning and maintenance.

- Over its lifetime, ENERGY STAR® qualified equipment in a single home office (e.g., computer, monitor, printer, and fax) can save enough electricity to light an entire home for more than 4 years.
- Power management (“sleep settings”) on computers and monitors can result in much savings annually.

Remember, saving energy prevents pollution

Because most computer equipment is left on 24 hours a day, power management features are important for saving energy and are an easy way to reduce air pollution. By using less energy, these products help lower consumers’ utility bills, and prevent greenhouse gas emissions.



LEARN MORE AT
energystar.gov

Table of Contents

Table of Contents	i
Getting Started	1-1
Identifying Hardware Components	1-1
Getting Your Device Ready for Use	1-4
Installing the SIM Card and Battery	1-4
Connecting to AC Power and Charging the Battery.....	1-6
Performing the Initial Startup.....	1-8
Quick Help.....	1-8
Power Saving and Shutting Down	1-9
Backlight Off.....	1-9
Sleeping.....	1-9
Shutting Down.....	1-9
Synchronizing with Your Computer	1-9
Installing ActiveSync or WMDC.....	1-10
Connecting the USB Cable.....	1-10
Using Options.....	1-11
Using a MicroSD Card	1-11
Using the Headset.....	1-12
Basic Skills 2-1	
Using the Touchscreen.....	2-1
Home Screen	2-2
Navigation Bar and Toolbar.....	2-3

Running Programs	2-4
Shortcut Menus	2-4
Notifications	2-5
Entering Information	2-5
Entering Text Using the Input Panel	2-5
Writing or Drawing on the Screen	2-7
Recording a Message	2-8
Securing Your Device	2-9
Locking the Screen	2-9
Locking Your SIM Card	2-10

Phone Operations..... 3-1

About Phone	3-1
Switching On or Off the Phone Function	3-1
Starting the Phone Program.....	3-2
Phone Status Icons.....	3-2
Changing the Phone Profile.....	3-3
Adjusting the Phone Volume during a Call.....	3-3
Making a Call	3-4
Dialing a Call.....	3-4
Making a Call from the Onscreen List	3-5
Making a Call from Contacts	3-5
Making a Call from the Call History List	3-7
Making a Call from Speed Dial	3-8
Responding to a Call	3-9
Answering a Call.....	3-9
Rejecting a Call.....	3-9
Ending a Call.....	3-9
Operations during a Call	3-10
Using the Mute Function.....	3-10

Using the Speakerphone	3-10
Managing More Than One Call	3-11
Taking a Note during a Call	3-12
Using Call History	3-13
Viewing Call History	3-13
Adding an Entry to Contacts Using Call History	3-13
Using Speed Dial.....	3-14
Creating a Speed Dial Entry	3-14
Editing or Deleting a Speed Dial Entry	3-15
Additional Phone Operations	3-15
Using Text Messages	3-15
Setting up an Internet Connection	3-16
Checking Your Voice Mail	3-16
Making an Emergency Call.....	3-16
Dialing an International Call.....	3-16
Customizing Your Phone.....	3-17
Changing Sounds Settings	3-17
Changing Security Settings	3-18
Changing Services Settings.....	3-18
Changing Network Settings	3-19
Changing Band Settings	3-19
Changing Others Settings	3-20

Managing Your Device 4-1

Managing Power	4-1
Customizing Your Device	4-2
Working with Programs and Folders	4-6
Adding and Removing Programs	4-6
Searching and Organizing Information	4-6

Microsoft Pocket Outlook..... 5-1

- Calendar: Scheduling Appointments and Meetings 5-1
 - Creating an Appointment 5-2
 - Viewing Appointments 5-3
- Contacts: Tracking Friends and Colleagues 5-4
 - Creating a Contact..... 5-4
 - Assigning a Ringtone and Picture 5-5
- Tasks: Keeping a To Do List 5-6
 - Creating a Task 5-6
- Notes: Capturing Thoughts and Ideas..... 5-7
 - Creating a Note 5-7
- E-mail and Text Messaging: Sending and Receiving Messages 5-8
 - About Accounts 5-8
 - Reading and Sending E-mails 5-9
 - Reading and Sending Text Messages 5-10

More Programs 6-1

- Getac Camera 6-1
 - Taking Pictures 6-1
 - Status Bar and GPS Information..... 6-3
 - Control Buttons..... 6-4
- Pictures & Videos 6-6
 - Viewing Pictures and Videos..... 6-7
- Windows Media..... 6-7
- Internet Explorer..... 6-8
- Internet Sharing 6-9
- ActiveSync 6-10
 - Synchronizing Data..... 6-11
 - Synchronizing Directly with Exchange Server 6-12

Getting Connected	7-1
Types of Connections.....	7-1
Using Cellular Connection	7-2
Setting up a Cellular (GPRS) Connection.....	7-2
Setting up a Dial-up Connection.....	7-3
Using WiFi	7-4
Switching On or Off the Wi-Fi Radio	7-4
Connecting to a Wireless Network	7-5
Using the Bluetooth Function.....	7-6
Switching On or Off the Bluetooth Radio	7-6
Using Bluetooth Manager.....	7-7
Creating a Bluetooth Partnership.....	7-9
Sending Files via the Bluetooth Function.....	7-10
Troubleshooting and Maintenance	8-1
Resetting Your Device.....	8-1
Restoring Factory Default State	8-2
Troubleshooting	8-3
Caring for Your Device	8-4
Regulatory Information	9-1
Regulations Statements	9-1
European Notice	9-1
FCC Regulations.....	9-2
Safety Precautions	9-3
About Charging	9-3
About the Charger	9-3
About the Battery	9-4
About the Radio Frequency Exposure	9-4

Chapter 1

Getting Started





This chapter introduces you to the external components of your device and guides you through the process of setting up your device for use.

Identifying Hardware Components



CAUTION: You need to open the protective covers to access the connectors. When not using a connector, make sure to close the cover completely for water- and dust-proof integrity.

Ref	Component	Description
①	Power Button	Starts up or shuts down the device when pressed and held.
		Puts the device into sleep mode or wakes up the device when pressed briefly.
②	Hand Strap Holder	The hand strap attaches here.
③	Headphone Connector	Connects to a pair of stereo headphones.
④	Earpiece	Serves as the phone earpiece during a call.
⑤	Touch Screen	Displays the output of your device and responds to your tapping.
⑥	Charge Indicator	Glows in red to indicate that battery charging is in progress.
		Glows in green to indicate that the battery is fully charged.
		Blinks once every 8 seconds in red to indicate that the battery power is critically low (10%).
		Blinks twice quickly every 2 seconds in red to indicate that the battery is in an abnormal state.
⑦	Notification Indicator	Glows in white for 10 seconds to indicate that the device is responding to a hardware button press.
		Flashes once every 10 seconds in white to inform you of a missed call, voice mail, or text message. The flashing stops after you dismiss the notification or after one hour.

Ref	Component	Description
8	Hardware Buttons	
	 Send	<p>Dials or answers a call.</p> <p>Opens the Phone screen from another application.</p>
	 Home	Returns to the Home screen.
	 Start	Opens the Start menu.
	 End	<p>Ends or rejects a call.</p> <p>Returns to the previous screen.</p>
9	Microphone	Serves as the mouthpiece during a call.
		Records voices.
10	Micro-USB Connector	Connects to the USB cable.
11	Volume Control	<p>During a phone call:</p> <p>Pressing the up or down button increases or decreases the earpiece volume.</p>
		<p>Not during a phone call:</p> <p>Pressing the up or down button opens the volume control window.</p>
12	Camera Key	Starts the Camera program.
		Serves as the shutter release button if the Camera program is currently in use.
13	Camera Lens	Takes still pictures.
14	Speaker	Plays audio from your device; suitable for handsfree use.
15	Battery Cover	Inside are the battery, SIM card slot, and microSD card slot.

Getting Your Device Ready for Use

Installing the SIM Card and Battery

1. Use the special screw driver (supplied with your device) to loosen the two screws on the back of the device and then lift off the battery cover.




CAUTION: Never use the screw driver as a stylus to tap the touch screen. Tapping the screen with a metallic object can damage the screen.

2. With the SIM card's chip side facing down and the beveled corner pointing to the slot, insert the card all the way into the slot.

Connecting to AC Power and Charging the Battery

Be sure to fully charge the battery before using your device for the first time.

1. Assemble the power plug (❶). The type of plug varies according to the region of purchase. (The figure shows one of the types.)
2. Connect the USB end of the USB cable to the power plug (❷) and the micro-USB end to the bottom of your device (❸).
3. Plug into an electrical outlet (❹).

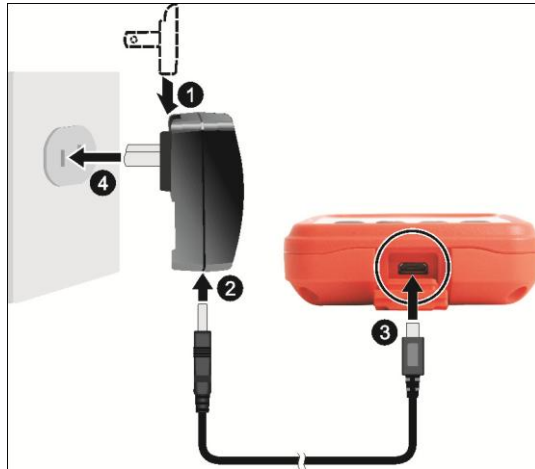

4. The charge indicator glows in red when charging is in progress. When the battery is fully charged, the red indicator turns into green.

NOTE: Your device can also be charged when it is connected to a desktop computer via the USB cable.

CAUTION: For optimal performance of the lithium battery, take note of the following:

- Use the included AC adapter only.
- There is no need to fully discharge the battery before charging. You can charge the battery before it is discharged.
- Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- Charge the battery in the recommended temperature range, i.e. 0 °C ~ 40 °C (32 °F ~ 104 °F).
- If you will not use the product for a long period of time, be sure to fully charge the battery at least once every two weeks. Over discharge of the battery can affect the charging performance.

Performing the Initial Startup

When turning on your device for the very first time, you will be guided through a setup process.

1. Make sure that your device is either connected to AC power or the battery has sufficient power.
2. Press and hold the power button until the device vibrates.
3. The device powers up and you will see the message “Tap the screen to set up your Windows® Phone.”
4. Follow the on-screen instructions to complete the setup wizard.
5. After the setup is completed, the Home screen appears. You can now use your device.



Quick Help

The Home screen provides a **getting started** item. You can quickly access most-needed settings from here.

Tap **getting started** on the Home screen. Brush left or right to see available items such as ringtone, e-mail, Bluetooth headset, and others. Tap the item you want to set up. To obtain information on using the device, tap **View All** in the toolbar and **Online help & how-to**. (Internet connection is required.)

Power Saving and Shutting Down

Backlight Off

The backlight of the screen dims out after a period of inactivity (default 30 seconds on battery power).

To restore the backlight, tap the screen or press a button. Note that where you tap or what you press also causes the related task to be performed.

Sleeping

Your device automatically sleeps after a period of inactivity (default 1 minute on battery power). To manually put the device into sleep mode, briefly press the power button.

To resume operation, press the power button. You will be back to where you left off.

Shutting Down

To shut down the device, press and hold the power button for at least 3 seconds until the device plays a notification sound and a message appears requesting for confirmation. Tap **Yes** for the device to shut down.

To start up the device, press and hold the power button.

Synchronizing with Your Computer

ActiveSync and Windows Mobile Device Center (WMDC) provide an easy way to synchronize data on a Windows-based computer with your device. ActiveSync works on computers that have the Windows XP operating systems. WMDC works only on computers that have Windows Vista or Windows 7.

ActiveSync and WMDC act as gateways between your device and your computer for transferring Outlook e-mail, appointments, contacts, and tasks, and media such as pictures, music, and videos. You can also use the Explore feature in either program to move files or programs from your computer to your device.

Installing ActiveSync or WMDC


If you're using Windows XP or earlier versions of Windows, download and install the latest ActiveSync. If you're using Windows Vista or Windows 7, download and install the latest Windows Mobile Device Center. (Visit the Microsoft website to download the program and to obtain operating instructions.)

NOTE:

- Before installation, make sure that you have Microsoft Outlook installed on your computer.
- Connect your device to the computer AFTER Windows Mobile Device Center or ActiveSync is installed.
- ActiveSync connection problems may occur in some specific cases. They are likely caused by interoperability with desktop firewall applications or applications that manage network traffic. For troubleshooting information, visit the Microsoft web site.


Connecting the USB Cable


1. After the software installation, connect your device to your computer with the USB cable.

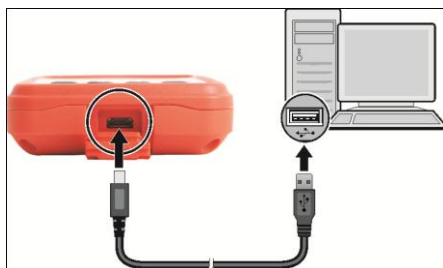

2. Your device displays the **USB Mode Switch** screen each time the USB cable is connected. The default setting is **ActiveSync**. Tap **OK** to accept.
3. ActiveSync or WMDC will start on your computer. See the program's online help for instructions on setting up synchronization.

NOTE:

- In case your computer does not respond after the cable connection for ActiveSync mode, tap  → **Settings** → **Connections** → **USB to PC**, and then clear **Enable advanced network functionality**. This should resolve the problem.
- If the cable connection is for a different purpose such as using the device as a microSD card reader or an external modem for your computer, tap one of the other choices in the **USB Mode Switch** screen.

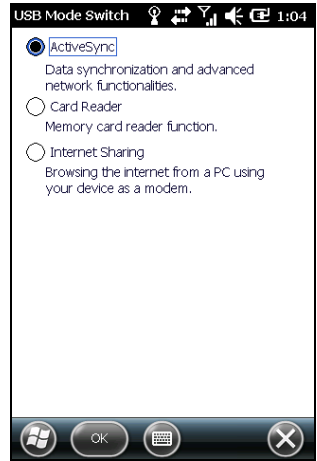

Using Options

Using a microSD Card

Your device has a microSD card slot where you can insert a microSD card for removable extra storage. To insert a microSD card:

1. Remove the battery. (Refer to “Installing the SIM Card and Battery” earlier in this chapter.)
2. With the microSD card's connector facing down and the arrow pointing to the slot, insert the card all the way into the slot.




To remove the microSD card, slightly push the card edge to release it and then pull the card out of the slot.

3. Replace the battery and battery cover.

Using the Headset

A headset with built-in microphone is supplied with your device.

To use the headset, connect the cable to the top of your device. You can press the button on the microphone to answer an incoming call. To end the call, press the button again.

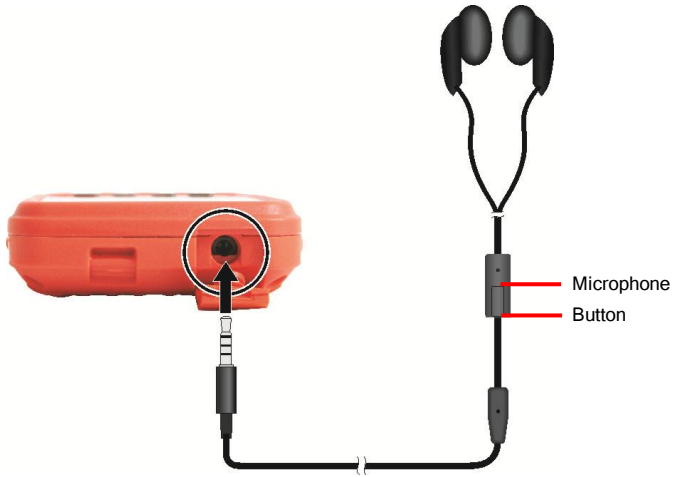

CAUTION: Never raise the sound volume level too high when using earphones. An excessive sound volume level could cause damage to your hearing.

Chapter 2

Basic Skills

This chapter familiarizes you with the basic operations of your device.

Using the Touchscreen

Use your finger to navigate and select objects on the screen.

- **Tap**
Touch the screen once with your finger to open items and select options.
- **Drag**
Hold your finger on the screen and drag across the screen to select text and images. Drag in a list to select multiple items.
- **Tap and hold**
Tap and hold your finger on an item to see a list of actions available for that item. On the shortcut menu that appears, tap the action you want to perform.

Screen-touch gestures make it easier to navigate your device. Gestures you can use are:

- **Scroll**
Brush up or down on the touch screen with your finger, and lift your finger off when you reach the edge. To stop scrolling, tap the screen.
- **Pan**
Place your finger on the screen and move it around for more controlled navigation. To stop panning, tap the screen.

NOTE: Not all applications support screen-touch gestures.

Home Screen

The Home screen appears whenever you turn on your device after shutting it down or resume the operation after 4 hours of inactivity.



The Home screen provides shortcuts to frequently-used features. It shows information such as your appointments, missed calls, and unread messages, and provides quick access to your music, pictures, and other applications.

All items are displayed in a scrollable list and the item in the center is always the active item. Brush up or down on the screen to see more items.

When an item is active, it displays additional information and action(s) you can take. When there is more than one action, you can brush left or right within the item to see the next or previous action.



You can conveniently perform a task by tapping the active item or the soft button in the toolbar.

The Home screen is accessible from anywhere by pressing the Home  button on your device or by tapping  (at the left-bottom corner of the screen) and then **Home**.


NOTE:

- You can customize the Home screen by tapping  → **Settings** → **Home**.
- You can use your device in a landscape manner. To change the screen view, tap  → **Settings** → **System** → **Screen** → **General** → **Landscape** or **Portrait**.

Navigation Bar and Toolbar

The Navigation bar is located at the top of the screen. It displays the active program name and indicators for connectivity, volume, power, time, and others. You can tap this bar to set up related items.

An example of the Navigation bar:

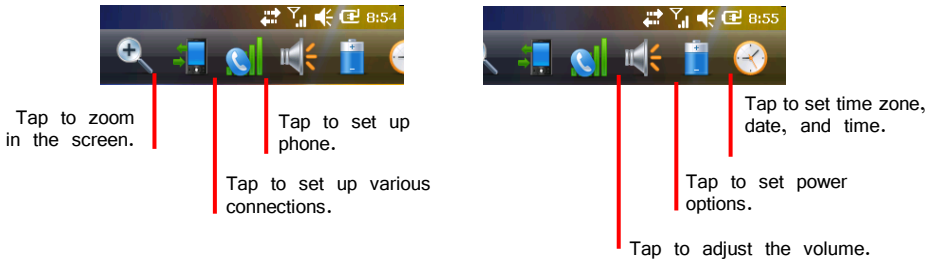

Use the toolbar at the bottom of the screen to perform tasks in the active program. The toolbar includes buttons such as the input panel button and **Menu** button.



An example of the toolbar:



Running Programs

You can switch from one program to another without closing any program.

In addition to running a frequently-used program from the Home screen, you can access any program from the Start menu.


To open the Start menu, press the Start  button on your device or tap  at the left-bottom corner of the screen. The Start menu contains all the program icons. You can brush up or down on the screen to see other program icons.



Shortcut Menus

With shortcut menus, you can quickly choose an action for an item. For example, you can use the shortcut menu in the contact list to quickly delete a contact, make a copy of a contact or send an e-mail message to a contact. The actions in the shortcut menus vary from program to program.


To access a shortcut menu, tap and hold your finger on the name of the item that you want to perform the action on. When the menu appears, lift your finger and tap the action you want to perform. Or tap anywhere outside the menu to close the menu without performing an action.

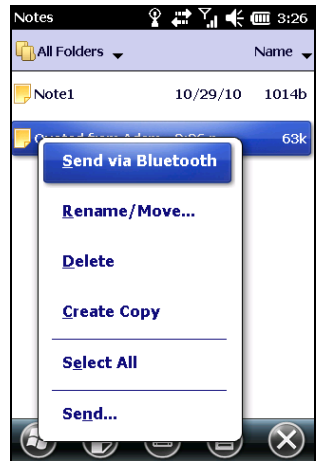

Notifications

Your device reminds you in a variety of ways when you have something to do. For example, if you have set up an appointment in Calendar, a task with a due date in Tasks or an alarm in Clock, you will be notified in any of the following ways:

- A message appears on the screen.
- A sound, which you can specify, is played.
- The notification indicator flashes.

To choose reminder types and sounds for your device, tap  → **Sounds & Notifications**.



Entering Information


You have several options for entering new information:

- Use the Input panel to enter typed text, either by using the on-screen keyboard or other input methods.
- Write directly on the screen.
- Draw pictures on the screen.
- Speak into the microphone to record a message.


Entering Text Using the Input Panel

Use the Input panel to enter information in any program on your device. You can either type using the on-screen keyboard or write using a recognizer. In any case, the characters appear as typed text on the screen.

To show or hide the Input panel, tap . By default, the soft keyboard appears. To change to a different input mode, tap and hold  and select from the popup menu.

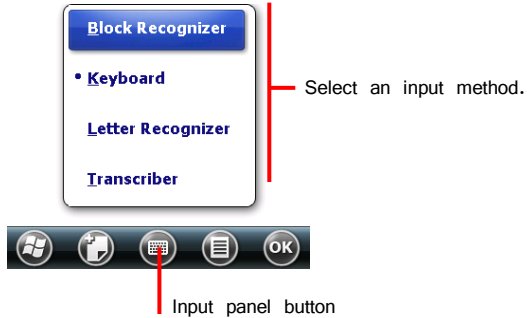

When you use the Input panel, your device anticipates the word you are typing or writing and displays it above the Input panel. When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your device, the more words it learns to anticipate.

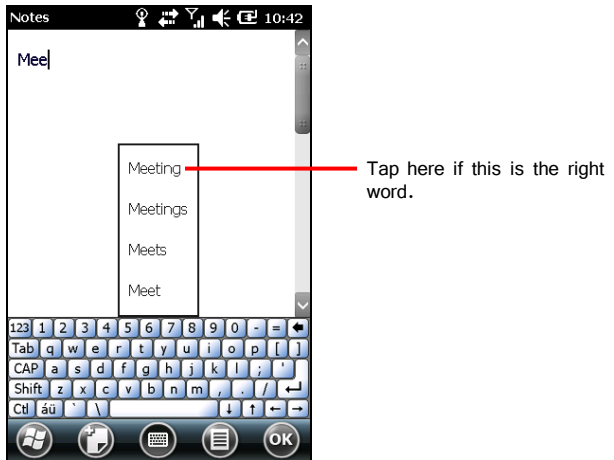

Recognizer

NOTE: The availability of recognizers depends on the region and the language version you purchased.


With a recognizer, you can write letters using your finger just as you would use a pen on paper.

When you write a letter, it is converted to typed text that appears on the screen.

Writing or Drawing on the Screen

In certain programs, such as Notes, you can write or draw on the screen as you do on paper.

NOTE: Not all programs support the drawing mode.





1. Tap  → **Draw** to enable drawing mode. A check (✓) appears before the command.
2. To create a drawing, cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in or touching the drawing box become part of the drawing.

Drawings that do not cross three ruled lines will be treated as writing.


Recording a Message

You can quickly capture thoughts, reminders and phone numbers by recording a message. In the Notes program, you can either create a stand-alone recording or include a recording in a written note. If you want to include the recording in a note, open the note first. In the E-mail program, you can add a recording to an e-mail message.

To create a recording:



1. Tap  → **Notes** to switch to the program.
2. Tap  → **View Recording Toolbar** to show the Recording toolbar.
3. Hold the device's microphone near your mouth or other source of sound.
4. Tap the  Record button on the Recording toolbar to start recording.
5. To stop recording, tap the  Stop button on the Recording toolbar. The new recording appears in the note list or as an embedded icon.

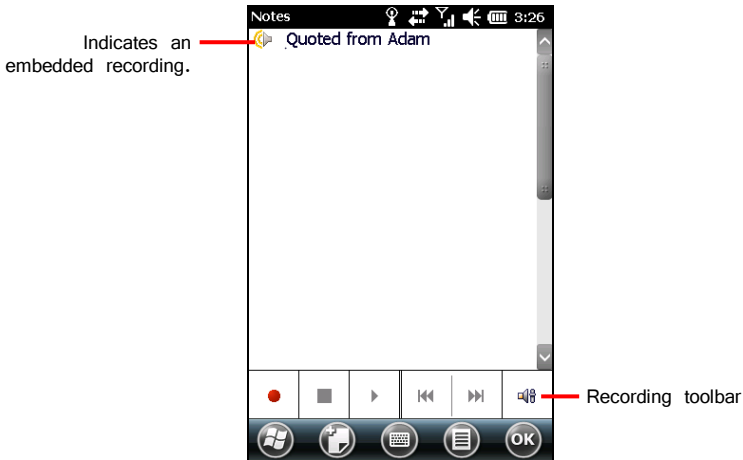To play a recording, tap it in the list or tap its icon in the note.




Securing Your Device

Locking the Screen


You can lock the screen at any time by tapping  in the toolbar of the Start menu. This will not affect the notification messages and incoming calls. To unlock the screen, drag  left or right.



Tap to lock.

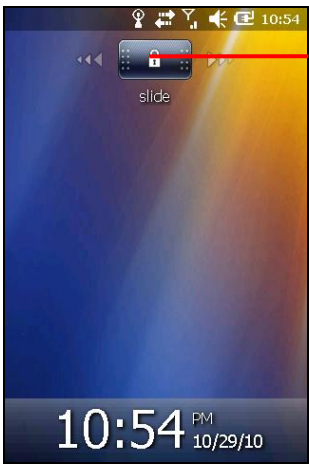


Drag left or right to unlock.

To set a password for unlocking, tap  → **Settings** → **Lock**. When a password is set, you will be asked to enter your password whenever you want to use the device.

NOTE: If you forget your password, you must clear memory so you can use your device again. (See “Restoring Factory Default State” in Chapter 8 for instructions.)

Locking Your SIM Card

You can set a PIN (Personal Identification Number) code to protect your SIM card against unauthorized use. (Your mobile phone network operator may have already set a PIN for the SIM card.)

By default, your device does not enable PIN security. To enable the security or change the PIN, tap  → **Settings** → **Personal** → **Phone** → **Security**.

When enabled, you will be asked to enter the SIM card’s PIN code when starting up the device.

Chapter 3

Phone Operations


This chapter tells you how to use the mobile phone function of your device.

About Phone

You device supports 3G/EDGE/GPRS/GSM/HSDPA/UMTS for mobile communications.

Switching On or Off the Phone Function

The phone function is on by default. When needed (for example, on an airplane), you can switch off the phone function without turning off your device.

1. Tap the navigation bar and . Then tap **Wireless Manager** in the popup window.

– or –

Tap  → **Settings** → **Connections** → **Wireless Manager**.

2. The Wireless Manager screen appears.



Tap **Phone** to switch it from on to off or the other way around.

3. Tap .






Starting the Phone Program


Start the Phone program by any of the three methods:

- Press the Send  button on the device.
- Tap  → **Phone**.
- Tap the **phone** item. Tap again if it displays “No New Missed Calls.”

NOTE: If the phone is currently off, you will be asked to turn it on.



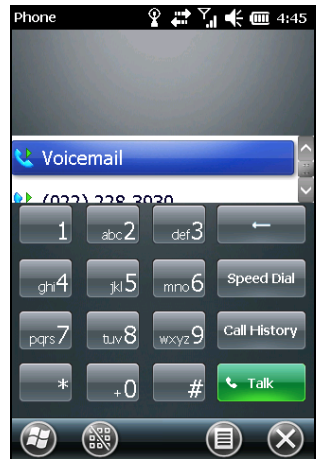




Whenever you start Phone, the Phone screen displays the onscreen keypad. You can tap  to hide it. To show the keypad, tap .










You can use other programs during a call. To quickly switch back to Phone, press the Send  button on your device.

Phone Status Icons

Icons will be displayed in the navigation bar to indicate the status of the phone functions. They are listed below.

Icon	Meaning
	Phone off (airplane mode)
	Signal strength
	Call in progress
	Missed call
	Call on hold
	GPRS available
	GPRS in use

Icon	Meaning
	EDGE in use
	WCDMA/UMTS available
	WCDMA/UMTS in use
	HSPA available
	HSPA in use
	New message
	Missing SIM card

Icon	Meaning
	EDGE available


Icon	Meaning
------	---------


Changing the Phone Profile

To change the phone profile:

1. Press the volume up or down button on the side of your device.


– or –


Tap the navigation bar and tap .
2. Tap **On**, **Vibrate**, or **Off** before the window disappears.
3. Tap **OK**.

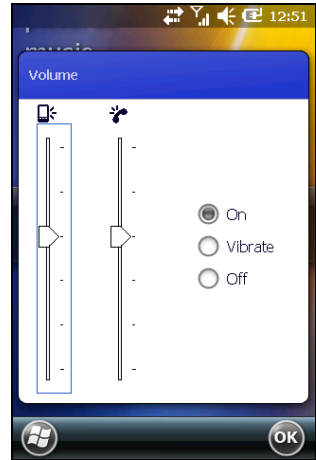

Adjusting the Phone Volume during a Call

To adjust the volume during a call, use one of the below methods:

- Press the volume up or down button on the side of your device. Press once to increase or decrease one level.
- Tap the navigation bar and tap . Select a volume level before the window disappears.

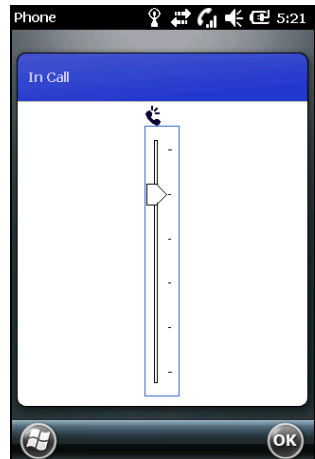



Making a Call


There are several ways you can make a call.

Dialing a Call

1. Start the Phone program as described in “Starting the Phone Program” earlier.
2. Tap the numbers on the onscreen keypad. As soon you enter the first digit, the program searches Contacts, Call History, and Speed Dial to find a matching name and/or number. When you see the name of the person to call listed, select it and the desired phone number.

Or, you can continue entering the complete phone number.

3. Press the Send  button on your device or tap  on the onscreen keypad to make the call.

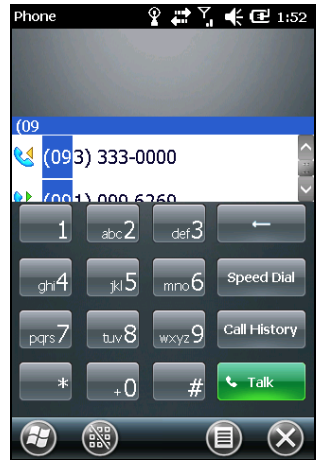



NOTE:


- If you enter a wrong number, use the Backspace key to erase individual numbers one at a time.
- If you are making an international call, tap and hold on the number key 0 until the + sign appears. The + sign replaces the international prefix of the country from where you are calling.

Making a Call from the Onscreen List

The Phone screen lists recent calls, speed dials, and contacts.

You can conveniently select an entry from the list and press the Send  button on your device to make the call.


NOTE: To view a different list on the Phone screen, tap  → **View** and select one of the options.

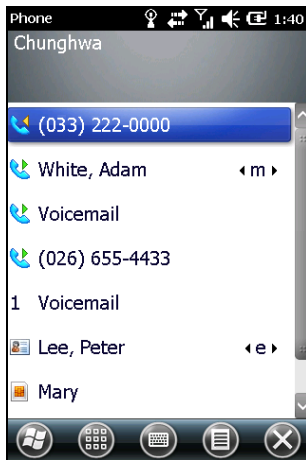


Making a Call from Contacts

Microsoft Contacts displays your contact information stored both in your device's memory and on your SIM card. (See "Contacts: Tracking Friends and Colleagues" in Chapter 5 for detailed information on the Contacts program.)

1. Start the Contacts program.
2. Do one of the followings to call a phone number in the contact list:
 - Tap the contact to call. Then tap the number to call.

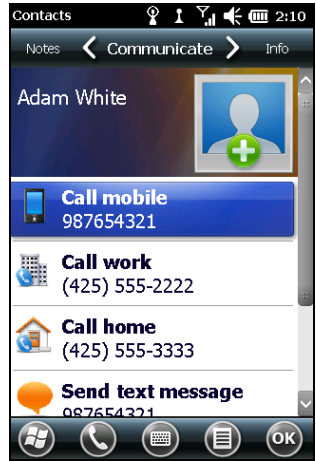

- Tap and hold on the contact to call, and then tap the number to call in the shortcut menu.

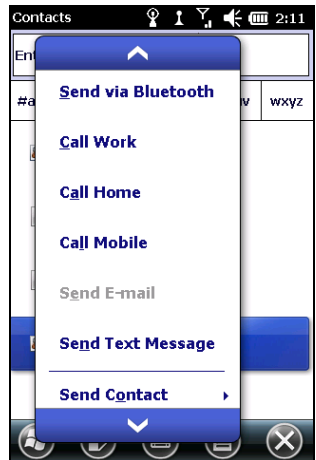




Making a Call from the Call History List

The Call History list displays the calls you made, received or missed.

1. Tap **Call History** on the onscreen keypad of the Phone program.



2. Do one of the followings to call a person in the Call History list:
 - Select the number to call and then tap  or press the Send  button on your device.
 - Tap and hold on the number to call and then tap **Call** in the shortcut menu.

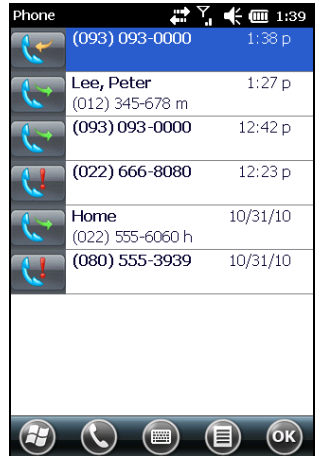

Quickly Making a Call to the Last Missed Call

The Home screen displays the last missed call in the **phone** item. Tap **phone** to view the caller information. To call back, tap again.

NOTE: If you do not wish to call back, do not tap the caller information on the Home screen. To cancel the caller information, tap **Notification** in the toolbar to dismiss it.

Making a Call from Speed Dial


If you have created speed dial entries, you can call a person quickly. (See “Using Speed Dial” in this chapter for information.)

When in the Phone program, press and hold the numeric key of the assigned speed dial number to make the call.





Responding to a Call

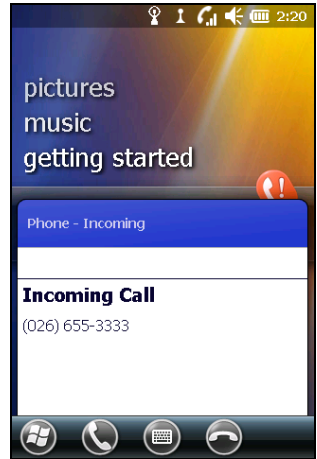

When an incoming call is received, your device rings or vibrates according to the options you have set for the phone. The name and number of the caller are displayed on the pop-up window. If the name of the caller is not in your contact list, only the caller's phone number is displayed.





Answering a Call

To answer an incoming call, press the Send  button on your device or tap  in the toolbar.

Rejecting a Call

To reject an incoming call, press the End  button on your device or tap  in the toolbar.


Ending a Call

To end a call, press the End  button on your device or tap  in the toolbar.


Operations during a Call

Using the Mute Function

During a call, you can mute your microphone so that the person with whom you are speaking cannot hear you, but you can still hear him or her.


On the Phone keypad, tap **Mute** to switch on the mute function. The icon  will appear on the upper-right corner.

To switch off the mute function, tap **Unmute**.

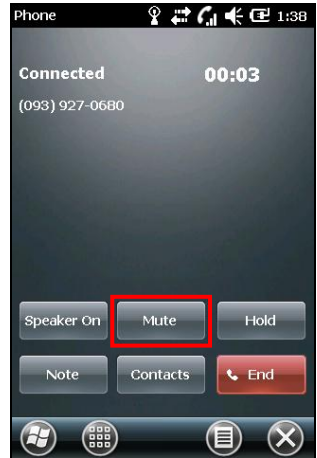

Using the Speakerphone

You can switch on the speakerphone to use your device as a hands-free solution.

On the Phone keypad, tap **Speaker On** to switch on the speakerphone function. The icon  will appear in the navigation bar.

To switch off the speakerphone function, tap **Speaker Off**.



Managing More Than One Call

NOTE: You may need to register for the “call waiting” service with your mobile phone network service and set your device accordingly. The exact number of people you can talk at the same time depends on your mobile phone network service.

During a call, you can make or take a second call while putting the current call on hold. Then, you can choose to swap between the two callers or set up a conference call between all three parties.

Holding a Call to Take a Second Call

1. If there is another incoming call when you are talking on your device, a pop-up window appears to notify you.
2. Answer the second call.
3. When you end the second call, you will be back to the first call.

Placing a Call on Hold to Make a Second Call

1. During a call, tap **Hold** to place the first call on hold.
2. Make the second call.
3. When you end the second call, you will be back to the first call.






Swapping between Calls

When you have put a call on hold and made or taken another call as described earlier, you can swap between the two calls by tapping **Swap**.

Setting up a Conference Call

NOTE: You may need to consult your mobile phone network service for the availability and subscription of the conference call function.

1. When you have put a call on hold and made or taken another call as described earlier, you can set up conference calling by tapping  → **Conference**.
2. Follow the same way to add additional people to your conference.
3. If you want to talk to one of the parties privately during the call, tap  → **Private**. Select a number, and tap **Private**.


To include everyone in the call again, tap  → **Conference**.

Taking a Note during a Call

You can take a note during a call.

1. Tap **Note**.
2. Enter your note and tap **OK**.

To access a note you created during a call:

1. While in the Phone program, tap **Call History**.
2. The  icon indicates that the phone call entry contains a note. Tap and hold the name or number for that entry, and tap **View Note** in the shortcut menu.


NOTE: You can also tap  → **Notes**, and access the note in the Calls folder.




Using Call History


Call History provides the time and duration of all incoming, outgoing, and missed calls, and a summary of total calls. Call History also provides easy access to any notes taken during a call.

To access Call History while in the Phone program, tap **Call History**.


Viewing Call History

You can tap  → **Filter** to change the Call History view (**All Calls** by default).

- **All Calls**: Displays all calls made to and from your device in a chronological order.
- **Missed** (): Displays only calls that were not answered.
- **Outgoing** (): Displays only calls made from your device.
- **Incoming** (): Displays only calls made to your device.

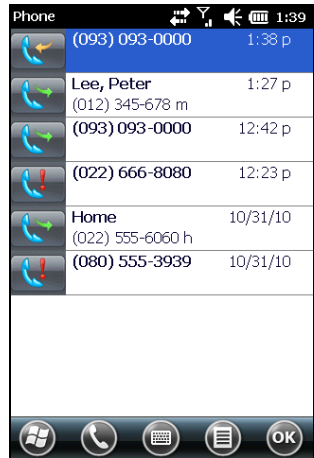

To see the time, date and duration of a call, tap the item on the list to view details.

To clear all items on the list, tap  → **Delete All Calls**.

Adding an Entry to Contacts Using Call History

You can add a phone number in the Call History to Outlook Contacts or SIM Contact.

1. Tap and hold the entry you wish to transfer, and tap **Save to Contacts** in the shortcut menu.


2. Tap **<New Contact>** and select a contact type.
3. Enter the contact's name, and select the proper number type.
4. Tap **Save** to save the entry.


Using Speed Dial

You can create Speed Dials for frequently-called phone numbers so you can dial a number with a single key press.

Creating a Speed Dial Entry

Speed dials can only be created for numbers stored in Contacts.

1. While in the Phone program, tap **Speed Dial**.
2. Tap  **New**.
3. Tap the desired contact.
4. In **Name**, accept the current name or change it if you want to.
5. In **Number**, select the phone number if there is more than one number for the contact.
6. If **Location**, accept the current speed dial number or change the number if you want to.
7. Tap **OK** to save the setting.

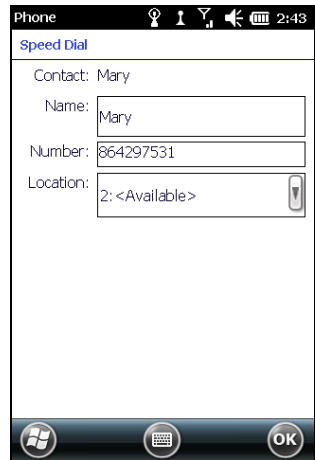

The new Speed Dial entry is now on the Speed Dial list. The letter on the lower-right corner of the entry indicates the assigned phone number. For example, “m” indicates the mobile phone number.

NOTE: The first Speed Dial location is reserved for your voice mail.

Editing or Deleting a Speed Dial Entry

1. While in the Phone program, tap **Speed Dial**.
2. Tap the desired entry and tap **Delete**.
– or –
Tap and hold on the desired entry, and tap **Delete** in the shortcut menu.
3. Tap **Yes**.

Additional Phone Operations

Using Text Messages

Text messages are automatically received when your phone function is switched on. When your phone function is off, messages are held by your mobile operator until the next time that the function is switched on.

The Home screen shows if there are new text messages. You can tap the section to open the message list.

To send a text message, you can do one of the followings:

- First select a phone number from a program such as Phone or Contacts. Then select **Send text message**.
- First start the Text messaging program. Then select the phone number.

See “Reading and Sending Text Messages” in Chapter 5 for more information.

Setting up an Internet Connection

You can set up an Internet connection using the mobile network. See “Using Cellular Connection” in Chapter 7 for information.

Checking Your Voice Mail

The first position in your speed dial list defaults as your voice mailbox. When you insert your SIM card, your device automatically detects your voice mailbox number and sets it to the first position in your speed dial list.

Making an Emergency Call

You can use your device to dial the international emergency number 112. This number can normally be used to make an emergency call in any country with or without a SIM card inserted, as long as you are within a mobile phone network.

Some mobile phone network services may require that a SIM card be inserted, and in some cases that the PIN be entered.

There may be other emergency numbers available. Your mobile phone network service may save additional local emergency numbers in the SIM card.

Dialing an International Call

When you are manually dialing a number, tap and hold on the number key 0 until the + sign appears. The + sign replaces the international prefix of the country from where you are calling.

Enter the full phone number you want to dial including country code, area code (without the leading area code zero) and local phone number.

Customizing Your Phone

To access the Phone settings, use one of the methods:

- Switch to the Phone program and tap  → **Options**.
- Tap  → **Settings** → **Personal** → **Phone**.


Changing Sounds Settings

Scroll left or right to the **Sounds** page.

You can customize phone settings, such as the ring type and ringtone to be used for incoming calls, and the keypad tone to be used when entering phone numbers.

NOTE:

- To use custom files (MP3, WMA, and WAV formats) as ringtones for incoming calls, copy the files to the \Application Data\Sounds folder on your device. Then, select the sound from the Ring Tone list.
- To assign a specific ringtone to a contact for easy identification, create the contact as an Outlook contact and select a ringtone. (See “Contacts: Tracking Friends and Colleagues” in Chapter 5.)

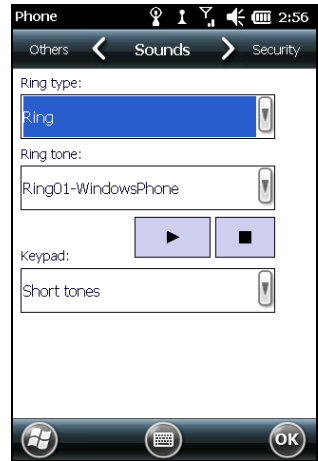


Changing Security Settings

Scroll left or right to the **Security** page.

You can protect your phone from unauthorized use.

You might be prompted to enter the PIN2 code for specific functions (such as the pre-paid card's charging counters). Consult your mobile phone network service to check if your SIM card supports PIN2-related functions and services.

NOTE: Emergency calls can be placed at any time without requiring a PIN code.

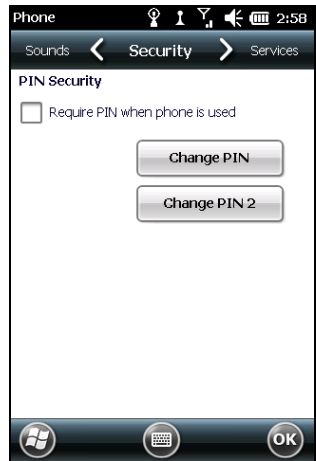


Changing Services Settings

Scroll left or right to the **Services** page.

You can access and configure settings for the phone services you subscribed to through your mobile phone network service. For example, you may want to block certain types of incoming and/or outgoing calls, forward incoming calls to a different phone number based on your situation, be notified of incoming calls when you are already in a call, or let others know your identity when making calls. Services available to you depend on your mobile phone network service and the type of your subscription.


To view your services settings, tap a service and then tap **Get Settings**.

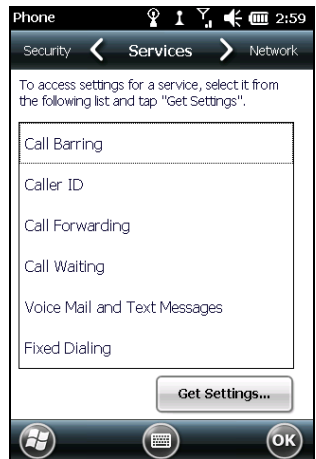

Changing Network Settings

Scroll left or right to the **Network** page.


You can view available wireless networks, determine the order in which your phone accesses another network if the current one is unavailable, and specify whether you want to change networks manually or automatically. The current network will remain active until you change it, lose your signal, or change your SIM card.

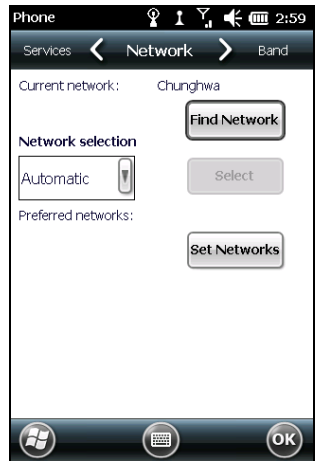

Changing Band Settings

Scroll left or right to the **Band** page.


The settings will be configured automatically according to the SIM card inserted. You can manually change the settings if needed.

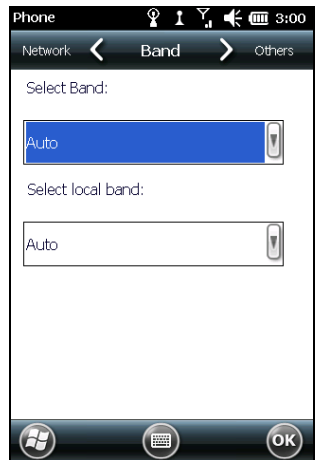

Changing Others Settings

Scroll left or right to the **Others** page.

The settings will be configured automatically according to the SIM card inserted. You can manually change the settings if needed.

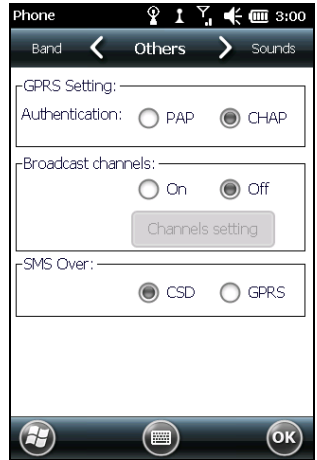

Chapter 4


Managing Your Device

This chapter tells you how to effectively manage power, settings, data and programs of your device.

Managing Power

Follow these suggestions to maximize the battery's operating time, particularly when you are relying solely on the battery power for extended time periods.

- Suspend frequently.


By default, the screen backlight will automatically dim out and the device will also suspend when it has been idle for a period of time. You can shorten the length of the idle time using  → **Settings** → **System** → **Power** → **Advanced** to set up.

Press the power button to suspend your device when it is not in use, even for a short time.

- Turn off functions not needed or adjust settings.

- ✓ Lower the volume.

- ✓ Lower the brightness level.


- ✓ Do not enable sounds or light flashing except for the most necessary notifications. (Tap  → **Settings** → **Personal** → **Sounds & Notifications** to set up.)

- Avoid power-consuming situations such as:

- ✓ Using a peripheral
- ✓ Playing sound or music
- ✓ Recording
- ✓ Using or monitoring wireless signals

Customizing Your Device

NOTE: Incorrect settings may cause your system to malfunction. Make sure that you fully understand the function of a certain item before any adjustment.

You can customize the settings of the device to your own preferences. Tap  → **Settings**.

The items you can customize are described as follows:

Item		Description
Clock & Alarms		To change the time and date and to set alarms.
Home		To select the information you want displayed on the Home screen and to select a desired theme for the background.
Lock		To set a password for security.
Sounds & Notifications		To set the conditions and types of the sounds, system volume and ways of notifications.
Connections	Connections	To set up or change connection information. (See Chapter 7 for detailed information.)
	CSD Type	To set CDS communications protocol and transmission type.
	Domain Enroll	To connect your device with company resources. You will need the enrollment password provided by your system administrator.

Item	Description	
Connections	USB to PC	To enable advanced network functionality for USB connection. In some specific cases, there can be connection problems if this item is enabled. Disable this item to resolve the problem.
	Wi-Fi	To search for wireless networks and configure the wireless network module. (See “Using Wi” in Chapter 7 for detailed information.)
	Wireless Manager	To change the Wi-Fi, Bluetooth, and Phone radio status.
Personal	Buttons	To assign programs to hardware buttons (not supported by your device) and set the repeat rate of the up/down control.
	Owner Information	To enter your personal information.
	Phone	To customize the phone function. (See “Customizing Your Phone” in Chapter 3 for detailed information.)
System	A-GPS	To fetch data by communicating with a mobile network server to shorten the GPS start-up time. Availability and cost depends on your mobile operator.
	About	To show the hardware information of your device and to define the name that your device uses for identifying itself to other computers.
	Backlight	To adjust the brightness level of the display and to set the automatic turnoff for power saving purposes.


Item	Description
System	Certificates To establish your identity or the identity of other computers. This helps prevent unauthorized users from accessing your device and information.
	Customer Feedback To set if you want to send your feedback on using the Windows Mobile software.
	Encryption To set if you want to encrypt files placed on storage cards. The encrypted files will be readable only on this device.
	Error Reporting To enable or disable error reporting. Error Reporting sends information needed by technical support groups to diagnose a program error for a device running Windows Mobile software.
	External GPS To configure the GPS hardware settings and manage GPS.
	Managed Programs To manage the programs you installed.
	Memory To display the allocation between storage and program memory, to view the memory on the storage card (if installed) and to manually stop a program if it becomes unstable or program memory is low.
	Microphone To adjust the microphone recording volume.
	Power To show the remaining battery power and to set the time for the device to turn off automatically.
	Regional Settings To specify the region of your location and the formats of the number, currency, time and date.
	Remove Programs To remove programs you added to the memory of your device.


Item		Description
System	Screen	To set the orientation of the screen to portrait or landscape.
		To adjust the touch screen for accurate screen taps.
		To enable the ClearType feature for easier reading of text in programs that support ClearType.
		To adjust the text size to see more content or increase the readability in many programs.
	System Information	To display the system information.
	Task Manager	To display the information about the system performances and the detailed information of the running programs on your device. You can also end or manage the running programs in Task Manager.
Microsoft My Phone		To synchronize your phone's various contents with your My Phone account at Microsoft.
Bluetooth		To set up or change the Bluetooth connection. (See "Using the Bluetooth Function" in Chapter 7 for detailed information.)

Working with Programs and Folders

Adding and Removing Programs


You can add programs compatible with Windows Mobile 6.5 to your device by downloading or copying.

To manage programs you have installed, tap  → **Settings** → **System** → **Managed Programs**.

To remove programs you have installed, tap  → **Settings** → **System** → **Remove Programs**.

Searching and Organizing Information

The Search feature on your device helps you quickly locate information.

To search a file, tap  → **Search Phone**. Enter the text you want to find, select a data type and then tap **Search** to start the search.

You can also use the File Explorer to find files on your device and to organize these files into folders. Tap  → **File Explorer**.

NOTE: You can move files in File Explorer by tapping and holding the item you want to move, tapping **Cut** or **Copy** on the shortcut menu, browsing to the new location and then tapping **Paste**.


Chapter 5


Microsoft Pocket Outlook

Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Notes, and Messaging. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e-mail messages in Messaging.

Calendar: Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month and Year), and set Calendar to remind you of appointments with a sound or other methods. Appointments for the day can be displayed on the Home screen.

Tap  → **Calendar** to switch to the program.

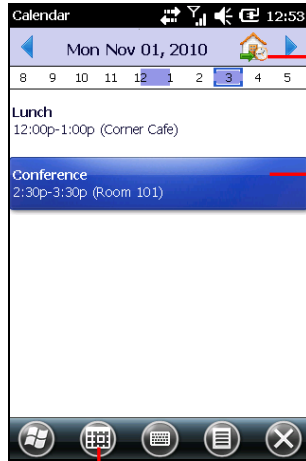

Tap to go to today.

Tap to display or edit the appointment details.

Tap to switch to another view.


Creating an Appointment

1. Tap **calendar** and **New Appointment** on the Home screen.

– or –

Tap  → **Calendar** →  → **New Appointment**.

2. Enter appointment information.
3. Tap **OK** to save and return to Calendar.

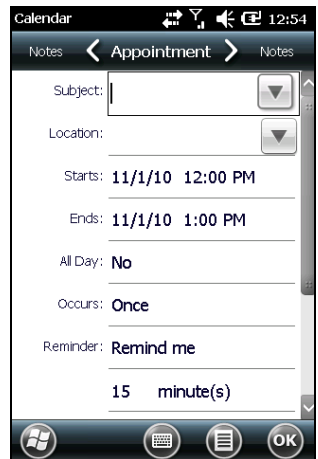


Viewing Appointments

You can quickly check your future appointments on the Home screen.



Tap the **calendar** item on the Home screen to see the next appointment and brush left to see more appointments (if existing).

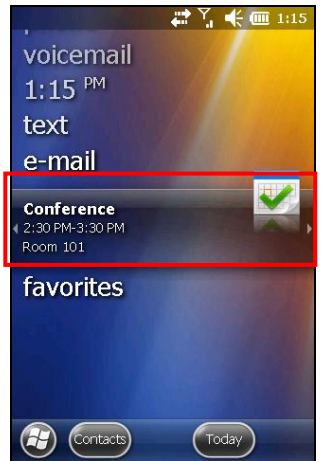
Tap the appointment to view details.




Contacts: Tracking Friends and Colleagues

Contacts maintains a list of your friends and colleagues so that you can easily find the information you are looking for, whether you are at home or on the road.

Tap **Contacts** soft button (if available) in the Home screen toolbar or tap  → **Contacts** to switch to the program. The contacts list appears. Contacts stored in the SIM card are indicated by the icon .

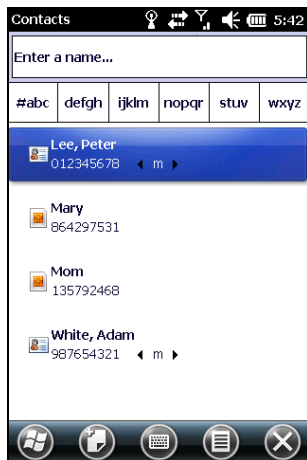


Creating a Contact

1. In Contacts, tap .
2. Select a type.
3. Tap the first field for entering the name.
4. Use the Input panel to enter the information and tap **OK** to complete.
5. Tap another field to enter other information such as phone number and e-mail address.

NOTE: You can only set the contact's name, phone number, and e-mail address for a SIM contact.

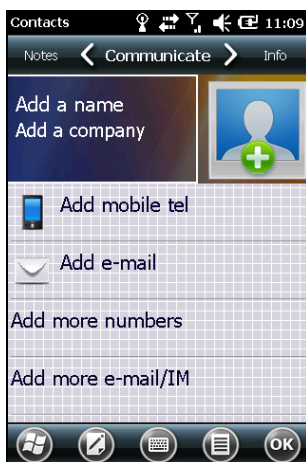

6. Tap **OK** to save and return to the contact list.



Assigning a Ringtone and Picture


NOTE: To use custom files (MP3, WMA, and WAV formats) as ringtones for incoming calls, copy the files to the \Application Data\Sounds folder on your device.


You can assign a specific ringtone and picture to an Outlook contact for easy identification when they call.

1. Select the contact you want to edit.
2. Tap  → **Edit**.
3. To assign a picture, tap  and select an image.
4. To assign a ringtone to the contact, tap **Info** at the upper right of the screen. Tap **Set ringtone** to select a ringtone from the list.


Tasks: Keeping a To Do List


Use Tasks to keep track of what you have to do.

Tap  → **Tasks** to switch to the program.

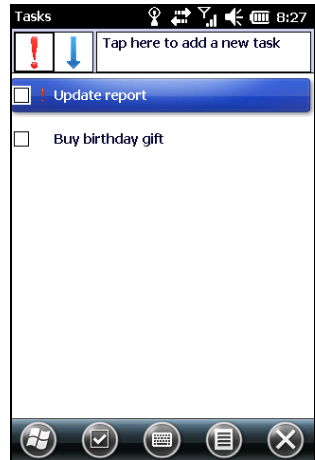


Creating a Task


1. In Tasks, tap  → **New Task**.
2. Using the Input panel, enter a description.
3. You can enter a start date and due date or enter other information by first tapping the field.
4. Tap **OK** to save and return to the task list.

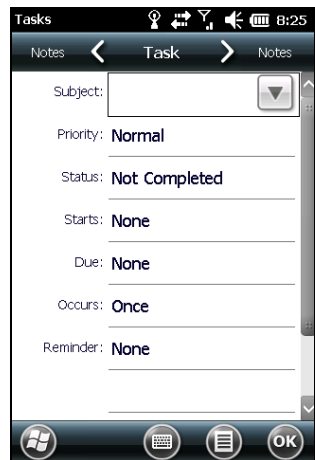


Notes: Capturing Thoughts and Ideas


Quickly capture thoughts, reminders, ideas, drawings and phone numbers with Notes. You can create a written note or an audio recording. You can also include a recording in a note.

Tap  → **Notes** to switch to the program.

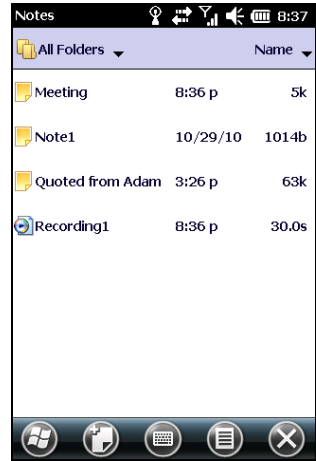


Creating a Note

1. In Notes, tap .
2. Create your note by writing, drawing, typing, or recording.
3. Tap **OK** to save and return to the note list.

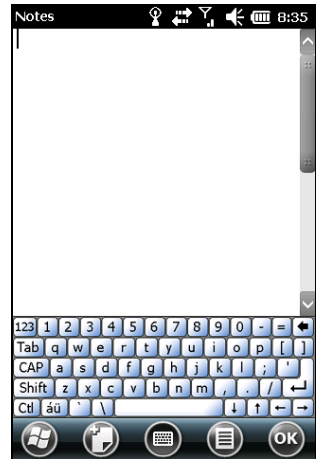


E-mail and Text Messaging: Sending and Receiving Messages

About Accounts

Tap  → **E-mail**. The account selection screen appears.


You can use multiple services to send and receive messages. For different ways of accessing messages, there are different types of account:

- **Text Messages**
- **Outlook E-mail:** This item appears if you have synchronized directly with a Microsoft Exchange Server account or with Microsoft Outlook on your computer.
- **An Internet account:** You have to manually set up such an account. This type of account depends on a service provider or a mobile operator to provide the messaging services that enable you to send and receive e-mail over the Internet.

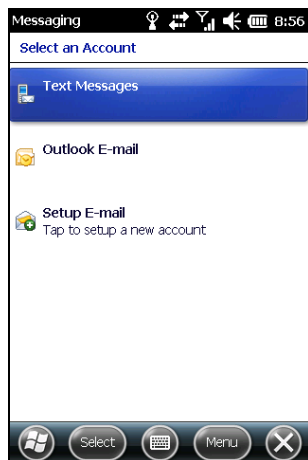

Setting up an Internet E-mail Account

You can set up only one Outlook account on your device. However, you can set up multiple Internet e-mail accounts.

1. Tap  → **E-mail**.
2. Tap **Setup E-mail** on the account selection screen.
3. Follow the on-screen instructions to complete the setup.


During setup, you can enable Auto Setup to search for and enter the settings of the e-mail account with which you want your device to synchronize. If Auto Setup does not find the settings, you may have to ask your ISP, mobile operator, or system administrator for the correct settings, and then enter them yourself.


Reading and Sending E-mails

Reading E-mails



When you connect to your e-mail server or synchronize with your desktop computer or server, by default, you will receive messages from the last three days only and the first 2 KB of each new message, and not to sync file attachments. The original messages remain on the server or your desktop computer.

To read E-mail messages:

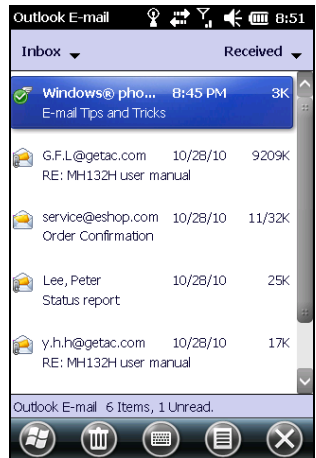

1. Tap the e-mail account on the Home screen.
– or –
Tap  → **E-mail** and select the account.
2. Messages you receive are displayed in the message list. Tap an item to open it.




Sending E-mails

1. Tap the e-mail account on the Home screen.
– or –
Tap  → **E-mail** and select the account.
2. Tap  → **New**.

NOTE: You can also send an e-mail message by selecting a contact with an e-mail address from another program such as Contacts or Phone. Then select **Send e-mail** from the shortcut menu or soft button.

3. Enter the e-mail address of one or more recipients, separating them with a semicolon. To access addresses from Contacts, tap **To**.
4. Enter your message and subject.
5. If you want to attach a file to the message, tap  → **Insert** and select the desired file.
6. Tap  when you have finished the message. If you are working offline, the message is moved to the Outbox folder and is sent the next time you connect.

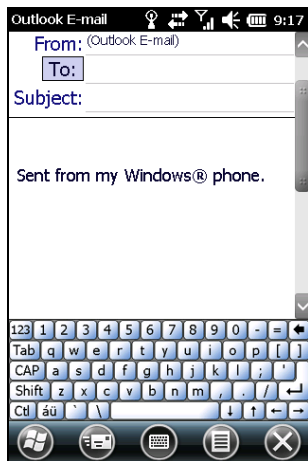

Reading and Sending Text Messages


Reading Text Messages

The Home screen shows if there are new text messages. You can tap the item to view the message. You can also tap  → **Text** to open the message list.

Sending Text Messages

1. Tap **text** on the Home screen and tap **Compose** in the toolbar.


– or –


Tap  → **Text**. Tap  → **New**.

NOTE: You can also send a text message by selecting a phone number from another program such as Contacts or Phone. Then select **Send Text Message** from the shortcut menu or soft button.

2. Enter the phone number of one or more recipients, separating them with a semicolon.

To select phone numbers from Contacts, tap **To**.

3. Enter your message.
4. Tap  to send the message.

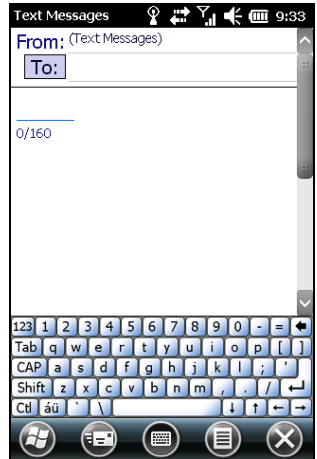

Chapter 6

More Programs


In addition to Microsoft Pocket Outlook, there are other programs built into your device. This chapter describes some of the programs.

Getac Camera

Getac Camera is a geo-tagging camera program, which embeds attributes such as geographical information into JPEG files as EXIF 2.2 metadata.

NOTE: While the Camera program is in use, the Start button on your device does not work and the volume up/down button serves as zoom out/in button.

Taking Pictures


1. To start Getac Camera, press the Camera button on your device or tap  → **Getac Camera**.



The screen displays the live preview image. At the upper right corner is the status bar and at the lower right corner is the GPS information. (See “Status Bar and GPS Information” later for detailed information.)

2. You can use the volume down button on the side of your device to zoom in and up button to zoom out.


If you want to change other camera settings, tap the screen. Control buttons will appear on the left side of the screen. (See “Control Buttons” later for detailed information.) To hide the buttons, tap the preview image area.

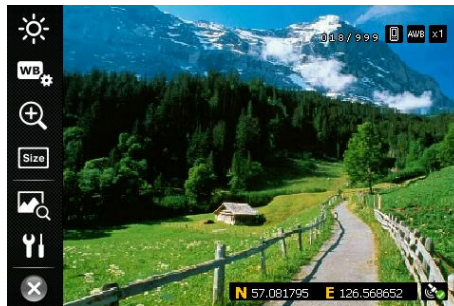

3. Aim the camera lens at the subject. Press the Camera button on your device to take the picture.












- The message **Saving...** appears on the screen for a few seconds, meaning the picture is saved to the predefined storage location.








NOTE: Always wait for the saving procedure to complete before giving the next command.



- If you want to view the picture, tap the  button.

Status Bar and GPS Information

The status indicators are described below:








Indicators	Descriptions
	Number of pictures already taken / Total number of pictures allowed. NOTE: <ul style="list-style-type: none"> Total number of pictures allows varies with the picture size setting. Maximum number shown is 999 even if the storage capacity allows for more.
 / 	Pictures saved to:  – The device's My Documents/My Pictures folder  – Storage card
 /  /  / 	White balance mode:  – Automatic  – Sunshine




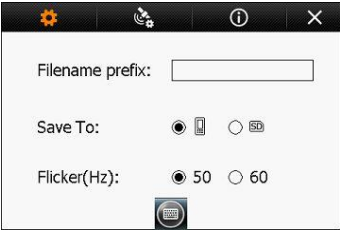



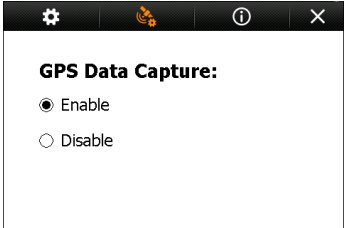
	 – Fluorescence  – Incandescence.
 /  /  /  / 	Current zooming level.


GPS positioning is activated by default after the Camera program starts. The icon at the lower right corner indicates if the GPS positioning is completed () or not (). When completed, you will see longitude and latitude information (such as **N 57.081795 E 126.568652**).

Control Buttons

Tap the screen to display the control buttons at the left side of the screen. Tap a button to perform a specific task as below:

Buttons	Descriptions
	Adjusts the brightness level.
	Sets a white balance mode that matches the current light source:  Automatic (default),  Sunshine ,  Fluorescence , or  Incandescence .
	Adjusts the zoom level.

	<p>Sets the image resolution to 640x480 (default), 1280x960, 1600x1200, or 2048x1536.</p>
	<p>Switches to the picture browser. (See “Pictures & Videos” in this chapter for detailed information.)</p>
	<p>Opens the settings screen.</p> <p>First page:</p>  <p>Filename Prefix – By default, the filename is <i>xxxxx</i> (where <i>xxxxx</i> is a sequential number). You can add a prefix to the filenames (default is no prefix). Type the characters in the entry field. Maximum number of characters allowed is 3.</p> <p>Save To – By default, the pictures are saved to the device’s My Documents/My Pictures folder (). If you want to save the pictures to the microSD card inserted, tap the other option ().</p>
<div style="display: flex; justify-content: space-between; background-color: #e67e22; color: white; padding: 5px;"> Buttons Descriptions </div>	
	<p>Flicker – Sets the frequency to match the local electrical system for flicker free shooting under electric light. Choices are: 50Hz (default) and 60Hz.</p> <p>Second page:</p>  <p>By default, GPS positioning is enabled. You can disable the function</p>

	if needed.
	Closes the program.

Pictures & Videos

With Pictures & Videos, you can:

- View pictures and video clips.
- Send pictures and videos to others.
- Set a picture as the background on the Home screen.
- Play slide show.
- Edit your pictures.

Viewing Pictures and Videos

1. Tap **pictures** on the Home screen and **All Photos** soft button or tap  → **Pictures & Videos** to switch to the program.

NOTE: You can quickly view pictures by tapping **pictures** on the Home screen. Brush left or right to scroll through the pictures. Tap the current highlight to view in full screen.

2. By default, the program displays thumbnails of the pictures and videos in the **My Pictures** folder, within the **My Documents** folder on your device. You can tap one of them to view in full screen.




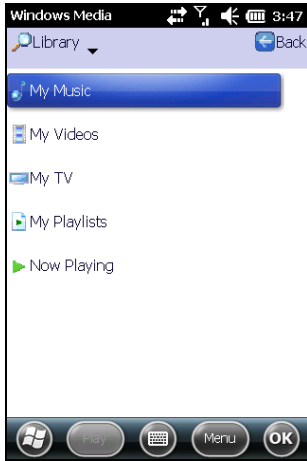
Windows Media

Use Microsoft Windows Media Player Mobile to play digital audio and video files that are stored on your device or on a network, such as on a web site.


The supported file formats are:

- **Audio**
WMA, WAV, and MP3.
- **Video**
WMV and ASF

Tap **music** on the Home screen to directly play music. Or tap  → **Windows Media** to switch to the program.



Library Screen

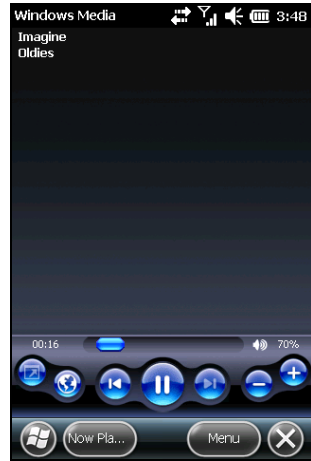


Playback Screen


Use Microsoft Windows Media Player on your computer to synchronize (if using Windows Media Player 10) or copy (if using Windows Media Player 9) digital audio and video files from your computer to your device.

Internet Explorer


NOTE: When surfing the Internet, your device uses the default Internet connection in **Settings** → **Connections** → **Connections** → **My ISP** settings. If you want to surf the Internet through Wi-Fi, connect to the wireless network before starting Internet Explorer. (See Chapter 7 for information.)

Tap **favorites** → **Internet Explorer** on the Home screen or tap  → **Internet Explorer** to switch to the program. The IE Mobile Home page appears.

Tap  to display the Favorites list. Tap the page that you want to view.

To visit web pages not included in Favorites, in the address bar that appears at the top of the screen, enter the web address you want to visit and then tap . Or, tap the arrow to choose from previously entered addresses.

The Internet Explorer screen automatically rotates 90° to the right or left when you hold the device in a horizontal manner.

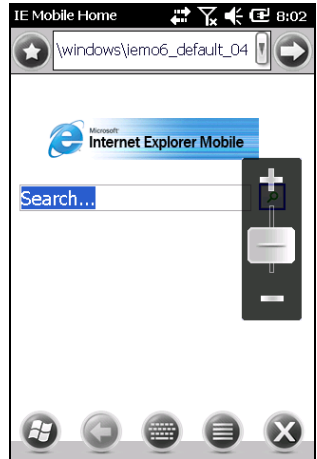


Internet Sharing

Using Internet Sharing, you can use your device as an external modem for the computer via the USB or Bluetooth connection.

NOTE: The Internet Sharing function does not support Windows 98.

1. Make sure that your device is not connected to another device, and that you have set up the GPRS connection on your device. (See “Setting up a Cellular (GPRS) Connection” in Chapter 7 for information.)
2. To use USB connection, connect your device to the computer with the USB cable. When the **USB Mode Switch** screen appears, tap **Internet Sharing** and **OK**.


To use the Bluetooth connection, you must first initiate and complete the Bluetooth Personal Area Network (PAN) partnership on the computer. (For more information, refer to Windows Help and Support.)

3. Tap  → **Internet Sharing**.
4. In **PC Connection**, select **USB** if using USB connection.

Select **Bluetooth PAN** if using Bluetooth connection. When prompted to make your device as visible in the Bluetooth settings, tap **Yes**.

5. In **Network Connection**, select your GPRS setting.
6. Tap **Connect** for your device to connect to the Internet.

Now your computer connects to the Internet via your device.

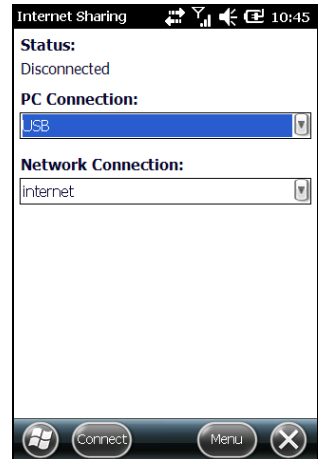

7. To end the connection, tap **Disconnect** on your device.

ActiveSync

ActiveSync on your device works with ActiveSync on a Windows XP computer and with Windows Mobile Device Center on a Windows Vista/Windows 7 computer.

When you have established the connection between your device and your computer, you can synchronize the information between the two with ActiveSync. Synchronization compares the data on the two sides and updates both computers with the most recent information. For example, you can:

- Keep your Pocket Outlook Contacts, Calendar and Tasks databases up-to-date by synchronizing your device with Microsoft Outlook data on your computer.
- Synchronize e-mail messages in your device Outlook Inbox with e-mail messages in Microsoft Outlook on your computer.


You can select which information types are synchronized and control how much data is synchronized. (See the ActiveSync or Windows Mobile Device Center help on your computer.)

With ActiveSync, you can also:

- Copy (rather than synchronize) files between your device and computer.
- Add and remove programs on your device.
- Pass through your computer to a network or the Internet.

Synchronizing Data

Once you have created a synchronization relationship and completed the first synchronization, you can initiate synchronization from your device.

1. Connect your device to your computer.
2. On your device, tap  → **ActiveSync**.
3. Tap **Sync** to begin synchronization.



NOTE: In addition to the USB cable, you can also synchronize by using Bluetooth. (See the ActiveSync or Windows Mobile Device Center help on your computer.)

Synchronizing Directly with Exchange Server



You can increase your productivity when you are away from the office by setting up an account to access e-mail, voice mail, calendar, and contact information from a Microsoft Exchange Server.

Exchange Server, the Microsoft messaging and collaboration server, lets you send and receive your work e-mail, calendar updates, voice mail, and contact information while traveling.

To set up the account, you must obtain the name of the Exchange Server and the server domain from the wireless service provider or system administrator. You must also know your Exchange user name and password.

1. Make sure your device is not connected to your computer.
2. On your device, tap  → **ActiveSync**.
3. Tap  → **Add Server Source**.
4. Follow the on-screen instructions to complete the setup.
5. Connect your device to the Internet for synchronization with Exchange Server.

NOTE:

- If a message pops up asking you to accept security policies for synchronization with Exchange Server, tap **OK** to proceed.
- You may be prompted to set the password for device lock. You can set a longer period of time (maximum of 24 hours) before your device prompts you to enter the password again.
- To disable the Direct Push feature, tap  → **ActiveSync**. Tap  → **Options**, uncheck the **E-mail** item and then tap **ok** to save the changes.

Chapter 7

Getting Connected

This chapter tells you how you can get your device connected through a variety of ways.

Types of Connections

Your device can connect to the Internet, to your computer, and to other devices and services.

Your device has two groups of connection settings: **My ISP** and **My Work Network**. My ISP settings connect your device to the Internet, and My Work Network settings connect to any private network, such as an intranet that you use at work.

The following types of connections are available on your device:

- **Cellular (GPRS)** is a long-distance wireless data connection that is available through some mobile service operators.
- **Dial-up** lets you access the Internet or a corporate network by dialing a phone number.
- **Wi-Fi** lets you wirelessly connect your device to the Internet through access points that can be up to 30 meters (about 100 feet) away.
- **Bluetooth** lets you create a temporary wireless network that can link up to eight devices that are within 10 meters (about 33 feet) of one another.

- **USB** is a wired connection between your device and a computer for synchronizing data or surfing the Internet. (See “ActiveSync” in Chapter 6 for information.)

Using Cellular Connection


Models supporting mobile phone functions allow you to access the Internet using the mobile network.

Setting up a Cellular (GPRS) Connection

NOTE: You must subscribe to GPRS service with your mobile operator.

In most cases, your cellular (GPRS) connection will be preconfigured by your cellular service provider. You will not have to set up a GPRS connection or change your GPRS settings.


If you do have to set up a GPRS connection, you must obtain the settings from your mobile operator before you start this procedure.

1. Tap  → **Settings** → **Connections** → **Connections**.
2. In either group, tap **Add a new modem connection**.
3. In the **Enter a name for the connection** field, enter a name for the connection.
4. In the **Select a modem** field, select **Cellular Line (GPRS)**, and then tap **Next**.
5. Enter the access point name provided by your mobile operator, and then tap **Next**.
6. Enter your user name and password, and then tap **Finish**.

Setting up a Dial-up Connection

NOTE: Depending on your wireless service provider, dial-up connections may not be supported on your device.

With dial-up, your service provider gives you a phone number that you dial in order to connect your device to the Internet.


1. Tap  → **Settings** → **Connections** → **Connections**.
2. In either group, tap **Add a new modem connection**.
3. In the **Enter a name for the connection** field, enter a name for the connection.
4. In the **Select a modem** field, select **Cellular Line**, and then tap **Next**.
5. Enter the phone number provided by your service provider, and then tap **Next**.
6. Enter your user name and password, and then tap **Finish**.


Using WiFi

As long as you are in a wireless LAN (WLAN) environment, you can connect to the network without physical cables.

Switching On or Off the Wi-Fi Radio

By default, the Wi-Fi radio is switched off. To switch on or off the Wi-Fi radio:

1. Tap  → **Settings** → **Connections** → **Wireless Manager**.
2. In the Wireless Manager screen, tap **Wi-Fi** to change the Wi-Fi radio status.

When switched on, your device will display the word **Available** if wireless networks are detected. The  icon appears in the navigation bar.


If you have previously connected to a wireless network, your device will try to connect to the same network and display the name of the network after the connection.




3. Tap .


Connecting to a Wireless Network

1. Switch on the Wi-Fi radio. (See “Switching On or Off the Wi-Fi Radio” previously.)
2. Your device will detect available Wi-Fi networks. When detected, the **Notification** soft button appears in the toolbar. Tap **Notification** to see the network list.
3. Select the network you want to connect to, and tap **OK**.
4. Select to connect to the Internet or the private network, and then tap **Connect**.
5. If the selected network requires a network key, enter the key and tap **Connect**.

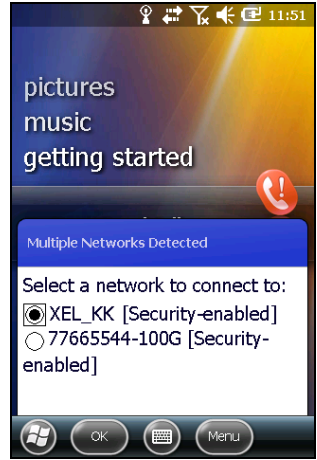


The  icon appears in the navigation bar.

NOTE:

- You can also search for a network to connect by tapping  → **Settings** → **Connections** → **Wi-Fi**.
- Once you have connected to a network, the shortcut is created in Settings. To change the network settings, tap  → **Settings** → **Connections** → **Wi-Fi**. Tap the desired network and change the settings.
- When you have finished using the wireless network, end the Wi-Fi connection by switching off its radio. Leaving the radio on will consume more power.

Using the Bluetooth Function


NOTE:


- Getac does not guarantee the product's compatibilities with the Bluetooth headsets/devices from all manufacturers.
- To know the Bluetooth profiles that your device supports, tap  → **Settings** → **Bluetooth** → **About** → **Profiles**.


Your device incorporates the Bluetooth capability. Bluetooth technology is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 meters (30 feet) without requiring a physical connection.


Switching On or Off the Bluetooth Radio

By default, the Bluetooth radio is switched off. To switch on or off the Bluetooth radio:


1. Tap  → **Settings** → **Connections** → **Wireless Manager**.
2. In the Wireless Manager screen, tap **Bluetooth** to switch on or off the radio.

When switched on, the  icon appears in the navigation bar.

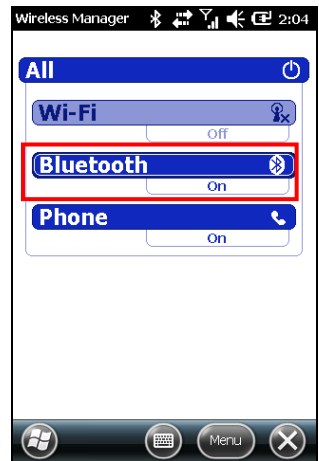


- For other devices to detect your device, tap **Menu** → **Bluetooth Settings** → **Discoverable** and select an option.
- Tap .


NOTE: When not using the Bluetooth function, switch off the Bluetooth radio. Leaving the radio on will consume more power.

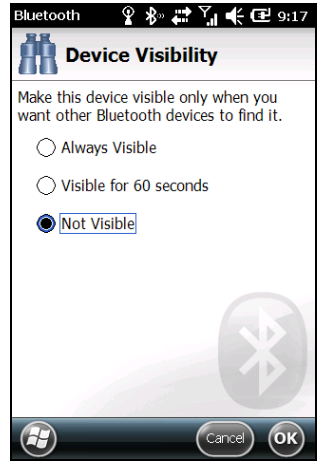


Using Bluetooth Manager

The Bluetooth Manager allows you to use and manage Bluetooth profiles of your device. Tap  → **Settings** → **Bluetooth** to access Bluetooth Manager.


Use the **Settings** page to add a device and set up Bluetooth capabilities.

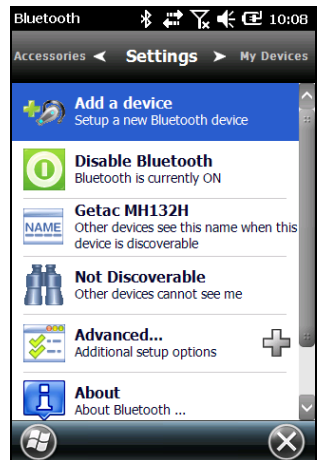

Use the **Accessories** page to perform tasks as listed.

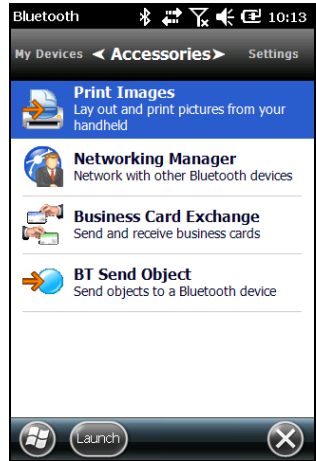

The **My Devices** page lists your paired devices. You can quickly reconnect to a device.

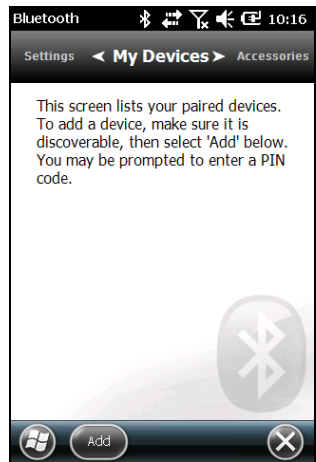


Creating a Bluetooth Partnership

A partnership is a relationship that you create between your device and another device with Bluetooth capabilities to help exchange information in a secure manner. Creating a partnership involves entering the same Bluetooth passcode on both devices. Once a partnership is created, your devices need only have the Bluetooth function switched on to exchange information; they do not need to be visible.

1. Make sure that the two devices are switched on, visible, and within close range.

2. Tap  → **Settings** → **Bluetooth**.

– or –

Tap the navigation bar and . Then tap **Bluetooth Manager** in the popup window.

3. Tap **Add a device**

4. Select a device type and tap **Continue**.



5. Your device searches for Bluetooth devices and displays the result on the screen.

Tap the device to connect.

6. Enter an alphanumeric passcode between 1 and 16 characters as the passkey, and tap **OK**.


7. Enter the same passkey on the other device.

8. Tap **Done**.

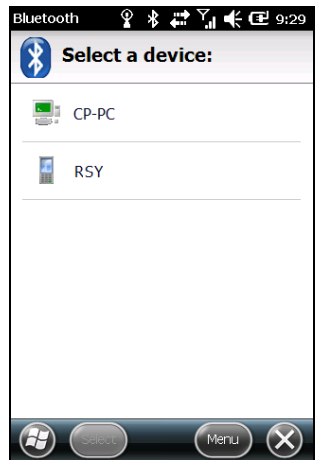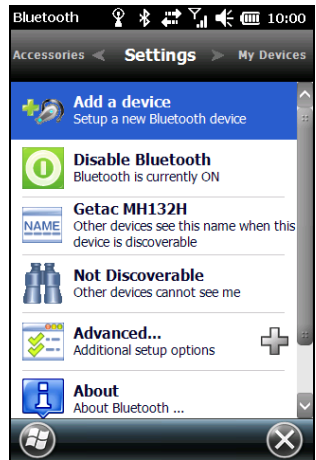

Sending Files via the Bluetooth Function

1. Switch on the Bluetooth radio. (See “Switching On or Off the Bluetooth Radio” previously.)
2. From the program, tap and hold the item you want to beam, such as an appointment in Calendar, a task in Tasks, a contact card in Contacts, or a file in File Explorer.
3. Tap **Send via Bluetooth** in the shortcut menu.
4. Your device searches for other devices with Bluetooth capabilities within close range, and displays them in the list. Tap the device to which you want to send the item.

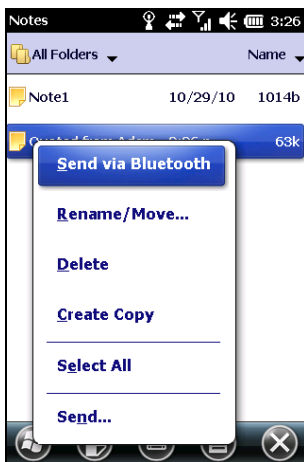

Chapter 8

Troubleshooting and Maintenance

This chapter gives solutions to common device problems you may encounter. It also provides guidelines on taking care of your device.

Resetting Your Device

Occasionally, you may need to reset your device. For example, you should reset your device when it stops responding; or appears to be “frozen” or “locked up.” To reset your device:

1. Remove the battery cover.
2. Firmly press the reset switch with a small rod. Your device should restart.



3. Replace the battery cover.

Restoring Factory Default State

In some cases, you may need to restore your device to the factory default state by clearing the memory from your device. For example, you should clear the memory:

- When your device does not respond after being restarted.
- When you forget your password.

Clearing the memory means all data you have entered in your device's memory, including all files, system settings and additional programs you have installed, will be erased. (Programs installed to ROM at the factory are not affected.)

CAUTION: To ensure the integrity of your data should it be necessary to clear the memory, you are advised to regularly back up your data.


Follow this procedure to clear the memory from your device:


1. Remove the battery and then replace it.
2. Press and hold the Send and End buttons, and then press the power button. Release all three buttons when the device vibrates.
3. Your device turns on. The words "Clean Boot" appears on the upper left corner of the screen.
4. Tap the screen to set up your Windows® Phone.

Troubleshooting

NOTE: If you encounter a problem you cannot solve, contact your dealer for assistance.

Problem	Solution
Power does not switch on when using battery power.	The remaining battery power may be too low to run your device. Charge the battery.
Screen responds slowly.	Make sure that your device is not running out of battery power. If the problem still persists, restart your device.
Screen freezes.	Restart your device.
Cannot establish a connection with a computer via USB.	Make sure that your device and your computer are both switched on before trying to establish a connection.
	Make sure that the cable is securely plugged into the USB port on your computer and on your device. Connect the USB cable directly to your computer—do not run the cable through a USB hub.
	Restart your device before connecting the cable. Always disconnect your device before you restart your computer.
	In some specific cases, your device may experience connection problems when it is connected to a Windows computer running

	ActiveSync. To resolve the problems, please tap  → Settings → Connections → USB to PC , and then clear Enable advanced network functionality .
--	---

Problem	Solution
A warning message of not enough memory appears.	Delete files you no longer need.
	Remove programs you no longer need.
	Delete all files and clear history in Internet Explorer.
	Stop programs you are not currently using. To check the state of your active programs, tap  → Settings → System → Task Manager .
	Restart your device.

Caring for Your Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.

- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow your device to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void the warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

Chapter 9

Regulatory Information

NOTE: Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

Regulations Statements

European Notice

Products with the CE marking comply with Radio & Telecommunication Terminal Equipment Directive (R&TTE) (1999/5/EEC), the Electromagnetic Compatibility Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) – as amended by Directive 93/68/ECC – issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

EN301489-1: Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN301489-17: Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

EN55022: Radio disturbance characteristics

EN55024: Immunity characteristics

EN6100-3-2: Limits for harmonic current emissions

EN6100-3-3: Limitation of voltage fluctuation and flicker in low-voltage supply system

EN60950 / IEC 60950: Product Safety

The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Safety Precautions

- Prolonged listening of music in maximum volume can damage the ears.
- The use of headphones other than those recommended/supplied can cause hearing impairment due to excessive sound pressure.

About Charging

- Use only the AC adapter supplied with your device. Use of another type of AC adapter will result in malfunction and/or danger.
- Use only the car charger supplied by the manufacturer. Use of another type of car charger will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with "LPS," "Limited Power Source," and output rated + 5 V dc / 1.0 A.
- Use a specified cradle approved by the manufacturer.
- Use a specified battery in the equipment.

About the Charger

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects

that will reduce cooling. Do not use the charger while it is inside a carrying case.

- Connect the charger to a proper power source. The voltage and grounding requirements are found on the product case and/or packaging.
- Do not use the charger if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

About the Battery

- Use a specified charger approved by the manufacturer.
- Do not mutilate, puncture, or dispose of battery in fire. The battery can burst or explode, releasing hazardous chemicals.
- Important instructions
 - ✓ **Caution:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - ✓ Replace only with the same or equivalent type recommended by the manufacturer.
 - ✓ The battery must be recycled or disposed of properly.
 - ✓ Use the battery only in the specified equipment.

About the Radio Frequency Exposure

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use at the ear is 0.588 W/kg and when worn on the body, as described in this user guide, is 0.508 W/kg. (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **QYLMH132**.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.