

OLYMPIA® OL5800

OWNER'S MANUAL

OLYMPIA 

Copyright

© 2003, Wave Industries Ltd. All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

First Edition: September 2003

Trademark Information

Olympia[®] is a registered trademark of Olympia International Holdings Ltd.

Disclaimer

The information contained in this document is subject to change without notice. Wave Industries makes no warranty of any kind with respect to this information. Wave Industries shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

Printed in China

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	4
SAFETY INSTRUCTIONS FOR BATTERIES.....	5
1 Cordless Phone Features.....	6
2 Caller ID Features.....	6
3 Set Up.....	7
4 Olympia OL5800 – Quick Programming Guide	7
5 Installation and Charging of the Battery Pack	8
6 Power Up.....	10
7 Answering Calls	10
8 Make a Call.....	10
9 Terminate a Call.....	10
10 Short Paging (To Locate the Handset).....	10
11 Long Paging.....	11
12 Selecting System Language.....	11
13 Setting Local Area Code.....	11
14 Setting Tone/Pulse (Preset to Tone).....	11
15 Setting RINGER ON/OFF.....	12
16 Setting Display Contrast.....	12
17 Caller ID Operation.....	12
18 Visual Message Notification.....	17
19 Speed Dial Memory (0...9).....	18
20 Pre-dialing (Handset OFF).....	20
21 Redial with Handset OFF.....	21
22 Dialing Digits.....	21
23 Call Timer.....	21
24 Battery/Voltage Low Detection.....	23
25 Mute.....	23
26 Changing Volume.....	23
27 Translation Table.....	24
28 Consumer Information (including Warranty)	25

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlet extension cords, as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock, do not disassemble this product. Instead, when some repair work is required, take the unit to a qualified technician. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power supply cord or plug is damaged or frayed.
 - b) If liquid has been spilled into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e) If the product has been dropped or cabinet has been damaged.
 - f) If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAFETY INSTRUCTIONS FOR BATTERIES

Safety Instructions for Batteries Handset Battery Pack

CAUTION:

Danger of explosion if battery is incorrectly replaced. Use only an Olympia Phone approved battery pack in the handset of your OL5800 Cordless Telephone. To reduce the risk of fire or injury, always do the following when replacing, discarding, or charging battery. When handling the batteries, be careful not to short the battery with conducting materials such as rings, bracelets, and keys. The Battery or conducting material may overheat and cause burns. Use only the following type and size of battery pack:

FOR HANDSET UNIT:

GP60AAA3BMX 3.6V 600mAh GPI INTERNATIONAL LIMITED



CONTAINS NICKEL-METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.

Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.

Charge the batteries provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

Observe proper polarity orientation between the battery(ies) and battery charger.

Do not mix old and new batteries in this product.

Do not mix batteries of different sizes or from different manufacturers in this product.

SAVE THESE INSTRUCTIONS

1 Cordless Phone Features

1. 5.8GHz/900MHz, 40 channel auto scanning operation
2. Manual channel selection
3. 65536 Random combinations of security codes
4. Last number redial (32 digits max.)
5. Power saving in standby mode. (handset)
6. Page in base unit to locate the handset (short and long page)
7. Temporary touch tone (pulse to tone dialing)
8. Tone / Pulse dialing mode selection in handset
9. Ringer ON /OFF selection in handset
10. 10 number speed dial memory in handset (up to 16-digits / phone no.)
11. Flash key for call waiting and call transfer - **600ms.**
12. 3 level Volume control
13. Pause key (pause time is 4 seconds)
14. Low battery warning tone
15. Backlit LCD
16. Auto Answer
17. Any key answer
18. Direct number dial out
19. Memory direct dial out
20. Redial & CID transfer to memory (up to 16 digits long)

Auto Standby	Allows the user to hang up by simply returning the handset to the base.
Auto Answer	Allows the user to answer a call by just removing the handset from the base, so you don't have to waste time pushing buttons. The 'Talk' key will be disabled for 5 seconds to avoid accidental hang up.

2 Caller ID Features

1. Type I + Type II (call waiting)
2. 64 name and number caller ID
3. 3-line display
4. Total call counter
5. New call LED indicator on handset
6. Repeat call indication (LCD icon)
7. 3-language operation (English, Spanish & French)
8. Scroll review of CID records
9. Selective erase / 'Erase all' function
10. Real time clock (date & time)
11. Private/ out-of-area indication
12. LCD contrast control **6 levels, default at 3.**
13. Call back (CID dial back)
14. Battery low indication ('Battery Low' text display on the 3rd line)

3 Set Up

Connect the power supply to an electrical outlet and base unit.

Remove the handset battery cover and connect the battery back. Replace cover.

Charge the handset for at least 10 hours before using your phone.

Connect the modular phone cord to a live phone jack and the base unit.

4 Olympia OL5800 – Quick Programming Guide

Initial Setup (or any time the phone is powered up)

SET LANGUAGE will appear on the display.

Press #. **ENGLISH** or **SPANISH** or **FRENCH** is displayed. Press

* or # to set the desired language; then press **MEM**.

AREA CODE ? is now displayed. If you live in a 7 digit local dialing area, enter your Area Code. If you live in a 10 digit area for local dialing, enter **000** for the Area Code, then press **MEM**.

SET T/P? T (Set Tone/Pulse) is now displayed. Press * or # to change the dialing mode; then press **MEM**.

RINGER ON (or **OFF**) is now displayed. Press * or # to change the ringer mode; then press **MEM**.

CONTRAST is displayed. Press * or # to adjust the display contrast; then press **MEM**.


PROGRAMMING IS COMPLETE!!

Programming after Initial Setup


With the Handset in the idle (Off) mode, press and hold **MEM**. **SET LANGUAGE** will appear on the display. Follow the steps listed above, or press **MEM** repeatedly to find the feature you wish to program.

5 Installation and Charging of the Battery Pack


1. Open the battery compartment by sliding the cover down.
2. Plug the Battery Pack connector into the Handset battery socket. Place the battery pack and wires in the compartment.
3. Close the battery compartment.
4. You may change the face panel with one of the color options provided.

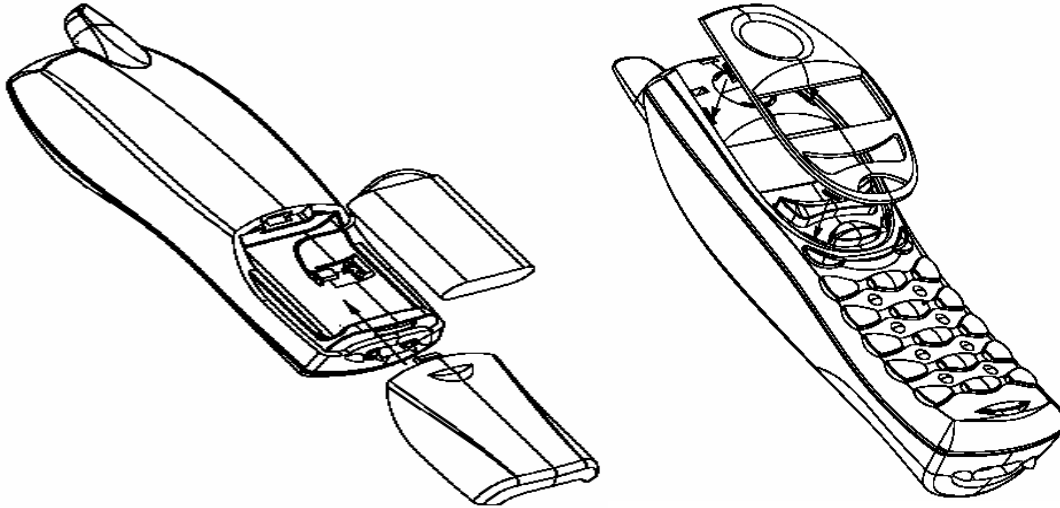

5. Choose the appropriate mounting bracket. The smaller bracket is for desk or countertop installations. The larger bracket is for wall mounting. You must use one of these brackets. If you are using the wall mounting bracket, thread the telephone cord and DC power cord through the large opening in the bracket. Plug the two cords into the corresponding jacks on the bottom of the Base.
6. Snap the bracket into place on the back of the Base. If you are using the desk top bracket, run the two cords through the channel at the back of the bracket. If you are wall mounting the Base, carefully line up the slots on the wall mount bracket with the studs on the telephone wall plate, and carefully mount the telephone on the wall.

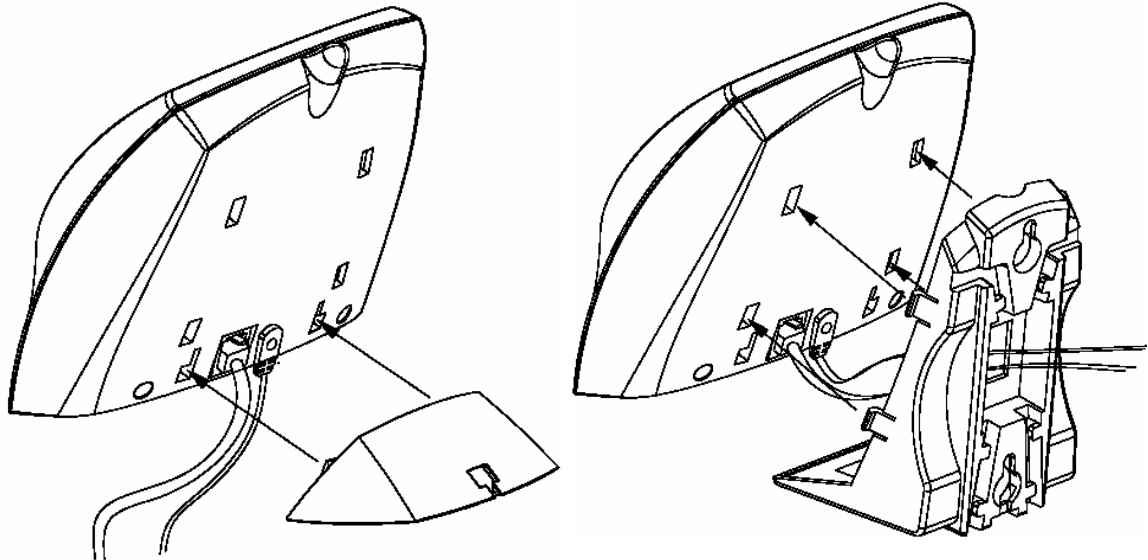

7. Connect the telephone line cord to the telephone jack, and the power supply to a live power outlet. Make sure you are not using an outlet controlled by a switch.

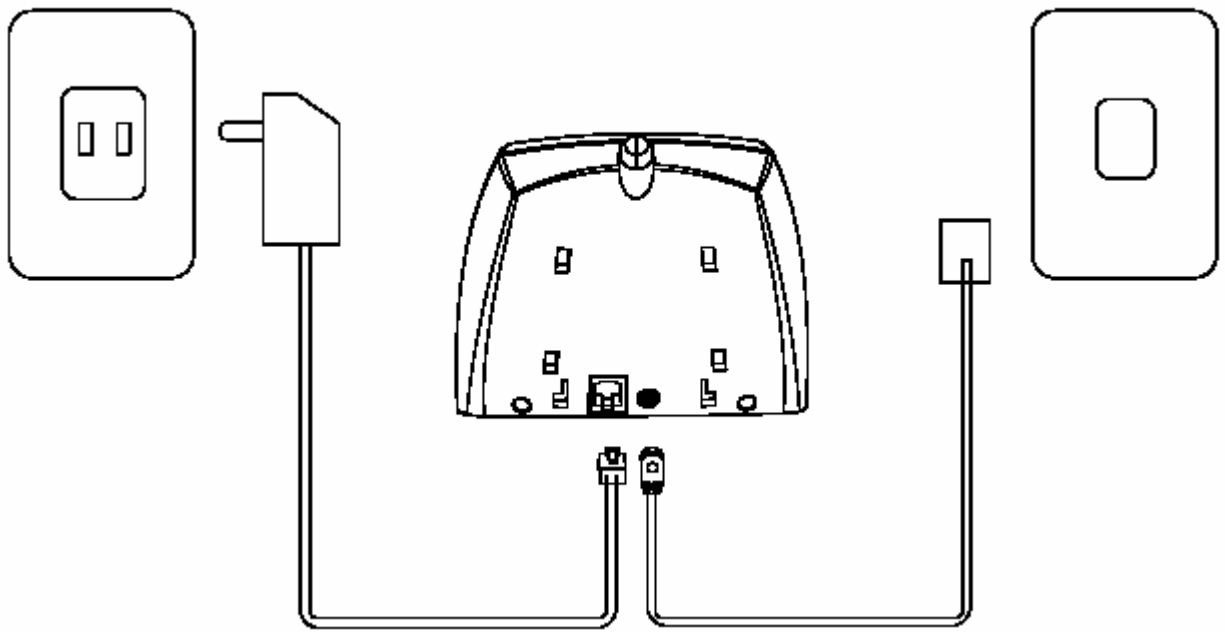

8.

Place the Handset in the Base. The Handset and Base communicate with each other automatically. This process may take a minute.

9. Leave the Handset in the Base for 10 hours so that the battery pack is fully charged.
10. The **CHARGE** indicator on the Base glows when the Handset is charging.

Maximum talk time on a full charge is 4 hours. Maximum standby time on a full charge is 5 days. Your results may be somewhat less than these maximums.

6 Power Up

1. After power up, the handset should be placed in the cradle of the base unit for setting a new security code for communication.
2. Each time the handset is placed on the cradle of the base unit, the base unit will generate and transmit a new security code to the handset unit through the RF Link.
3. The completion of a successful security code transfer operation will be indicated by a flash of the 'In Use' LED on the base unit and a beep generated by handset.
4. In the event the transfer operation is not successful, please try these steps again.

7 Answering Calls

1. The incoming call is signaled by a ringing sound from the handset's buzzer and by the blinking of the base In Use/Charge LED. The 'New Call' LED blinks during ringing.
2. When the handset is in the cradle, simply pick up the handset from the cradle of the base to talk. The 'TALK' button will be disabled for 5 seconds.
3. When the handset is away from the base unit, press the 'TALK' button on the handset unit. The 'In Use / Charge' LED turns on after the connection is successful.
4. If the communication link cannot be established within **8 seconds**, three error beeps will be heard from the handset to indicate communication has failed.

8 Make a Call

1. Each new call must begin by pressing the 'TALK' button on the handset. It will scan for a clear channel of communication. At the same time, 'TALK' will be shown on LCD display.
2. If the communication Link cannot establish within **8 seconds**, there error beeps will be heard from the handset to indicate the communication has failed.

9 Terminate a Call

1. To terminate a call, press the 'TALK' button; -OR-
2. Place the handset in the cradle; the call is then terminated.
3. Your handset will emit a error beep if it cannot receive an acknowledgement from the base unit. In this case, put the handset back in the base cradle to make sure the call has been terminated.

10 Short Paging (To Locate the Handset)

1. Press the 'PAGE' key on the base unit. 'PAGING' will be shown on the LCD display and the handset will emit 3 short beeps then followed by a 1 second pause, followed by 3 short beeps.

11 Long Paging

1. Press and hold down the '**PAGE**' key on the base unit. '**PAGING**' will be shown on the LCD display and your handset will beep. If you hold the button for 5 seconds, the page will be extended to 60 seconds.
2. Press any key on handset to stop paging.

12 Selecting System Language

SET LANGUAGE

1. There are 2 ways to access 'SET LANGUAGE' mode:
 - 1) 'SET LANGUAGE' will appear on the LCD when your phone is charged for the first time or powered up after it has been without power for an extended period; -OR-
 - 2) During idle (on hook) mode, press and hold '**MEM.**' until 'SET LANGUAGE' appears.
2. Setup mode begins with language selection. Your phone offers 3 languages- English, French and Spanish. Press '#' or '*' to choose the desired language and then press the '**MEM.**' key to confirm. After confirmation, '**Area Code ?**' will be displayed.

13 Setting Local Area Code

0 0 0
AREA CODE ?

1. If you dial **7 digits** to make a local call, you need enter your 3 digit area code. The digits will shift to the left one by one as you enter them. If you dial **10 digits** to make a local call, enter '**000**' (if it is not already programmed for '000').
2. Press '**MEM.**' key to confirm. After confirmation, '**SET T/P ?**' is displayed.

14 Setting Tone/Pulse (Preset to Tone)

SET T/P ? T

1. The current setting (**T** or **P**) is displayed.
2. Press '#' or '*' to select the desired setting, and the display will update the current setting: 'SET T/P? T' → 'SET T/P? P' → 'SET T/P? T'.....
3. Press '**MEM**' to confirm. After confirmation, you will enter '**RINGER**' setting.

15 Setting RINGER ON/OFF



1. The current RINGER ON/OFF setting is displayed.
2. Press '#' or '*' button to select the desired setting, and the display will update to the current setting: 'RINGER ON' → 'RINGER OFF' → 'RINGER ON'.....
3. Press '**MEM**' key to confirm. After confirmation, you will enter **CONTRAST** setting.


16 Setting Display Contrast



1. Press '#' or '*' to set the desired contrast.
 2. Press '**MEM**' key to confirm. After confirmation, the display returns to standby.
- *During programming, Press 'CHAN' to return to idle mode. Or, if no key is pressed for 20 seconds, you will be returned to idle mode.*

17 Caller ID Operation

Display :

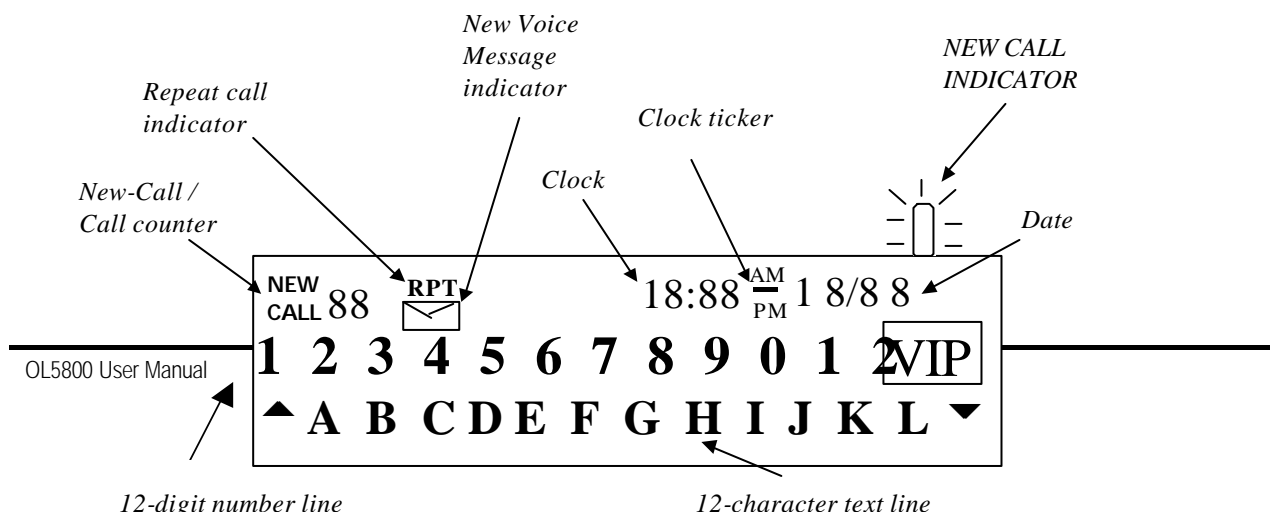

The Handset Display	What is its purpose?	
12-character text line	For display of callers' name, system prompts (CID and phone), call timer, dial number.	
12-digit number line	1. Display caller's number (CID), or 2. Display dialed digits (phone).	
New-call / Call counter	Shows the amount of calls / new calls in standby mode Example: # of old calls: CALL 18 # of new calls: NEW CALL 9	
Repeat Call icon	Lights on to indicate that the displayed call arrived more than once.	
Clock	1. Shows the real time clock (AM/PM format), or, 2. the time stamp of a CID record.	
Clock ticker	Blinks when real time clock is being displayed.	
Date	1. Shows the date (month/date format), or, 2. the date stamp of a CID record.	

CID related button	Descriptions	Remarks
DEL	1)Erase a single CID record in CID browser. 2) Erase all CID records in stand-by.	
'#' and '*'	Scroll up and down your CID records.	
CHAN.	When on hook, returns screen to idle mode.	
CALLS	Redial CID number in CID browser.	


NEWCALL indicator – Located at the top right corner of the handset, a blinking red light will alert you to new/unread Caller ID records stored in memory.

Note1: All display illustrations in the document will be in English. However, the actual appearances of the screens will vary according to the language selection during start-up (English, French or Spanish).

Note2: If the unit receives more than 64 calls, the oldest CID information will be erased except VIP calls.

1. RECEIVING CALLS

- i. When Caller ID is activated, the Telephone Company sends the caller's telephone number (and name, if available) and the call's date and time between the first and second rings. The device receives and displays this information for each call and updates the display with the current date and time. The NEWCALL indicator will flash.



NEW CALL	2	10:00 AM	1 1/0 1
	1 2 3 -- 4 5 6 -- 7 8 9		
	S M I T H J O H N		

- ii. The display also indicates if caller information is not available or if the sender intentionally blocks the number.

NEW CALL	1	10:00 PM	1 0/3 0
	NO CALLER ID		




- iii. After 20 seconds, the display will return to standby mode and shows 'NEW CALL XX where XX is the number of unread calls. NEW CALL LED indicator blinks until the user reviews all new Caller ID / Call Waiting ID records.

Note: If the received CID number is 10 digits long, and the first three digits match with the area code programmed by the user, the LCD shows the last 7 digits only (area code will be omitted). See **Setting local area code**.

2. REVIEWING NEW CALLS


- iv. In standby mode, with the 'NEW CALL' indicator flashing, pressing '*' or '#', the LCD displays the latest new call information.

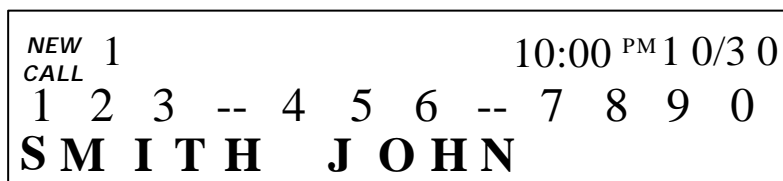

- v. Repeatedly press '*' or '#' button to review all new call information in the order of receipt until the LCD displays 'END NEW CALL' and the 'NEW CALL' indicator stops blinking.



- vi. If the received call information is same as any of the existing new calls, the 'RPT' icon will be on to indicate REPEAT CALL. The most recently arrived CID will be saved attached with a new date / time stamp. The previously arrived record will be deleted. After you review this call, the 'RPT' icon will turn off.
- vii. If you do not review other calls for 20 seconds, the time and date will be displayed, and the call counter will show the total number of new calls including those already reviewed.

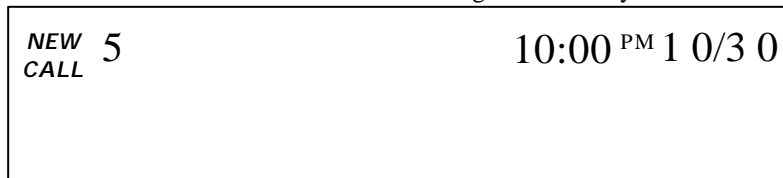

- * Press '**CHAN.**' to return to standby (idle) mode.
- * No activity for 20 seconds will return the display to standby mode.

3. REVIEWING OLD CALLS

- viii. In standby mode, press '*' or '#' to review old call information from the oldest to the newest ('*' button) or from the newest to oldest ('#' button).

CALL	1											10:00 PM	1 0/3 0
1	2	3	--	4	5	6	--	7	8	9	0		
S	M	I	T	H		J	O	H	N				

- ix. When the end of the list is reached, 'END' is displayed.

--	E	N	D	--
----	---	---	---	----

- x. If there are no records in memory, 'NO CALLS' is displayed.

--	N	O		C	A	L	L	S	--
----	---	---	--	---	---	---	---	---	----

- * Press 'CHAN.' to return to standby (idle) mode.
- * No activity for 20 seconds will return the display to standby mode.

4. DELETE INDIVIDUAL CALL

- xi. When you review Caller ID information, you can delete it from memory. Press '#' or '*' until you see the call record you want to delete.

CALL	1											10:00 PM	1 0/3 0
1	2	3	--	4	5	6	--	7	8	9	0		
S	M	I	T	H		J	O	H	N				

- xii. Press 'DELETE'; the LCD displays 'ERASE?'.

- xiii. Press 'DELETE' again to confirm deletion.

- xiv. Press any button to cancel the deletion. Press '*' or '#' to return to standby mode. If there are no records, 'NO CALLS' will be displayed.

NEW	CALL	1										10:00 PM	1 0/3 0
1	2	3	--	4	5	6	--	7	8	9	0		
S	M	I	T	H		J	O	H	N				

- * Press any button to cancel the deletion.
- * No activity for 20 seconds, it will return the handset display to standby (idle) mode.

5. DELETE ALL CALLS

- xvi. If the new call information has been reviewed, you can erase all call records. If there are any new calls in call list, 'ERASE ALL' will not work.

xvii. In the standby (idle) mode, press and hold **'DELETE'** until the LCD displays **'ERASE ALL?'**.

xviii. Press **'DELETE'** again to confirm deletion, and return to standby mode.

* You can press **'CHAN.'** to return to standby mode.

* Press any button to cancel the deletion.

* No activity for 20 seconds will return the handset display to standby (idle) mode.

6. SET VIP CALLS (assigning VIP designations to CID records)

The user can create VIP call records. When a VIP call is received, 4 beeps will be heard between rings, and the **VIP** icon will be displayed.

xix. Press **'#'** or **'*'** button to select the call which you want to designate **'VIP'**.

xx. Press and hold **'CALLS'** for 2 seconds; the **VIP** icon turns on.

xxi. Press and hold **'CALLS'** for 2 seconds; the **VIP** designation will disappear.

* Press **'CHAN.'** to return to standby (idle) mode.

* No activity for 20 seconds will return your handset to standby mode.

7. Dialing from Caller ID

You can dial a phone number stored in Caller ID memory.

xxii. In idle mode, press **'#'** or **'*'** to select the CID record you want to dial.

xxiii. If the display phone number is in the correct format, press **'TALK'** to dial.

1. If the display is showing 10 digits in second line, such as **'123-456-7890'**.

1) Press **'CALLS'**; it will change to 11 digits: **'1123-4567890'**.

2) Press **'CALLS'** again; it will change to 7 digits: **'456-7890'**.

3) Press **'CALLS'** again; it will change to 8 digits: **'1-456-7890'**.

4) Press **'CALLS'** again; it will change to 10 digits: **'123-456-7890'**.

5) Press **'CALLS'** again to repeat the cycle above.

2. If the display is showing 7 digits in second line such as **'456-7890'**, and the area code is set as **"123"**.

1) Press **'CALLS'**; it will change to 8 digits: **'1-456-7890'**.


2) Press **'CALLS'** again; it will change to 10 digits: **'123-456-7890'**.

3) Press **'CALLS'** again; it will change to 11 digits: **'1123-4567890'**.

4) Press **'CALLS'** again; it will change to 7 digits: **'456-7890'**.

5) Press **'CALLS'** again to repeat the cycle above.

xxiv. With the correct number displayed, press **'TALK'**. The display will show **'DIALING...'**.

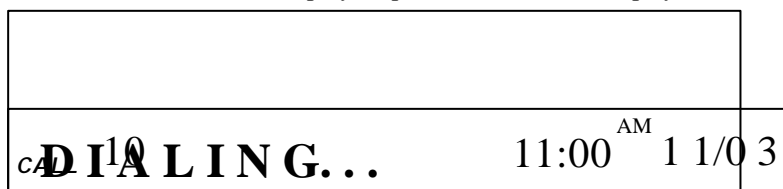

xxv.



left on the display.

aled digits appear from right to

- * While in CID review mode, you can press '**CHAN**' to return to standby (idle) mode.
- * No activity for 20 seconds will return the display to standby mode.

8. Save CID to Speed Dial memory

- xxvi. In idle mode, press '#' or '*' to select the Caller ID number that you want to save.
- xxvii. Press '**CALLS**' to select the number format that you want to save.
- xxviii. Press '**MEM**'. The screen will display 'LOCATION ? X'.
Note: only the phone number can be saved to speed dial memory.



- xxix. Press '**MEM**' to confirm. The unit will assign the lowest available memory location. If you prefer a different memory location, press the desired location number (0-9). The display will now show 'MEM X STORED'.
WARNING: Make sure you're not unintentionally replacing a number already stored in that location!




- * You can press '**CHAN**.' to return the display to the standby (idle) mode.
- * No activity for 20 seconds will return the display to the standby (idle) mode.


18 Visual Message Notification

In conjunction with voicemail service through your local telephone service provider (subscription required), your phone can alert you to new voicemail messages by providing an envelope icon on the display. **NOTE:** most, but not all service providers can provide this notification service.

- 9. After receiving a 'new message' signal from your service provider, the envelope icon will appear, alerting you that you have new message(s).

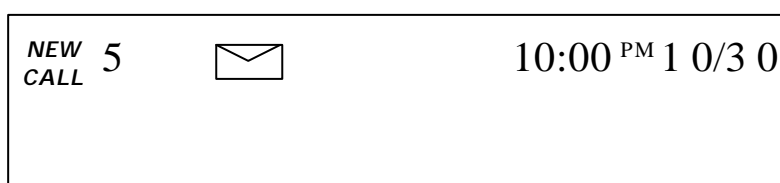


10. After reviewing all new messages, the icon will disappear.

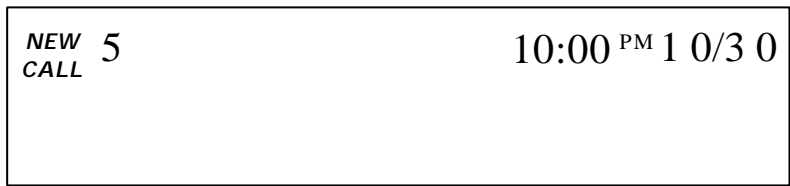

19 Speed Dial Memory (0...9)

1. Memory search

xxx. Enter memory search mode by pressing '**MEML**'. The display will show '**MEM 0**'.

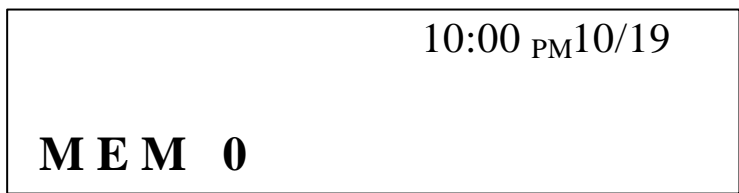


xxxi. Press '#' or '*' to search for the desired speed dial number.

xxxii. You can press '**MEML**' again to return to standby mode.


2. Memory editor

xxxiii. Enter memory search mode by pressing '**MEML**'. Press '#' or '*' to select the memory location you want to edit.

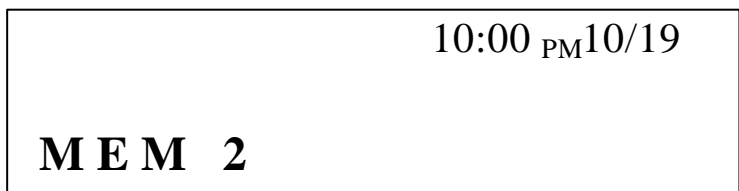

xxxiv. You can add additional digits to the existing number. As you enter numbers, the display will shift entered digits from right to left, to a maximum of 16 digits. If you try to enter more than 16 digits, an error tone will be generated.

For example, enter the digit 0:

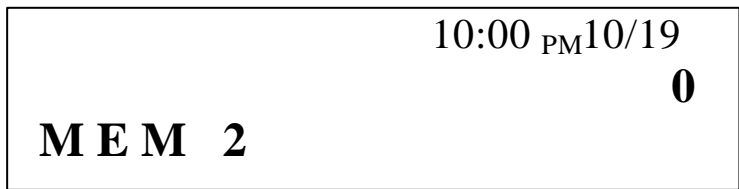

Enter the digit 9



Enter the digits 01234567899990

10:00 PM 10/19											
2	3	4	5	6	7	8	9	9	9		
0									0	1	
MEM 2											

- xxxv. If you make a mistake, press **'DELETE'** to delete the last digit entered. The display will shift entered digits from left to right-hand side.
- xxxvi. Press **'FLASH'** to clear all entered digits (including any pre-existing digits).
- xxxvii. Press **'MEM.'** to save the entered number. The display will show **'LOCATION? X'**.

10:00 PM 10/19									
LOCATION?					X				

- xxxviii. Press **'MEM.'** to confirm saving number to the displayed location; **OR** press a digit (0-9) to save the number to another memory location. The display will show **'MEM X STORED'** for 6 seconds.

3. Delete individual speed dial location

- xxxix. Enter memory search by pressing **'MEM.'** Press **'#'** or **'*'** to select the entry you want to delete.
- xl. Press **'DELETE'** to delete the entry. The display will show **'ERASE ?'**.

10:00 PM 10/19									
ERASE ?									

- xli. Press **'DELETE'** to confirm deletion, or press any key to cancel.


4. Speed Dialing with Handset OFF

- xlii. Enter memory search by pressing **'MEM.'** Press **'#'** or **'*'** to select the number you want to dial.
- xliii. Press **'TALK'**. The unit will enter TALK mode automatically. The number will scroll across the screen from right to left as it is dialed.

- *In idle mode, press **'CHAN.'** to return the display to standby.*
- *No activity for 20 seconds will return the handset to standby mode.*

5. Speed Dialing with Handset ON

- xliv. Press 'TALK' to turn the phone On. The display will show 'TALK 0:00'.

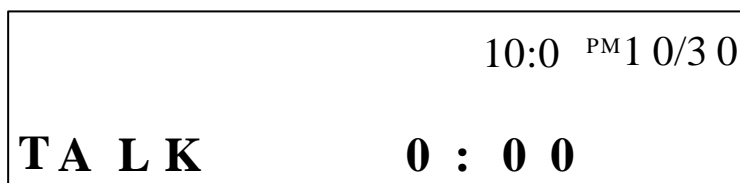


- xlv. First, press 'MEM'. Second, press the desired memory location. The phone number will scroll across the screen from right to left as it is dialed. If memory is empty, an error tone will be generated. You'll need to repeat this step in order to speed dial.

20 Pre-dialing (Handset OFF)


1. You can enter a phone number while in the standby mode. The maximum number of digits is 24. For example, enter number 0:



Enter number 1:

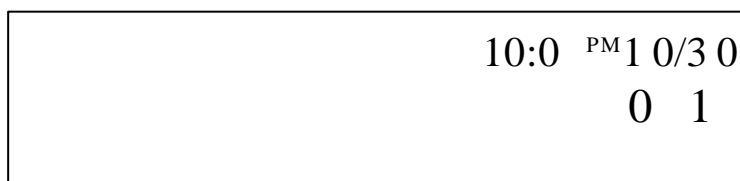

Enter number 0123456789999990

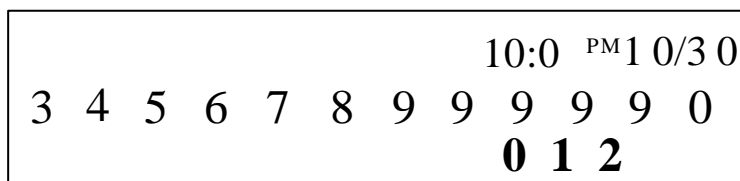

2. Press 'DELETE' to delete last entered digit. If all digits are deleted, the handset will return to standby.
3. Press 'FLASH' to clear all entered digits and return to standby mode.
4. Press 'TALK'. The unit will enter TALK mode automatically. The phone number will scroll across the screen from right to left as it is dialed.


5. Saving a number in Speed Dial memory

From the idle mode, enter the phone number (up to 16 digits), then press 'MEM'. The display will show 'LOCATION ? X'. Press 'MEM' to confirm, **OR**, press a digit button to select a different memory location. The display shows "MEM X STORED".

- *No activity for 20 seconds will return the handset to standby mode.*

21 Redial with Handset OFF

1. Press '**REDIAL**' while in standby mode. The display will show the redial number. If the number is greater than 24 digits, the display will show only the last 24 digits.
2. Use the keypad to add additional digits to the redial number.
3. Press '**DELETE**' to delete last entered digit. If all digits are deleted, it will return to standby.
4. Press '**FLASH**' to clear all entered digits and return to standby.
5. Press '**TALK**'. The unit will enter TALK mode automatically. The number will scroll across the screen from right to left as it is dialed.

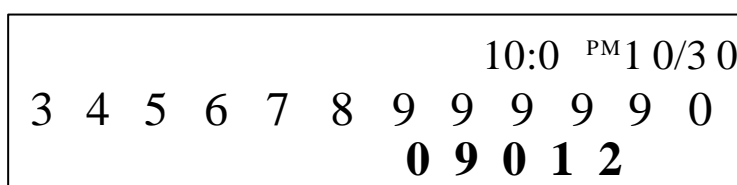

6. You can also press '**TALK**', then press '**REDIAL**' to dial the contents of Redial.
7. **Saving the contents of REDIAL to Speed Dial memory**
In idle mode, press '**REDIAL**', then press '**MEM**'. The display will show 'LOCATION ? X'. Press '**MEM**' to confirm, **OR**, press digit button to select a different memory location. The display shows 'MEM X STORED'.
 - *No activity for 20 seconds will return the phone to standby mode.*


22 Dialing Digits

Digits which can be dialed are : **0,1,2,3,4,5,6,7,8,9,*,#,PAUSE**

- '#' will be displayed as ' ' in line2, '#' in line3
- '*' will be displayed as ' ' in line2, '*' in line3
- PAUSE will be displayed as 'P', when PAUSE is encountered during dialing, a pause of 4 seconds will be generated.

23 Call Timer

1. The call timer comes up automatically when you are in TALK mode, and on the 3rd line of the display. After 10 seconds, the call timer will appear as dialing activities finishing.

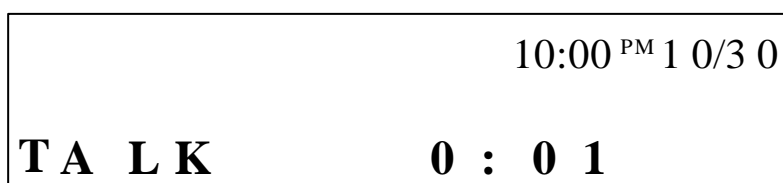

2. The call timer counts up to 999 minutes and 59 seconds. After that, the timer will show '0:00'.
3. When handset goes idle (on hook), the call timer will remain on the display for 5 seconds.

24 Battery/Voltage Low Detection

1. Battery detection is engaged all the time except during charge mode.
2. If a battery low condition is detected, then the handset will enter into battery low condition. The buzzer will beep at 10 seconds intervals. Your handset will change to 'Halt' mode immediately and continue to beep. If the handset is in TALK mode, it will change to 'Halt' mode immediately and continue to beep after the call ends. The display will show 'BATTERY LOW'.



3. Once the battery is recharged, the handset will return to normal operation.

25 Mute

1. Press '**MUTE**' to mute your microphone while in TALK (off hook) mode. Press '**MUTE**' again to return to normal, two-way conversation.

26 Changing Volume

1. You can adjust the volume level (3 levels) in talk mode. Press '**DELETE**' to increase or '**CALLS**' to decrease the listening volume while you are on a call.

27 Translation Table

		<i>ENGLISH</i>	<i>SPANISH</i>	<i>FRENCH</i>	Max. length
1.	Out of Area	NO CALLER ID	FUERA AREA	HORS ZONE	12
2.	Private Call	CID BLOCKED	LLAM PRIVADA	APPEL PRIVE	12
3.	End	-- END --	-- FIN --	-- FIN --	12
4.	End of new call	END NEW CALL	FIN LLAM NVA	FIN D'APPEL	12
5.	Erase?	ERASE ?	BORRAR ?	EFFACE ?	12
6.	Erase all ?	ERASE ALL ?	BORRAR TODO?	EFFACE TOUS?	12
7.	Error	-- ERROR --	-- ERROR --	-- ERREUR --	12
8.	No Calls	-NO CALLS-	NO LLAMADAS	AUCUN APPELS	12
9.	Dialing	DIALING ...	MARCANDO	NUMEROTATION	12
10.	Set language	SET LANGUAGE	---	---	12
11.	Set Area Code	AREA CODE ?	COD AREA ?	INDICATIF ?	12
12.	Contrast	CONTRAST ▲ ▼	CONTRASTE ▲ ▼	CONTRASTE ▲ ▼	12
13.	Battery low	BATTERY LOW	BATERIA BAJA	BAT FAIBLE	12
14.	Enter location	LOCATION ?	INTROD LUGAR	ENTRER SITUA	12
15.	Memory 3 (*) stored	MEM3 STORED	MEM3 GUARD	MEM3 GARDE	12
16.	PAGING	PAGING	LOCALIZAR	PRE'VENIR	12
17.	RINGING	RINGING	TIMBRAR	SONNER	12
18.	TALK	TALK	HABLAR	PARLER	6
19.	TALK MUTE	TALK MUTE	HABLAR	PARLER MUTE	12
20.	SET T/P? P	SET T/P? P	?PONER T/P? P	REGL T/P? P	12
21.	SET T/P? T	SET T/P? T	?PONER T/P? T	REGL T/P? T	12
22.	RINGER ON	RINGER ON	ENCEND SENAL	SON. ACTIVEE	12
23.	RINGER OFF	RINGER OFF	APAGAR SENAL	SON. ETEINTE	12

28 Consumer Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back of this equipment is a label that contains, among other information, a product identifier in the format US: DDKW900BOL5800.

If requested, this number must be provided to the telephone company.

An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details in section (2).

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US: DDKW900BOL5800. The digits represented by 00 are the REN without a decimal point (e.g., 03 is a REN of 0.3). The REN is separately shown on the label too.

If this equipment OL5800 causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

This equipment is hearing aid compatible.

[This product meets the applicable Industry Canada technical specifications.](#)

NOTICE:

1) If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this OL5800 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2) According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio TV technician for help.

Should you experience trouble with this equipment, please contact US Returns Center, Wave Industries, for assistance. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

STOP!!!! If you are having trouble with your product or have any questions, **DO NOT** return it to your dealer. Call our **Help Desk** at **1-866-537-0384** for assistance.

Warranty

This warranty covers any defect in material or workmanship for a period of one year from date of purchase. At our option we will repair or replace your unit.

To enforce warranty call Wave Customer Service at **866.537.0384** for a return authorization. Upon receipt of authorization pack your unit properly including all cables and accessories included with your original purchase. Include in the packaging a copy of the original sales receipt or other evidence of date of original purchase. Print your name and address, along with a description of the defect and include this in the package. Please include payment for any service or repair not covered by warranty, as determined by Wave Industries. **WAVE INDUSTRIES WILL NOT HONOR ANY RETURNED PRODUCT THAT IS SHIPPED WITHOUT THE PROPER DOCUMENTATION, WHICH INCLUDES A VALID RETURN AUTHORIZATION NUMBER CLEARLY PRINTED ON THE OUTSIDE OF THE PACKAGE.**

Warranty does not cover batteries, damage from misuse or neglect, or acts of nature (lightning, floods, power surges, etc.) It also does not cover units, which have been modified or incorporated into other products, units which have been serviced by a facility not expressly authorized by Wave, or products purchased more than 12 months previous.

This warranty gives you specific rights. You may also have other rights which vary from state to state.