

# RangeGuard Operator's Guide



## Rangeguard Operator's Guide

Issue Date: 21/04/2015

Document No: 94-0447-4-A

Serial No:

Sensor Software Version:

Software Version:

Date of Shipment from UK:



Guidance Marine Ltd,  
4 Dominus Way  
Meridian Business Park  
Leicester  
LE19 1RP  
UK

**Tel:** +44 116 229 2600

**Tel (Customer Services):** +44 116 229 2665

**Fax:** +44 116 229 2604

**Email:** [customerservices@guidance.eu.com](mailto:customerservices@guidance.eu.com)

**Web:** [www.guidance.eu.com](http://www.guidance.eu.com)  
[www.marine.direct](http://www.marine.direct)

### Copyright © 2015 Guidance Marine Limited. All Rights Reserved.

Copyright in the whole and every part of this document belongs to Guidance Marine Limited (the "Owner") and may not be used, sold, transferred, copied or reproduced in whole or in part in any manner or form or in or on any media to any person other than in accordance with the terms of the Owner's Agreement or otherwise without the prior written consent of the Owner. "Windows" is a trademark of Microsoft Corporation. All other brand or product names are trademarks or registered trademarks of their respective companies or organisations.



**C € 0191**

# Document History

---

Document Number	Changes	Issue Date
94-0447-4-A	First Release of Rangeguard Operator's Guide	21/04/2015

# Table of Contents

---

## Introduction

System Overview.....	6
----------------------	---

## Getting Started

Start Up and Shut Down .....	8
<i>Start Up</i> .....	8
<i>Shut Down</i> .....	8
Screen Layout .....	9
<i>Table View</i> .....	10
Display Options .....	12
Selecting/Deselecting Sensors .....	13

## Measurement Algorithms

Selection of Measurement Algorithm .....	15
Setting the Range Limits .....	16
Closest Algorithm .....	17
Manual Threshold Algorithm .....	18
Max Peak Algorithm .....	19
Peak Lock Algorithm .....	20

## Appendices

System Specifications.....	22
FCC Warning Statement .....	23
Index.....	24

# Introduction

---

Welcome to the RangeGuard Operator's Guide. It explains how to use the RangeGuard system once it has been fully installed.

For instructions on how to install RangeGuard onto a vessel, refer to 94-0448-4 RangeGuard Installer's Guide.

The **System Overview** on page 6 describes the different components of the system and how they work together.

The **Getting Started** section on page 8 explains how to get the system up and running and how to shut it down again. It also details what you will see on the RangeGuard Display screen when the system is running, and how to interpret the information.

The **Measurement Algorithms** section on page 14 describes the different ways that RangeGuard can measure the distance to an object.

Further useful information is included in the **Appendices** section on page 21.


# System Overview

The RangeGuard system provides object detection and distance measurements using continuous wave radar sensors. These operate on a licence-exempt Short Range Device basis at 24.15GHz. The system comprises a control box, up to four sensors and a graphical user interface which can be accessed from any device connected to the same network. The sensors are typically positioned around the outside of a vessel and connected to the control box via standard Cat5e Ethernet cable up to a maximum length of 100m; longer cables can be made using cable with additional cores.

The sensors have a fixed elevation beam width of 11° (+/-5.5°) and two options of azimuth beam: 11° (Narrow Beam) and 90° (Wide Beam). Each sensor measures the range to the nearest obstacle by default or to a selected obstacle if preferred.



RangeGuard Display - the user interface - is run from a web browser. It is recommended that either the user interface supplied by Guidance Marine or else Google Chrome are used. Other browsers will work but without guarantee. Once the control box has been connected to the network, type its IP address (default 192.168.2.231) into the web browser address bar and the user interface will appear in Bird's Eye View.

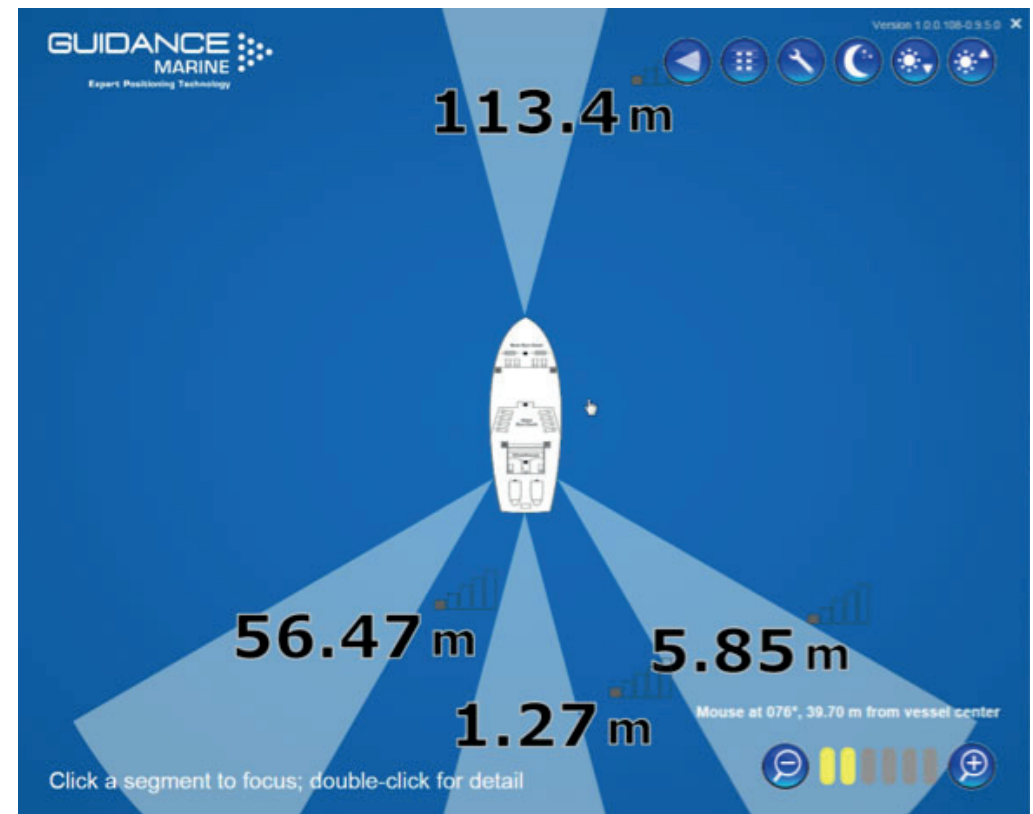

# Getting Started

---

This section describes RangeGuard Display and basic use of the system. It contains the following pages:

- [Start Up and Shut Down](#) (Page 8)
- [Screen Layout](#) (Page 9)
- [Display Options](#) (Page 12)

# Start Up and Shut Down

## Start Up

### To Open RangeGuard Display



1. Ensure that the control box is powered on.
2. Double-click on the RangeGuard icon.  
(Or run the RangeGuard Display application from:  
**Start > All Programs > Guidance RangeGuard > RangeGuard Display**).
3. The display will appear in full screen mode, with the Bird's Eye View open.



## Shut Down

### To Close RangeGuard Display

Click on the X button in the top right corner of the screen.

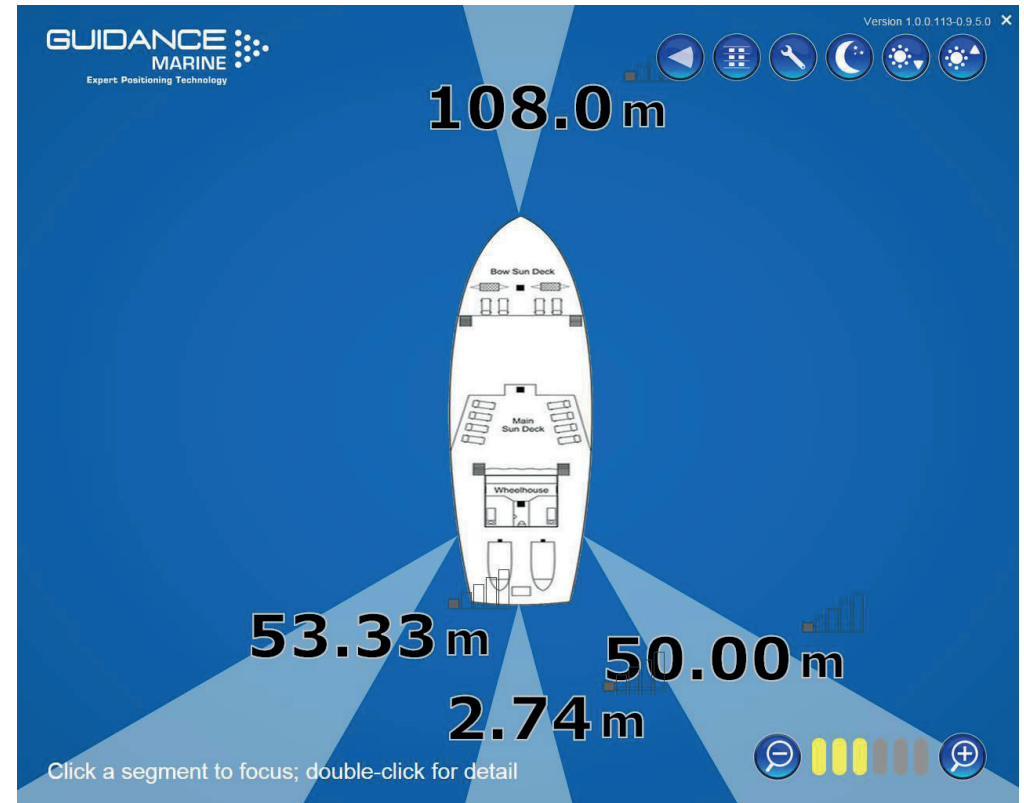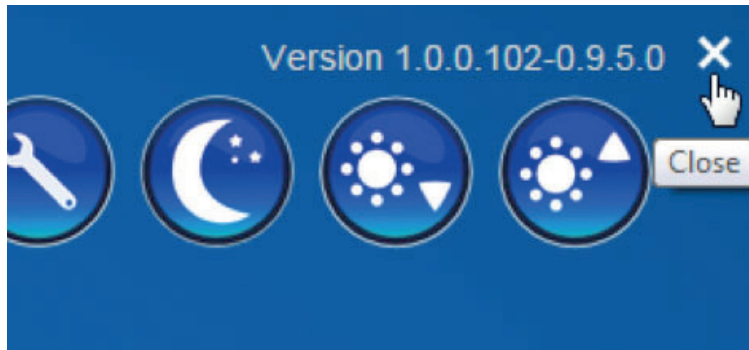

Bird's Eye View




# Screen Layout

The RangeGuard Display presents positional information in one of three main formats, Bird's Eye View, Table View and Single Sensor View.


## Bird's Eye View (BEV)

The BEV depicts the operational area of the RangeGuard system from above. By default, the BEV is centred on an image of the vessel and around this it shows a radar beam, range measurement and received signal level for each sensor that has detected an object.

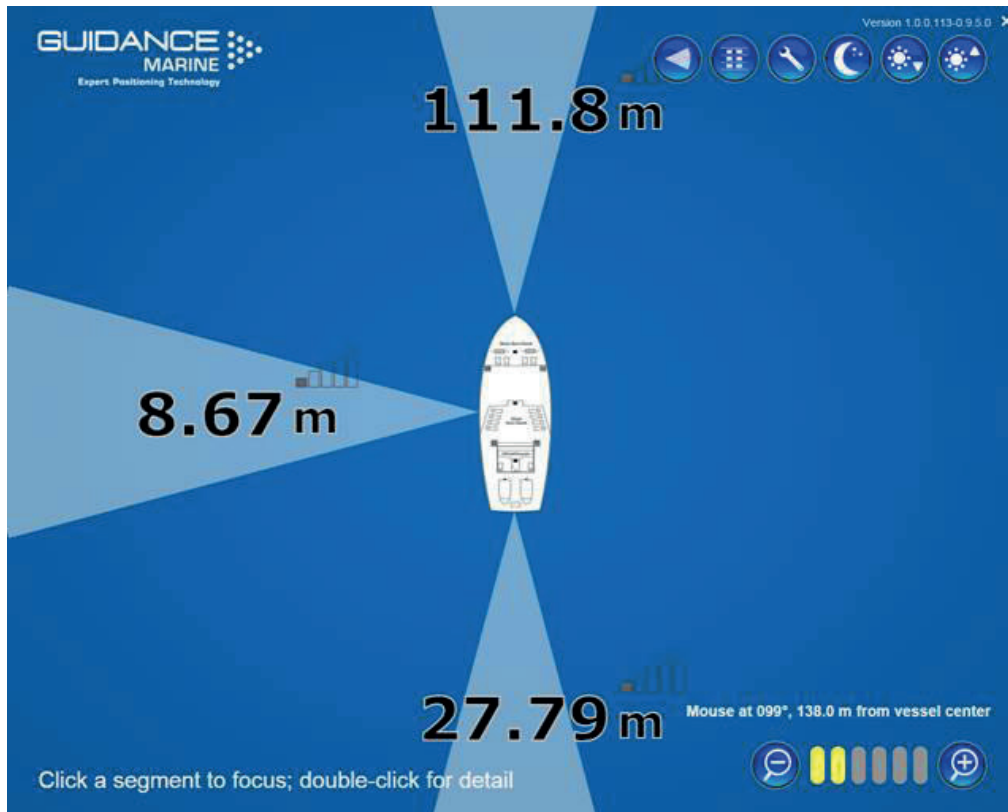

### Bird's Eye View without a sensor in focus

Clicking on any one of the radar beam sectors causes a shift in the BEV so that the object detected by that beam is now at or close to the centre. The colour of the beam changes to reflect the range of the object (red, amber or green in accordance with configured alarm limits). The colours of the other beams also change to reflect the ranges of the objects that they have detected.

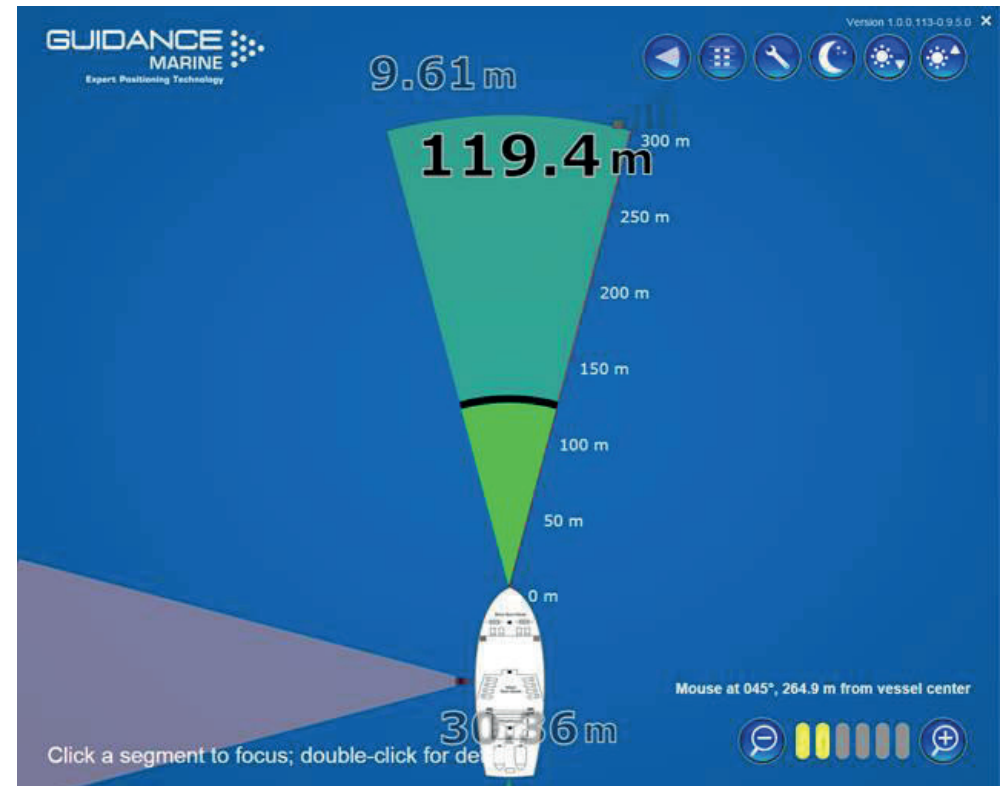

### Bird's Eye View focussing on one sensor

The contents of the BEV can be enlarged or reduced by means of the Zoom In and Zoom Out buttons in the bottom right of the screen. Six zoom levels are available and the current level is indicated by the yellow bars between the buttons:



The position represented by the mouse cursor on the BEV, taking into account the zoom level, is displayed above the zoom buttons, e.g. Mouse at 117°, 68.10 m from vessel centre. These numbers are updated as the cursor is moved across the screen.




In order to switch to the BEV from one of the other views, click on the Bird's Eye View button in the top right of the display screen:

# Screen Layout (Continued)

## Table View

By default, this displays the positional data for all of the currently chosen sensors, in the form of a table. For each sensor this comprises:

- **Range** : The measured distance to the object detected by the sensor. The background of this field is coloured according to the range value:
  - Red for ranges below configured red alarm limit
  - Amber for other ranges below configured amber alarm limit
  - White for longer ranges or if no measurement is made
- **Signal Strength** : Represented by filled segments of a bar chart and – if the cursor is moved over the chart - numerically in the tooltip.
- **Speed**: This is calculated from the most recent range measurements and marked as “Closing Speed” if the sensor is approaching the object and “Separating Speed” if moving away.
- **Time to Contact**: How long it would take for the vessel to make contact with the detected object, based on the currently-displayed closing speed. Displayed as a number of seconds or as “> 1 min”. In the case of a separating speed, the field contains “---”.

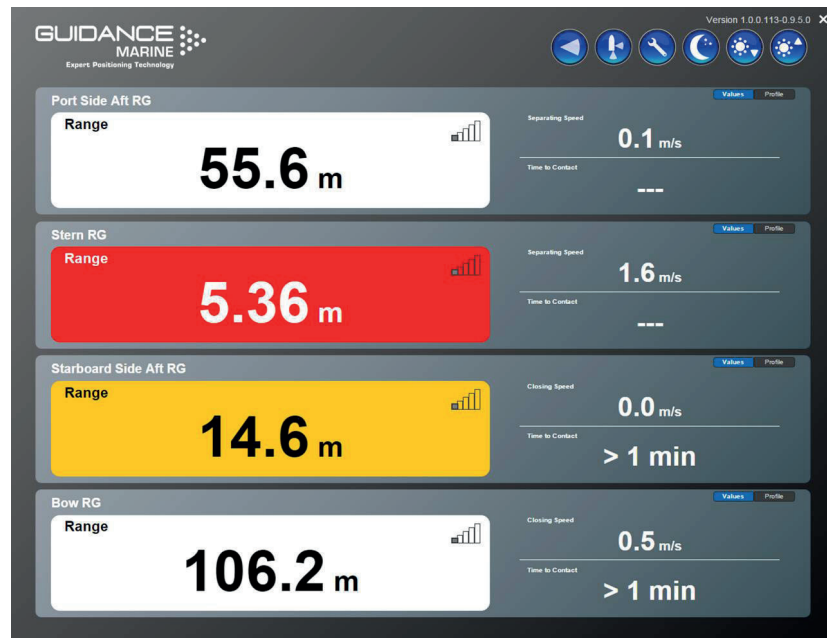

Each row in the table contains a Profile button, which replaces the positional values for a sensor with a Profile plot:



This represents the signal returned at each range – a large vertical peak means that an object exists at the range shown by the horizontal axis.

The buttons along the top of the graph allow you to choose the way in which the system interprets the received signals.

# Screen Layout (Continued)


In order to switch to Table View from one of the other views, click on the Table View button in the top right of the display screen:




## Single Sensor View

This is essentially a magnified form of the data in a single row of the Table View, with the addition of downward-pointing chevrons to indicate a closing speed or upward-pointing chevrons to indicate a separating speed. At very low speeds, only the top chevron is coloured (red for closing and green for separating). At higher speeds, the second and third chevrons are also coloured.

Single Sensor View can show the positional data in extra-large numerals:

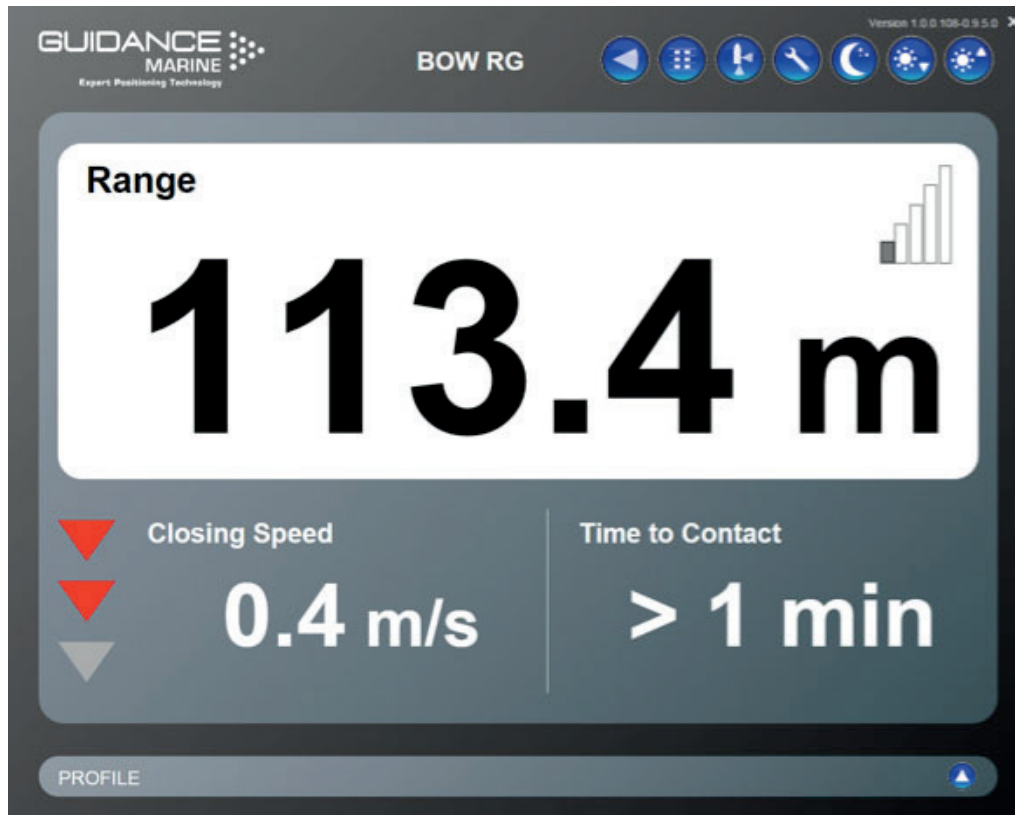

Alternatively, by clicking on the Expand Spectrum button in the bottom right corner the screen is split between positional data and the profile plot:

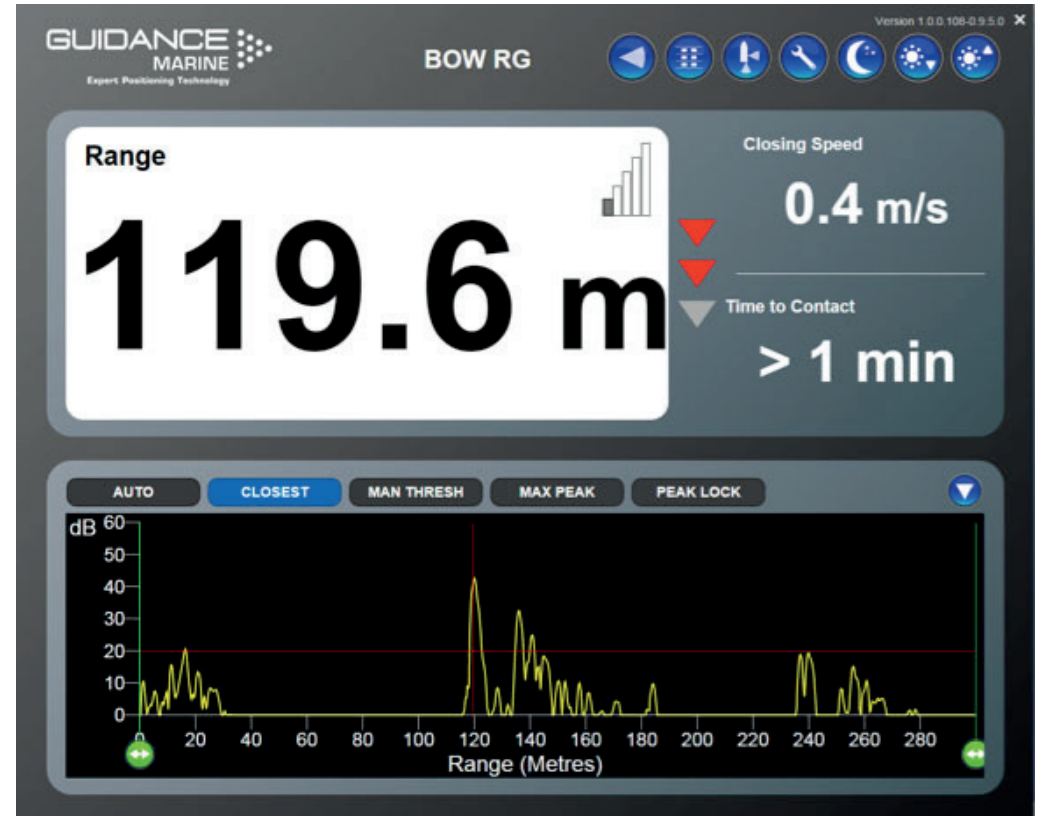

Click on the Collapse Spectrum button to maximise the positional data again.

In order to switch to Single Sensor View:

Either

Double-click on one of the radar beams on the Bird's Eye View

Or

Double-click on one of the rows in Table View.

# Display Options

To provide clear visibility during daytime operation and minimal glare during night shifts, the RangeGuard Display offers two display modes: Day View and Night View. In either mode the brightness can be further modified by brightness adjustment buttons.

To change the day/night view and adjust brightness:

If in day mode, click on the **Toggle Night Mode** button:




If in night mode, click on the **Toggle Day Mode** button:



Click on the **Decrease Brightness** button to dim the screen:




Click on the **Increase Brightness** button to brighten the screen

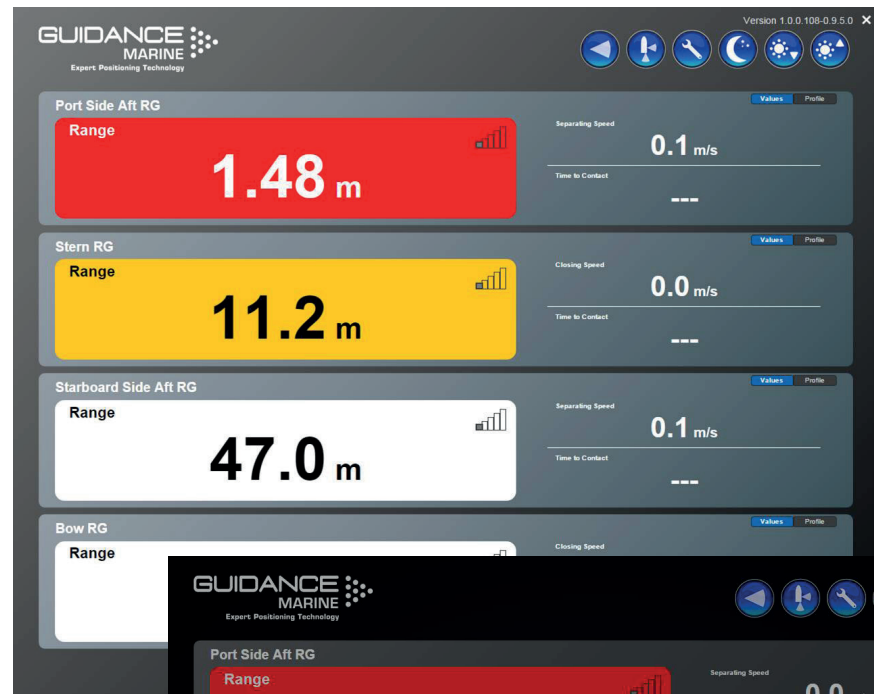

# Selecting/Deselecting Sensors

---

A RangeGuard system can be run with up to four sensors. The overall sensor count and characteristics of each sensor are configured at installation time in the password-protected RangeGuard Control Panel (see **94-0448-4 RangeGuard Installer's Guide** for details).

However, each sensor can be selected/deselected on the fly, using the **Choose Sensors** button, 

Click on this button to obtain a menu containing the label of each sensor and a checkbox:



Only data from currently-selected sensors is shown on the Bird's Eye View and Table View.

# Measurement Algorithms

---

This section describes the different ways that RangeGuard can make measurements. It contains the following pages:


It contains the following pages:

- ***Selection of Measurement Algorithm*** (Page 15)
- ***Setting the Range Limits*** (Page 16)
- ***Closest Algorithm*** (Page 17)
- ***Manual Threshold Algorithm*** (Page 18)
- ***Max Peak Algorithm*** (Page 19)
- ***Peak Lock Algorithm*** (Page 20)

# Selection of Measurement Algorithm

---

There is a measurement algorithm setting for each sensor in the system. It is selected via the buttons above the sensor's profile plot in Table View or Single Sensor View:

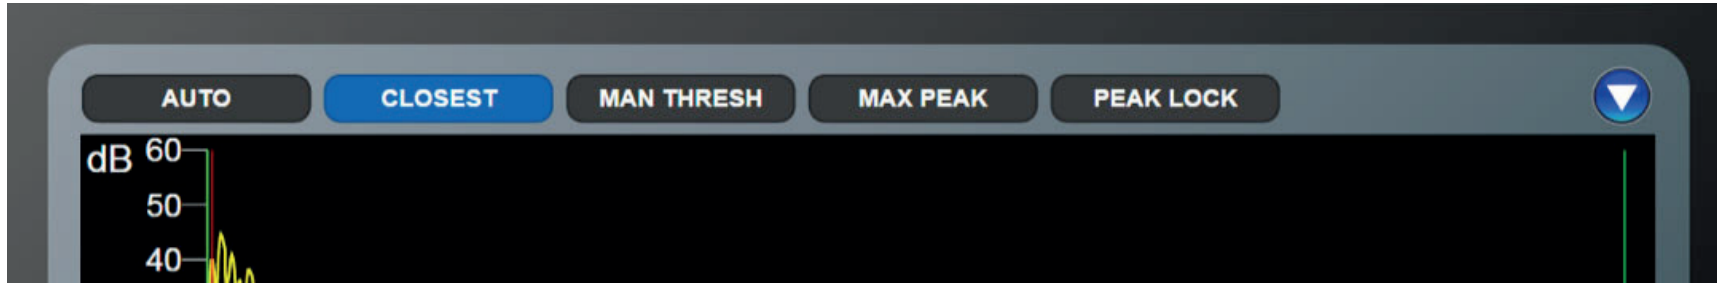

The algorithms use different methods of extracting a range measurement from the reflected signal received by the sensor.

Each algorithm potentially gives a different range value in any given situation, so it is important to choose one that is appropriate for your needs.

You may also want to disregard reflections from the shortest or longest ranges; see [Setting the Range Limits](#) on page 16.

# Setting the Range Limits

By default, when calculating the range of an object, the system takes into account all reflected signals that it receives. However, it is possible to mask out reflections from the shortest and/or longest ranges, for example to ignore an overhanging feature of the vessel's own structure.

## To set the Range Limits for a sensor:



1. Go into Table View and open the Profile for the relevant sensor, or else enter Single Sensor View and expand the Profile.
2. Click and drag one or both of the green Range Limit sliders:




Range Limit Sliders

3. Leave the left-hand slider at the range below which you want all reflections to be ignored.
4. Leave the right-hand slider at the range above which you want all reflections to be ignored.

Alternatively, double-click either of the sliders and type a numerical value into the entry box:

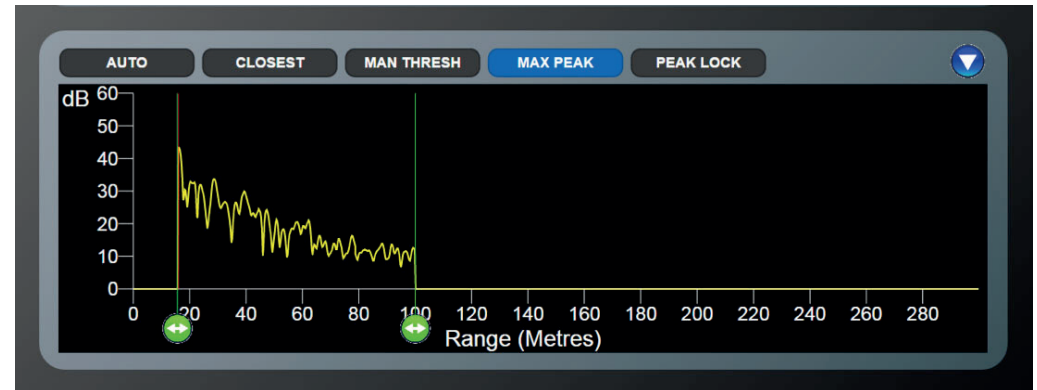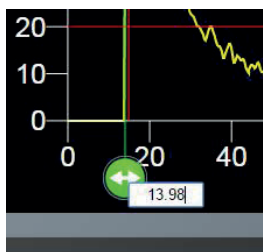

The beam for this sensor on the Bird's Eye View is sized according to these limits:

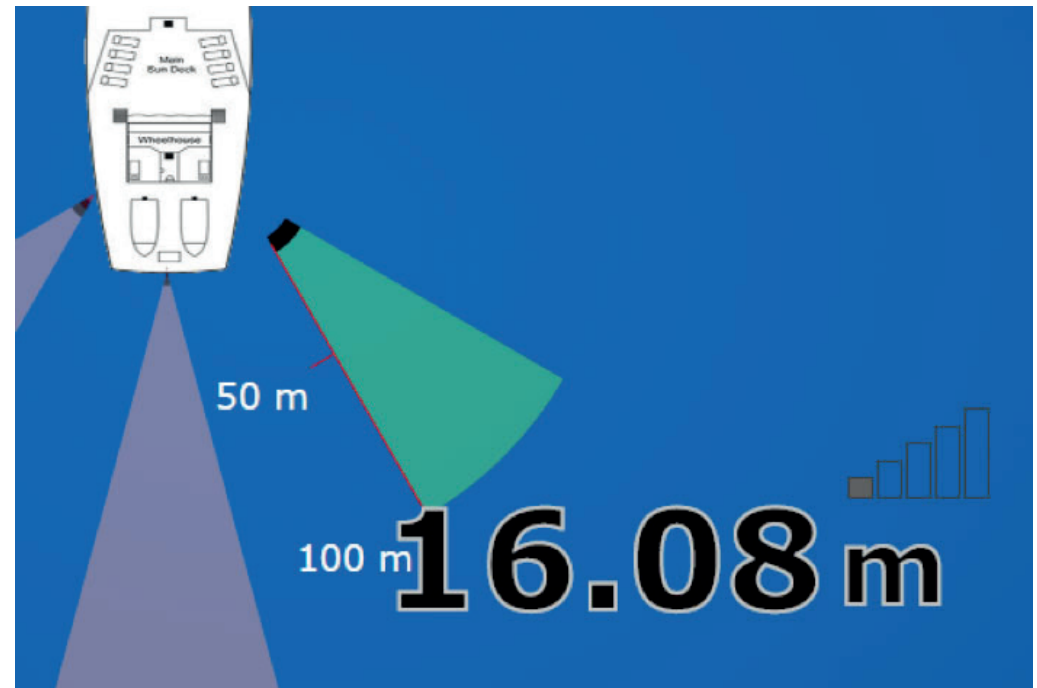



# Closest Algorithm

When the Closest algorithm is selected, RangeGuard bases its range measurement on the shortest range peak in the reflected signal, within the Range Limits and above the Signal Threshold. For this algorithm the Signal Threshold is fixed at 20dB above the nominal noise floor.


The measured range is indicated on the Profile Plot by a vertical red line:

Measured Range (approx 100m)




# Manual Threshold Algorithm

When this algorithm is selected, the Signal Threshold is adjustable, instead of being fixed at 20dB. Move the red slider up or down the dB axis to a suitable threshold level:

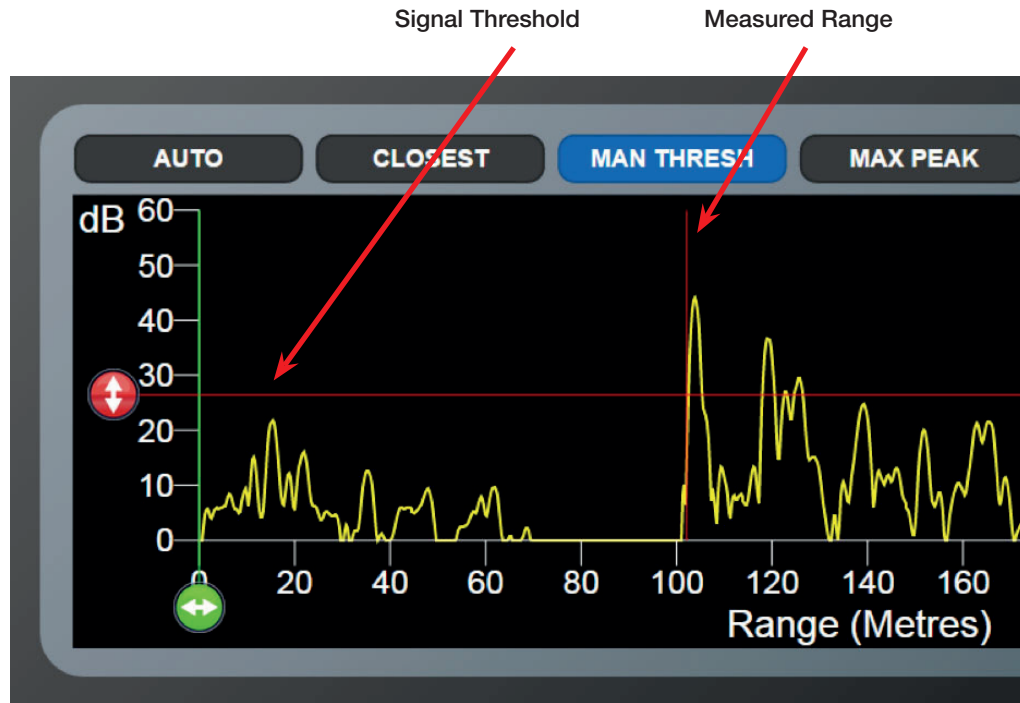

Note that the Manual Threshold algorithm measures the lowest range at which the signal breaks through the threshold, as distinct from the Closest algorithm which uses the lowest-range peak.

Alternatively, double-click the red slider and type a numerical value into the entry box:

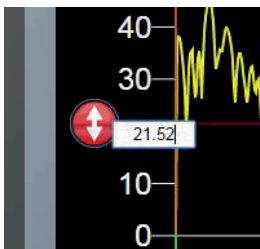

# Max Peak Algorithm


With this algorithm no Signal Threshold is applied and the strongest reflected signal within the Range Limits is used for the range measurement, rather than the closest:



# Peak Lock Algorithm

With this algorithm, you can manually select a peak within the Range Limits that is not necessarily the closest or highest. The system then locks onto it and reports its range.

In order to select a peak, move the red slider along the Range axis:

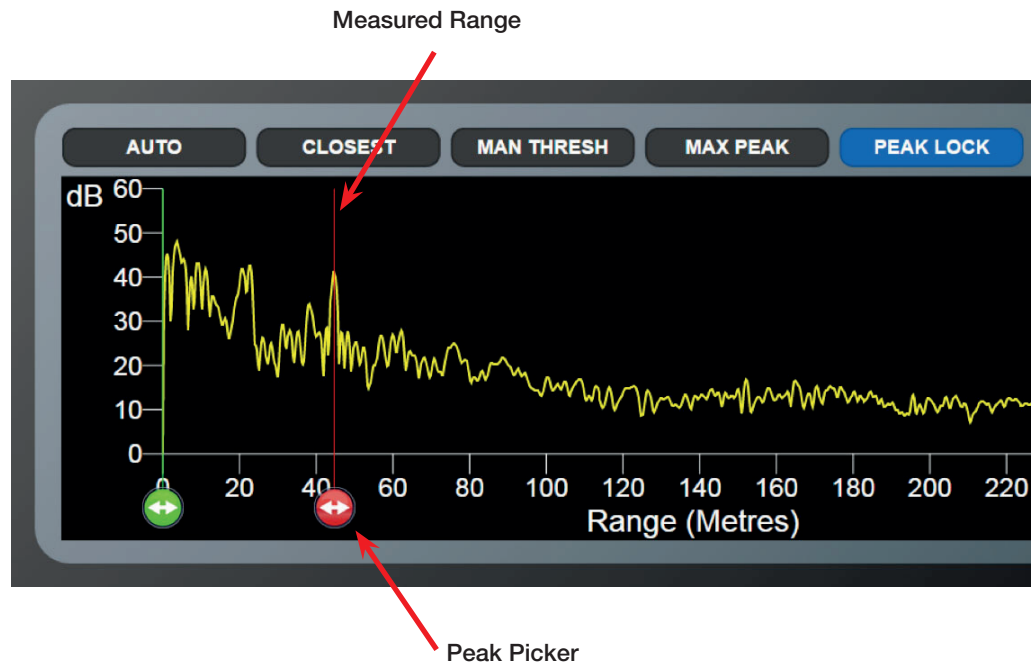

# Appendices

---

This section contains the following appendices:

- **System Specifications** (Page 22)
- **FCC Warning Statement** (Page 23)
- **Index** (Page 23)

# System Specifications

<b>Sensor</b>	
Transceiver Type	Frequency Modulated Continuous Wave (FMCW)
Frequency Band	24.05GHz – 24.25GHz (Licence Exempt Short Range Device)
Maximum Power Output	<100mW EIRP (EN 300 440 Compliant)
Maximum Operating Range	300m
Minimum Operating Range	1m
Range Accuracy*	±2cm + 0.1% of Range
Angular Accuracy*	N/A
Azimuth Beam width	90° or 11° (10dB Width)
Target Detection	Automatic or by manual selection
Vertical Beam Height	+/- 5.5°
<b>Vessel Interface</b>	
Sensor Power	85 to 264v AC 45-65 Hz 5A, Max 100W
Sensor Control	Analogue and Digital control on CAT 5e SCTP
Sensor DP Feed	N/A
Supported DP Systems	N/A
Sensor Control	Sensor Control capable of displaying 4 sensors simultaneously
Sensor Control Protocol	Ethernet

<b>Environmental</b>	
Ambient Temperature Range	-25 to +55°C
Atmospheric Conditions	Operates in fog, heavy rain, snow and ice conditions
Water and Dust Protection (Sensor)	IP67 certified
Standards Compliance	EN 300 440-1 and 2, EN 60945 & EN301 843-1 (EMC) EN 60936:2002, Annex D, ITU-R
Recommendation RM. 1177 European Directive 2004/108/EC	1000mm (worst case) @ 0.3° deflection
EN60945	IP66 rated
RF Immunity	Resistant to S and X band Radar when installed as recommended
<b>Sensor Mechanical</b>	
Height	23 cm
Width	17 cm
Depth	13 cm
Weight	4 kg
Max Cable run per sensor	Up to 100m (CAT5e SCTP cable, Min AWG 24)

# FCC Warning Statement

---

- This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Index

---

## **F**

FCC Warning Statement 23

## **H**

Hotkey Buttons 12

## **O**

Overview  
*System 6*

## **S**

Shut Down 8

Side Bar 8

Start Up 8

System Overview 6



