

Operating Manual
GALAXY™ GX2
Automated Test System





WARNING

Read this manual carefully before using the instrument. The instrument will perform as designed only if it is used and maintained in accordance with the manufacturer's instruction. Otherwise, it could fail to perform as designed and persons who rely on this instrument for their safety could sustain serious personal injury or death.

© MINE SAFETY APPLIANCES COMPANY 2012 - All Rights Reserved

This manual is available on the Internet at: www.msasafety.com

Manufactured by
MSA NORTH AMERICA
1000 Cranberry Woods Drive, Cranberry Township, PA 16066

Contents

1	Safety Regulations	5
1.1	Correct Use	5
1.2	Product Warranty	6
2	Introduction	8
2.1	Power Supply	10
2.2	The Test Stand	10
	SD or SDHC Memory Card Slot	11
	Test Stand Networked to a PC	11
	Test Stand is Stand-Alone	12
	USB Drives	12
2.3	Ethernet Interface	13
2.4	Software Options	13
2.5	Cylinder Holder (electronic)	14
2.6	Optional Printer	15
2.7	Optional Multi-Unit Charger	15
2.8	Special Conditions for Use with Reactive Gases	16
3	Installation	17
3.1	Connect Units in a Bank	18
3.2	Connect a Test Gas Source Without a Cylinder Holder	19
3.3	Network Test Stands	19
3.4	Removing Gas Seal for Certain ALTAIR and ALTAIR Pro Instruments	20
3.5	Desktop Mounting	21
3.6	Wall Mounting	23
3.7	SD or SDHC Memory Card Option	24
4	Setting Up the GALAXY GX2	25
4.1	Initial Setup	25
4.2	Security Setup	27
4.3	Home Screen	27
4.4	General Setup	29
4.5	GX2 Configuration	29
	Backlight/Volume Setup	30
	Test Setup	31
	GX2 Setup	33
	GX2 Gas Setup	34
	Network Setup (Optional)	38

4.6	Instrument Configuration	39
	Instrument Setup	40
	Sensor Setup	42
	Save Settings	44
	Load/Delete Settings	45
	Update Settings	45
4.7	Cylinder Configuration	46
	Cylinder Setup	47
	Expiration Setup	48
5	Using the GALAXY GX2	49
5.1	Turning on the System	49
5.2	Inserting the Instrument	49
5.3	Running a Test	50
5.4	Classic Mode	54
5.5	GALAXY GX2 Always Ready Feature	55
5.6	E-mail Notification	56
5.7	Overdue Calibration and Bump Notification	56
6	Troubleshooting	57
6.1	Instrument Will Not Initiate a Bump or Calibration	57
6.2	Instrument Fails Zero Calibration or Bump	58
6.3	Instrument Fails Span Calibration or Bump	58
6.4	Instrument Records Do Not Display	58
6.5	Cylinder Data Does Not Display	59
6.6	Test Stand Yellow LED Blinking	59
6.7	System Error Messages	61
7	Maintenance (Cleaning and Part Replacement)	62
7.1	Corrective Maintenance	62
7.2	Replacement Parts and Accessories	62
7.3	Fresh Air Filter Replacement	66
7.4	O-Ring Seal Replacement (Cylinder Holder)	67
7.5	Inlet Seal Replacement (ALTAIR 5/5X Gas Detector)	67
7.6	Rubber Insert Replacement (ALTAIR Gas Detector)	69
8	Technical Specifications	70
9	Galaxy GX2 Default Parameters	71

1 Safety Regulations

1.1 Correct Use



WARNING

Read this manual carefully before using the instrument. The instrument will perform as designed only if it is used and maintained in accordance with the manufacturer's instruction. Otherwise, it could fail to perform as designed and persons who rely on this instrument for their safety could sustain serious personal injury or death.



WARNING

- (1) Do not use silicone-type lubricants in assembling the GALAXY® GX2 Automated Test System and do not allow silicone vapors to be drawn into the flow system while in operation. Silicone can desensitize the combustible gas sensor, thereby giving erroneously low readings.
- (2) Use the GALAXY GX2 System only in non-hazardous environments free of combustible concentrations of gases and vapors.
- (3) Use only genuine MSA replacement parts when performing any maintenance procedures on the GALAXY GX2 System. Substitution of components can seriously impair performance.

Failure to follow the above can result in serious personal injury or loss of life.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et*
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTICE

This is a class A product in accordance with CISPR 22. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Warning Statements

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Industry Canada (IC) Warning Statements

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website www.hc-sc.gc.ca/rpb.

L'installateur du présent matériel radio doit veiller à ce que le produit soit placé ou orienté de manière à n'émettre aucun champ radioélectrique supérieur aux limites fixées pour le grand public par le ministère fédéral Santé Canada ; consultez le Code de sécurité 6 sur le site Web de Santé Canada à l'adresse : www.hc-sc.gc.ca/rpb.

1.2 Product Warranty

The warranties made by Mine Safety Appliances Company with respect to the product are voided if the product is not used and serviced in accordance with the instructions in this manual. Protect yourself and others by following them. We encourage our customers to contact MSA regarding this equipment prior to use or for any additional information relative to use or repairs.

ITEM	WARRANTY PERIOD
GALAXY GX2 Test Stand, Cylinder Holder and Multi Unit Charger	2 years from ship date
Optional Receipt/ Sticker Printer	1 year from ship date

This warranty does not cover filters, fuses, etc. Certain other accessories not specifically listed here may have different warranty periods. This warranty is valid only if the product is maintained and used in accordance with Seller's instructions and/or recommendations. The Seller shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than its own or authorized service personnel or if the warranty claim results from physical abuse or misuse of the product. No agent, employee or representative of the Seller has any authority to bind the Seller to any affirmation, representation or warranty concerning this product. Seller makes no warranty concerning components or accessories not manufactured by the Seller, but will pass on to the Purchaser all warranties of manufacturers of such components.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, AND IS STRICTLY LIMITED TO THE TERMS HEREOF. SELLER SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE.

Exclusive Remedy

It is expressly agreed that Purchaser's sole and exclusive remedy for breach of the above warranty, for any tortious conduct of Seller, or for any other cause of action, shall be the replacement at Seller's option, of any equipment or parts thereof, which after examination by Seller is proven to be defective. Replacement equipment and/or parts will be provided at no cost to Purchaser, F.O.B. Seller's Plant. Failure of Seller to successfully replace any nonconforming equipment or parts shall not cause the remedy established hereby to fail of its essential purpose.

Exclusion of Consequential Damage

Purchaser specifically understands and agrees that under no circumstances will seller be liable to purchaser for economic, special, incidental or consequential damages or losses of any kind whatsoever, including but not limited to, loss of anticipated profits and any other loss caused by reason of nonoperation of the goods. This exclusion is applicable to claims for breach of warranty, tortious conduct or any other cause of action against seller.

2 Introduction

Congratulations on purchasing the GALAXY GX2 Automated Test System, the next generation Test Stand and instrument management system from MSA. This system is used exclusively with the ALTAIR® family of gas detectors. This manual uses the terms **instrument** and **gas detector** to represent that entire line of ALTAIR gas detection instruments.

In this manual the user will learn to install and configure the GALAXY GX2 Test Stand and optional attachments, and test gas detectors. Maintenance, Troubleshooting, and Technical Specifications sections are also provided.

The Test Stand uses a sophisticated internal processor and simple to use touch screen display for the configuration of calibration parameters and gas detector settings, and for gathering instrument data.

Each Test Stand and optional attachments can be wall or desk mounted to serve the needs of the user. Constructed of durable composite polymers, this equipment is designed for normal indoor applications and operates within a broad temperature range of 0° to 40°C in non-condensing humidity atmospheres.

The principal components of the GALAXY GX2 include the Test Stand and optional electronic or non-electronic Cylinder Holder, Multi-Unit Charger, and Receipt/ Sticker Printer. These components [-> Fig. 1] are designed to be attached (excluding the printer), to avoid accidental separation during operation.



Fig. 1 The GALAXY GX2 Automated Test System

The Test Stand is a standalone unit that can accommodate one gas detector of the ALTAIR family. However, each Test Stand contains the plumbing and electronic ports to simultaneously connect a total of **10 Test Stands** and **four Cylinder Holders** (electronic or non-electronic).

For applications where multiple Cylinder Holders are connected, the Test Stand **Expanded Solenoid** option must be ordered. This option allows the Test Stand to open and close up to four Cylinder Holder valves for gas detectors that may require multiple cylinders for test purposes. For example, an ALTAIR 5/5X with the standard 4 sensors plus a toxic sensor likely requires two gas cylinders.

The electronic Cylinder Holder is designed to read a Radio Frequency Identification (RFID) tag embedded in a plastic ring on MSA test gas cylinders. The RFID tag contains cylinder parameters that are necessary for successful calibration operations, providing the customer with an exceptionally easy setup experience. Gas cylinder information is automatically populated without user intervention when using the RFID-tagged gas cylinders.

If MSA test gas cylinders are not used, the non-electronic version of the Cylinder Holder is available. This configuration [→ Fig. 2] requires the user to manually enter cylinder parameters.



Fig. 2 Non-electronic Cylinder Holder and Test Stand.

A USB port is provided on the Test Stand that may be used with the Digital Secure USB key to change instrument settings via the touch screen. This function allows for convenient fleet management capabilities. The port may also be used for an optional Receipt/ Sticker Printer, to print calibration/bump stickers or paper receipts after an instrument test.

The primary functions of the Test Stand are to calibrate and bump the ALTAIR family of gas detectors. For a detailed definition of these processes, please refer to:

http://www.safetysupply.com/userfiles/File/calibration_statement-2010-Mar4.pdf

In the following sections of this manual the user will learn how to install the GALAXY GX2 Automated Test System, set up its functionality, and perform instrument tests. The hardware, soft-

ware, and configuration options anticipate the user's needs and provide superb efficiency in this next generation Automated Test System.

GALAXY GX2 System Features and Options

The GALAXY GX2 automatically identifies the type of gas detector inserted into the Test Stand. Based on user-defined settings, the Test Stand then performs bump tests and/or calibrates the instrument. The data collected from each test event is stored to a memory card [→ chapter 2.2] and/or optional MSA Link™ Pro software application for data analysis (refer to the MSA Link Pro end-user manual).

2.1 Power Supply

The Test Stand supplies power to the attached electronic Cylinder Holders. The Test Stand and Multi-Unit charger are powered individually by one of the following methods:

- Power Module: Input power requirements: 100 - 240 VAC, 47 - 63 Hz
(Several different prong types are available for world-wide AC sockets).
- Optional Vehicle Module 12/24 VDC (For use in a cigarette lighter socket).

NOTICE

Use of a power supply not specified by MSA will void the instrument warranty and could cause damage to the GALAXY GX2.

2.2 The Test Stand

The Test Stand performs the following functions:

- Bump or calibration testing per user setup.
- Records test results to the optional memory card and to an optional networked PC interface.
- Sends gas detector Instrument Periodic and/or Session datalogs to a networked PC interface.
- Provides optional instrument charging capability.
- USB key allows gas detector settings to be changed securely, with the touch of the Test Stand screen.
- Permits printing of test results to an instrument sticker or receipt, with the optional Receipt/ Sticker Printer.
- Sends e-mail notification of system alerts per user setup.

An LED indicator shows the status of the Test Stand:

- Green light indicates that the Test Stand hardware and software are fully functional.
- Blinking green light indicates that the Test Stand is performing the user specified test or data-log download.
- Blinking yellow light indicates that the Test Stand is in error and cannot be used for gas detector testing. Diagnostic information is available as described on the "GX2 Status" screen on the Test Stand and in the Troubleshooting section of this manual [→ chapter 6].
- Red light indicates that the last calibration or bump test failed.



Fig. 3 Test Stand Physical Features

- | | | | |
|---|------------------------------------|---|--------------|
| 1 | Touch Screen Display | 4 | SD Card Port |
| 2 | Status LED | 5 | USB Port |
| 3 | Test Stand to Test Stand connector | 6 | Gas plugs |

SD or SDHC Memory Card Slot

A memory card port is provided on the Test Stand for calibration and bump record storage. An SD or SDHC memory card can be purchased from MSA (preferred) or from the following manufacturers:

- Kingston
- PNY
- SanDisk
- Lexar
- Wintec

The data on an SD or SDHC memory card is encrypted for use with MSA Link™ or the MSA Link Pro application. The type and amount of data recorded to the memory card is contingent on whether the Test Stand is networked.

Test Stand Networked to a PC

When the Test Stand is networked to a PC through the Ethernet port, test records, datalogs, and settings will be transmitted from the GALAXY GX2 to the PC interface.



The use of MSA Link Pro via a network connection is required to download datalogs from the instrument. Due to potentially large file sizes datalogs are not saved to the memory card in the Test Stand.

If the network connection is lost only calibration and bump records are saved to the memory card. If the Ethernet connection is restored, the Test Stand will transmit the stored calibration and bump records from the memory card to the PC interface.

Test Stand is Stand-Alone

If the GALAXY GX2 is not networked to a PC interface the memory card will save each calibration and bump test record. Incomplete records will not be saved. If networked and e-mail alerts are configured, the Test Stand will generate an email alert once the memory card reaches 90% and again at 99% capacity.

Once a memory card reaches full capacity, the Test Stand will be in fault and prohibit any unit from performing tests in that bank, until corrected. The Test Stand can be configured to erase the memory card, or the user can insert a replacement.



The memory card should only be removed when no test activity is occurring. Events that occur while no memory card is installed will not be stored in the Test Stand.



If no memory card is used, only the most recent bump or calibration record is stored to the Test Stand internal memory.

An optional end cap [→ Fig. 4] can be placed over the port to protect the memory card and all external connections.

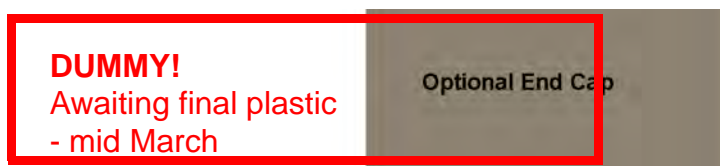


Fig. 4 Optional End Cap

USB Drives

Two optional USB Keys [→ Fig. 5] are available for purchase with the GALAXY GX2 Automated Test System:

- **Digital Secure USB Key:** This black key is inserted in the USB port on the Test Stand in order to change gas detector settings. The key ensures only authorized users can change settings on ALTAIR gas detectors; a security step in addition to the four-digit password.
- **MSA Link Pro Key:** This red key is used to enable the MSA Link Pro application on a single PC. More information about this key can be found in the software product end-user manual.



Fig. 5 Digital Secure Key and MSA Link Pro Key

2.3 Ethernet Interface

Two Ethernet Interfaces are provided on the rear of the GALAXY GX2 [→ Fig. 6]. The ports allow for the connection and communication distribution between multiple Test Stands. If networking to a computer, one USB port on the Master Test Stand is used to communicate with the MSA Link Pro software application.



Fig. 6 Test Stand Ethernet jacks

2.4 Software Options

The GALAXY GX2 functions as a standalone system, but the optional MSA Link Pro software application can be used to network the Test Stand to a PC through an Ethernet cable. This application provides a best-in-class user interface and data analysis toolset to quickly identify issues or concerns that require user action.

MSA Link Pro provides the user:

- Database storage of instrument Periodic and Session datalogs.
- Automatic or customized reports from the collected data.
- Single glance notification of instruments that are overdue for calibration or bump test.
- Email notifications of GALAXY GX2 and instrument warnings and error messages.
- Single setting configuration of all GALAXY GX2 units in a bank.
No need to individually configure each Test Stand.



Users may use the free MSA Link software application and an IR dongle [→ chapter 7.2] to communicate directly with their gas detector. MSA Link allows a user to upload and download instrument settings, and download datalogs.

To learn more about installing and using MSA Link Pro, refer to the software product end-user manual.

2.5 Cylinder Holder (electronic)

The electronic Cylinder Holder can accommodate one test gas cylinder and includes:



Fig. 7 Cylinder Holder Physical Features

1 Light Band

2 RFID Tag

3 Internal Pressure Regulator & Sensor

Multi-Color Light Band	RFID Tag Gas Identification	Pressure Regulator & Sensor
<p>Indicates gas bottle functionality.</p> <ul style="list-style-type: none"> - Green indicates a bottle is completely functional, and gas parameters are within pressure and expiration date limits. - Yellow indicates low calibration gas, or gas is nearing its expiration date. - A blinking yellow light band indicates a hardware problem with the cylinder holder. - Red indicates an empty calibration gas bottle, or that gas has expired. 	<p>Reads the RFID tag of the MSA test gas cylinder and transmits:</p> <ul style="list-style-type: none"> - the gas type - gas concentration - expiration date - lot number - cylinder part number <p>to the Test Stand. The RFID tag is only available on MSA-branded test gas cylinders shown in the Maintenance section [→ chapter 7].</p>	<p>Reads the pressure of the gas cylinder and transmits that information to the Test Stand.</p> <ul style="list-style-type: none"> - When gas pressure drops to approximately 99 psi (6.89 bar) a warning will display and the display numbers appear yellow. - Once pressure drops to approximately 49 psi (3.45 bar) the display numbers appear red. - Once pressure drops to less than 5 psi (0.34 bar) the Test Stand will prohibit testing with that cylinder.

2.6 Optional Printer

The Printer can print calibration and bump result receipts and calibrations stickers for gas detectors [→ Fig. 7]. The Receipt/ Sticker Printer uses a USB cable to connect to the port of the farthest right Test Stand [→ Fig. 3].

Labels are available in two formats [→ chapter 7.2]:

- Format #1: Calibration Sticker only (2 cm x 2 cm square label).
- Format #2; Receipt and Sticker combined.

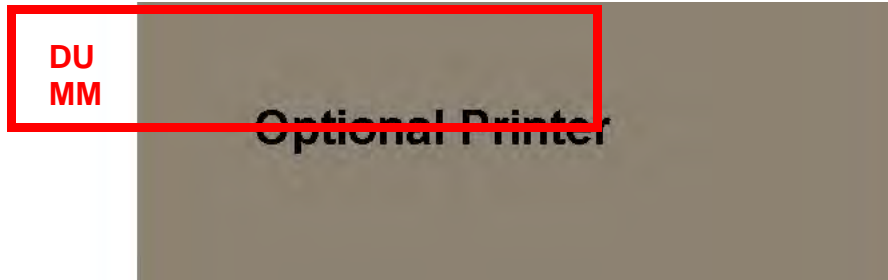


Fig. 8 Optional Printer

2.7 Optional Multi-Unit Charger

There are two configurations of the optional Multi-Unit Charger (MUC). The ALTAIR 4/4X MUC can simultaneously charge up to four ALTAIR 4/4X gas detectors. Similarly the ALTAIR 5/5X MUC can charge four 5/5X gas detectors. Each Multi-Unit Charger contains its own power supply and does not connect electrically to the Test Stand. The housing is designed to physically connect to each other, whether bench-top or wall-mounted (if desired).

The light indicators on the Multi-Unit Charger are defined as follows:

- **Red** indicates that the unit is charging
- **Green** indicates that the unit is fully charged or no unit is inserted.



Verify the Multi-Unit Charger indicator lights red when an instrument is inserted. A fully charged instrument will momentarily flash red and the indicator will light green. If the red light does not engage the instrument may not be seated properly on the charging prong.



Instruments whose battery is **completely discharged** will be need to trickle-charge prior to normal charging operations. Such instruments will show a green LED during the trickle-charge period until normal charging is initiated, at which time the red LED will be active.

There can be as much as a 10 minute window between when the instrument battery indicator shows charged and the Multi-Unit charger status indicator changes. The instrument indicator is the most accurate and will indicate the true charge state of the battery.



Fig. 9 Multi-Unit Charger (Altair 4/4X and 5/5X only)

2.8 Special Conditions for Use with Reactive Gases

If using a Test Stand and Cylinder Holder for calibrating or bump testing a gas Detector **configured with a chlorine or ammonia sensor**:

- Place the chlorine or ammonia gas cylinder in the Cylinder Holder closest to the Test Stand.
- Only one reactive gas Test Stand is allowed in a bank.
- If connecting other Test Stands to the right of the reactive stand, plug the reactive gas outlet port with a white gas plug before mating the next Test Stand. Otherwise, inaccurate calibration could result on the reactive sensor.
- Before the first use with reactive toxic gas, condition the regulator and Test Stand with the gas, by running the calibration twice in sequence. If using chlorine, perform this procedure daily before use.

If *not* using GALAXY GX2 Cylinder Holders:

- Use a dedicated pressure regulator on the reactive toxic gas cylinder (for chlorine or ammonia, use P/N 10034391). Label the pressure regulator "**FOR CHLORINE USE ONLY**" or "**FOR AMMONIA USE ONLY**", as applicable (label stickers are provided with regulator).
- Use the shortest possible tubing running from the reactive toxic gas pressure regulator to the Test Stand's "CYLINDER 1" port.
- Before the first use with **reactive toxic gas**, condition the regulator and Test Stand with the gas by running the calibration twice sequentially; for **chlorine**, perform this procedure daily before use.
- Many gases have a cross-sensitivity to other gases. **Ensure that test cylinder gases do not contain other interfering gases.**

Do not use the GALAXY GX2 to calibrate or bump a gas detector with a chlorine dioxide (ClO₂) sensor.

3 Installation

The GALAXY GX2 is a simple to install system that can be desktop or wall mounted. Setup requires simple tools and just a few minutes of time.

Carton Contents

The GALAXY GX2 system will be shipped with the following:

- Test Stand (including gas plugs, barbs and fresh air filter)
- Power Supply (if ordered)
- Spare Parts Kit (gas tubing barbs and plugs)
- Ethernet Cable (short cable for connection between Test Stands)
- Product CD
- Quick Start Guide
- Screen Protector (installed on the display screen)

Tools Needed

- Phillips head (cross-head) screwdriver.

As stated in the Introduction, the GALAXY GX2 is designed for the connection of up to 10 Test Stands and four Cylinder Holders [→ Fig. 10]. Test Stands must be assembled sequentially on the right-hand side of the first. Cylinder Holder(s) must be installed on the left-hand side of the first Test Stand for best gas flow into all Test Stands.

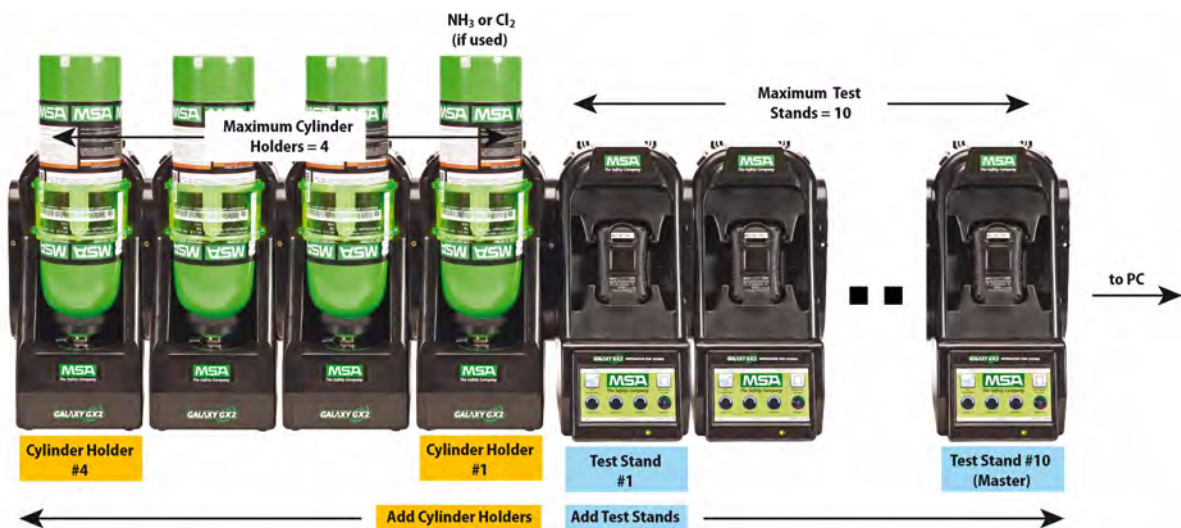


Fig. 10 Test Stands and Cylinder Holders properly installed in a bank



Test gas cylinders containing Chlorine or Ammonia must be installed according to the directions in the Special Conditions for Use with Reactive Gases section [→ chapter 2.8].



When installing the GALAXY GX2, please consider the environmental needs of your facility. If the customer desires, the GALAXY GX2 can be used in a ventilated area to assist in disbursing the test gas exhaust.

This manual provides steps for desktop and wall mounting. The following sections describe the proper installation for various GALAXY GX2 configurations:

- Connect Units in a Bank (Test Stands and Cylinder Holders) [→ chapter 3.1]
- Connect a Test Gas Source Without a Cylinder Holder (optional) [→ chapter 3.2]
- Network Test Stands (optional) [→ chapter 3.3]
- Removing Gas Seal for Certain ALTAIR and ALTAIR Pro Instruments [→ chapter 3.4]
- Desktop Mounting [→ chapter 3.5]
- Wall Mounting [→ chapter 3.6]
- SD or SDHC Memory Card Option [→ chapter 3.7]

3.1 Connect Units in a Bank

- (1) On the left-hand side of the Test Stand, ensure all five barb fittings are in place and straightened before connecting a Cylinder Holder or another Test Stand.



- (2) Press the two units together until the barb fittings are fully inserted and the screw holes in the flange align.



- (3) Insert one of the supplied screws into the front and two screws into the back of the flange.



- (4) If connecting multiple Test Stands, remove the white gas plugs [→ Fig. 3] from all units except the farthest right Test Stand. If using ammonia or chlorine test gas, read the restriction found under chapter 2.8 “Special Conditions for Use with Reactive Gases” regarding the white plugs.
- (5) Continue adding Test Stands to the right and Cylinder Holders to the left [→ Fig. 10].



When connecting two or more Test Stands ensure the white plugs are secured on the right side of the farthest right unit to prevent gas leakage.

3.2 Connect a Test Gas Source Without a Cylinder Holder

If high-pressure, high-capacity test gas cylinders are preferred, an optional demand regulator (p/n 710289) is available for cylinders with pressure less than (<) 3000 psi. Testing from an independent gas source will require additional setup effort, as described in the Cylinder Configuration section [→ chapter 4.7].

- (1) On the left-hand side of the Test Stand, ensure all five barb fittings are in place and straightened.
- (2) Place the user-supplied regulator onto the gas cylinder and secure a length of tubing onto its outlet.
- (3) Securely fit the end of the tubing over the appropriate barb fitting on the GALAXY GX2.

3.3 Network Test Stands

Test Stands that are banked together should be connected through the provided Ethernet cable. The Master Test Stand is the one located on the furthest right of the bank.

- (1) Insert the short Ethernet cable into the left side jack of each Test Stand (1) and connect it to the right side jack of the neighboring unit (2) [→ Fig. 11].
 - ▷ One interconnect Ethernet cable is included with each Test Stand.

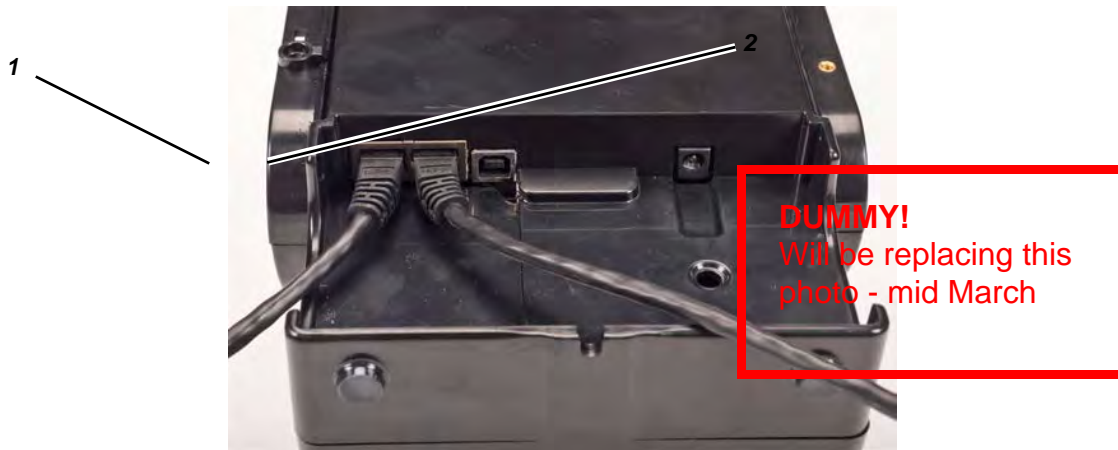


Fig. 11 Test Stand Ethernet connections

1 MSA Link Pro port

2 Test Stand to Test Stand port

(2) If connecting the bank to a computer with the MSA Link Pro software, use a customer-supplied ethernet cable and connect via the Master Test Stand ethernet port #1 shown above.

3.4 Removing Gas Seal for Certain ALTAIR and ALTAIR Pro Instruments

All ALTAIR/ALTAIR Pro Test Stands will be shipped with a black rubber base seal and a green rubber gas seal. **The green seal is used only for ALTAIR H₂S and ALTAIR CO instruments.** The seal should be removed and stored for ALTAIR O₂ and all ALTAIR Pro instruments.



Fig. 12 Altair and Altair Pro Inlet Seals

3.5 Desktop Mounting

- (1) Place the GALAXY GX2 on a flat, stable surface.
- (2) Insert the power supply into the GX2 power jack [see chapter 4.1 for first-time power up initialization].



The Test Stand display pivots for ease of viewing.



- (3) If using MSA Cylinder Holders, the left most **Cylinder Holder** should have a fresh air filter attached to the top port.



- (4) If not using MSA Cylinder Holders, the left most **Test Stand** should have a fresh air filter attached to the top port.



- (5) Ensure the white plugs are inserted into the five gas connection fittings on the right side of the farthest right test stand.



3.6 Wall Mounting

When wall mounting the Test Stand (and applicable Cylinder Holder), MSA recommends steps 1-5 from the Desktop Mounting section [→ chapter 3.5] above be completed prior to installing on the Din Rail. For a large configuration of Test Stands and Cylinder Holders, MSA recommends several people be used for installing or uninstalling from the DIN rail.

- (1) Complete steps 1-5.
- (2) Secure the optional DIN rail Clips to the rear of the GALAXY GX2, using the included screws.



- (3) Mount the DIN rail (Type Omega) to the wall by securing it with wall anchors or other suitable fasteners.
- (4) Align the DIN rail clips over the wall-mounted DIN rail and snap into place.
- (5) To remove from the DIN rail, grasp the back of the units and pull outward.

3.7 SD or SDHC Memory Card Option

The Test Stand can accommodate an SD or SDHC memory card, inserted in the port on the right hand side of the farthest right Test Stand. **Only one memory card can be used in a bank.**

To install the memory card:

- (1) Ensure that memory card is not write-protected or locked.
- (2) Insert the memory card into the port, located on the right side of the Test Stand [→ Fig. 13].
- (3) Place the optional end cap over the port to protect the memory card.
- (4) To remove the memory card push the card to eject it from the port.



The memory card should not be removed when testing or datalog downloads are in process. The Test Stand will not store events that occur while a memory card is removed.



Fig. 13 SD or SDHC Memory Card Installation

4 Setting Up the GALAXY GX2

The GALAXY GX2 Automated Test System is shipped with the most common default options and therefore requires minimal set up. A table of all default settings is provided in the Galaxy GX2 Default Parameters section [→ chapter 9] at the end of this manual. Configuration settings are described in this chapter and can be changed to meet your individual needs via the touch screen display.

The touch screen is intended for interaction with the user's bare finger. Gloves may interfere with screen operation. The attached touch screen protector inhibits damage and should not be removed. Replacement screen protectors can be purchased from MSA.

NOTICE


Use of sharp objects on the touch screen could cause damage.

4.1 Initial Setup

The first time the Test Stand is powered on an initial set of screens will appear for system configuration. The GALAXY GX2 logo momentarily displays and then the unit's version number. This is followed by the first of three required screens.

Language Setup

The Language Setup screen automatically displays.

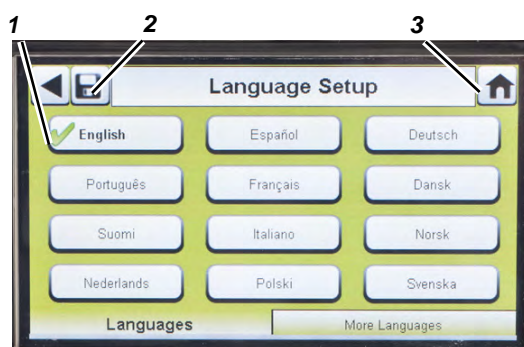


- (1) Select your language from the list.
 - ▷ The language zone selection determines the date format, either MM/DD/YYYY or DD/MM/YYYY.
- (2) Select **Save**.
- (3) Select **Home**.



Changes must be saved on all screens by selecting the Save icon (shown above). If the user selects the **Back Arrow** (◀) without saving, a prompt will display. Select **Yes** to save or **No** to discard changes.

Set Time and Date

There are 3 tabs at the bottom of the screen - Date, Time Zone and Time. The user will need to configure each tab. The Date Setup screen automatically displays.

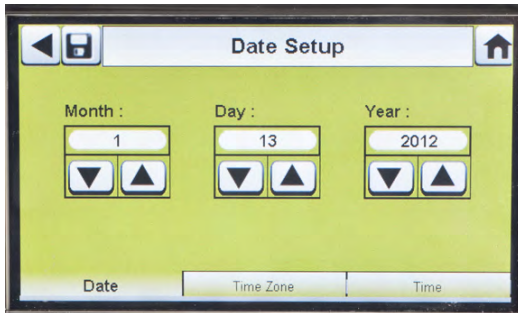


- (1) Enter the current month, day and year.



The time setting is used on all calibration and bump test records.

Test Stand time and date must be maintained for accurate record keeping.


If the Test Stand is networked to a PC via the MSA Link Pro software application, the time is automatically synchronized to the PC. The gas detector is automatically synchronized to the Test Stand each time it is inserted.

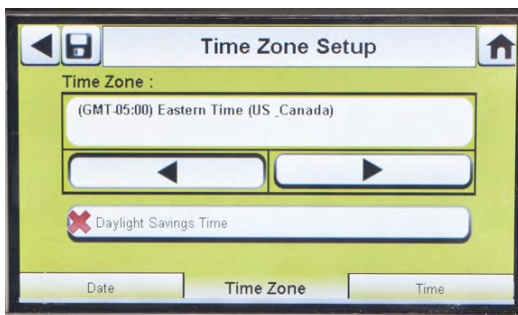

- (2) Select the Time Zone tab and then select your time zone.
 - ▶ The time zone application is defined by the standard Microsoft® operating system.



Select **Daylight Savings Time** to enable automatic time adjustment when Daylight Savings Time occurs.

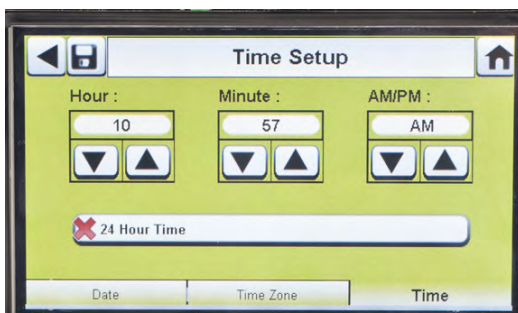


- (3) Select the **Time** tab and enter the **current time**.
- (4) Select **Save**.
- (5) Select **Home**.



The time and date is used for calibration and bump recordkeeping of the instrument. 24-hour or 12-hour time may be chosen.

4.2 Security Setup

The Security Setup is the last screen to automatically display. Setting a numeric password prohibits unauthorized changes to the GALAXY GX2.

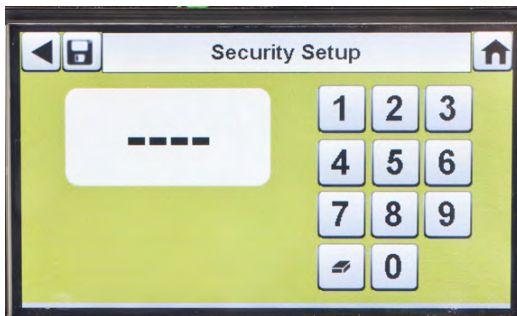

If no password is desired, enter "0000" to disable the password feature. **The Test Stand is shipped with the password disabled.**

- (1) Enter a **four-digit password** for the GALAXY GX2.
- (2) Select **Save**.
 - Retain a copy of the password for your records.
- (3) Select **Home**.
- (4) The GALAXY GX2 Home screen displays [→ Fig. 14].



To change the password, return to the Security Setup screen, enter a new password and select **Save**.

If your password has been misplaced, call MSA Customer Service for reset instructions.

4.3 Home Screen

The Home Screen displays the relevant parameters for the Test Stand and electronic Cylinder Holders.



Fig. 14 Test Stand Home Screen

- | | | | |
|---|------------------------------------|---|------------------------------|
| 1 | Test Mode | 3 | Gas Cylinder Pressure Gauge |
| 2 | Gas Detector Datalog Download Mode | 4 | Gas Detector Charging status |


Test Mode

Bump Only, Calibration Only, or Bump/Cal on Fail. The mode is selected in the Test Setup section [→ chapter 4.5] of this manual.


Gas Detector Datalog Download

On or Off. This setting is described in the GALAXY GX2 Setup, Datalog section [→ chapter 4.5] of this manual.

Pressure Gauges

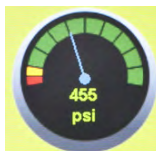

Display test gas cylinder pressure **from the electronic Cylinder Holder only**. Selecting a pressure gauge displays gas cylinder details.

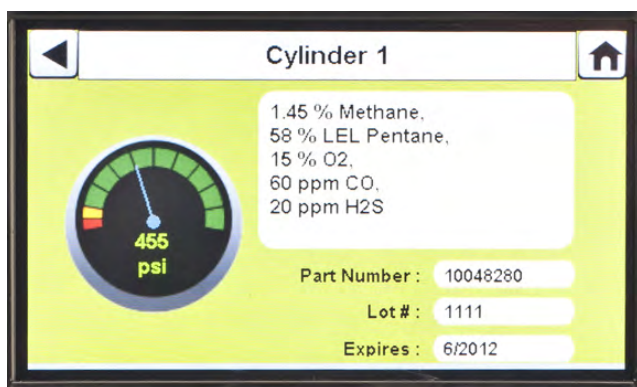

Charging Status

If gas detector charging is installed the battery symbol will display in the lower left corner of the screen. When the gas detector is charging, the battery symbol will cycle. When the instrument is either fully charged or not present, the battery symbol will be solid green.

There can be as much as a 10 minute window between when the instrument battery indicator shows charged and the Test Stand battery symbol shows solid green. The instrument indicator is the most accurate and will indicate the true charge state of the battery.

GX2 Configuration



Provides access to GALAXY GX2 settings. (Password screen will display if configured.) Steps are found under GALAXY GX2 Setup section [→ chapter 4.2] of this manual.

Instrument Records



Provides the most recent calibration and/or bump record for each instrument in the Test Stand bank. **This button is only active on the Master Test Stand.** All other Test Stands will report their data to the Master Test Stand for display.

4.4 General Setup

The following settings can be changed from their default values after entering the password. Select **GX2 Configuration** from the Home screen. The Administrator screen displays.



Fig. 15 Administrator screen

- | | | | |
|---|---|---|------------------------------|
| 1 | <i>GX2 configuration for Test Stand [→ chapter 4.5]</i> | 4 | <i>GX2 Status selection</i> |
| 2 | <i>Instrument configuration [→ chapter 4.6]</i> | 5 | <i>Export Data selection</i> |
| 3 | <i>Test gas cylinder configuration [→ chapter 4.7]</i> | | |

The Administrator screen provides configuration options for the Test Stand (1), instrument (2) and test gas cylinders (3).

The GX2 Status selection (4) provides detailed information about the Test Stand that can be used to troubleshoot identified errors.

The Export Data selection (5) is used to upload instrument settings to a docked gas detector.

4.5 GX2 Configuration

To configure the settings for the GALAXY GX2 select **GX2 Configuration** [→ Fig. 15] on the Administrator screen.

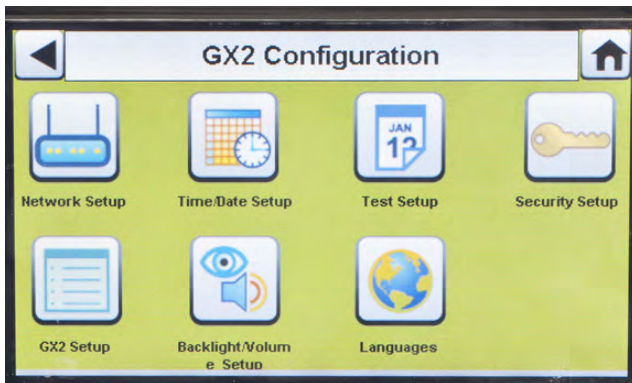


Fig. 16 GX2 Configuration


- | | | | |
|---|---------------------------------|---|--|
| 1 | Network Setup [→ chapter 4.5] | 5 | GX2 Setup [→ chapter 4.5] |
| 2 | Time/Date Setup [→ chapter 4.1] | 6 | Backlight/Volume Setup [→ chapter 4.5] |
| 3 | Test Setup [→ chapter 4.5] | 7 | Languages [→ chapter 4.1] |
| 4 | Security Setup [→ chapter 4.2] | | |



The Time/Date Setup, Security Setup, and Languages Setup have been described in the Initial Setup section [→ chapters 4.1 and 4.2].

Backlight/Volume Setup

Select **Backlight/Volume Setup** on the GALAXY GX2 Configuration screen [→ Fig. 16] to access the Backlight/Volume screens.

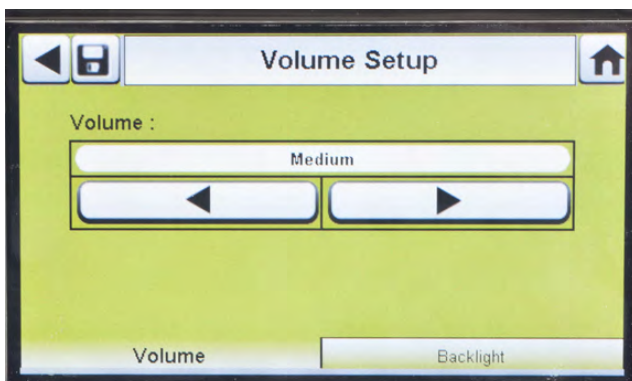

Volume Tab

The user can set the volume for audio indicators.

- (1) Set the **volume** by selecting either the **left or right arrows** on the volume screen.
 - ▷ The default volume level is set to Medium.
- (2) Select **Save**.

Backlight Tab

The user can set the backlight intensity of the display screen.

- (1) Set the **backlight** by selecting either the **left or right arrows** on the backlight screen.
 - ▷ The default backlight level is set to Medium.
- (2) Select **Save**.




To return to the GX2 Configuration screen, select the back arrow ◀ on the top left corner of the screen.



The GALAXY GX2 will reduce the backlight intensity automatically after a period of inactivity. Either select a button or insert an instrument to return the intensity to the user selected level.

Test Setup

Select **Test Setup** on the GALAXY GX2 Configuration screen [→ Fig. 16] to access the Test Setup screens. There are 4 tabs that can be selected under Test Setup: Mode, Calibration, Bump and COMB.

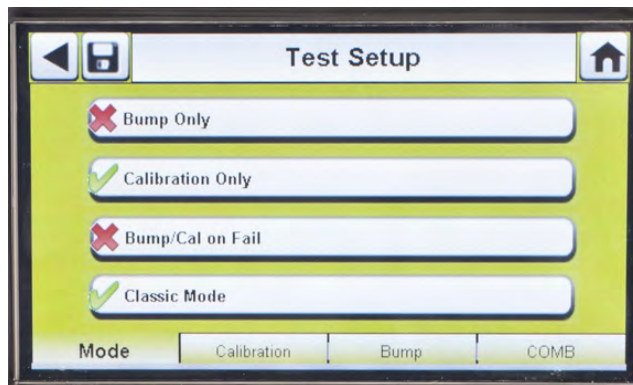

Mode Tab

Select the Mode tab to setup the Test Stand for Bump Only, Calibration Only, Bump/Cal on Fail, or Classic Mode.

- Bump Only setting bumps an instrument and reports a pass or fail status.
- Calibration Only performs a full calibration on an instrument every time it is docked.
- Bump/Cal on Fail (default setting) will bump an instrument. If it fails the bump, the Test Stand automatically performs a full calibration.
- Classic Mode (✓ = enabled) initiates the user-selected test mode each time an instrument is inserted in the Test Stand. The Classic Mode feature means, "always test".



Disabling Classic Mode (✗ = disabled) sets the Test Stand to calibrate or bump an instrument only if the due date approaches. The Test Stand will read the last calibration (or bump) date and add the GX2 Calibration (or Bump) Interval. If the setting is within 5-days of the calibration (or bump) due date, the Test Stand will begin the test. If the calibration (or bump) due date is not within 5-days, no test will initiate, the screen will display "Test Not Due" and the instrument will be turned off after 5-minutes.



A memory card must be used if Bump Only test is enabled and Classic Mode is disabled. Otherwise, the Test Stand will bump the instrument each time it's inserted.

Calibration Tab

The user can set the calibration interval that is used to determine if a calibration is due.

- (1) Set the interval days by selecting either the **up or down arrows** on the calibration screen.
 - ▷ The default calibration interval is set at 30-days.
- (2) Select **Save**.

Bump Tab

The user can set up the bump interval that is used to determine if a bump is due.

- (1) Set the interval days by selecting either the **up or down arrows** on the bump screen.
 - ▷ The default bump interval is 1-day.
- (2) Select **Save**.

COMB Tab

In the Combustible tab the user can set special conditions for the combustible sensor.

- (1) If the gas detector contains a combustible (COMB) sensor, select the %volume to 100%LEL conversion for each gas type. This conversion factor is determined by regional regulations.

The GALAXY GX2 has the following %volume to 100%LEL conversions:

Methane	5.0%v/v	or	4.4%v/v
Propane	2.1%v/v	or	1.7%v/v
Pentane	1.5%v/v	or	1.1%v/v
Butane	1.5%v/v	or	1.4%v/v

The default selections are in the left column.


- (2) Select **Allow Simulant Gas** to turn simulant gas on or off.
 - ▷ The only approved simulant gas for the ALTAIR gas detectors is Methane as a pentane simulant, which is contained in most MSA 4 or 5 gas cylinders.

If this selection is turned off (✗), the exact target gas must be used for the combustible sensor. The Test Stand will check that the exact target gas is available. If it is not, testing will be prohibited and a message will display to indicate the error.

- (3) Select **Save**.

GX2 Setup

To access GX2 Setup, select **GX2 Setup** on the GALAXY GX2 Configuration screen [→ Fig. 16].

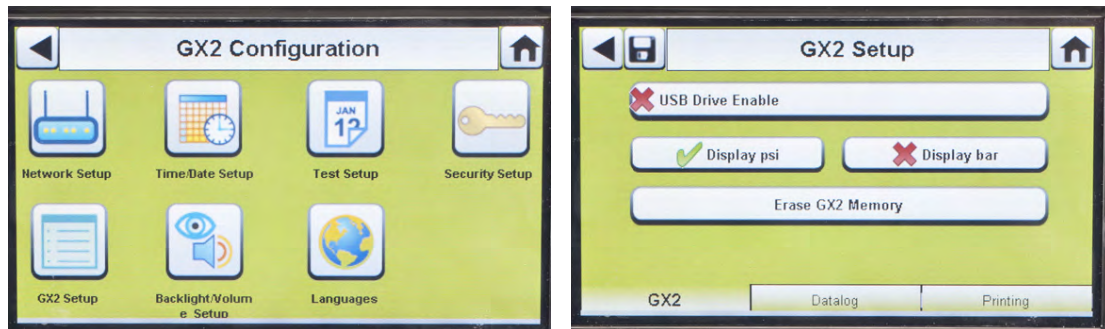


GALAXY GX2 Tab

The following options are available on this screen:

- USB Drive Enable setting allows the user to gather data from the Memory card with a USB drive that can be inserted in the port on the right side of the unit. The default setting is Off (✘).
- Display psi or bar options display the units of pressure on the gauges on the home screen and pressure screen. Selecting one of these options (✓) will disable the other option. The default setting is psi.
- Erase GALAXY GX2 Memory erases all data on the memory card. The user will be prompted to confirm the action before erasure occurs.

Datalog Tab

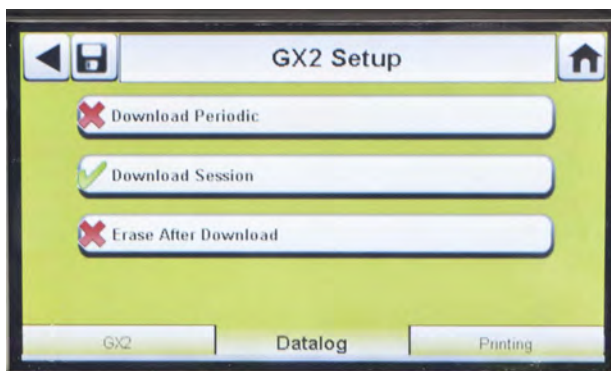

The following options are available on this screen:

- Download Periodic setting will download the Periodic Datalog from the instrument following the specified calibration or bump test. Downloading can be enabled or disabled. The default setting is disabled (✘).
- Download Session will download the Session Datalog from the instrument following the specified calibration or bump test. It contains the date and time stamp of instrument events, such as turn on/off, alarms, and calibrations. The default setting is disabled (✘).
- Erase After Download erases all current and past data once downloaded and verified by the MSA Link Pro database. The default setting is enabled (✓).




Datalogs are not written to the memory card because of potentially large file sizes. If the unit is not networked to the MSA Link Pro software application, instrument datalogs cannot be downloaded with the GALAXY GX2. In this situation the user can use the MSA IR dongle and the free MSA Link application to download datalogs from the instrument.



In order to effectively manage the time required to download datalogs, it is recommended that datalogs be downloaded and erased after each test. This will result in storage of only the most recent information in the instrument datalog, minimizing time to download the information.

Datalog Download Sequence

The following flowchart shows the sequence of events for a datalog download:

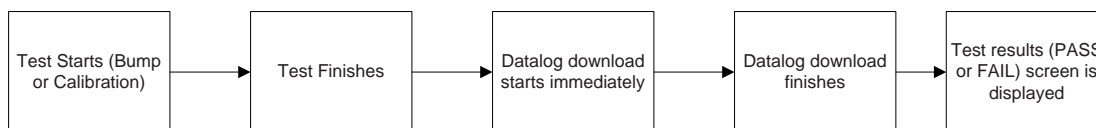

If either the Session or Periodic datalogs are Enabled for downloading, the test status of the calibration or bump will not display until **AFTER** the datalog download is complete.

Print Tab

Select the Print tab to print a calibration sticker or receipt [available from MSA, → Fig 8]. The sticker or receipt will print in the language setting of the Master Test Stand.

- **Print Sticker** setting will print a calibration or bump sticker each time the GALAXY GX2 successfully calibrates or bumps an instrument. A sticker will not print if the instrument fails the test.
- **Print Receipt** will print a receipt and embedded calibration sticker after calibration, or receipt only after a bump. The receipt will print whether the instrument passes or fails, the calibration sticker will only print with a passed calibration.

GX2 Gas Setup

The GALAXY GX2 Test Stand can accept test cylinder gas from the optional Cylinder Holders (electronic and non-electronic) or from a user provided regulated gas source. Cylinder data can be set for up to six gas types per cylinder. The following are the maximum number of gases each instrument can process:

- ALTAIR and ALTAIR Pro: 1 gas
- ALTAIR 4/4X: 4 gases (typically 1 cylinder with quad gas)
- ALTAIR 5/5X: 5 gases (typically quad gas + 1 toxic gas)
- ALTAIR 5IR/5XIR: 6 gases

The GALAXY GX2 processes gas cylinder information and instrument readings in ppm, %(volume) or %LEL. If using certified gas cylinders with the content specified in ppm, the most accurate gas readings from the instrument will be obtained with the instrument set to ppm.

Conversions between ppm and mg/m³ are completed at standard pressure and temperature values. If the gas detector is set to display the readings in mg/m³, note that differences in the following environmental conditions will cause the readings to be affected:

- Standard temperature: 20 °C (68 °F)
- Standard pressure: 101 kPa (760 torr)

An instrument can be set up with Comb EX as its combustible gas. Comb EX is combustible gas that is not in the GALAXY GX2 database and must be manually entered. Hexane is an example of a Comb EX gas that can be used for calibration, but is not listed in the database. Not all combustible gases can be used to calibrate the ALTAIR family of gas detectors. If the Comb EX selection is used, contact MSA to confirm your selected combustible calibration gas is compatible with the instrument and GALAXY GX2.



To access all functionality of the GALAXY GX2 cylinder configuration capabilities, an electronic Cylinder Holder must be connected to the GALAXY GX2.

If the Test Stand is NOT using Cylinder Holders, the gas connections on the left-most GALAXY GX2 Test Stand [→ Fig. 17] are as follows from top:

- Fresh Air
- Cylinder 1
- Cylinder 2
- Cylinder 3
- Cylinder 4



Fig. 17 Gas inlets on the Test Stand

If the Test Stand is using Cylinder Holders [→ Fig. 10], they are set up as follows from right to left:

- Cylinder 1 is the closest to the Test Stand.
- Cylinder 2 is to the left of Cylinder 1.
- Cylinder 3 is to the left of Cylinder 2.
- Cylinder 4 is to the left of Cylinder 3.



Fresh Air is the top port on the last installed (left-most) Cylinder Holder.

Changing Cylinders

Changing test cylinders in the Cylinder Holders is a simple procedure.

To change an RFID tagged test gas cylinder, using an **electronic Cylinder Holder**:


- (1) Unscrew and remove a cylinder with its attached RFID tag from the Cylinder Holder.
- (2) Screw a new test gas cylinder into the Cylinder Holder.



The new cylinder's RFID tag will automatically populate the cylinder data fields on the Cylinder Setup screens.

The Multi-Color Light Band will indicate test gas cylinder functionality as described in the System Features -Cylinder Holder section [→ chapter 2.5].

- (3) Navigate to the **Home screen** and select the appropriate **cylinder pressure gauge** from the touch screen.
 - ▷ The selected Cylinder screen will appear, as shown.

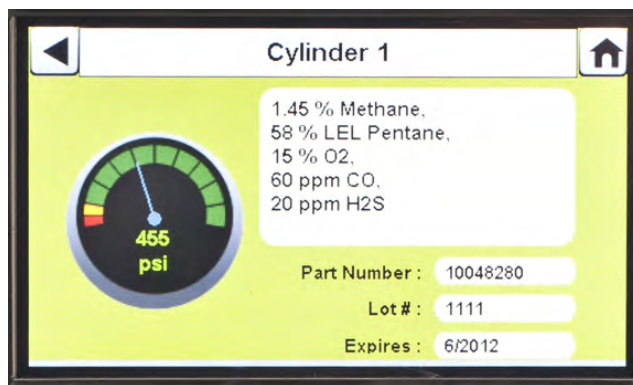

Ensure the GX2 is reading the pressure and gas type.

To change a test gas cylinder, using a **non-electronic Cylinder Holder**:

- (1) Remove the test gas cylinder from the Cylinder Holder.
- (2) Unscrew the pressure regulator.
- (3) Reattach the pressure regulator to the new test gas cylinder.
- (4) Insert it into the Cylinder Holder.



If a new gas type is used, the user must manually enter the cylinder data fields on the Cylinder Setup screens, as described in the Cylinder Configuration section [→ chapter 4.7].

- (5) Navigate to the **Home screen** [→ Fig. 23] and select the cylinder gauge to ensure the GALAXY GX2 is reading the gas type.




If background gases could be present, connect a Zero Air Cylinder to any port on the Cylinder Holder. MSA provides an RFID-tagged Air cylinder for this purpose. This requires a calibration station with expanded solenoid capacity. Refer to the Introduction section [→ chapter 2] for more information about the expanded solenoid option.

Network Setup (Optional)

The GALAXY GX2 can be networked to a PC with the MSA Link Pro software application. Networking (single or multiple connected units) allows the user to remotely gather and analyze data, monitor performance, and configure the Test Stand.


An Ethernet cable supporting 10/100 Mb must be connected to the farthest right Ethernet jack when facing the front of the unit, (shown in Fig. 6) and connected to the PC or network router.

To configure the network setup, navigate to the **GX2 Configuration** screen and then select Network Setup. The **Network Setup** screen displays. It is recommended to use a Static IP address between the Master Test Stand and the MSA Link Pro application.

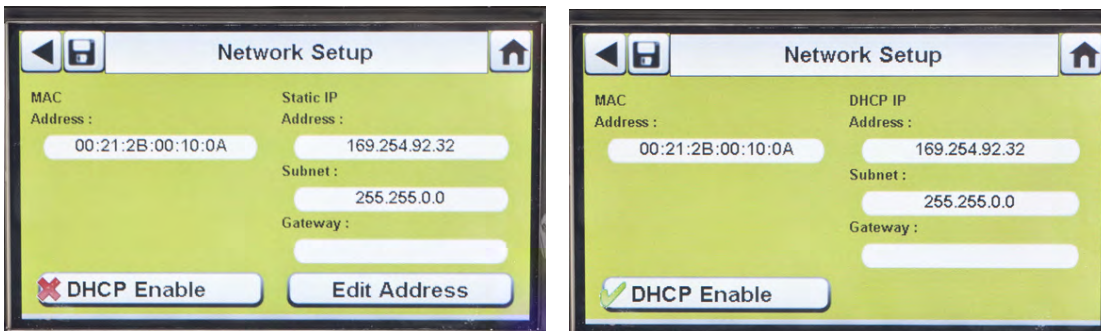

Selecting **DHCP Enable** (✓) allows the GALAXY GX2 to automatically receive an IP address from the network. It is recommended that the DHCP server always assign the same IP address to the Test Stand to maintain communications with the MSA Link Pro application.

- (1) If DHCP is disabled (✗), select **Edit Address** on the Network Setup screen.
 - ▷ The **Static IP Edit** screen displays.

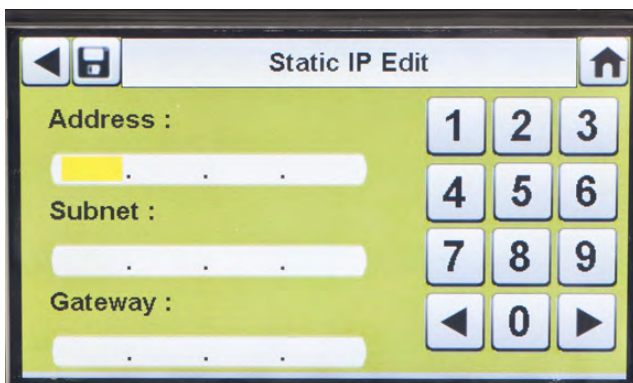

Corporate networks may require the involvement of an IT department for setup.








- (2) Enter the Static IP **Address** on the **number keypad**.
 - ▷ The yellow highlighted cursor then moves to the Subnet field.
- (3) Enter the **Subnet** on the **number keypad**.
 - ▷ The yellow highlighted cursor then moves to the Gateway field.
- (4) Enter the **Gateway** on the **number keypad**.
 - ▷ The yellow highlighted cursor then moves to the Subnet field.
- (5) Select **Save**.

4.6 Instrument Configuration

The GALAXY GX2 Automated Test System allows the user to configure a limited set of gas detector settings at the Test Stand, as defined below:

Gas Detector Settings Configurable at the Test Stand

- | | |
|---|---------------------------------|
| - Time & Date (automatically set to the Test Stand time & date) | - Alarm Set-point |
| - 24-Hour Time | - Latching Enabled |
| - Cal Gas Value | - Vibration Motor On/Off |
| - Company Name | - LED On/Off |
| - Company Department Name | - Horn Enable |
| - User Name | - Man Down (if applicable) |
| - Exposure Warning | - Enable/Disable Sensor Channel |
| - Exposure Alarm | - Cal Due On/Off |
| - TWA | - Cal Due Interval |
| - STEL | - Average Enabled |
| - Deficiency Warning | - Peak Enabled |
| - Deficiency Alarm | - Datalog Interval |

The user can save those settings to a reusable file for later use [→       ]. The settings are stored on the Digital Secure USB (black) key. No instrument setting files are stored locally.



All settings entered in Instrument Configuration must be saved on the respective screens. **To apply settings to the instrument, the user must select Update Settings before removing the instrument.**

The Instrument Configuration screens are accessed **only when an instrument is inserted in the Test Stand**. To configure an instrument, insert the Digital Secure USB (black) key and navigate to the Administrator page. Select **GX2 Configuration** screen [→ Fig. 23] and then **Instrument Configuration**. The Instrument Configuration screen displays.

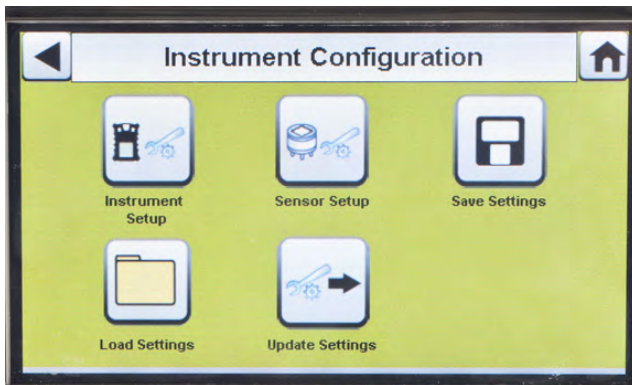


Fig. 18 Instrument Configuration

- | | | | |
|---|------------------|---|-----------------|
| 1 | Instrument Setup | 4 | Load Settings |
| 2 | Sensor Setup | 5 | Update Settings |
| 3 | Save Settings | | |

Instrument Setup

The user can set the instrument's datalog gathering functionality, alarms, calibration intervals, and identification through the 4 tabs on the Instrument Setup page.

- Select Instrument Setup [→ Fig. 18] from the Instrument Configuration screen.

Datalog Tab

Select the Datalog tab to set how the instrument compiles sensor reading data during a set interval.

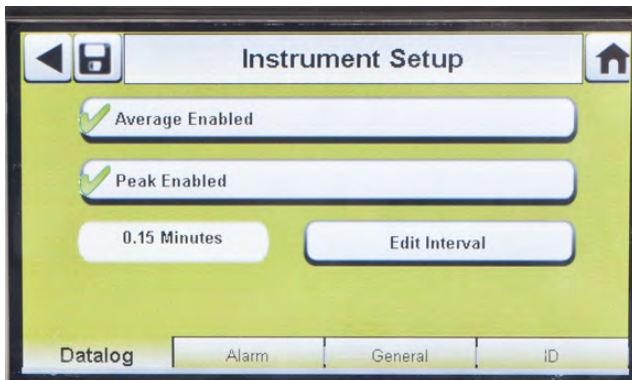


Fig. 19 Instrument Setup - Datalog

- Average Enabled (✓) compiles an average of the sensor readings during the set interval time.
- Peak Enabled (✓) records the highest reading during the set interval time.
- Edit Interval allows the user to set a specific interval time frame for the recording of instrument data to its datalog. The smaller this interval, the more frequent the data will be stored to the datalog. Large datalogs will require longer download times.

Alarms Tab

Select the Alarm tab to set the instrument alarm functionality.



Fig. 20 Instrument Setup - Alarm

- Audio Alarm Enable (✓) sets the instrument to emit a beeping sound in an alarm condition.
- LED Alarm Enable (✓) sets the instrument to flash its LEDs in an alarm condition.
- Vibrating Alarm Enable (✓) sets the instrument to a vibrating alarm in an appropriate condition.
- Man Down Alarm Enable (if applicable) will activate the Audio and LED alarms if the instrument does not detect motion for 30 seconds (select gas detectors equipped with this feature).

General Tab

Select the General tab to set the instrument calibration interval. The user can select a 24-hour Time or 12-hour Time standard.


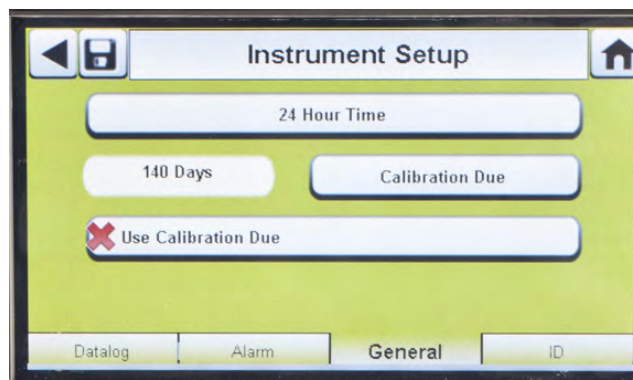


Fig. 21 Instrument Setup - General



- (1) Select **24-Hour Time** to set that standard. If not selected the instrument will function in the default 12-Hour Time standard.
- (2) Select **Calibration Due** to set calibration interval for the instrument.
 - ▷ This Calibration Interval screen displays.
- (3) Set the **Calibration Interval (Days)**.
- (4) Select **Save**.

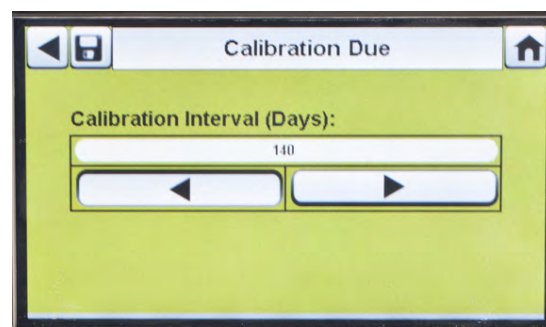

For proper operation, ensure the GALAXY GX2 and instrument Calibration Due intervals are the same value. If not selected, calibration occurs based on the gas detector Cal Interval. This can lead to more (or less, depending on setting) frequent instrument calibration and unwanted overdue indications.

ID Tab

Select the ID tab to set the instrument name, company, and department.

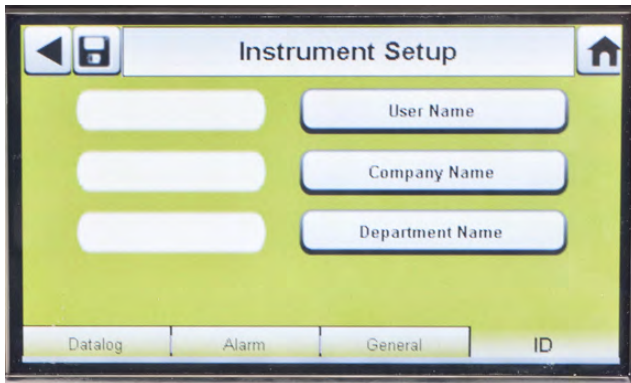


Fig. 22 Instrument Setup - ID


- (1) Select **User Name** to assign a designation.
- (2) Enter the **name** on the **keypad**.
- (3) Select **Save** and then select the **back arrow**.
- (4) Select **Company Name**.
- (5) Enter the **name** on the **keypad**.
- (6) Select **Save** and then select the **back arrow**.
- (7) Select **Department Name**.
- (8) Enter the **name** on the **keypad**.
- (9) Select **Save**.




To apply settings to the instrument select **Update Settings** on the Instrument Configuration screen [→ Fig. 18], before removing the instrument from the GALAXY GX2.

Sensor Setup

The GALAXY GX2 displays the gas types the instrument is programmed to detect. The user can enable or disable sensor settings, change span value, enable or disable alarms, and set alarm latching. Adding new sensors or changing sensor types cannot be done in the GALAXY GX2. These tasks must be completed at an MSA-authorized service center.

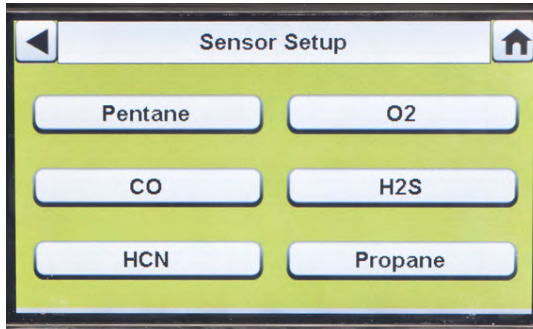

- (1) Select **Sensor Setup** from the Instrument Configuration screen [→ Fig. 18].
 - ▷ This screen displays the sensors currently installed in the instrument.

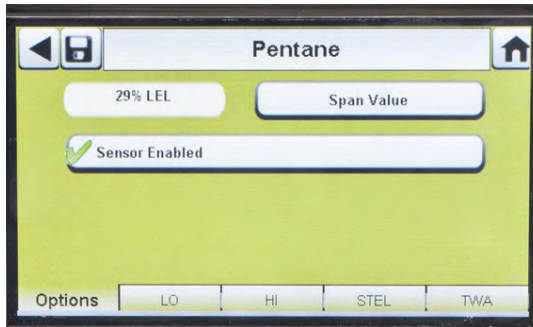

- (2) Select the **sensor** that you wish to configure on the Sensor Setup screen.

Options Tab

Select the Options tab to set Span Value and enable or disable the sensor for that gas type.

- (1) Select **Span Value** to enter the calibration and bump span value. Check the instrument's product user manual for recommended span value of each sensor.
 - ▷ The GALAXY GX2 will prohibit entering span values outside the instrument range. The instrument will transmit its range to the Test Stand.



WARNING

Using an incorrect span value can seriously impair the gas detector's ability to warn the user of dangerous conditions. The gas detector could fail to perform as designed and persons who rely on this product for their safety could sustain severe personal injury or loss of life.

- (2) Enter the **Span Value** on the number keypad.
- (3) Select **Save** and then select the **back arrow**.

Alarm Setpoint Tabs

Select the LO, HI, STEL, and TWA tabs to enable each alarm, determine setpoints, or enable latching for each sensor.



WARNING

Using an incorrect alarm setting can seriously impair the gas detector's ability to warn the user of dangerous conditions. Extreme caution must be used when changing alarm levels. Ensure alarm changes are properly set prior to instrument use.

The GALAXY GX2 will read alarm limits from the instrument and prevent entered values from exceeding those limits.


- LO is a warning alarm that indicates the instrument is exposed to a gas level above the first alarm level. For an oxygen sensor, this alarm level can also be less than 20.7 %Vol.
- HI is a warning alarm that indicates the instrument is exposed to a gas level above the second alarm level. For an oxygen sensor, this alarm level can also be less than 20.7 %Vol.
- STEL is the Short Term Exposure Limit warning alarm that indicates the instrument is exposed to a higher than acceptable gas threshold for 15 minutes.
- TWA is the Time Waited Average that projects the current gas readings over an 8-hour period. The warning alarm indicates if projections reach a higher than acceptable threshold.

To change the Alarm Setpoint:

- (1) Select **Alarm Setpoint** from the LO, HI, STEL, or TWA tabbed screens.
- (2) Enter the **setpoint** on the number keypad.
- (3) Select **Save**.

Save Settings

Once the instrument settings are configured, these settings can be saved to a USB drive for future application onto another instrument.

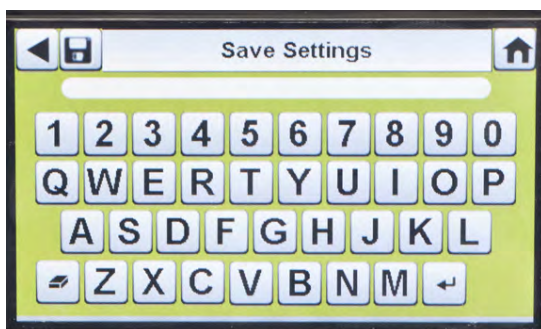

- (1) Select **Save Settings** (📁) from the Instrument Configuration screen.
- (2) Enter a **file name** for the settings on the keypad.



The file name is limited to 24 Western language characters. It is recommended that a detailed description of changed settings for each file be kept in a secure location to ensure proper gas detector configuration.

- (3) Select **Save**.

Load/Delete Settings

Configured instrument settings can be loaded into the GALAXY GX2 and applied to an instrument, provided the black USB key is inserted into the Master Test Stand as described in the **USB Drives** section [→ chapter 2.4] of the System Features section.

This feature is particularly useful when configuring a large number of instruments. Unused settings may be permanently deleted from the Test Stand. Pre-defined settings from a USB drive can be efficiently transferred.

To load or delete settings:



- (1) Insert a **USB drive** with the Saved settings into the port, under the memory card port on the right side of the Test Stand.
- (2) Select **Instrument Configuration** on the Home screen.
- (3) Select **Load Settings** on the Instrument Configuration screen.



Saved settings on the black USB key display.

- (4) Select the **up or down arrows** to indicate the file name of the setting to apply.
- (5) Select **Load** to apply the setting to the instrument.
Select **Delete** to permanently remove the setting from the USB drive.
- (6) Select the **Back Arrow** on the top left of the screen to navigate to the Instrument Configuration screen.

Update Settings

Select **Update Settings** to save or delete the settings on the instrument.



Repeat the Load Settings and Update Settings **steps for each new instrument** that is to be changed.

4.7 Cylinder Configuration

The user can configure the GALAXY GX2 to change assigned gases in each cylinder holder attached to the Test Stand(s).

- (1) To access Cylinder Configuration, navigate to the **Administrator** screen:




Fig. 23 Administrator screen

1 Icon - Cylinder Configuration

2 Icon - Home Screen


- (2) Select **Cylinder Configuration**.

▷ The Cylinder screen displays.

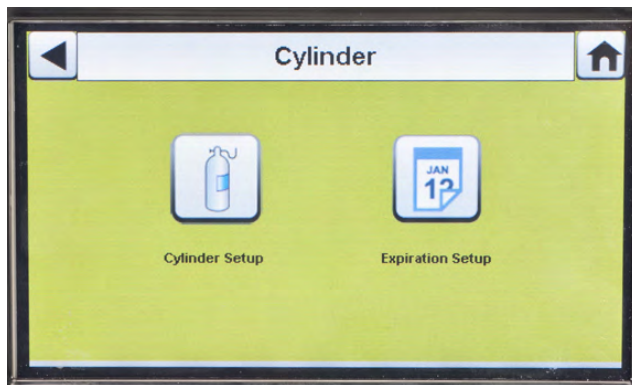


Cylinder Setup

- Select **Cylinder Setup**.
 - ▷ The Cylinder Setup screen displays for Cylinder 1, which is the cylinder closest to the Test Stand.

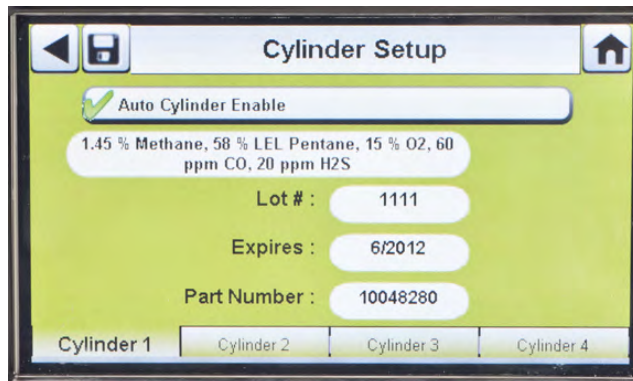

Cylinder Tabs


Cylinder data will populate automatically when using the electronic cylinder holder and a test gas cylinder with RFID tag. This feature is enabled when this button appears as shown:



The **Lot #** and **Expires** fields **cannot be manually entered**. They are populated only when using an electronic cylinder holder.

To enter cylinder data, if not using an electronic cylinder holder:

- (1) Select "**x**" on the Auto Cylinder Enable button for manual entry.
- (2) Select **Edit** on the Cylinder Setup screen.
- (3) The user will be prompted to Save Changes? Select **Yes**.
 - ▷ The Edit Cylinder Data screen displays.

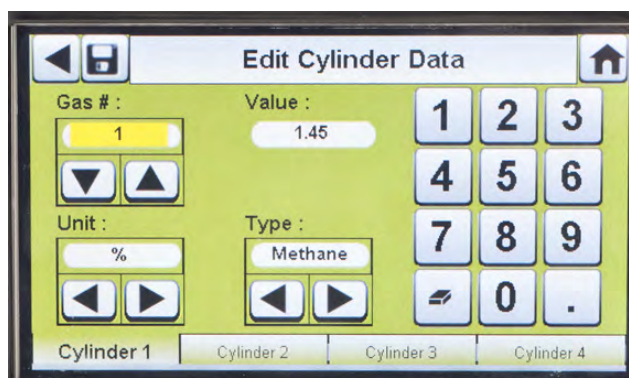

- (4) Set the **Gas #** by selecting either the **up** or **down** arrows. If there is one gas in the cylinder, select 1. **For additional gases in the same cylinder (gases 2-6)**, enter the gas parameters.

Example: if Cylinder 1 contains quad gas, four sets of gas parameters should be entered (gases 1, 2, 3, and 4). To remove a gas from the list, set the **Value** to zero (0), **Units** and **Type** to None, and then select **Save**.

- (5) Set the Unit by selecting either the **left or right arrows**.
- (6) Set the Value by entering the correct value on the **number keypad**.
- (7) Set the Type by selecting either the **left or right arrows**.
- (8) Select **Save**.
- (9) Repeat steps 1 through 6 for each cylinder (maximum of 4 cylinders).

⚠ WARNING

Proper setup of non-RFID tagged gas cylinders is critical. Accurate calibration may not occur if improper cylinder values are entered. The user must also confirm the cylinder gas concentration is compatible with the respective instruments that are to be calibrated. The gas detector could fail to perform as designed and persons who rely on this product for their safety could sustain severe personal injury or loss of life.



The GALAXY GX2 will prohibit entering gas values greater than 75%LEL for combustible gases.

Expiration Setup

When using the electronic Cylinder Holder, the gas cylinder expiration date is automatically read from the RFID tag. The Test Stand can send an email notification (if configured) of the pending expiration prior to the expiration date. The user must define **how many weeks in advance the notification is sent**. This time period is suggested to be the lead-time to replace/reorder the cylinder.

Select **Expiration Setup** on the Cylinder screen to access the cylinder Expiration Setup screens.



- (1) Set the **Notice weeks to expiration** by selecting either the up or down arrows.
 - ▷ The default value is 4 weeks.
- (2) Select **Save**.
- (3) Repeat steps 1 and 2 for each cylinder.



This feature is only available for electronic Cylinder Holders with RFID tagged test gas cylinders.

5 Using the GALAXY GX2

Once the GALAXY GX2 is set up and configured to accept a gas detector, the user must complete the following steps to perform instrument tests.

5.1 Turning on the System

The system is turned on when the AC Power Module or Vehicle Power Adapter is plugged into the unit and a reliable power supply is provided. The GALAXY GX2 does not have an on/off button and is designed to remain powered on.

5.2 Inserting the Instrument

The GALAXY GX2 includes one of three instrument cradles to accommodate the ALTAIR family of gas detectors.


To insert all instruments, except the ALTAIR 5/5X:




- (1) Insert the bottom of the instrument into the cradle and push the top until it snaps into place.



There is a several second delay between the insertion of the instrument and start of gas testing while communications are established. A Progress screen displays when gas testing starts.

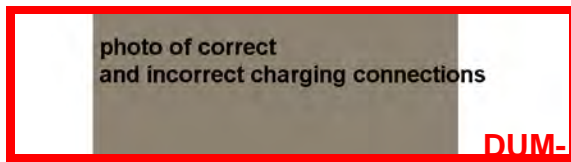

- (2) If using the charging option on the ALTAIR 4/4X ensure the Test Stand charging connector at the bottom of the cradle makes contact with the instrument contact.

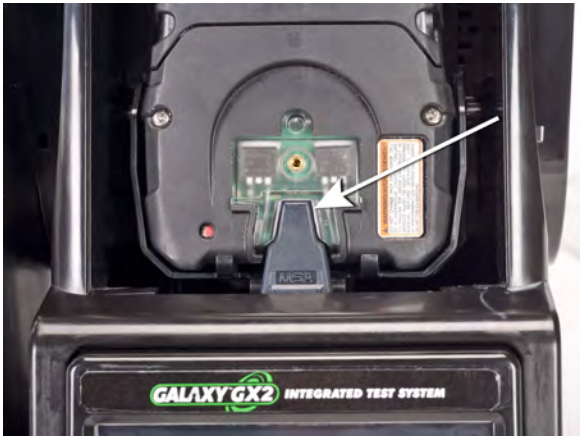To insert the ALTAIR 5/5X:

- (1) Insert the instrument into the cradle, sliding the bottom over the charging connector.
 - If your Test Stand has the optional charging feature, ensure the charging connector at the bottom of the cradle makes contact with the instrument contact.



- (2) Pivot the instrument in the cradle upwards, into the gas inlet sleeve (see arrow). The instrument will lock into place, once properly positioned.
- (3) Ensure the red LEDs on the instrument flash when communicating with the Test Stand.



There is a several second delay between the insertion of the instrument and start of gas testing while communications are established. A Progress screen displays when gas testing starts.

5.3 Running a Test

Complete the following steps to run an instrument test:

- (1) Turn on the gas detector and allow it to warm up per the appropriate instrument manual.

**WARNING**

Instrument must warm up per the instrument manual before attempting calibration; failing to allow unit to warm up can cause erroneous test results, which can cause inaccurate calibrations.

- (2) Ensure the test gas cylinder tubing is properly attached to the barb fitting of the gas inlet, or that the cylinder(s) are properly screwed into the Cylinder Holder(s) and contain gas.
- (3) Verify the selected mode, indicated in the top left corner of the Home screen. (Calibration Only, Bump Only, or Bump/Cal on Fail.)



If the desired mode is not set, refer to the GALAXY GX2 Setup section [→ chapter 4.5] of this manual.





Before inserting an ALTAIR or ALTAIR Pro into the Test Stand, press and hold the instrument Test button for one second. The screen on the gas detector should display **Gas?** prior to inserting it into the Test Stand (see photo below).

- (4) Insert the instrument into the Test Stand cradle.



- (5) The GALAXY GX2 will read the instrument configuration via the IR link up to 10 seconds. If the LED lights on the instrument flash red do not remove the instrument. This indicates that IR communications are in progress.
- (6) After the initial IR communications, the bump or calibration progress screen displays that includes up to six gas types and a progress bar.

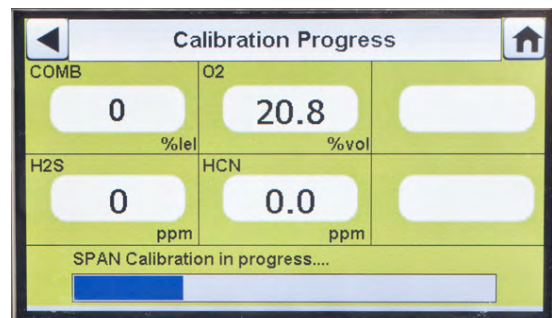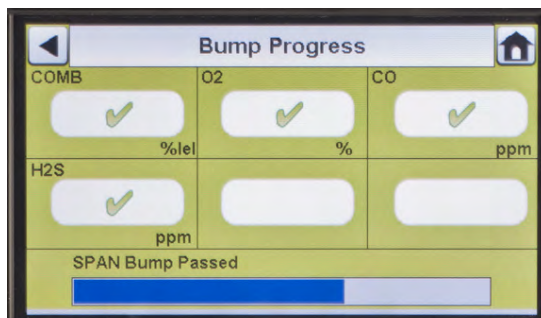

For the Bump Progress screen, an hourglass symbol will display in each sensor box until that sensor's bump is complete. A green checkmark (✓) or red X (✗) will display for each sensor when the Bump test is complete.



If the Test Stand is configured to download the session log and/or periodic log from the instrument, the download will occur after the calibration or bump test. Refer to the GALAXY GX2 Setup section [→ chapter 4.5] to configure this feature.



If the instrument is removed while the Test Stand is performing a calibration or bump the instrument will default to the last valid and retained calibration parameters. For gas detectors with multiple sensors, any green colored calibration progress values are considered a valid calibration.

Reminder: Instrument datalogs can only be downloaded when an Ethernet connection to MSA Link Pro is active or via an IR Dongle to MSA Link.



Helpful Hint: Instrument Periodic datalogs can grow large and create lengthy download times, particularly for the ALTAIR 5/5X. MSA recommends downloading and then erasing Periodic datalogs after every test. Erase Datalog is the default setting.

The GX2 will only erase instrument datalogs after receiving confirmation from MSA Link Pro that data is successfully stored. If the software application is inactive the Test Stand displays a message stating datalogs cannot be downloaded.

- (7) The instrument Pass or Fail screen displays. This screen displays until a new instrument is inserted or the user makes another selection on the touch screen. If datalog downloads are enabled, the screen will indicate the status of the download (Successful or Failed) at the completion of the data transfer.



- If the instrument passes the test, remove it or select **Home**.
- If the instrument fails the test, select **Calibration Details** or **Bump Details** for sensor failure information.

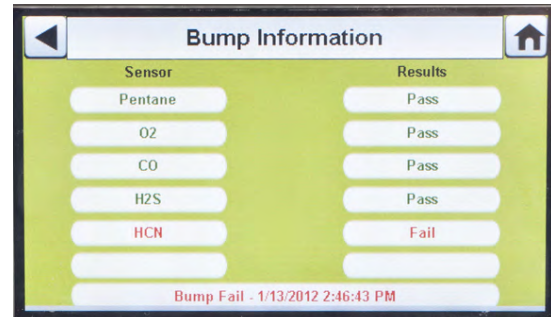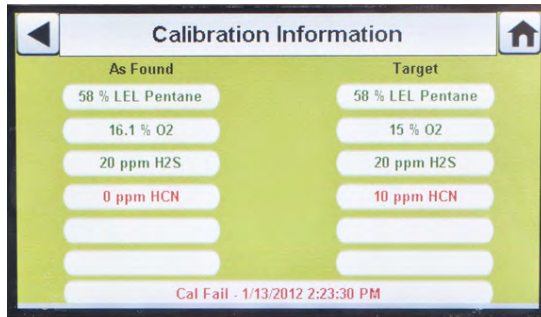

If the instrument fails the bump test while the mode is set to **Bump/Cal on Fail** the Test Stand will automatically calibrate the instrument.



The Calibration Information screen displays two columns for the sensors: As Found and Target. As Found is what the Test Stand detected prior to calibration. The Target column specifies the span gas value that is being applied. If the sensor passes calibration, the Target value becomes the new calibration point.

- If a sensor failed during a bump, attempt to calibrate the instrument. Refer to calibrate an instrument in this manual.
- If the unit fails the calibration, review the troubleshooting section [→ chapter 6] of this manual.





If using the ALTAIR 4/4X or 5/5X the instrument will shut off if not removed from the Test Stand within 5 minutes after test completion. If the GALAXY GX2 is equipped with the charging option the instrument will begin charging after shutoff.

If Cylinder is Configured Incorrectly or Gas is Not Available

The Test Stand will verify the instrument sensors are compatible with the gases in the cylinder(s). If not, the GALAXY GX2 will:

- (1) Prompt the user to run a partial bump or calibration.
- (2) If a partial bump or calibration is acceptable, select **Yes**.
If not, select **Home** to navigate to the administrator screen.
 - ▷ If a partial bump or calibration is performed the test results screen displays.
 - ▷ Dashes (---) under the results column indicate unavailable gases for the test.

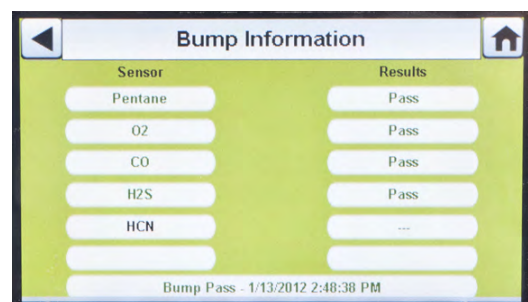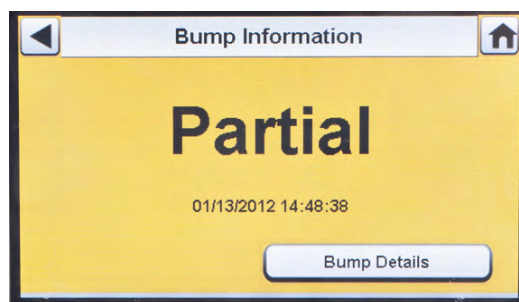



If performing a manual bump or calibration on an individual sensor in a multi-gas detector, always perform the manual test after the GALAXY GX2 test is complete.



If using MSA Link Pro software, partial bump tests will result in the instrument being listed as "Overdue" for bump testing since not all sensors were tested.

After Setup is complete:

After initial installation and setup are complete, confirm the GALAXY GX2 is properly configured. Perform manual calibrations on several instruments and then repeat the calibration using the GALAXY GX2. Confirm the calibration results are equivalent.

5.4 Classic Mode

If the Classic Mode button is enabled (✓), every time a gas detector is inserted in the Test Stand it will be tested according to the user-selected Mode. This feature ignores the Calibration and Bump Interval.

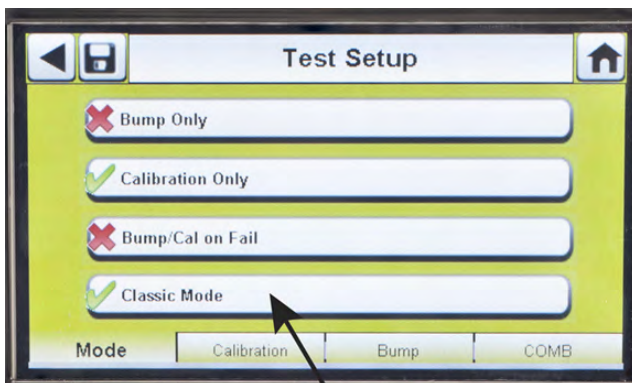


Fig. 24 Test Setup

If the user disables the Classic Mode (✗) and datalog downloading is enabled, the Test Stand will determine if testing is due. If not, the Test Stand downloads the datalogs.

5.5 GALAXY GX2 Always Ready Feature

The Always Ready feature is a capability of the ALTAIR 4X and ALTAIR 5X with the following software versions:

- ALTAIR 4X: v2.03 and higher
- ALTAIR 5X: v1.11 and higher

The feature permits the gas detector to be automatically calibrated on a user-defined interval. The most common use of this feature allows the user to configure the GALAXY GX2 to automatically calibrate an instrument prior to the start of work-shift.

The following configurations must be set to allow the Always Ready feature to be active:

Instrument	GALAXY GX2 Test Stand
<ul style="list-style-type: none"> - Calibration Due Interval = any interval [→ chapter 4.6]. Ensure that this interval is the same as on the Test Stand. - Valid calibration at the desired time of day 	<ul style="list-style-type: none"> - Charging version of the Test Stand - Calibration Due Interval = any interval [→ chapter 4.6]. Ensure that this interval is the same as on the gas detector. - Test Mode = Calibration

When these conditions are met, every hour the instrument will internally check its clock and last calibration time and date. If the next calibration is due to occur within the hour, the gas detector powers itself on and the Test Stand will initiate the calibration. Following calibration, the Test Stand will power off the instrument and begin charging. The sequence repeats based on the Calibration Due Interval.



The Always Ready feature is solely based on Calibration Due Interval, not on time of day. Each subsequent calibration starts within the same hour of the day as the previous calibration.



If for some reason the instrument fails calibration two times in a row, the Always Ready feature will be disabled in the instrument to prevent calibration gas from being unnecessarily consumed. The user must diagnose the cause of the failed calibrations and initiate a valid calibration at the desired time of day.

5.6 E-mail Notification

If a network connection is active and e-mail notification is configured via the MSA Link Pro software, the Master Test Stand will send e-mails based on the events shown in the table below. The MSA Link Pro user can configure which day(s) of the week that e-mails are sent and for which conditions. Note that "EO" = Each Occurrence and "FO" = First Occurrence.

Frequency	Condition for Email	e-mail is sent when
FO	Low Calibration Gas	Gas cylinder pressure \leq 99 psi
FO	Empty Calibration Gas	Gas cylinder pressure \leq 49 psi
FO	Calibration Gas Nearing Expiration Date	User configurable (default = 4 weeks)
FO	Calibration Gas Expired	Day of expiration
FO	GX2 Faults/Errors	As they occur
FO	SD Memory Card Nearing Full	90% Full
FO	SD Memory Card Full	99% Full
EO	Security Accessed	After password is entered
EO	Bump Overdue	User configurable (default = 1 day)
EO	Calibration Overdue	User configurable (default = 30 days)
EO	Bump Failed	As they occur
EO	Calibration Failed	As they occur
EO	X-Cell Sensor Status	Reported after 2 successive failed calibrations

5.7 Overdue Calibration and Bump Notification

The Test Stand will determine that gas detectors are overdue for a bump or calibration and send notification per the table above. Gas detectors are flagged as overdue on the day following the due date.

6 Troubleshooting

Use the following information to diagnose abnormal conditions.

6.1 Instrument Will Not Initiate a Bump or Calibration

- (1) Ensure the instrument is turned on and errors are not displayed.
- (2) If using an ALTAIR or ALTAIR Pro, press and hold the button for one second. The screen on the gas detector must display **Gas?** prior to insertion into the Test Stand.



- (3) Ensure the instrument is seated securely in the Test Stand cradle.
- (4) If using the ALTAIR 5 or 5X, ensure the instrument pump inlet is seated securely in the Test Stand gas inlet sleeve.



- (5) Verify errors are not displayed from the electronic Cylinder Holder. If using the non-electronic Cylinder Holder, ensure adequate connections are made and verify cylinder pressure.
- (6) If using a GALAXY GX2 with the charging option for the ALTAIR 4/4X or 5/5X ensure the charging connection fits securely to the instrument. This properly aligns the instrument in the test stand.
- (7) Ensure the GALAXY GX2 is set in the desired test mode. Refer to the GALAXY GX2 Configuration [→ chapter 4.5] in the Setup section of this manual.

6.2 Instrument Fails Zero Calibration or Bump

- (1) Check the Fresh Air filter and replace if contaminated.
- (2) If not using zero gas, ensure that the atmosphere is free of any interfering gas.
- (3) If connecting test gas without a Cylinder Holder, ensure the gas tubing line is not connected to the top fresh air port on the left side of the farthest left unit.

6.3 Instrument Fails Span Calibration or Bump

- (1) Verify the instrument span setting is the same value as the test gas.
- (2) For ALTAIR H₂S and ALTAIR CO instruments, ensure that the green gas seal is inserted in the Test Stand.
- (3) For ALTAIR 5/5X instruments, verify that the gas inlet on the instrument is fully inside the inlet nozzle on the Test Stand.
- (4) Check the right side of the farthest right unit to ensure the white plugs are secure over the gas outlet connections.
- (5) Check the sides of each unit to ensure the gas line barb fittings are in place and aligned between the Test Stands and Cylinder Holders. Misaligned barbs lead to gas leakage.
- (6) Ensure the cylinder configuration is correct. Refer to the Cylinder Configuration information in the Setup section [→ chapter 4.7] of this manual.
- (7) Use the Details screen to identify failing sensor(s). If repeated failures occur, replace sensor per instrument manual instructions.



Occasionally, in normal use conditions, electrochemical sensors can be exposed to either very high levels of the target gas or to an interferent gas, which can saturate the sensor electrolyte or filter. If this type of saturation occurs, it may affect the sensors performance and ability to zero or span calibrate. This is typically a temporary effect and the sensor will self-recover if left in fresh air. The recovery time is dependent on the saturation gas and the level of exposure, but is less than 24 hours in almost all cases. Recovery should be attempted prior to sensor replacement.

6.4 Instrument Records Do Not Display

Instrument records only display in the farthest right Test Stand. Check the memory card port in the right side port of the farthest right Test Stand. If the optional SD or SDHC memory card is not installed, the instrument cal and bump records will not display.

Test Records Not Saved to Memory Card

Most likely caused by a corrupted memory card or new card that is write protected. In the case of a write protected memory card, slide the switch on the side of the card to set it to accept data.

6.5 Cylinder Data Does Not Display

If using an electronic Cylinder Holder with RFID-tagged MSA gas cylinders, the general cylinder parameters automatically populate. If using a non-electronic Cylinder Holder or test gas from an independent source the user must manually enter cylinder data. Gas cylinder pressure will ONLY display with an electronic Cylinder Holder.



The cylinder gauges on the Home screen and the subsequent cylinder screens only display pressure, Part Number, Lot Number, and Expiration fields if using an electronic Cylinder Holder.

Cylinder Data Does Not Display:

- (1) If using an electronic Cylinder Holder, verify the pressure is displayed on the Home screen. If not displayed, the Cylinder Holder and Test Stand may not be communicating via the connector. Remove the flange screws and push the two stands together. If a valid pressure reading displays re-insert the flange screws.
- (2) If using an electronic Cylinder Holder, ensure the test gas cylinder is properly screwed into the base.
- (3) If not using an RFID-tagged gas cylinder, verify that cylinder parameters have been entered [→ GX2 Gas Setup].
- (4) Using an independent regulator, ensure the test cylinder(s) contain test gas.
- (5) If not using an electronic Cylinder Holder, ensure the cylinder description is entered in the cylinder set up screens. Refer to the cylinder configuration set up section [→ chapter 4.7] of this manual.

6.6 Test Stand Yellow LED Blinking

The Test Stand provides a comprehensive status of hardware and firmware components through the GX2 Status screen, accessed on the Administrator screen [→ Fig. 23] by selecting the **GX2 Status** button. The table below shows the information reported for each Test Stand and Cylinder Holder in a bank. If one of these components is in Fault, a red message displays, indicating the error.

Cylinder Holder (number)	If Status is Fail, then:
-Cylinder Gas	Indicates a fault condition with the cylinder (expired or empty)
-Flash Memory	Return to an Authorized MSA Service Center for repair
-RAM Memory	Return to an Authorized MSA Service Center for repair
-Power Supply 12V	Return to an Authorized MSA Service Center for repair
-Power Supply 6V	If GX2 6V power supply shows failed, try reconnecting. Otherwise, return to an Authorized MSA Service Center for repair
-RFID Tag	Return to an Authorized MSA Service Center for repair
-Communications	Return to an Authorized MSA Service Center for repair
- RFID Read	Corrupt RFID tag. Enter cylinder information via manual setup screens.
-Data	Corrupt RFID tag. Enter cylinder information via manual setup screens.

Cylinder Holder (number) If Status is Fail, then:



-CRC	Corrupt RFID tag. Enter cylinder information via manual setup screens.
-Identifier	

Test Stand (number) If Status is Fail, then:

-IR	Cycle power to the Test Stand. Ensure there is no dirt on the gas detector blocking the IR interface. If the problem persists, return to an Authorized MSA Service Center for repair.
-Pump	→ chapter 6, under Pump Fault or Flow Fault
-Flow	→ chapter 6, under Pump Fault or Flow Fault
-SD Card 90% Full	Replace SD card or delete files.
-SD Card 100% Full	Replace SD card or delete files.
-Power Supply 6V	If another GX2 power supply is available, try exchanging power supplies. Otherwise, return to an Authorized MSA Service Center for repair.
-Power Supply 1.8	Return to an Authorized MSA Service Center for repair
-Data	A setting was corrupted and factory defaults have been restored for all settings. Verify all GX2 settings are correct for your application.
-CRC	A setting was corrupted and factory defaults have been restored for all settings. Verify all GX2 settings are correct for your application.
-Configuration Reset	This occurs when a Data or CRC fault is detected. This means that factory defaults have been restored. If this error returns while making setting changes, return to an Authorized MSA Service Center for repair.
-Cylinder Comm	Communications between the Test Stand and the Cylinder Holder is disrupted. Verify Cylinder Holder LED status shows green; push units together to ensure good connection; if problem persists, return to an Authorized MSA Service Center for repair.

6.7 System Error Messages

The GALAXY GX2 can display a number of system errors that display on the Test Stand screen with a red error box. The error message must be acknowledged for Test Stand operations to resume.

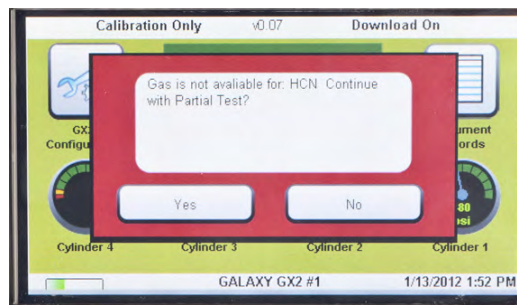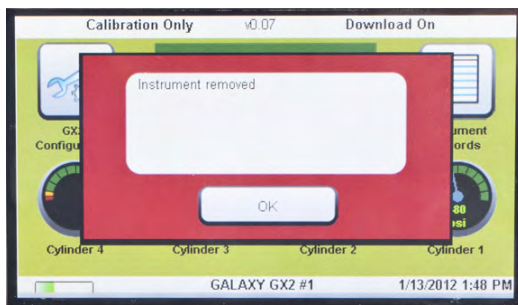

Memory Card Write Protect

Occurs if the memory card cannot accept data. Ensure the switch on the side of the memory card is unlocked so it can accept data.

Serial Number Required

Occurs when the instrument is missing its serial number. Use the free MSA Link software application and an IR dongle to assign a serial number to the instrument. A unique non-zero serial number is required for each gas detector model.

Pump Fault or Flow Fault

Occurs if pump(s) is blocked during a test, the test cylinder(s) read empty, the fresh air filter is clogged, or an internal flow error occurs. Visually inspect the air filter for contamination and replace as needed. Refer to the Instrument Will Not Initiate a Bump or Calibration section [→ chapter 6.1] of this manual.

Partial Test

The test system lacks gases for a full test. Ensure the cylinder(s) configuration is set up correctly and that adequate gas is present in the cylinder(s). Refer to Cylinder Configuration section [→ chapter 4.7] of this manual.

USB Drive Failure

Occurs if the user's flash drive cannot accept data. Ensure the flash drive is functioning properly. If the USB Drive is full, delete unneeded data or replace with a new USB Drive. Check the USB Drive Enable setting in the GALAXY GX2 Setup section [→ chapter 4] of this manual.

Network Connection Lost

Occurs if the optional network set up malfunctions. Ensure the Ethernet cables are secure between Test Stands, from the master unit to the PC, and that they are type 10/100 Mbps. Additional information on network connections can be found in the software product end-user manual.

7 Maintenance (Cleaning and Part Replacement)

7.1 Corrective Maintenance

See the listing below for common replacement parts associated with the GALAXY GX2. If you have any questions regarding the equipment, any procedure in this manual, or the location of the nearest MSA Repair Center and source of replacement parts, please call MSA Customer Service.



WARNING

Repair or alteration of the GALAXY GX2 System beyond the scope of these instructions by anyone other than personnel authorized by MSA can endanger persons who rely on this equipment for their safety or health and may void all warranties and approvals. Use only genuine MSA replacement parts.

7.2 Replacement Parts and Accessories

Corrective Maintenance Items	Part No.
AC Power supply, Global	10124286
Fresh Air Filter	10050789
Fresh Air Filter, High Capacity	10062363
Spare Parts Kit (feet, barb fittings, plugs)	10127020
Electronic Cylinder Holder	10105756
Non-electronic Cylinder Holder	10125135
Inlet Seal Replacement Kit (ALTAIR 5 Instrument)	10094844
ALTAIR Seal	10125136
ALTAIR Pro Seal	10125137
Zero Air Cylinder	801050
Screen protector	10125289

Accessories	Part No.
4GB SD Card	10127111
MSA Link Pro Key (red)	10123938
Digital Secure USB Key (black)	10123937
End Cap	10113442
ALTAIR 4/4X Multi-Unit Charger	10105727
ALTAIR 5/5X Multi-Unit Charger	10105728
Sticker or Receipt/ Sticker Printer	10127808
Printer Cable	10127807
Instrument Sticker Label Roll (xx labels/ roll)	10126437
Receipt & Sticker Label Roll (xx labels/ roll)	10126438
Laminated Quick Start Guide	xxxxxxx
12" (TBR) Ethernet cable for Test Stand to Test Stand connection	10127518
DIN rail clip kit (2 clips & screws per kit)	10126657
Type Omega DIN Rail 0.5m, perforated, steel, zinc plated	10062364
Type Omega DIN Rail 1m, perforated, steel, zinc plated	10062365
Type Omega DIN Rail 2m, perforated, steel, zinc plated	10062366
USB IR Dongle (for use with MSA Link)	10082834
Demand Regulator	10034391
Large Capacity (<3000psi) Demand Regulator	710289

GALAXY CALIBRATION CYLINDERS

Type	Gas Content	Size	PN
Quad	1.45% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	ECONO-CAL	10048280
Quad	1.45% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	RP CYLINDER	10045035
Quad	2.5% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	ECONO-CAL	10048981
Quad	2.5% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	RP CYLINDER	10048890
3-GAS	2.5% Methane, 15.0% O ₂ , 20ppm H ₂ S	ECONO-CAL	10048888
3-GAS	2.5% Methane, 15.0% O ₂ , 20ppm H ₂ S	RP CYLINDER	10048889
3 + NO ₂	1.45% Methane, 15.0% O ₂ , 60ppm CO, 10 ppm NO ₂	ECONO-CAL	10058036
3 + NO ₂	1.45% Methane, 15.0% O ₂ , 60ppm CO, 10 ppm NO ₂	RP CYLINDER	10058034
3 + NO ₂	2.5% Methane, 15.0% O ₂ , 60ppm CO, 10 ppm NO ₂	ECONO-CAL	10058172
3 + NO ₂	2.5% Methane, 15.0% O ₂ , 60ppm CO, 10 ppm NO ₂	RP CYLINDER	10058171
NO ₂	10 ppm	ECONO-CAL	711068
NO ₂	10 ppm	RP CYLINDER	808977
SO ₂	10 ppm	ECONO-CAL	711070
SO ₂	10 ppm	RP CYLINDER	808978
NH ₃	25 ppm	ECONO-CAL	711078
NH ₃	25 ppm	RP CYLINDER	814866
CL ₂	10 ppm	ECONO-CAL	711066
CL ₂	10 ppm	RP CYLINDER	806740
CL ₂	2 ppm	ECONO-CAL	711082
CL ₂	2 ppm	RP CYLINDER	10028080
HCN	10 ppm	ECONO-CAL	711072
HCN	10 ppm	RP CYLINDER	809351
PH ₃	0.5 ppm	ECONO-CAL	711088
PH ₃	0.5 ppm	RP CYLINDER	710533
CO	60 ppm	100L	710882
H ₂ S	40 ppm	ECONO-CAL	711062
H ₂ S	40 ppm	RP CYLINDER	467897
O ₂	20.80%	100L	479857
QD-CO ₂	1.45% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S, 2.5% CO ₂	RP CYLINDER	10103262
QUAD SO ₂	1.45% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S, 10ppm SO ₂	ECONO-CAL	10098855
QUAD SO ₂	1.45% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S, 10ppm SO ₂	RP CYLINDER	10117738
Air Zero THC<1ppm		100L	801050
NO	50 ppm	RP CYLINDER	812144
NO	50 ppm	ECONO-CAL	711074
CH ₄	0.625% Methane, 15.0% O ₂ , 60ppm CO	RP CYLINDER	10125948
C ₅ H ₁₂	0.375% Methane, 15.0% O ₂ , 60ppm CO	RP CYLINDER	10125947
CH ₄	0.625% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	RP CYLINDER	10125695

Type	Gas Content	Size	PN
C ₅ H ₁₂	0.375% Methane, 15.0% O ₂ , 60ppm CO, 20ppm H ₂ S	RP CYLINDER	10125708
NO	50 PPM IN N ₂	ECONO-CAL	10126429

7.3 Fresh Air Filter Replacement

The disposable fresh air filter is located on the tubing attached to the upper port on the left side of the farthest left unit. The filter requires periodic replacement, based on the unit's frequency of use and environmental cleanliness. Visual inspection of the fresh air filter will indicate contamination. Replace as needed.



Fig. 25 Fresh air filter



Pump Alarms may indicate the need to replace the fresh air filter.

NOTICE

Do not run the unit without the filter in place (even if using a zero-air cylinder in your installation); otherwise, the valves and pumps may be damaged.

To Replace the Filter:

- (1) Remove the filter and tubing from the barb fitting in the fresh air port on the left side of the farthest left unit.
- (2) Dispose of the old filter.
- (3) Insert the new filter and tube onto the same barb fitting of the fresh air port.



If the system consists of four or more Test Stands, use the high capacity filter and ensure the flow arrow indicator points toward the unit.

7.4 O-Ring Seal Replacement (Cylinder Holder)

Each month, visually inspect the O-ring on the fitting and clean if necessary. Replace if any damage is found.



- (1) Remove the damaged O-ring.
- (2) Clean the fitting with a water-dampened cloth and apply a light film of mineral oil to the new O-ring.

NOTICE

Do not use a silicone-based lubricant on this O-ring.

- (3) Place the new O-ring onto the fitting.

7.5 Inlet Seal Replacement (ALTAIR 5/5X Gas Detector)

Flow Errors and Calibration Failures may indicate a damaged inlet seal. MSA recommends annual seal replacement.

Replace the seal:

- (1) Remove the stainless steel eyelet (collar).
- (2) The rubber inlet seal can now be removed from the fitting.
- (3) Place the wider (flared) end of a new inlet seal over the fitting.
- (4) Replace the stainless steel eyelet (collar) and ensure it is seated at the top.



Fig. 26



Fig. 27



Fig. 28

7.6 Rubber Insert Replacement (ALTAIR Gas Detector)

The rubber inserts may degrade in the GALAXY GX2 over time. Pull the degraded insert from the Test Stand. Replace the insert and ensure that it is firmly seated.



Fig. 29



Fig. 30

8 Technical Specifications

Specification	Part	Range
Operating Temperature	GALAXY GX2	0-40° C
Power Input	Power Module	100 - 240 VAC, 47 - 63 Hz
	Optional Vehicle Module	9-32 VDC
Power Consumption	Test Stand only	< 6.0 W
	With Cylinder Holder	
Physical Characteristics	Test Stand	Height: 11.80" (299.72 mm)
		Width: 6.50" (165.10 mm)
		Depth: 7.90" (200.66 mm)
		Material: Acrylonitrile Butadiene ABS
	Cylinder Holder	Height: 11.80" (299.72 mm)
		Width: 6.50" (165.10 mm)
		Depth: 6.10" (154.94 mm)
		Material: Acrylonitrile Butadiene ABS
	Multi-Unit Charger	Height: 11.80" (299.72 mm)
Width: 6.50" (165.10 mm)		
Depth: 6.44" (163.58 mm)		
Material: Acrylonitrile Butadiene ABS		

9 Galaxy GX2 Default Parameters

Refer to the listing below for the default settings for each display screen for configuring the GALAXY GX2. The settings can be changed for optimal performance in the user's facility.

Screen Name	Parameter	Default Setting
Date Setup	Date	Current date set during assembly
Time Zone Setup	Time Zone	Eastern Time (US_ Canada)
Time Setup	Time	Current time set during assembly
	24 Hour Time	off
Test Setup	Allow Simulant Gas	yes for all
	%volume to 100%LEL	US setting for all
Test Setup - Mode	Bump Only	off
	Calibration Only	off
	Bump/Cal on Fail	on
	Classic Mode	off
Test Setup - Calibration	Calibration Interval (days)	30
Test Setup - Bump	Bump Interval (days)	1
Security Setup	Passcode	0000 (off)
GX2 Setup - GX2	USB Drive Enable	on
	Display PSI	on
	Display bar	off
GX2 Setup - Datalog	Download Periodic	off
	Download Session	off
	Erase After Download	off
GX2 Setup - Printing	Print Calibration Sticker	off
	Print Receipt	off
Volume Setup	Volume	Medium
Backlight Setup	Intensity	Very High
USB Drive	Enabled	On
Language Setup	Language	English
Cylinder Setup 1-4	Auto Cylinder Enable	all on
Expiration Setup 1-4	Weeks to Expiration	4 weeks
LEL Setup	%volume setting	All combustible gas 100%LEL volumes set to ANSI standards

MSA in Europe

[www.msa-europe.com & www.msa-gasdetection.com]

Northern Europe

Netherlands

MSA Nederland

Kernweg 20
1627 LH Hoorn
Phone +31 [229] 25 03 03
Fax +31 [229] 21 13 40
info@msanet.nl

Belgium

MSA Belgium

Duwijckstraat 17
2500 Lier
Phone +32 [3] 491 91 50
Fax +32 [3] 491 91 51
msabelgium@msa.be

Great Britain

MSA Britain

Lochard House
Linnet Way
Strathclyde Business Park
BELLSHILL ML4 3RA
Scotland
Phone +44 [16 98] 57 33 57
Fax +44 [16 98] 74 0141
info@msabritain.co.uk

Sweden

MSA NORDIC

Kopparbergsgatan 29
214 44 Malmö
Phone +46 [40] 699 07 70
Fax +46 [40] 699 07 77
info@msanordic.se

MSA SORDIN

Rörläggärvägen 8
33153 Värnamo
Phone +46 [370] 69 35 50
Fax +46 [370] 69 35 55
info@sordin.se

Southern Europe

France

MSA GALLET

Zone Industrielle Sud
01400 Châtillon sur
Chalaronne
Phone +33 [474] 55 01 55
Fax +33 [474] 55 47 99
message@msa-gallet.fr

Italy

MSA Italiana

Via Po 13/17
20089 Rozzano [MI]
Phone +39 [02] 89 217 1
Fax +39 [02] 82 59 228
info-italy@msa-europe.com

Spain

MSA Española

Narcís Monturiol, 7
Pol. Ind. del Sudoeste
08960 Sant-Just Desvern
[Barcelona]
Phone +34 [93] 372 51 62
Fax +34 [93] 372 66 57
info@msa.es

Eastern Europe

Poland

MSA Safety Poland

ul. Wschodnia 5A
05-090 Raszyn k/Warszawy
Phone +48 [22] 711 50 33
Fax +48 [22] 711 50 19
eer@msa-europe.com

Czech Republic

MSA Safety Czech

Pikartská 1337/7
716 07 Ostrava-Radvanice
Phone +420 [59] 6 232222
Fax +420 [59] 6 232675
info@msa-auer.cz

Hungary

MSA Safety Hungaria

Francia út 10
1143 Budapest
Phone +36 [1] 251 34 88
Fax +36 [1] 251 46 51
info@msa.hu

Romania

MSA Safety Romania

Str. Virgil Madgearu, Nr. 5
Ap. 2, Sector 1
014135 Bucuresti
Phone +40 [21] 232 62 45
Fax +40 [21] 232 87 23
office@msanet.ro

Russia

MSA Safety Russia

Pokhodny Proezd, 14
125373 Moscow
Phone +7 [495] 921 1370/74
Fax +7 [495] 921 1368
msa-moscow@msa-europe.com

Central Europe

Germany

MSA AUER GmbH

Thiemannstrasse 1
12059 Berlin
Phone +49 [30] 68 86 0
Fax +49 [30] 68 86 15 17
info@msa-auer.de

Austria

MSA AUER Austria

Vertriebs GmbH

Modecenterstrasse 22
MGC Office 4, Top 601
A-1030 Wien
Phone +43 [0] 1 / 796 04 96
Fax +43 [0] 1 / 796 04 96 - 20
info@msa-auer.at

Switzerland

MSA Schweiz

Eichweg 6
8154 Oberglatt
Phone +41 [43] 255 89 00
Fax +41 [43] 255 99 90
info@msa.ch

European

International Sales

[Africa, Asia, Australia, Latin America, Middle East]

MSA EUROPE

Thiemannstrasse 1
12059 Berlin
Phone +49 [30] 68 86 0
Fax +49 [30] 68 86 15 58
contact@msa-europe.com