

Motorola  
iDEN  
Digital Multi-service Data-capable Phone

***i*530 Phone User's Guide**

**SECOND DRAFT**



NNTN4881A



# Contents

<b>Getting Started .....</b>	<b>1</b>
Locating Your SIM Card.....	3
Battery.....	3
Activating Service .....	6
Powering On .....	6
Enabling Over-the-Air Security .....	7
Finding Your Phone Number .....	7
Completing Setup .....	8
Phone Basics .....	9
SIM Card Security.....	11
Locking the Keypad .....	14
Accessories.....	15
For More Information .....	15
<b>Making Calls .....</b>	<b>17</b>
Receiving Calls .....	17
Call Icons .....	18
Entering the Number to Call.....	18
Missed Phone Calls .....	21
Using Speakerphone .....	21
Using Mute.....	22

Making Emergency Phone Calls .....	22
<b>Call Alerts .....</b>	<b>23</b>
Sending Call Alerts.....	23
Receiving Call Alerts .....	23
Using the Call Alert Queue.....	23
<b>Recent Calls .....</b>	<b>27</b>
Storing Recent Calls to Contacts .....	27
Deleting Recent Calls.....	28
<b>Contacts .....</b>	<b>29</b>
Viewing Contacts .....	30
Creating Entries .....	31
Storing Numbers Faster .....	32
Editing Entries .....	33
Deleting Entries.....	33
Checking Capacity .....	34
Creating Pauses and Waits.....	34
International Numbers.....	34
Accessing Contacts with GSM Phones.....	35
<b>Call Forwarding.....</b>	<b>37</b>
Forwarding All Calls .....	37
Turning Off Call Forwarding .....	38

Forwarding Missed Calls.....	38	Managing Memory .....	53
Viewing Call Forwarding Settings .....	39	<b>GPS Enabled .....</b>	<b>55</b>
<b>Messages .....</b>	<b>41</b>	IMPORTANT: Things to Keep in Mind .....	55
Message Notifications.....	41	Making an Emergency Call .....	56
Voice Mail .....	41	Viewing Your Approximate Location .....	57
Text and Numeric Messages .....	42	Enhancing GPS Performance .....	58
Net Alerts .....	43	Updating Satellite Almanac Data .....	59
<b>Ring Tones.....</b>	<b>45</b>	Setting Privacy Options.....	60
Using the Vibrate Feature.....	45	Using GPS with Map Software.....	61
Turning Ring Tones Off.....	45	<b>Voice Records.....</b>	<b>63</b>
Ring and Vibrate .....	46	Creating Voice Records .....	63
Assigning Ring Tones to Contacts.....	46	Playing Voice Records .....	63
Viewing Ring Tone Assignments .....	47	Labelling Voice Records .....	64
Downloading More Ring Tones.....	47	Deleting Voice Records.....	64
Managing Memory .....	47	Locking Voice Records .....	64
Deleting Custom Ring Tones.....	48	Managing Memory .....	64
<b>Mobile Originated Text Messaging .....</b>	<b>49</b>	<b>Memo .....</b>	<b>67</b>
Setting Up .....	49	<b>Advanced Calling Features.....</b>	<b>69</b>
Receiving Messages.....	49	Call Waiting .....	69
Reading Messages From the Message Center .	50	Call Hold.....	70
Creating and Sending Messages.....	50		

3-Way Calling.....	70	.....	84
Creating Pauses and Waits While Dialing .....	71	<b>Understanding Status Messages .....</b>	<b>85</b>
Making International Calls.....	71	<b>Safety and General Information .....</b>	<b>87</b>
Setting One Touch PTT .....	71	RF Operational Characteristics .....	87
Setting Flip Actions .....	72	Portable Radio Product Operation and EME Exposure .....	87
Group Calls.....	72	Electro Magnetic Interference/Compatibility.....	90
Call Timers.....	73	Medical Devices .....	90
Using Your Phone as a Modem.....	74	Operational Warnings .....	91
Making TTY Calls.....	75	Operational Cautions .....	92
<b>Entering Text .....</b>	<b>77</b>	Accessory Safety Information .....	93
Using Alpha Mode.....	77	MOTOROLA LIMITED WARRANTY .....	95
Using Word Mode .....	77	<b>Limited Warranty Motorola Communication Products (International) .....</b>	<b>99</b>
Special Function Keys .....	78	<b>Patent and Trademark Information .....</b>	<b>103</b>
Using Numeric Mode .....	79	<b>Index .....</b>	<b>105</b>
Using Symbols Mode.....	79	<b>Driving Safety Tips .....</b>	<b>111</b>
<b>Customizing Your Phone.....</b>	<b>81</b>		
Setting the Volume.....	81		
Setting Your Phone to Not Ring.....	81		
Seeing the Display Better .....	81		
Using a Headset .....	82		
Using Settings.....	82		



## DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party Name: Motorola, Inc.

Address: 8000 West Sunrise Boulevard  
Plantation, FL 33322 USA

Phone Number: 1 (800) 453-0920

Hereby declares that the product:

Product Name: **i530**

Model Number: **H63XAH6RR3AN**

Conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d)  
and section 15.109(a)

Class B Digital Device

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**







- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

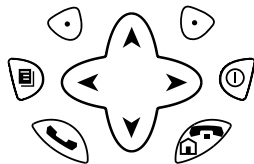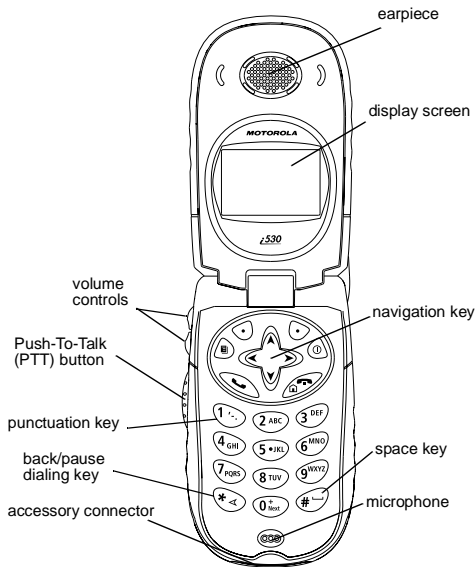



# Getting Started







-  Power button.
-  Navigation key — press the arrows to scroll through menus and lists.
-  Accesses context-sensitive menus.
-  Selects the option appearing above it on the display.
-  Places phone calls.
-  Ends phone calls; returns to idle screen.

To start using your R530 phone:

- Make sure your SIM card is in place.
- Charge the battery.
- Activate your service.
- Enable over-the-air security.

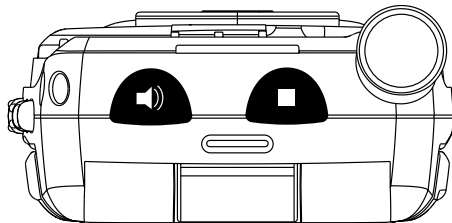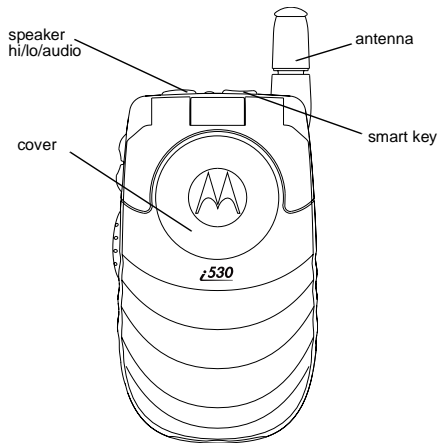
## Getting Started



- Acts like  when the phone cover is closed; accesses recent calls.
- Acts like  when the phone cover is closed; turns speakerphone on; used with voice names and voice records.

## Locating Your SIM Card

Your SIM (Subscriber Identity Module) card is a small piece of white plastic located in the SIM card holder in the back of your phone, underneath the battery.

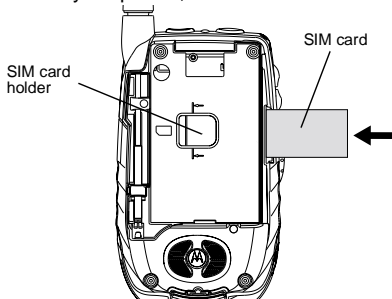


If your SIM card is not in the SIM card holder, it may be in the box your phone came in, attached to a piece of white plastic about the size of a credit card. If this is the case, carefully detach your SIM card from the surrounding plastic and insert it as described in "Inserting Your SIM Card" on page 13.

If there is no SIM card in your phone or the box, contact your service provider.


## Battery

### Removing the Battery Door

- 1 Make sure the phone is powered off.
- 2 Slide the release button back until it releases the battery door.

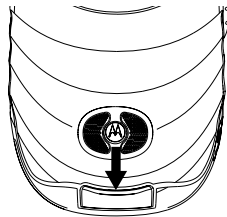


- 3 Allow the battery door to pop up and remove it from the back of your phone.

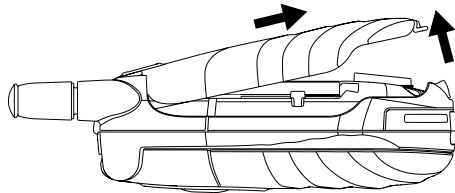


## Getting Started

### Inserting the Battery

- 1 With the phone powered off, remove the battery door.
- 2 Insert the top of the battery into the battery area. Press the bottom of the battery to secure it.

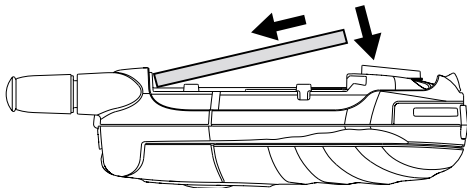


- 3 Replace the battery door and press it gently until you hear a click.

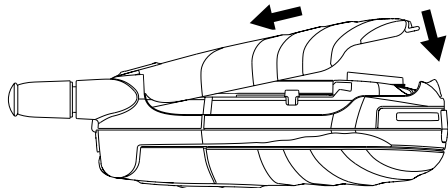


### Charging the Battery

Your phone comes with a battery charger.

- 1 Plug the charger into an electrical outlet.
- 2 Open the connector cover.

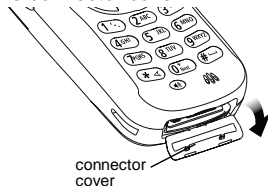

- 3 Plug the other end of the charger into the accessory connector.

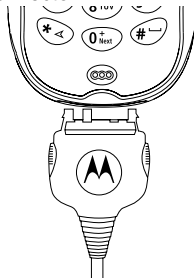

**Tip:** To remove the charger from the accessory connector: Press the buttons on the sides of the plug. Pull the plug straight out.

- 4 When charging the battery for the first time, charge for 30 minutes longer than the time shown in "Charging Times".

## Charging Times

See your battery and charger to determine the appropriate charging time.

Battery	Charger	
	Rapid	Mid-Rate
High Performance	2 hours	4 hours
Maximum Capacity	3.5 hours	7.5 hours


For best results, charge the batteries within the temperature range of 50°F to 104°F (10°C to 40°C).

Prolonged charging is not recommended.

## Removing the Battery

- 1 With the phone powered off, remove the battery door.

- 2 Remove the battery by pushing the battery toward the antenna and lifting it out.

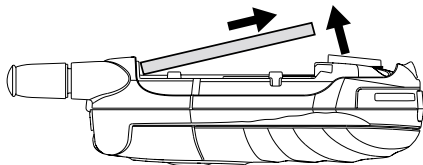

## Battery Use and Maintenance

- The Motorola iDEN Approved Lithium Ion chargers provide optimum performance. Other chargers may not fully charge the iDEN Lithium Ion battery or may yield a reduced number of lifetime charge cycles.
- Extreme temperatures degrade battery performance. Do not store the battery where temperatures exceed 140°F (60°C) or fall below 4°F (-20°C).
- Lithium Ion batteries have a self discharge rate and without use, lose about 1% of their charge per day.
- The battery capacity is degraded if the battery is stored for long periods while fully charged. If long term storage is required, store at half capacity.

## Getting Started



# Activating Service

The first time you power on your phone, you must be in your local calling area. This activates your service.

# Powering On


The first time you power your phone on, screen may appear asking you to update your browser information. This means you must enable security.

To power your phone on:


- 1 Open the flip.
- 2 Extend the antenna.
- 3 Press .
- 4 If the **Enter SIM PIN Code** screen appears, enter your SIM PIN. See “Entering the PIN” on page 12. Press  under **Ok**.

**Note:** When you receive your phone, the SIM PIN is 0000. Change your PIN to prevent fraudulent use of the SIM card (see “Changing the PIN” on page 12).

As your phone connects to the network, you will see a welcome message and a connecting message. When the idle screen appears, the phone is ready to use.

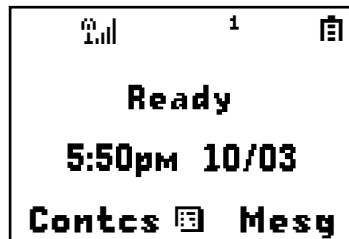



To power your phone off:




- 1 Open the flip.
- 2 Press and hold .
- 3 Push down the antenna.

## Enabling Over-the-Air Security

If you are set up to receive over-the-air programming from your service provider, you must enable security the first time you power on your phone or within 20 days of first activation of your phone:


- 1 When you power on your phone for the first time, after the idle screen appears, you will be prompted to select **Ok** to update your browser information.





**Note:** If you press  under **Later**, you will be prompted to enable security each time you power on your phone until you press  under **Ok**.

- 2 Press  under **Ok**.
- 3 You are prompted to enable security. Press  under **Yes**. A series of screens appears. If you subscribe to your service provider's plan, your home page appears.
- 4 Press  to return to the idle screen.

Within 24 hours of enabling security, you will receive a Net alert containing your Private ID and Talkgroup lists for Private calls.



To accept programming:

- 1 When you receive a Net alert saying **New Browser Message - Receive Programming Info**, press  under **Goto**.

- 2 You are prompted to accept changes to your lists. Press  under **Ok**.
- 3 If you are prompted again to accept changes to your lists, press  under **Ok**.
- 4 A confirmation screen displays. Press  under **Ok**.
- 5 Press  to return to the idle screen.

## Finding Your Phone Number

My Info lets you view your phone number, Private ID, and other phone information:

- 1 Press  to access the main menu.
- 2 Scroll to **My Info**.
- 3 Press  under **Select**.
- 4 Scroll to see your information:
  - **Name** — Enter your name. See “Entering Text” on page 77.
  - **Line 1** and **Line 2** — your phone numbers for phone lines 1 and 2. Each is filled in when you receive your first call on that line.
  - **Private** — Your Private ID is the number that others use to contact you using Private calls. It is filled in when you receive your first Private call.
  - **Group ID** — the number of the Talkgroup you have joined.

## Getting Started

- **Carrier IP** — the IP address assigned to your service provider. It is filled in when you register for packet data services.
- **IP1 Address** and **IP2 Address** — the IP addresses you use to access the Internet with your phone
- **Ckt** — Your circuit data number is the number you use if you want to use your phone to transfer circuit data. See “Using Your Phone as a Modem” on page 74. You receive this number from your service provider.
- **Service Status** — This information may be used by your service provider if there is a problem with your phone’s services.

## Completing Setup

### Voice Mail and Other Messages

To receive voice mail, you must set up an account with your service provider. See “Messages” on page 41 for information on using voice mail.


If your service provider offers mobile originated text messaging, see “Mobile Originated Text Messaging” on page 49 for information on setting up and using it.

## Joining a Talkgroup

Your sales representative or your service provider establishes Talkgroups for you and assigns each Talkgroup a Talkgroup number. You can choose a name for each of your Talkgroups when you create entries for them in Contacts.

To receive group calls made to a Talkgroup, you must join the Talkgroup. You can belong to only one Talkgroup at a time. When you join a new Talkgroup, you no longer belong to your previous Talkgroup.

To join a Talkgroup:

- 1 Press . Then enter the Talkgroup number using the keypad. **-or-**

Choose the Talkgroup name from Contacts or the recent calls list.

- 2 Press  under **Join**.


## Customizing Features

You can control many features of your phone, including the volume of incoming sound, rings, and other tones. See “Customizing Your Phone” on page 81.



## Phone Basics

Any time your phone is powered on, the display provides you with information and options.

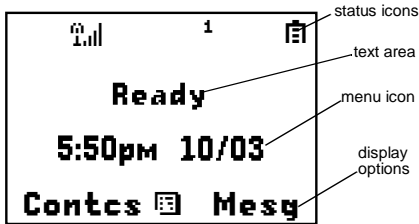

The screen shown above is the idle screen. The text that appears on your idle screen depends on your service provider. The idle screen appears when your phone is on, but not engaged in any activity.

### Text Area

This area displays menus, messages, names, phone numbers, and other information.

### Display Options

Two display options appear at the bottom of most screens. You select a display option by pressing the option key below it.

## Menus and Lists


Your phone's features are arranged in menus, submenus, and lists.

To access the items in a menu or list, scroll using the navigation key at the top of your keypad. This key lets you scroll up, down, left, or right. Holding down the appropriate part of the navigation key speeds up scrolling.

In this guide, this symbol > tells you to select a menu or list item. For example, **Settings > Security** means:

- 1 Scroll to **Settings** on the main menu.
- 2 Press ⏪ under **Select** to see the **Settings** screen.
- 3 Scroll to **Security**.
- 4 Press ⏪ under **Select** to see the **Security** screen.







### Menu Key








Many features provide context-sensitive menus that let you access related features and actions. This icon  appears any time a context-sensitive menu is available. Press ⏪ to access the menu.

## Getting Started

### Main Menu


All your phone's features can be accessed through the main menu. When you are using a feature, the icon for that feature appears in the upper left corner of the display.

-  **Browser** Browse the Web.
-  **Settings** Customize your phone. See page 81.
  - Display/Info
  - Phone Calls
  - 2-Way Radio
  - Volume
  - Security
  - Advanced
-  **VoiceRecord** Record and play audio messages. See page 63.
-  **Contacts** View, store, edit contacts. See page 29.
  - new contact form
  - list of contacts
  - Contacts menu
-  **Messages** Access messages. See page 41.
  - Voice Mail
  - Text Msgs
  - Net Alert
-  **Call Forward** Set call forwarding options. See page 37.


-  **Memo** Store a number to access later. See page 67.
-  **Call Timers** Phone usage information. See page 73.
-  **Recent Calls** Lists recent calls. See page 27.
  - list of calls
  - recent calls menu
  - Call Setup menu
-  **My Info** View personal phone information, including phone number and Private ID. See page 7.
-  **Call Alert** Lists call alerts. See page 23.
  - list of call alerts
  - Call Alerts menu
-  **GPS** Find your approximate geographical location. See page 55.
-  **Ring Tones** Assign ring tones and turn ringer off. See page 45.
  - list of ring tones
  - Ring Tones menu


## Status Icons


Status icons appear in the 2 rows at the top of the display. Some appear at all times. Others appear only when your phone is engaged in certain activities or when you have activated certain features.


 **Battery Strength** — More bars on the battery indicate a greater charge.





 **Signal Strength** — More bars next to the antenna indicate a stronger signal.


 **Phone In Use** — Your phone is active on a phone call.


 **Private In Use** — Your phone is active on a Private call.


 **Talkgroup In Use** — Your phone is active on a group call.


 **Active Phone Line** — 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.

 **Call Forward** — Your phone is set to forward calls. See “Call Forwarding” on page 37.

 **Ringer Off** — Your phone is set not to ring. See “Turning Ring Tones Off” on page 45.

 **Messages** — You have one or more messages. See “Messages” on page 41.

 **Internet** — You are ready to browse the internet.

 **Packet Data** — You are ready to transfer packet data or are transferring packet data. See “Using Your Phone as a Modem” on page 74.

## SIM Card Security

Your SIM card protects your personal information. The SIM card stores all your Contacts information. Since this information is stored on your SIM card, not in your phone, you can remove the information by removing your SIM card.

**Note:** Except for making emergency calls, your phone will not function without the SIM card.

To prevent unauthorized use of your phone, your SIM card is protected by a PIN that you enter each time the phone is powered on. You can change the PIN or turn off the requirement that it be entered.

## Getting Started

### Entering the PIN

You may be required to enter a SIM PIN when you first use your phone.

When you receive your phone, the SIM PIN is 0000. Change your PIN to prevent fraudulent use of the SIM card.

**Important:** If you enter your PIN incorrectly 3 times, your SIM card is blocked. To unblock your SIM card, you must contact your service provider. See “Unlocking the PIN” on page 13.

- 1 When the **Enter SIM PIN Code** screen appears, enter your SIM PIN. An asterisk appears for each character entered.
- 2 Press ⏪ under **Ok**.

### Changing the PIN

- 1 From the main menu, select **Settings > Security > Change Password > SIM PIN**.
- 2 At the **Enter Old SIM PIN Code** screen, enter the current SIM PIN.
- 3 Press ⏪ under **Ok**.
- 4 At the **Enter New SIM PIN Code** screen, enter the new 4- to 8-digit SIM PIN.
- 5 Press ⏪ under **Ok**.

- 6 At the **Re-enter New SIM PIN Code** screen, re-enter the new SIM PIN to confirm.

- 7 Press ⏪ under **Ok**.

### Turning the PIN Requirement On and Off

When the SIM PIN requirement is on, you are prompted to enter your PIN each time you turn on your phone.

**Note:** If a SIM PIN is required, your phone will not function until the SIM PIN is entered, except for making emergency calls.

When the PIN requirement is off, your phone can be used without entering a PIN.

**Important:** When the SIM PIN requirement is off, the personal data on your SIM card is not protected. Anyone can use your phone and access your personal data.





- 1 From the main menu, select **Settings > Security > SIM PIN**.
- 2 Select **On** or **Off**.
- 3 Enter the current SIM PIN.
- 4 Press ⏪ under **Ok**.

### Unlocking the PIN

If you enter your PIN incorrectly 3 times, your SIM card is blocked. To unblock your SIM card, you must contact your service provider to get a PIN Unblock Code (PUK).

**Important:** If you unsuccessfully enter the PUK code 10 times, your SIM card is permanently blocked and must be replaced. If this happens, all data is lost. You will get a message to contact your service provider. Except for making emergency calls, your phone will not function with a blocked SIM card.

To unblock the PIN:

- 1 Press    .
- 2 At your service provider representative's request, provide the information needed to give you a PUK code.
- 3 Select **Unblock PIN**.
- 4 Enter the PUK code.
- 5 Enter a new 4- to 8-digit SIM PIN.
- 6 Re-enter your SIM PIN.

If you entered the codes properly, **SIM Unlocked** appears on the display.

### Inserting and Removing Your SIM Card

**Important:** Do not touch the gold-colored areas of your SIM card.

#### Switching SIM Cards

Moving your SIM card from one phone to another moves all your Contacts information, but erases other information. If you remove your SIM card and use it with another phone, or use another SIM card with your phone, the following information is erased:


- The recent calls list
- Call forwarding settings
- Net alerts
- Mobile originated text messages, drafts, and quick notes
- Information stored in Memo
- 3 most recent GPS Enabled locations
- Voice records
- Voice names

#### Inserting Your SIM Card


With your phone powered off, remove the battery door and battery. See "Removing the Battery" on page 5.

## Getting Started

- 7 Hold your SIM card as shown. Do not touch the gold-colored area.



- 8 Carefully slide your SIM card into your phone, until it lies flat in the SIM card holder.

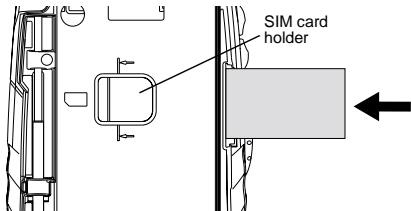


### Removing Your SIM Card

**Important:** To avoid loss or damage, do not remove your SIM card from your phone unless absolutely necessary.

- 1 With your phone powered off, remove the battery door and battery. See "Removing the Battery" on page 5.

- 2 While holding down the tab near the SIM card holder, slide your SIM card out of the SIM card holder. Do not touch the gold-colored area.

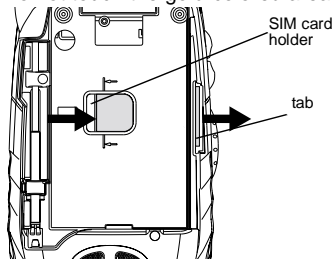

**Note:** Protect your SIM card as you would any delicate object. Store it carefully.



## Locking the Keypad

Locking the phone's keypad prevents its buttons from being pressed. When the keypad is locked, you can only:

- Power the phone on and off
- Unlock the keypad
- Respond to incoming calls, messages, and alerts



**Important:** Emergency calls cannot be placed while the keypad is locked.


To lock the keypad:

- 1 From the idle screen, press .
- 2 Press .

If you press a key while the keypad is locked, instructions for unlocking the keypad display briefly.

To unlock the keypad:

- 1 From the idle screen, press .
- 2 Press .

While the keypad is locked, you can respond to incoming calls, messages, and alerts just as you do when the keypad is not locked. When finished, press  to return to the idle screen. The keypad remains locked.

## Accessories

Your phone comes with a battery, a charger, and a carry holster.

To order additional accessories, log on to our Web site at [www.motorola.com/store/iden](http://www.motorola.com/store/iden) or contact your Motorola Authorized Retailer.

## For More Information

If you have questions about your i530 phone, contact your sales representative or your service provider.

## ***Getting Started***




# Making Calls

Your 530 phone makes 2 types of calls: digital cellular phone calls and Private calls. With Private calls, you use your phone as a long-range, digital walkie-talkie.

To make a phone call:

- 1 Enter the number you want to call.
- 2 To place the call:


Press . **-or-**

If you used a feature that lets you enter the number with the flip closed, press .

- 3 To end the call:

Press . **-or-**

Close the flip. **-or-**

If you placed the call with the flip closed, press .

**Note:** To end a call by closing the flip, you must have this action turned on. See “Setting Flip Actions” on page 78.

To make a Private call:

- 1 Enter the Private ID you want to call.
- 2 Press and hold the PTT button on the side of your phone. Begin talking after your phone emits a chirping sound.

- 3 Release the PTT button to listen.

**Tip:** To let someone know you want to talk to him or her on a Private call, send a call alert. See “Call Alerts” on page 23.

# Receiving Calls

When you receive a phone call, your phone rings, vibrates, or lights up its backlight.

To answer a phone call:

If the flip is closed, press . **-or-**

Open the flip. **-or-**

Press . **-or-**


If the idle screen is displayed, press . **-or-**

Press  under **Yes**. **-or-**


Press any key on the keypad.

**Note:** To answer a call by opening the flip, you must have this action turned on. See “Setting Flip Actions” on page 78.

To send a phone call to voice mail instead of answering it:

If the flip is closed, press . **-or-**

Press . **-or-**


Press  under **No**.

## Making Calls

To end a phone call:

Press . **-or-**

Close the flip. **-or-**

If the flip is closed, press .






When you receive a Private call, your phone emits a chirping sound.

To answer a Private call:

- 1 Wait for the caller to finish speaking.
- 2 Press and hold the PTT button on the side of your phone. Begin talking after your phone emits a chirping sound.
- 3 Release the PTT button to listen.

## Call Icons

When you make a call, call icons appear in the text area of the phone's display.

-  Placing a phone call.
-  Receiving a phone call.
-  Phone call is active.
-  Phone call is on hold.
-  Phone call ended.

When you miss a call, this icon appears in the text area:

 You missed a phone call.

## Entering the Number to Call



To enter the number you want to call, you can:


- Use the numbers on the keypad
- Select the number from the recent calls list
- Select the number from Contacts
- Redial the last phone number called
- Say a voice name into your phone
- Use Speed Dial or Turbo Dial®
- Use One Touch PTT to make a Private call
- Use a TTY device — see “Making TTY Calls” on page 75

## From the Keypad

To enter the number you want to call, press the numbers on the keypad.

If you make a mistake:

- To clear a digit, press  under **Delete**.
- To clear all digits, press and hold  under **Delete**.

- To insert or delete a digit anywhere in the string of digits you have entered, scroll left or right.
- To cancel, press .

### From the Recent Calls List


The recent calls list stores the last 20 calls you made or received.

To select a number from the recent calls list as the number you want to call:

#### With the Flip Open

- 1 From the idle screen, scroll down. **-or-**  
From the main menu, select **Recent Calls**.
- 2 Scroll to the name or number you want to call.

#### With the Flip Closed

- 1 Press  to display the most recent call.
- 2 To view the rest of the recent calls list, press the volume keys on the side of your phone.
- 3 Display the name or number you want to call.

### From Contacts

If you have numbers stored in Contacts, you can use these numbers to make calls. For information on entering numbers into Contacts, see “Creating Entries” on page 31.

### Calling from the Contacts List

- 1 From the main menu, select **Contacts**.
- 2 Scroll to the name or number you want to call.  
**Tip:** To find Contacts entries faster, use the keypad to enter the first letter of the name.
- 3 Place the call now. **-or-**  
Scroll left or right to display the Contacts type for the number you want to call.

If you are making a Private call, your phone places the call to the Private ID stored in the Contacts entry, even if the Private icon is not displayed.

If you are making a phone call:


- Your phone places the call to the phone number assigned to the Contacts type displayed.
- If the Contacts type displayed is not a phone number, your phone places the call to the phone number stored in the Contacts entry.
- If the Contacts type displayed is not a phone number and you have more than one phone number stored in the Contacts entry, your phone prompts you to select the phone number you want to place the call to.

### Calling from a Contacts Entry

- 1 From the main menu, select **Contacts**.
- 2 Scroll to the name or number you want to call.

## Making Calls


3 Press  under **View**. -or-

If **View** is not one of your options: Press . Select **View**.

4 Place the call now. -or-

Scroll to view more numbers. When you place the call, it is made to the number displayed.

## Redialing the Last Number


Press and hold  to place a call to the last phone number you called.

## Using a Voice Name

**Note:** This is an optional feature. Contact your service provider about its availability for purchase.

If you have created a voice name in Contacts for the number you want to call, say the voice name into your phone to enter the number. See page 28 for information on voice names.



You can use a voice name to enter a phone number with the flip open or closed.

- 1 Press and hold  until a prompt appears telling you to say the voice name.
- 2 Speaking into the microphone, say the voice name assigned to the number you want to call.

Your phone plays the name back to you.

If you are making a Private call, press and hold the PTT button to place the call.

If you are making a phone call, the call is placed automatically.


**Tip:** To stop a phone call from being completed, press  if the flip is closed or press .

## Using Speed Dial and Turbo Dial®

Each phone number stored in Contacts is assigned a Speed Dial number which you can use to enter that number.

Turbo Dial lets you place calls to the phone numbers associated with Speed Dial numbers 1 through 9 without entering the number.

### Speed Dial

- 1 From the idle screen, use the keypad to enter the Speed Dial number assigned to the phone number you want to call.
- 2 Press .

### Turbo Dial

From the idle screen, press and hold the Speed Dial number (1 through 9) assigned to the phone number you want to call.

### Using One Touch PTT

One Touch PTT sets your phone to call the most recent Private ID on the recent calls list, or to a Private ID you choose, every time you press the PTT button. See “Setting One Touch PTT” on page 71.


### From Datebook

If you have numbers stored as part of events in Datebook, you can use these numbers to make calls. For information on storing events in Datebook, see “Datebook” on page 49.

- 1 From the main menu, select **Datebook**.
- 1 Select the day of the event containing the number you want to call.
- 2 Place the call now. **-or-**  
If the day has more than one event containing numbers to call, select the event containing the number you want to call.

For details, see “Making Calls From Datebook” on page 53.

### Missed Phone Calls

When the flip is closed, the one-line display shows this icon  and the number of phone calls you have missed.

To dismiss the missed call message:

Press .

To display the most recent call:

Press  again.

You can now call the most recent call, or view the rest of the recent call list. See page 19.


### Using Speakerphone

**Note:** This is an optional feature. Contact your service provider about its availability for purchase.

Turning on speakerphone makes incoming sound come out of the phone’s speaker instead of the earpiece. Speakerphone is available whenever you are on an active phone call.

#### With the Flip Open

To turn speakerphone on or off:

Press  under **Speaker**. **-or-**

Press .

#### With the Flip Closed

When you make a call with the flip closed, speakerphone is always on.

## ***Making Calls***

Opening the flip turns speakerphone off.

## **Using Mute**

Muting calls lets you listen to incoming sound without transmitting sound. Mute is available whenever you are on an active call.

To turn mute on:

Press  under **Mute**.

While mute is on, **Unmute** appears as a display option.

To turn mute off:

Press  under **Unmute**.

## **Making Emergency Phone Calls**

Your phone supports emergency calling. Emergency phone calls can be made even when your SIM card is blocked or not in your phone.

Dial 911 to be connected to an emergency response center. If you are on an active call, you must end it before calling 911.

When you make an emergency call, your phone's GPS Enabled feature can help emergency service personnel find you, if you are in a location where your phone's GPS antenna has established a clear view of the open sky and your local emergency response

center has the equipment to process location information. See "GPS Enabled" on page 55, and particularly "IMPORTANT: Things to Keep in Mind" on page 55 and "Making an Emergency Call" on page 56, for more information on the limitations of this feature. Because of the limitations of this feature, always provide your best knowledge of your location to the emergency response center when you make an emergency call.

**Important:** Emergency calls cannot be placed while the keypad is locked.

**Important:** If you have not registered on the network, emergency calls cannot be placed while your SIM card is in your phone.

## Call Alerts


Sending a call alert lets the recipient know you want to talk to him or her on a Private call.

When you send a call alert, the recipient's phone emits a series of beeps and displays your name or Private ID.

The recipient can:

- Answer — begin a Private call with the sender
- Queue — store the call alert to the call alert queue, which is a list of call alerts
- Clear — dismiss and delete the call alert

## Sending Call Alerts

- 1 Enter the Private ID you want to send to, as you would when making a Private call.
- 2 Press  under **Alert**. **Ready to Alert** appears on the display.
- 3 Press the PTT button until **Alert Successful** appears on the display.

**Note:** If the alert is not successful, this may mean the person you are trying to reach is on a call or has the phone turned off.

## Receiving Call Alerts

When you receive a call alert, you must answer, queue, or clear it. You cannot receive phone calls or Private calls until you do.

To answer a call alert:


Press the PTT button to make a Private call to the sender.

To queue a call alert:

Press  under **Queue**.

To clear a call alert:

Press  under **Clear**. **-or-**

If the flip is closed, press .

**Note:** The recent calls list also stores call alerts you have received. They appear as Private calls. Call alerts remain in your recent calls list until you delete them or until they reach the end of the list.

## Using the Call Alert Queue

When you queue a call alert, it remains in the call alert queue until you make a Private call to the sender or delete it.

## Call Alerts

### Viewing Call Alerts

- 1 From the main menu, select **Call Alert**.
- 2 Scroll through the list.

### Viewing Date and Time

To view the date and time a call alert was received:

- 1 From the main menu, select **Call Alert**.
- 2 Scroll to the call alert you want information on.
- 3 Press **△**.
- 4 Select **View**.

### Responding to Call Alerts in the Queue

After you queue a call alert, you can respond to it by making a Private call to the sender or sending a call alert to the sender.

#### *Making a Private Call to the Sender*

- 1 From the main menu, select **Call Alert**.
- 2 Scroll to the call alert you want to respond to.
- 3 Press the PTT button to begin the call.

This removes the call alert from the queue.

#### *Sending a Call Alert to the Sender*

- 1 From the main menu, select **Call Alert**.
- 2 Scroll to the call alert you want to respond to.

- 3 Press **◁** under **Alert**. **Ready to Alert** appears on the display.
- 4 Press the PTT button until **Alert Successful** appears on the display.

### Deleting Call Alerts

To delete a call alert from the queue:

- 1 From the call alert queue, scroll to the call alert you want to delete.
- 2 Press **△**.
- 3 Select **Delete**.
- 4 Press **◁** under **Yes** to confirm.

To delete all call alerts from the queue:

- 1 From the call alert queue, press **△**.
- 2 From the call alert menu, select **Delete All**.
- 3 Press **◁** under **Yes** to confirm.


### Sorting Call Alerts

**Tip:** You must have at least one call alert in the queue to access this feature.

To sort call alerts by the order they were received:

- 1 From the main menu, select **Call Alert**.
- 2 Press **△**.
- 3 Select **Sort By**.
- 4 Scroll to **First on Top** or **Last on Top**.



5 Press  under **Select**.

## ***Call Alerts***




# Recent Calls

The recent calls list stores the numbers of the 20 most recent calls you have made and received.

If the number of a recent call is stored in Contacts, the name associated with the number appears on the recent calls list.

An icon appears beside the name or number indicating the Contacts type of the number used in the call. See “Contacts” on page 27.

For phone calls, an icon appears to the left of the name or number giving more information about the call:

-  A call you made.
-  A call you received.
-  A missed call. Missed calls appear on the recent calls list only if you have Caller ID.

**Note:** The recent calls list also stores call alerts you have received. They appear as Private calls. Call alerts remain in your recent calls list until you delete them or until they reach the end of the list.

## Viewing Recent Calls

### With the Flip Open



- 1 From the main menu, select **Recent Calls**.
- 2 Scroll through the list.


To get more information on a recent call:

From the recent calls list, select the call you want information on.


This displays information such as the name associated with the call, the number, the date, time, and duration of the call.

### With the Flip Closed


- 1 Press  to display the most recent call.
- 2 To view the rest the recent call list, press the volume keys on the side of your phone.
- 3 Press  to dismiss the recent calls list.

**Tip:** Press  to call the number displayed.

## Storing Recent Calls to Contacts

- 1 From the recent calls list, scroll to the number you want to store.
- 2 Press  under **Store**. -or-


## Recent Calls

If **Store** is not one of your options: Press . Select **Store**.

**Tip:** If **Store** is not on this menu, the number is already stored in Contacts.



- 3 To store the number as a new entry, select [**New Contact**]. -or-

To store the number to an existing entry, select the entry.



- 4 With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number. For information on Contacts types, see page 29.
- 5 If you want to add more information to the entry, follow the applicable instructions in “Creating Entries” on page 31.
- 6 Press  under **Done**.

## Deleting Recent Calls

To delete a call:

- 1 From the recent calls list, scroll to the call you want to delete.
- 2 Press .
- 3 Select **Delete**.
- 4 Press  under **Yes** to confirm.

To delete all calls:

- 1 From the recent calls list, press .
- 2 Select **Delete All**.
- 3 Press  under **Yes** to confirm.

# Contacts












Contacts stores up to 600 numbers or addresses. Each Contacts entry can store several numbers or addresses.

Information stored in Contacts is saved on your SIM card.

A Contacts entry contains:

- A name — A name is required if you are storing more than one number or address to the entry; otherwise, it is optional. Typically, this is the name of the person whose contact information is stored in the entry.
- A ring tone — You can assign a ring tone to each entry. This is the sound your phone makes when you receive phone calls or call alerts from any of the numbers stored in the entry.


- A Contacts type — Each number or address stored must be assigned a Contacts type:

	<b>Mobile</b>	phone number
	<b>Private</b>	Private ID
	<b>Work1</b>	phone number
	<b>Work2</b>	phone number
	<b>Home</b>	phone number
	<b>Email</b>	email address
	<b>Fax</b>	phone number
	<b>Pager</b>	phone number
	<b>Talkgroup</b>	Talkgroup number
	<b>IP</b>	IP address
	<b>Other</b>	phone number

- A number or address — Each Contacts entry must contain a number or address. This may be any type of phone number, Private ID, Talkgroup number, email address, or IP address.

**Note:** You can store numbers up to 64 digits long, but every 20 digits must be separated by a pause or wait. See “Creating Pauses and Waits” on page 34.

## Contacts

- A Speed Dial number — When you store a phone number, it is assigned a Speed Dial number. You can accept the default Speed Dial number or change it.
- A voice name — If you create a voice name for a number, you can then dial that number by saying the voice name into your phone. This icon appears  to the left of the Contacts type icon if a voice name is assigned.

**Note:** This is an optional feature. Contact your service provider about its availability for purchase.

## Viewing Contacts


To access Contacts:



Press  under **Contcs. -or-**

From the main menu, select **Contacts. -or-**

If you are on a call: Press . Select **Contacts.**

To view entries:

- 1 From the Contacts list, scroll to the entry you want to view.
- 2 If an entry has more than one number or address stored,  surrounds the Contacts type icon. Scroll left or right to view the icon for each number stored in the entry.



- 3 When the icon for the number or address you want to view is displayed, press  under **View. -or-**  
If **View** is not one of your options: Press . Select **View.**

- 4 Scroll to view the other numbers and addresses stored for the entry.

**Tip:** To view more entries, continue scrolling.

## Searching for a Name


To search for a name in Contacts:


- 1 From the Contacts list, press .
- 2 Select **Search.**
- 3 Enter the name you want to see. See “Entering Text” on page 77.
- 4 Press  under **Ok.**

Your phone finds the name you entered or the nearest match.



## Showing Only Private IDs and Talkgroups

To set Contacts to show only entries that contain Private IDs and Talkgroup entries:

- 1 From the Contacts list, press .
- 2 Select **Filter.**


- 3 With **Show Prvt/Grp** highlighted, press  under **Select**.


To set Contacts to show all entries:


- 1 From the Contacts list, press .
- 2 Select **Filter**.
- 3 Scroll to **Show All**.
- 4 Press  under **Select**.

## Creating Entries

A number or address and a Contacts type are required for all Contacts entries. Other information is optional. You may enter the information in any order by scrolling through the entry details.

After you have entered the number or address, Contacts type, and any other information you want, you can press  under **Done** to save the entry to Contacts.



To cancel a Contacts entry at any time press,  to return to the idle screen.

**Tip:** In some fields that require you to enter information, you can begin entering the information from the keypad instead of pressing  under **Change**.


To create a Contacts entry:


- 1 To access the entry details screen:

Select **Contacts > [New Contact]**. -or-


From the Contacts list, press . Scroll to **New**. Press  under **Select**.


- 2 If you want to assign a name to the entry:

With the **Name** field highlighted, press  under **Change**.


Enter the name. See “Entering Text” on page 77. When you are finished, press  under **Ok**.


- 3 If you want to assign a ring tone to the name:

With the **Ringer** field highlighted, press  under **Change**.


Scroll to the ring tone you want to assign. Press  under **Select**.

- 4 To assign a Contacts type to the number or address being stored:

With the Contacts type field highlighted, press  under **Change**.


Scroll to the Contacts type you want to assign. Press  under **Select**.

- 5 To store a number or address:


With the **#** field (or **ID** for an email address, or **IP** for an IP address) highlighted, press  under **Change**.

## Contacts

Enter the number or address. For phone numbers, use the 10-digit format. For email addresses, see “Entering Text” on page 77.

**Tip:** Press  under **Browse** to select a number or address from Contacts, the recent calls list, or Memo.

When you are finished, press  under **Ok**.

**6** If you want to assign more options to the number, press  under **Change** with the **[Options]** field highlighted. See “Assigning Options” on page 32.


**7** If you want to add more numbers or addresses to the entry:

Scroll past the information you already entered.

Enter the additional information for the entry using step 2 through step 6. You must assign a name to the entry, if you have not already.


**8** Press  under **Done**.


## Assigning Options

**1** If you have not already, press  under **Change** with the **[Options]** field highlighted

**2** The default Speed Dial number assigned to a phone number is displayed in the **Speed #** field. This is always the next available Speed Dial location.

If you want to assign the phone number to a different Speed Dial location:


With the **Speed #** field highlighted, press  under **Change**.

Press  under **Delete** to delete the current Speed Dial number.

Enter the new Speed Dial number using the keypad.

When you are finished, press  under **Ok**.

**3** If you want to create a voice name for a phone number:

With the **Voice Name** field highlighted, press  under **Record**.

As directed by the screen prompts, say and repeat the name you want to assign to the number. Speak clearly into the microphone.

**4** When you are finished, press  under **Back**.

## Storing Numbers Faster

To store numbers to Contacts from the recent call list, see “Storing Recent Calls to Contacts” on page 27.

To store numbers to Contacts from Memo, see “Memo” on page 67.



To store numbers to Contacts from the idle screen:

- 1 Use the keypad to enter the number you want to store.
- 2 Press **⏏**.
- 3 Select **Store Number**.
- 4 To store the number as a new entry, select **[New Contact]**. -or-

To store the number to an existing entry, select the entry.

- 5 With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number.
- 6 If you want to add more information to the entry, follow the applicable instructions in “Creating Entries” on page 31.
- 7 Press **⏏** under **Done**.

## Editing Entries

- 1 From the Contacts list, scroll to the entry you want to edit.
- 2 Press **⏏**.
- 3 Select **Edit**. The entry details screen displays.
- 4 Follow the applicable instructions in “Creating Entries” on page 31 to edit the various fields.

## Deleting Entries

### Delete an Entry

- 1 From the Contacts list, scroll to the entry you want to delete.
- 2 Press **⏏**.
- 3 To delete the entire entry, scroll to **Delete Contact**.
- 4 Press **⏏** under **Select**.
- 5 Press **⏏** under **Yes** to confirm.

### Delete a Number or Address

- 1 From the Contacts list, scroll to the entry that contains the number or address you want to delete.
- 2 With the Contacts type field highlighted, scroll left or right to display the Contacts type for the number you want to delete.
- 3 Press **⏏**.
- 4 Scroll to **Delete Number**.
- 5 Press **⏏** under **Select**.
- 6 Press **⏏** under **Yes** to confirm.

### Deleting All Entries From Contacts


- 1 From the Contacts list, press **⏏**.
- 2 Scroll to **Delete All**.
- 3 Press **⏏** under **Select**.

## Contacts

4 Press  under **Yes** to confirm.

## Checking Capacity

To see how many numbers are stored in Contacts:


- 1 From the Contacts list, press .
- 2 Select **Capacity**.

## Creating Pauses and Waits


When storing a number, you can program your phone to pause or wait between digits while dialing. A pause makes your phone pause for 3 seconds before dialing further. A wait makes your phone wait for your response before dialing further.

This feature is useful when using voice mail or other automated phone systems that require you to dial a phone number and then enter an access number.


To program a pause:


Press and hold  until the letter P appears. The P represents a 3-second pause.

If you store 17035551235P1234, when you select this number and make a call, your phone dials the first 11 digits, pauses for 3 seconds, then dials the last 4 digits.

If you want a pause longer than 3 seconds, press and hold  more than once. Each P represents a 3-second pause.

To program a wait:

Press and hold  until the letter W appears. The W means your phone waits before dialing further.


If you store 17035551235W1234, when you select this number and make a call, your phone dials the first 11 digits and then waits. A message appears asking if you want to send the rest of the digits. Press  under **Yes** to dial the last 4 digits.

**Tip:** You can create pauses and waits while dialing a number from the keypad. See “Creating Pauses and Waits While Dialing” on page 71.

## International Numbers

**Note:** This feature may not be offered by your service provider.

When storing a number that you plan to use for international calls, use Plus Dialing:

- 1 Press and hold  for 2 seconds. A “0” appears, then changes to a “+”.

**Note:** The network translates the “+” into the appropriate international access code needed to place the call.

- 2 Enter the country code, city code or area code, and phone number.

For information about making international calls, see “Making International Calls” on page 71.

## **Accessing Contacts with GSM Phones**

If you plan to use the information stored in Contacts with an *i2000*, *i2000plus*, or any other GSM phone, you must purchase CompanionPro. Go to [www.motorola.com/idenupdate](http://www.motorola.com/idenupdate) or your service provider's web site for more information.

You can use CompanionPro to make the Contacts information saved to your *i530* phone's SIM card accessible in this type of phone.

## ***Contacts***







# Call Forwarding

Call forwarding sends calls to the phone numbers you specify. You can forward all calls to one number or forward missed calls to different numbers depending on the reason you missed the call.




You can forward phone lines 1 and 2 independently.


## Forwarding All Calls


When you set your phone to forward all calls, an icon appears in the top row of the display:



-  Phone line 1 is active; calls to phone line 1 are being forwarded.
-  Phone line 1 is active; calls to phone line 2 are being forwarded.
-  Phone line 1 is active; calls to phone lines 1 and 2 are being forwarded.
-  Phone line 2 is active; calls to phone line 1 are being forwarded.
-  Phone line 2 is active; calls to phone line 2 are being forwarded.
-  Phone line 2 is active; calls to phone lines 1 and 2 are being forwarded.

To forward all calls:


- 1 From the main menu, select **Call Forward**.
- 2 Press  under **Change**.
- 3 Select **All Calls**.
- 4 Scroll to **To**.
- 5 Press  under **Change**.
- 6 If you specified a forwarding number for all calls before, this number displays. Press  under **Change**.

To forward calls to this number, press  under **Ok**.  
**-or-**

To delete this number, press and hold  under **Delete**.

- 7 To enter the number you want to forward calls to:  
Enter the number using your keypad. **-or-**  
Press  under **Search**. Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.
- 8 Press  under **Ok**.




All your calls are now forwarded to the number you specified.

**Tip:** In some fields, you can select an option by scrolling left or right instead of pressing  under **Change**.

## Call Forwarding

### Turning Off Call Forwarding

If you don't want all your calls forwarded, turn the feature off:

- 1 From the main menu, select **Call Forward**.
- 2 Press  under **Change**.
- 3 Select **All Calls**.
- 4 Scroll to **To**.
- 5 Press  under **Change**.
- 6 Scroll to **Off**.
- 7 Press  under **Select**.

All your calls are now sent to your phone.

Calls you miss are forwarded according to the options set for missed calls. By default, missed calls are forwarded to voice mail.

**Note:** To receive voice mail messages, you must first set up a voice mail account with your service provider.

### Forwarding Missed Calls




You can specify a forwarding number for each type of missed call:


- **If Busy** — Your phone is on a call or transferring data.


- **If No Answer** — You do not answer on the first 4 rings.
- **If Unreachable** — Your phone is out of coverage or powered off.

**Note:** If you want a type of missed call sent to voice mail, the call forwarding number for that type of missed call must be your voice mail access number.

To forward missed calls:


- 1 From the main menu, select **Call Forward**.
- 2 Press  under **Change**.
- 3 Select **Detailed**.
- 4 Scroll to **If Busy** to specify a forwarding number for calls received when your phone is busy.
- 5 Press  under **Change**.
- 6 If you specified a forwarding number for this type of call before, this number displays. Press  under **Change**.

To forward calls to this number, press  under **Ok** and go to step 9. **-or-**

To delete this number, press and hold  under **Delete**.


- 7 To enter the number you want to forward this type of call to:

Enter the number using your keypad. **-or-**

Press  under **Search**. Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.

8 Press  under **Ok**.

9 Repeat step 4 through step 8 for **No Answer** and **If Unreachable**.

When you are finished, press  under **Back**.

## Viewing Call Forwarding Settings

1 From the main menu, select **Call Forward**.

2 With **To** highlighted, press .


3 Select **Retrieve Status**.

## ***Call Forwarding***



# Messages

To access your voice mail messages, text and numeric messages, Net alerts, and any other types of messages you are able to receive, go to the message center:

- 1 Press  under **Mesg. -or-**

From the main menu, select **Messages**.

- 2 Scroll to the type of message you want to access.
- 3 Press  under the display option on the left.

The message center shows how many messages you have of each type. You can listen to, read, or delete these messages.

## Message Notifications

When you receive a message, your phone notifies you with text on the display and a notification tone or vibration. You can access the message or dismiss the notification.


If you dismiss the notification, the message is not deleted. It can be accessed through the message center.

If you are not on a phone call when you receive a message, your phone sounds a notification tone every 30 seconds until you access the message or dismiss the alert.

If you are on a call when you receive a message, your phone may sound a notification tone during the call or after you end the call, depending on how you set your notification options.

## Setting Notification Options

To control whether your phone sounds message notification tones while you are on phone calls:

- 1 From the main menu, select **Settings > Phone Calls > Notifications**.
- 2 Choose the option you want:
  - **Receive All** — Tones sound during calls for all types of messages.
  - **Msg Mail Only** — Tones sound during calls for mail messages; tones for all other types of messages are held until you end calls.
  - **Delay All** — Tones for all types of messages are held until you end calls.
- 3 Press  under **Select**.

**Tip:** To set notification options during a call: Press . Select **In Call Setup > Notifications**.


## Voice Mail

**Note:** To receive voice mail messages, you must first set up a voice mail account with your service provider.


## Messages


When you receive a voice mail message, **New Voice Mail Message** appears on the display.


To call your service provider's voice mail system and listen to the message:


Press  under **Call**.

To dismiss the message notification:

If the phone cover is closed, press  or open the phone cover.


Press  under **Exit**.

If the phone cover is open, press  under **Exit** or close the phone cover. **-or-**


This icon  appears on the display, reminding you that you have a new message.


## Sending Unanswered Calls to Voice Mail

To send a phone call to voice mail instead of answering it:

If the phone cover is closed, press . **-or-**

Press . **-or-**

Press  under **No**.

If the caller leaves a message, this icon  appears on the display, reminding you that you have a new message.


## Text and Numeric Messages

The phone's display refers to text and numeric messages as Text Messages.

These messages can be up to 140 letters or 20 digits long. You can store up to 16 of these messages. Each message is stamped with the date and time it was left.

If your phone is powered off when you receive a message, your phone notifies you the next time you power it on. If you are out of your coverage area, your phone alerts you when you return to your coverage area.


Your phone attempts to deliver these messages for up to 7 days.


**Tip:** While reading a text and numeric message that contains a phone number, you can press  to call that number.


## Receiving a Message

When you receive a text and numeric message, **New Text Message** appears on the display.



To view the message:

- 1 Press  under **Read**.
- 2 If the message fills more than one screen, scroll to read it.

**3** To keep the message, press  under **Save. -or-**

To delete the message, press  under **Delete.**


To dismiss the message notification:

Press  under **Back.** This icon  appears on the display, reminding you that you have a new message.


## Reading from the Message Center


**1** From the message center, select **Text Msgs.**

**2** Scroll to the message you want to read.

**3** Press  under **Read.**

**4** If the message fills more than one screen, scroll to read it.

**5** To keep the message, scroll to the end of the message and press  under **Save. -or-**

To delete the message, press  under **Delete.**


## Net Alerts

**Note:** This feature may not be offered by your service provider.

Net alerts are text and numeric messages sent from:

- Your 530 phone
- Your service provider's website
- Any email application





When you receive a Net alert, a notification appears on the display.

If you dismiss the notification, this icon  appears on the display, reminding you that you have a new message.

## ***Messages***

# Ring Tones

To set the ring tone your phone makes when you receive phone calls, message notifications, or call alerts:

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.
- 3 Scroll through the list of ring tones to the one you want to assign. Highlighting a ring tone lets you hear it.
- 4 Press  under **Assign**.
- 5 Scroll to the feature you want to assign the ring tone to.
- 6 Press  under **Select**.  
**Tip:** A checkmark next to a feature means the current ring tone has been assign to it. To remove the assignment: Scroll to the feature. Press  under **Select**.
- 7 To assign the ring tone to other features, repeat step 5 through step 6.
- 8 When you are finished, press  under **Done**.

# Using the Vibrate Feature




If your phone includes a vibrate feature, you can set your phone to vibrate when you receive phone calls, Private calls and group calls, messages notifications, or call alerts.

**Note:** This is an optional feature. Contact your service provider about its availability for purchase.

# Turning Ring Tones Off

You can set your phone to make no sound when you receive phone calls, Private calls and group calls, messages notifications, or call alerts. If your phone includes the vibrate feature, you can set your phone to vibrate instead of making a sound.

These icon indicate how the ringer is set.

-  The phone never rings.
-  The phone always vibrates instead of ringing.
-  The phone does not ring for phone calls.

These icons may appear at the same time.

## Ring Tones

### Never Ring

- 1 From the main menu, select **Ring Tones > SilentAll**.
- 2 Scroll left or right to set **SilentAll** to **On**.




### Always Vibrate Instead of Ringing

- 1 From the main menu, select **Ring Tones > VibeAll**.
- 2 Scroll left or right to set **VibeAll** to **On**.

**Tip:** Pressing the volume controls to turn down the volume as far as possible sets **VibeAll** to **On**.

### Do Not Ring for Some Features



To set individual ring options for phone calls, messages notifications, or call alerts:

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.
- 3 Scroll through the list of ring tones to **Silent**. -or-
- 4 Press  under **Assign**.
- 5 Scroll to the feature you want to set to make no sound.
- 6 Press  under **Select**.
- 7 To assign Vibrate or Silent to another feature, repeat step 5 through step 6.
- 8 When you are finished, press  under **Done**.

**Note:** To set ring options for Private calls and group calls, see “Setting Your Phone to Not Ring” on page 81.

## Ring and Vibrate

To set a your phone to ring and vibrate when you receive phone calls or call alerts:

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** is set to **Off**.
- 3 Scroll through the list of ring tones and select the one you want to assign.
- 4 Press .
- 5 Select **Assign w/Vibe**.
- 6 Select the feature you want to set to ring and vibrate.
- 7 When you are finished, press  under **Done**.

This icon  appears on the display.

## Assigning Ring Tones to Contacts

You can set the ring tone your phone makes when you receive phone calls or call alerts from someone you have stored in Contacts.

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.

## Viewing Ring Tone Assignments

- 3 Scroll through the list of ring tones to the one you want to assign. Highlighting a ring tone lets you hear it.
- 4 Press **⏪** under **Assign**.
- 5 Select **A Contact**.
- 6 Scroll to the Contacts entry you want to assign the ring tone to.
- 7 Press **⏪** under **Select**.

## Viewing Ring Tone Assignments

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.
- 3 Highlight any ring tone.
- 4 Press **⏪**.
- 5 Select **Overview**.

## Downloading More Ring Tones

If you want to use other ring tones, you can download them into your phone for a fee. Go to [www.motorola.com/idenupdate](http://www.motorola.com/idenupdate) for a selection of custom ring tones and downloading instructions.

**Note:** Ring tones purchased from this web site may be downloaded only once. If you delete a ring tone from your phone, you must purchase it again to download it again.

## Managing Memory

To view the amount of memory available for custom ring tones:



- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.
- 3 Highlight any ring tone.
- 4 Press **⏪**.
- 5 Select **Memory Usage**.

Deleting custom ring tones frees memory.

**Note:** Ring tones are stored in your phone using the same memory space used to store voice records (see “Voice Records” on page 63), Deleting voice records frees memory space for ring tones.

## Deleting Custom Ring Tones

To delete a custom ring tone:

- 1 From the main menu, select **Ring Tones**.
- 2 Make sure **VibeAll** or **SilentAll** is set to **Off**.
- 3 Scroll to the ring tone you want to delete.
- 4 Press .
- 5 Select **Delete**.
- 6 Press  under **Yes** to confirm.



# Mobile Originated Text Messaging

With mobile originated text messaging, you can send and receive short text messages to and from other iDEN phones. Messages you receive appear on your phone's display and in the text message inbox. You access these messages through the message center. See "Messages" on page 41.

**Note:** This feature may not be offered by your service provider.

## Setting Up

Before you begin using mobile originated text messaging, you may need to set up your signature, service center number, and expiration information:

- 1 From the main menu, select **Messages**.
- 2 Scroll to **Text Inbox**.
- 3 Press **△**.
- 4 Select **Text Msg Setup**.
- 5 With the **Signature** field highlighted, press **⏪** under **Change**.

Enter your signature. It may be up to 11 characters long. See "Entering Text" on page 77. When you are finished, press **⏪** under **Ok**.

- 6 With the **SrvC Cntr No** field highlighted, press **⏪** under **Change**.

Enter the phone number of your service center. If you do not know this number, contact your service provider.

When you are finished, press **⏪** under **Ok**.

- 7 With the **Expire After** field highlighted, press **⏪** under **Change**.

This is the amount of time messages you send are saved if they cannot be delivered. After this period, they are discarded.

Scroll or press **⏪** under **→** to change field.

When you are finished, press **⏪** under **Done**.

- 8 Press **⏪** under **Back** to save the information you entered.

## Receiving Messages

When you receive a message, your phone notifies you as it would with any other type of message. See "Message Notifications" on page 41.

To view the message:

Press **⏪** under **Read**.

To dismiss the message notification:

Press **⏪** under **Exit**.

## Reading Messages From the Message Center

- 1 From the main menu, select **Message > Text Inbox**.
  - 2 Scroll to the message you want to read.
  - 3 Press  $\odot$  under **Read**.
  - 4 If the message fills more than one screen, scroll to read it.
  - 5 To keep the message, press  $\odot$  under **Save**. **-or-** To delete the message, press  $\odot$  under **Delete**.
- Tip:** To see more choices, including replying to the message, press  $\Delta$ .

Your text inbox holds up to 16 messages. Each message can be up to 160 characters long.

## Creating and Sending Messages

- 1 From the main menu, select **Messages > Text Inbox > [Create Msg]**. **-or-** From the main menu, select **Messages > Text Outbox > [Create Msg]**.
- 2 Press  $\odot$  under **Create**.
- 3 To address the message:

Use the keypad to enter the phone number of the person you want to send the message to. **-or-**

Press  $\odot$  under **Browse**. Select **Contacts**, **Recent Calls**, or **Memo**. Enter the number from Contacts, the recent calls list, or Memo, as you would when making a call.

When you are finished, press  $\odot$  under **Ok**.

- 4 Enter the text of the message. See “Entering Text” on page 77. **-or-**

To use a quick note: Press  $\odot$  under **Browse**. Scroll to the quick note you want. Press  $\odot$  under **Select**. For more information on quick notes, see “Using Quick Notes” on page 51.

If you want to add your signature: Press  $\Delta$ . Select **Add Signature**.



When you are finished, press  $\odot$  under **Ok**.



- 5 If you want to send the message, press  $\odot$  under **Yes**. **-or-**



If you want to request confirmation of delivery, specify the type of message you want to send, save the message as a draft, or delete the message without sending it, press  $\odot$  under **No**.



- 6 If you want to request confirmation of delivery: With the **Report** field highlighted, press  $\odot$  under **Change**. Select **Yes**.


- 7 If you want to specify the type of message you want to send:

With the **Send As** field highlighted, press  under **Change**. Scroll to the message type you want. Press  under **Select**.


- 8 To send the message: Press . Press  under **Yes**. -or-

To save the message as a draft without sending it: Press . Scroll to **Save As Draft**. Press  under **Select**. -or-

To delete the message without sending it: Press . Scroll to **Delete**. Press  under **Select**.


**Tip:** In some fields, you can select an option by scrolling left or right instead of pressing  under **Change**.

## Addressing Messages From the Recent Calls List

- 1 From the recent calls list, scroll to the name you want to send a message to.
- 2 If the entry has more than one phone number stored, view the phone number you want to send the message to.
- 3 Press .

- 4 Select **Compose SMS**. The message is automatically addressed to the phone number you chose.
- 5 Follow step 4 through step 8 of “Creating and Sending Messages” on page 50.


## Addressing Messages From the Idle Screen

- 1 Using the keypad, enter the number you want to send a message to.
- 2 Press .
- 3 Select **Compose SMS**. The message is automatically addressed to the phone number you chose.
- 4 Follow step 4 through step 8 of “Creating and Sending Messages” on page 50.

## Using Quick Notes



Quick notes are short, pre-written text messages that you can create, edit, and send. You can store up to 20 quick notes. A quick note may be up to 30 characters long.

To create a quick note:


- 1 From the main menu, select **Messages > Quick Notes > [New Quick Note]**.
- 2 Press  under **Create**.

## Mobile Originated Text Messaging

Enter text. See “Entering Text” on page 77. -or-

To choose from pre-installed notes: Press  under **Browse**. Scroll to the note you want. Press  under **Select**.

3 Press  under **Store**.

**Tip:** For more options, including sending the quick note, press .

## Using Drafts

When you save a message as a draft, it is saved in the drafts folder. You must have a draft saved to have a drafts folder.

To edit a draft:


1 From the main menu, select **Messages > Drafts Folder**.

2 Press  under **Change**.

3 To edit the fields you want to change, follow step 3 through step 8 in “Creating and Sending Messages” on page 50.

If you have a draft saved, you can create more drafts in the drafts folder:

1 From the main menu, select **Messages > Drafts Folder > [Create Msg]**.

2 Press  under **Create**.

3 Follow step 3 through step 7 in “Creating and Sending Messages” on page 50.

4 Scroll to **Save As Draft**.

## Using the Outbox

Messages you have sent are stored in the outbox.

These icons appear next to messages in the outbox:



Sent and confirmed.



Send attempted.



Forwarded.



Received by addressee.



Not received by addressee.



Send failed.



Re-sent.



Locked.

## Resending Messages

To resend a message:

1 From the main menu, select **Messages > Text Outbox**.

2 Scroll to the message you want to resend.

- 3 Press **⏏**.
- 4 Select **Re-send**.
- 5 Press **⏏** under **Yes** to confirm.

### Deleting Sent Messages

To delete a sent message:

- 1 From the main menu, select **Messages > Text Outbox**.
- 2 Scroll to the message you want to delete.
- 3 Press **⏏**.
- 4 Select **Delete**.
- 5 Press **⏏** under **Yes** to confirm.

To delete all unlocked sent messages:

- 1 From the main menu, select **Messages > Text Outbox**.
- 2 Press **⏏**.
- 3 Select **Delete All**.
- 4 Press **⏏** under **Yes** to confirm.

### Locking Sent Messages

When you lock a message, it cannot be deleted until you unlock it.

- 1 From the main menu, select **Messages > Text Outbox**.
- 2 Scroll to the message you want to lock or unlock.

- 3 Press **⏏**.
- 4 Scroll to **Lock** to lock the message. **-or-** Scroll to **Unlock** to unlock the message.
- 5 Press **⏏** under **Select**.

### Managing Memory

Your text inbox, outbox, and drafts folder have a set amount of memory available for storing messages.

The text inbox holds 16 messages of up to 160 characters. If the text inbox is full, you cannot receive messages until you delete some.

The outbox and drafts folder share memory space. Together they can hold 20 messages. If the outbox and drafts folder memory is full, you cannot send messages or save drafts until you delete some.

To view the amount of memory available in your text inbox:

- 1 From the main menu, select **Messages > Text Inbox**.
- 2 Press **⏏**.
- 3 Select **Memory Meter**.

To view the amount of memory available in your outbox and drafts folder:

- 1 From the main menu, select **Messages > Text Outbox**.

## ***Mobile Originated Text Messaging***

**2** Press .

**3** Select **Memory Meter**.

## GPS Enabled

Your phone's GPS Enabled feature uses information from Global Positioning System (GPS) satellites orbiting the Earth to determine the approximate geographical location of your phone, expressed as latitude and longitude. The availability and accuracy of this location information (and the amount of time that it takes to calculate it) will vary depending on the environment in which you are using the GPS feature. For example, GPS location fixes are often difficult to obtain indoors, in covered locations, between high buildings, or in other situations where you have not established a clear broad view of the sky. **SEE: "IMPORTANT: Things to Keep in Mind" on page 55.**

When you make a 911 emergency call, the GPS feature of your phone can help emergency personnel locate you if your phone has adequate access to GPS satellite signals and your emergency response center is equipped to process such information.

You can also use the GPS feature to view your approximate location. Location information appears on the phone's display.

If your phone is connected to a laptop computer or similar device, software running on that device can request your location. To protect your privacy, you can control whether these requests are granted.

## IMPORTANT: Things to Keep in Mind

If you are using the GPS feature of your phone while driving, please give full attention to driving and to the road.

**Where adequate signals from multiple satellites are not available** (usually because your GPS antenna cannot establish a view of a wide area of open sky), **the GPS feature of your phone WILL NOT WORK. Such situations include but are not limited to:**

- **In underground locations**
- **Inside of buildings, trains, or other covered vehicles**
- **Under any other metal or concrete roof or structure**
- **Between tall buildings or under dense tree-cover**
- **Near a powerful radio or television tower**
- **When your GPS antenna is covered (for example, by your hand or other object) or facing the ground**
- **In temperature extremes outside the operating limits of your phone**

## *GPS Enabled*

**Walking or driving very slowly may also substantially reduce GPS performance.**

**Even where location information can be calculated in such situations, it may take much longer to do so, and your location estimate may not be as accurate. Therefore, in any 911 call, always report the location to the emergency response center if you can and if you cannot, remain on your phone for as long as the emergency response center instructs you.**

**Even where adequate signals from multiple satellites are available, your GPS feature will only provide an approximate location, often within 150 feet (45 meters) but sometimes much further from your actual location. Advice on how to improve GPS performance is provided in “Enhancing GPS Performance” on page 58.**

While the GPS feature of your phone can be a valuable navigational aid, it does not replace the need for careful navigating and good judgment. **Never rely solely on one device for navigation.** Remember that the accuracy of the location information and the time needed to obtain it will vary depending on circumstances, particularly the ability to receive signals from adequate numbers of satellites.

On emergency calls, your phone uses assistance information from the phone network to improve the speed and accuracy of your phone's location calculation: if such assistance information becomes unavailable, it may reduce the speed and accuracy of the location calculation.

The satellites used by the GPS feature of your phone are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense GPS user policy and the Federal Radionavigation Plan. These changes may affect the performance of the GPS feature of your phone.

## **Making an Emergency Call**

Dial 911 to be connected to an emergency response center. If you are on an active call, you must end it before calling 911.

When you make an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your approximate location. **It will take the GPS feature of your phone some time to determine your approximate location.** Even where your phone has good access to sufficient GPS satellite signals and network assist data, it may take 30 seconds or more to determine the approximate location. This time will increase where there is



reduced access to satellite signals. When your approximate location is determined, it is made available to the appropriate emergency response center.

**In some cases, your local 911 emergency response center may not be equipped to receive GPS location information.** For this reason, and because the GPS location information reported is only approximate or may not be available in your location (see “IMPORTANT: Things to Keep in Mind” on page 55), **always report your location to the 911 operator** you speak to when making an emergency call, if able, just as you would when using a phone without GPS capabilities.

**Note:** If you are concerned about whether your local 911 emergency response center is equipped to receive GPS location information, contact your local authorities.

In general, if your phone has access to signals from more GPS satellites, your location will be determined faster and more accurately than if your phone has access to signals from fewer GPS satellites.

If your phone does not have adequate access to GPS satellites signals, the location of the nearest cell tower in contact with your phone is automatically made available to the emergency response center, if the center has the capability to receive such information.

See “Enhancing GPS Performance” on page 58 for information on how to help your phone determine your location.

## Viewing Your Approximate Location

- 1 From the main menu, select **GPS > Position**.
- 2 Scroll to view the entire screen.

This displays the following information about the last time your location was calculated:

- The time (as Greenwich Mean Time) and date that the location was last calculated
- The approximate location, expressed as latitude and longitude
- The estimated accuracy of the calculated location. This estimate of accuracy is only a very rough estimate and may vary substantially from the actual accuracy of the approximate location information reported.
- The number of satellites used to calculate the location. In general, more satellites make for better accuracy.

To calculate your location again:


Press  under **Rfrsh**.


## GPS Enabled

It may take your phone several minutes to complete the process of determining your location. During this time, a message usually appears on your phone's display saying your phone is scanning for satellites. For tips on getting the best location calculation, see "Enhancing GPS Performance" on page 58.

The **Position** screen displays the updated information.

To cancel a location calculation before it is completed:

Press  under **Cancel** to return to the **Position** screen. **-or-**

Press  to return to the idle screen.

Each time approximate location of your phone is calculated, the latest location information is stored in your phone and remains there even when your phone is powered off. You will see this information the next time you view the **Position** screen.

If you received a phone call or alert while attempting to determine your location, the **Position** screen will disappear, but your phone will continue attempting to determine its location. If it is successful, the new location information will be displayed the next time you view the **Position** screen.


## Enhancing GPS Performance

Sometimes the GPS feature of your phone may be unable to complete a location calculation successfully. If this happens when you are making an emergency call, the location of the nearest cell tower in contact with your phone is made available to the appropriate emergency response center if the center has the capability to receive such information. If this happens when you are trying to view your location on the phone's display, you will see a message indicating that your phone cannot access satellites.

To improve accuracy and increase your chances of a successful calculation, do the following while your phone is determining your approximate location:

- Stay in the open. The GPS feature works best where there is nothing between your phone and a large amount of open sky. If possible, go outside, away from tall buildings and foliage. While performance in a building is improved by moving closer to windows, glass with certain sun shielding films may block satellite signals.
- Hold your phone to enhance reception. Signals from GPS satellites are transmitted to your GPS antenna, which is inside the back of your phone, opposite the earpiece, above the label with your

service provider's name on it. Hold your phone away from your body, giving the antenna clear access to satellite signals. Do not cover the antenna area with your fingers or anything else.

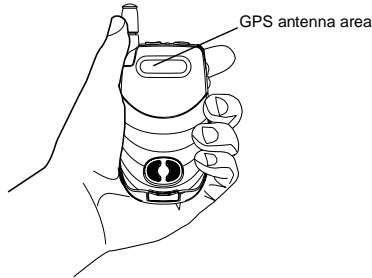

- Stand still. If possible, stand still until your phone is finished determining your location. Moving your phone at a walking pace while your phone is calculating your approximate location may substantially decrease GPS performance.
- In a car. When using the GPS Enabled feature in a car, position your phone so that the GPS antenna has good access to GPS signals through the car's windows. Typically, the GPS antenna has best access to GPS signals in a car when placed near a window.

**Note:** Although moving your phone at a walking pace decreases GPS performance, moving it at the speed of a moving car does not.

- Stay in network coverage. Depending on who your service provider is, the network will provide your phone with information that helps determine your location more quickly and accurately.

## Updating Satellite Almanac Data

Another way to keep the GPS feature of your phone working well is to keep your satellite almanac data up to date.

The United States government maintains an almanac of data about where GPS satellites are as they orbit the Earth. This information is available to your phone. Keeping your satellite almanac up to date helps your phone determine your location more quickly.

The almanac contains information about the location of satellites, their operational status, and other satellite information. Keeping this information updated enhances the performance of your GPS feature. In most cases, your phone will be able to get a fix in strong satellite signal conditions with outdated almanac data, but it may take longer.

## GPS Enabled

**Note:** When you make an emergency call, your phone does not rely upon the almanac to determine your location.

If your satellite almanac data is out of date, your phone may prompt you to update it. Follow the instructions that appear on the phone's display. You may be asked to go to a web site or call a customer care number.


## Setting Privacy Options

Your phone's GPS privacy options control whether software applications may view the location of your phone. You may set your phone to one of these GPS privacy options:

- **Restricted** — No software applications may view the location of your phone. However, location information may still be available to the phone's owner, fleet manager, or account administrator.
- **Unrestricted** — All applications may view the location of your phone, without notifying you.
- **By Permission** — When an application attempts to view the location of your phone, you will be prompted to give permission. However, location information may still be available to the phone's owner, fleet manager, or account administrator.

**Note:** Privacy options do not apply to the transmission of location information during emergency 911 calls.

To set your GPS privacy options:


- 1 From the main menu, select **GPS > Privacy**.
- 2 If your GPS PIN security feature is enabled, enter your GPS PIN. (See "Setting the GPS PIN Security Feature" on page 60 for more information.)
- 3 Scroll to the privacy setting you want.
- 4 Press  under **Select**.

## Setting the GPS PIN Security Feature

To prevent your GPS privacy settings from being altered without your knowledge, your GPS privacy option can be protected by a PIN.

When you receive your phone, the GPS security feature is turned off, so you do not have to enter a GPS PIN to access your GPS privacy options. If you turn this feature on, you will be required to enter a GPS PIN to access your GPS privacy options.

To turn the GPS Enabled security feature on or off:

- 1 From the main menu, select **Settings > Security > GPS PIN**.
- 2 Scroll to **On** or **Off**.
- 3 Press  under **Select**.
- 4 Enter the current GPS PIN.

**Note:** When you receive your phone, your GPS PIN is 0000.

5 Press  under **Ok**.

To change your GPS PIN:

1 From the main menu, select **Settings > Security > Change Password > GPS PIN**.

2 Enter the current GPS PIN.

**Note:** When you receive your phone, your GPS PIN is 0000.

3 Press  under **Ok**.

4 Enter the new 4- to 8-digit GPS PIN.

5 Press  under **Ok**.

6 Enter the new 4- to 8-digit GPS PIN to confirm.

7 Press  under **Ok**.

## Using GPS with Map Software

You can use the GPS feature of your phone to provide approximate location data to a laptop computer or similar device that is running interactive map software such as that made by DeLorme or Microsoft. This way, if your phone has good access to GPS signals, your approximate position on a map can be made available as you travel in a vehicle.

To do this, connect your phone to your laptop (or other device) with a data cable and set your phone to transmit data (see “Getting Started” on page 62). Your phone then provides your approximate location to the device running the map software, which displays your location on a map. Your phone provides an updated location every second and the map software displays your changing location on its map.

See “Enhancing GPS Performance” on page 58 for more details on obtaining good location information.

**Note:** Because your phone is continuously determining your location, using the GPS feature of your phone with map software uses the phone’s battery power quickly.

## Software Compatibility

Your phone sends location information to your laptop or other device using the standard National Marine Electronics Association (NMEA) format. Your phone supports output messages in NMEA-0183 format and supports the following NMEA-0183 sentences: GGA, GLL, GSA, GSV, RMC, and VTG.


The map software running on your laptop or other device must support NMEA 3.0.

## GPS Enabled


### Getting Started

To connect your phone to your laptop or other device:

- 1 Open the connector cover.

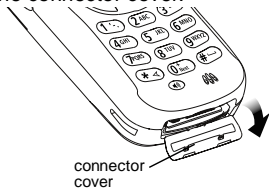

- 2 With the phone's display facing up, insert the data cable's connector into the accessory connector, until you hear a click.

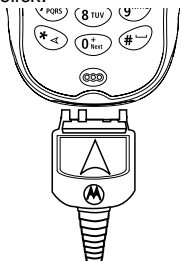

- 3 Insert the data plug into the COM port of your laptop or other device.

Make sure no other application is using the COM port selected.

Make sure the COM port settings of your laptop or other device are set to the following:

- Bits per second: 4800
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: Hardware

To set your phone to send location information to your laptop or other device:

- 1 From the main menu, select **GPS > Interface**.
- 2 With **NMEA OUT** highlighted, press  $\odot$  under **Change**.
- 3 Scroll to **On**.
- 4 Press  $\odot$  under **Select**. Your phone is now sending location data to your laptop or other device.

To stop your phone from sending location data to your laptop or other device:

Set **NMEA OUT** to **Off**.

Each time you power your phone on, **NMEA OUT** is automatically set to **Off**.

# Voice Records

**Note:** This is an optional feature. Contact your service provider about its availability for purchase.

A voice record is a recording you make with your phone and can play back. You can record notes to yourself or phone calls.

Your phone can store up to 20 voice records, with a total time of 3 minutes or more, depending on available memory.

## Creating Voice Records

To record a note to yourself:

- 1 From the main menu, select **VoiceRecd > [New VoiceRec]**.
- 2 Press  $\odot$  under **Record**. Say the message you want to record into the microphone.
- 3 When you are finished recording, press  $\odot$  under **Stop**.

To add to the end of voice record:

- 1 From the main menu, select **VoiceRecd**.
- 2 Scroll to the voice record you want to add to.
- 3 Press  $\triangle$ .
- 4 Scroll to **Add To**.

- 5 Press  $\odot$  under **Select**. Say the message you want to add into the microphone.
- 6 When you are finished recording, press  $\odot$  under **Stop**.

To record a phone call:

- 1 While on an active call, press  $\triangle$ .
- 2 Scroll to **Record**.
- 3 Press  $\odot$  under **Select** to start recording.
- 4 When you are finished recording, press  $\odot$  under **Stop**.

**Note:** Recording of phone calls is subject to applicable laws regarding privacy and recording of phone conversations.

## Playing Voice Records

- 1 From the main menu, select **VoiceRecd**.
- 2 Scroll to the voice record you want to play.
- 3 Press  $\odot$  under **Play**.
- 4 To stop the voice record while it is playing, press  $\odot$  under **Back**.

**Tip:** To fast forward, scroll right. To rewind, scroll left. To pause or resume, press any key.

## Voice Records

### Labelling Voice Records

When you create a voice record, it is labeled with the time and date it was recorded. You can then rename it with a custom label.

- 1 From the main menu, select **VoiceRecd.**
- 2 Scroll to the voice record you want to label.
- 3 Press **△**.
- 4 Select **Label**.
- 5 Enter the label you want to assign. See “Entering Text” on page 77.
- 6 Press **○** under **Ok**.

### Deleting Voice Records

To delete a voice record:

- 1 From the main menu, select **VoiceRecd.**
- 2 Scroll to the voice record you want to delete.
- 3 Press **△**.
- 4 Select **Delete**.
- 5 Press **○** under **Yes** to confirm.

To delete all voice records:


- 1 From the main menu, select **VoiceRecd.**
- 2 Press **△**.
- 3 Select **Delete All**.

- 4 Press **○** under **Yes** to confirm.

### Locking Voice Records

When you lock a message, it cannot be deleted until you unlock it.

- 1 From the main menu, select **VoiceRecd.**
- 2 Scroll to the message you want to lock or unlock.
- 3 Press **△**.
- 4 Scroll to **Lock** to lock the message. **-or-** Scroll to **Unlock** to unlock the message.
- 5 Press **○** under **Select**.

When a voice record is locked, this icon  appears next to it.

### Managing Memory




To view the amount of memory available for voice records:

- 1 From the main menu, select **VoiceRecd.**
- 2 Press **△**.
- 3 Select **Memory**.

To free more memory by deleting all unlocked voice records:

- 1 From the main menu, select **VoiceRecd.**



- 2 Press .
- 3 Select **Memory**.
- 4 Press  under **Delete**.
- 5 Press  under **Yes** to confirm.


**Note:** Voice records are stored in your phone using the same memory space used to store ring tones (see “Ring Tones” on page 45), Deleting ring tones frees memory space for voice records.

## ***Voice Records***

# Memo

Memo lets you store a number, make a call to that number, and save it to Contacts.



To create a memo:

- 1 From the main menu, select **Memo**.
- 2 Enter the number using your keypad.
- 3 Press  under **Store**.


To view the memo later:

- 1 From the main menu, select **Memo**.


To delete the memo:

- 1 From the main menu, select **Memo**.
- 2 Press and hold  under **Delete**.
- 3 Press  under **Store**.



To edit the memo:

- 1 From the main menu, select **Memo**.
- 2 Enter the new number.
- 3 Press  under **Store**.


To make a call to the memo number:

- 1 From the main menu, select **Memo**.
- 2 Press .

To store the memo number to Contacts:

- 1 From the main menu, select **Memo**.
- 2 Press .
- 3 Press  under **Select**.
- 4 To store the number as a new entry, select [**New Contact**]. -or-

To store the number in an existing entry, select the entry.

- 5 With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number.
- 6 If you want to add more information to the entry, follow the applicable instructions in “Creating Entries” on page 31.
- 7 Press  under **Done**.

***Memo***


# Advanced Calling Features

## Call Waiting

Call Waiting lets you receive a second call while on an active call. Call Waiting is always available, unless you turn it off for a specific call.

If you are on a call and receive a second call, your phone emits a tone and displays a message saying you are receiving a second call.

To accept the second call and put the active call on hold:

Press  under **Yes**.


To accept the second call and end the active call:

1 Press .

Your phone rings with the second call.


2 Answer the second call.


To decline the second call:

Press  under **No**. If you subscribe to voice mail, the call is forwarded to your voice mail box, unless you set **Call Forward for If Busy** to a different number.

## Switching Between Calls

When you accept a second call, the display shows the name or number of each call, with an icon indicating which call is active:

 Phone call is active.

 Phone call is on hold.

To make the call on hold active and put the active call on hold:


Press  under **Switch**.

## Turn Off Call Waiting

To turn off Call Waiting during a call:


1 Press .

2 Select **In Call Setup > Call Waiting**.

3 Press  under **Change**.



4 Scroll to **Off**.

**Tip:** To turn Call Waiting back on while still on the call: Scroll to **On**.

5 Press  under **Select**.

## Advanced Calling Features

To turn off Call Waiting for the next call you make or receive:




- 1 From the main menu, select **Settings > Phone Calls > Call Waiting**.
- 2 Press  under **Change**.
- 3 Scroll to **Off**.
- 4 Press  under **Select**.

Call Waiting is turned back on when you end the call.



## Call Hold

Call Hold lets you put an active call on hold and make a second call.

To put a call on hold:

- 1 While on an active call, press .
- 2 Scroll to **Hold**.
- 3 Press  under **Select**.
- 4 If you want to make the call active again, press  under **Resum**.

To make a second call while a call is on hold:

- 1 Enter the number you want to call.  
**Tip:** To enter the number from Contacts: Press . Select **Contacts**.
- 2 Press  to place the call.

To end the second call and make the call on hold active again:

Press .

To make the call on hold active and put the active call on hold:






Press  under **Switch**.


## 3-Way Calling

**Note:** This feature may not be offered by your service provider.

3-way calling lets you combine 2 phone calls into one. All 3 people in the call can speak to and hear each other.

To make a 3-way call:

- 1 Place or receive a phone call.
- 2 While the call is active, press .
- 3 Scroll to **3 Way**.
- 4 Press  under **Select**. This puts the call on hold.
- 5 Enter the second phone number you want to call.  
**Tip:** To enter the number from Contacts: Press . Select **Contacts**.
- 6 Press  to place the call.
- 7 While the second call is active, press .
- 8 Scroll to **3 Way**.


9 Press  under **Select**.

Both calls are now active and appear on the display.


## Creating Pauses and Waits While Dialing

You can enter a pause or wait while dialing a number. For more information on pauses and waits, see “Creating Pauses and Waits” on page 34.

To create a pause while dialing a phone number:

- 1 From the keypad, enter the digits you want to occur before the pause.
- 2 Press .
- 3 Select **Insert Pause**.
- 4 Enter the digits you want to occur after the pause.


To create a wait while dialing a phone number:

- 1 From the keypad, enter the digits you want to occur before the wait.
- 2 Press .
- 3 Select **Insert Wait**.
- 4 Enter the digits you want to occur after the wait.

## Making International Calls

**Note:** This feature may not be offered by your service provider.

Plus Dialing lets you place an international call to most countries without entering the local international access code.

- 1 Press and hold  for 2 seconds. A “0” appears, then changes to a “+”.


**Note:** The network translates the “+” into the appropriate international access code needed to place the call.

- 2 Enter the country code, city code or area code, and phone number.

## Setting One Touch PTT

One Touch PTT sets your phone to call the most recent Private ID on the recent calls list, or a Private ID you choose, every time you press the PTT button.

To set your phone to call the most recent Private ID on the recent calls list:


- 1 From the main menu, select **Settings > 2-Way Radio > One Touch PTT**.
- 2 Scroll to **Last Call**.
- 3 Press  under **Select**.

## Advanced Calling Features


To set your phone to call a Private ID you choose:

- 1 From the main menu, select **Settings > 2-Way Radio > One Touch PTT > Assigned Number**.
- 2 To enter the Private ID you want your phone to call every time you press the PTT button:


Enter the number using your keypad. **-or-**

Press  under **Search**. Select **Contacts, Recent Calls**, or **Memo**. Select the number you want to enter.

**Tip:** If you are entering a Talkgroup number, enter # before the number.

- 3 Press  under **Ok**.

To turn off One Touch PTT:

- 1 From the main menu, select **Settings > 2-Way Radio > One Touch PTT**.
- 2 Scroll to **Off**.
- 3 Press  under **Select**.

## Setting Flip Actions

### For Answering Calls

To set your phone to answer calls when you open the flip:

- 1 From the main menu, select **Settings > Phone Calls > Flip Activation > Flip to Ans**.

- 2 Set this option to **On**.

To set your phone not to answer calls when you open the flip:

Set **Flip to Ans** to **Off** in step 2.

### For Ending Calls

To set your phone to end calls when you close the flip:

- 1 From the main menu, select **Settings > Phone Calls > Flip Activation > Flip to End**.
- 2 Set this option to **On**.

To set your phone not to answer calls when you open the flip:

Set **Flip to End** to **Off** in step 2.

**Note:** If you are using your phone with a headset, and you have the **Flip to End** option set to **On**, closing your flip sends incoming sound to the headset and does not end the call.


## Group Calls

A group call is a call made to all members of a Talkgroup at once. A Talkgroup is a predetermined group of up to 25 Private IDs.



Before you can make or receive group calls, a Talkgroup must be established. After the Talkgroup is established, you must join the Talkgroup. See “Joining a Talkgroup” on page 8.

### Making Group Calls

1 Press . Then enter the Talkgroup number using the keypad. **-or-**

Choose the Talkgroup name from Contacts or recent calls list.

2 Proceed as if making a Private call.

### Receiving Group Calls

To answer a group call:

Proceed as if answering a Private call. Only one person at a time may speak on a group call.

The Private ID or name of the person who is speaking will appear on the display below the Talkgroup number.

### Turning off Group Calls

To set your phone to prevent you from hearing group calls to your Talkgroup:

1 From the main menu, select **Settings > 2-Way Radio > Tkgrp Silent**.

2 Set this option **On**.

To set your phone to let you hear group calls to your Talkgroup:

Set **Talkgroup Silent** to **Off** in step 2.

### Call Timers


Call timers measure the duration of your phone calls, Private or group calls, and circuit data use, as well as the number of Kilobytes sent and received by your phone:



- **Last Call** — displays the duration of your most recent phone call.
- **Phone Reset** — keeps a running total of your phone call minutes, until you reset it.
- **Phone Lifetime** — displays the total minutes of all your phone calls.
- **Prvt/Grp Reset** — keeps a running total of all of your Private and group call minutes, until you reset it.
- **Prvt/Grp Lifetime** — displays the total minutes of all your Private and group calls.
- **Circuit Reset** — keeps a running total of all of your circuit data use, until you reset it.
- **Circuit Lifetime** — displays the total minutes of all of your circuit data use.

## Advanced Calling Features

- **Kbytes Reset** — keeps a running total of the number of Kilobytes sent and received by your phone, until you reset it.

To view or reset a timer:

- 1 From the main menu, select **Call Timers**.
- 2 Select the feature you want to view or reset.
- 3 To view a feature without resetting: Press  under **Done** when you are finished viewing. **-or-**

To reset a feature: Press  under **Reset**. Press  under **Yes** to confirm.


**Note:** The values displayed by Call Timers should not be used for billing. Call timers are estimates only.

## Using Your Phone as a Modem


**Note:** This feature may not be offered by your service provider.

To use your phone as a modem with a laptop, handheld device, or desktop computer:

- 1 Open the connector cover.

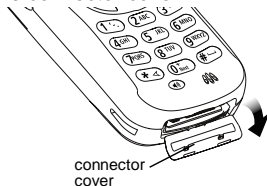

- 2 With the phone's display facing up, insert a data cable's connector into the accessory connector, until you hear a click.

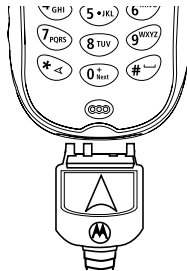

- 3 Insert the data plug into the COM port of the other device.

When used as a modem, your phone has these data transfer modes:

- Circuit data — used for sending and receiving faxes and for transferring large files
- Packet data — used for small file transfers such as email

To use these services, you must install the iDEN Wireless Data Services software (available separately). For more information on setting up your computer and your i530 phone for packet and circuit data calls, refer to the *Wireless Data Services User's Guide* or contact your service provider.



## Making TTY Calls

**Note:** This feature may not be offered by your service provider.

To use your phone to make phone calls using a teletypewriter (TTY) device:

- 1 Connect one end of a 2.5mm cable into the audio jack on your phone. Connect the other end of the cable to your TTY device.
- 2 Make sure that your phone's TTY feature is on and select the TTY mode you want to use.
- 3 Use your phone to enter phone numbers and make calls.

When you make a TTY call, these icons appear on the phone's display:

-  Phone call is active.
-  Phone call is on hold.

TTY device features such as Turbo-Code, High-Speed, and Interruption are not supported by your phone. These features must be turned off or disabled to use your TTY device with your phone.

## Turning On the TTY Feature

Your phone's TTY feature must be on if you want to make TTY calls, set the TTY mode, or change the TTY baud rate. To make sure the TTY feature is on:

From the main menu, select **Settings > Phone Calls > TTY**. This field must say **On**.



## Choosing a Mode

Your phone supports these TTY modes:

- **TTY** — You type and read text on your TTY device.
- **VCO** (Voice-Carry-Over) — You speak into your phone and read text replies on your TTY device.
- **HCO** (Hearing-Carry-Over) — You type text on your TTY device and listen to voice replies on your phone speaker.


## Advanced Calling Features

To change mode while not in a call:

- 1 From the main menu, select **Settings > Phone Calls > TTY > Type**.
- 2 Press  under **Change**.
- 3 Scroll to the TTY mode you want.
- 4 Press  under **Select**.

When you make a TTY call, the call begins in the TTY mode you last selected.

To change mode during a call using your phone:

- 1 Press .
- 2 Select **TTY > Type**.
- 3 Select the mode you want.

To change mode during a call using your TTY device, issue one of the following commands:



- “VCO please” — to select VCO mode
- “HCO please” — to select HCO mode
- “HCO off please” — to turn off HCO mode

**Important:** When you are using HCO, the sound coming from your phone speaker may be uncomfortably loud. Use caution when putting the phone to your ear. (For information on setting the volume of your phone speaker, see “Setting the Volume” on page 81.)

## Changing the TTY Baud Rate

By default, your phone's TTY baud rate is set to 45.45, the baud rate required for TTY calls within the U.S. To make calls outside the U.S., set your TTY baud rate to 50.0.





To change the TTY baud rate:

- 1 From the main menu, select **Settings > Phone Calls > TTY > Baud**.
- 2 Press  under **Change**.
- 3 Scroll to the baud rate for your location.
- 4 Press  under **Select**.

# Entering Text


You can enter text into your phone using the traditional method of pressing a key several times for each character, or by pressing a key once for each letter while words likely to be the one you want are chosen from a database. You can also enter symbols and numbers into a text field.


In screens that require you to enter text, you see the following icons near the top right corner. These icons tell you which text input mode you are using:

-  **Alpha** — Press a key several times for each character.
-  **Word** — Press a key once for each letter while words likely to be the one you want are chosen from a database.
-  **Symbols** — Enter punctuation and other symbols.
-  **Numeric** — Enter numbers.


When you access a screen that requires you to enter text, you start in Alpha mode.

To choose a text input mode:

- 1 At a screen that requires you to enter text, press .

- 2 A checkmark appears next to the current text input mode. Scroll to the text input mode you want to use.
- 3 Press  under **Select**.

## Using Alpha Mode

- Press any key on the keypad to enter the letters, numbers, and symbols on that key. For example, to enter the letter Y, press  3 times.
- Type a letter then scroll up to make that letter uppercase, or type a letter then scroll down to make that letter lowercase.
- See “Special Function Keys” on page 78 for more information on adding spaces, capitalization, and punctuation.

## Using Word Mode



In Word mode, T9 Text Input analyzes the letters on the keypad button you press and arranges them to create words. As you type, T9 Text Input matches your keystrokes to words in its database and displays the most commonly used matching word. You can add your own words to this database.

## Entering a Word


- 1 Select Word as your text input mode.

## Entering Text

- 2 Type a word by pressing one key for each letter.

For example, to type “test” press    .


The displayed word may change as you type it. Do not try to correct the word as you go. Type to the end of the word before editing.

- 3 If the word that appears is not the desired word, press  to change the word on the display to the next most likely word in the database.

Repeat until the desired word appears.

If the desired word does not appear, you can add it to the database.

## Adding Words to the Database


- 1 Select Alpha as your text input mode.
- 2 Type the word using Alpha mode.
- 3 Select Word as your text input mode.
- 4 Press .


The word you typed in Alpha text entry mode is now in the database.

**Note:** You cannot store alphanumeric combinations, such as Y2K.

## Choosing a Language

To change the language of the database:


- 1 At a screen that requires you to enter text, press .

- 2 Select **Languages**.
- 3 Scroll to the language you want for your database.
- 4 Press  under **Select**.


## Special Function Keys

Some of the phone’s keys assume different functions while in Alpha or Word mode.

### Spaces


Press  for a space.

### Capitalization

Press and hold  to make the next letter typed uppercase (shift), to make all subsequent letters typed uppercase (caps lock), or to go back to lowercase letters.

These icons appear in the top row of your display:



 Shift is on.

 Caps lock is on.

When neither of these icons appear, letters typed are lowercase.

**Note:** Your phone automatically makes the first letter of a sentence uppercase.

## **Punctuation**


Press  or  to insert punctuation. Continue to press the key to view the list of symbols available through that key. Pause to select the symbol you want.

**Note:** Additional punctuation symbols are available in Symbols mode.

## **Using Numeric Mode**

- 1 Select Numeric as your text input mode.
- 2 Press the number buttons on your keypad to enter numbers.

## **Using Symbols Mode**

- 1 Select Symbols as your text input mode.  
A row of symbols appears along the bottom of your phone's display. Scroll right to view the complete row.
- 2 Scroll left or right to choose the symbol you want to enter.
- 3 Press  under **Select**.

## ***Entering Text***



# Customizing Your Phone

## Setting the Volume

To set the volume of the sound coming from the phone's earpiece or speaker:

- 1 From the main menu, select **Settings > Volume**.
- 2 Scroll to **Earpiece** to set the earpiece volume. **-or-** Scroll to **Speaker** to set the speaker volume.
- 3 Press ⏪ under **Change**.
- 4 To select the volume:  
Scroll left or right. **-or-**  
Press the volume controls.
- 5 Press ⏪ under **Ok**.

To set the volume of the phone's ring:

Press the volume controls.

For another way to set the volume of the phone's ring, or the volume of many other sounds your phone makes:

- 1 From the main menu, select **Settings > Volume**.
- 2 Scroll to the option you want and make the change. Choose **Line 1** or **Line 2** to set the volume of the phone's ring when you get a call on that line.

See "Volume Features" on page 83.

## Setting Your Phone to Not Ring

To set your phone to make no sound when you receive phone calls, Private calls, group calls, message notifications, and call alerts, see "Turning Ring Tones Off" on page 45.

To set your phone to vibrate instead of making a sound when you receive Private calls and group calls, even if you want your phone to ring for other features:

- 1 From the main menu, select **Settings > 2-Way Radio > Alert Type**.

**Tip:** If **Alert Type** does not appear: From the main menu, select **Ring Tones**. Make sure **VibeAll** or **SilentAll** is set to **Off**. Repeat step 1.



- 2 Press ⏪ under **Change**.
- 3 Scroll to **Vibrate**.
- 4 Press ⏪ under **Select**.
- 5 Scroll to **Silent** in step 3.

## Seeing the Display Better

To set the contrast of the display:


- 1 From the main menu, select **Settings > Display/Info > Contrast**.

## Customizing Your Phone


- 2 Press  under **Change**.
- 3 Scroll left or right to set the contrast.
- 4 Press  under **Ok**.

## Using a Headset

If you use a headset or similar device with your phone, you can set your phone to send incoming sound to the headset only, or to the headset and the speaker at the same time:

- 1 From the main menu, select **Settings > Advanced > Headset/Spker**.
- 2 Press  under **Change**.
- 3 Scroll to **HdsetOnly** to send incoming sound to the headset only. **-or-**

Scroll to **Hdset&Spker** to send incoming sound to the headset and the speaker at the same time.

- 4 Press  under **Select**.

## Using Settings

Settings contains many submenus that let you customize your phone.

### Display/Info Features

The Display/Info menu controls how the keypad and display appear:

- **Backlight** — controls how long the backlight stays on after you make or receive a call.
- **Clock** — controls whether the time and date appears on the idle screen, sets the format of the time and date, and sets the year.
- **Contrast** — sets the contrast on the display. See “Seeing the Display Better” on page 81.
- **Language** — sets the language that your phone displays.

### Phone Calls Features

The Phone Calls menu controls how your phone handles phone calls:

- **Set Line** — sets phone line 1 or phone line 2 as the active line for outgoing calls.
- **Any Key Ans** — If this feature is on, you can answer calls by pressing any key on the keypad.
- **Auto Redial** — sets your phone to automatically redial calls you make when the system is busy.
- **Call Waiting** — See “Call Waiting” on page 69.
- **Auto Ans** — sets your phone to automatically answer an incoming call after a specified number of rings. When this feature is on, the phone answers by connecting you to the caller; it does not send the call to voice mail, unless you are out of coverage or on the line.

- **Minute Beep** — causes a beep to sound every minute of an active call.
- **Call Duration** — causes the duration of a call to appear on the phone's display when the call ends.
- **TTY** — lets you use your phone with a TTY device. See “Making TTY Calls” on page 75.
- **Notifications** — See “Setting Notification Options” on page 41.

## 2-Way Radio Features

The 2-Way Radio menu controls how your phone handles Private calls and group calls:

- **Tkgrp Silent** — controls whether you hear group calls to your Talkgroup. See “Receiving Group Calls” on page 73.
- **Tkgrp Area** — lets you define your Talkgroup area.
- **One Touch PTT** — See “Setting One Touch PTT” on page 71.
- **Alert Type** — controls how your phone notifies you when you receive Private calls and group calls. See page 81.

## Volume Features

The Volume menu sets the volume of sounds your phone makes:

- **Line 1** — sets ring volume for phone line 1.
- **Line 2** — sets ring volume for phone line 2.
- **Messages** — sets the volume of message notifications.
- **Earpiece** — sets the volume of sound coming out of the earpiece.
- **Speaker** — sets the volume of sound coming out of the speaker.
- **Keypad** — sets the volume of sound associated with pressing keys and buttons.
- **Data** — sets the volume of sounds that notifies you that you are receiving a circuit data call.

## Security Features

The Security menu lets you turn security features on and off and change passwords:

- **Phone Lock** — turns on a feature that locks your phone, either immediately or automatically after a set period of inactivity. An unlock code is required to enable this feature, to unlock the phone, and to set a new Unlock code. Contact your service provider for your default unlock code.
- **Keypad Lock** — locks the phone's keypad, either immediately or automatically after a set period of inactivity. See “Locking the Keypad” on page 14 for more information on locking and unlocking the keypad.

## Customizing Your Phone

- **SIM PIN** — enables and disables your phone's SIM PIN security feature. See "Turning the PIN Requirement On and Off" on page 12.
- **GPS PIN** — enables and disables your phone's GPS PIN security feature. See "Setting the GPS PIN Security Feature" on page 60.
- **Change Passwords** — changes your phone unlock code, security code, SIM PIN, and GPS PIN.

## Advanced Features

The Advanced menu contains advanced and rarely used Settings features.

- **Alert Timeout** — controls the amount of time a tone continues to sound when you receive a message notification or call alert.
- **Headset/Spker** — See "Using a Headset" on page 82.
- **Connectivity** — **Network ID** sets the phone's network IDs and their roaming options under the direction of your service provider; **Master Reset** lets your service provider reset your service in the event of a security or provisioning problem.

- **Reset Defaults** — **Reset Settings** returns all settings to their original defaults; **Reset All** returns all settings to their original defaults and erases all stored lists. Use only under the direction of your service provider.
- **Return to Home** — controls how long the recent calls list displays after calls.
- **Phone Only** — prevents your phone from making or receiving Private calls or group calls.
- **Baud Rate** — sets the baud rate at which your phone communicates with a laptop computer, PC, or similar device.

# Understanding Status Messages

You may receive status messages under certain conditions. Before contacting Customer Care, note the message, numeric code, and the conditions under which it appeared. The following table lists and describes the status messages.

Status Messages	Message Description
<b>Number Not in Service</b>	The number that you entered is not valid.
<b>User Not Available</b>	The phone that you called is either busy, out of coverage, or turned off. Please try again later.
<b>User Not Authorized</b>	The person that you called has not purchased this service.
<b>Please Try Later</b>	This service is temporarily not available. Please try again later.
<b>Service Restricted</b>	This service was restricted by your service provider, or this service was not purchased.
<b>Service Not Available</b>	You are either out of coverage or having problems with provisioning.

Status Messages	Message Description
<b>System Busy</b>	The system is experiencing heavy traffic. Please try again later.
<b>Please Try Again</b>	An error occurred. Please try again.
<b>Self Check Error + Number Code</b>	A fault was detected with your phone. If this error recurs, note the error code and contact Customer Care.
<b>Self Check Fail + Number Code</b>	An operational fault was detected with your phone. Note the numeric code, turn your phone off, and contact Customer Care.
<b>PIN Blocked Call Your Provider</b>	The incorrect PIN was entered three consecutive times. You will be unable to place or receive calls on your phone. Contact Customer Care to have them obtain the PIN Unblocking Key (PUK) code.
<b>Insert SIM</b>	Your SIM card is not being detected. Please check to ensure that you have inserted the SIM card correctly into your phone.
<b>Check SIM Card</b>	Please check your SIM card to make sure it has been inserted properly.
<b>Wrong PIN</b>	You have entered an incorrect PIN number.

## ***Understanding Status Messages***

<b>Status Messages</b>	<b>Message Description</b>
<b>Enter SIM PIN</b>	Please enter your 4- to 8- digit SIM PIN code.
<b>Enter Unlock Code</b>	Auto Phone Lock is activated. Enter you unlock code.
<b>New Browser Message Memory Full!</b>	Warns of low memory for Net Alerts.
<b>Scanning for Satellites</b>	Searching for GPS satellites.
<b>Unable to Locate Sats</b>	Could not find GPS satellites.
<b>Technical Error</b>	A problem occurred in your phone's GPS circuitry. If this error occurs, contact Customer Care

# Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.

READ THIS INFORMATION BEFORE USING YOUR INTEGRATED MULTI-SERVICE PORTABLE RADIO.

## RF Operational Characteristics

Your radio product contains a radio frequency transmitter to convey the information you wish to send as well as occasional automatic signals used to sustain connection to the wireless network, and a receiver which enables you to receive communication and connection information from the network.

## Portable Radio Product Operation and EME Exposure

Your Motorola radio product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1999 Edition.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.
- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999.
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 2001.
- ANATEL, Brasil Regulatory Authority, Resolution 256 (April 11, 2001) "additional requirements for SMR, cellular and PCS product certification."

**To assure optimal radio product performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:**

## Safety and General Information

### Phone Operation

When placing or receiving a phone call, hold your radio product as you would a wireline telephone.

**Speak directly into the microphone.**

### Two-way radio operation

When using your radio product as a traditional two-way radio, **hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.**



### Body-worn operation

To maintain compliance with FCC RF exposure guidelines, if you wear a radio product on your body when transmitting, always place the radio product in a **Motorola approved clip, holder, holster, case or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a Motorola approved body-worn accessory and are not using the radio product in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, then ensure the antenna and the radio product are kept the following minimum distances from the body when transmitting**

- **Phone or Two-way radio mode: one inch (2.5 cm)**
- **Data operation using any data feature with or without an accessory cable: one inch (2.5 cm)**

### Antenna Care

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the radio product and may violate FCC regulations.

**DO NOT hold the antenna when the radio product is “IN USE”.** Holding the antenna affects call quality and may cause the radio product to operate at a higher power level than needed.

### Approved Accessories

For a list of approved Motorola accessories call 1-800-453-0920, or visit our website at [www.mot.com/iden](http://www.mot.com/iden).



### **ALL MODELS WITH FCC ID AZ489FT5825 MEET THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 Watts/kg (W/kg).<sup>1</sup> Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the

body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.37 W/kg and when tested on the body, as described in this user guide, is 1.29 W/kg during packet data transmission. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID AZ489FT5825.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

- <sup>1</sup> In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 W/kg averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- <sup>2</sup> The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

## **Electro Magnetic Interference/Compatibility**

**Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.**

### **Facilities**

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio product in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

### **Aircraft**

When instructed to do so, turn off your radio product when on board an aircraft. Any use of a radio product must be in accordance with applicable regulations per airline crew instructions.

## **Medical Devices**

### **Pacemakers**

The Advanced Medical Technology Association (AdvaMed) recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio product and a pacemaker. These recommendations are consistent with those of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the radio product more than 6 inches (15 cm) from their pacemaker when the radio product is turned ON.
- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## Use While Driving

Check the laws and regulations on the use of radio products in the area where you drive. Always obey them.

When using the radio product while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## Operational Warnings



### For Vehicles with an Air Bag

Do not place a portable radio product in the area over the air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio product may be propelled with great force and cause serious injury to occupants of the vehicle.

### Potentially Explosive Atmospheres

Turn off your radio product prior to entering any area with a potentially explosive atmosphere, unless it is a radio product type especially qualified for use in such areas as “Intrinsically Safe” (for example, Factory Mutual, CSA, or UL approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any

## Safety and General Information

**other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.**

### Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio product when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

## Operational Cautions



### Antennas

**Do not use any portable radio product that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### Batteries

All batteries can cause property damage and/or bodily injury, such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may

complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

### Cleaning and Drying Considerations

Using a leather carry case may help protect the surfaces and help prevent liquids (e.g., rain) from entering into the interior of the radio product. This product is not water proof, and exposing the unit to liquids may result in permanent damage to the unit.

If your radio product interior gets wet, then do not try to accelerate drying with the use of an oven or a dryer as this will damage the radio product and void the warranty. Instead, do the following:

- 1 Immediately power off the radio product.
- 2 Remove Battery and SIM card (if so equipped) from radio product.
- 3 Shake excess liquid from radio product.
- 4 Place the radio product and battery in an area that is at room temperature and has good air flow.
- 5 Let the radio product, battery, and SIM card dry for 72 hours before reconnecting the battery and/or powering on the radio product.

If the radio product does not work after following the steps listed above, contact your dealer for servicing information.

Clean the external surfaces of the radio product with a damp cloth, using a mild solution of dishwashing detergent and water. Some household cleaners may contain chemicals that could seriously damage the radio product. Avoid the use of any petroleum-based solvent cleaners. Also, avoid applying liquids directly on the radio product.

## Accessory Safety Information

**Important: Save these accessory safety instructions.**

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.
- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.



**Warning: To reduce the risk of injury, charge only the rechargeable batteries described in “Battery” on page 3 through page 5. Other types of batteries may burst, causing personal injury and damage.**

- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug — replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.
- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
  - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
  - The extension cord is properly wired and in good electrical condition.

## ***Safety and General Information***

- The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
- Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
- Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
- The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.

For optimum charging performance, turn off the radio product while charging it in any battery charger.

# MOTOROLA LIMITED WARRANTY

**Note: FOR IDEN SUBSCRIBER PRODUCTS, ACCESSORIES AND SOFTWARE PURCHASED IN THE UNITED STATES OR CANADA**

## What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its Motorola iDEN Digital Mobile and Portable Handsets ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-Roms or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below.

**This limited warranty is a consumer's exclusive remedy, and applies as follows to new Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:**

<b>PRODUCTS COVERED</b>	<b>LENGTH OF COVERAGE</b>
<b>Products as defined above.</b>	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product.
<b>Accessories as defined above.</b>	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products or Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.
<b>Software</b> as defined above. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days from the date of purchase.</b>

## **What is not covered? (Exclusions)**

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, including without limitation, software changes, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, antennas, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products, Accessories or Software is excluded from coverage.

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.



**Software NOT Embodied in Physical Media.**

Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

**Who is covered?** This warranty extends only to the first consumer purchaser, and is not transferable.

**What will Motorola Do?** Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

**How to Obtain Warranty Service or Other Information?** To obtain service or information, please call:

**Motorola iDEN Customer Services 1-800-453-0920 or 954-723-4910**

**TTY-877-483-2840**

**Or visit us online at  
<http://www.motorola.com/iden/support>**

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

**What Other Limitations Are There?** ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF

BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

# Limited Warranty Motorola Communication Products (International)

**Note:** This Warranty applies in Singapore and the Philippines.

## I. What This Warranty Covers and For How Long:

MOTOROLA warrants the MOTOROLA manufactured iDEN Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

iDEN Subscriber Digital Mobile and Portable Units	One (1) Year
Product Accessories (manufactured by or under license from MOTOROLA)	One (1) Year
Batteries	One (1) Year

Rechargeable Batteries will be replaced during the applicable warranty period if:

a. the battery capacity falls below 80% of rated

capacity, or

b. the battery develops leakage.

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such

## **Limited Warranty Motorola Communication Products (International)**

equipment if expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole, or any portion of the system not produced by MOTOROLA, under this warranty.

### **II. General Provisions:**

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product, Repair, replacement or refund of the purchase price, at MOTOROLA'S options, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR

CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

### **III. How to Get Warranty Service:**

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service.

### **IV. What This Warranty Does Not Cover:**

- a. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- b. Defects or damage from misuse, accident, water, or neglect.
- c. Defects or damage from improper testing,

- operation, maintenance, installation, alteration, modification, or adjustment.
- d. Breakage or damage to antennas unless caused directly by defects in material workmanship.
  - e. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment).
  - f. Product which has had the serial number removed or made illegible.
  - g. Rechargeable batteries if:
    - 1. Any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
    - 2. The damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
  - h. Freight costs to the repair depot.
  - i. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA'S published specifications or the local type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
  - j. Scratches or other cosmetic damage to Product

surfaces that does not effect the operation of the Product.

- k. Normal and customary wear and tear.
- l. Exclusion for defects or damage arising from use of the products in connection with non-MOTOROLA equipment.

## **VI. Patent and Software Provisions:**

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- a. That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- b. That MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- c. Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a patent, that such purchaser will permit MOTOROLA, at its

## ***Limited Warranty Motorola Communication Products (International)***

option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or sued in connection with the Product or any parts thereof. In no event shall MOTOROLA be liable for any incidental, special or consequential damages arising from any claim of patent infringement or alleged infringement.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced,

copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

# Patent and Trademark Information

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. © 2003 Motorola, Inc. All rights reserved.

Microsoft and Microsoft Internet Explorer are registered trademarks of Microsoft Corporation.

T9 is a trademark owned by Tegic Communications.

T9® Text Input Patent and Trademark Information

This product is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

All other product names or services mentioned in this manual are the property of their respective trademark owners.

## ***Patent and Trademark Information***



# Index

## Numerics

2-way radio **83**

see also Private calls, group calls, and call alerts

3-way calling **70**

## A

Accessories **15**

safety **93**

Alpha mode **77**

## B

Backlight **82**

Battery

care **5**

charging **4, 5**

cover **3**

inserting **4**

safety **92**

Baud rate **84**

## C

Call alerts **23**

deleting **24**

queue **23**

receiving **23**

responding **23, 24**

sending **23**

sorting **24**

viewing **24**

Call forwarding **37**

all calls **37**

missed calls **38**

off **38**

Call Hold **70**

Call Timers **73**

Call Waiting **69**

off **69**

Calls

3-way **70**

answering automatically **82**

answering with any key **82**

emergency **22**

ending **18**

entering number **18**

from Contacts **19**

from Datebook **21**

from memo **67**

from Recent calls **19**

group, see Group calls

icons **18**

international **71**

making **17**

on hold **70**

phone calls **17**

Private calls **17, 21, 83**

receiving **17**

redialing **20, 82**

Speed Dial **20**

TTY, see TTY calls

Turbo Dial **20**

voice name **20**

Circuit data **75**

Clock **82**

CompanionPro **35**

Contacts **19**

capacity **34**

CompanionPro **35**

creating entries **31**

deleting **33**

editing entries **32**

icons **29**

## ***Index***

- International numbers **34**
  - searching **30**
  - showing all entries **31**
  - showing only Private IDs **30**
- SIM card **29**
- storing fast **32**
- storing from idle screen **33**
- storing from Memo **32, 67**
- storing from recent calls **27, 32**
- type **27, 29**
- viewing **30**
- voice name **32**
- with non-i205 phones **35**

## **D**

- Datebook **21**
- Display
  - backlight **82**
  - contrast **81**
  - options **9**
  - screen **9**

## **E**

- Email **29, 32, 75**
  - receiving **43**
  - sending **43**

- Emergency calls **22**
- End key **1**

## **F**

- Faxes
  - receiving **75**
  - sending **75**
- Flip action **72**

## **G**

- GPS Enabled **55**
  - almanac data **59**
  - best results **58**
  - emergency calls **22, 56**
  - map software **61**
  - privacy options **60**
  - security **60**
  - viewing location **57**
- GPS PIN **84**
- GPS, see GPS Enabled
- Group calls **72, 83**
  - making **73**
  - off **73**
  - receiving **73**

## **H**

- Handset, see phone
- Headset **82**

## **I**

- Icons
  - calls **18**
  - Contacts **29**
  - main menu **10**
  - mobile originated text messaging **52**
  - Recent calls **27**
  - status **11**
  - text entry **77**
- Idle screen **9**
  - storing to Contacts **33**
- International numbers **71**
  - calling **71**
  - storing **34**

## **K**

- Keypad **1**
  - locking **14, 83**

## **L**

- Language **82**

Lists, see menus

## **M**

Memo **67**

- calling from **67**
- creating **67**
- editing **67**
- storing to Contacts **32, 67**
- viewing **67**

Memory

- mobile originated text messaging **53**
- ring tones **47**
- voice records **64**

Menu key **1, 9**

Menus **9**

- context-sensitive **1, 9**
- main menu **10**

Message notifications **41**

- setting options **41**

Messages **41**

- see also mobile originated text messaging
- reading **43**
- receiving **41**

text and numeric **42**  
Mobile originated text messaging **49**

- creating messages **50**
- deleting **53**
- drafts **52**
- icons **52**
- memory **53**
- outbox **52**
- quick notes **51**
- reading messages **50**
- receiving messages **49**
- sending messages **50**
- sent messages **53**
- setting up **49**

Mute **22**

## **N**

Navigation key **1**

Net alerts **43**

Numeric mode **79**

## **O**

Over-the-air programming **7**

## **P**

Packet data **75**

Passwords **84**

Patent information **103**

Pauses

- dialing **71**
- storing **34**

Phone **1, 9**

- active line **82**
- flip action **72**
- locking **83**
- modem **74**
- off **6**
- on **6**
- only **84**
- setting up **1, 8**

Programming, over-the-air **7**

PTT

- One Touch **21**
- One Touch, setting **71**

PUK code **13**

## **R**

Radio frequency **87**

Recent calls **19, 27**

## **Index**

- deleting **28**
- display time **84**
- icons **27**
- storing to Contacts **27, 32**
- viewing **27**
- Redialing **20, 82**
- Ring tones **29, 45**
  - deleting **48**
  - downloading **47**
  - memory **47**
  - off **45**
  - setting **45**
  - setting in Contacts **31, 46**
  - silent **45, 46**
  - vibrate **45, 46**
  - viewing assigned **47**
- Ringer **81**
  - see also Ring tones
  - off **81**
- S**
- Safety **87**
  - accessory **93**
  - battery **92**
  - driving **111**
- electromagnetic interference **90**
- medical devices **90**
- radio frequency **87**
- Security **83**
- Send key **1**
- Service provider **15**
- Service, activating **6**
- Settings **82**
  - resetting **84**
- SIM card **3, 11, 13**
  - Contacts **29**
  - inserting **13**
  - removing **14**
  - with non-i205 phones **35**
- SIM PIN **11, 84**
  - changing **12**
  - default **12**
  - entering **12**
  - requirement **12**
  - unblocking **13**
- Speakerphone **21**
- Speed Dial **20, 30, 32**
- Status messages **85**
- Symbols mode **79**
- T**
- T9 Text Input, see text entry
- Talkgroups **8, 72, 83**
- Text display area **9, 18**
- Text entry **77**
  - Alpha mode **77**
  - database **77, 78**
  - icons **77**
  - mode **77**
  - Numeric mode **79**
  - Symbols mode **79**
  - Word mode **77**
- Text messages **42**
- Trademark information **103**
- TTY calls **75**
  - baud rate **76**
  - making **75**
  - mode **75**
  - on **75**
- Turbo Dial **20**
- V**
- Voice mail **41**

- receiving **42**
- sending calls to **17, 42**
- setting up **8, 38, 41**
- Voice name **20, 30**
  - creating **32**
- Voice records **63**
  - creating **63**
  - deleting **64**
  - labelling **64**
  - locking **64**
  - memory **64**
  - playing **63**
- Volume, setting **81, 83**

## **W**

- Waits
  - dialing **71**
  - storing **34**
- Warranty **99**
- Word mode **77**



# Driving Safety Tips

“Safety is your most important call!”

Your Motorola wireless telephone gives you the powerful ability to communicate by voice — almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies that benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original hands-free accessories available today.
- Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility — driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- Your phone can perform many other functions besides allowing you to make and receive calls. Do not let these features distract you from driving. Use them only when it is safe to do so.

## ***Driving Safety Tips***

- Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
- Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.