

NETGEAR®

Wireless N150 Access Point WN604

User Manual



350 East Plumeria Drive
San Jose, CA 95134
USA

June 2014
202-10623-04
v1.0

© 2011 NETGEAR, Inc. All rights reserved

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of NETGEAR, Inc.

Technical Support

Thank you for choosing NETGEAR. To register your product, get the latest product updates, get support online, or for more information about the topics covered in this manual, visit the Support website at

<http://support.netgear.com>

Phone (US & Canada only): 1-888-NETGEAR

Phone (Other Countries): Check the list of phone numbers at

http://support.netgear.com/app/answers/detail/a_id/984

Trademarks

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. Other brand and product names are registered trademarks or trademarks of their respective holders. © 2011 NETGEAR, Inc. All rights reserved.

Statement of Conditions

To improve internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice. NETGEAR does not assume any liability that may occur due to the use, or application of, the product(s) or circuit layout(s) described herein.

Contents

Chapter 1 Getting Started

About the Access Point	6
Compatible NETGEAR Switches	6
System Requirements	7
What's In the Box	7
Hardware Description	7
Front Panel	8
Rear Panel	9
Side Panel	10
Product Label	10

Chapter 2 Installation and Basic Configuration

Log In to the Access Point	12
Install the Access Point	13
Configure the System Settings for Your Location	13
Set the Time	15
Set Basic IP Options	15
Configure Wireless Access	17
Deploy the Access Point	17
Verify Wireless Connectivity	18
Wireless Equipment Placement and Range Guidelines	18
Wireless Settings	19
Wireless Settings Screen Fields	19
Configure Basic QoS Settings	21
Set Up and Test Basic Wireless Connectivity	22

Chapter 3 Configure Security

Security Profiles	25
Edit Security Profile Screen Fields	25
Wireless Security Options	27
Manually Configure Security	28
Configure WPA2, or WPA2 + WPA, or WPA	28
Configure WEP	29
Wi-Fi Protected Setup (WPS)	30
Use WPS to Add a Client to the Wireless Network	31
Restrict Wireless Access by MAC Address	32

Chapter 4 Management

Upgrade the Wireless Access Point Firmware	35
Configuration File Management	36
Change the Administrator Password	38
Enable the SysLog Server	39
Activity Log	40
View Summary Information	41
System Screen Fields	41
Network Traffic Statistics	42
Statistic Screen Fields	43
Available Wireless Station Statistics	43

Chapter 5 Advanced Configuration

Schedule the Wireless Radio	46
Advanced Wireless Settings	46
Advanced Wireless Settings Screen Fields	47
Advanced QoS Settings	48
Enable Wireless Bridging	49
Configure a Point-to-Point Bridge	52
Configure a Point-to-Multi-Point Wireless Bridge	53

Chapter 6 Troubleshooting

Troubleshooting with the LEDs	56
All LEDs Are Off	56
WiFi LED Is Off	56
LAN LED Is Off	57
Cannot Access the Internet or the LAN Wirelessly	57
Cannot Connect to the Access Point to Configure It	57
Time-Out Error	58

Appendix A Supplemental Information

Factory Default Settings	60
Technical Specifications	62

Appendix B Notification of Compliance

Getting Started

1

This chapter covers the following topics:

- *About the Access Point*
- *Compatible NETGEAR Switches*
- *System Requirements*
- *What's In the Box*
- *Hardware Description*

For more information about the topics covered in this manual, visit the support website at <http://support.netgear.com>.

About the Access Point

The Wireless N150 Access Point WN604 is the basic building block of a wireless LAN infrastructure. It provides connectivity between Ethernet wired networks and radio-equipped wireless notebook systems, desktop systems, print servers, and other devices.

The access point provides wireless connectivity to multiple wireless network devices within a fixed range or area of coverage—interacting with a wireless network interface card (NIC) through an antenna. Typically, an individual in-building access point provides a maximum connectivity area with about a 500-foot radius. Consequently, the access point can support a small group of users in a range of several hundred feet. Most access points can handle between 10 and 30 users simultaneously per radio.

The access point acts as a bridge between the wired LAN and wireless clients. Connecting multiple access points through a wired Ethernet backbone can extend the wireless network coverage. As a mobile computing device moves out of the range of one access point, it moves into the range of another. As a result, wireless clients can freely roam from one access point to another and still maintain seamless connection to the network.

Compatible NETGEAR Switches

For a list of compatible products from other manufacturers, see the Wireless Ethernet Compatibility Alliance website (WECA; see www.wi-fi.net).

The following NETGEAR switches work with the WN604 Wireless Access Point:

- FS108P - ProSafe™ 8 Port 10/100 Switch with 4 Port PoE
- FS116P ProSafe 16 Port 10/100 Desktop Switch with 8 Port PoE
- FS726TP - ProSafe 24 Port 10/100 Smart Switch with 2 Gigabit Ports and 12 Port PoE
- FS728TP - ProSafe 24+4 10/100 Smart Switch with full PoE
- FS752TPS - ProSafe 48 Port 10/100 Stackable Smart Switch with 4 Gigabit Ports and 24 Port PoE
- FSM7328PS - ProSafe 24-port 10/100 L3 Managed Stackable Switch with 24 PoE Ports
- FSM7352PS-ProSafe 48 Port 10/100 L3 Managed Stackable Switch with 4 Gigabit Ports and PoE
- GS724TP-ProSafe GS724TP 24-Port Gigabit Smart Switch and PoE
- GS748TP-ProSafe GS748TP 48-Port Gigabit Smart Switch and PoE

System Requirements

Before installing the access point, make sure your system meets these requirements:

- A 10/100 Mbps LAN device such as a hub or switch
- The Category 5 UTP straight through Ethernet cable with RJ-45 connector included in the package, or one like it
- A 100–240 V, 50–60 Hz AC power source
- A web browser for configuration such as Microsoft Internet Explorer 6.0 or later, or Mozilla 3.0 or later
- At least one computer with the TCP/IP protocol installed
- 802.11b/g/n-compliant devices

What's In the Box

The package contains the following:

- Wireless N150 Access Point WN604
- Ethernet cable
- Power adapter
- Vertical stand feet (2)
- *Installation Guide*
- *Resource CD*

Contact your reseller or customer support in your area if there are any missing or damaged parts. Keep the original packing materials, and use the packing materials to repack the access point if you need to return it for repair. To qualify for product updates and product warranty registrations, we encourage you to register on the NETGEAR website at: www.NETGEAR.com.

Hardware Description

This section describes the front, rear, and side hardware functions of the access point.

Front Panel

The access point front hardware functions are described below.

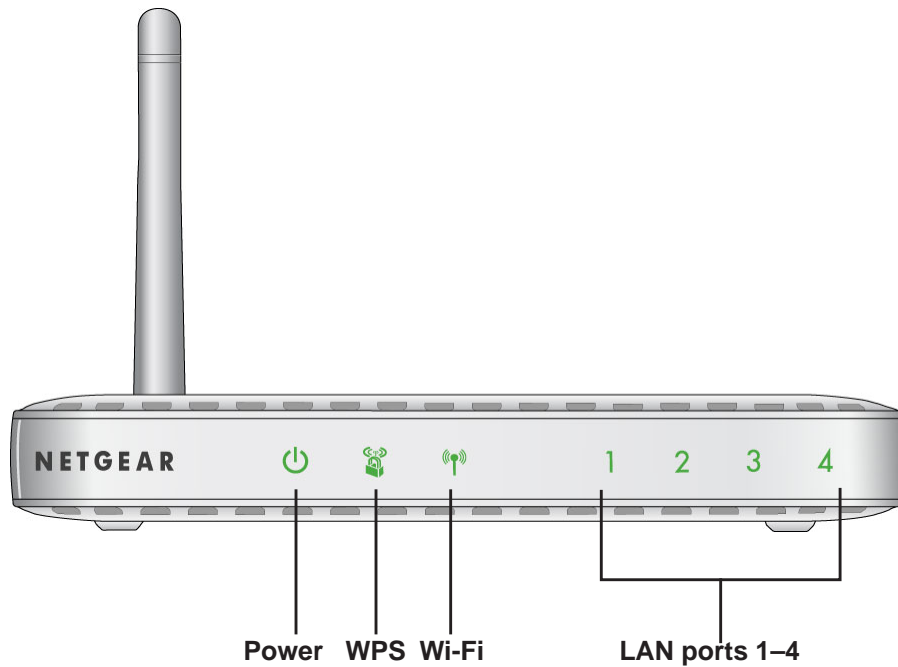






Figure 1. WN604 front panel

The following table explains the LED indicators on the front panel.

Table 1. Front panel LEDs

LED	Description
Power 	<ul style="list-style-type: none"> • Solid green. Power is on and the access point is ready. • Blinking green. A firmware update is in process. • Solid amber. The access point is performing a power-on self-test. • Off. No power.
Wi-Fi Protected Setup (WPS) 	<ul style="list-style-type: none"> • Blinking green. WPS activities are in process. • Off. No WPS activity, or there is a WPS error.
Wi-Fi 	<ul style="list-style-type: none"> • Solid blue. The wireless radio is up and running without wireless data transmission. • Blinking blue. Wireless data is being sent or received. • Off. The wireless interface is turned off.
LAN ports 1–4 	<ul style="list-style-type: none"> • Solid green. 100 Mbps link detected, no data transmission on the port. • Blinking green. 100 Mbps link detected, data transmission on the port. • Solid amber. 10 Mbps link detected, no data transmission on the port. • Blinking amber. 10 Mbps link detected, data transmission on the port. • Off. No link is detected

Rear Panel

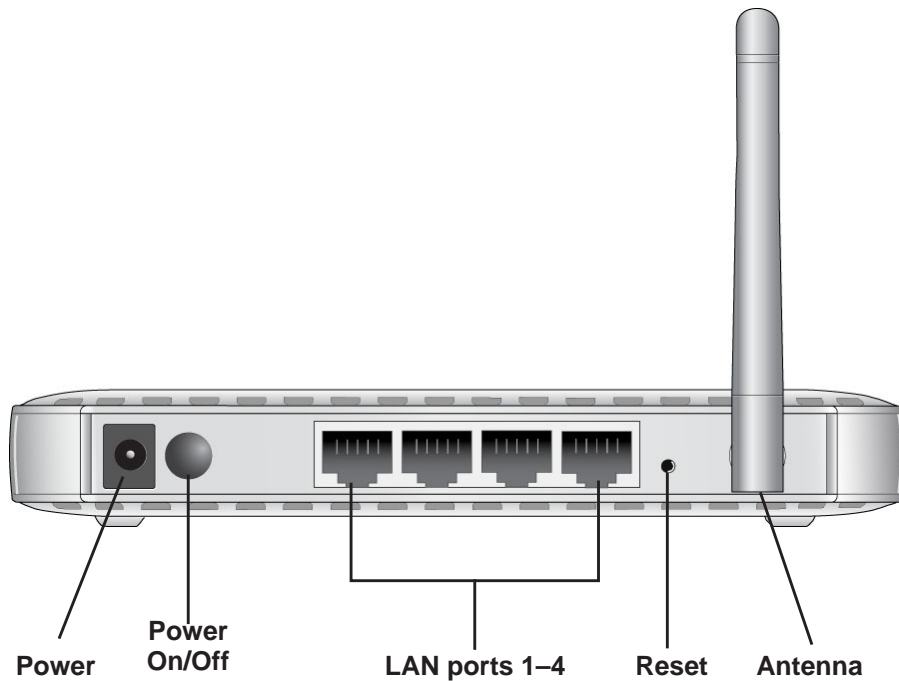


Figure 2. WN604 rear panel

During set up, use an Ethernet RJ-45 port to connect a computer. After initial set up, use an Ethernet port to connect to an Ethernet LAN through a device such as a hub, switch, router, or PoE switch.

The Reset button has two functions:

- **Reboot.** When pressed and released quickly, the access point restarts.
- **Reset to Factory Defaults.** This button can also be used to clear *all* data and restore *all* settings to the factory default values. See [Factory Default Settings](#) on page 60.

Side Panel

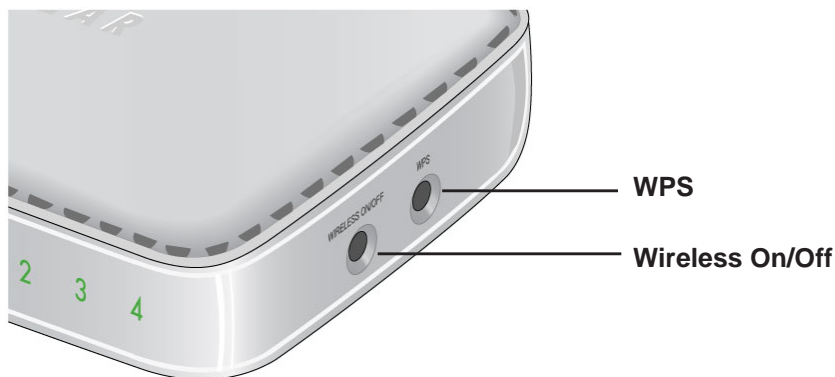


Figure 3. WN604 side panel

The side panel has a Wireless On/Off button and an WPS button.

- **Wireless On/Off button.** You can use this button to turn the wireless radio off and on. You can also schedule the wireless radio. See [Schedule the Wireless Radio](#) on page 46.
- **WPS button.** You can use WPS to add clients to the WN604 wireless network without typing the WPA or WPA2 password. See [Wireless Security Options](#) on page 27.

Product Label

The label on the bottom of the access point includes the MAC address, serial number, security PIN, and the default IP address for logging in to the access point.

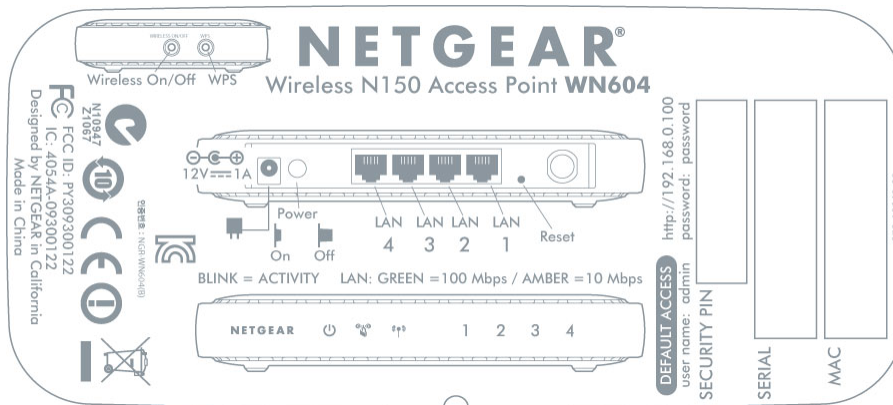


Figure 4. The label is located on the bottom of the access point

2 Installation and Basic Configuration

2

This chapter contains the following sections:


- *Log In to the Access Point*
- *Install the Access Point*
- *Set the Time*
- *Set Basic IP Options*
- *Configure Wireless Access*
- *Deploy the Access Point*
- *Wireless Settings*
- *Wireless Settings*
- *Configure Basic QoS Settings*
- *Set Up and Test Basic Wireless Connectivity*

Log In to the Access Point


The access point is set, by default, with the IP address of 192.168.0.100 with DHCP disabled.

➤ **To log in to the access point:**

1. Prepare a computer with an Ethernet adapter.
 - a. If this computer is part of your network, record its TCP/IP configuration settings.
 - b. Configure the computer with a static IP address of 192.168.0.210 and 255.255.255.0 for the subnet mask.
2. Connect an Ethernet cable from the access point to the computer.

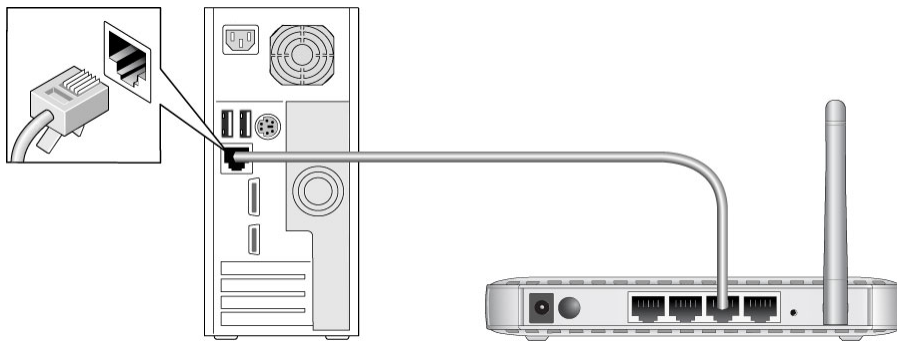


3. Power up the access point.
 - a. Connect the power adapter and plug it into an electrical outlet.
 - b. Make sure that the Power On/Off button on the rear panel is in the On position (pressed in).
4. Verify the following:
 - The Power LED is on.
 - The LAN LED is on for the LAN port that is connected to your powered-on computer.
 - The WiFi LED is blinking.
5. Launch a web browser and enter **http://192.168.0.100** in the address field. You are prompted to log in:

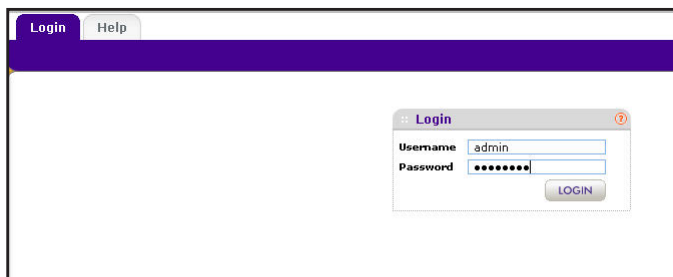

6. Type **admin** in the User name field and **password** in the Password field, both in lower-case letters, and click **Login**.

Your web browser finds the access point and displays the General Settings screen.

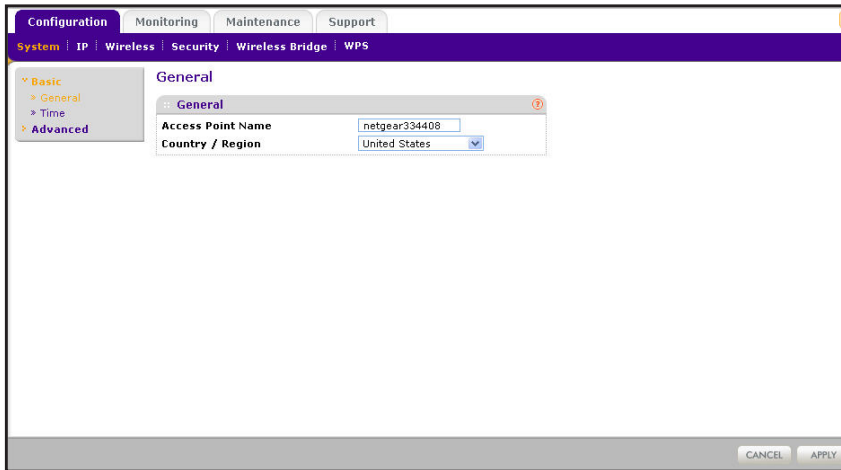

Install the Access Point

Before installing the access point, make sure that your Ethernet network is up and working. You will be connecting the access point to the Ethernet network so that computers with 802.11b/g/n wireless adapters will be able to communicate with computers on the Ethernet network. In order for this to work correctly, verify that you have met all of the system requirements, shown in [System Requirements](#) on page 7.

Tip: Before mounting the access point in a high location, first set up and test the access point to verify wireless network connectivity.

NETGEAR recommends that you configure the access point in this sequence:


1. Specify your country or region.
2. Set the time.
3. Set the basic IP options.
4. Configure the wireless settings.
5. Deploy the access point.

Configure the System Settings for Your Location

When you log in, the Configuration tab is selected and the General screen is displayed. This is where you specify your location. The access point uses this setting to determine which channels should be used for wireless communication.

➤ To set up the access point for your location:

1. Log in as described in the previous section. The Configuration tab is selected and the General screen is displayed:

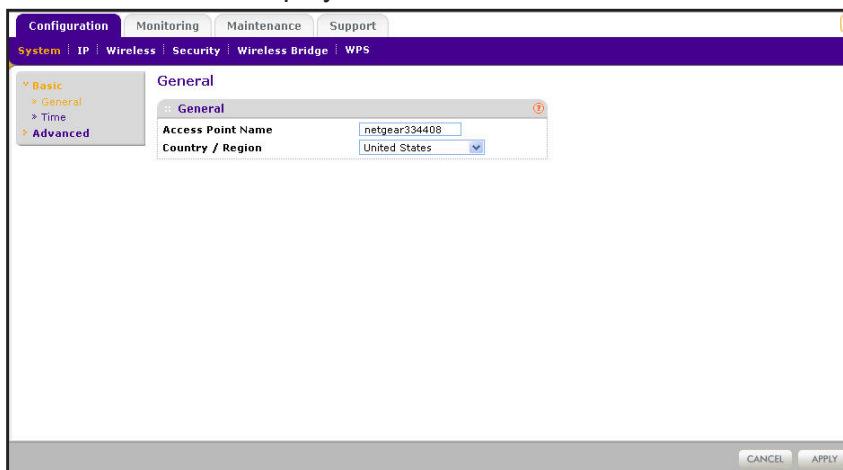

2. If you want to change the default access point name, in the Access Point Name field, type a meaningful name.

This unique name is the access point NetBIOS name. The default access point name is located on the bottom label of your product. The default is netgearxxxxxx, where xxxxxx represents the last 6 digits of the WN604 MAC address. You can modify the default name with a unique name up to 15 characters long.

3. From the Country/Region drop-down list, select the region where the access point is located (the default country/region is the United States).

Note: If your country or region is not listed, check with NETGEAR support.

Set the Time

➤ To configure your time settings:

1. Select **Configuration > System > Basic > Time**. The Time screen displays:

2. Configure the following information:
 - **Time Zone.** From the drop-down list, select the local time zone for your access point from a list of all available time zones. The default is **USA-Pacific**.
 - **NTP Client.** Enable NTP client to synchronize the time of the access point with an NTP server. The default is Enable.

Note: You need an Internet connection to get the current time.

- **Use Custom NTP Server.** Select this check box if you have a custom NTP server. By default, this option is disabled.
- **Hostname / IP Address.** Enter the host name or the IP address of the custom NTP server. The default is time-b.netgear.com.

3. Click **Apply**.

Set Basic IP Options

The basic IP settings for your access point are entered on this screen. Most of the default settings work in most cases. However, if your access point is part of a more complex LAN network, then modify the settings to meet the requirements of your network based on the explanation of the various fields.

➤ To configure the basic IP settings of your access point:

1. Select **Configuration > IP > IP Settings**. The IP Settings screen displays:

2. Enter the settings for the access point.

DHCP Client. By default, the Dynamic Host Configuration Protocol (DHCP) client is disabled. If you have a DHCP server on your LAN and you enable DHCP, the wireless access point gets its IP address, subnet mask, and default gateway settings automatically from the DHCP server on your network when you connect the access point to your LAN.

IP Address. Enter the IP address of your access point. The default IP address is **192.168.0.100**. To change it, enter an unused IP address from the address range used on your LAN; or enable DHCP.

IP Subnet Mask. The access point automatically calculates the subnet mask based on the IP address that you assign. Otherwise, you can use 255.255.255.0 (the default) as the subnet mask.

Default Gateway. Enter the IP address of the gateway for your LAN. For more complex networks, enter the address of the router for the network segment to which the access point is connected.

Primary DNS Servers. This is the address of the primary Domain Name Server used by stations on your LAN.

Secondary DNS Servers. This is the address of the secondary Domain Name Server used by stations on your LAN.


Network Integrity Check. Select this check box to enable the access point to validate that the upstream link is active before allowing wireless associations. If you set this option, you have to ensure that your default gateway is configured.

3. Click **Apply** to save your basic IP settings.

Configure Wireless Access

➤ **To configure your wireless settings for 11b/bg/ng:**

1. Select **Configuration > Wireless**. The Wireless Settings screen displays:

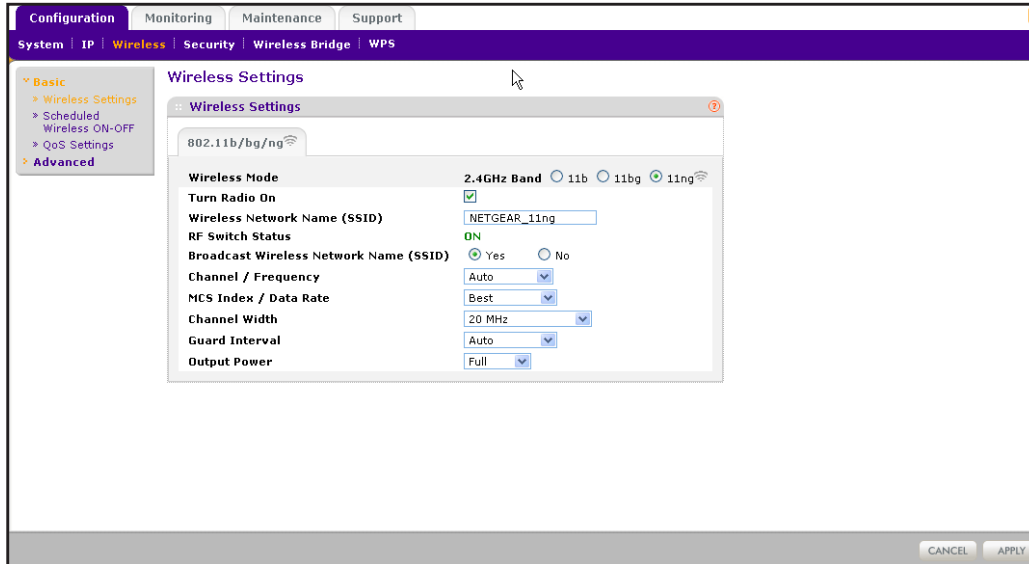

2. Enter the wireless settings for your area. See [Wireless Settings](#) on page 19.
3. Click **Apply** to save your settings.

When you have completed the setup steps, you can deploy the access point in your network. If needed, you can now reconfigure the computer that you set to use the static IP back to its original TCP/IP settings.

Deploy the Access Point

➤ **To deploy the access point:**

1. Disconnect the access point and position it where it will be deployed. The best location is elevated, such as wall mounted or on the top of a cubicle, at the center of your wireless coverage area, and within line of sight of all the mobile devices.
2. Lift the antenna so that it is vertical.

Note: Refer to the antenna positioning and wireless mode configuration information in the [Advanced Configuration](#) chapter.

3. Connect an Ethernet cable from your access point to a LAN port on your router, switch, or hub.

Note: By default, the access point is set with the DHCP client disabled. If your network uses dynamic IP addresses, you have to change this setting. To connect to the access point after the DHCP server on your network assigns it a new IP address, enter the access point name into your web browser. The default access point name is netgearxxxxxx, where xxxxxx represents the last 6 bytes of the MAC address. The default name is printed on the bottom label of the access point.

4. Connect the power adapter to the wireless access point and plug the power adapter in to a power outlet. The Power, LAN, and WiFi LEDs should light up.

Verify Wireless Connectivity

Using a computer with an 802.11b/bg/ng wireless adapter with the correct wireless settings needed to connect to the access point (SSID, WEP/WPA, MAC ACL, etc.), verify connectivity by using a browser such as Mozilla Firefox or Internet Explorer to browse the Internet, or check for file and printer access on your network.

The default SSID for the 802.11b/bg/ng wireless mode is NETGEAR-11g. The SSID of any wireless access adapters has to match the SSID configured in the access point. If they do not match, no wireless connection is made.

Note: If you are unable to connect, see [Chapter 6, Troubleshooting](#).

Wireless Equipment Placement and Range Guidelines

The operating distance or range of your wireless connection can vary significantly based on the physical placement of the access point. The latency, data throughput performance, and notebook power consumption of wireless adapters also vary depending on your configuration choices.

Note: Failure to follow these guidelines can result in significant performance degradation or inability to wirelessly connect to the WN604. For complete performance specifications, see [Appendix A, Supplemental Information](#)."

For best results, place your access point:

- Near the center of the area in which your PCs will operate.

- In an elevated location such as a high shelf where the wirelessly connected PCs have line-of-sight access (even if through walls).
- Away from sources of interference, such as PCs, microwaves, and 2.4 GHz cordless phones.
- Away from large metal surfaces.

Putting the antenna in a vertical position provides best side-to-side coverage. Putting the antenna in a horizontal position provides best up-and-down coverage.


The time it takes to establish a wireless connection can vary depending on both your security settings and placement. Some types of security connections can take slightly longer to establish and can consume more battery power on a notebook computer.

Wireless Settings

This section describes how to configure the available wireless settings.

➤ To configure the wireless settings:

1. Select **Configuration > Wireless**. The Wireless Settings screen displays:

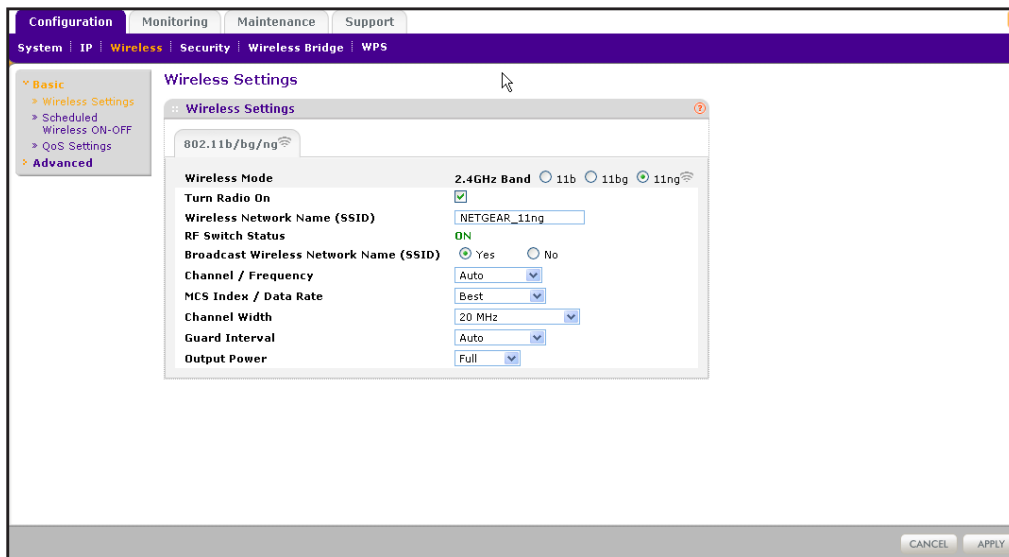

2. Configure the wireless settings.
The settings are described in the following section.
3. Click **Apply** to save your 802.11b/bg/ng wireless settings.

Wireless Settings Screen Fields

Wireless Mode. Select the desired wireless operating mode. The default is 11ng. The options are:

- **11b.** All 802.11b wireless stations can be used. (The 802.11g wireless stations can still be used if they can operate in 802.11b mode.)

- **11bg.** Both 802.11b and 802.11g wireless stations are supported.
- **11ng.** All 11b, 11g, and 11ng wireless stations can be used. This is the default. If you select this option, then two additional options, Channel Width and Guard Interval, are display.

Note: If you select an option, and some settings on this screen are not available, then you have to select the Turn Radio On radio button to make those settings available.

Turn Radio On. On by default, you can also turn off the radio to disable access through this device. This can be helpful for configuration, network tuning, or troubleshooting activities.

Wireless Network Name (SSID). This is the name of your wireless network. It is set to the default name of NETGEAR_11ng for 802.11b/bg/ng.

RF Switch Status. The WN604 also has an external hardware switch to enable or disable the radio (RF). This field shows its current status. When the RF switch is off, you cannot change wireless parameters.

Broadcast Wireless Network Name (SSID). If you disable broadcast of the SSID, only devices that have the correct SSID can connect. This nullifies the wireless network “discovery” feature of some products such as Windows XP, Vista, and Unix systems, but the data is still fully exposed to a determined snoop using specialized test equipment like wireless sniffers. The default is enabled.

Channel/Frequency. From the drop-down list, select the channel you wish to use on your wireless LAN. The wireless channel in use is between 1 and 11 for United States and Canada, 1 and 13 for Europe and Australia. The default is Auto.

It should not be necessary to change the wireless channel unless you experience interference (shown by lost connections and slow data transfers). Should this happen, you might need to experiment with different channels to see which is the best. Alternatively, you can select the Auto channel option for the AP to intelligently pick the channel with least interference. When selecting or changing channels, some points to bear in mind:

- Access points use a fixed channel. You can select the channel that provides the least interference and best performance. In the USA and Canada, 11 channels are available.
- If you are using multiple access points, it is better if adjacent access points use different channels to reduce interference. The recommended channel spacing between adjacent access points is 5 channels (for example, use channels 1 and 6, or 6 and 11).
- Wireless stations normally scan all channels, looking for an access point. If more than one access point can be used, the one with the strongest signal is used. This can only happen only when the various access points are using the same SSID.

MCS Index/Data Rate. From the drop-down list, select the available transmit data rate of the wireless network. Also, depending on the band selected, the set of rates varies. The possible data rates supported are:

- **Data rates for channel width = 20 MHz and guard interval=short (400 ms):** Best, 7.2 Mbps, 14.4 Mbps, 21.7 Mbps, 28.9 Mbps, 43.3 Mbps, 57.8 Mbps, 65 Mbps, 72.2 Mbps.
- **Data rates for channel width = 20 MHz and guard interval=long (800 ms):** Best, 6.5 Mbps.
- **Data rates for channel width = 40 MHz and guard interval=short:** Best, 15 Mbps, 30 Mbps, 45 Mbps, 60 Mbps, 90 Mbps, 120 Mbps, 135 Mbps, 150 Mbps.
- **Data rates for channel width = 40 MHz and guard interval=long:** Best, 13.5 Mbps, 27 Mbps, 40.5 Mbps, 54 Mbps, 81 Mbps, 108Mbps, 121.5 Mbps, 135 Mbps.

Channel Width. From the drop-down list, select the desired channel width.

- 20 MHz. This is the static, legacy mode. It gives the least throughput.
- 40 MHz. This is the static, high-throughput mode. Legacy clients cannot connect in this mode.
- 20/40 MHz. This is the dynamic, compatibility mode.

Guard Interval. From the drop-down list, select the desired guard interval. The guard interval protects from interference from other transmissions. The default is Auto.

Output Power. From the drop-down list, select the transmit power of the access point. The options are Full, Half, Quarter, Eighth, and Minimum. Decrease the transmit power if two or more APs are close together and use the same channel frequency. The default is Full. (The transmit power might vary depending on the local regulatory regulations.)


Configure Basic QoS Settings

Wireless Multimedia (WMM) is a subset of the 802.11e standard. WMM allows wireless traffic to have a range of priorities, depending on the type of data.

Time-dependent information, such as video or audio, has a higher priority than normal traffic. For WMM to function correctly, wireless clients also have to support WMM.

➤ To configure basic wireless QoS settings for 11b/bg/ng and 11a/na:

1. Select **Configuration > Wireless > Basic > QoS Settings**. The QoS Settings screen displays:

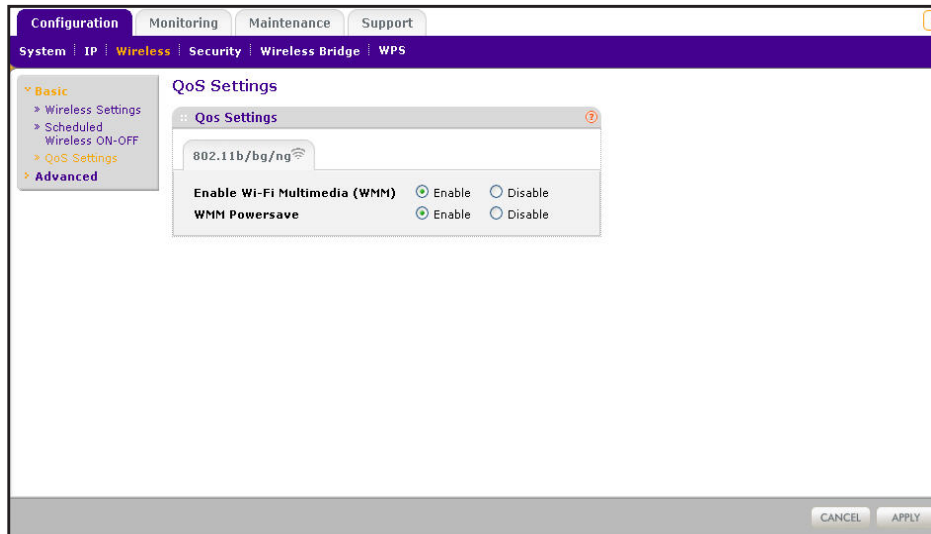

2. Wi-Fi Multimedia (WMM) is enabled by default. Select the **Disable** radio button to disable WMM support.
3. WMM Power Save is enabled by default. Select the **Disable** radio button to disable WMM power save.
4. Click **Apply** to save your settings

Set Up and Test Basic Wireless Connectivity

Follow these instructions to set up and test basic wireless connectivity. Once you have established basic wireless connectivity, you can enable security settings appropriate to your needs.

Note: If you are configuring the access point from a wireless computer and you change the SSID, channel, or security profile settings, you will lose your wireless connection when you click Apply. To connect to the wireless network, you have to change the wireless settings of your computer to match the new settings.

➤ To set up and test wireless connectivity:

1. Select **Configuration > System**. Verify that the correct country/region in which the wireless interface will operate has been selected.
2. Click **Apply** to save any changes.
3. Select **Configuration > Wireless**.

4. Ensure that the auto channel (default) feature is selected for your network. This feature selects a channel that has the least interference.

It should not be necessary to change the wireless channel unless you notice interference problems or are near another wireless access point. Select a channel that is not being used by any other wireless networks within several hundred feet of your access point.

5. Click **Apply** to save any changes.
6. Select **Configuration > Security**. For initial configuration and testing, the Network Authentication setting is set to Open System and the default SSID to NETGEAR_11ng. (For more information about configuring a profile, see [Security Profiles](#) on page 25.)

Note: The SSID of any station has to match the SSID you configured in the access point. If they do not match, you will not get a wireless connection to the access point.

7. Click **Apply** to save any changes.
8. Configure and test your PCs for wireless connectivity.

Set up the wireless adapters of your PCs to have the same SSID that you configured in the WN604. Check that they have a wireless link and are able to obtain an IP address by DHCP from the WN604.

Once your PCs have basic wireless connectivity, you can configure the advanced wireless security functions.

3. Configure Security

3

This chapter includes the following sections.

- *Security Profiles*
- *Wireless Security Options*
- *Manually Configure Security*
- *Wi-Fi Protected Setup (WPS)*
- *Restrict Wireless Access by MAC Address*

Security Profiles

Security profiles let you configure unique security settings for each SSID. You can configure only one wireless security profile. You can set up a single security profile for 802.11b/bg/ng, which is the default profile.

➤ **To configure a security profile:**

1. Select **Configuration > Security**. The Edit Security Profile screen displays:

2. Enter the wireless network name (SSID) for the wireless network. It is set by default to NETGEAR_11ng.
3. Select **Yes** or **No** to enable or disable the broadcast wireless network name (SSID). It is enabled by default. If the name is broadcast, it can be easily detected by clients.
4. From the Network Authentication drop-down list, select the network authentication type you want to use for this profile.
5. Select the data encryption strength from the drop-down list.
6. Wireless client security separation is disabled by default. If enabled, the associated wireless clients cannot communicate with each other.
7. Click **Apply** to save your settings.

The following sections explain the fields on this screen and how to set up security.

Edit Security Profile Screen Fields

An overview of the information that is required to set up a security profile follows:

Profile Definition

Wireless Network Name (SSID). This is the name of your wireless network. It is set to the default name of NETGEAR_11ng.

Broadcast Wireless Network Name (SSID). If you disable broadcast of the SSID, only devices that have the correct SSID can connect. This nullifies the wireless network

“discovery” feature of some products such as Windows XP, Vista, and Unix systems, but the data is still fully exposed to a determined snoop using specialized test equipment like wireless sniffers. The default is enabled.

Authentication Settings

Network Authentication. The access point is set by default as an open system with no authentication. When setting up network authentication, bear in mind the following:

- If you are using access point mode, then all options are available. In bridge mode some options might be unavailable.
- Legacy adapters might not support WPA or WPA2. Windows XP and Windows 2000 with Service Pack 3 do include the client software that supports WPA. Consult the product documentation for your wireless adapter and WPA or WPA2 client software for instructions on configuring WPA2 settings.

You can configure the access point to use the types of network authentication shown in the following table.

Table 2. Network authentication types

Type ^a	Description
Open System	Can be used with WEP encryption or no encryption.
Shared Key	This is used with WEP encryption. You enter at least one shared key.
WPA-PSK	TKIP or TKIP + AES encryption and enter the WPA passphrase (network key).
WPA2-PSK (WPA2 is a later version of WPA)	Select this only if all clients support WPA2. If selected, you have to use AES or TKIP + AES encryption and enter the WPA passphrase (Network key).
WPA-PSK and WPA2-PSK	This selection allows clients to use either WPA (with TKIP) or WPA2 (with AES). If selected, you have to use TKIP + AES encryption and enter the WPA passphrase (Network key).

a. All options are available if using access point mode. In bridge modes some options might be unavailable.

Data Encryption. The available options depend on the Network Authentication setting selected (see [Table 2](#)); otherwise, the default is None.

- **None.** No encryption is used.
- **64 bits WEP.** Standard WEP encryption, using 40/64 bit encryption.
- **128 bits WEP.** Standard WEP encryption, using 104/128 bit encryption.
- **152 bits WEP.** Proprietary mode that works only with other wireless devices that support this mode.
- **TKIP.** This is the standard encryption method used with WPA and WPA2.
- **AES.** This is the standard encryption method for WPA2.

- **TKIP + AES.** This setting supports both WPA and WPA2. Broadcast packets use TKIP. For unicast (point-to-point) transmissions, WPA clients use TKIP, and WPA2 clients use AES.

Passphrase. To use the passphrase to generate the WEP keys, enter a passphrase and click the **Generate Keys** button. You can also enter the keys directly. These keys have to match the other wireless stations.

Key 1, Key 2, Key 3, Key 4. If using WEP, select the key to be used as the default key. Data transmissions are always encrypted using the default key. The other keys can only be used only to decrypt received data.

WPA Preshared Key Passphrase. If using WPA-PSK or WPA2-PSK, enter the passphrase here. All wireless stations have to use the same passphrase (network key). The network key has to be from 8 to 64 characters in length.

Wireless Client Security Separation. If enabled, the associated wireless clients cannot communicate with each other. (This feature is intended for hotspots and other public access situations.) The default is Disabled.

Wireless Security Options

Your wireless data transmissions can be received well beyond your walls by anyone with a compatible adapter. For this reason, use the security features of your wireless equipment. The access point provides highly effective security features. Deploy the security features appropriate to your needs.

There are several ways you can enhance the security of your wireless network:

- **Restrict access based on MAC address.** You can restrict access to only trusted PCs so that unknown PCs cannot wirelessly connect to the WN604. MAC address filtering adds an obstacle against unwanted access to your network, but the data broadcast over the wireless link is fully exposed.
- **Turn off the broadcast of the wireless network name (SSID).** If you disable broadcast of the SSID, only devices that have the correct SSID can connect. This nullifies the wireless network “discovery” feature of some products such as Windows XP, Vista, and Unix systems, but the data is still fully exposed to a determined snoop using specialized test equipment like wireless sniffers.
- **Use WPA or WPA-PSK.** Wi-Fi Protected Access (WPA) data encryption provides data security. The very strong authentication along with dynamic per frame rekeying of WPA makes it virtually impossible to compromise.
- **Use WEP.** Wired Equivalent Privacy (WEP) data encryption provides data security. WEP is a legacy security setting. NETGEAR recommends that you use WPA2 or WPA for stronger wireless security.

Note: WEP and TKIP provide only legacy rates of operation. So, AES is the recommended solution to use the 802.11n rates and speed.

Manually Configure Security

The following sections explain how to manually configure security.

Note: If you use a wireless computer to change wireless security settings, you will be disconnected when you click Apply. Reconfigure your wireless adapter to match the new settings or access the access point from a wired computer to make any further changes.

Configure WPA2, or WPA2 + WPA, or WPA

The process of setting up WPA2, WPA, or WPA2 + WPA is very similar. Consult the product document for your wireless clients and for instructions on configuring client WPA2 settings.

➤ **To configure WPA2, or WPA2 + WPA, or WPA in the access point:**

1. Select **Configuration > Security**. The Edit Security Profile screen displays:

2. From the Network Authentication drop-down list, select the option that you want to use to secure your network. NETGEAR recommends WPA2, but you can select any of the following, depending on whether your client devices support WPA2:

- **WPA2-PSK.** With this setting, only wireless clients that support WPA2 can access the wireless network. By default, the Data Encryption field is set to AES.
 - **WPA-PSK & WPA2-PSK.** Wireless clients using WPA2 or WPA can access the wireless network. By default, the Data Encryption field is set to TKIP+AES.
 - **WPA-TKIP.** Wireless clients using WPA can access the wireless network.
3. In the WPA Passphrase (Network Key) field, enter the password that you want to use to secure the wireless network.
 4. Wireless client security separation is disabled by default. If it is enabled, associated wireless clients cannot communicate with each other. (This feature is intended for hotspots and other public access situations.)
 5. Click **Apply** to save your settings.

Configure WEP

WEP is a legacy security option. NETGEAR recommends that you use WPA2 or WPA.

➤ To configure WEP data encryption:

1. Select **Configuration > Security**. The Edit Security Profile screen displays.
2. From the Network Authentication drop-down list, select either **Open System** or **Shared Key** authentication.

3. From the Data Encryption drop-down list, select encryption strength (64 bits, 128 bits, or 152 bits).
4. You manually or automatically program the four data encryption keys. These values have to be identical on all PCs and access points in your network. Select one of the following:
 - **Automatic.** Enter a word or group of printable characters in the Passphrase field and click the **Generate Keys** button. The four key fields are automatically populated with key values.
 - **Manual.** Enter the number of hexadecimal digits appropriate to the encryption strength: 10 digits for 64-bit, 26 digits for 128-bit, and 32 digits for 152-bit (any combination of 0–9, a–f, or A–F).


5. Select the key to be used as the default key by selecting the radio button. (Data transmissions are always encrypted using the default key.)
6. Wireless client security separation is disabled by default. If it is enabled, associated wireless clients cannot communicate with each other. (This feature is intended for hotspots and other public access situations.)
7. Click **Apply** to save your settings.

Wi-Fi Protected Setup (WPS)

WPS is a simple method that lets you easily and securely add a client to the wireless network without typing the WPA2 or WPA password. WPS is compatible with WPA2 and WPA security. The wireless client has to support WPS for this method to work.

➤ To configure WPS:

1. Select **Configuration > WPS**. The WPS Settings screen displays:

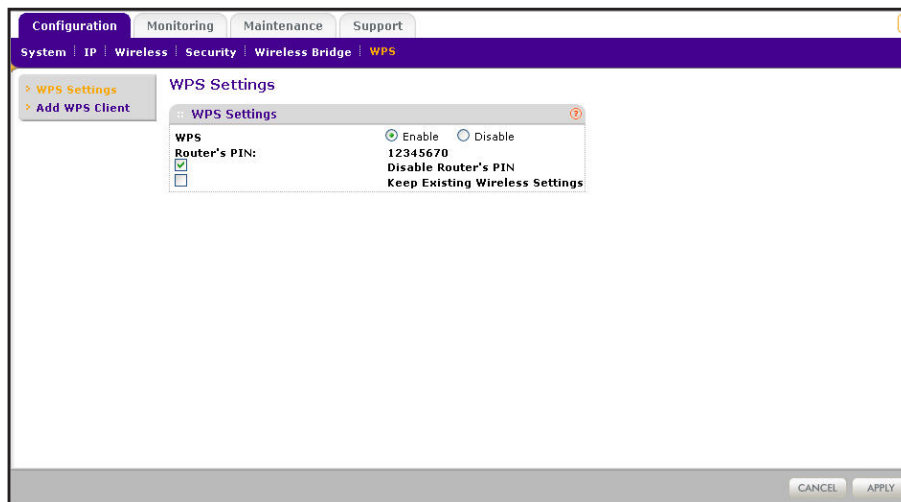

2. Select the **Enable** radio button to enable WPS on your access point.
3. Adjust the other settings on the screen as needed.
 - **Router's PIN.** This is the PIN that a registrar can use to configure the access point's wireless settings through WPS. This PIN is also on the product label. You can use an external registrar to configure the access point's SSID and security settings through WPS, and you will be prompted to enter the PIN that is displayed here.

Note: By using this WPS PIN, an external registrar can set or get the access point's wireless settings through WPS, and apply the settings to connect itself to the access point.

- **Disable Router's PIN.** Select this check box if you want to disable the access point's PIN. An external registrar can only configure the access point's wireless settings through WPS only when the PIN is enabled. By default, this check box is not selected.

- **Keep Existing Wireless Settings.** Select this check box if you want to keep the current wireless settings the same when you use WPS to add a client device.


4. Click **Apply** so that your changes take effect.

Use WPS to Add a Client to the Wireless Network

WPS is compatible with WPA2 and WPA security. The wireless client has to support WPS for this method to work. Check the documentation that came with the wireless client machine. You can use the WPS button on the side of the access point, or you can log in to the access point and use the Add WPS Client feature.

➤ To add a client using the WPS button:

1. Press the **WPS** button located on the side of the access point.

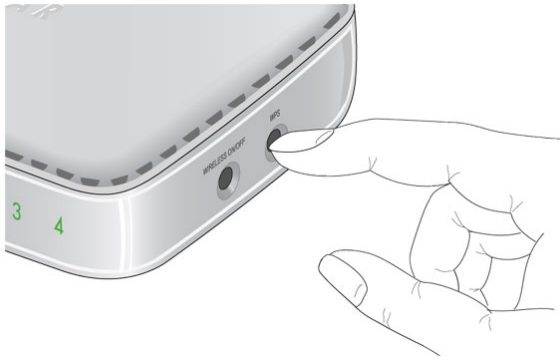


The WPS LED on the front of the access point flashes. The access point tries to associate with a wireless client.

2. Go to the wireless client. Follow the WPS instructions that came with it to press a WPS button.

The wireless client attempts to join the wireless network. If it successfully joins, then it is automatically configured with the wireless network SSID and wireless security.


➤ To add a client when logged in to the access point:

1. Select **Configuration > WPS > Add WPS Client** and click the **Next** button. The Add WPS Client screen displays:

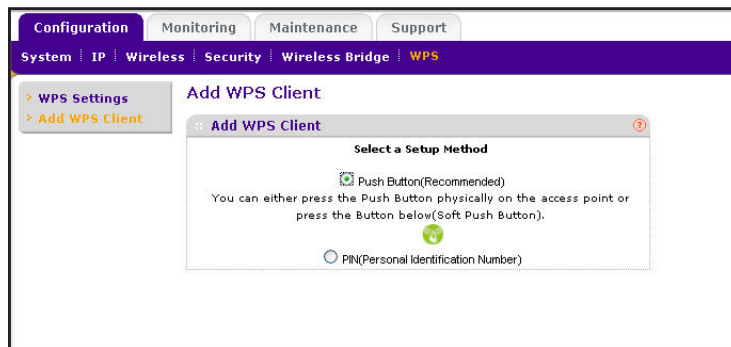


2. Select either the **Push Button (Recommended)** button or the **PIN (Personal Identification Number)** button. The Push Button method is easier, while the PIN method is more secure.
 - The Push Button method lets you add a client with the WPS push button on the side panel of the WN604 and the push button on the client).
 - The PIN method requires you to enter the wireless client's PIN, which should be displayed on the client's utility interface.

A progress bar on the Connecting to New Wireless Client screen shows the status of the wireless connection.

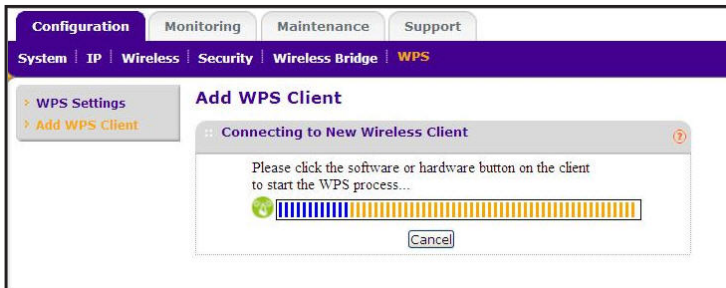

3. If the wireless client is added, a Success message displays. If the wireless settings changed, you are notified. You can click **OK** to view the new settings:

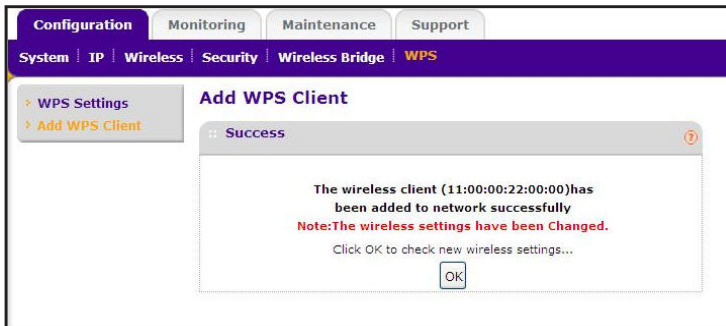

4. If the settings have not changed, you can click the Success message to return to the Add WPS Client screen.
5. In case of an error in completing the WPS process, refer to the online help.


Restrict Wireless Access by MAC Address

Access control lets you block the network access privilege of any specified stations through the access point. When you enable access control, the access point accepts only connections from clients on the selected access control list. This provides an additional layer of security.

Note: If you connected wirelessly to set up MAC authentication, make sure to include the MAC address of the computer you are using in the access control list. Otherwise, you will be disconnected when you click Apply. If this happens and you want to make more changes, log in to the access point with a wired connection, or wirelessly from a computer that is on the access control list.

➤ **To restrict access based on MAC addresses:**

1. Select **Configuration > Security > Advanced > MAC Authentication**. The MAC Authentication screen displays.

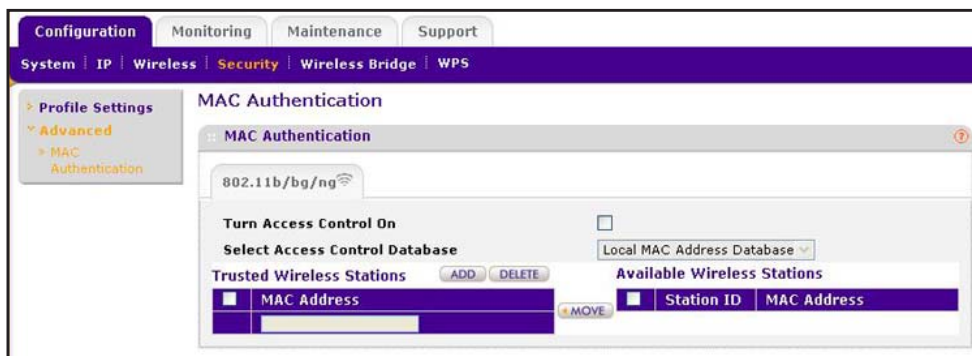

2. Select the **Turn Access Control On** check box to enable access control feature.
In the Select the desired Access Control Database list, **Local MAC Address Database** is selected. The access point uses the local MAC address table for access control.
3. The Trusted Wireless Stations list shows any wireless stations you have entered. If you have not entered any wireless stations, this list is empty. To delete an existing entry, select it and then click **Delete**.
4. Click **Refresh** to refresh the available wireless stations found in your area.
5. Select the stations from the list of Available Wireless Stations found in your area, or enter the MAC address of a station to add a new station manually. (You can usually find the MAC address printed on the bottom of the wireless adapter.)
6. Click **Add** to add the wireless device to the Trusted Wireless Stations list. Repeat these steps for each additional device you want to add to the list.
7. Click **Apply** to save your wireless access control list settings.

Now, only devices on this list are allowed to wirelessly connect to the access point.

This chapter describes how to use the management features of your access point, which you access from the Maintenance and Monitoring tabs. This chapter contains the following sections:

- *Upgrade the Wireless Access Point Firmware*
- *Configuration File Management*
- *Change the Administrator Password*
- *Enable the SysLog Server*
- *Activity Log*
- *View Summary Information*
- *Network Traffic Statistics*
- *Available Wireless Station Statistics*

Upgrade the Wireless Access Point Firmware

The software of the access point is stored in flash memory, and can be upgraded as new software is released by NETGEAR. You can use your browser to download upgrade files from the NETGEAR website and to send the upgrade file to the access point. The browser, such as Microsoft Internet Explorer 6.0 or later or Mozilla 1.5 or above.


➤ **To upgrade the firmware:**



WARNING!

When uploading firmware to the access point, do not interrupt the web browser by closing the window, clicking a link, or loading a new page. If the browser is interrupted, the upload might fail, corrupt the software, and render the access point completely inoperable.

1. On a computer that is connected to the access point with an Ethernet cable, launch a browser.
2. Download the new software file from the NETGEAR website, and save it to your hard disk.
3. Log in to the access point.
4. Select **Maintenance > Upgrade > Firmware Upgrade**. The Firmware Upgrade screen displays:

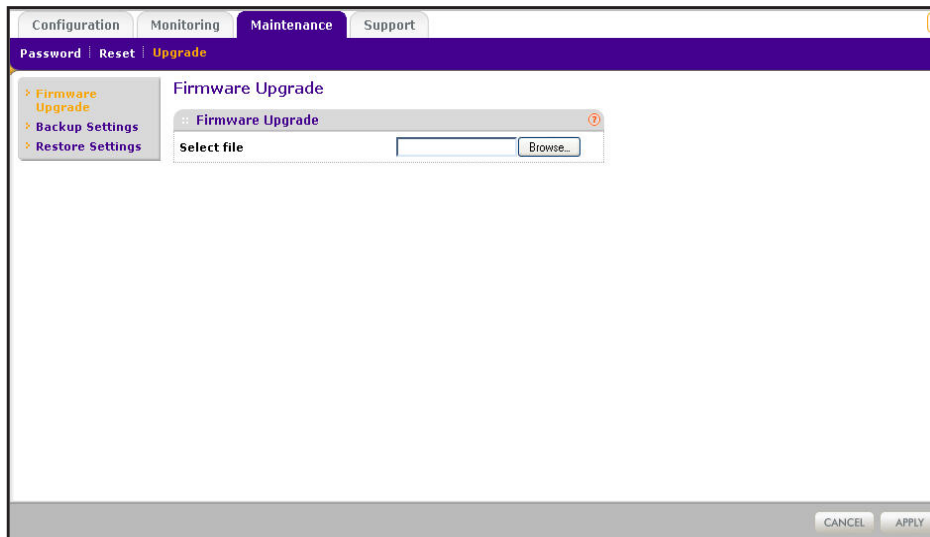

5. Click **Browse** and browse to the location of the upgrade file.
6. Click **Apply**.

When the upload is complete, your access point automatically restarts. The upgrade process typically takes about 2 minutes.


Configuration File Management

The access point settings are stored in the access point in a configuration file. This file can be saved (backed up) to a computer, retrieved (restored), or cleared to factory default settings.

Note: If you want to restore factory settings without logging in to the access point, you can use the Reset button. See [Factory Default Settings](#) on page 60.

➤ **To back up your current settings:**

1. Select **Maintenance > Upgrade > Backup Settings**. The following screen displays:

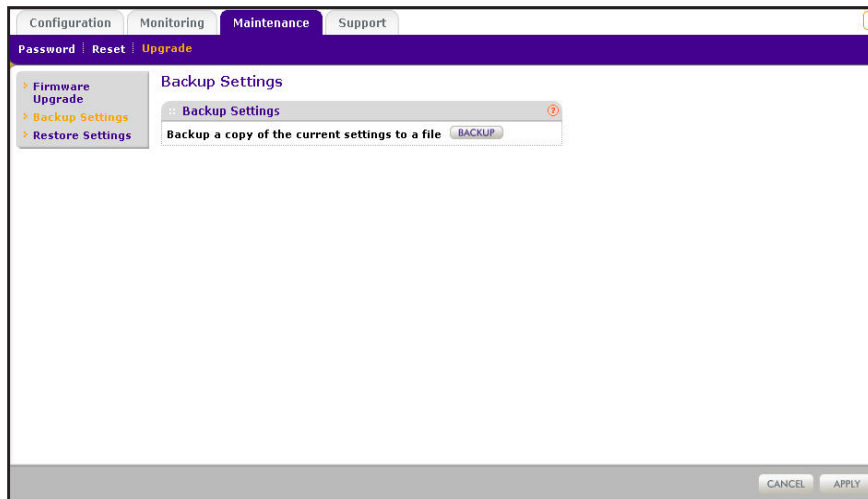


2. Click **Backup**.

Your browser extracts the configuration settings from the access point and prompts you for a location on your computer to store the file.

3. Give the file a meaningful name, such as WN604.cfg, and click **Save**.

➤ **To restore saved settings:**


1. Select **Maintenance > Upgrade > Restore Settings**. The following screen displays:

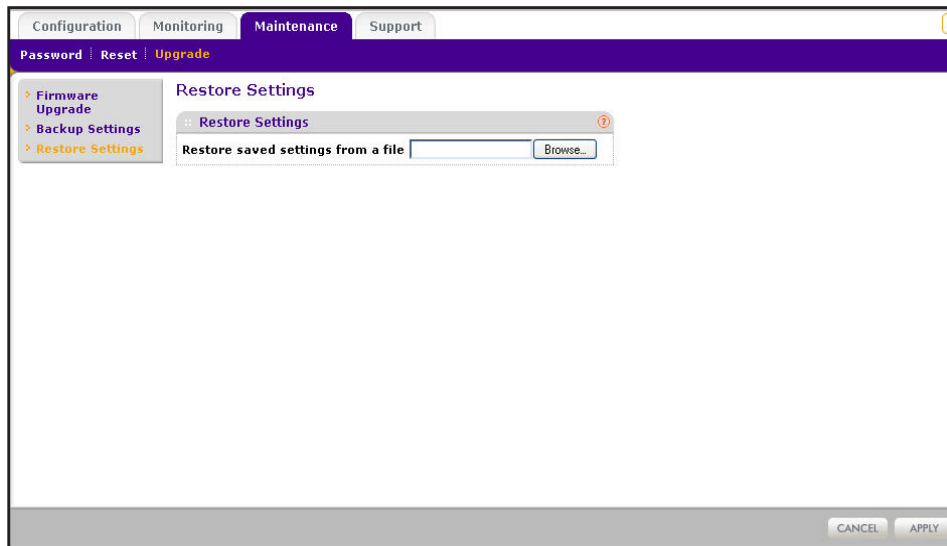

2. Enter the full path to the backup file on your computer, or click the **Browse** button to locate the file.
3. Click **Restore** to upload the file. After completing the upload, the WN604 reboots automatically.

➤ **To restore the factory settings:**

1. Select **Maintenance > Reset > Restore Defaults**. The Restore Defaults screen displays:

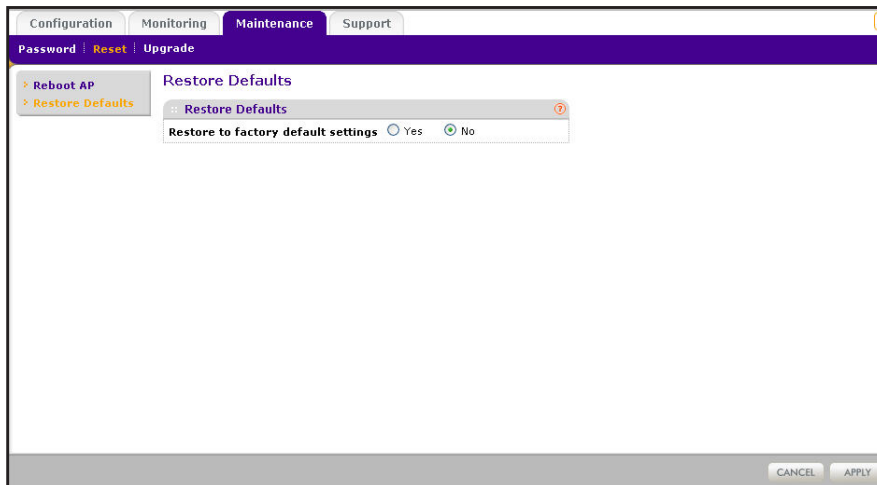

2. Select the **Yes** radio button.
3. Click **Apply** to reset to the factory default settings.


After a restore, the access point password is password, the default LAN IP address is 192.168.0.100, and the access point name is reset to the name on the label on the bottom of the unit.

Change the Administrator Password

The user name of admin cannot be changed. The default password is password. You should change this to a more secure password.

➤ **To change the administrator password:**

1. Select **Maintenance > Password**. The following screen displays:

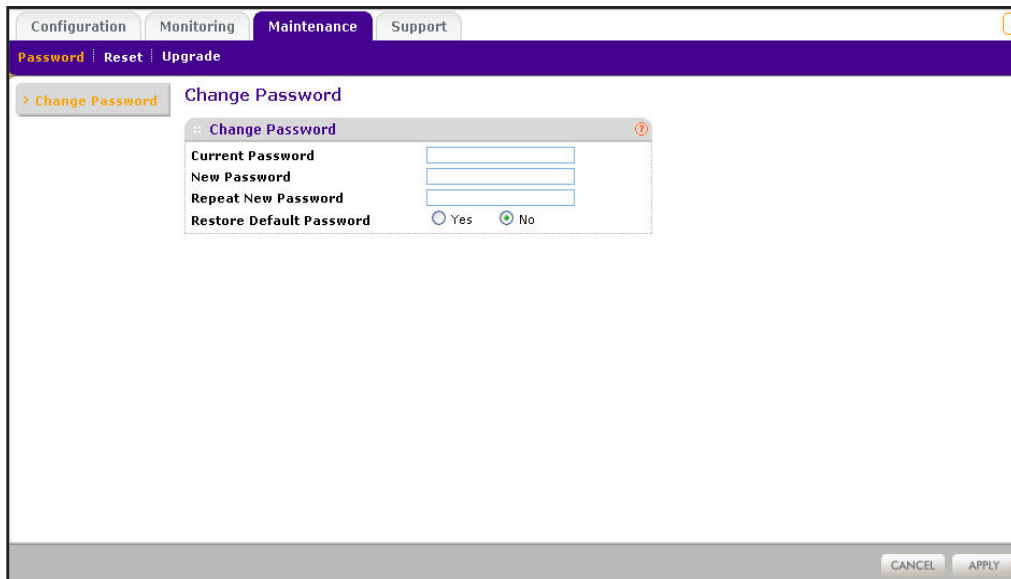

The screenshot shows a web browser window with a navigation bar at the top containing 'Configuration', 'Monitoring', 'Maintenance', and 'Support'. The 'Maintenance' tab is selected. Below the navigation bar, there is a sub-menu with 'Password', 'Reset', and 'Upgrade'. The 'Password' sub-menu is active, and a 'Change Password' button is visible. The main content area displays a 'Change Password' form with the following fields: 'Current Password', 'New Password', and 'Repeat New Password', each with a text input field. Below these fields is a 'Restore Default Password' section with two radio buttons: 'Yes' and 'No'. The 'No' radio button is selected. At the bottom right of the form, there are 'CANCEL' and 'APPLY' buttons.


2. First enter the old password in the Current Password field.
3. Then enter the new password twice—once in the New Password field and again in the Repeat New Password field.
4. Click **Apply** to save your change.

Enable the SysLog Server

The syslog screen allows you to enable the syslog option if you have a syslog server on your LAN.

➤ **To enable a syslog server:**

1. Select **Configuration > System > Advanced > Syslog** to view the following screen:

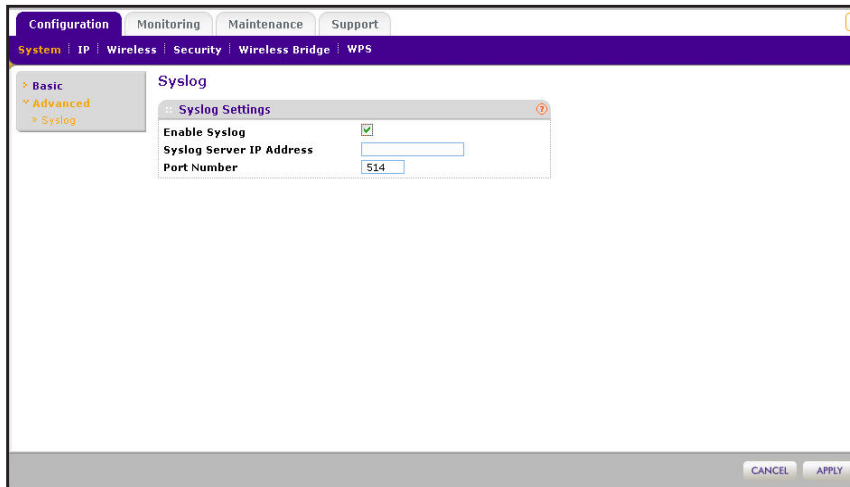


The screenshot shows the web interface of the Wireless N150 Access Point WN604. The top navigation bar includes tabs for Configuration, Monitoring, Maintenance, and Support. Under Configuration, there are sub-tabs for System, IP, Wireless, Security, Wireless Bridge, and WPS. The left sidebar shows a tree view with Basic, Advanced, and Syslog options. The main content area is titled 'Syslog' and contains a 'Syslog Settings' box. In this box, the 'Enable Syslog' checkbox is checked. Below it, the 'Syslog Server IP Address' is an empty text field, and the 'Port Number' is set to 514. At the bottom right of the interface are 'CANCEL' and 'APPLY' buttons.

2. Select the **Enable Syslog** check box if you have a syslog server on your LAN.
3. Enter the IP address of your SysLog server and the port number your syslog server is configured to use.
 - **Syslog Server IP Address.** The access point sends all the syslogs to the specified IP address if the syslog option is enabled.
 - **Port Number.** The port number configured in the syslog server on your LAN. The default is 514.
4. Click **Apply** to save your settings.

Activity Log

The Activity Log screen displays the access point system activity. To view the activity log, select **Monitoring > Logs**. The Logs screen displays:

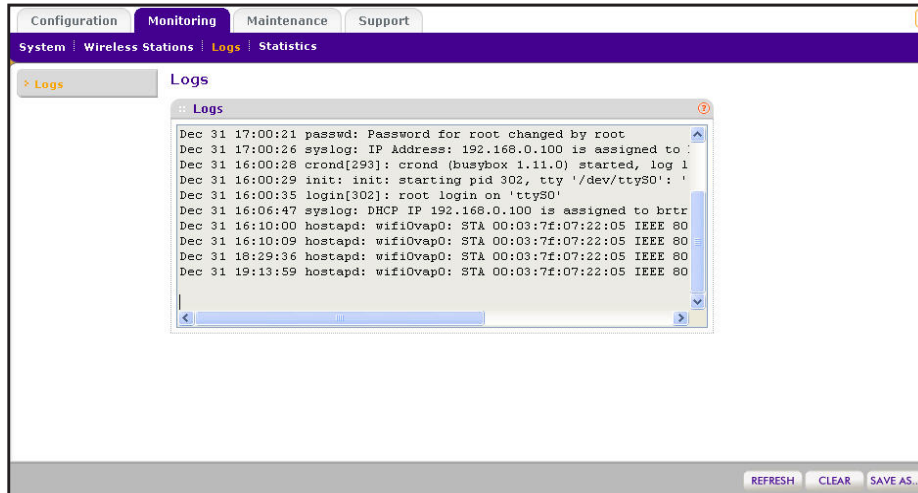


The Logs screen displays the access point system activity. You can click **Refresh** to update the display, click **Clear** to clear the log content, or click **Save As** to save the log contents into a file on a disk drive.

View Summary Information

The System screen, which you access through the Monitoring tab, provides a summary of the current access point configuration settings, including current IP settings and current wireless settings. This information is read-only, so any changes have to be made on other screens.

To navigate to this screen, select **Monitoring > System**:

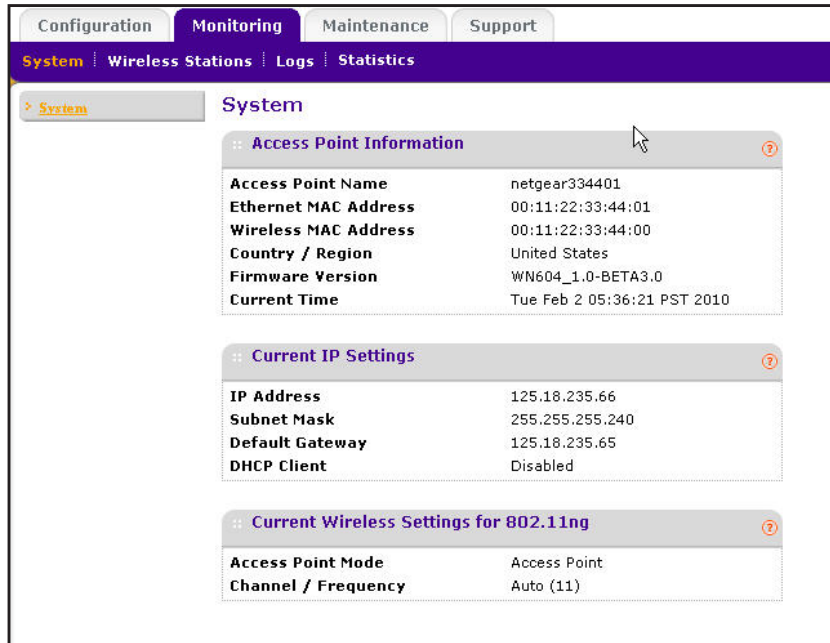

System Screen Fields

This section describes the fields in this screen.

Access Point Information

Access Point Name. Indicates the NetBIOS name. You can change the default name in the General screen (**Configuration > General**).

Ethernet MAC Address. The Media Access Control address (MAC address) of the access point's Ethernet port.

Wireless MAC Address. The Media Access Control address (MAC address) of the access point's wireless card.

Country/Region. The domain or region for which the access point is licensed for use. It might not be legal to operate this access point in a region other than one of those identified in this field.

Firmware Version. The version of the firmware currently installed.

Current Time. The current time setting of the access point.

Current IP Settings

IP Address. The IP address of the access point.

Subnet Mask. The subnet mask for the IP address of the access point.

Default Gateway. The default gateway for access point communication.

DHCP Client. Enabled indicates that the current IP address of the AP was obtained from a DHCP server on your network. Disabled indicated a static IP configuration.

Current Wireless Settings for 802.11b/bg/ng

Operating Mode. Identifies the 802.11 operating mode of the WN604.

Channel/Frequency. Identifies the channel the wireless port is using. Auto is the default channel setting.

Network Traffic Statistics

The Statistics screen displays information for both wired (LAN) and wireless (WLAN) interface network traffic.

➤ To access Statistics information:

1. Select **Monitoring > Statistics**. The Statistics screen displays:

Statistics		
Wired Ethernet		
	Received	Transmitted
Packets	0	0
Bytes	0	0
Wireless 802.11ng		
	Received	Transmitted
Unicast Packets	0	0
Broadcast Packets	0	20
Multicast Packets	0	12
Total Packets	0	32
Total Bytes	0	5275

2. Click **Refresh** to update the Statistics information for each interface.

Statistic Screen Fields

Wired Ethernet

Packets. The number of packets sent and received since the WN604 was restarted.

Bytes. The number of bytes sent and received since the WN604 was restarted.

Wireless 11b/bg/ng

Unicast Packets. The unicast packets sent and received in 802.11n/g mode since the access point was restarted.

Broadcast Packets. The broadcast packets sent and received in 802.11n/g mode since the access point was restarted.

Multicast Packets. The multicast packets sent and received in 802.11n/g mode since the access point was restarted.

Total Packets. The wireless packets sent and received in 802.11n/g mode since the access point was restarted.

Total Bytes. The wireless bytes sent and received in 802.11n/g mode since the access point was restarted.


Available Wireless Station Statistics

The Available Wireless Stations table lists all IP devices associated with this access point in the wireless network defined by the wireless network name (SSID). For each device, the table shows the MAC address, BSSID, SSID, channel, rate, state (whether the device is allowed to communicate with the access point or not), type, AID, mode, and status.

A wireless network can include multiple wireless access points, all using the same network name (SSID). This enables extending the reach of the wireless network and allows users to roam from one access point to another, providing seamless network connectivity. Under these circumstances, be aware that only the stations associated with this access point are in the Available Wireless Stations list.

➤ To view the available wireless stations:

1. Select **Monitoring > Wireless Stations**. The following screen displays:

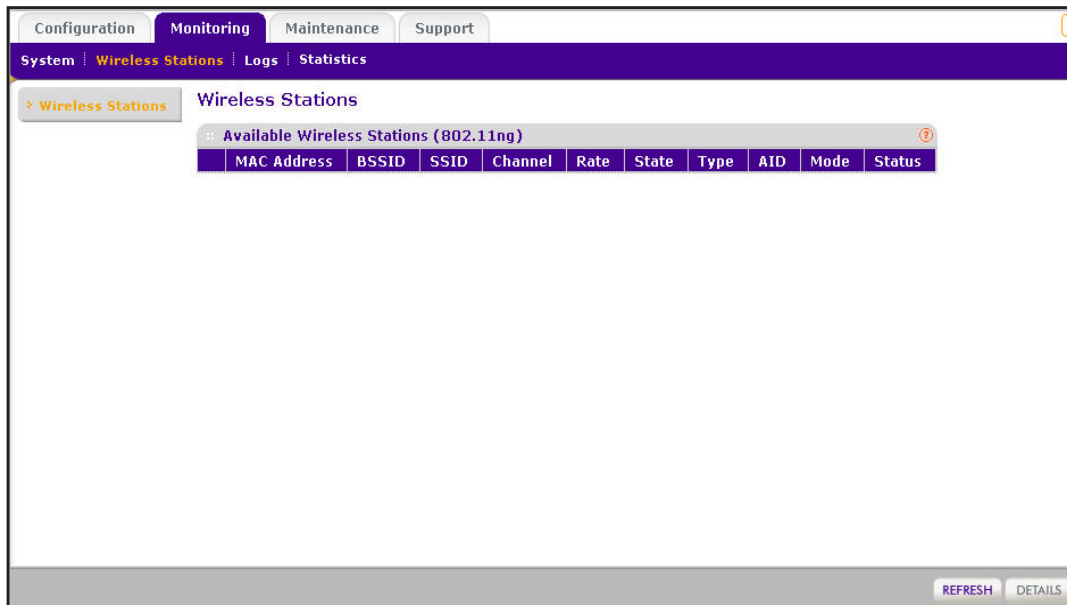

2. Click **Refresh** to update this screen.

Tip: If the access point is rebooted, the table data is lost until the access point rediscovers the devices. To force the access point to look for associated devices, click the **Refresh** button.

5. Advanced Configuration

5

This chapter includes the following sections:


- *Schedule the Wireless Radio*
- *Advanced Wireless Settings*
- *Advanced QoS Settings*
- *Enable Wireless Bridging*

Schedule the Wireless Radio

You can schedule the times when the wireless radio is on and off, for any day of the week. This feature depends on the NTP (Network Time Protocol) functionality. If an NTP client request fails, then last configured value of radio status is restored. Also, if the wireless radio is disabled, then the scheduled feature does not work.

➤ **To schedule the wireless radio:**

1. Select **Configuration > Wireless > Scheduled Wireless On-Off**. The Scheduled Wireless On/Off screen displays.

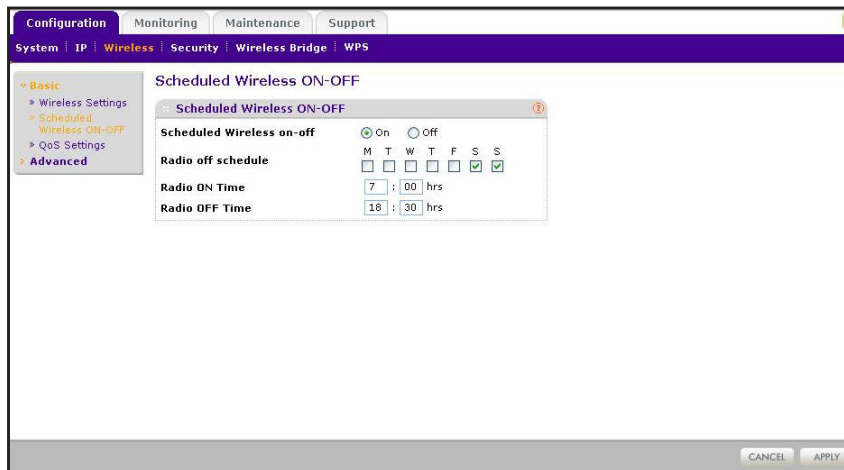

By default, the On radio button is selected for the Scheduled Wireless On-Off field so that the wireless radio is on all the time.

2. If you want to change this so that the wireless radio is off except when you schedule it to be on, select the **Off** radio button.
3. For Radio Off Schedule, select the check boxes for each day on which you want to turn off the wireless radio for that entire day.
4. In the **Radio On Time** and **Radio Off Time** fields, set the period that the wireless radio is on and off for the days not selected in the radio off schedule.
5. Click **Apply**.

Advanced Wireless Settings

Advanced wireless settings are used to configure and enable various WLAN parameters for the 802.11b/bg/ng modes. The default WLAN parameters usually work well. However, you can use these settings to fine-tune the overall performance of your access point for your environment.

➤ **To configure advanced wireless settings:**

1. Select **Configuration > Wireless > Advanced > Wireless Settings**.

The advanced Wireless Settings screen displays:

Wireless Settings	
802.11b/bg/ng	
RTS Threshold (0-2347)	2347
Fragmentation Length (256-2346)	2346
Beacon Interval (100-1000)	100
Aggregation Length (1024-65535)	65535
AMPDU	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
RIFS Transmission	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
DTIM Interval (1-255)	3
Preamble Type	<input checked="" type="radio"/> Auto <input type="radio"/> Long
802.11d	<input checked="" type="checkbox"/>
Client Isolation	Disable
Max. Wireless Clients	63

2. Enter the appropriate information. The fields are described in the following section.
3. Click **Apply** so that your changes take effect.

Advanced Wireless Settings Screen Fields

RTS Threshold (0-2347). Request to Send Threshold. The packet size that is used to determine if it should use the CSMA/CD (Carrier Sense Multiple Access with Collision Detection) mechanism or the CSMA/CA mechanism for packet transmission. With the CSMA/CD transmission mechanism, the transmitting station sends out the actual packet as soon as it has waited for the silence period. With the CSMA/CA transmission mechanism, the transmitting station sends out an RTS packet to the receiving station, and waits for the receiving station to send back a CTS (Clear to Send) packet before sending the actual packet data. The default is 2347.

Fragmentation Length (256-2346). This is the maximum packet size used for fragmentation. Packets larger than the size programmed in this field are fragmented. The fragmentation threshold value has to be larger than the RTS threshold value. The default is 2346.

Beacon Interval (100-1000). The beacon interval specifies the time in milliseconds between 100 and 1000 transmissions, which allows the access point to synchronize the wireless network. The default is 100.

Aggregation Length (1024-65535) (11ng). The aggregation length defines the size of aggregated packets. Larger aggregation lengths might sometimes lead to better network performance. The default is 65535.

A-MPDU (11ng). Aggregated MAC protocol data unit. Aggregates several MAC frames into a single large frame to achieve higher throughput. The default is Enable.

RIFS Transmission (11ng). Reduced interframe space transmission. RIFS transmissions are shorter than other interframe spaces, and if enabled allow transmission of successive frames at different transmit powers. The default is Disable.

DTIM Interval. The delivery traffic indication message specifies the data beacon rate between 1 and 255. The default is 3.

Preamble Type (11b/bg only). A long transmit preamble might provide a more reliable connection or a slightly longer range. A short transmit preamble gives better performance. The Auto settings automatically handles both long and short preambles. The default is Auto.

802.11d. Enable this option to include support for additional regulatory domains that are not in the current standard.

Max Wireless Clients. The number of wireless clients that can associate with the AP at one time. The default is 20.

Advanced QoS Settings

Wireless Multimedia Extension (WME) or Wi-Fi Multimedia (WMM) is a subset of the 802.11e standard. WME allows wireless traffic to have a range of priorities, depending on the type of data. Time-dependent information, such as video or audio, has a higher priority than normal traffic. For WME to function correctly, wireless clients also need to support WME.

For most networks, the default QoS queue parameter settings work well. Quality of Service provides you with the ability to specify parameters on multiple queues for increased throughput and better performance of differentiated wireless traffic, like Voice-over-IP (VoIP), other types of audio, video, and streaming media, as well as traditional IP data.

➤ To configure advanced QoS settings

1. Select **Configuration > Wireless > Advanced > QoS Settings**. The QoS Settings screen displays:

Configuration | Monitoring | Maintenance | Support

System | IP | **Wireless** | Security | Wireless Bridge | WPS

Basic
Advanced
Wireless Settings
QoS Settings

QoS Settings

802.11b/bg/ng

AP EDCA parameters

Queue	AIFS	cwMin	cwMax	Max. Burst
Data 0 (Best Effort)	3	15	63	0
Data 1 (Background)	7	15	1023	0
Data 2 (Video)	1	7	15	3008
Data 3 (Voice)	1	3	7	1504

Station EDCA parameters

Queue	AIFS	cwMin	cwMax	TXOP Limit
Data 0 (Best Effort)	3	15	1023	0
Data 1 (Background)	7	15	1023	0
Data 2 (Video)	2	7	15	3008
Data 3 (Voice)	2	3	7	1504

CANCEL APPLY

2. Enter the QoS parameters.

- **AP EDCA Parameters.** Specify the AP EDCA (Enhanced Distributed Channel Access) parameters for different types of data transmitted from the access point to the wireless client.
- **Station EDCA Parameters.** Specify the Station EDCA parameters for different types of data transmitted from the wireless client to the access point. If WMM is disabled, you cannot configure Station EDCA parameters.

QoS queues and parameters are described in the following table.

3. Click **Apply** so that your changes take effect.

Table 3. QoS queues and parameters

QoS queue	Description
Data 0 (Voice)	High-priority queue, minimum delay. Time-sensitive data such as VoIP and streaming media are automatically sent to this queue.
Data 1 (Video)	High-priority queue, minimum delay. Time-sensitive video data is automatically sent to this queue.
Data 2 (Best Effort)	Medium-priority queue, medium throughput and delay. Most traditional IP data is sent to this queue.
Data 3 (Background)	Lowest-priority queue, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AIFS (Arbitration Inter-Frame Space)	Specifies a wait time (in milliseconds) for data frames. Valid values for AIFS are 1 through 255.
cwMin (Minimum Contention Window)	Upper limit (in milliseconds) of a range from which the initial random backoff wait time is determined. Valid values are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for cwMin has to be lower than the value for cwMax.
cwMax (Maximum Contention Window)	Upper limit (in milliseconds) for the doubling of the random backoff value. Valid values are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for cwMax has to be higher than the value for cwMin.
Max. Burst Length	Specifies (in milliseconds) the maximum burst length allowed for packet bursts on the wireless network. A packet burst is a collection of multiple frames transmitted without header information. Valid values for maximum burst length are 0.0 through 999.9.

Enable Wireless Bridging

The access point lets you build large bridged wireless networks. Select the desired access point mode for your environment:

- **Wireless Point-to-Point Bridge.** In this mode, the access point can communicate with another bridge mode wireless access point, and with wireless clients if this option is enabled.

- **Wireless Point-to-Multi-Point Bridge.** Select this only if this WN604 is the master for a group of bridge-mode wireless access points.

The other bridge-mode wireless access points has to be set to point-to-point bridge mode, using the MAC address of this WN604. They then send all traffic to this “Master”, rather than communicating directly with each other. The WN604 can associate with wireless clients if this option is enabled.

- **Client.** In this mode the access point acts as a client. It is used to extend the LAN of clients that do not have wireless connectivity.

➤ **To configure bridging on your access point:**

1. Select **Configuration > Wireless Bridge**. The following screen displays:

The screenshot shows the 'Wireless Bridge' configuration page. The 'Bridging' tab is active. The 'Enable Wireless Bridging' checkbox is checked. The 'Local MAC Address' is 00:aa:bb:cc:dd:ee. The 'Wireless Point-to-Point Bridge' radio button is selected. Below, the 'Enable Wireless Client Association' table shows one profile named 'NETGEAR-WDS-1' with 'Open System' security and the 'Enable' checkbox checked.

#	Profile Name	Security	Enable
1	NETGEAR-WDS-1	Open System	<input checked="" type="checkbox"/>

2. Select the **Enable Wireless Bridging** check box.
3. Select one of the following radio buttons:
 - Wireless Point-to-Point Bridge
 - Wireless Point to Multi-Point Bridge
 - Client mode
4. If you selected one of the first two options:
 - Select the security profile whose settings you want to edit.
 - In the Enable Wireless Association table, select the **Enable** check box for the profile you want to edit.

- Click **Edit**. The Edit Security Profile screen displays:

The screenshot shows the 'Edit Security Profile' screen. The top navigation bar includes 'Configuration', 'Monitoring', 'Maintenance', and 'Support'. Below this, a breadcrumb trail shows 'System | IP | Wireless | Security | Wireless Bridge | WPS'. The left sidebar has a 'Bridging' link. The main content area is titled 'Edit Security Profile'. It contains two sections: 'Profile Definition' with fields for 'Profile Name' (NETGEAR-WDS-1) and 'Remote MAC Address'; and 'Authentication Settings' with dropdowns for 'Network Authentication' (Open System) and 'Data Encryption' (None). At the bottom right are 'BACK', 'CANCEL', and 'APPLY' buttons.

- Click **Back** to return to the previous screen and enable the profile.
- If you selected **Client**:
 - MAC Clone. This option displays only in client mode. Use it to configure a new MAC address on the AP client if desired.**
 - MAC Clone Address.** If the MAC Clone option has been enabled, enter the new MAC address in hexadecimal format. It is used by the client in place of its default physical address.
- Click **Apply**.

The following sections help you to physically configure your access point as a point-to-point bridge or a point-to-multi-point bridge.

Configure a Point-to-Point Bridge

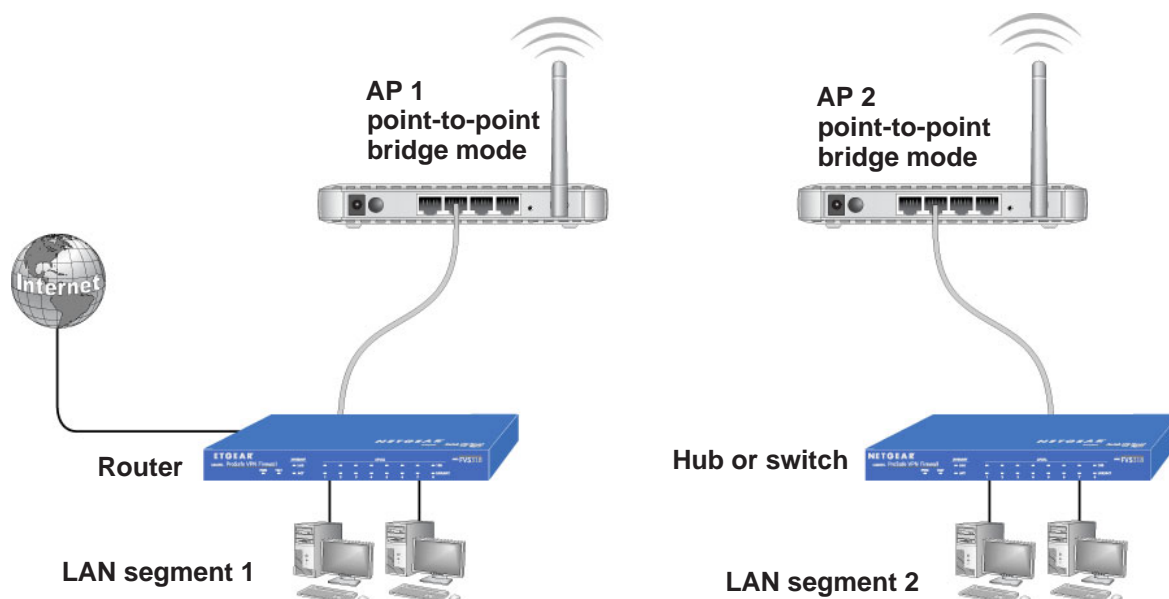


Figure 5. Wireless point-to-point bridge setup

➤ **To configure a point-to-point bridge:**

1. Select **Configuration > Wireless Bridge > Bridging**. The Bridging screen displays.
2. Configure the first access point (AP 1) on LAN segment 1 in point-to-point bridge mode.
3. Configure AP 2 on LAN segment 2 in point-to-point bridge mode.

AP 1 needs to have AP 2's MAC address in its Remote MAC Address field, and AP 2 needs to have AP 1's MAC address in its Remote MAC Address field.

4. Configure and verify the following parameters for both access points:
 - Verify that the LAN networks of the access points are both configured to operate in the same LAN network address range as the LAN devices.
 - Both use the same ESSID, channel, authentication mode, if any, and security settings if security is in use.
5. Click **Apply** to save your settings.
6. Verify connectivity across the LAN 1 and LAN 2.

A computer on either LAN segment should be able to connect to the Internet or share files and printers of any other PCs or servers connected to LAN segment 1 or LAN segment 2.

Configure a Point-to-Multi-Point Wireless Bridge

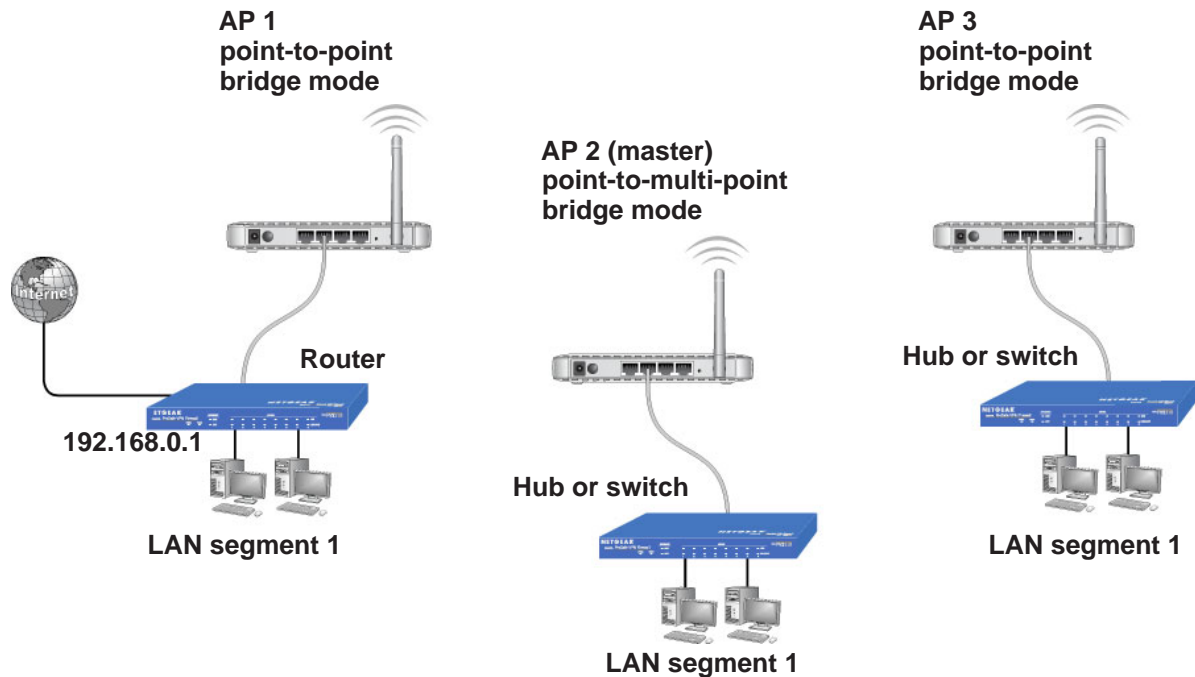


Figure 6. Wireless point-to-multipoint bridge setup

➤ **To configure a point-to-multi-point wireless bridge:**

1. Select **Configuration > Wireless Bridge > Bridging**. The Bridging screen displays.
2. Configure the operating mode of the access points.
 - Configure the first access point (AP 1) on LAN segment 1 in point-to-point bridge mode with the remote MAC address of AP 2.
 - Because it is in the central location, configure AP 2 on LAN segment 2 in point-to-multi-point bridge mode. The MAC addresses of the adjacent APs are required in AP 2.
 - Configure AP 3 on LAN 3 in point-to-point bridge mode with the remote MAC address of AP 2.
3. Verify the following parameters for all access points:
 - Verify that the LAN networks of the access points are configured to operate in the same LAN network address range as the LAN devices.
 - Only one access point is configured in point-to-multi-point bridge mode, and all the others are in point-to-point bridge mode.
 - All access points have to be on the same LAN. That is, all the APs LAN IP address must be in the same network.
 - If using DHCP, for all WN604 Wireless Access Points, in the IP Settings section, , DHCP Client should be enabled so that APs obtain IP addresses automatically.
 - All access points use the same SSID, channel, authentication mode, if any, and encryption in use.

- All point-to-point access points need to have the AP 2 MAC address in their Remote AP MAC address fields.
4. Verify connectivity across the LANs.
 - A computer on any LAN segment should be able to connect to the Internet or share files and printers with any other PCs or servers connected to any of the three LAN segments.
 - Wireless stations can connect to the access points in the preceding illustration. If you require wireless stations to access any LAN segment, you can add additional access points configured in wireless access point mode to any LAN segment.
 5. Click **Apply** to save your settings.

Note: You can extend this multi-point bridging by adding additional access points configured in point-to-point mode for each additional LAN segment. Furthermore, you can extend the range of the wireless network with NETGEAR wireless antenna accessories.

This chapter includes the following sections:

- *Troubleshooting with the LEDs*
- *Cannot Access the Internet or the LAN Wirelessly*
- *Cannot Connect to the Access Point to Configure It*
- *Time-Out Error*

Troubleshooting with the LEDs

You can use the LEDs on the front panel of the access point for troubleshooting.

All LEDs Are Off

It takes a few seconds for the Power LED to light up. Wait a minute and check the Power LED again.

If the access point has no power.

- Make sure the power adapter is connected to the access point..
- Make sure the power adapter is connected to a functioning power outlet. If it is in a power strip, make sure the power strip is turned on. If it is plugged directly into the wall, verify that it is not a switched outlet.
- Make sure you are using the correct NETGEAR power adapter supplied with your access point.

WiFi LED Is Off

The wireless radio is turned off or the antenna is not working. There are two ways to turn off the wireless radio--the Wireless On/Off button on the side of the access point, and the Schedule Wireless Radio feature.

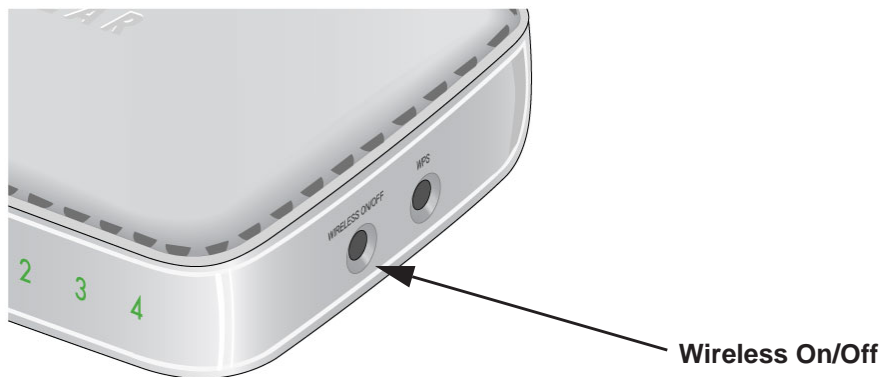


Figure 7. You can use the Wireless On/Off button to control the wireless radio

For information about the Schedule Wireless Radio feature, see [Schedule the Wireless Radio](#) on page 46.

Check the following:

1. Make sure that the wireless radio is turned on. If it is, and the WiFi LED stays off, disconnect the access point from its power source and then plug it in again.
2. Make sure the antenna is securely connected to the access point.
3. Contact NETGEAR technical support if the WiFi LED remains off.

LAN LED Is Off

There is a hardware connection problem .Check these items:

- Make sure the cable connectors are securely plugged in at the access point and the network device (hub, switch, or router). A switch, hub, or router has to be installed between the access point and the Ethernet LAN or broadband modem.
- LAN LED does not light up if there is a 10 Mbps link. In such cases, the LAN LED blinks if there is activity.
- Make sure the connected device is turned on.
- Be sure the correct cable is used. Use a standard Category 5 Ethernet patch cable. If the network device has Auto Uplink™ (MDI/MDIX) ports, you can use either a crossover cable or a normal patch cable.

Cannot Access the Internet or the LAN Wirelessly

There is a configuration problem. Check these items:

- You might not have restarted the computer with the wireless adapter to have TCP/IP changes take effect. Restart the computer.
- The computer with the wireless adapter might not have the correct TCP/IP settings to communicate with the network. Restart the computer and check that TCP/IP is set up correctly for that network. The usual setting for Windows network properties is to obtain an IP address automatically.”
- The access point's default values might not work with your network. Check the access point's default configuration against the configuration of other devices in your network.

Cannot Connect to the Access Point to Configure It

Check these items:

- The access point is correctly installed, LAN connections are OK, and it is powered on. Check that the LAN port LED is green to verify that the Ethernet connection is OK.
- The default configuration of the WN604 is for a static IP address of 192.168.0.100 and a subnet mask of 255.255.255.0 with DHCP disabled. Make sure your network configuration settings are correct.
- If you are using the NetBIOS name of the access point to connect, ensure that your computer and the access point are on the same network segment or that there is a WINS server on your network.
- If your computer is set to obtain an IP address automatically (DHCP client), restart it.
- If your computer uses a fixed (static) IP address, ensure that it is using an IP address in the range of the WN604. The access point default IP address is 192.168.0.100, and the default subnet mask is 255.255.255.0.

Time-Out Error

If you get a time-out error when you enter a URL or IP address, try these suggestions.

- Check to see if other PCs work. If they do, ensure that your PC's TCP/IP settings are correct. If using a fixed (static) IP address, check the subnet mask, default gateway, DNS, and IP addresses.
- If the PCs are configured correctly, but still not working, ensure that the access point is connected and turned on. Connect to it and check its settings. If you cannot connect to it, check the LAN and power connections.
- If the access point is configured correctly, check your Internet connection to make sure that it is working correctly.
- Try again.

A Supplemental Information



This appendix includes the following sections:

- *Factory Default Settings*
- *Technical Specifications*


Factory Default Settings

The Reset button has two functions:

- **Reboot.** When pressed and released quickly, the access point restarts.
- **Reset to Factory Defaults.** This button can also be used to clear *all* data and restore *all* settings to the factory default values.

➤ **To clear all data and restore the factory default values:**

1. Power off the access point and power it back on.
2. Use something with a small point, such as a pen, to press the **Reset** button in and hold it in for at least 5 seconds until the WiFi LED blinks rapidly.

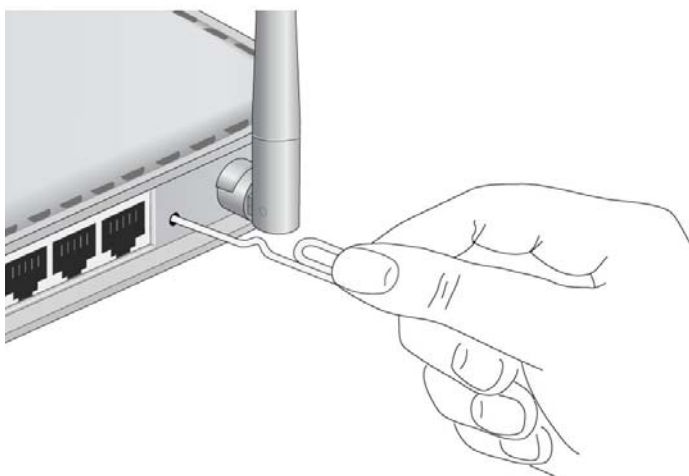

3. Release the **Reset** button.
 - Your device returns to the factory configuration settings shown in the following table.

Table 4. Access point default onfiguration settings

Feature	Default setting
Login URL	www.routerlogin.net or www.routerlogin.com
User name (case-sensitive) printed on product label	admin
Password (case-sensitive) printed on product label	password
Static IP address	192.168.0.100
Ethernet MAC address	See bottom label.
Port speed	10/100
Subnet mask	255.255.255.0
DHCP client	Disabled

Table 4. Access point default onfiguration settings (continued)

Feature	Default setting
Time zone	USA-Pacific
Operating mode	Access point
Access point name	netgearxxxxxx where xxxxxx are the last 6 digits of the wireless access point "Ethernet" MAC address.
Wireless communication	Enabled
Wi-Fi Protected Setup (WPS)	Disabled
Wireless network name (SSID)	NETGEAR_11ng
Broadcast network name (SSID)	Enabled
Security	Disabled
Transmission speed	1Best ^a
Country/Region	Varies by region
Scheduled wireless On/Off	Disabled
80211.b/bg/ng radio frequency channel	Auto
Output power	Full
Wireless card access List	All wireless stations allowed
WMM support	Enabled

a. Maximum wireless signal rate derived from IEEE Standard 802.11 specifications. Actual throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, can lower actual data throughput rate.

Technical Specifications

Table 5. WN604 Technical Specifications

Feature	Specification
802.11g data rates	1, 2, 5.5, 11, 12, 18, 24, 36, 38, 54, & 108 Mbps (Auto-rate capable)
802.11ng data rates	Data rates for channel width = 20 MHz and guard Interval = short (400ms): Best, 7.2 Mbps, 14.4 Mbps, 21.7 Mbps, 28.9 Mbps, 43.3 Mbps, 57.8 Mbps, 65 Mbps, 72.2 Mbps
	Data Rates for Channel Width = 20 MHz and guard Interval = long (800 ms): Best, 6.5 Mbps, 13 Mbps, 19.5 Mbps, 26 Mbps, 39 Mbps, 52 Mbps, 58.5 Mbps, 65 Mbps
	Data Rates for channel width = 40 MHz and guard Interval = short: Best, 15 Mbps, 30 Mbps, 45 Mbps, 60 Mbps, 90 Mbps, 120 Mbps, 135 Mbps, 150 Mbps
	Data Rates for channel width = 40 MHz and guard Interval = long: Best, 13.5 Mbps, 27 Mbps, 40.5 Mbps, 54 Mbps, 81 Mbps, 108 Mbps, 121.5 Mbps, 135 Mbps
Operating frequencies	2.412–2.462 GHz (US) 2.457–2.462 GHz (Spain) 2.412–2.484 GHz (Japan)2.457–2.472 GHz (France) 2.412–2.472 GHz (Europe ETSI)
802.11 b/bg/ng encryption	64-bits, 128-bit and 152-bit WEP, AES, TKIP data encryption
Network management	Web-based configuration and status monitoring
Maximum clients	Limited by the amount of wireless network traffic generated by each node; maximum 20 supported.
Status LEDs	Power, WPS, WiFi, Ethernet LAN (4)
Power adapter	12V DC, 1 A
Electromagnetic compliance	FCC Part 15 Class B and Class E, CE, and C-TICK
Environmental specifications	Operating temperature: 0 to 40° C; Storage temperature: –20 to 70° C Operating humidity: 10–90% RH; Storage humidity: 5–95% RH

B Notification of Compliance



NETGEAR Wireless Routers, Gateways, APs

Regulatory Compliance Information

Note: This section includes user requirements for operating this product in accordance with National laws for usage of radio spectrum and operation of radio devices. Failure of the end-user to comply with the applicable requirements may result in unlawful operation and adverse action against the end-user by the applicable National regulatory authority.

Note: This product's firmware limits operation to only the channels allowed in a particular Region or Country. Therefore, all options described in this user's guide may not be available in your version of the product.

Europe – EU Declaration of Conformity



Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

EN300 328 (2.4Ghz), EN301 489-17 EN60950-1

For complete DoC, visit the NETGEAR EU Declarations of Conformity website at:

http://support.netgear.com/app/answers/detail/a_id/11621

EDOC in Languages of the European Community

Language	Statement
Cesky [Czech]	<i>NETGEAR Inc.</i> tímto prohlašuje, že tento Radiolan je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]	Undertegnede <i>NETGEAR Inc.</i> erklærer herved, at følgende udstyr Radiolan overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erklärt <i>NETGEAR Inc.</i> , dass sich das Gerät Radiolan in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab <i>NETGEAR Inc.</i> seadme Radiolan vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Wireless N150 Access Point WN604

English	Hereby, <i>NETGEAR Inc.</i> , declares that this Radiolan is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente <i>NETGEAR Inc.</i> declara que el Radiolan cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>NETGEAR Inc.</i> ΔΗΛΩΝΕΙ ΟΤΙ Radiolan ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Français [French]	Par la présente <i>NETGEAR Inc.</i> déclare que l'appareil Radiolan est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano [Italian]	Con la presente <i>NETGEAR Inc.</i> dichiara che questo Radiolan è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo <i>NETGEAR Inc.</i> deklarē, ka Radiolan atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo <i>NETGEAR Inc.</i> deklaruoja, kad šis Radiolan atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart <i>NETGEAR Inc.</i> dat het toestel Radiolan in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]	Hawnhekk, <i>NETGEAR Inc.</i> , jiddikjara li dan Radiolan jikkonforma mal-htgijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]	Alulírott, <i>NETGEAR Inc.</i> nyilatkozom, hogy a Radiolan megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym <i>NETGEAR Inc.</i> oświadcza, że Radiolan jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	<i>NETGEAR Inc.</i> declara que este Radiolan está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]	<i>NETGEAR Inc.</i> izjavlja, da je ta Radiolan v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	<i>NETGEAR Inc.</i> týmto vyhlasuje, že Radiolan spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]	<i>NETGEAR Inc.</i> vakuuttaa täten että Radiolan tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Wireless N150 Access Point WN604

Svenska [Swedish]	Härmed intygar <i>NETGEAR Inc.</i> att denna Radiolan står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska [Icelandic]	Hér með lýsir <i>NETGEAR Inc.</i> yfir því að Radiolan er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	<i>NETGEAR Inc.</i> erklærer herved at utstyret <i>Radiolan</i> er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 - 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

FCC Requirements for Operation in the United States

FCC Information to User

This product does not contain any user serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals.

FCC Guidelines for Human Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Declaration of Conformity

We, NETGEAR, Inc., 350 East Plumeria Drive, San Jose, CA 95134, declare under our sole responsibility that the Wireless N150 Access Point WN604 complies with Part 15 Subpart B of FCC CFR47 Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC Radio Frequency Interference Warnings & Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an electrical outlet on a circuit different from that which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- For product available in the USA market, only channel 1~11 can be operated. Selection of other channels is not possible.
- This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (Wireless N150 Access Point WN604) does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada

Industry Canada

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Caution:

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

NOTE IMPORTANTE: Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

GPL License Agreement

GPL may be included in this product; to view the GPL license agreement go to

<ftp://downloads.netgear.com/files/GPLnotice.pdf>.

For GNU General Public License (GPL) related information, please visit

http://support.netgear.com/app/answers/detail/a_id/2649.

Interference Reduction Table

The table below shows the Recommended Minimum Distance between NETGEAR equipment and household appliances to reduce interference (in feet and meters).

Household Appliance	Recommended Minimum Distance (in feet and meters)
Microwave ovens	30 feet / 9 meters
Baby Monitor - Analog	20 feet / 6 meters
Baby Monitor - Digital	40 feet / 12 meters
Cordless phone - Analog	20 feet / 6 meters
Cordless phone - Digital	30 feet / 9 meters
Bluetooth devices	20 feet / 6 meters
ZigBee	20 feet / 6 meters

