

Samsung GALAXY S IITM
SkyrocketTM

4 G L T E S M A R T P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING

THERE TO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Toll Free Tel:

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2011 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Phone? For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: <http://www.samsung.com/us/support>

Nuance[®], VSuite™, T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

 and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from SRS Labs, Inc.

, DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (tap **Applications > Settings > About phone > Legal information > License settings > DivX[®] VOD > Register**).

Go to vod.divx.com for more information on how to complete your registration.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, AT&T wants you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, AT&T offers privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, AT&T's privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected.

Your phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit <http://www.att.com/privacy>.



Your phone features earSmart™, an intelligent voice processor that delivers a clear voice experience, allowing you to **hear and be heard**™ in nearly any environment. earSmart technology uses the science of human hearing to distinguish sounds, identify your voice and suppress surrounding noise, for clear conversations just about anywhere.

How Does It Work?

- The earSmart voice processor in your phone captures your voice and all the sounds around you.
- Working like the human ear, it processes and distinguishes these sounds, isolates your voice conversation, and removes background noise - from both ends of a call.
- It also automatically equalizes and adjusts voice volume so you can hear and talk naturally, even in the noisiest places.
- With earSmart technology, you can talk where you want, and have clear conversations for mobile calls, video chats, even speakerphone calls, without worrying about surrounding noise.

Table of Contents

Section 1: Getting Started6

Setting Up Your Phone	6
Charging a Battery	9
Switching the Phone On or Off	11
Locking and Unlocking the Touch Screen	11
Setting up your Phone with Ready2Go	12
Creating a Samsung Account	12
Creating a New Google Account	13
Resetting your Google Account Password	13
Setting Up Visual Voicemail	14
Android System Recovery	16
Safe Mode	17
Troubleshooting	17

Section 2: Understanding Your Phone18

Features of Your Phone	18
Front View of Your Phone	19
Side Views of Your Phone	20
Rear View of Your Phone	21
Display Layout	22
Menu Navigation	33

Customizing Your Home Screen	37
Notification Bar	43
Memory Card	44

Section 3: Call Functions46

Displaying Your Phone Number	46
Making a Call	46
Making a Call Using Speed Dial	47
Making a Call from the Address Book	48
Answering a Call	48
Dialing Options	49
Call Log	49
Call Duration	52
Options During a Call	52

Section 4: Entering Text57

Text Input Methods	57
Entering Text Using the Android Keyboard	57
Changing the Text Input Mode - Keypad	58
Using ABC Mode	58
Using Symbol/Numeric Mode	59
Show Correction Suggestions	59

Entering Text Using the Samsung Keypad	60	Qik Lite	81
Entering Text Using Swype	60	Video player	82
Google Voice Typing	61	Gallery	82
Section 5: Contacts and Your Address Book	62	Camera	84
AT&T Address Book Activation	62	Using the Camera	84
Adding a New Contact	62	Camera Options	86
Editing an Existing Contact	65	Using the Camcorder	90
Using Contacts	65	Camcorder Options	91
Joining Contacts	66	Photo editor	95
Synchronizing Accounts	68	Section 7: Messaging	97
Address Book Options	68	Types of Messages	97
Groups	70	Creating and Sending Messages	97
Address Book Favorites	71	Message Options	98
Managing Address Book Entries	71	Viewing New Received Messages	100
Section 6: Multimedia	74	Deleting Messages	101
Media Hub	74	Message Search	101
MOG Music	76	Messaging Settings	102
Music	76	Using Email	103
Using Playlists	78	Using Gmail	104
Play Music	79	Google Talk	106
Movies	80	Google +	106
Live TV	80	Messenger	107

Section 8: Changing Your Settings	108
Accessing Settings	108
Wi-Fi Settings	108
Bluetooth settings	109
Data Usage	109
More... Settings	110
Call Settings	114
Sound Settings	118
Display Settings	119
Power Saving Mode	120
Storage	121
Battery	122
Applications	122
Accounts and Sync	123
Location Services	124
Security	125
Language and Input	129
Backup and Reset	135
Date and Time	136
Accessibility	136
Motion	137
Developer Options	138
About Phone	139

Section 9: Connections	142
Browser	142
Wi-Fi	149
Bluetooth	152
PC Connections	156
NFC	157
Section 10: Applications	158
AllShare	158
Amazon Kindle	159
AT&T Code Scanner	159
AT&T FamilyMap	160
AT&T Navigator	161
AT&T Ready2Go	163
AT&T Smart Wi-Fi	163
Calculator	163
Calendar	163
Camera	165
Clock	165
Contacts	168
Downloads	168
Facebook	169
Gallery	169
Gmail	169

Google +	169
IM	169
Kies air	170
Latitude	170
Live TV	171
Maps	171
Media Hub	173
Memo	173
Messaging	174
Messenger	174
Mini diary	174
MOG Music	175
Movies	176
Music Player	176
My files	176
myAT&T	176
Navigation	177
News & Weather	179
NFS Shift	179
Photo Editor	180
Places	180
Play Books	180
Play Movies	180

Play Music	181
Play Store	181
Qik Lite	182
Quickoffice	182
Search	182
Settings	182
Social Hub	182
Talk	183
Task	183
Task manager	184
Video player	184
Visual Voicemail	184
Voice command	185
Voice recorder	185
Voice talk	186
YouTube	186
YP	187

Section 11: Health and Safety

Information	189
Exposure to Radio Frequency (RF) Signals	189
Specific Absorption Rate (SAR) Certification Information	194
FCC Part 15 Information to User	195

Smart Practices While Driving	196	USE OF INFORMATION WE COLLECT	232
Battery Use and Safety	197	DISCLOSURE OF INFORMATION TO	
Samsung Mobile Products and Recycling	199	THIRD PARTIES	233
UL Certified Travel Charger	200	CHILDREN	234
Display / Touch-Screen	201	SECURITY OF THE INFORMATION	
GPS & AGPS	201	WE COLLECT	234
Emergency Calls	202	CHAT ROOMS AND OTHER PUBLIC AREAS	234
Care and Maintenance	203	CONTESTS AND SWEEPSTAKES	235
Responsible Listening	204	ACCURACY OF THE INFORMATION	
Operating Environment	206	WE COLLECT	235
FCC Hearing Aid Compatibility (HAC)		CHANGES TO PRIVACY POLICY	236
Regulations for Wireless Devices	208	Social Hub End User License Agreement	236
Restricting Children's Access to Your		Section 13: Samsung Product	
Mobile Device	210	Registration	241
FCC Notice and Cautions	210	Index	242
Other Important Safety Information	211		
Section 12: Warranty Information	213		
Standard Limited Warranty	213		
End User License Agreement for Software	218		
Social Hub	223		
LIMITATION OF LIABILITY	228		
Social Hub Privacy Policy	231		
INFORMATION THAT WE COLLECT	231		

Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your Voicemail.

Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD™ card slot is also located in this same internal area.

1. Remove the back cover by inserting a fingernail into the slot on the top side of your phone (1) and pulling up (2).



2. Lift the cover up and away from the phone (3).




Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

- Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place.
 - Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

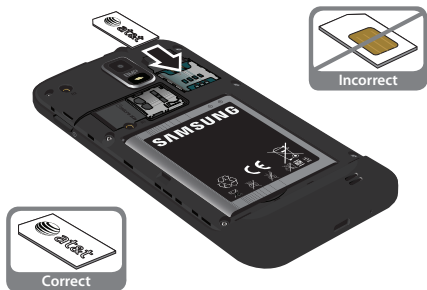

Note: If the card is not inserted correctly, the phone will not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

Installing and Removing the Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This type of memory card is designed for use with this mobile phone and other devices.

Note: Your phone has been tested to support up to a 32GB memory card.

1. Push the microSD card into the slot until it clicks (as shown).

- Make sure the microSD's gold contact pins face downward and the card is securely inserted.



2. To remove, push on the memory card until it clicks and is released. Then grasp the memory card and remove it from the phone.

For more information on Memory Cards, see “Memory Card” on page 44.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
2. Gently press down to secure the battery (2).



Installing the Back Cover

1. Place the battery cover onto the back of the phone (1) and press down (2).



2. Press all along the edge of the back cover until you have a secure seal.



Note: Make sure the battery is properly installed before switching on the phone.

Charging a Battery

Your device is powered by a rechargeable Li-ion battery. The Travel Charger that is used to charge the battery, is included with your device. Use only Samsung-approved batteries and chargers.


Note: Long backlight settings, searching for service, vibrate mode, web browser use, and other variables may reduce the battery's talk and standby times.

Although you can use the phone while the battery is charging, doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Using the Travel Charger

Important! Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.

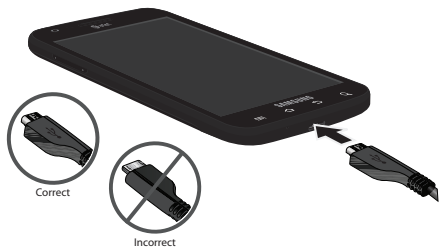



1. Plug the flat end of the Travel Charger into the Power/Accessory Interface connector and the other end into a standard AC wall outlet.
2. When charging is finished, remove the flat end from the interface connector jack on the phone.

Warning! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. see “*Standard Limited Warranty*” on page 213.


Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color () indicates a full charge.

When the battery level becomes too low, the phone automatically turns off.



Switching the Phone On or Off

1. Press and hold  (on the upper right side of the phone) until the phone switches on.
2. Sweep your finger across the screen to unlock the phone.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to “*Changing Your Settings*” on page 108.

3. To switch off the phone, press and hold  until the **Phone options** screen displays.
4. Tap **Power off**, then tap **OK** to switch off the phone.



Locking and Unlocking the Touch Screen

1. Press  to lock the touch screen.
2. Press  again to display the main screen then sweep your finger across the screen to unlock it.

Setting up your Phone with Ready2Go


When you turn on your phone for the first time, you will be prompted to setup the AT&T Ready2Go feature.

AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features.

1. When the **Fast & Easy Phone Set-Up** screen displays, tap **Select Language** if you want to change the default language.
2. Touch **Get Started** to begin.
– or –
Touch **Cancel** to set up your phone later. You can access Ready2Go by tapping **Applications**  → **AT&T Ready2Go** .
3. Read and follow the instructions on each screen.

Creating a Samsung Account

An active Samsung account is required to begin accessing applications such as AllShare. The account setup instructions below only need to be performed once.



1. From the home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically. For more information, refer to “*Notification Bar*” on page 43.
2. Tap  **Samsung account**.
3. Tap **Create new account**.
4. Tap **Terms and conditions** to read them and tap **OK**.
5. Tap the **I accept all the terms above** checkbox.
6. Tap **Privacy policy** and read the policy and tap **OK**.
7. Tap **Agree**.
8. Enter the required information and tap **Sign up**.
9. At the **Samsung account** screen, tap **Go to Mailbox**.

10. At the Email screen, follow the on-screen instructions to sign onto the email account that you entered previously. For more information, refer to “Using Email” on page 103.
11. Open the **Activate your account** E-mail that was sent to you and tap the link to verify your account.
12. At the **Account Verification** screen, tap **Confirm**.
13. At the **Samsung account** screen, enter your E-mail and Password and tap **Sign in**.

Creating a New Google Account

In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, Google applications will always be in sync between your phone and computer.

After you start your phone for the first time, follow these steps:

1. From the Home screen, tap **Applications**  → **Gmail** .

The **Add a Google Account** screen displays.

2. Tap **New** to continue.

3. Follow the on-screen instructions to create Google Account.

Note: If you already have a Google account, you only need to sign in.


Resetting your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to reset it:

1. From your computer, use an Internet browser to navigate to <http://google.com/accounts>.
2. Once the URL loads, click on the **Can't access your account?** link.
3. Enter your Email address and click **Submit**.
4. Follow the on-screen instructions to reset your password.

Setting Up Visual Voicemail

AT&T Visual Voicemail provides an email-like inbox that lets you listen to voicemail messages in any order that you choose. For more information, visit <http://www.att.com/myatt>.

1. From the Home screen, tap  → **Visual Voicemail**



The Account Setup screen is displayed.

2. Tap **Call Voicemail**.
3. Follow the tutorial to setup your language, create a password, select a greeting, and record your name.
4. when you are finished, tap * to disconnect.
The AT&T Visual Voicemail **Welcome** screen displays.
5. Tap **What is Visual Voicemail?** to read more about this feature.
6. Tap **Set password**.
7. Enter the password that you initially setup in **step 3** and tap **Continue**.
8. Tap **Setup a personal greeting** if you did not do this previously.


9. The **Add a Home screen shortcut** checkbox is checked by default and will add a Visual Voicemail shortcut to your Home screen. Tap again to uncheck if you do not want a shortcut.

10. Tap **Finish**.

The Visual Voicemail screen is displayed.

Note: These steps may be different depending on your network.

Accessing Your Voicemail


1. From the Home screen, tap  → **Visual Voicemail**



The Visual Voicemail screen is displayed.


2. Tap the voicemail that you would like to view or listen to.
– or –
Tap **Autoplay** to hear all of your voicemails.
3. Tap **Call Back** to call the number that left the voicemail, or tap **Delete** to delete the voicemail.

4. Touch and drag the slider to fast-forward or reverse the voicemail playback.

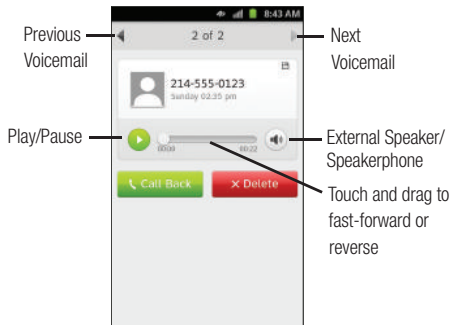




5. After selecting a voicemail, press  to access the following options:
 - **Send text:** allows you to send a text message to the number that left the voicemail.
 - **Share:** allows you to share the voicemail via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Save:** saves the voicemail.

- **Export to file:** exports the voicemail to your Music folder in .amr format.
- **Add to contacts:** adds the number that left the voicemail to your contacts.
- **Copy message text:** allows you to copy text message if you have the transcription feature.

6. From the Visual Voicemail screen press  to access the following options:

- **Autoplay:** allows you to hear all of your voicemails in sequence.
- **Refresh:** refreshes the screen.
- **Settings:** allows you to modify voicemail settings. For more information, refer to “*Visual Voicemail Settings*” on page 15.
- **Delete all:** deletes all voicemail messages.

Visual Voicemail Settings

- To access Visual Voicemail Settings, from the Home screen, tap  → **Visual Voicemail**  →  → **Settings**.
- **Voicemail greeting:** allows you to set or change your voicemail greeting type.

- **Auto-save messages:** allows you to save a local copy of newly received voicemail messages.
- **Change password:** allows you to change your Visual Voicemail password.
- **Check for updates:** automatically check for application updates in the Android Market.
- **Notifications:** displays voicemail notifications in the status bar.
- **Vibrate:** allows you to be notified of new voicemail by turning on vibration. Select Always, Only when silent, or Never.
- **Application version:** displays the version of the Visual Voicemail application.

Accessing Your Voicemail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key on the phone you are using.
3. Enter your passcode.


Android System Recovery

Android System Recovery is used for Google updates but the average user will never need to perform a system recovery.

Note: If you entered this menu by mistake, use the Volume Up/Down keys to select **reboot system now**, then press the Power key. Your phone will then continue to boot up.

To enter the Android System Recovery mode, follow these steps:



1. With the phone turned off, press the Power key and Volume Up/Down keys at the same time until the phone switches on.
2. Once the Samsung logo appears, release the Power key while continuing to press the Volume Up/Down keys.
3. Continue to press the Volume Up/Down keys for at least 8 seconds, until Recovery mode is launched and the Android System Recovery screen is displayed.
4. Release the Volume Up/Down keys.

5. The following options are available:
 - **reboot system now:** this option turns on your phone.
 - **apply update from external storage:** this option allows you to apply updates from your memory card to your phone.
 - **wipe data/factory reset:** deletes all data from the phone except pictures and videos. For more information, refer to “*Factory Data Reset*” on page 135.
 - **wipe cache partition:** allows you to delete all cache data such as log files.
 - **apply update from cache:** allows you to update your phone’s software once it has been placed in the cache after you have performed a Software update from the Settings menu.
6. Use the Volume Up/Down keys to scroll up or down, then press the power key () to make a selection.

Safe Mode

You can boot your phone into Safe Mode if you wish to troubleshoot whether or not added applications are causing problems with the device. Safe mode will only load basic system software.

1. Make sure your phone is turned off.

2. Press and hold the power key () to boot up your device.
3. After the start-up animation begins to display, rapidly tap the  key until the Lock screen displays. When the Lock screen is displayed, **Safe mode** is displayed in the lower left corner of the screen.

Troubleshooting

If your device has fatal errors, hangs up, or freezes, you may need to reset the device to regain functionality.

- If your device is frozen and unresponsive, press and hold the Power/Lock Key for 8 to 10 seconds.

For more help, see “*Android System Recovery*” on page 16.

Section 2: Understanding Your Phone

This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone and provides information on using a memory card.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.

- 4G LTE network with 1.5 gigahertz dual core processor
- Android v 4.0.4, Ice Cream Sandwich Platform
- Touch screen provides quick response to a variety of in-phone menus and options including applications and seven home screens
- Virtual (on-screen) QWERTY keyboard
- Ready access to the Internet
- Built-in Bluetooth and advanced Wi-Fi® technology
- Brilliant 4.8" HD SuperAMOLED display
- 8 Megapixel camera and camcorder with 2 Megapixel Front Facing camera
- USB Tethering-capable
- Mobile Hotspot Capability
- AT&T GPS Navigation functionality provides real-time navigation
- HSDPA 7.2 mbps high speed download capability
- 16 GB built-in memory (on-board)
- Up to 32 GB expandable memory slot
- Corporate and Personal Email
- Sync and update social network applications
- Over 250,000 Apps available to download from the Play Store™
- Access to Movies and TV Shows with Samsung Media Hub
- Google Video Chat via Google Talk
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Visual Voicemail
- HD Video Player 720p
- DivX Certified® to play DivX® video up to HD 1080p, including premium content
- AllShare™ to share your media content across DLNA certified devices

Front View of Your Phone





- 1. Front facing camera:** allows you to take pictures of yourself when you set the camera shooting mode to Self shot.
- 2. Proximity and Light sensors:** uses the ambient light level to adjust keypad access. If the light path is blocked, for example, when holding the phone close to your ear, the touch screen will turn off. Also used for some Camera settings.
- 3. Application icons:** you can place shortcuts to your favorite applications on the Home screen.
- 4. Primary shortcuts:** allows quick access to important features such as Phone, Email, Web, and Applications. For more information, refer to “*Primary Shortcuts*” on page 22.
- 5. Menu key:** allows you to access sub-menus with additional options for different features and applications such as Home screen, Phone, Contacts, Messaging, and Web.

6. **Home key:** allows you to return to the main Home screen from any Home screen or menu. Press and hold to display your recently used applications and a shortcut to the Task manager.
7. **Back key:** allows you step backwards when navigating a menu or web page.
8. **Search key:** allows you to access the Google Search feature where you can search for items on the internet.
9. **Home screen indicator:** shows which Home screen is presently displayed.
10. **Home screen tips Widget:** displays tips to using your home screen. Tap the text area to see 6 different tips.
11. **Google Quick Search bar:** a shortcut to Google Search that allows you to search for items on the internet.
12. **Indicator icons:** shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, unread Emails, missed calls, etc.
13. **External speaker:** allows you to hear the caller.

Side Views of Your Phone



1. **3.5mm Headset jack:** allows you to plug in headphones.
2. **Volume keys:** allow you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key () to mute the ring tone.
3. **Microphone:** allows other callers to hear you when you are speaking to them. This microphone is also used when you are using voice related applications.
4. **Power/Accessory Interface connector:** allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
5. **Power/Lock key:** () lets you power your phone on and off. Also allows you to lock or unlock the touch screen. For more information on locking your phone, see *“Locking and Unlocking the Phone”* on page 34.
6. **Microphone:** allows other callers to hear you when you are using the speakerphone.

Rear View of Your Phone







1. **Camera lens:** is used to take pictures and shoot videos.
2. **External speaker:** allows you to hear when the Speakerphone is turned on.
3. **Flash:** is used to provide adequate light when taking pictures in dark places.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to application icons. For more information, refer to “*Front View of Your Phone*” on page 19.

Primary Shortcuts

There are four non-movable Application Shortcuts that appear at the bottom of all Home screens. The default shortcuts are:

- **Phone**  for dialing a number.
- **Email**  for sending and receiving email messages.
- **Web**  for surfing the Internet.
- **Applications**  for accessing the applications on your phone.

While viewing the Applications Menu, the Application shortcut changes to **Home** , which returns you to the Main screen.

You can change the Phone, Email, and Web application shortcuts to any icon that is displayed in the Applications menu.

For more information, refer to “*Adding and Removing Primary Shortcuts*” on page 38.

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area.

Note: In-call indicator icons display in the notification bar only when you close the main call screen during the active call.



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Displays when there is no SIM card in the phone.



Displays when the contents of the microSD card are being scanned.



Displays when the External SD card is being prepared for mounting to the device. This is required for communication with the External SD card.



Displays when there is no network available.



Displays when there is a system error or alert. Also displays when the SD card has been improperly removed.



Displays when a call is in progress and you exit the call screen.



Displays when a call is on hold and you exit the call screen.



Displays when the speakerphone is on and you exit the call screen.



Displays when an active call is routed through a Bluetooth headset. Displayed in the Status bar when the current call is minimized.



Displays when a call has been missed.



Displays when a call has been muted.



Displays when Call forwarding is set to Always forward. For more information, refer to “*Call Settings*” on page 114.



Displays when you phone is set to automatically reject all calls.



Displays your battery charge level. Icon shown is fully charged.



Displays when your battery is charging. Also displays battery charge level.



Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shutdown.



Displays when your connection to an EDGE network is active.



Displays when your phone is communicating with the EDGE network.



Displays when your connection to a UTMS, HSDPA, HSPA, or HSPA+ network is active.



Displays when your phone is communicating with the UTMS, HSDPA, HSPA, or HSPA+ network.



Displays when your connection to a 4G LTE network is active.



Displays when your phone is communicating with the 4G LTE network.



Displays when your phone is downloading or has downloaded a file. It will blink green when it is installing.



Displays when the an outbound file transfer is in progress.



Displays when a Market download has successfully been installed.



Displays when updates are available for download.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays when the phone is tethered via a supported USB cable connection.



Displays when a new text or multimedia message is received.



Displays when a new Voicemail is received.



Displays when Email is received.



Displays as a reminder to configure your phone using the AT&T Ready2Go application or to setup your Google Account.



Displays when the time and date for a Calendar Event has arrived. For more information, refer to “*Calendar*” on page 163.











Displays when you set an alarm to ring at a specified time. For more information, refer to “*Alarm*” on page 165.










Displays when Silent mode is set to Mute.



Displays when Silent mode is set to Vibrate.

-  Displays when Bluetooth is activated.
-  Displays when a Bluetooth device has been paired with the phone.
-  Displays when Bluetooth is on but is not connected to a Bluetooth device.
-  Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).
-  Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).
-  Displays when Wi-Fi Direct is active and your phone is connected to another device.
-  Displays when your phone is connected to a PC using Kies air.
-  Displays when your phone is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare application.

-  Displays when your phone has been configured as a portable Wi-Fi hotspot.
-  Displays when GPS is active and acquiring a signal.
-  Displays when Power saving mode is enabled.
-  Displays when TTY device has been inserted.
-  Displays when the keypad is active.
-  Displays when you have not yet set up a Samsung Account.
-  Displays when an emergency call is taking place.



For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 108.

Application Icons

The Application menu provides quick access to the items you use most frequently.

The following table contains a description of each application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

For information on navigating through the Applications icons, see “*Navigating Through the Application Menus*” on page 35.

1. From the Home screen, tap , then tap one of the application icons.
2. Follow the on-screen instructions.
3. To return to the Home screen, tap .

The following applications are available:



AllShare: AllShare allows your phone to stream photos, music and videos from its memory to other Digital Living Network Alliance (DLNA) certified devices. Your phone can also play digital content streamed from other DLNA certified devices. For more information, refer to “*AllShare*” on page 158.



Amazon Kindle: This application allows you to download books, magazines, and newspapers to read on your phone. For more information, refer to “*Amazon Kindle*” on page 159.



AT&T Code Scanner: AT&T Code Scanner allows you to scan 2D (QR and datamatrix codes) and 1D (UPC and EAN) barcodes found in magazines, stores, and online. For more information, refer to “*AT&T Code Scanner*” on page 159.



AT&T FamilyMap: provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private. For more information, refer to “*AT&T FamilyMap*” on page 160.



AT&T Navigator: AT&T Navigator provides you with access to real-time GPS-driven applications. These programs not only allow you to achieve turn-by-turn navigation, but also access local searches based on a variety of category parameters. For more information, refer to “*AT&T Navigator*” on page 161.



AT&T Ready2Go: AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features. For more information, refer to “*Setting up your Phone with Ready2Go*” on page 12.



AT&T Smart Wi-Fi: With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use. For more information, refer to “*AT&T Smart Wi-Fi*” on page 152.



Calculator: Using this feature you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator. For more information, refer to “*Calculator*” on page 163.



Calendar: With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary. For more information, refer to “*Calendar*” on page 163.



Camera: Use your 8.0 megapixel camera feature to produce photos in a JPEG format. For more information, refer to “*Camera*” on page 84.



Clock: The Clock application allows you to access alarms, view the World Clock, set a stopwatch, use a timer, and setup a Desk Clock. For more information, refer to “*Clock*” on page 165.



Contacts: You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group. For more information, refer to “*Contacts and Your Address Book*” on page 62.



Downloads: The Downloads application allows you to manage all of your downloads from the Market and the Browser. For more information, refer to “*Downloads*” on page 168.



Facebook: Facebook enables you to go directly to your Facebook account without accessing it through your web browser. For more information, refer to “*Facebook*” on page 169.



Gallery: The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to “*Gallery*” on page 82.



Gmail: Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to “*Using Gmail*” on page 104.



Google +: Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. For more information, refer to “*Google +*” on page 106.



IM: Instant Messaging allows you to send and receive instant messages using Windows Live Messenger, Google Talk, or Yahoo! Messenger communities. For more information, refer to “*Google Talk*” on page 106.



Kies air: Kies Air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view call logs, videos, photos, bookmarks, IMs, and even send SMS messages from your home computer. For more information, refer to “*Kies Air*” on page 157.



Latitude: With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location. For more information, refer to “*Latitude*” on page 170.



Live TV: Live TV is a subscription service that allows you to watch your favorite TV shows using your handset. For more information, refer to “*Live TV*” on page 171.



Maps: Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends. For more information, refer to “*Maps*” on page 171.



Media Hub: Samsung Media Hub is your one stop for the hottest movie and TV content. You can rent or purchase your favorite content and watch from the convenience of anywhere. For more information, refer to “*Media Hub*” on page 74.



Memo: This feature allows you to create a memo. For more information, refer to “*Memo*” on page 173.



Messaging: You can send and receive different types of messages. For more information, refer to “*Messaging*” on page 97.



Messenger: Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone. For more information, refer to “*Messenger*” on page 174.



Mini diary: The Mini diary allows you to keep a diary of your daily activities and also attach pictures. You can publish your diary entries to Facebook and MySpace. For more information, refer to “*Mini diary*” on page 174.



MOG Music: MOG Music gives you access to over 11 million songs and provides unlimited listening and unlimited downloads. For more information, refer to “*MOG Music*” on page 76.



Movies: The Movies application allows you to rent movies to watch on your phone. For more information, refer to “*Movies*” on page 80.



Music player: Music allows you to play music files that you have stored on your phone and memory card. You can also create playlists. For more information, refer to “*Music*” on page 76.



My files: My files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location. For more information, refer to “*My files*” on page 176.



myAT&T: MyAT&T allows you to manage your own AT&T account. You can review and pay your bill, check minutes and data usage, upgrade to a new device, or change your rate plan. For more information, refer to “*myAT&T*” on page 176.



Navigation: Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination. For more information, refer to “*Navigation*” on page 177.



News & Weather: Displays current news and weather for your location. For more information, refer to “*News & Weather*” on page 179.



NFS Shift: NFS (Need for Speed) Shift is a high performance racing game. You can use many different tracks in international locations with day and night driving. For more information, refer to “*NFS Shift*” on page 179.



Photo editor: The Photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture. For more information, refer to “*Photo editor*” on page 95.



Places: Places is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and more. For more information, refer to “*Places*” on page 180.



Play Books: With Google Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore. For more information, refer to “*Play Books*” on page 180.



Play Movies: The Google Movies application allows you to rent movies to watch on your phone. For more information, refer to “*Play Movies*” on page 180.



Play Music: With the Google Music application, while online, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC. For more information, refer to “*Play Music*” on page 181.



Play Store: The Google Play Store provides access to downloadable applications and games to install on your phone. For more information, refer to “*Play Store*” on page 181.



Qik Lite: Allows you to record and share live video from your device with your friends, family and your favorite social networks. For more information, refer to “*Qik Lite*” on page 81.



Quickoffice: The Quickoffice application allows you to create and save Microsoft Word and Excel documents. You can also view existing Powerpoint presentations and PDFs. For more information, refer to “*Quickoffice*” on page 182.



Search: The Google Search application is the same on-screen Internet search engine that is on the Google Search Bar on your main Home screen. For more information, refer to “*Google Search Bar*” on page 33.



Settings: This icon navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to “*Changing Your Settings*” on page 108.



Social Hub: With Social Hub, you can now easily and intuitively satisfy all of your relevant communication needs from one integrated user experience. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available. For more information, refer to “*Social Hub*” on page 182.



Talk: Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to “*Google Talk*” on page 106.



Task: The Task application allows you to keep track of tasks that you have. You can also sync them with different accounts. For more information, refer to “*Task*” on page 183.



Task manager: The Task manager application provides information about the processes and programs running on your phone, as well as the memory status. It can also be used to terminate processes and applications. For more information, refer to “*Task manager*” on page 184.



Video player: The Video application plays video files stored on your microSD card. For more information, refer to “*Video player*” on page 82.



Visual Voicemail: AT&T Visual Voicemail provides an email-like inbox that lets you listen to voicemail messages in any order that you choose. For more information, refer to “*Visual Voicemail*” on page 184.



Voice command: With the Voice command application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc. For more information, refer to “*Voice command*” on page 185.



Voice recorder: The Voice recorder allows you to record an audio file up to one minute long and then immediately send it as a message. For more information, refer to “*Voice recorder*” on page 185.



Voice talk: With the Voice talk application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc. For more information, refer to “*Voice talk*” on page 186.



YouTube: YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format. For more information, refer to “*YouTube*” on page 186.






YP: The YP (Yellowpages) application provides quick and ready access to businesses, map locations, and storage of your favorite searches. This application allows you to tap into local businesses, locations, and events, connecting you to your search in real-time. For more information, refer to “YP” on page 187.

Tip: To open applications quickly, add the icons of frequently-used applications to the Home screen or to the folders you created. For details, see “*Customizing Your Home Screen*” on page 37.

Google Search Bar

The Google Search Bar provides you an on-screen Internet search engine powered by Google™.


1. From the main home screen, tap the Google Search bar .
2. Use the on-screen keypad to enter the item you want to search for, then tap .
3. Tap  to use Google Voice Search. For more information, refer to “*Voice talk*” on page 186.

Menu Navigation


You can tailor the phone’s range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available on-screen menus. Your phone originally has seven home screens.

Command Keys


Menu Key

Press  **Menu** to display a context-sensitive menu of options for the current screen or feature.

Home Key

Press  **Home** to display the Home screen. Press and hold to display your recently used applications and a shortcut to the Task manager.

Back Key

Press  **Back** to return to the previous screen, option or step.

Search Key

Press  **Search** to launch Quick Search, to search the web and your phone.

Terms used in this user manual

Tap

Lightly touch items to select or launch them. For example:

- Tap the on screen keyboard to enter characters or text.
- Tap a menu item to select it.
- Tap an application's icon to launch the application.

Touch and Hold

Activate on-screen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Sweep

To sweep, lightly drag your finger vertically or horizontally across the screen. Use sweep when:

- Unlocking the screen
- Scrolling through the Home screen or a menu

Pan

To pan, touch and hold a selected icon, then move the device to the left or right to reposition it to another page. You must first activate Motion on your device. Use panning to:

- Move icons on your Home screens or Application Menus to another page.

For more information, refer to *“Motion”* on page 137.

Tilt

To activate the tilt feature, press and hold two points on the screen then tilt the device back and forth to reduce or enlarge the screen. Use tilt to:

- Reduce or enlarge the screen in the Gallery or Browser.

For more information, refer to *“Motion”* on page 137.

Locking and Unlocking the Phone

To unlock your phone:


1. Press the lock button  located on the upper right side of your phone.

2. Sweep the touch screen in any direction.



3. The Home screen will display as shown above.

Home Screen Overview

The main home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .

Navigating Through the Home Screens


Your phone initially has seven home screens. If you like, you can place different applications on each of the home screens.

- From the main Home screen, sweep the screen with your finger in either direction. The main Home Screen is located in the middle with three Home screens on each side.



Navigating Through the Application Menus

Your phone initially has four Application Menus available. Follow these steps to navigate through the Application Menus:


1. At the Home screen, tap . The first Application Menu will be displayed.
2. Sweep the screen left or right to access the other three menus.

3. Tap one of the application icons.



A sub-menu will appear at the bottom of the phone screen.

2. Tap an option.

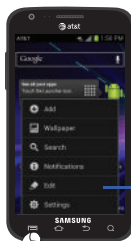

Sub-Menu items

Note: As you add applications, the number of Application menus that you have available will increase.


Navigating Using Sub-Menus

Sub-menus are available when you are at any Home screen or have selected a feature or application such as Phone, Contacts, Messaging, or Web.

To access a sub-menu:

1. Press .

Accessing Recently-Used Applications

1. Press and hold  from any screen to open the recently-used applications window.
2. Tap an icon to open the selected application.

Customizing Your Home Screen

You can customize your Home screen by doing the following:



- Creating Shortcuts
- Adding and Removing Widgets on the Home Screen
- Repositioning Widgets
- Creating Folders
- Changing the Wallpaper
- Adding and Deleting Home Screens

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.


Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Navigate to the new screen, then add the shortcut.

Adding a shortcut from the Applications Menu



1. Press  to activate the Home screen.
2. Navigate to the desired Home Page.
3. Tap  to display your current applications.

4. Scroll through the list and locate your desired application.
5. Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the Applications tab.
6. While still holding the on-screen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.

Adding a shortcut via the Add to home screen

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the Home screen.
3. From the **Add to home** window, tap **Shortcuts**.
4. Tap a shortcut from the available list.
5. Follow the on-screen instructions to add the new shortcut to your current Home screen.

Deleting a shortcut





1. Press  to activate the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the Delete tab  and release it.



As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the shortcut, it just removes it from the current screen.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the **Applications**  and **Home**  shortcuts.

1. Press  to activate the main Home screen.
2. Tap  to display your current applications.
3. Press  and tap **View type**.
4. Tap **Customizable grid**. A green circle will appear next to the option.
5. Press  and tap **Edit**.
The **Edit applications** screen is displayed.
6. Tap **OK**.
7. Scroll through the list and locate your desired application.

8. Touch and hold the on-screen icon, then drag it over the primary shortcut that you want to replace. The new primary shortcut then appears at the bottom of the screen. The old primary shortcut will return to the menu.
9. Press  and tap **Save**.
10. Press  to return to the main Home screen.
The new primary shortcut will now appear on all Home screens.


Note: When a primary shortcut is removed, it will then appear as an option in the Application menu.

Adding and Removing Widgets


Widgets are self-contained applications that reside in either your Applications tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application.

Note: To move a Widget from one screen to another, it must first be deleted from its current screen. Activate the new screen, then add the Widget.

Adding a Widget



1. Press  to activate the Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the screen.
4. From the **Add to home** window, tap **Widgets**.
5. Scroll through the available Widgets at the bottom of the screen, then tap it to place it on your current screen.





Removing a Widget

1. Touch and hold a Widget until you can move it around on the screen.
2. Drag the Widget over the Delete tab  and release it. As you place the Widget into the Trash, both items turn red.





Note: This action does not actually delete the Widget, it just removes it from the current Home screen.

Moving Icons in the Applications Menu

1. Press  to activate the Home screen.
2. Tap  to display your current applications.

3. Press  and tap **View type**.
4. Tap **Customizable grid**. A green circle will appear next to the option.
5. Press  and tap **Edit**.
6. Scroll through the list and locate the icon you wish to move.
7. Touch and drag the icon to the position that you want. To move to a different page, drag the icon to the edge of the page until the page scrolls to the desired page.
8. Press  and tap **Save**.
9. Press  to return to the main Home screen.

Deleting Icons from the Applications Menu


1. Press  to activate the Home screen.
2. Tap  to display your current applications.
3. Press  and tap **Edit**.
4. Tap an application that you would like to delete from the Applications menu. It must have a  symbol next to it in order to delete it.
5. Tap the icon.
6. At the Delete prompt, tap **Yes**.
The application is deleted.

Note: If you would like to get an application that you have previously deleted, use the Play Store to download it. For more information, refer to “*Play Store*” on page 181.

Creating and Managing Folders

Folders are located on any of the seven available Home screens and can contain both files (such as data and images) and Contact information or entries.


To create a folder on-screen follow these steps:

1. Press  to activate the Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the screen.
4. From the **Add to home** window, tap **Folders**.
5. Tap an available folder type to place it on your current screen.
 - Choices include New folder, All contacts, Contacts with phone numbers, Received list from Bluetooth, and Starred contacts.

Note: Starred contacts are those Contact entries tagged as very important.

Changing the Wallpaper



You can change the Wallpaper (background) of your home screens by following these steps:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to home** window, tap **Wallpapers**.
4. Tap one of the following options:
 - **Gallery:** select a wallpaper from photographs you have taken with your camera.
 - **Live wallpapers:** select an animated wallpaper.
 - **Wallpaper gallery:** select from many still-life wallpapers.
5. Select a wallpaper and tap **Set wallpaper** or **Save**.


Moving Home Screens

Your phone comes with seven Home screens. You can arrange the screens in any order that you want.

To move a Home screen, follow these steps:

1. Press  to activate the Home screen.
2. Press  and tap **Edit**.

3. Touch and hold the Home screen you want to move.

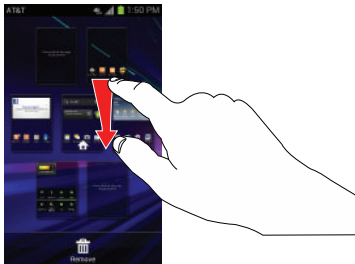

4. Drag it to the location that you would like to place it.

In the following example, the second Home screen is moved to the last position.

When you move a Home screen, the other Home screens will be re-ordered automatically.





5. Press  to return to the main Home screen.

Adding and Deleting Home Screens


You can delete Home screens and then add Home screens later if you want.

To delete a Home screen, follow these steps:




1. Press  to activate the Home screen.
2. Press  and tap **Edit**.
3. Touch and hold the Home screen you want to delete.

4. Drag it to the trash can located at the bottom of the screen.





5. If there are items on the Home screen that you want to delete, the **Home screen has items. Delete?** prompt is displayed.
6. Tap **Yes** to remove the page, otherwise, tap **No**.
7. Press  to return to the main Home screen.

To add a Home screen, follow these steps:

1. Press  to activate the Home screen.
2. Press  and tap **Edit**.
3. Touch and hold the Home screen that contains  and drag it to the new location.




Note: The  icon will only be displayed if a Home screen has previously been deleted.

4. Press  to return to the main Home screen.
You can now add items to your new Home screen.

Notification Bar

The Notification Bar includes a pull-down list to show information about processes that are running, recent notifications, and alerts. To display the Status indicator:


- On the Home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically.

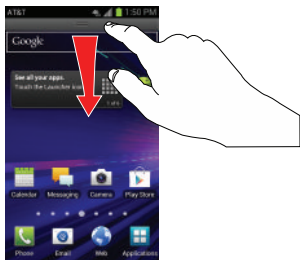

Clearing Notifications

To clear all notifications from the Notification panel:

1. From the Home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically.

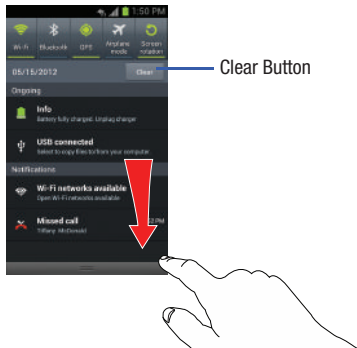

2. Tap the **Clear** button.
The notifications are cleared and the panel closes.

Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality. The device has a USB SD card mode.

Using the SD Card

There are several methods for using the SD card:

1. Connecting to your PC to store files (such as music, videos, or other types of files and media).
2. To activate the camera, video, music player, and other dependant media or applications.

Important! The Camera, Audio Postcard, Music Player, and Video functionality is all dependant on a mounted SD card. Your device can support SDHC cards up to 32GB capacity.

SD Card Overview

After mounting an SD card in the device you can use your computer to access and manage the SD card.

Important! If access to the external SD card is not available, download and install the USB drivers.

Mounting the SD Card

To store photos, music, videos, and other applications. You must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

Important! You must disable USB storage to mount the SD card.

1. Insert the SD card into the external, SD card slot. For more information, refer to *"Installing and Removing the Memory Card"* on page 7.
2. Your SD card is scanned to see the available information on it.

Unmounting the SD card


Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

1. From the Home screen, tap  → **Settings** → **Storage**.
2. Tap **Unmount SD card**.
3. Tap **OK**.

For more information, refer to “*Installing and Removing the Memory Card*” on page 7.


SD card Available Memory Status

To view the memory allocation for your external SD card:

1. From the Home screen, tap  → **Settings** → **Storage**.
2. The available memory displays under the **Total space** and **Available** headings.

Erasing Files from the SD card

You can erase files from the SD card using the phone.

1. Ensure the SD card is mounted. For more information, refer to “*Mounting the SD Card*” on page 44.
1. From the Home screen, tap  → **Settings** → **Storage**.

2. Tap **Format SD card**.
3. At the **Format SD card** confirmation prompt, tap **Format SD card**.

Warning! Performing the next step erases all data stored on the SD card.

4. Tap **Delete all** to format or press  to cancel.

Section 3: Call Functions



This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to “*Call Settings*” on page 114.

Displaying Your Phone Number





- Tap  → **Settings** → **About phone** → **Status**. Your phone number is displayed in the **My phone number** field.

Making a Call

1. From the Home screen, tap  and use the on-screen keypad to enter the number you wish to dial.
2. Tap  to make the call.



Note: When you activate the **Auto redial** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “*Call Settings*” on page 114.

Making an International Call


1. From the Home screen, tap , then touch and hold . The + character appears.
2. Use the on-screen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, tap  until the desired numbers have been deleted.
3. Tap  to make the call.

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. From the Home screen, tap  and use the on-screen keypad to enter the phone number.
2. Press  to display the dialer sub-menu.
3. Tap **Add 3-sec pause** to add a three second pause, and use the keypad to enter the additional numbers.



Tip: You can create pauses longer than three seconds by entering multiple 3 second pauses.

4. Select **Add wait** to add a wait. A wait will pause the calling sequence until you enter a number or press a key.
5. Tap  to make the call.

For more information, refer to “*Adding Pauses to Contact Numbers*” on page 64.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

- After entering a number using the keypad:
 - If you make a mistake, tap  to erase a single character.
 - Press and hold  to erase the entire string of numbers.

Ending a Call


- Tap the  key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Call log**. If the number or caller is listed in your Address Book, the associated name also displayed.





1. From the Home screen, tap .
2. Tap **Call log** .


A list of recent calls is displayed.

3. Tap the desired Contact to enter the **Details** page, then tap  to make a call.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in your Contacts List for speed dialing.

1. Tap  →  to display your Contacts List.
2. Press  to display the Contacts List sub-menu.
3. Tap **More** → **Speed dial setting**.
4. The **Speed dial setting** screen displays showing the numbers 2 through 9. The number 1 is reserved for Voicemail.
5. Tap an unused number and the **Contacts** screen displays.
6. Select a contact to assign to the number. The selected contact number will display in the speed dial number box.
7. To remove a speed dial number or change the order, press  to display the Speed Dial sub-menu.
8. Tap **Change order** or **Remove**.

9. To make a call using Speed Dial, tap  → **Keypad** and from the Dialer, touch and hold the speed dial number.



Making a Call from the Address Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.


For further details about the **Address Book** feature, see “*Finding an Address Book Entry*” on page 65.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Address Book.

1. At the incoming call screen:
 - Touch and drag  in any direction to answer the call.
 - Touch and drag  in any direction to reject the call and send it to your voicemail.
 - Touch and drag the **Reject call with message** tab upward and tap a predefined text message to send to the caller.
 - I am driving. I will call you back.
 - I am at the cinema. I will call you back.


- I am in class now. I will call you back.
 - I am in meeting. I will call you back.
 - Sorry, I am busy. Call back later.
- or –
- Tap **Create new message** to compose a new message.

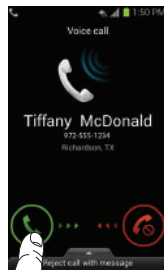

2. Tap  to end the call.

Note: You can answer a call while using the Address Book or other menu feature. After ending the call, the phone returns to the previously active function screen.

Dialing Options

From the Home screen and Application menus, you have the option to access the Dialer and initiate a call by tapping  → **Keypad**. From the main Contacts page or from the Dialer, the following tabs are located at the top of your screen:

- **Keypad:** dials the current number entered using the on-screen keypad.
- **Call log:** displays a list of all dialed, received, and missed calls.
- **Favorites:** displays your contacts that you have marked as Favorites. Also displays frequently called numbers.
- **Contacts:** takes you to your Address Book where you can select a contact to call.

After you begin to enter numbers, the **Add to Contacts** option appears so you can save the Contact if needed.






Call Log

The phone stores the numbers of the calls you've dialed, received, or missed in the **Call log**. The Call log displays the details of the call.

1. From the Home screen, tap .
2. Tap **Call log** .

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.


All calls made, received, and missed are listed. Types of calls are identified by the following icons:

- **Incoming Calls:** 
- **Outgoing Calls:** 
- **Missed Calls:** 
- **Rejected Calls:** 
- **Auto Rejected Calls:** 


Viewing Missed Calls from the Home Screen

The number of calls you have missed is displayed on the Home screen.

1. Tap the missed call icon with the number of missed calls on it and move it in any direction.

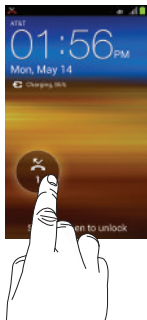



Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.


2. The Call log is displayed. Missed calls are identified by the  icon next to the number.

Calling Back a Missed Call

To call back a missed call number:

1. From the Home screen, tap  → **Call log** .

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

2. Tap the desired missed call. The call detail page is displayed.
3. Tap .

Saving a Recent Call to your Address Book


1. From the Home screen, tap  → **Call log** .

A list of recent calls is displayed.

2. Tap the call you want to save to your Address Book.
3. The call detail page is displayed. Tap **Create Contact** to add the call to your Address Book.
The Create contact screen is displayed.

– or –

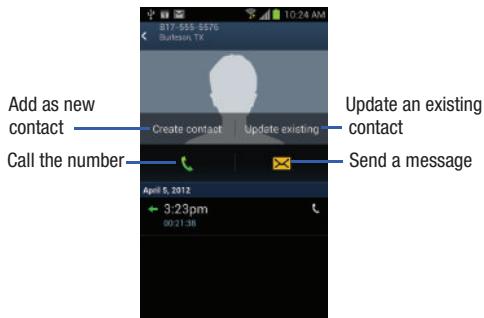


If you want to replace the number for an existing contact, tap **Update existing**.





4. Enter information into the various fields using the keypad.
5. Tap **Save** when you are finished.

For further details about the **Address Book** feature, see *“Adding a New Contact”* on page 62.



Sending a Message to a Recent Call

1. From the Home screen, tap  → **Call log**  .
A list of recent calls is displayed.
2. Tap the call you want to send a message to.
3. Tap  .
4. At the Message screen, tap the empty text field and use the on-screen keypad to type in a message.
5. When you are done with your message, tap **Send**.
For more information, refer to *“Creating and Sending Messages”* on page 97.




Deleting a Call from the Call Log


1. From the Home screen, tap  → **Call log**  .
A list of recent calls is displayed.
2. Touch and hold the call you want to delete from the Call log.
3. Tap **Delete**.
The call is deleted from the Call log.

Adding a Call to the Reject List

1. From the Home screen, tap  → **Call log**  .
A list of recent calls is displayed.
2. Touch and hold the call you want to add to the Reject List.
3. Tap **Add to reject list**.
Future calls from this number will be rejected and sent to your voicemail.

Call Duration

1. From the Home screen, tap  → **Call log**  .
2. Press  to display the Call log sub-menu.
3. Tap **Call duration**.
4. The following times are displayed for Voice:
 - **Last call**: shows the length of time for the last call.
 - **Dialed calls**: shows the total length of time for all calls made.
 - **Received calls**: shows the total length of time for all calls received.
 - **All calls**: shows the total length of time for all calls made and received.

5. You may reset these times to zero by pressing  then tapping **Reset**.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the earpiece volume, use the **Volume** keys on the left side of the phone.


- Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.

From the Home screen, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by tapping a corresponding on-screen button.


- **Hold**: place the current active call on hold.
- **Add call**: displays the dialer so you can call another person.
- **Keypad**: displays the on-screen keypad, where you can enter number using DTMF (Dual Tone Multi-Frequency).
- **End call**: terminates the call.

- **Speaker:** routes the phone's audio through either the speaker or through the earpiece.
 - Tap **Speaker** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.) A green line will appear under the Speaker button.
 - Tap **Speaker** again to use the phone's earpiece (see *“Using the Speakerphone During an Active Call”* on page 55). The green line will turn gray when Speaker is not activated.
- **Mute:** turn the onboard microphone either on or off.
 - Tap **Mute** during a call to mute the microphone. A green line will appear under the Mute button.
 - Tap **Mute** again to unmute the microphone. The green line will turn gray when Mute is not activated.
- **Headset:** connects to a Bluetooth headset.
 - Tap **Headset** during a call to activate a Bluetooth headset. A green line will appear under the Headset button.
 - Tap **Headset** again to de-activate the Bluetooth headset. The green line will turn gray when the Headset is not activated.
- Press  for more options:
 - **Contacts:** allows you to go to your Contact list.
 - **Memo:** allows you to jot down a memo during a call.

- **Noise reduction on/off:** allows you to turn on the Noise Reduction feature when you are in a noisy area. Turn it Off when not needed to conserve battery power.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

1. While on a call, tap **Hold** . This action places the current caller on hold (which is displayed on-screen as a grayed-out box).
2. You can later reactivate this call by tapping **Unhold**.

To make a new call while you have a call in progress

1. Tap **Hold** .
2. Tap **Add call**  to display the dialer.
3. Enter the new number and tap .

Once connected, the active call will appear in a large box in the middle of your screen and the call on hold will appear in a small box in the upper right corner of your screen.

Switching Between Calls



When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

1. Tap **Swap**.


The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person. The active call will appear in a green box.

2. Tap  to end the currently active call.

To end a specific call



1. Tap **Swap** until the call you want to end appears in a green box.
2. Tap  to end the specific call.
3. Tap  to end the remaining call.

To answer a call while you have a call in progress

1. Touch  and slide to the right to answer another call.
2. Tap **Putting "Number or Name" on hold** to put the first call on hold.
3. To switch between the two calls, tap **Swap**.

- **Swap**: Places the current call on hold and then activates the previous call. The active call will appear in a green box. Tap **Swap** again to switch back.

To end a call on hold




1. Tap  to disconnect the active call.
2. The call on hold will now become the active call. Tap  to end the call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Merge** option combines all of the calls you have established with your phone (both active and on hold). **Swap** places the current call on hold and then activates the previous call.


This feature joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.


1. Touch and drag  in any direction to answer the call.
2. Touch and drag  in any direction to answer the next call.
3. Tap **Putting "Number or Name" on hold** to put the first call on hold.
4. Join the first two callers into a single multi-party call by tapping **Merge**.
5. To temporarily leave the conference call, tap **Hold**.
To rejoin the conference call tap **Unhold**.
6. Tap  to end the call.


Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Tap **Speaker** .

The **Speaker** button now appears as  and the speakerphone is activated.

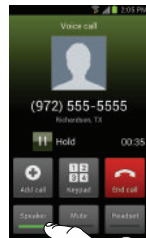

2. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.
3. To deactivate the speakerphone, tap **Speaker** .




Important! For more information, see *"Responsible Listening"* on page 204.

Switching off the Microphone (Mute)



You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To mute your phone during a call


1. Tap **Mute**  .
The **Mute** button now appears as  and Mute is activated.
2. Tap **Mute**  to deactivate the Mute function and reactivate the microphone.

Bluetooth headset

1. Tap **Headset**  .
2. The phone will scan for your Bluetooth headset. When found, connect to the headset.
The **Headset** button now appears as  and the Bluetooth headset is activated.

3. Tap **Headset**  to deactivate the Bluetooth headset and reactivate the phone speaker.


Searching for a Number in Address Book

1. During the active call, press  then tap **Contacts**
2. Tap the Address Book entry.

For further details about the **Address Book** feature, see “*Finding an Address Book Entry*” on page 65.

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you must first activate the Call Waiting feature:

- Tap  → **Settings** → **Call** → **Additional settings** → **Call waiting**.

A checkmark will appear in the box when activated. You are notified of an incoming call by a call waiting tone.

Section 4: Entering Text

This section describes how to select the desired text input method when entering characters into your phone. This section also describes the predictive text entry system that reduces the amount of key strokes associated with entering text.

Your phone comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Text Input Methods


There are four text input methods available:

- **Android keyboard (default):** an on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Google voice typing:** uses Google voice recognition to convert your spoken words into on-screen text.
- **Samsung Keypad:** Samsung's on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Swype:** a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

To change the input method, see “*Keyboards and Input Methods*” on page 129.

Entering Text Using the Android Keyboard

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. The on-screen QWERTY keypad will display.

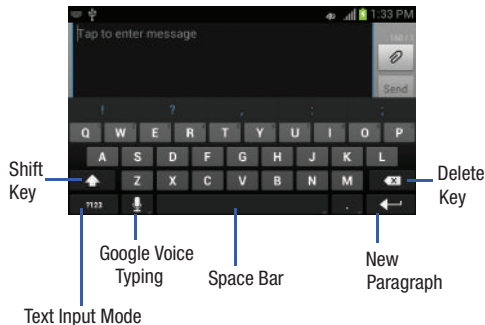

Changing the Text Input Mode - Keypad


There are two main keypad layout keys that will change the on-screen keys within the QWERTY keypad.


The available Text Input modes are: **Sym** and **Abc**.






?123

Symbol/Numeric Mode: activates the number, symbol, and emoticon keys.

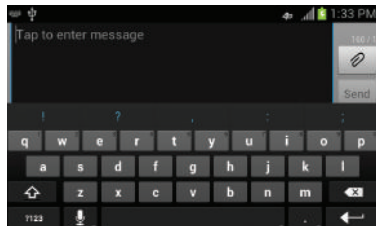ABC

ABC Mode: activates the default alphabet keys. Can also be set to **Abc** or **abc** by using the shift () key.



3. Tap the desired alphabetic characters.
4. The screen initially opens in ABC mode. After typing the first letter, the shift key () will change to  and following letters will be lowercase.
5. Tap  to input another upper-case letter or tap  twice to switch to ABC mode. The shift key will change to  in ABC mode. All following letters will be uppercase until you tap the shift key again.

Note: When in **Abc** mode, the **Sym** button will appear. When in **Sym** mode, the **Abc/ABC/abc** button will appear.


Using ABC Mode

1. If desired, rotate your phone counterclockwise to a Landscape orientation.
2. When you tap the **Tap to enter message** field, the following screen displays:

Using Symbol/Numeric Mode

Use Symbol/Numeric Mode to add numbers, symbols, or emoticons.

1. Rotate your phone counterclockwise to a Landscape orientation.
2. Tap **?123** at the bottom of the screen. The following screen displays:

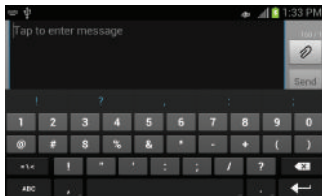


3. Tap the desired number, symbol, or emoticon characters.
4. Tap the **=\<** button to access additional symbols.
5. Tap **ABC** to return to Abc mode.

Show Correction Suggestions

By using the Show Correction Suggestions option, you can have next-letter prediction and regional error correction, which compensates for pressing the wrong keys on the QWERTY keyboard.

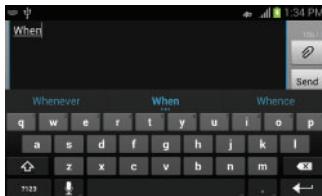

1. In the text portion of the message screen, begin typing a word. A list of word options is displayed. Tap one of the words to replace the word that has already been typed or scroll the line of words to the left for more word choices.



2. Continue typing your message. Tap **Send** to send the message or press **≡** for more options. For more information, refer to *"Creating and Sending Messages"* on page 97.


Note: You can also use Show Corrections mode in the portrait orientation.

To turn Show Corrections on or off:

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Android keyboard**.
3. Tap **Show correction suggestions**, then tap your selection.

Entering Text Using the Samsung Keypad

The Samsung Keypad is an on-screen QWERTY keypad similar to the Android Keyboard with several minor differences.

1. From a screen where you can enter text, touch and drag  down from the Notifications area then tap **Select input method**.
2. Tap the **Samsung keypad** radio button. It will turn green. The Samsung keypad is displayed.


Samsung Keypad Settings

For information on changing Samsung Keypad settings, see “*Samsung Keypad settings*” on page 131.

Entering Text Using Swype

Swype™ is a text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. Swype uses error correcting algorithms and a language model to predict the next word. Swype also includes a tapping predictive text system.


The following example shows how to enter the word “This”. Put your finger down on the “T”, and without lifting, glide it to the “h”, then to the “i” then over to the “s”.

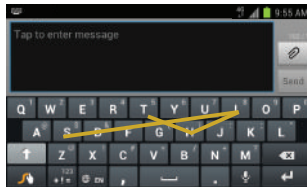

Enabling and Configuring Swype

The Samsung keypad is the default text input method, so to use Swype, you must first change the default keyboard setting.

To enable Swype:

1. From a screen where you can enter text, touch and drag  down from the Notifications area then tap **Select input method**.
2. Tap the **Swype** radio button. It will turn green.
The Swype keyboard is displayed.

Swype Settings

For information on how you can configure your Swype settings, see “*Swype Settings*” on page 133.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.

- Create a squiggle (like an S shape) to create a double letter (such as pp in apple).
- Touch and hold a key to view the punctuation menu then make a selection.

- Move your finger or stylus over the apostrophe to enter contractions.
- Double-tap on the word you want to change to correct a misspelled word, then tap the delete key to erase one character. Touch and hold the delete key to erase an entire word.

Google Voice Typing

This feature uses Google voice recognition to convert your spoken words into on-screen text.

1. From the keypad, touch the top of the screen and drag it down to display your notification panel.
2. Tap **Select input method**.
3. Tap **Google voice typing**.
4. At the **Listening** prompt, speak into the device's microphone and watch your text being entered on-screen. If the text is incorrect, tap the **DELETE** box.
5. Once you have completed entering your message, tap **Done**.

Note: This feature works best when you break your message down into smaller segments.

Section 5: Contacts and Your Address Book


This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Note: When storing an Address Book entry into your SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). Although you may add additional fields to a SIM entry; if you move that same SIM card to another model phone, it is possible that only the basic information will be transferred.

AT&T Address Book Activation

When you access the AT&T Address Book, the network backup service, contacts are automatically synchronized between your phone and online address book. The changes you make are automatically saved and if you ever upgrade, damage, or lose your phone, you can easily restore your contacts onto your new phone.

To activate the AT&T Address Book:

1. From the Home screen, tap  → **Contacts** .

Your Address Book is displayed.

2. If you have not synchronized your phone with your online AT&T Address Book recently, the **AT&T Address Book** screen is displayed. Tap **Yes** if you want to synchronize your Address Book.
3. Follow the onscreen instructions.





Your AT&T Address Book is Ready to Use. You can now make a call or send a message through your Address Book.


You can also manage your Address Book on the web at <http://www.att.com/addressbook>.


Adding a New Contact






Use the following procedure to add a new contact to your Address Book.


Saving a Number from the Home screen

1. From the Home screen, tap  → **Contacts**  → .
2. Tap  **Phone** at the top of the display to select where you want the contact saved. It is saved to the Phone by default.


3. Tap **Phone**, **SIM**, or account name.
4. Tap the image icon and assign a picture to the new entry by choosing one of three options:
 - **Remove photo**: although not an option with a new entry, deletes any previously assigned image on an existing contact.
 - **Take new photo**: use the camera to take a new picture and assign it to this entry, then tap **Save**.
 - **Select new photo from Gallery**: retrieve a previously stored image from your Pictures folder and assign it to this entry. Tap an image to assign the image to the contact, then tap **Save**.
5. Tap the **Name** field and use the on-screen keypad to enter the full name. For more information, refer to “*Entering Text*” on page 57.
– or –
Tap  next to the **Name** field to display additional name fields.
6. Tap the **Phone number** field.
The numerical keypad is displayed.

The **Mobile** button  initially displays next to the **Phone number** field. If you want to add a phone number that is not a mobile number, tap the **Mobile** button and select from Mobile, Home, Work, Work fax, Home Fax, Pager, Other, Custom (add your own label), or Callback.


7. Enter the phone number.
Tap  to add another Phone number field or tap  to delete a field.
8. Tap the **Email address** field.
The keypad is displayed.
The **Home** button  initially displays next to the **Email address** field. If you want to add an Email address that is not a Home email address, tap the **Home** button and select from Home, Work, Other, Mobile, or Custom (add your own label).
9. Enter the Email address.
Tap  to add another Email address field or tap  to delete a field.
10. Tap the **Address** field.
The keypad is displayed.

The **Home** button  initially displays next to the **Address** field. If you want to add an address that is not a Home address, tap the **Home** button and select from Home, Work, Other, or Custom (add your own label).

11. Enter the address.

Tap  to add another address field or tap  to delete a field.

12. Tap any of the following fields that you want to add to your new contact:







- **Events:** tap  to add a Birthday, Anniversary, Other event, or Custom event.
- **Groups:** assign the contact to Not assigned, ICE - emergency contacts, Co-workers, Family, or Friends.
- **Ringtone:** adds a field used to assign a message tone that will sound when messages are received from this contact. Choose between Default, Ringtones, or Go to My files.
- **Add another field:** tap this button to add another field such as Phonetic name, Organization, IM, Notes, Nickname, Website, Internet call, or Relationship.

13. Tap  to save the new contact.

Adding Pauses to Contact Numbers





When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses and waits. A pause will stop the calling sequence for two seconds and a wait will pause the calling sequence until you enter a number or press a key.

To add a pause or a wait to a Contact:

1. From the Home screen, tap  → **Contacts** , and then tap the name or number to open the Contact.
2. Tap  to edit.
3. Tap the phone number field.
4. Tap the screen at the position where the pause or wait needs to be added.
5. Tap .
6. Tap **Pause** to add a two-second pause or tap **Wait** to add a wait, and use the keypad to enter the additional numbers. A pause will be displayed as a comma (,) and a wait will be displayed as a semi-colon (;).
7. Tap  to save your changes, or tap  to discard.

Editing an Existing Contact

When editing an existing contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From the Home screen, tap  → **Contacts** .
Press and hold the Contact that you want to edit.
2. Tap  to edit.
3. Tap any of the fields to add, change, or delete information.
4. Tap  to save the edited information.

Using Contacts

Dialing or Messaging from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by swiping the screen downwards.



From the Address book, you can also send messages.


Tip: From the Address book, sweep right over a listing to make a call. Sweep left over a listing to send a message.

Finding an Address Book Entry


You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two locations are physically separate but are used as a single entity, called the Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

1. From the Home screen, tap  → **Contacts** .
2. Within the Contacts list (sorted alphabetically), tap a letter on the right side of the display to quickly jump to the contacts beginning with that letter.

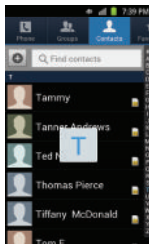

3. Tap the contact you wish to call or message.
4. Tap the phone icon to make a phone call or tap the message icon to send a message.

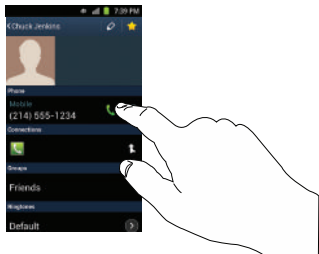

For more information, refer to “*Creating and Sending Messages*” on page 97.

Joining Contacts

Joining Contact Information




Many people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts such as Facebook, Twitter, MySpace, Corporate email, and Google. When you synchronize your phone with these accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith, for example) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Yahoo! chat account, when you merge these accounts into your Contacts list you can join all of her entries and view the information in one record.

The next time you synchronize your phone with your accounts, any updates that contacts make to email account names, email addresses, etc. automatically update in your contacts list.

For more information about synchronizing accounts, see “*Synchronizing Accounts*” on page 68.




1. From the Home screen, tap  → **Contacts** .
2. Tap a contact name (the name you want to join to another entry). **Note:** typically this is the same contact with a different name or account information.
3. Press  → **Join contact**.
The contact list is displayed.

4. Tap the second contact entry (the entry in which to join). The second contact is now joined with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you join the contacts.





5. Tap the **Connections** bar to view the contact information you joined. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unjoining a Contact

1. From the Home screen, tap  → **Contacts** .
2. Tap a contact name (the account name from which you want to unlink an entry). **Note:** typically this is the same contact with a different name or account information.
3. Tap the **Connections** bar.
4. Tap the minus sign  next to entry in which you want to unjoin. The contact is now separated and no longer displays in the merged record screen.





Marking a Contact as Default

When you use messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, you may have three different contact records for John Smith, so the application will be looking for the “default” number or entry.

1. From the Home screen, tap  → **Contacts** .
2. Tap a Contact name.
3. Press  → **Mark as default**. The Mark as default screen displays radio buttons next to the contact names or phone numbers of all the linked contacts. The radio button next to the default contact will be green.
4. To change the default contact, tap the radio button next to another entry that you want to be the default. The radio button will turn green, then tap .

Synchronizing Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. From the Home screen, tap  → **Contacts** .
2. Press  then tap **Accounts**.
3. Tap **Sync all** to synchronize all accounts.
– or –
Tap  next to the account you want to sync, then tap **Sync Now**.

The accounts are synchronized.

Address Book Options




You can access Address Book options while at the main Address Book page or while in the details page for a specific entry.

Options in Address Book

1. From the Home screen, tap  → **Contacts**  then press .
2. The following options are displayed:
 - **Delete:** allows you to delete 1 or more of your contacts.
 - **SIM Management:** allows you to copy contacts from your phone to your SIM card or from your SIM card to your phone. You can also delete contacts from your SIM.
 - **Speed dial setting:** allows you to set up speed-dialing. For more information, refer to “*Making a Call Using Speed Dial*” on page 47.
 - **Import/Export:** allows you to move contacts to or from your memory card. You can also send a namecard via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Merge with Google:** allows you to merge your contacts together with your Google account contacts.
 - **Accounts:** allows you to add and manage mobile accounts on Windows Live Hotmail, Yahoo! mail, Facebook, Google, and Microsoft Exchange Activesync. Tap Add account and then follow the on-screen instructions.

- **Send email:** allows you to send an email using your Google account.
- **Send message:** allows you to send a text or picture message.
- **Contacts to display:** You can choose to only display the following contacts: All contacts, SIM, Phone, Accounts that you have open or Customized list. Tap Customized list for more options on displaying your contacts.
- **Settings:** allows you to choose set the following options:
 - **Only contacts with phones:** allows you to only display contacts that have phone numbers.
 - **List by:** allows you to sort by First name or Last name.
 - **Display contacts by:** allows you to sort by First name first or Last name first.
 - **Service numbers:** allows you to display or edit your service numbers.
 - **Send contact:** allows you to send contacts via Bluetooth in the form of namecards.
 - **AT&T Address Book:** allows you to access the AT&T Address Book so you can sync your contacts.




Options at Selected Contact Screen

1. From the Home screen, tap  → **Contacts** .
2. Tap a contact and at the contact's display screen, press .
3. The following options are displayed:
 - **History:** allows you to view the phone and message history for the contact.
 - **Edit:** allows you to edit the contact information.
 - **Delete:** allows you to delete the contact from your Address Book.
 - **Join contact:** allows you to join contacts with other contacts (only displays when contact is saved to SIM).
 - **Mark as default:** when you have multiple contacts linked together, you can mark one of them as default (only displays when contact is saved to the phone). For more information, refer to *"Marking a Contact as Default"* on page 67.
 - **Share namecard via:** allows you to send the contact's information via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.





- **Add to/Remove from reject list:** allows you to add or remove the contact from your reject list. If they call while being on the reject list, the call will be sent directly to voice mail.
- **Print namecard:** allows you to print the contact's namecard to a Samsung printer using Wi-Fi.


Groups

Adding an Entry to a Group






1. From the Home screen, tap  → **Contacts** .
2. Press and hold the contact name that you want to add to a group.
3. Tap **Add to group**.
4. Tap the group or groups that you would like to add the contact to.
5. Tap  to save.
The contact is added to the group.

Removing an Entry From a Group

1. From the Home screen, tap  → **Contacts**  → **Groups** .
2. Tap a group entry.
3. Press  → **Remove member**.






4. Tap all of the contacts you want to remove from this group. A green checkmark will appear next to their name.
5. Tap .
The contacts are now removed from the group.

Creating a New Group

1. From the Home screen, tap  → **Contacts**  → **Groups**  →  → **New**.
2. Tap the **Group name** field and use the on-screen keypad to enter a new group name. For more information, refer to “*Entering Text*” on page 57.
3. Tap **Group ringtone** to choose an audio file for assignment to this new group. Choose from **Default**, **Ringtones**, or **Go to My files**.
4. Tap **Add member** to add contacts to the new group.
5. Tap  to save the new Group category.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap  → **Contacts**  → **Groups** .
2. Tap a group entry.
3. Press  → **Edit**.
4. Make modifications to the **Group name** or **Group ringtone** fields.
5. Tap **Add member** to add more contacts to this group.
6. Tap  to save your changes.



Address Book Favorites

Once you have stored phone numbers in the Address Book, you can add them to your Favorites list.



To view your Favorites list:

- From the Home screen, tap  → **Contacts**  → **Favorites** .

Adding Favorites to your Address Book

1. From the Home screen, tap  → **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to add to your favorites list.
3. Tap **Add to favorites** on the displayed list.
4. A gold star will appear next to the contact in the Address Book.

Removing Favorites from your Address Book




1. From the Home screen, tap  → **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to remove from your favorites list. Contacts in your Favorites list will have a gold star.
3. Tap **Remove from favorites** on the displayed list.
4. The gold star will no longer appear next to the contact in the Address Book.

Managing Address Book Entries

You can copy, delete, and view the memory status for the Phone and SIM entries on your phone.





Copying an Entry to the SIM Card

Note: When storing an Address Book entry into the SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). To save additional information for a particular contact, such as other phone numbers, or e-mail, it is important to add new fields to that Contact information. It is also important to note that if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

1. From the Home screen, tap  → **Contacts**  →  → **SIM Management**.
2. Tap **Copy Contacts to SIM**.
The phone then displays a list of your current phone contacts.
3. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to the SIM card.
 - Repeat this step for all individual entries you wish copied to the SIM or tap **Select all** to place a checkmark alongside all entries.



4. Tap .
5. At the **Copy Successful** display, tap **OK**.
The selected numbers are copied to the SIM card.

Copying an Entry to the Phone

1. From the Home screen, tap  → **Contacts**  →  → **More** → **SIM Management**.
2. Tap **Copy Contacts from SIM**.
The phone then displays a list of your current contacts stored on your SIM card.
3. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to your phone.
 - Repeat this step for all individual entries you wish copied to your phone or tap **Select all** to place a checkmark alongside all entries.
4. Tap .
5. At the **Copy Successful** display, tap **OK**.
The selected numbers are copied to your phone.




Deleting Address Book Entries

You can delete Phone or SIM entries from your phone's memory.

1. From the Home screen, tap  → **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to delete.
3. Tap **Delete** on the displayed list.
4. At the **Delete** prompt, tap **OK** to delete the contact or **Cancel** to exit.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

1. From the Home screen, tap  → **Contacts**  →  → **Settings**.
2. Tap **Service numbers**.
3. Scroll through the available numbers (if available).
4. To dial the number displayed, tap **Call**.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Section 6: Multimedia





This section explains how to use the multimedia features of your phone, including Media Hub, MOG Music, Music player, Movies, Live TV, Qik Lite, Video player, Gallery, Camera, and Camcorder.

Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available at your fingertips, entertaining yourself or your kids on the go has never been easier. You can rent or purchase your favorite content and watch from the convenience of anywhere. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

Note: Media Hub usage is based on service availability.

Using Media Hub

1. Tap  → **Settings** → **Security** → **Unknown sources** to create a checkmark and allow the Samsung app to run.
2. Tap  → **Media Hub** .
3. Read the **Terms and Conditions** screen and tap the **I agree to the Terms and Conditions** checkbox.
4. Tap **Accept** to continue or **Decline** to exit. The Media Hub screen displays.
5. At the Media Hub screen, **What's New** is displayed with recently added media that you can rent or purchase.
6. Tap  for the following options:
 - **Movies:** displays movies that are available for rent or purchase. Scroll through the top navigation bar and select a movie category. The movies of that type will be displayed below.
 - **TV Shows:** displays TV shows that are available for purchase. Scroll through the top navigation bar and select a TV category. The TV shows of that type will be displayed below.
 - **My Media:** allows you to view all of the media that you have purchased or rented. Tap a media entry to view it.
7. Scroll through the media listings and tap on an item you would like to purchase or rent.
8. Follow the on-screen instructions to create a Samsung account and make a purchase.

9. The media will be stored in the My Media folder.

Media Hub Notices

- Any media item (Media Content) may be rented or purchased after you create an account in Media Hub.
- Media Content that is downloaded may be viewed concurrently on up to five (5) devices with Media Hub that are also registered to the same account.
- You may choose to remove a device from your account no more than once every 90 days.
- You may remove Media Content from a device as many times as you'd like. You will have the ability to re-download the Media Content at a later point in time subject to content re-download availability and studio permissions.
- You **MUST** be in network coverage to license Media Content you have acquired through the Service.
- You can use 3G, 4G, or Wi-Fi connectivity in order to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account.
- Media Content is downloaded and saved onto the SD card.

- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching rented Media Content within 24 consecutive hours of start of playback.
 - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
 - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).
- You cannot play any media content downloaded from Media Hub through any output on your mobile phone, including All Share.



MOG Music

MOG Music gives you access to over 11 million songs and provides unlimited listening and unlimited downloads. MOG Music also has a desktop service, which is available for access from any desktop PC or browser. You can download any song or album straight to your mobile phone for a low monthly fee. You can also access the MOG Music radio.

Note: The MOG Music app requires a monthly subscription. For additional information please contact your AT&T service representative.

Downloading the MOG Music App

Note: The first time you use MOG Music, you will need to download the updated application from the Play Store. When the Play Store page displays, tap **Update**. For more information, refer to “*Play Store*” on page 181.



1. Tap  → **MOG Music** .
2. When the MOG Music screen is displayed, tap the **New to Mog? Get started now** arrow.
3. Tap **Update**, then tap **Accept & download**.

MOG Music is downloaded to your phone.

4. Tap **Open**.
5. Create an account by following the on-screen instructions.

Using MOG Music











After the application is downloaded and you have set up an account, you are ready to use MOG Music.

1. Tap  → **MOG Music** .
The MOG Music screen is displayed
2. Tap **Sign In**.
3. Follow the on-screen instructions to buy, download, and play music.

Music

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

1. Tap  → Music player .
2. Tap a library category at the top of the screen (All, Playlists, Albums, Artists, or Folders) to view the available music files.
3. Scroll through the list of songs and tap an entry to begin playback.
4. The following Music Player controls are available:
 -  Pause the song.
 -  Start the song after being paused.
 -  Press and hold to rewind the song. Tap to go to previous song.
 -  Press and hold to fast-forward the song. Tap to go to next song.
 -  Volume control.
 -  Repeat one: repeats the currently playing song.
 -  Repeat all: replays the current list when the list ends.
 -  Play All: plays the current song list once.



Shuffle On: the current list of songs are randomly shuffled for playback.



Shuffle Off: songs play in order and are not shuffled.




Allows you to listen to music using 5.1 Virtual Surround Sound.



Displays your list of songs.

Music Player Options




To access additional options, follow these steps:

1. While in the Music Player, press .
2. The follow options are available:
 - **Add to quick list:** adds the current music file to the Quick list.
 - **Via Bluetooth:** scans for devices and pairs with a Bluetooth headset.
 - **Share music via:** allows you to share your music by using AllShare, Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Set as:** allows you to set a music file to Phone ringtone, Caller ringtone, or Alarm tone.

- **Add to playlist:** allows you to add the current music file to a selected playlist.
- **Settings:** allows you to change your music player settings. For more information, refer to “*Music Player Settings*” on page 78.
- **Details:** allows you to view media info such as Artist, Title, Album, Track Length, Genre, Recording date, etc.

Music Player Settings

The Music Player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.




1. From the Home screen, tap  → **Music player** .
2. Press  → **Settings**.
3. Select one of the following settings:
 - **Equalizer:** set a type of equalization. Selections are: Auto, Normal, Pop, rock, Jazz, Dance, Classic, Live, or Custom.
 - **Sound effects:** configure the music effects. Selections are: Normal, Wide, Concert Hall, Music clarity, Bass enhancement, or Externalization.

- **Music menu:** this menu allows you to select which categories you want to display. Choices are: Albums, Artists, Genres, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
- **Lyrics:** when activated, the lyrics of the song are displayed if available.
- **Music auto off:** when activated, music will automatically turn off after a set interval.

Using Playlists



Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset’s Music Player options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

Creating a Playlist

1. From the Home screen, tap  → **Music player** .
2. Tap the **Playlists** tab.
3. Press  → **Create**.
4. Type a name for this playlist in the field and tap **Save**.




Adding Music to a Playlist

To add files to the playlist:

1. From the Home screen, tap  → **Music player** .
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to add music.
4. Tap **Add music**.
5. Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap **Add**.

Removing Music from a Playlist

To remove music files from a playlist:




1. From the Home screen, tap  → **Music player** .
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to delete music.
4. Press  → **Remove**.
5. Tap the checkbox to the right of each track you want to remove from this playlist, or tap **Select all** to remove all the music tracks from this playlist, then tap **Remove**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also rename the playlist.

To edit a playlist:

To edit a playlist:

1. From the Home screen, tap  → **Music player** .
2. Tap **Playlists**.
3. Press  → **Edit title**.
4. Tap a playlist name to edit.
5. Tap the **Name** field for the selected playlist, enter a new name for the playlist then tap **Save**.

For information on downloading music for your phone, see “*Play Store*” on page 181.

Play Music



With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC. see “*Play Music*” on page 181.

Movies

The Movies application allows you to rent movies to watch on your phone.

1. From the Home screen, tap  → **Settings** → **Security** → **Unknown sources**.

You are now allowed to download non-Market applications.

2. From the Home screen, tap  → **Movies** .
3. Read the Terms of Service, enter any required information, and tap **OK**.
4. Follow the on-screen instructions to rent movies.

Live TV

Live TV is a subscription service that allows you to watch your favorite TV shows using your handset.

1. Tap  → **Live TV** .

Note: The first time you use Live TV, you will need to download the application from the Market. For more information, refer to “*Play Store*” on page 181.



2. Read the **Terms and Conditions** and tap **Accept** to continue or **Exit** to exit.
3. When the **Activate Device** screen displays, tap **Activate**.
4. A text message is sent to your device with an activation link. Go to your inbox and tap on the activation link to activate your device.
5. The AT&T U-verse Live TV website is displayed.
6. Tap **Launch Application**.
7. At the **Complete action using** display, tap **Live TV**.
8. When the **Activation in Progress** screen displays, tap **Complete Activation** to activate your device. The **Success!** screen is displayed.
9. Tap **Continue**.

Note: Live TV will use a large amount of data and you are responsible for all data charges. It is strongly recommended that you upgrade to an unlimited data plan in addition to this purchase.

10. The Live TV main page displays. Follow the on-screen instructions to watch TV.

Qik Lite



Qik Lite is a mobile video sharing service that lets you record and share experiences with your friends, family, and your favorite social networks. Your video is automatically saved as you record. You can also use Qik Lite to Video Chat with your friends.

1. You will need to sign onto a Wi-Fi network first in order to use Qik Lite. For more information, refer to “*Wi-Fi*” on page 149.
2. Tap  → **Qik Lite** .
3. The first time you access Qik Lite, tap **Get started!** to create your Qik account and follow the onscreen prompts. The instructions will help you download the app from the Market. Otherwise, tap **Already a Qik user?**
4. Tap the **username** and **password** fields and enter your information, then tap **Login**.
5. Select one of the following options and follow the onscreen instructions. For more information, visit <http://qik.com/>.

- **Video Chat:** allows you to participate in two-way video chats.
- **Record & Share:** allows you to record videos and have them instantly uploaded to the web for sharing or safe-keeping.
- **Video Mail:** allows you to send videos by email.
- **Video Gallery:** allows you to see all of your videos.

Using Video Chat

To use Video Chat, you and the person you want to Video Chat with must have a Qik Video account and be signed in.



1. Tap  → **Qik Lite** .
2. Sign on to your Qik Video account and tap **Video Chat**.
3. At the Video Chat screen, tap **Dialpad**, then enter the phone number or the Qik user name of the person you want to Video Chat with.
4. Tap **Start Video Chat**.

Note: If the contact is not a Qik user, you have the option to send them a video mail. Tap Yes to continue, then tap Record new or Browse Gallery.

5. To end the Video Chat, tap **End Chat**.

Video player

The Video player application plays video files stored on your microSD card.

1. Tap  → **Video player** .
2. All videos that you have on your memory card will be displayed. Tap the video that you want to play.
3. The video will begin to play.
4. The following video controls are available:



Pause the video.



Start the video after being paused.



Press and hold to rewind the video. Tap to go to previous video.



Press and hold to fast-forward the video. Tap to go to next video.



Volume control.



Original size view. The video will be played in its original size.



Full-screen in ratio view. The video is enlarged as much as possible without becoming distorted.



Full-screen view. The entire screen is used, which may cause some minor distortion.



Allows you to listen to music using 5.1 Virtual Surround Sound.



Allows you to share the video using the AllShare app.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

For more information on downloading videos for your phone, see “*Play Store*” on page 181.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.

1. Tap  → **Gallery** .

All of the Albums that hold your pictures and videos will be displayed with folder name and number of files.


2. Tap an Album and thumbnails of the contents will be displayed.

Note: If your device displays that the memory is full when you access Gallery, delete some of the files by using **My files** or other file management applications and try again. For more information, refer to “*My files*” on page 176.

Viewing Pictures

1. Tap a thumbnail to view the picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

2. The following options are available:
 - **Send via:** allows you to send the picture via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Delete:** allows you to delete the picture. Tap **Confirm deletions** and the picture will be deleted.
3. Press  for additional options:
 - **Share via:** allows you to share the picture via AllShare, Facebook, Google+, Picasa, and Social Hub.

- **Set as:** allows you to set the picture as a Contact icon., Home screen wallpaper, or Lock screen wallpaper.
- **More:** displays additional options for editing and printing.

Viewing Videos

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

1. Touch and hold a video to select it. A checkmark will appear on the thumbnail.
2. The following options are available:
 - **Send via:** allows you to share the video via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Delete:** allows you to delete the video. Tap **Confirm deletions** and the video will be deleted.
 - **More:** displays the following additional options:
 - **Share via:** allows you to share a video via Facebook, Google+, or YouTube.
 - **Play via:** allows you to play a video via AllShare.
 - **Rename:** allows you to rename a video.

- **Details:** provides details about the picture such as Title, Type, Date taken, name of the Album it is in, Location, Latitude and Longitude (GPS coordinates), Size, Resolution, Duration, and File location.

3. Tap a thumbnail to play the video.

For Video player controls, see “*Video player*” on page 82.

Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 8 megapixel camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.

Do not take photos in places where cameras are not allowed.


Do not take photos in places where you may interfere with another person’s privacy.




Using the Camera

Taking Photos


Taking pictures with your device’s built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.


1. From the main Home screen, tap **Camera**  to activate the camera mode.


Note: The main Home screen initially contains the **Camera**  icon. If you delete it, or if you want to access the camera from another Home screen, you must tap **Applications**  → **Camera** .


2. Using the phone’s main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
3. Before you take a picture, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the picture up to x4 (400 percent).

- If desired, before taking the photo, you can tap on-screen icons to access various camera options and settings.
- You can also tap the screen to move the focus to the area you touch.
- Press the Camera key () until the shutter sounds. (The picture is automatically stored within your designated storage location. If no microSD is installed, all pictures are stored on the Phone.) For more information, refer to “*Camera Options*” on page 86.

Note: The number of JPEG pictures remaining on the selected media appears in the upper-right of the screen. This is an approximate number of total pictures that can be taken at the current image size.

Note: To enable the GPS icon, from the Camera screen tap  **Settings → GPS tag → On.**

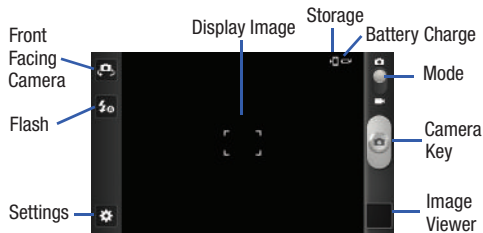

- To view a picture, tap the Image Viewer.
- While viewing a picture, double-tap the screen to zoom in or out.
– or –
Pinch the screen inwards to zoom out or pinch it outwards to zoom in.
- Press  to return to the viewfinder.

Camera Options

Options are represented by icons across both sides of the screen.

Note: The options disappear after a few seconds. Tap the screen to make them reappear.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Self shot: allows you to set the front camera so you can take pictures of yourself.



Flash: allows you to set the flash options to Off, On, or Auto flash.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self shot: allows you to set the front camera so you can take pictures of yourself or video chat.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the shooting mode. Options are:

- **Single shot:** takes a single photo and view it before returning to the shooting mode.
- **Smile shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
- **Beauty:** adjusts the contrast to smooth facial features.
- **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.
- **Action shot:** detects action and creates a panorama of the moving object.

- **Cartoon:** gives your photo a cartoon look.

Scene mode: allows you to set the Scene to help take the best pictures possible. Options include None, Portrait, Landscape, Night, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Fall Color, Firework, Text, Candlelight, and Backlight. Helpful tips are shown for each scene mode at the bottom of the display screen.

Exposure value: allows you to adjust the brightness level by moving the slider.

Focus mode: allows you to set this option to Auto focus, Macro, or Face detection. Use Macro mode to take close-up pictures. Face detection causes the camera to automatically recognize if there is a face in the shot. It then optimizes the focus and exposure the face. Use Auto focus for all others.

Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 sec, 5 sec, and 10 sec.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 8M (3264x2448), W6.5M (3264x1968), 3.2M (2048x1536), W2.4M (2048x1232), W0.4M (800x480), or 0.3M (640x480).

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

ISO: ISO determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, 400, or 800. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots.

Metering: allows you to set how the camera measures or meters the light source: Centre-weighted, Spot, or Matrix.

Anti-Shake: reduces image blur due to the movement of the subject of the photo or hand movement.

Auto contrast: provides a clear image even under backlight circumstances where intensity of illumination can vary excessively.

Guidelines: allows you to turn the guidelines On or Off.

Image quality: allows you to set the image quality to: Superfine, Fine, or Normal.

GPS tag: allows you to turn GPS On or Off (also known as Geotagging). The location of where the picture is taken is attached to the picture. (Only available in Camera mode.)

Shutter sound: allows you to set the Shutter sound to On or Off.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).


Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected picture. Image viewer options are described in the following section. The last picture you took, will be displayed as a thumbnail in the Image viewer icon.

Pictures and Videos Image Viewer Options

After you take a photo or shoot a video, you can access various options from the Pictures and Videos Image Viewer.

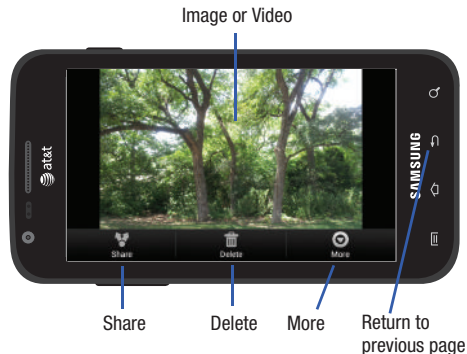



Available options are:


- **Share:** offers several ways to share your picture or video. Options are: AllShare, Bluetooth, Email, Facebook, Gmail, Google+, Messaging, Photo Editor, Picasa, Social Hub, and Wi-Fi Direct.
- **Delete:** allows you to delete the current picture. Tap **OK** to delete or **Cancel**.
- **More:** allows you to do the following:
 - **Set as:** allows you to assign the current image as either your current Wallpaper or as a Contact icon to display for a specific entry within your Address Book.
 - **Rename:** allows you to rename a picture.
- **Return to previous page** (): takes you back to the previously active camera page where you can take another photo or shoot a new video.

Accessing Pictures

When you take a picture, the file is saved in the Camera folder. You can view your pictures immediately or view them anytime in the Camera folder.

1. From the Home screen, tap  → **My files**  → **DCIM** → **Camera**.
2. Tap a photo file to open it in the Image viewer.

3. Sweep the screen to the left to see the next picture or to the right to see the previous picture.

Before you select a picture, press  in the Camera folder to see the following options:

- **Share:** lets you share selected pictures with AllShare, Bluetooth, Email, Facebook, Gmail, Google+, Messaging, Photo editor, Picasa, Social Hub, Wi-Fi Direct, or YouTube.
- **Create folder:** create a new sub-folder in the current folder. Can be on either the Phone or Memory Card.
- **Delete:** allows you to delete selected pictures. Tap the checkmark, to turn it green, next to any file or folder you want to delete, then tap Delete.
- **View by:** allows you to view the contents of the current folder as a list, as a list and details, or as thumbnails.
- **Sort by:** allows you to view the contents of the current folder sorted by Time, Type, Name, or Size.
- **Move:** allows you to move one or more pictures to a different folder.
- **Copy:** allows you to copy one or more pictures to a different folder.
- **Rename:** allows you to rename one or more picture files.

- **Settings:** lets you set several general folder options:
 - **Show hidden files:** causes files and folders that would normally be hidden to be displayed.
 - **Show file extension:** causes file extensions to be displayed. For example, jpg.
 - **Set Home directory:** allows you to choose and set the Home directory.




Selecting and Using the Pictures

From the Image viewer, you have access to both macro functions (zoom, crop, and rotate) and menu options. For more information, refer to “*Pictures and Videos Image Viewer Options*” on page 88.

Editing a Photo

You can edit your photos using the Photo editor application on your phone. For more information, refer to “*Photo editor*” on page 95.





Assigning an Image to an Address Book Entry

1. From the Home screen, tap  → **My files**  → **DCIM** → **Camera** → **<image>**.
2. Press  → **Set as** → **Contact icon**. Tap a contact entry.
3. Touch and drag the orange crop box anywhere on the picture.

4. Tap **Save**.

For more information, refer to “*Contacts and Your Address Book*” on page 62.

Assigning an Image as a Wallpaper

1. From the Home screen, tap  → **My files**  → **DCIM** → **Camera** → **<image>**.
2. Press  → **Set as** → **Home screen wallpaper**.
– or –
Press  → **Set as** → **Lock screen wallpaper**.
3. Touch and drag the orange crop box anywhere on the picture.
4. Tap **Save** to assign the wallpaper image. Tap **Cancel** to stop without updating the wallpaper image.






Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send videos.

Note: The camera may not be able to properly record videos to a memory card with a slow transfer speed.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the main Home screen, tap **Camera**  to activate the camera mode.
2. Tap and slide the Camera mode button down to Camcorder Mode.
3. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
4. Tap the Video key () to begin shooting video. The red light will blink while recording.
5. Tap the Video key () again to stop the recording and save the video file to your Camera folder.
6. Once the file has been saved, tap the image viewer, then tap  to play your video for review.
7. Press  to return to the viewer.

Camcorder Options

Options are represented by icons across both sides of the screen.

Note: The options disappear after a few seconds. Tap the screen to make them reappear.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Limit for MMS, which is limited by MMS size restrictions, and Self recording which activates the front-facing camera so you can video yourself.



Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Limit for MMS, which is limited by MMS size restrictions, and Self recording which activates the front-facing camera so you can video yourself.

Exposure value: allows you to adjust the brightness level by moving the slider.

Timer: allows you to set a timer for how long to wait before taking a video. Options include: Off, 2 sec, 5 sec, and 10 sec.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 1920x1080, 1280x720, 720x480, 640x480, 320x240, or 176x144.

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Outdoor visibility: allows you to take better pictures when outdoors. Options are Off or On.

Video quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Guidelines: allows you to turn the guidelines On or Off.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected video. Image viewer options are described in the following section. The last video you took, will be displayed as a thumbnail in the Image viewer icon.





Camcorder Options after a Video is Taken


After you shoot a video, you can access various options from the Pictures and Videos Image Viewer.

- The following options are available:
 - **Share:** offers several ways to share your video. Options are: AllShare, Bluetooth, Email, Facebook, Gmail, Messaging, Wi-Fi, and YouTube.
 - **Delete:** allows you to delete the current video. Tap **OK** to delete or **Cancel**.
 - **More:** allows you to access the following additional options:
 - **Play:** allows you to play the video
 - **Rename:** allows you to rename the video.

Accessing Videos


When you shoot a video, the file is saved in the Camera folder. You can view your videos immediately or view them anytime in the Camera folder.

1. From the Home screen, tap  → **My files**  → **DCIM** → **Camera**.
2. Tap a video file to open it in the viewer and initiate playback.
3. To pause the video, tap . To play the video, tap .

Before you select a video to play, press  in the Camera folder to see the following options:

- **Share:** lets you share selected pictures with AllShare, Bluetooth, Email, Facebook, Gmail, Google+, Messaging, Photo Editor, Picasa, Social Hub, Wi-Fi Direct, or YouTube.
- **Create folder:** create a new sub-folder in the current folder. Can be on either the Phone or Memory Card.
- **Delete:** allows you to delete selected videos. Tap the checkmark, to turn it green, next to any file or folder you want to delete, then tap Delete.
- **View by:** allows you to view the contents of the current folder as a list, as a list and details, or as thumbnails.

- **Sort by:** allows you to view the contents of the current folder sorted by Time, Type, Name, or Size.
- **Move:** allows you to move one or more videos to a different folder.
- **Copy:** allows you to copy one or more videos to a different folder.
- **Rename:** allows you to rename one or more video files.
- **Settings:** lets you set several general folder options:
 - **Show hidden files:** causes files and folders that would normally be hidden to be displayed.
 - **Show file extension:** causes file extensions to be displayed. For example, 3gp.
 - **Set Home directory:** allows you to choose and set the Home directory.









While you are playing a video, press  to display the following options:

- **Share via:** lets you share the video with AllShare, Bluetooth, Facebook, Wi-Fi Direct, Messaging, YouTube, Email, or Gmail.
- **Video brightness:** allows you to set the brightness for a video that is playing. You can also select Automatic brightness.
- **Via Bluetooth:** scans for a Bluetooth device on which to play the video.

- **Subtitles:** allows you to view subtitles if they are present in the video.
- **Details:** displays file information such as file name, format, resolution, file size, date & time, and forwarding capability.

While viewing a video, you can also adjust the screen view. Screen view allows you to select Original Size, Full-Screen, or Full-Screen in Ratio to view your video.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

- **Original Size:** () the video will be played in its original size.
- **Full-Screen in Ratio View:** () the video is enlarged as much as possible without becoming distorted.
- **Full-Screen View:** () the entire screen is used, which may cause some minor distortion.
- **Pause/Resume:** tap   to pause the video being played. Tap  to resume playing.
- **Previous/Next:** tap  to jump to the previously played video or tap  to jump to the next video file in the Camera folder.




- **Exit:** to return to the videos list, tap the  icon in the top right corner of the screen.

Photo editor

The Photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

1. From the Home screen, tap  → **Photo editor** .
2. Tap **Select picture** to edit a picture in your Gallery.
– or –
Tap **Capture picture** to take a picture with the camera.
3. Tap the picture and it is loaded into the Photo editor.
4. Use the following Photo editor controls to edit your picture:



Selection Size: allows you to set the size of the selection tool to Small, Medium, or Large.



Selection: use the selection tool to mark an area for cropping, rotating, etc.



Crop: allows you to crop (cut-out) an area of a photo.



Rotate: allows you to rotate a photo in all 4 directions. You can also mirror image a photo.



Move: use the move feature to move a photo around when you are zoomed in and the entire photo is not showing on the screen.



Tools: allows you to Copy and Paste to different images. You can also use Warping and Fill.



Effects: allows you to add various effects to your photo.



Color: allows you to adjust the Saturation, Contrast, Brightness of a photo. You can also make it gray-scale.



Next: move to next photo project.



Previous: move to previous photo project.

5. Press  to access the following options:
 - **New:** starts a new Photo Editor project. Be sure and save the photo you are working on before starting a new project.

- **Save:** saves your photo to your gallery.
- **Share:** allows you to share your photo via AllShare, Bluetooth, Email, Facebook, Gmail, Google+, Messaging, Picasa, or Wi-Fi Direct.

Section 7: Messaging

This section describes how to send and receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk
- Google +
- Messenger



The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.




The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.


Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.


Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to “Indicator Icons” on page 22.

Creating and Sending Messages

1. From the main Home screen, tap **Messaging**  → **New message** .

Note: The main Home screen initially contains the **Messaging**  icon. If you delete it, or if you want to access Messaging from another Home screen, you must tap **Applications**  → **Messaging** .

2. Tap on the **Enter recipient** field to manually enter a recipient or tap  to select a recipient from your Contacts.

3. If adding a recipient from your Contacts, tap the contact to place a checkmark then tap .

The contact will be placed in the recipient field.

Note: For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.




Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

4. Tap the **Tap to enter message** field and use the on-screen keypad to enter a message. For more information, refer to “*Entering Text*” on page 57.
5. Add more recipients by tapping the recipient field.
6. Review your message and tap **Send**.


Note: If you exit a message before you send it, it will be automatically saved as a draft.

Message Options

Options before composing a message


1. From the main Home screen, tap **Messaging** .
2. Before composing a message, press  to reveal additional messaging options:
 - **Search:** allows you to search through all of your messages for a certain word or string of words. Enter a search string in the Messaging Search window and tap .
 - **Settings:** allows you to access Messaging settings. For more information, refer to “*Messaging Settings*” on page 102.
 - **Delete threads:** allows you to delete any message thread. Select the messages to delete and a green checkmark will appear next to the message. Tap **Delete**.


Options while composing a message

1. While composing a message, press  to reveal additional messaging options.
 - **Insert smiley:** allows you to add emoticons, such as a happy face to your message.
 - **Call:** allows you to call the contact. This option only appears if you have entered a phone number for the recipient.

- **Add text:** allows you to copy text from your contacts, calendar, or from a memo to add to your message. This is a convenient feature for adding names, phone numbers, events, etc. to your message. For more information, refer to “*Adding Additional Text*” on page 100.
- **Add to Contacts:** allows you to add the recipient to your Contacts list. This option only appears if the recipient is not already in your Contacts list.
- **View contact:** allows you to see information on the recipient. This option only appears if the recipient is in your Contacts list.
- **Add slide:** allows you to add a new page to a message.
- **Delete message:** allows you to delete the message.


Adding attachments to a message

To add an attachment to your message, tap  and select one of the following options:


- **Pictures:** allows you to tap an existing image from your Pictures list to add it to your message.
- **Take picture:** allows you to temporarily exit the message, take a photo with phone’s camera, and then add it to your message by tapping **Save**.
- **Videos:** allows you to choose an existing video from the Videos list, then add it to your message.
- **Capture video:** allows you to temporarily exit the message, record a video clip using the phone’s camera, and then add it to your message by tapping **Save**.
- **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping **OK**.
- **Record audio:** allows you to temporarily exit the message and record an audio clip using the phone’s microphone. It is then automatically attached to the message.
- **Location:** allows you to attach a thumbnail of a map showing your location.
- **Contacts:** allows you to tap on an existing Address Book entry, then add it to your message by tapping .
- **Calendar:** allows you to tap on an existing Calendar event, then add it to your message by tapping **Add**.
- **Memo:** allows you to tap on an existing Memo, then add it to your message by tapping **Attach**.
- **Task:** allows you to tap on an existing Task list, then add it to your message by tapping **Attach**.


Adding Additional Text

You can copy text such as names, phone numbers, and events from your Contacts, Calendar or a Memo.



1. While composing a message, press  → **Add text**.
2. At the Add text screen, select one of the following:
 - **Location:** allows you to add an address and the link to the location on Google Maps.
 - **Contacts:** allows you to add the name and phone number of any of your contacts to your message.
 - **Memo:** allows you to add an entire memo to your message.
 - **Task:** allows you to add a task to your message.
 - **Calendar:** allows you to add the name, date, and time of a calendar event to your message.
 - **Text templates:** allows you to add pre-defined phrases and sentences.
3. Tap the information you want to send. This will place a checkmark next to the item.
4. Tap **Add** unless you are adding text from Location. The text is added to your message.

Viewing New Received Messages

1. When you receive a new message, the new message  icon will appear at the top of your screen.
2. Open the Notification Bar and select the message. For more information, refer to “*Notification Bar*” on page 43.
– or –

From the main Home screen, tap **Messaging**  then tap the new message to view it.

The selected message appears in the display.


3. To play a multimedia message, tap .
 - To pause playback of the multimedia message, tap .
4. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and


displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To open a threaded message follow these steps:



1. From the main Home screen, tap **Messaging** .
Tap the message thread you want to view.
2. Touch and hold the message thread to display the following options:
 - **View contact**: displays the contact's information. This option only displays if the sender is in your Contacts list.
 - **Add to Contacts**: displays the Contacts information screen. This option only displays if the sender is not in your Contacts list.
 - **Delete thread**: displays a confirmation dialog box that when pressed, deletes the entire thread.

Deleting Messages

Deleting a single message thread




1. From the main Home screen, tap **Messaging** .
2. Touch and hold a message, then tap **Delete thread**.
3. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Deleting multiple message threads

1. From the main Home screen, tap **Messaging** .
2. Press  → **Delete threads**.
3. Tap each message you want to delete. A checkmark will appear beside each message you select.
4. Tap **Delete**.
5. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.


Message Search

You can search through your messages by using the Message Search feature.

1. From the main Home screen, tap **Messaging** .
2. Tap  → **Search**.
3. Use the on-screen keypad to enter a word or phrase to search for, then tap .
4. All messages that contain the search string you entered are displayed.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From the main Home screen, tap **Messaging**  →

 → **Settings**.

2. The following Messaging settings are available:


- **Message font size:** allows you to set the size of your message text to Tiny, Small, Normal, Large, or Huge.
- **Split view:** allows you to enable split view when you have the phone in landscape orientation.
- **Delete old messages:** deletes old messages when the limit is reached, rather than having them overwritten.
- **Text message limit:** allows you to set a limit on how many text messages can be in one conversation.
- **Multimedia message limit:** allows you to set a limit on how many multimedia messages can be in one conversation.
- **Text templates:** allows you to add pre-defined phrases and sentences.
- **Manage SIM card messages:** allows you to manage the messages that you have stored on your SIM card.
- **Message center:** allows you to enter the number of your Message center where your messages reside while the system is attempting to deliver them.
- **Input mode:** allows you to set the input mode for your text messages. Choose between GSM Alphabet, Unicode, or Automatic.
- **Auto-retrieve:** allows the message system to retrieve messages automatically.
- **Creation mode:** allows you to select the creation mode, Free, Restricted, or Warning.
 - **Restricted:** you can only create and submit messages with content belonging to the Core MM Content Domain.
 - **Warning:** the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain.
 - **Free:** you may add any content to the message.
- **Push messages:** allows you to receive push messages from the network.
- **CB activation:** allows you to receive Cell Broadcast (CB) messages.

- **Channel configuration:** allows you to set up the channel that you will receive CB messages on.
- **Language:** allows you to select all of the languages that you want to receive CB messages in.
- **Notifications:** allows you to see message notifications on your status bar.
- **Select ringtone:** allows you to set the ringtone for your message notifications.

Using Email

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email.


Creating an Email Account


1. From the Home screen, tap **Email** . Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to use this email with Social Hub, tap **Set as premium account** to create a checkmark.

5. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
6. Tap **Next**.
7. Enter an account name for this email account (optional).
8. Tap **Done**.

Synchronizing a Corporate Email Account




Use the following procedure to configure your phone to synchronize with a corporate email account.

1. From the Home screen, tap **Email** . Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to use this email with Social Hub, tap **Set as premium account** to create a checkmark.
5. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
6. Scroll down and tap **Manual setup**.
7. Tap the **Microsoft Exchange ActiveSync** field.


8. Enter all the Exchange server information, Domain, Username and Password, then tap **Next**.
9. At the prompt tap **OK**.
The Account options screen is displayed.
10. Enter the desired information in the different fields, then tap **Next**.
11. Enter an Account name for this account (Optional).
Wait for the Inbox to synchronize before use.
12. Tap **Done**.
13. Press  → **More** → **Account Settings** to change the account settings.

Creating Additional Email Accounts

To create additional email accounts after setting up your first account, follow these steps:

1. From the Home screen, tap **Email** .
Your Email screen displays showing your emails from the active account.
2. Press  → **Settings** →  then enter the information required to set up another account. For more information, refer to “*Creating an Email Account*” on page 103.

Switching Between Email Accounts



1. From the Home screen, tap **Email** .
Your Email screen displays showing your emails from the active account.
2. Tap the box at the top of your screen that displays the optional name you assigned to your first email account, for example, Work, Gmail, etc.
Your Email account screen is displayed.
3. In the **Accounts** section, tap the Email account you would like to switch to. You can also select **Combined view** which will display email messages from all accounts.
4. The new Email account is displayed.

Using Gmail



Gmail is Google’s web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Your Gmail

Note: You must sign in to your Gmail account in order to access Gmail.




1. Sign on to your Google account if you are not already signed on. see “*Creating a New Google Account*” on page 13.
2. From the Home screen, tap  → Gmail .
3. Follow the on-screen instructions.
The Inbox loads conversations and email.

Creating a Gmail Message

1. From the Gmail Inbox, tap  at the bottom of the screen to create a new message.
2. Enter the recipients Email address in the **To** field.
Separate multiple recipient email addresses with a comma.
3. Tap  and select **Add Cc/Bcc** to add a carbon or blind copy.
4. Enter the subject of this message in the **Subject** field.
5. Tap the **Compose email** field and begin composing your message.




6. Tap  to send.

Viewing a Gmail Message

1. From the Gmail Inbox, tap a message to view it.
2. The following options are available at the bottom of the screen:
 - **Archive** : archives the selected message.
 - **Delete** : deletes the message.
 - **Labels** : allows you to attach labels to a message. This is similar to putting it in a folder.
 - **Mark Unread** : after reading a message, marks as unread.
 - **Newer**: swipe your screen to the right to see newer messages.
 - **Older**: swipe your screen to the left to see older messages.
3. Before selecting a message, press  to select one of the following additional options:
 - **Label settings**: allows you to set sync and notification settings.
 - **Settings**: displays Email settings that you can modify.
 - **Help**: displays the Google.com webpage so you can search the web for help.
 - **Send feedback**: allows you to send feedback or report a problem.



4. After selecting a message, press  to select one of the following additional options:
- **Mark important/not important:** allows you to set the importance of a message.
 - **Mute:** allows you to mute the sound in a message if applicable.
 - **Report spam:** allows you to report a message as spam. Tap the UNDO option if you change your mind.
 - **Settings:** displays Email settings that you can modify.
 - **Help:** displays the Google.com webpage so you can search the web for help.
 - **Send feedback:** allows you to send feedback or report a problem.

Other Gmail Options

1. Tap  at the bottom of the screen to refresh the screen, send and receive new emails, and synchronize your email with the Gmail account.
2. Tap  at the bottom of the screen to set up and manage Labels for your Gmail messages.
3. Tap  at the bottom of the screen to search through your Gmail messages.

Google Talk



Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

1. From the Home screen, tap  → Talk .
2. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 13.
3. Begin using Google Talk.

Note: If you have already signed into an IM account, it is displayed on the Talk application screen.



Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

1. Sign on to your Google account. For more information, refer to *“Creating a New Google Account”* on page 13.
2. From the Home screen, tap  → **Google+** .
3. Select the account you want to use to sign in to Google+.
– or –
Tap **Add account** to create another account.
4. Follow the on-screen instructions to use Google+.
5. Visit www.google.com/mobile/+/ for more information.



Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

1. Sign on to your Google account. For more information, refer to *“Creating a New Google Account”* on page 13.
2. From the Home screen, tap  → **Messenger** .
- or –
From the Google+ application, select **Messenger**.
3. Select the account you want to use to sign in to Google+.

– or –

Tap **Create a new account** to create another account.

4. At the **Messenger** screen, tap  to start a new message.
5. In the upper text field, enter a name, email address, or circle.
6. In the bottom message field, enter a message then tap .
7. From the **Messenger** screen, tap **Learn more** for more detailed information.

Section 8: Changing Your Settings

This section explains the settings used for customizing your device.

Accessing Settings

- From any Home screen, tap  → **Settings**.

– or –

From any Home screen, press  → **Settings**.

The Settings screen displays.

Wi-Fi Settings

This section describes the Wi-Fi settings. For information on how to use Wi-Fi, see “*Wi-Fi*” on page 149.

Activating Wi-Fi

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .

Advanced Wi-Fi Settings

The advanced Wi-Fi settings allow you to set up and manage wireless access points.

1. From the Home screen, tap  → **Settings** → **Wi-Fi**.
2. Tap **Advanced**.



The following options are available:

- **Network notification:** alerts you when a new WAP is available.
- **Keep Wi-Fi on during sleep:** allows you to specify when to disconnect from Wi-Fi.
- **Auto connect:** allows you to be automatically connected to an AT&T Wi-Fi Hotspot as soon as your phone detects it.
- **Notify AT&T network:** automatically notifies you when you are in the range of an AT&T Wi-Fi network.
- **Wi-Fi frequency band:** allows you to specify the frequency range of operation. Choose from Auto, 5GHz only, or 2.4 GHz only.
- **MAC address:** view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address:** view your device's IP address.

Bluetooth settings



In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair.

Activating Bluetooth

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON .

Additional Bluetooth Settings



When Bluetooth is on, additional settings are available.

1. From the Home screen, tap  → **Settings** → **Bluetooth**.
2. Tap **Scan for devices** to scan for nearby discoverable devices. After searching, tap a device to pair with it. For more information, refer to “*Pairing Bluetooth Devices*” on page 154.
3. Tap  and select a Bluetooth setting to configure:
 - **Device Name:** Your device’s default name displays on screen. Tap to change the device name. Available when Bluetooth is turned On.

- **Visible time-out:** Use this setting to control when to automatically turn off the Discoverable option: 2 minutes, 5 minutes, 1 hour, or Never timeout.
- **Show received files:** Show the list of files received by using Bluetooth.

Data Usage

From this screen you can view your Mobile data usage and turn your Mobile data capability On or Off.


1. From the Home screen, tap  → **Settings** → **Data usage**.
2. Tap the ON/OFF slider, located to the right of the Mobile data field, to turn Mobile data usage ON .
3. Tap **Set mobile data limit** to create a checkmark and allow a data limit to be set.
4. Tap the **Data usage cycle** drop-down menu and select a date.

The data usage displays as a visual (chart) and also displays a list of each application with a breakdown of how many MB were used per application.

Note: Data is measured by your device. Your service provider may account for data usage differently.

More... Settings

This tab displays additional wireless and network information.

- From the Home screen, tap  → **Settings** → **More...** Options display for Airplane mode, USB Utilities, VPN, Tethering and portable hotspots, NFC, Android Beam, Wi-Fi Direct, and Mobile networks.

Airplane mode


Airplane mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Airplane Mode, it cannot send or receive any calls or access online information or applications.

1. From the Home screen, tap  → **Settings** → **More...**
2. Tap **Airplane mode**. A check mark displayed next to the feature indicates Airplane mode is active. The Airplane mode icon  is displayed at the top of your screen.

USB utilities

This option allows you to copy files between your PC and the memory card in your phone.

1. From the Home screen, tap  → **Settings** → **More...** → **USB utilities**.
2. Connect your phone to your PC using a USB cable.
3. Tap **Connect storage to PC**.
4. From your PC, open the folder to view your files.
5. Copy files between your PC and the memory card.

VPN settings

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

1. From the Home screen, tap  → **Settings** → **More...** → **VPN**.

Note: You must first set up a Lock screen using either a PIN or a password. For more information, refer to “*Screen Lock*” on page 125.

2. Tap **Add VPN network**.
3. Enter a name for the VPN network in the **Name** field.
4. Select a VPN type from the **Type** drop-down menu. The options are:
 - PPTP (Point-to-Point Tunneling Protocol)
 - L2TP/IPSec PSK (Layer 2 Tunneling Protocol / Internet Protocol Security Pre-Shared Key)
 - L2TP/IPSec RSA
 - IPSec Xauth PSK



- IPSec Xauth RSA
- IPSec Hybrid RSA

5. Enter the Server address and any other required fields.
6. Tap the **Show advanced options** check box to display additional VPN options.
7. Tap **Save** to save your VPN settings.

Tethering & portable hotspot



This option allows you to share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

USB Tethering

1. From the Home screen, tap  → **Settings** → **More...** → **Tethering and portable hotspots**.
2. Connect your phone to your PC using a USB cable.
3. Tap **USB tethering** to add a checkmark and activate the feature. The USB tethering icon  is displayed at the top of your screen.

Portable Wi-Fi hotspot

1. From the Home screen, tap  → **Settings** → **More...** → **Tethering and portable hotspots** → **Portable Wi-Fi hotspots**.

2. Turn Portable Wi-Fi Hotspots on by tapping the slider so that it changes to the ON position  .
The Portable Wi-Fi hotspot icon  is displayed at the top of your screen.
3. Tap **Configure**.
4. Enter or edit the Network SSID, Hide my device, Security setting and Password.
5. Tap **Show password** and **Show advanced options** to see them displayed.
6. Tap **Save**.

Connecting to Portable Wi-Fi hotspot from other devices

1. Activate Wi-Fi on the device that wants to connect to your phone.
2. Find [SGllskyrocket_xxxx] in the Wi-Fi network list and connect to it. XXXX are four randomly generated digits that will appear when you set up a Portable Wi-Fi hotspot on your device.
The connected device can now use internet through your Portable Wi-Fi hotspot.

Note: Activating Wi-Fi and connecting to your phone will be different depending on the type of the other device.

Help

- From the **Tethering and portable hotspot** menu, tap **Help** for additional information.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as Android Beam.


To activate NFC, follow these steps:

1. From the Home screen, tap  → **Settings** → **More...**
2. Tap **NFC** to create a checkmark and activate the feature.

Android Beam



When Android Beam is activated, you can beam application content to another NFC-capable device by touching the devices back-to-back. You can beam browser pages, YouTube videos, contacts, and more.

1. From the Home screen, tap  → **Settings** → **More...** → **Android Beam**.

2. Tap the **OFF / ON** icon to turn Android Beam on .
3. Touch the back of your device with another NFC-capable device and the content is transferred.

Activating Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. From the Home screen, tap  → **Settings** → **More...** → **Wi-Fi Direct**.
2. Tap the **OFF / ON** icon to turn Wi-Fi Direct on . For more information, refer to “*Wi-Fi Direct*” on page 151.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

Use Packet Data


To activate the data network, this option must be selected. It is set on by default.

1. From the Home screen, tap  → **Settings** → **More...** → **Mobile networks**.

2. Tap **Use packet data** to create a checkmark and activate the feature.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

1. From the Home screen, tap  → **Settings** → **More...** → **Mobile networks**.
2. Tap **Data roaming** to create a checkmark and activate the feature.

Access Point Names

To use Wi-Fi you need access to a wireless access point (hotspot).

1. From the Home screen, tap  → **Settings** → **More...** → **Mobile networks**.
2. Tap **Access Point Names**.

A list of the Access Point names display. The active access point displays a green, filled circle to the right of the name.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

1. From the Home screen, tap  → **Settings** → **More...** → **Mobile networks**.
2. Tap **Network operators**.

The current network connection displays at the bottom of the list.


Important! You must deactivate data service prior to searching for an available network.

3. Tap **Search networks** to manually search for a network.
4. Tap **Select automatically** to automatically select a network connection.

Note: Connecting to 2G networks slows the data transfer speed and time.


Default setup options

Your phone default is set to Automatic (to automatically search for an available network. You can set this option to Manual to select a network each time you connect.



1. From the Home screen, tap  → **Settings** → **Wireless and network** → **Mobile networks**.
2. Tap **Network operators**.
3. Tap **Default setup**.
4. Tap **Manual** to locate and connect to a network manually, or tap **Automatic** to allow the device to automatically select a network.

Call Settings

To access the Call settings menu:

- From the Home screen, tap  → **Settings** → **Call**.

Call rejection

1. From the Home screen, tap  → **Settings** → **Call** → **Call rejection** → **Auto reject mode** to enable your phone to reject calls.
2. Select **Off**, **All numbers**, or **Auto reject numbers**.
3. Tap **Auto reject list**.
4. Tap  to manually add numbers to the Reject list.

5. Tap **Unknown**, to create a checkmark and automatically reject all unknown calls.

Set reject messages

1. From the Home screen, tap  → **Settings** → **Call** → **Set reject messages**.

2. Tap  to manually add a reject message.

– or –

Tap one of the pre-written messages to be displayed when you want the call to be rejected. You can edit the message if desired.

3. Tap **Save**.

Call alert

1. From the Home screen, tap  → **Settings** → **Call** → **Call alert**.

2. Tap **Answer vibration** to enable your phone to vibrate when the called party answers the phone.

3. Tap **Call status tones** to set the sound settings during a call then tap **OK**.

4. Tap **Alerts on call** to set the alert type.

Call answering/ending

1. From the Home screen, tap  → **Settings** → **Call** → **Call answering/ending**.

2. The following options are available:

- **Answering key:** Tap this option to be able to accept incoming calls by pressing the Home key.
- **Automatic answering:** Tap this option if you are using a headset and want the call to be automatically answered. Select the time interval before the call is automatically answered.
- **The Power key ends calls:** This option will allow you to end a call by pressing the power key without turning off the screen.

Turn on proximity sensor

- From the Home screen, tap  → **Settings** → **Call** → **Turn on proximity sensor**.

When you answer a call, the screen will be turned off to save power.

Call forwarding

1. From the Home screen, tap  → **Settings** → **Call** → **Call forwarding** → **Voice call**.


2. Tap one of the following options:

- **Always forward:** allows you to forward all voice calls.

- **Forward when busy:** allows you to forward voice calls to a designated number instead of your voice mail number if you are on another phone call.
- **Forward when unanswered:** allows you to forward voice calls to a designated number instead of your voicemail number when there is no answer on your phone. You can also select the amount of time that the phone delays before forwarding.
- **Forward when unreachable:** allows you to forward voice calls to a designated number instead of your voicemail number when you are not in an area covered by your service provider or when your phone is switched off.


TTY Mode

This menu is used to activate or deactivate Hearing Aid Compatibility for this device.


1. From the Home screen, tap  → **Settings** → **Call** → **TTY mode**.
2. Tap **Full TTY**. A green checkmark will appear. Tap **TTY mode off** to turn it off.

Hearing aids

This option allows you to turn on Hearing aid compatibility on your device.


1. From the Home screen, tap  → **Settings** → **Call**.
2. Tap **Hearing aids** to create a checkmark and make your device compatible with a Hearing aid.

Additional settings

1. From the Home screen, tap  → **Settings** → **Call** → **Additional settings**.
2. Tap one of the following options:
 - **Caller ID:** allows you to choose how your Caller ID will be displayed. Select Network Default, Hide number, or Show number.
 - **Call waiting:** the network service informs you when someone is trying to reach you during another call. Tap to activate.
 - **Auto redial:** automatically redials the last number if the call was either cut off or was unable to connect. Tap to activate.
 - **Fixed dialing numbers:** allows you to restrict outgoing calls to a limited set of phone numbers.


Using Fixed Dialing Numbers

Enabling FDN

1. From the Home screen, tap  → **Settings** → **Call** → **Additional settings** → **Fixed dialing numbers**.
2. Tap **Enable FDN**.
3. At the prompt, enter your PIN2 code and tap **OK**.
FDN is enabled.
4. To enable FDN after it has been disabled, tap **Disable FDN**, enter your PIN2 code and tap **OK**.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.
The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code could cause the phone to lock. Contact customer service for assistance.

Changing the PIN2 Code


1. From the Home screen, tap  → **Settings** → **Call** → **Additional settings** → **Fixed Dialing Numbers**.
2. Tap **Change PIN2**.
3. At the prompt, enter your old PIN2 code.
4. At the prompt, enter a new PIN2 code.

5. Confirm your PIN2 code.


Managing the FDN List

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: Before you can manage an FDN list, a list must be created.


1. From the Home screen, tap  → **Settings** → **Call** → **Additional settings** → **Fixed Dialing Numbers**.
2. Tap **FDN list**.
3. A list of all existing FDN numbers will be displayed.

Voicemail service

1. From the Home screen, tap  → **Settings** → **Call** → **Voicemail service**.
Voicemail service provided by your carrier is the default.
2. Tap **My carrier** to remove the carrier Voicemail service.

Voicemail

You can view or modify your voicemail number from this menu.

1. From the Home screen, tap  → **Settings** → **Call** → **Voicemail**.
2. Tap the **Voice mail number** field, backspace to erase the digits, and enter a new voicemail number using the keypad, then tap **OK**.
3. Tap **OK**.

Sound Settings


From this menu you can control the sounds on the phone.

- From the Home screen, tap  → **Settings** → **Sound**.

The following options display:


Volume

The Volume option allows you to change the volume for all phone sounds in one easy location.

1. From the Home screen, tap  → **Settings** → **Sound** → **Volume**.
2. Touch and drag the slider to adjust the sound volume for Media, Ringtone, Notifications, and System.
3. Tap **OK**.


Vibration intensity

Vibration intensity allows you to select how intense the vibration is for different options.

1. From the Home screen, tap  → **Settings** → **Sound** → **Vibration intensity**.
2. Touch and drag the slider to adjust the Vibration intensity for Ringtone, Notification, and Vibrate on screen tap.

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example. In Silent Mode the speaker is muted and the phone only vibrates to notify you of incoming calls, or other functions that normally have a defined tone or sound as an alert.

1. From the Home screen, tap  → **Settings** → **Sound**.
2. Tap **Silent mode**.
3. Tap **Off**, **Vibrate**, or **Mute**.
– or –
5. From the Home screen, press the **Lock** key until **Phone options** displays.

2. Tap **Silent mode** to activate or deactivate this mode (the current mode displays).

Phone ringtone

This option allows you to set the ringtone.

1. From the Home screen, tap  → **Settings** → **Sound**.
2. Tap **Phone ringtone**.
3. Tap a ringtone and tap **OK**.

Default Notifications

This option allows you to set the ringtone that will sound for notifications and alarms.

1. From the Home screen, tap  → **Settings** → **Sound**.
2. Tap **Default Notifications**.
3. Tap a ringtone and tap **OK**.


Sound and Vibration

This option allows you to set your phone to vibrate and ring.

1. From the Home screen, tap  → **Settings** → **Sound**.
2. Tap **Sound and vibration**. A green checkmark appears.

System Tone Settings

The System tone settings are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen.

1. From the Home screen, tap  → **Settings** → **Sound**.
2. Tap any of the following options to create a checkmark and activate the feature:
 - **Keytones**: makes a sound when you tap a key on the keyboard.
 - **Touch sounds**: makes a sound when you touch the screen.
 - **Screen lock sound**: makes a sound when your screen is locked or unlocked.
 - **Vibrate on screen tap**: makes a vibration when you tap the screen.

Display Settings

In this menu, you can change various settings for the display such as the font, orientation, pop-up notifications, puzzle lock feature, animation, brightness, screen timeout, power saving mode, and tv out settings.

- From the Home screen, tap  → **Settings** → **Display**.

The following options display:

- **Home screen wallpaper:** allows you to set the home screen wallpaper.
- **Lock screen wallpaper:** allows you to set the lock screen wallpaper.
- **Clock:** allows you to display the clock on the lock screen.
- **Weather:** allows you to display the weather on the lock screen.
- **Weather settings:** allows you to have the temperature displayed in Fahrenheit or Celsius. You can also set the Auto refresh rate.
- **Clock and weather position:** allows you to set the location of the Clock and Weather to Top, Middle, or Bottom.
- **Help text:** displays Help text on the lock screen.
- **Brightness:** configures the LCD Brightness levels. Tap Automatic brightness to allow the phone to self-adjust or drag the slider and tap OK.
- **Auto-rotate screen:** allows you to switch the display orientation automatically when you rotate the phone.
- **Screen timeout:** adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, and 10 minutes.

- **Font style:** allows you to set the font style that your phone will use. You can also tap Get fonts online to choose from a wider selection.
- **Display battery percentage:** allows you to see the battery charge percentage next to the battery charge icon at the top of the display.
- **Touch key light duration:** allows you to set the time that the touch keys located on the bottom of your phone are lit.
- **Auto adjust screen power:** allows you to save power because the phone analyzes the displayed screen image and adjusts the LCD brightness.
- **Gyroscope calibration:** allows you to calibrate the gyro sensors. Place your device on a level surface and tap **Calibrate**.

Power Saving Mode

Power Saving Mode allows you to manage your phone to conserve power.

1. From the Home screen, tap  → **Settings** → **Power saving**.

2. Tap **System power saving** to create a checkmark and activate the feature. System power saving uses default settings to help save power on your phone.

– or –

Tap **Custom power saving** to create a checkmark and activate the feature. Custom power saving allows you to select the items that will be used to save power.

3. If you selected **Custom power saving**, tap **Custom power saving settings** to access the following options:

- **Power saving starts at:** allows you to set the battery power level when Power saving mode will be enabled.
- **Turn off Wi-Fi:** automatically turns off Wi-Fi when you are not connected with Mobile AP.
- **Turn off Bluetooth:** automatically turns off Bluetooth when it is not in use.
- **Turn off GPS:** automatically turns off GPS when it is not in use.
- **Turn off Sync:** automatically turns off Sync when the phone is not synchronizing with the server.
- **Brightness:** allows you to manually adjust the brightness of the screen. Tap this option to enable the next Brightness option.

- **Brightness:** allows you to set the Brightness percentage of the screen.
- **Screen timeout:** allows you to set the time before the screen times out and goes into lock mode.


4. Tap **Learn about power saving** to learn about various ways to conserve battery power.

Storage

From this menu you can view the memory allocation for the memory card and USB as well as mount or unmount the SD card.

For more information about mounting or unmounting the SD card, see “*Memory Card*” on page 44.


To view the memory allocation for your external SD card:

- From the Home screen, tap  → **Settings** → **Storage**. The available memory displays under the **Total space** and **Available** space headings for Device memory, USB storage, and SD card.

Formatting USB storage


- Tap **Format USB storage** to erase all data on the phone’s USB storage such as music and photos.

SD card

1. Tap **Unmount SD card** to unmount your SD card so that you can safely remove it, then tap **OK**.
2. Tap **Format SD card** to re-format your SD card. This will delete all data on your SD card including music, videos, and photos.
3. Tap **Format SD card** again.
4. Tap **Delete all** to continue or press  to cancel.

Battery

See how much battery power is used for device activities.

1. From a Home screen, tap  → **Settings** → **Battery**.
The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.
2. Tap **Screen**, **Android System**, or any other listed application to view how it is affecting battery use.

Note: Other applications may be running that affect battery use.

Applications

You can download and install applications from the Play Store or create applications using the Android SDK and install them on your device. Use Applications settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage



See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  → **Settings** → **Applications**.
2. Tap **Downloaded**, **On SD card**, **Running**, or **All** to display memory usage for that category of applications.

The graph at the bottom of the Downloaded tab shows used and free device memory. The graph at the bottom of the Running tab shows used and free RAM.


Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap  → **Settings** → **Applications**.
2. Tap the **Downloaded** tab to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the Downloaded tabs, press  → **Sort by size** or **Sort by name**.
4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From a Home screen, tap  → **Settings** → **Applications**.
2. Tap the **Running** tab. All the applications that are currently running on the device display.
3. Tap one of the applications to view application information.

The following options display:

- **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application.

Warning! Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.


- **Report:** Report failure and other application information.

Note: Options vary by application.

Accounts and Sync


This menu allows you to set up, manage, and synchronize accounts, including your Google and email accounts.

Adding an Account

1. From a Home screen, tap  → **Settings** → **Accounts and sync**.
2. Tap **Add account**.
3. Tap one of the account types.
4. Use the keyboard and follow the prompts to enter your credentials and set up the account.


Removing an Account


Important! Removing an account also deletes all of its messages, contacts, and other data from the device.

1. From a Home screen, tap  → **Settings** → **Accounts and sync**.
2. Tap an account to display its settings.
3. Tap **Remove account**, then tap **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

Synchronizing Account


Select the items you want to synchronize on your account such as Books, Calendar, Contacts, and more.

1. From a Home screen, tap  → **Settings** → **Accounts and sync**.
2. Tap **Sync all** to synchronize all your accounts. Tap **Cancel sync** to stop the synchronization.

3. On the **Accounts and sync** field, tap the **OFF / ON** icon  to turn Auto-sync on or off, which controls whether changes you make to information on your device or on the web are automatically synced with each other.

Data and Synchronization


To sync account information manually:

1. From a Home screen, tap  → **Settings** → **Accounts and sync**.
2. Tap on an account.
3. Tap **Sync Now** to synchronize all data for the selected account.
– or –

Under **Data and synchronization**, tap the account data to synchronize, such as Books, Calendar, Contacts, Email, and so on.

Location Services

The Location services settings allow you to set up how the phone will determine your location and the sensor settings for your phone.


1. From the Home screen, tap  → **Settings** → **Location services**.
2. Tap any of the following options to create a checkmark and activate the service:
 - **Google location service:** allows applications to use data from other sources such as mobile networks and Wi-Fi to help determine your location.
 - **GPS satellites:** allows applications to use GPS to pinpoint your location.
 - **Location and Google search:** allows Google to use your location data for improved search results and other services.

Security

The Security settings allow you to determine the security level for your phone.

Screen Lock



Choose settings for unlocking your screen. For more information about using the lock and unlock features, see “*Locking and Unlocking the Touch Screen*” on page 11.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Screen lock** for these options:

- **None:** No pattern, PIN, or password is required. The screen will never lock.
- **Swipe:** Swipe the screen to unlock it.
- **Face unlock:** The phone recognizes your face and unlocks the phone. Follow the on-screen instructions to set it up.
- **Pattern:** A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
- **PIN:** Select a PIN to use for unlocking the screen.
- **Password:** Create a password for unlocking the screen.


Owner Information

This option allows you to show owner information on the lock screen. You can also enter text to display on the lock screen.

1. From the Home screen, tap  → **Settings** → **Security** → **Owner information**.
2. Tap the **Show owner info on lock screen** checkbox to create a checkmark if you want your owner information displayed.
3. Enter text that you would like displayed on your lockscreen and tap .

Encryption


To require a numeric PIN or password to decrypt your tablet each time you power it on or encrypt the data on your SD card each time it is connected:

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Encrypt device**. For more information, read the displayed help screen.
3. Tap **Encrypt SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

Tip: Make sure your battery is charged more than 80 percent. Encryption may take an hour or more.

Set up/change password


Use this option to set up your password when one is first required or change your current password.

1. From the Home screen, tap  → **Settings** → **Security** → **Set up/change password**.
2. Enter a new password and tap **Confirm**.
3. Enter the new password again and tap **Confirm**.

Set up SIM card lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

When enabled, your phone will ask for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.


1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

4. Tap **Change SIM PIN**.
5. Enter your old SIM PIN code and tap **OK**.
6. Enter your new SIM PIN code and tap **OK**.
7. Re-type your new SIM PIN code and tap **OK**.

Make passwords visible

When enabled, password characters display briefly as you touch them while entering passwords.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Make passwords visible** to create a checkmark and enable or disable the display of password characters.


Device Administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost or stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:


- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Select device administrators**.
3. Select a device administrator and follow the prompts. If no device administrators are listed, you can download them from the Play Store.

Unknown sources


This feature allows you to download and install non-Market applications.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Unknown sources**.
A check mark is displayed to indicate it is active.

Warning! Enabling this option causes your tablet and personal data to be more vulnerable to attack by applications from unknown sources.

Trusted Credentials

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Trusted credentials**.
The trusted credentials screen has two tabs:
 - **System**: Displays CA certificates that are permanently installed in the ROM of your device.
 - **User**: Displays any CA certificates that you installed, for example, in the process of installing a client certificate.
3. Tap a CA certificate to examine its details.
A scrolling screen displays the details.
4. Scroll to the bottom of the details screen and tap **Disable** to disable a System certificate or **Remove** to remove a User certificate.

Caution! When you disable a system CA certificate, the **Disable** button changes to **Enable**, so you can enable the certificate again, if necessary. When you remove a user-installed CA certificate, it is permanently deleted and must be re-installed, if needed.

5. Tap **OK** to return to the certificate list.
When enabled, a check mark appears in the check box.

Install from device storage

Install encrypted certificates from an installed memory card.


Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Install from device storage**, then choose a certificate and follow the prompts to install.

Clear credentials

Clear stored credentials.

Note: This setting only appears if you have installed encrypted certificates.


1. From the Home screen, tap  → **Settings** → **Security**.
2. Tap **Clear credentials** to remove all certificates.

Language and Input

This menu allows you to configure the language in which to display the menus. You can also set onscreen keyboard options.



Language

You can change the language used by your device by following these steps:

1. From the Home screen, tap  → **Settings** → **Language and input** → **Language**.
2. Tap a language from the list.

Keyboards and Input Methods

You can change the keyboard used by your device by following these steps:

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap **Default** and select a keyboard.
Select either Android keyboard, Samsung keypad, or Swype.
3. Tap **Configure input methods**.
4. Tap the  icon next to the input method that you would like to configure the settings for.
5. Based on your selection of input method, the appropriate settings will appear and are explained below.

Android Keyboard settings

From this menu you can set Android keyboard options.



1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Android keyboard**.
3. The following options are available:
 - **Input languages:** tap on a language that you want to input.
 - **Auto-capitalization:** check this field to have the keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and all words in name fields.

- **Vibrate on keypress:** check this field to have the phone vibrate each time you touch a key on the keyboard.
- **Sound on keypress:** check this field to play a sound each time you touch a key on the keyboard.
- **Popup on keypress:** check this field to show a small popup of each character that you type.
- **Show settings key:** allows you to select how the settings key will be displayed.
- **Voice input key:** check this field to be able to enter text in a message by talking.
- **Add-on dictionaries:** allows you to access dictionaries that have been downloaded from other sources.
- **Auto correction:** allows you to correct mistyped words by using the spacebar and punctuation.
- **Show correction suggestions:** check this field to show suggested words in a field above the keyboard as you type.
- **Advanced settings:** the following advanced settings are displayed:
 - **Key popup dismiss delay:** allows you to set the delay time that key pop-ups are dismissed. Select No delay or Default.

- **Suggest Contact names:** allows you to use names from your Contacts for suggestions and corrections.
- **Bigram suggestions:** uses the previous word to help improve suggestions.
- **Enable recorections:** allows you to see suggestions when you make recorections.
- **Keypress vibration duration settings:** allows you to set the time that each keypress vibrates. Drag the slider bar to the desired time.
- **Keypress sound volume settings:** If the keys are set to make a sound when pressed, this setting allows you to set the volume.

Google voice typing settings



From this menu you can set Samsung keypad options.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Google voice typing**.
3. The following options are available:
 - **Select input languages:** tap on a language that you want to input. Select Automatic to use the local language or select a language from the list.

- **Block offensive words:** tap to create a checkmark and enable the blocking of recognized offensive words from the results of your voice-input Google typing.





Samsung Keypad settings

From this menu you can set Samsung keypad options.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Samsung keypad**.
3. Tap the **Portrait keypad types** field and select a text input method:
 - Qwerty Keypad
 - 3x4 Keypad
4. Tap the **Input languages** field and tap one of the languages.
5. To use XT9 Predictive text method, tap **XT9** to create a checkmark and enable the feature.
6. If you are using XT9 Predictive text method, tap **XT9 advanced settings**. For more information, refer to “*XT9 Advanced Settings*” on page 132.
7. Tap the **Keypad sweeping** field to be able to sweep the keypad and change from **ABC** to **?123** mode. For more information, refer to “*Text Input Methods*” on page 57.
8. Tap the **Character preview** field to display small pop-up windows to verify the character you entered.
9. Tap the **Auto-capitalization** field to enable automatic capitalization.
10. Tap **Voice input** to activate the Voice input feature. Voice input is an experimental feature using Google’s networked speech recognition application.
11. Tap **Auto-full stop** to activate the Auto-full stop feature. When you double space in a message, a period and space is added and the keyboard is placed into Uppercase mode so you can start the new sentence with a capital letter.
12. Tap **Tutorial** for a short tutorial on using the Samsung keypad.



XT9 Advanced Settings

The following XT9 Advanced settings are only available if the **XT9** field has been selected.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Samsung keypad**.
3. Tap **XT9 Advanced settings**.
4. Tap the **Word completion** field to enable word completion. Your phone will predict how to complete the word you have started.
5. Tap the **Word completion point** field to set how many letters should be entered before a prediction is made.
6. Tap the **Spell correction** field. This option corrects typographical errors by selecting from a list of possible words that reflect the characters of the keys you tapped as well as the characters of nearby keys.
7. Tap the **Next word prediction** field to enable word prediction for the next word.
8. Tap the **Auto-append** field to automatically add predictions to the word you are typing.
9. Tap the **Auto-substitution** field to automatically replace words that you are typing. This option will help for accidental misspellings.
10. Tap the **Regional correction** field. This option sets the device to automatically correct mistyped words according to normal spelling for your region.
11. Tap the **Recapture** field. This option sets the device to re-display the word suggestion list when you select the wrong word from the list.
12. To add a new word to the T9 dictionary:
Tap the **XT9 my words** field, then press  → **Add**. Enter the new word in the **Register to XT9 my words** field, then tap **Done**.
13. To add words to substitute (for example youve becomes you've) tap **XT9 auto-substitution**.
14. A list of substitutions is displayed. If you don't see the substitution you want, press  → **Add**, and then input the Shortcut word and Substitution word. Tap **Done**.

Swype Settings


To configure Swype settings:

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap the  icon next to **Swype**.
3. Tap one of the following Swype settings:
 - **Select Input Method:** allows you to switch between different keyboard types.
 - **How to Swype:** provides tips on how to learn to use Swype.
 - **Personal dictionary:** Allows you to setup and manage your own dictionary.
 - **Preferences:** Allows you to view and modify the following Swype options:
 - **Audio feedback:** When enabled, plays sounds as you enter text.
 - **Vibrate on keypress:** check this field to have the phone vibrate each time you touch a key on the keyboard.
 - **Show tips:** When enabled, the device displays helpful tips.
 - **Auto-spacing:** When enabled, inserts spaces automatically when you pause entering text.

- **Auto-capitalization:** When enabled, automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace:** When enabled, briefly display the Swype trace.
- **Word suggestion:** When enabled, suggests possible matching words as you enter text.
- **Speed vs. accuracy:** Send the sensitivity of Swype text recognition.
- **Reset Swype's dictionary:** Deletes all of the words you have added and loads the default dictionary.
- **Version:** View the current Swype software version.
- **Language Options:** Allows you to set the language that you will be using.



Speech Settings

This menu allows you to set the speech settings for Voice search.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap **Voice recognition** and select either **Google** or **Samsung powered by Vlingo** as your Voice recognition engine.

3. Tap **Voice search** to configure:
 - **Language:** Choose a language for your voice input.
 - **SafeSearch:** Set the sensitivity for filtering of explicit images from the results of your voice-input Google searches.
 - **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.


Voice output provides audible readout of text, for example, the contents of email messages.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap **Text-to-speech output** and select the preferred TTS engine. **Google Text-to-speech** is the default.
3. Tap  next to the preferred TTS engine configure the following settings:
 - **Language:** allows you to set the language for spoken text.
 - **Settings for Google Text-to-speech Engine:** allows you to view Open Source Licenses.
 - **Install voice data:** allows you to install voice data for speech synthesis.

4. From the **Text-to speech output screen**, scroll down to access the following option:
 - **Speech rate:** Set the speed at which the text is spoken.
 - **Listen to an example:** Play a sample of speech synthesis (available if voice data is installed).
 - **Driving mode:** Incoming calls and new notifications are read aloud when enabled.
 - **Driving mode settings:** allows you to select items that will be read out when received or activated.

Mouse/trackpad


This option sets your Pointer speed.

1. From the Home screen, tap  → **Settings** → **Language and input**.
2. Tap **Pointer speed** then drag the slide to the right to go faster or to the left to go slower.
3. Tap **OK** to save your setting.

Backup and Reset


Back Up My Data

By setting this option, the Google server will back up all of your settings and data.

1. From the Home screen, tap  → **Settings** → **Backup and reset**.
2. Tap **Back up my data** to enable or disable back up of application data, WI-Fi passwords, and other settings to the Google server.

Backup Account

If you have enabled the **Back up my data** option, then the **Backup account** option is available.

1. From the Home screen, tap  → **Settings** → **Backup and reset**.
2. Tap **Backup account** and tap your Google Gmail account or tap **Add account** to set your Google Gmail account to be backed up to the Google server.


Automatic Restore

By setting this option, when you reinstall an application, all of your backed up settings and data will be restored.

1. From the Home screen, tap  → **Settings** → **Backup and reset**.
2. Tap **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Factory Data Reset


From this menu you can reset your phone and sound settings to the factory default settings.

1. From the Home screen, tap  → **Settings** → **Backup and reset**.
2. Tap **Factory data reset**.
The Factory data reset screen displays reset information.
3. Tap **Reset device**, then follow the prompts to perform the reset.

Warning! Performing a Factory data reset will erase all data from your phone and internal SD card, including your Google account, system and application data and settings, and downloaded applications. It will not erase current system software, bundled applications, and external SD card files such as music and photos.

Date and Time

This menu allows you to change the current time and date displayed.

1. From the Home screen, tap  → **Settings** → **Date and time**.
2. Tap **Automatic date and time** to allow the network set the date and time.
3. Tap **Automatic time zone** to allow the network set the time zone.


Important! Deactivate **Automatic date and time** to manually set the rest of the options.

4. Tap **Set date** and use the plus or minus icons to set the **Month**, **Day**, and **Year** then tap **Set**.
5. Tap **Set time** and use the plus or minus icons to set the **Hour** and **Minute** then tap **Set**.
6. Tap **Select time zone**, then tap a time zone.
7. Tap **Set time** and use the plus or minus icons, set **Hour**, and **Minute**. Tap **PM** or **AM**, then tap **Set**.
8. Optional: Tap **Use 24-hour format**. If this is not selected the phone automatically uses a 12-hour format.
9. Tap **Select date format** and tap the date format type.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from the Play Store and manage their use here.

1. From the Home screen, tap  → **Settings** → **Accessibility**.
2. Tap **TalkBack** to activate the TalkBack feature.



Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.

Important! TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

3. Tap **The power key ends calls** option to create a checkmark if you want to press the power key to end calls. This will not turn off the screen.
4. Tap **Auto-rotate screen** to automatically rotate the screen from landscape to portrait when you rotate your phone.
5. Tap **Speak passwords** option to activate this feature which reads out password information.
6. Tap **Tap and hold delay** and then tap a delay time. Options are: Short, Medium, and Long.
7. Tap **Install Web scripts** if want to allow apps to install scripts from Google that make their Web content more accessible. Tap **Allow**.

Motion

The Motion settings allow you to set up various Motion activation services.

1. From the Home screen, tap  → **Settings** → **Motion**.
2. Tap **Motion activation** to activate the feature. A checkmark is displayed.
3. The following options are available. Tap the ON/OFF icon  on the top bar to activate each option.
 - **Tilt to zoom:** allows you to use the Tilt feature to reduce or enlarge the screen when in Gallery or Browser. Tap Tilt to zoom, then tap Sensitivity and set the sensitivity using the slider. A checkmark appears in the Use motion box. Tap Learn about tilt for more information.
 - **Pan to edit:** allows you to use the Panning feature to move icons from one page to another in Home and Application edit mode. Tap Pan to edit, then tap Sensitivity and set the sensitivity using the slider. Tap Learn about panning for more information.
 - **Double tap:** automatically prepares your phone for voice commands in Voice talk. Tap to activate. Tap Learn about double tap for more information.

- **Turn over to mute:** allows you to mute incoming calls and sounds by turning your phone over. Tap to activate. Tap Learn about turn over for more information.


Developer Options

Use the Developer options to set options for application development.

USB Debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

Note: This setting is used for development purposes.

1. From the Home screen, tap  → **Settings** → **Developer options**.
2. Tap **USB debugging** to enable or disable the setting.
When enabled, a check mark appears in the check box.


Development Device ID

The identification number for your tablet when using it as a development tool displays in this field.

Allow Mock Locations


This setting is used by developers when developing location-based applications.

Note: This setting is used for development purposes.

1. From the Home screen, tap  → **Settings** → **Developer options**.
2. Tap **Allow mock locations** to enable or disable the setting.
When enabled, a check mark appears in the check box.


Desktop Backup Password

Protect the desktop with a backup password ID.


1. From the Home screen, tap  → **Settings** → **Developer options**.
2. Tap **Desktop backup password**.
3. In the Settings screen, enter the current full backup password, the new password for full backups, then enter the new password again.
4. Tap **Set backup password** to save the password change.

User Interface Options

Configure the user interface by setting the behavior for the way the screen behaves when using applications or displaying data.

1. From the Home screen, tap  → **Settings** → **Developer options**.
2. Tap the check box next to each option to enable:
 - **Strict mode**: Makes the screen flash when applications perform long operations on the main thread.
 - **Show pointer location**: Highlights the data that was touched on the screen.
 - **Show touches**: Displays touch interactions on the screen.
 - **Show screen updates**: Areas of the screen flash when they update.
 - **Show CPU usage**: Screen highlights the current CPU usage.
 - **Force GPU rendering**: Uses a 2D acceleration in applications.
 - **Window animation scale**: Configure the scale for animation (ranges from off to 10x).
 - **Transition animation scale**: Configure the scale for transitioning when using animation (ranges from off to 10x).

Application Options

1. From the Home screen, tap  → **Settings** → **Developer options**.
2. Tap **Do not keep activities** to destroy every activity as soon as the application is closed.
3. Tap **Limit background processes** to set the number of processes that can run in the background. Options are: Standard limit, No background processes, and 1 to 4 processes at most.
4. Tap **Show all ANRs** to display a prompt when applications running in the background are not responding.


About Phone

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernel version, and software build number.

To access phone information:

- From the Home screen, tap  → **Settings** → **About phone**.

The following information displays:


- **Software update:** allows you to update your phone software, if available. For more information, refer to “*Software Update*” on page 140.
- **Status:** displays the battery status, the level of the battery (percentage), network, signal strength, mobile network type, service state, roaming status, mobile network state, the phone number for this device, IMEI number, IMEI SV, IP address, Wi-Fi MAC address, Bluetooth address, Serial number, and Up time.
- **Legal information:** This option displays information about Open source licenses as well as Google legal information. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference. Read the information and terms, then press  to return to the Settings menu.
- **Model number:** displays the phone’s model number.
- **Android version:** displays the android version loaded on this handset.
- **Baseband version:** displays the baseband version loaded on this handset.

- **Kernel version:** displays the kernel version loaded on this handset.
- **Build number:** displays the software, build number.

Note: Baseband, kernal and build numbers are usually used for updates to the handset or support. For additional information please contact your AT&T service representative.

Software Update

The AT&T Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

1. From the Home screen, tap  → **Settings** → **About phone** → **Software update**.
2. Tap **Check for updates**.
3. At the **Software update** prompt, tap **OK** to continue.
4. The phone automatically updates the software (if available), otherwise, when the **Current software is up to date** prompt is displayed, tap **OK**.

5. When updating software, once the update file is downloaded, you can delay the update on the start screen by postponing it for a certain period of time. If you want to resume the update before the selected time, tap **Continue update**.

Section 9: Connections


This section describes the various connections your phone can make including accessing the Internet with your Browser, Wi-Fi, Bluetooth, and Connecting your PC.

Browser


The Browser is your access to the mobile web. This section explains how to navigate the Browser and introduces you to the basic features.

Accessing the Mobile Web

To access the Browser:

- From the Home screen, tap **Web** . The AT&T/YAHOO! mobile homepage displays.

Navigating with the Browser


1. To select an item, tap an entry.
2. To scroll through a website, sweep the screen with your finger in an up or down motion.
3. Sweep the screen left to right to move laterally across a web page.
4. To return to the previous page, press .

Zooming in and out of the Browser

There are several ways to Zoom in and out on your browser. After tapping on a link or article, use one of these methods:

- **Tilting:** Tap and hold the screen at two points then tilt the device back and forth to reduce or enlarge the screen. You must first enable motion in the Settings section. For more information, refer to “*Motion*” on page 137.
- **Double tap:** Quickly tap the screen twice on the web page to zoom in or out.
- **Pinching:** Sweep in opposite directions at the same time to zoom in or out (use a pinching-in or pinching-out motion).

Browser Options

1. From the home page, press  to access the following options:
 - **Forward:** forwards the browser to another web page.
 - **New window:** displays a new window so you can browse multiple URLs. For more information, refer to “*Adding and Deleting Windows*” on page 144.
 - **Add bookmark:** allows you to add a URL to your bookmark list

- **Add shortcut to home:** allows you to add a shortcut to your Home screen.
- **Share page:** allows you to share the page using Gmail or as a message.
- **Find on page:** allows you to search in the current page.
- **Desktop view:** allows you to assign the browser to display the current page in the desktop view (to closely mimic the display as it would appear on a desktop computer).
- **Save for offline reading:** allows you to store the current page in memory so that it can be read later even if you lose your Internet connection.
- **Brightness and color:** allows you to manually adjust the screen brightness and set one of four available color levels associated with different power saving profiles. The higher the power saving level, the less intense the on-screen color saturation.

Note: If the Automatic brightness feature is enabled (**Settings** → **Display** → **Brightness**), you can not modify the browser's brightness setting.

- **Downloads:** displays the download history.

- **Print:** allows you to print the screen or web page on a Samsung printer using Wi-Fi.
- **Settings:** allows you to modify your web settings. For more information, refer to “*Browser Settings*” on page 147.

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.


To enter a URL and go to a particular website, follow these steps:

1. Tap the **URL** field at the top of your screen.
2. Enter the URL using the on-screen keypad.

The website displays.




Search the Internet

To perform an internet search using keywords, follow these steps:

1. From the AT&T/YAHOO! homepage, tap the **Search** field.
2. Enter the keyword(s) to search using the on-screen keypad and tap .
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time. To add a new window, follow these steps:



1. From your browser, press  → **New window**.
A new browser window is opened.
2. Tap  to see thumbnails of all open windows.
3. Tap a window listing to open up that Internet window.
4. Tap  at the top right corner of the web page thumbnail to delete the window.

Going Incognito

The incognito feature allows you to view Internet sites outside of the normal browsing. Pages viewed in this incognito window won't appear within your browser history or search history, and no traces (such as cookies) are left on your device.




Note: Any downloaded files will be preserved and will stay on your device after you exit the incognito mode.

To add a new incognito window:



1. From your browser window, tap  → .
2. A new browser window displays.

Note: The incognito icon appears in the upper-left of the new browser window while you are in this mode.

To exit from the incognito window:

1. From your browser window, tap  →  (**New window**).
2. Scroll across the available windows and locate the incognito window.
3. Tap  next to the incognito listing to delete this window.

Adding Bookmarks

1. From any webpage, tap  →  **Add bookmark**.
2. Use the on-screen keypad to enter the name of the bookmark, the URL address, and the Folder.
3. Tap **Save**.
4. **Saved to bookmarks** will appear at the bottom of the page.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are displayed in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the Home webpage, tap .

The Bookmarks page is displayed.

2. Press  to display the following options:

- **List/Thumbnail view:** You can select **Thumbnail view** (default) to see a thumbnail of the webpage with the name listed, or you can select **List view** to see a list of the bookmarks with Name and URL listed.
- **Create folder:** Creates a new bookmark folder.
- **Change order:** Allows you to move pages around on the Bookmarks page. Touch and hold a bookmark icon, then move it to the desired location.
- **Move to folder:** Allows you to move a page to a folder.
- **Delete:** Allows you to delete one or more bookmarks.

3. Tap a bookmark to view the webpage, or touch and hold a bookmark for the following options:

- **Open:** Opens the webpage of the selected bookmark.
- **Open in new window:** Opens the webpage in a new window.
- **Edit bookmark:** Allows you to edit the name or URL of the bookmark. For more information, refer to “*Editing Bookmarks*” on page 145.
- **Add shortcut to home:** Adds a shortcut to the bookmarked webpage to your phone’s Home screen.
- **Share link:** Allows you to share a URL address via Bluetooth, Email, Facebook, Gmail, Google+, Messaging, Social Hub, or Wi-Fi Direct.
- **Copy link URL:** Allows you to copy the URL address to use in a message.
- **Delete bookmark:** Allows you to delete a bookmark. For more information, refer to “*Deleting Bookmarks*” on page 146.
- **Set as homepage:** Sets the bookmark to your new homepage.

Editing Bookmarks

1. From the Bookmarks page, tap and hold the bookmark you want to edit.
2. Tap **Edit bookmark**.
3. Use the on-screen keypad to edit the name of the bookmark or the URL.


4. Tap **Save**.

Deleting Bookmarks

1. From the Bookmarks page, tap and hold the bookmark you want to delete.
2. Tap **Delete bookmark**.
3. At the **Delete** confirmation window, tap **OK**.

Emptying the Cookies

A cookie is a small file which is placed on your phone by a website during navigation. In addition to containing some site-specific information, it can also contain some personal information (such as a username and password) which can pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

1. From the Home webpage, press  → **Settings** → **Privacy and security** → **Clear all cookie data**.
2. At the **Clear** prompt, tap **OK** to delete the cookies or tap **Cancel** to exit.


Using your History

The History list provides you with a list of the most recently visited websites. These entries can be used to return to previously unmarked web pages.

1. From the Home webpage, tap  → **History**.
A list of your most recently visited websites is displayed with Name and URL address.
2. Tap on a category such as **Today** or **Most visited**.
3. Tap any entry to display the webpage.
4. Press  → **Clear history** to delete the History list.

Saved Pages

The Saved pages list provides you with a list of the websites that you have saved.

1. From the Home webpage, tap  → **Saved pages**.
A list of your saved webpages is displayed with Name and URL address. The webpages that have been visited the most will appear at the top.
2. Tap any entry to display the webpage.

Browser Settings

To make adjustments in your browser settings, follow these steps:

1. Tap **Web**  →  → **Settings**.
2. The following options are available:

General

- **Set home page:** Sets the current home page for the Web browser.
- **Form auto-fill:** allows you to fill in web forms with a single tap.
- **Auto-fill text:** allows you to enter text to be used in the Form auto-fill feature.

Privacy and security

- **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
- **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
- **Show security warnings:** Notifies you if there is a security issue with the current website.
- **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.

- **Clear all cookie data:** Deletes all current browser cookie files.
- **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
- **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
- **Enable location:** Allows websites to request access to your location.
- **Clear location access:** Clears location access for all websites. Tap **OK** to complete the process.
- **Remember passwords:** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
- **Clear passwords:** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.

Accessibility

- **Force zoom:** allows you to override the website's request to control zoom.
- **Text size:** allows you to preview the text size, scale the text size using a slider bar, set the zoom amount on double tap using a slider bar, and minimize the font size using a slider bar.

Inverted rendering: allows you to preview a website page, select Inverted rendering (black becomes white and vice versa), and adjust the Contrast using a slider bar.

Advanced

- **Select search engine:** allows you to set your default search engine to Google, Yahoo!, or Bing.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Enable JavaScript:** Enables Javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Enable plug-ins:** Allows the download of plug-ins such as Adobe Flash.
- **Default storage:** Allows you to set your default storage to Phone or Memory Card.
- **Website settings:** View advanced settings for individual websites.
- **Default zoom:** Adjusts the zoom feature. Set to Far, Medium, or Close.

- **Open pages in overview:** Shows an overview of newly opened web pages.
- **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
- **Block pop-ups:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Text encoding:** Adjusts the current text encoding.
- **Reset to default:** Clears all browser data and resets all settings to default.

Bandwidth management

- **Preload search results:** Allows the browser to preload high confidence search results in the background to help speed up searches.
- **Load images:** Allows web page images to be loaded along with the other text components of a loaded website.

Labs

- **Quick controls:** allows you to open quick controls and hide the app and URL bars by swiping your thumb from the left or right edge of the screen.

- **Full screen:** allows you to access Full screen mode and hide the status bar.

Wi-Fi

About Wi-Fi


Wi-Fi (short for "wireless fidelity" and sometimes referred to as wifi) is a term used for certain types of Wireless Local Area Networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data. Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .

Connect to a Wi-Fi Network

1. From the Home screen, tap  → **Settings** → **Wi-Fi**.
The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
2. Tap the network you want to connect to.

Note: When you select an open network, you will be automatically connected to the network.

3. Enter a wireless password if necessary.

Manually add your new network connection

1. Tap **Add network**.
2. Enter the **Network SSID**. This is the name of your Wireless Access Point.
3. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
4. If secured, you will also need to enter your WAP's password.

5. Tap **Save** to store the new information and connect to your target WAP.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you reset your device back to its factory default settings.

Turning Wi-Fi Off

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi OFF .

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

Manually Scan for a Wi-Fi Network

1. From the Home screen, tap  → **Settings** → **Wi-Fi**.
2. Tap **Scan**.
All available Wi-Fi networks are displayed.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).




Displays when connected to another device using Wi-Fi Direct. For more information, refer to “*Wi-Fi Direct*” on page 151.

Wi-Fi Advanced Settings

The Wi-Fi settings - Advanced menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Bluetooth Settings menu:



1. From the Home screen, tap  → **Settings** → **Wi-Fi**.
2. Tap **Advanced**.




For more information, refer to “Advanced Wi-Fi Settings” on page 108.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Note: See your service plan for applicable charges for Wi-Fi Direct.

1. From the Home screen, tap  → **Settings** → **More...**
2. Tap the ON/OFF slider, located to the right of the Wi-Fi Direct field, to turn Wi-Fi Direct ON .
3. At the **Wi-Fi Direct** prompt, tap **OK**.
4. From the Settings screen, tap **Wi-Fi Direct**.
5. Repeat **steps 1 - 4** on the other device you want to connect with. The steps on a different model of phone, may be different.
6. On your phone, tap **Scan**.
The device scans for other Wi-Fi Direct devices.
7. Once the device you want to connect to is displayed, tap on it.

8. The other device has 2 minutes to tap **OK** for the connection to be made.
9. Once connected, the other device will show as **Connected** in your list of Wi-Fi Direct devices and the  icon will display at the top of your screen.
10. To change your Device name and Password, press  → **Device name**.
11. For additional information about Wi-Fi Direct, press  → **Help**.

Sharing Information with Connected Device

To share Videos, Photos, or other information with the connected device, follow these steps:



1. View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or **My files** folder, then tap the **Share, Share via**, or **Send via** option.
2. Tap the **Wi-Fi Direct** option.
3. Tap the connected device name. For example, Android_49ba.
4. The other device will receive a prompt to receive the information and must tap **OK**.

5. The file is transferred and the other device will receive a screen notification that a Wi-Fi file has been received. The file can be found in **My files** in the **ShareViaWifi** folder.

Note: Depending on the other device model, the prompts and shared folder information may differ.

AT&T Smart Wi-Fi

With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use.

1. From the Home screen, tap  → **AT&T Smart Wi-Fi** .

Note: The first time you use the AT&T Smart Wi-Fi, you will need to download the application from the Market. For more information, refer to “*Play Store*” on page 181.

2. At the **Install** screen, tap **Ok**.

3. Sign on to your Google account if you have not already done so. For more information, refer to “*Creating a New Google Account*” on page 13.
4. Follow the on-screen instructions to download the updated application from the Play Store.
5. Read the License Agreement and tap **Accept** to continue.
6. At the Welcome screen, tap **OK**.
7. At the Initial Setting screen, tap **Yes** if you want AT&T Smart Wi-Fi to automatically connect to any hotspot that is available for public use. Otherwise, tap **No**.
8. Follow the onscreen instructions to use AT&T Wi-Fi.
9. For more information on how to use this application, go to www.att.com/smartwifi.

Bluetooth


About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and



Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON  .
When active,  appears within the Status area.

To turn Bluetooth off:

1. From the Home screen, tap  → **Settings**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth OFF  .

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.



Displays when Bluetooth is connected (paired) and communicating.





Displays when Bluetooth is on but is not connected to a Bluetooth device.

Bluetooth Settings


The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address


To access the Bluetooth Settings menu:

1. From the Home screen, tap  → **Settings**.
2. Verify your Bluetooth is ON  .
3. Tap **Bluetooth**.

To change your Bluetooth name:


1. From the Bluetooth settings page, press  → **Device name**.
2. Enter a new name.
3. Tap **OK** to complete the rename process.

To make your device visible:

1. From the Bluetooth settings page, press  → **Visible time-out**.
 - Making your device visible allows it to be detected by other devices for pairing and communication.
2. Select a time that you would like your device visibility to time-out.

Note: Your device is visible for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To show received files:

- From the Bluetooth settings page, press  → **Show received files**.

A list of all files received from Bluetooth is displayed.

To scan for Bluetooth devices:


1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. Tap **Scan for devices**. Your device will display a list of discovered in-range Bluetooth devices.
3. Tap a device from the list to initiate pairing.
4. Enter the passkey or PIN code, if needed, and tap **OK**.
5. The external device will then have to also accept the connection and enter your device's PIN code.

Once successfully paired to an external device,  appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Disconnecting a paired device


Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap the previously paired device.
3. Tap **OK** to confirm disconnection.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a paired device (unpair)




Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.


1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap the  icon next to the paired device that you want to unpair.
3. Tap **Unpair** to unpair the device from your phone.

Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

1. Verify your Bluetooth is active.
2. From the Home screen, tap  → **Contacts** .
3. Press  → **Import/Export** → **Send namecard via**.

4. Tap each contact that you would like to send via Bluetooth. A green checkmark will appear next to each entry you select.
5. Tap .
6. Tap **Bluetooth**.
7. Select the paired device to send the contacts to.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

8. A Bluetooth share notification will appear in your notifications list.


PC Connections

You can connect your device to a PC using an optional PC data cable using various USB connection modes. When you connect the device to a PC, you can synchronize files with Windows Media Player, transfer data to and from your device directly, or use the Kies air application to access your PC wirelessly.

Connecting as a Mass Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.



Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.


1. Insert a memory card into the device to transfer files from or to the memory card to your PC.
2. From the Home screen, tap  → **Settings** → **More...** → **USB utilities**.
3. On your phone, tap **Connect storage to PC**.
4. Connect the multifunction jack on your device to a PC using a PC data cable.
5. A pop-up window displays on the PC when connected.
6. On your phone, tap **Turn on USB storage**.
7. Tap **OK**.
Your phone will appear on your PC as a removable disk.
8. On the PC pop-up, click **Open folder to view files**.
9. Copy files between your PC and your memory card.

Kies Air

Kies Air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

To use the Kies air, follow these steps:

1. Sign onto the same Wi-Fi network from your phone and from your PC.
2. On your phone, from the Home screen, tap  → **Kies air** .
3. From the Kies air homescreen, tap **Start**.
A web URL is displayed on your phone screen.
4. From your PC, enter the URL in your web browser.
5. On your phone, an Access Request prompt is displayed. Tap **Allow** to continue.
6. Tap the **Remember for today** checkbox if you will be using Kies air with the same PC later.
7. From your PC, a security warning may be displayed asking if you want to run this application. Click **Run** to continue.

8. On your PC, the Kies air screen is displayed. On your phone, the  icon appears at the top of your screen.
9. Follow the on-screen instructions to view and share information between your phone and PC.
10. To exit the Kies air application, tap **Stop** on your phone, then close out the web browser on your PC.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as Android Beam. For information on NFC and NFC related features, see “NFC” on page 112.

Section 10: Applications



This section contains a description of each application that is available in the Applications Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For details, see “*Customizing Your Home Screen*” on page 37. You can also add an application icon as a Primary Shortcut that will display on all Home screens. If you add an application as a primary shortcut, the application icon will not be displayed in the Applications menu. For more information, refer to “*Adding and Removing Primary Shortcuts*” on page 38.

AllShare

AllShare allows your phone to stream photos, music and videos from its memory to other Digital Living Network Alliance (DLNA) certified devices. Your phone can also play digital content streamed from other DLNA certified devices.

Note: To view more information about DLNA certified products visit <http://www.dlna.org/home>.

1. Connect to a Wi-Fi network. For more information, refer to “*AT&T Smart Wi-Fi*” on page 152.
2. From the Home screen, tap  → AllShare . The AllShare screen is displayed.
3. To share media, tap **Videos**, **Photos**, or **Music** and tap on the media that you would like to share.
4. At the **Select device** screen, any devices that you can share with are displayed.
5. Tap on a device to share media.
6. Tap the **Remote device** tab at the top of the screen. All devices that you can receive media from are displayed.
7. Tap a device name. Media that you can receive from the other device is listed.

8. Tap an item that you want to stream to your phone.
9. Press  → **Settings** to configure the following settings:
 - **Device name:** defaults to your phone. Use the keypad to enter a new Media server if desired, and tap **Save**.
 - **Share videos/photos/music:** allows you to restrict what is shared from your phone. Tap the items you want to share.
 - **Upload from other devices:** allows you set the phone to select how uploads from other devices are started. Tap **Always accept**, **Always ask**, or **Always reject**.
 - **Default memory:** allows you to have media saved to your **Phone** or **Memory Card**. Tap an option.
 - **Subtitles:** allows you to see subtitles on shared media.Depending on the setting you changed, a pop-up screen may display to restart AllShare. Tap **Yes** to continue.

Amazon Kindle

This application allows you to download books, magazines, and newspapers to read on your phone.

1. From the Home screen, tap  → **Amazon Kindle** .
2. At the Kindle display, tap **Get Kindle for Android**.

3. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 13.
4. Follow the on-screen instructions to download the application from the Play Store.

AT&T Code Scanner

AT&T Code Scanner allows you to scan two-dimensional (QR and datamatrix codes) and one-dimensional (UPC and EAN) barcodes found in magazines, stores, and online.

1. From the Home screen, tap  → **AT&T Code Scanner** .



Note: The first time you use the AT&T Code Scanner, you will need to download the updated application from the Market. When the Market page displays, tap **Update**. For more information, refer to “*Play Store*” on page 181.

2. Sign on to your Google account if you are not already signed on. For more information, refer to “*Creating a New Google Account*” on page 13.
3. Read the Terms and Conditions and tap **Accept** to continue.

4. At the My Profile screen, tap **OK** to allow your location information to be used or tap **Don't Allow** to bypass.
5. Enter your information in the My Profile section.
6. Tap **ON** to activate your profile. This allows the application to customize your results. For example, your zip code may help to deliver a coupon for a restaurant in your neighborhood. You can toggle the activation button between ON and OFF.
7. Tap **Done**.
8. Read the tutorial and tap **Next** until you are at the end of the tutorial. Tap **Finish**.
9. Position your phone approximately 2-5 inches from the barcode. Ensure that the barcode is completely within the window. Keep your phone steady for best results.
10. The scanner will automatically scan the barcode. It may take several seconds.
11. After the scan, tap **Yes** to open the web page to view the information on the barcode that was scanned.

AT&T FamilyMap

AT&T FamilyMap provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private.

1. From the Home screen, tap  → **AT&T FamilyMap** .

Note: The first time you use AT&T Family Map, you will need to download the application from the Market. For more information, refer to “*Play Store*” on page 181.

2. At the AT&T FamilyMap Sign In webpage, enter your Phone Number and Password in the appropriate fields and tap **Submit**.

Note: To sign up for service, visit <http://www.att.com/familymap> for more information.

3. Follow the on-screen instructions.

AT&T Navigator

AT&T Navigator provides you with access to real-time GPS-driven applications. These programs not only allow you to achieve turn-by-turn navigation, but also access local searches.

Important! You must have a data plan to use this feature.

Note: These services require the purchase of a subscription.

Launching AT&T Navigator

1. From the Home screen, tap  → AT&T Navigator



2. Read the **Terms of Service** and tap **Accept** to acknowledge the terms of use.

The first time that you use AT&T Navigator, the necessary files will be downloaded. The AT&T Navigator main screen displays.

3. Tap an AT&T Navigator plan that you choose to purchase.
4. Follow the on-screen instructions.

Using AT&T Navigator

Although your phone does not come with left and right softkeys, these are available as on-screen buttons so you can activate their corresponding features.

1. Select an option and follow the on-screen instructions to activate a Navigator feature.
 - **Maps:** provides access to 2D and 3D maps for both your current location and for several categories of locations such as Airports and Contacts.
 - **Drive To:** lets you get driving directions from wherever you are to wherever you're going. Choices include:
 - **Set Up Home:** allows you to set up your Home address.
 - **Set Up Work:** allows you to set up your Work address.
 - **Favorites:** displays your favorite (marked) GPS navigation sites.
 - **Recents:** displays your recently entered locations.
 - **Airports:** allows you to use either local airports based on current a GPS location or manually enter the 3-letter airport code or name.
 - **Contacts:** allows you to access a contact to get address information. When the prompt is available, tap **Resume Trip** to continue.




- **Voice search (located at bottom of display):** tap  to use your voice to search for directions, such as “Drive home” and “Search gas station”.
 - **Places:** allows you to use Google Maps and your location to help you find Restaurants, Coffee, Bars, Hotels, Attractions, ATMs, Gas Stations, Wi-Fi, and other places. For more information, refer to “*Places*” on page 180.
 - **Extras:** allows you to search for local movies, see the local weather, and check local Commute Alerts.
 - **Search bar (located at top of display):** allows you to search for the address by either speaking it or by entering the information manually. This function lets you search for locations from options such as: Food/Coffee, Gas Stations, Gas By Price, Banks/ATMs, WiFi Spots, Parking Lots Hotels & Motels, Movie Theaters, Car Rentals, and more.
2. Press  to exit.

Note: These services require the purchase of a subscription.

Obtaining Driving Directions

Your phone’s built-in GPS hardware allows you to get real-time driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. From the Home screen, tap  → **AT&T Navigator**  → **Drive To**.
2. Type the address into the Drive To search bar or tap  to use your voice to enter a destination.
3. If typing in the address, enter the address, city, state, and zip code. As you type, similar addresses will begin to appear. When the address you want is displayed, tap it.
The destination is displayed.
4. Tap the destination.
5. Tap **Map**, **Share**, or **Search Nearby** to refine or improve your search results. Follow both the on-screen and audio directions.

AT&T Ready2Go



AT&T Ready2Go allows you to quickly and easily setup your phone by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features. For more information, refer to “*Setting up your Phone with Ready2Go*” on page 12.





AT&T Smart Wi-Fi

With AT&T Smart Wi-Fi, you can maximize your battery performance, maximize your data, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data use. For more information, refer to “*AT&T Smart Wi-Fi*” on page 152.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The Calculator also keeps a history of recent calculations.


1. From the Home screen, tap  → **Calculator** .
2. Enter the first number using the on-screen numeric keys.
3. Enter the operation for your calculation by tapping the corresponding on-screen arithmetic function key.

4. Enter the second number.
5. To view the result, tap equals (=).
6. To view calculator history, tap  located at the top of the calculator buttons. A history of your past calculations is displayed. Tap  again to display the calculator keypad.
7. To clear the calculator history, press  → **Clear history**.
8. To change the text size, press  → **Text size**. Tap Small, Medium, or Large.


Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.


To access the Calendar:

1. From the Home screen, **Calendar** .
2. The following options are available:
 - **Month**: the calendar displays the selected month with today's date highlighted. At the bottom of the calendar, scheduled events display in the order that they occur.

- **Week:** the calendar displays the selected week with today's time and date highlighted.
- **Day:** the calendar displays the selected day with any events highlighted.
- **List:** the Event List displays all events that you have added for all dates in the order that they appear.

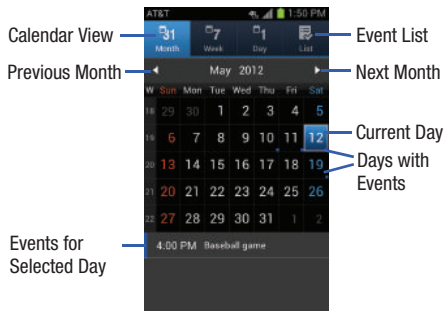

Calendar Options


- From any Calendar view, press  to display the following options:

- **Create event:** allows you to create a new event for any day or time period.
- **Go to:** allows you to go to any date on your calendar.
- **Today:** takes you to today's date, if you are not already there.
- **Search:** allows you to search through your calendar for a particular word or words.
- **Delete:** displays the event list, where you can select events to delete.
- **Settings:** displays the following calendar settings:
 - **Calendars:** displays all calendars they you have created.
 - **Default view:** allows you to set the default view to Month, Week, Day, or List.
 - **Day view:** allows you to set the Day view to display with times listed or as a list of events. Select Time grid or Event List.
 - **First day of week:** allows you to set the first day of the week to Sunday or Monday. This will affect how the Month view calendar is displayed.
 - **Hide declined events:** will not display events you have received from others if you have declined them.
 - **Hide birthdays from Contacts:** will not display the birthdays of your contacts.

- **Lock time zone:** allows you to lock the event times and dates to the time zone that you select.
- **Select time zone:** allows you to set the time zone to which event times and dates will be locked.
- **Set alerts & notifications:** allows you to turn on audio alerts, set Status bar notification, or turn alerts off.
- **Vibration:** allows you to set the Event notification tone to vibrate Always, Only in Silent mode or Never.
- **Select ringtone:** allows you to set the ringtone for the Event notification tone.
- **Calendar sync:** allows you to sync your calendar with other accounts such as email or social accounts.

Event List

The Event List displays all events that you have added for all dates in the order that they appear.

1. From the Calendar, tap the **List** icon.
2. Tap any event to display it.
3. Press  to display the following options:
 - **Edit:** allows you the change the Event name, date, time, location, participants, alarm, alarm details, and description. Tap **Save**.

- **Delete:** allows you to delete any event. Tap **OK** at the prompt.
- **Send via:** allows you to send event information via Bluetooth, Email, Messaging, or Wi-Fi Direct.

Camera

Use your 8.0 megapixel camera feature to produce photos in a JPEG format. Your phone also functions as a Camcorder to take videos.



For more information, refer to “*Camera*” on page 84.

Clock

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, and use a timer.

Alarm


This feature allows you to set an alarm to ring at a specific time.

1. From the Home screen, tap  → **Clock**  → **Alarm** → **Create alarm**. The following options display:
 - **Time:** tap the (+) or (-) to set the new time for the event, at which time an alarm will sound.
 - **Alarm repeat:** use this option to set the repeating status for the alarm by tapping days that you want the alarm to repeat. Tap the Repeat weekly checkbox to repeat your setup every week.


- **Alarm type:** sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration and melody, and Briefing).
- **Alarm volume:** drag the slider to adjust the alarm's volume.
- **Alarm tone:** sets the sound file which is played when the alarm is activated. Select **Sounds** or **Go to My files**.
- **Snooze:** use this option to set a Duration (3, 5, 10, 15, or 30 Minutes) and Snooze repeat (1, 2, 3, 5, or 10 Times).
- **Smart alarm:** tracks body movements and calculates the best time for sounding the alarm. Place the phone somewhere on your bed then the phone's movement sensor (also known as accelerometer) is sensitive enough to work from any part of the bed. Set the Duration and the Tone.
- **Name:** allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.

2. Tap **Save** to store the alarm details.

Turning Off an Alarm




- To stop an alarm when it sounds, touch and drag the  icon in any direction.

Setting the Snooze Feature

- To activate the Snooze feature after an alarm sounds, touch and drag the  icon in any direction. Snooze must first be set in the alarm settings. For more information, refer to “Alarm” on page 165.


Deleting Alarms

To delete an alarm, follow these steps:

1. From the Home screen, tap  → **Clock**  → **Alarm** →  → **Delete**.
2. Tap the alarm or alarms you wish to delete. A green checkmark will appear next to each selection.
3. Tap **Delete**.




World Clock

World Clock allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.

1. From the Home screen, tap  → **Clock**  → **World clock**. The clock for your time zone is displayed.
2. Tap **Add city** to add another city to the World Clock.



3. Scroll through the list of cities to find the city you want to add, or tap the Search bar and use the keypad to enter a city to search for.
4. Tap the city you want to add. The clock for that city will display.
5. To set Daylight Savings time, press and hold a city, then tap **DST settings**.
6. Select **Automatic**, **Off**, **1 hour**, or **2 hours**.
7. If Daylight Savings Time is selected, the sun symbol on the World Clock listing will appear orange.

Deleting a World Clock Entry

1. From the Home screen, tap  → **Clock**  → **World clock** →  → **Delete**.
2. Tap the city clocks you wish to delete.
3. Tap **Delete**.

Stopwatch



You can use this option to measure intervals of time.

1. From the Home screen, tap  → **Clock**  → **Stopwatch**.
2. Tap **Start** to start the stopwatch and tap **Lap** to mark a unit of time per lap.

3. Tap **Stop** to stop the stopwatch.
4. Tap **Restart** to continue or tap **Reset** to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).



1. From the Home screen, tap  → **Clock**  → **Timer**.
2. The **min** field is highlighted and set to 1 minute. Use the keypad to set the number of minutes you want.
3. Tap the **hr** field to set hours if desired. As you tap different fields, they will become highlighted.
4. Tap the **sec** field to set seconds.
5. Tap **Start** to begin the timer and tap **Stop** to pause the timer.
6. After stopping, tap **Restart** to continue or tap **Reset** to set the timer back to the original setting.

Desk clock

You can use the Desk clock when you have a desk dock and you want your phone to display the time, day, date, location, and weather conditions when it is docked.

1. From the Home screen, tap  → **Clock**  → **Desk clock**.

The default Desk clock is displayed.

2. Tap  to display the Desk clock in full-screen mode.
3. To make changes, tap  → **Settings**.
4. The following options are displayed while in full-screen mode:
 - **Hide status bar**: when this is checked, the status bar is hidden from view.
 - **Wallpaper**: tap to select Desk clock wallpaper from Default, Gallery, or Same as home screen.
 - **Time/Calendar display**: when this is checked, the time, day, and date is displayed. Tap to uncheck.
 - **AccuWeather**: when this is checked, the location, temperature, and weather condition is displayed. Tap to uncheck.
 - **Brightness**: sets your Desk clock brightness by dragging the slider bar to the desired level.



Contacts

You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

For more information, refer to “*Contacts and Your Address Book*” on page 62.



Downloads

The Downloads application allows you to manage all of your downloads from the Market and the Browser.

1. From the Home screen, tap  → **Downloads** .
All of your downloads are listed.
2. Tap the **Internet Downloads** tab to see all of the downloads you have made from the Browser.
3. Tap the **Other Downloads** tab to see all other downloads.
4. Tap **Sort by size** to see your downloads sorted in size order.
5. Tap **Sort by date** to see your downloads sorted in date order.

Facebook

You can use the Facebook app to go directly to your Facebook account rather than accessing it from the Browser.

1. From the Home screen, tap  → **Facebook** .
2. If you already have a Facebook account, tap on the **Email** and **Password** fields and enter your information using the on-screen keyboard, then tap **Login**.
– or –
If you don't have a Facebook account, tap **Sign up** and follow the on-screen instructions.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to “*Gallery*” on page 82.

Gmail

Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to “*Using Gmail*” on page 104.

Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. For more information, refer to “*Google +*” on page 106.

IM

Instant Messaging allows you to send and receive instant messages using Windows Live Messenger, Google Talk, or Yahoo! Messenger communities. For more information, refer to “*Google Talk*” on page 106.



Kies air

Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view call logs, videos, photos, bookmarks, IMs, and even send SMS messages from your home computer. For more information, refer to “Kies Air” on page 157.


Latitude

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

You must first set up your phone to use wireless networks to help pinpoint your location. Also, Latitude works best when Wi-Fi is enabled.

1. Log on to your Google account. For more information, refer to “Creating a New Google Account” on page 13.
2. From the Home screen, tap  → **Latitude** . Your location is displayed on the map, accurate to 30 meters.

Sharing your Location with Friends

1. From the Latitude map screen, tap **FRIENDS LIST** to display your Latitude friends. At first, only your name is displayed.
2. Tap .
3. Tap **Select from Contacts** or **Add via email address**.
4. Tap a contact or enter an email address and tap **Add friends**.
5. At the **Send sharing requests** prompt, tap **Yes**. Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their phone or tablet provided it is available. Once they acknowledge your request, their location will display on your phone. They can share their location from their computer, phone, or tablet. For more information, go to <http://www.google.com/latitude>.
6. To view the map, tap **MAP VIEW**.

Latitude Options

- From the map display, press  to display the following options:

- **Clear Map:** allows you to remove all markings and layers from the map.
- **Search:** allows you to search for a place of interest.
- **Directions:** displays navigation directions to a location from a starting point.
- **Layers:** Layers are additional items that you can have displayed on your map. They include Traffic, Satellite, Terrain, Transit Lines, Latitude, My Maps, Bicycling, and Wikipedia.
- **Settings:** displays the Google Mobile Help web page where you can receive help on Google Maps.
 - **Display:** allows you to display the Zoom Buttons and Scale Bar on the screen.
 - **Cache:** allows you to set options to pre-fetch map tiles when not using WiFi and to clear the cache that holds the map tiles.
 - **Location settings:** allows you to manage the settings for your Background location reporting, Location history, Latitude location sharing, and Check-ins.
 - **Labs:** this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
- **What's New:** allows you to see the latest changes in Play Store and update your app.
- **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
- **Feedback:** allows you to send feedback to Google.
- **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.
- **Help:** displays the Google Mobile Help web page where you can receive help on Google Maps.

Live TV

Live TV is a subscription service that allows you to watch your favorite TV shows using your handset. For more information, refer to “*Live TV*” on page 80.


Maps

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

Important! Before using Google Maps you must have an active data connection. The Maps application does not cover every country or city.

Enabling a Location Source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

1. From the Home screen, tap  → **Settings**  → **Location services**.
2. Tap the **GPS satellites** field. A green checkmark will display next to the field.



Note: Selecting **GPS satellites** allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage

- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Using Maps

1. From the Home screen, tap  → **Maps** .
A map will display with your location in the very center.
2. Icons for the following options are displayed at the bottom of the screen:



Search: allows you to search for a place of interest.




Directions: displays navigation directions to a location from a starting point.



Places: find Restaurants, Cafes, Bars, Attractions, and other businesses.



Layers: additional items that you can have displayed on your map. They include Traffic, Satellite, Terrain, Transit Lines, Latitude, My Maps, Bicycling, and Wikipedia.

3. Press  to display the following options:
- **Clear Map:** allows you to remove all markings and layers from the map.
 - **Settings:** displays the Google Mobile Help web page where you can receive help on Google Maps.
 - **Display:** allows you to display the Zoom Buttons and Scale Bar on the screen.
 - **Cache:** allows you to set options to pre-fetch map tiles when not using WiFi and to clear the cache that holds the map tiles.
 - **Labs:** this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
 - **What's New:** allows you to see the latest changes in Play Store and update your app.
 - **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
 - **Feedback:** allows you to send feedback to Google.
 - **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.




- **Help:** displays the Google Mobile Help web page where you can receive help on Google Maps.

Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. You can rent or purchase your favorite content and watch from the convenience of anywhere. For more information, refer to “*Media Hub*” on page 74.

Memo

This feature allows you to create a memo and send it via Bluetooth, Email, Messaging, or Wi-Fi Direct.

1. From the Home screen, tap  → **Memo** .
2. To create a new memo, tap **Create memo**.
 - or –
 - Press  → **Create**.
3. Type your Memo using the keypad and tap **Save**. The memo will display in the memo list.
4. To send a Memo, touch and hold the Memo in the Memo list.
5. Tap **Send**.
6. Tap **Bluetooth, Email, Messaging, or Wi-Fi Direct**.

Note: Email will appear as an option only after you have setup your Email account. For more information, refer to “Using Email” on page 103.

7. Enter the recipient information and tap **Send**. For more information, refer to “Message Options” on page 98.
8. To modify a Memo, tap the pencil icon in the top right corner of the Memo. Edit the Memo then tap **Save**.
9. From the Memo list, press  to display the following options:
 - **Create:** allows you to create a new memo.
 - **Delete:** allows you to delete one or all of your memos.
 - **Search:** allows you to search your memos for a particular word or words.
 - **Send:** allows you to send one or several of your memos at one time. You can send via Bluetooth, Email, Messaging, or Wi-Fi Direct.
 - **Sort by:** allows you to sort by Date or Color.
 - **SNS log in:** allows you to log into your Facebook, Twitter, or LinkedIn accounts.

- **Sync memo:** allows you to sync your memos Google Docs or send individual memos.
- **PIN lock:** allows you to set a PIN lock so that a PIN must be entered before reading a memo.

Messaging



You can send and receive different types of messages. For more information, refer to “Messaging” on page 97.


Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone. For more information, refer to “Messenger” on page 107.


Mini diary

The Mini Diary allows you to keep a diary of your daily activities and also attach pictures. You can publish your diary entries to Facebook and MySpace.

1. From the Home screen, tap  → **Mini diary** .
2. Tap **Create diary** to start a new diary entry.
3. Tap the **Tap to add photo** field to add a photo.

- To take a new picture, tap **Camera**. To add a photo from your Gallery, tap **Gallery**.
- Tap the **Tap to add text** field to add text to your diary then tap **Done**.
- Use the on-screen keypad to enter a memo then tap **Done**.
- Tap the **Add location** field to add your location then tap **Done**.
- Tap **Save**.
- The diary entry will be added to your Mini Diary with today's date.
- While in a diary entry that has been previously saved, press  to display the following options:
 - Create**: allows you to create a new diary entry.
 - Delete**: allows you to delete a diary entry.
 - Go to**: allows you to go to a selected date on the Calendar.
 - Change photo**: allows you to change your photo if you have already added one. This option only displays if a photo has been added.
 - Delete photo**: allows you to delete your photo. This option only displays if a photo has been added.

- Publish**: allows you to publish your diary to Facebook.
- Send via**: allows you to send your Diary entry by Email or Messaging.

11. At the Mini Diary screen, press  to display the following options:

- Search**: allows you to search your diaries for a particular word or words.
- List by**: allows you to sort by Date or Location.
- Delete all**: allows you to delete all diary entries.
- Settings**: allows you to select **Auto update** which will update your Selected city based on GPS.

MOG Music

MOG Music gives you access to over 11 million songs and provides unlimited listening and unlimited downloads. MOG Music also has a desktop service, which is available for access from any desktop PC or browser. You can download any song or album straight to your mobile phone for a low monthly fee. You can also access the MOG Music radio. For more information, refer to “*MOG Music*” on page 76.

Movies



The Movies application allows you to rent movies to watch on your phone. For more information, refer to “*Movies*” on page 80.

Music Player

Music allows you to play music files that you have stored on your phone and memory card. You can also create playlists. For more information, refer to “*Music*” on page 76.

My files

My files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

1. From the Home screen, tap  → **My files** .
2. The following folders display:
 - **DCIM**: this is the default location for pictures and videos taken by the device. Tap **DCIM** → **Camera** to view the picture or video files. For more information, refer to “*Accessing Pictures*” on page 89. Also, see “*Accessing Videos*” on page 93.
 - **Android**: the Android folder stores files that are used in Android applications.



- **external_sd**: this folder displays all of the files that you have on your memory card.
- **Bluetooth**: this folder stores files sent via a Bluetooth device.

Note: Different folders may appear depending on how your phone is configured.

myAT&T

The myAT&T application allows you to manage your own AT&T account. You can review and pay your bill, check minutes and data usage, upgrade to a new device, or change your rate plan.

Initial Setup

1. From the Home screen, tap  → **myAT&T** .
2. Sign into your Google Account. If you haven't set up an account, see “*Creating a New Google Account*” on page 13.
3. After signing into your Google Account, the Android Market displays the **myAT&T** application.
4. Follow the on-screen instructions to download the app.

Using myAT&T

1. From the Home screen, tap  → **myAT&T** .

The **myAT&T** page is displayed.

2. Read the Terms and Conditions and tap **Accept** to continue.
3. Enter your **Wireless #** and **Password** using the onscreen keypad, then tap **Login**.
4. Follow the on-screen instructions.

Navigation

Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination.

Note: For voice-guided navigation, you need to install text-to-speech support from the Android Market.


To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Launching Navigation

1. From the Home screen, tap  → **Navigation** .
2. Read the Navigation information page and tap **Accept** to continue or **Don't Accept** to exit.
3. Select one of the following options:
 - **Speak Destination:** allows you to speak your destination.
 - **Type Destination:** allows you to use the keypad to enter your destination.
 - **Contacts:** displays a list of all of your contacts that have addresses listed.
 - **Starred Places:** allows you to keep a list of favorite destinations, locations, restaurants, etc. Just tap a starred item to get directions.
 - **Recent Destinations:** allows you to access information on previous destinations you have used. This option only appears after you have entered one or more destinations.

Navigation Options

- The map displays with your location in the center. Press  for the following options:
 - **Exit Navigation:** exits the Navigation application and returns you to the Application Menu screen.



- **Route Info:** displays your route on a map.
- **Set Destination:** displays the Choose Destination screen where you can speak or type your destination.
- **Search:** allows you to speak or type a destination, place, or service to search for.
- **Layers:** are additional items that you can have displayed on your map. They include:
 - **Traffic view:** displays real-time traffic conditions so you can plan the fastest route.
 - **Satellite:** allows you to see you the map as a satellite image.
 - **Parking:** allows you to see registered parking areas.
 - **Gas Stations:** allows you to see registered gas stations.
 - **ATMs & Banks:** allows you to see registered ATMs and Banks.
 - **Restaurants:** allows you to see registered restaurants.
- **Directions List:** displays the written directions on how to arrive at your destination.
- **Help:** takes you to the Google Mobile Help web page.
- **Terms, Privacy & Notices:** displays Terms and Conditions for Google mobile products, the Google Privacy Policy, and Google legal notices.
- **Settings:** includes the following options:

- **Screen Dimming:** set this option to dim the screen between instructions in order to conserve battery power.

Obtaining Driving Directions

Your phone's built-in GPS hardware allows you to get real-time driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. From the Home screen, tap  → **Navigation** .
2. Tap either **Speak Destination** or **Type Destination**.
3. If typing in the address, enter the address, City, and State using the keypad. As you type, possible addresses will be displayed. Tap on one when you see the address you want.
The route will be displayed.
4. If speaking the address, the Voice guidance screen is displayed. For voice-guided navigation you need to install text-to-speech support from the Android Market. Tap **Install** to install the application or tap **Skip** to exit.

Note: You will need to be signed on to your Google account before downloading applications from the Android Market. For more information, refer to “*Creating a New Google Account*” on page 13.

5. As you drive the route display will be updated and you will receive voice-guided navigation directions.


News & Weather

The News & Weather application allows you to view the news and weather in your area.

1. From the Home screen, tap  → **News & Weather**



The Weather screen is displayed with current temperature, conditions, Humidity, and Wind speed.

2. Tap the temperature to display a graph mapping the days temperature and humidity.
3. While on the Weather screen, press  to display the following options:
 - **Refresh:** allows you to refresh the screen. Your location and the weather is updated if there have been any changes.
 - **Settings:** allows you to set weather, news, and refresh settings.



- **Weather settings:** allows you to choose location(s) and set the metric for temperature displays.
- **News settings:** allows you to choose topics, configure settings for fetching articles and images, and view the terms of service for news service.
- **Refresh settings:** allows you to choose options for updating content.
- **Application version:** displays the application version number.

4. To view the news, sweep the screen to the left to display **Top Stories, U.S., Sports, and Entertainment.**

NFS Shift

NFS (Need for Speed) Shift is a high performance racing game. You can use many different tracks in international locations with day and night driving.

To play, follow these steps:

1. From the Home screen, tap  → **NFS Shift** .

The game will download to your phone.

2. Follow the on-screen instructions to play the demo game or buy the full version.



Photo Editor

The Photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture. For more information, refer to “*Photo editor*” on page 95.

Places

Places is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and other businesses. You can also add your own locations.



The Places application allows you to find the best sources for business information across the web, including business listing details, reviews, photos, nearby public transit, and other related information. Business owners can provide additional details, like photos, hours of operation, and coupons.

1. From the Home screen, tap  → **Places** .
2. Tap on one of the business categories to search for a particular business.
All of the business categories that are close to you will be displayed.

3. Tap on a business that you want to see the details for.
4. The business details such as address, phone, website, and location are displayed. You can also see reviews from around the web and from Google users.



Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

1. From the Home screen, tap  → **Play Books** .
2. Log on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 13.
3. Follow the on-screen instructions for using the Books applications.



Play Movies

With Google Play Movies, you can rent movies to watch on your phone.

1. From the Home screen, tap  → **Play Movies** .
2. Log on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 13.
3. Follow the on-screen instructions for using the Movies applications.

Play Music

With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC.




1. From the Home screen, tap  → **Play Movies** .
2. Log on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 13.
3. Follow the on-screen instructions for using the Music applications.

Play Store

Play Store provides access to downloadable applications and games to install on your phone. Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store you must have a Google Account. For more information, refer to “*Using Gmail*” on page 104.

1. From the main Home screen, tap **Play Store** .

Note: The main Home screen initially contains the **Play Store**  icon. If you delete it, or if you want to access Messaging from another Home screen, you must tap **Applications**  → **Play Store** .

2. Sign in to your Google account.
3. The first time you sign in, the Android Market Terms of Service will be displayed. Tap **Accept** to continue or **Decline** to exit.
4. Tap **Apps**, **Games**, or **AT&T** to download or purchase games or applications. You can also download updates to existing applications.
5. Follow on the on-screen instructions.



Note: To use any downloaded market application that requires a USB connection between your phone and your PC, you should first set the USB utilities setting to **Connect storage to PC**. For more information, refer to “*USB utilities*” on page 110.

Qik Lite

Allows you to record and share live video from your device with your friends, family and your favorite social networks. For more information, refer to “*Qik Lite*” on page 81.

Quickoffice

The Quickoffice application allows you to create and save Microsoft Word and Excel documents. You can also view existing Powerpoint presentations and PDFs.

1. From the Home screen, tap  → **Quickoffice** .

2. Tap the **E-mail Address** field, then use the keypad to enter your E-mail address. Tap **Register Now**.

– or –

Tap **Register Later**.

The Quickoffice screen is displayed.

3. The following Quickoffice applications are available:

- **Quickword:** allows you to create and save Word documents on your phone. you can also access Word documents from your SD card and your Recent Documents folder.
- **Quicksheet:** allows you to create and save Excel spreadsheet documents.

- **Quickpoint:** allows you to view existing Powerpoint documents from your SD card and your Recent Documents folder.
- **QuickPDF:** allows you to view existing PDF documents from your SD card and your Recent Documents folder.

4. Select an option and follow the on-screen instructions.

Search

The Search application is the same on-screen Internet search engine that is on the Google Search Bar on your main Home screen. For more information, refer to “*Google Search Bar*” on page 33.





Settings

This widget navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to “*Changing Your Settings*” on page 108.

Social Hub

With Social Hub, you can now easily and intuitively satisfy all of your relevant communication needs from one integrated user experience. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available.

To access Social Hub, follow these steps:




1. From the Home screen, tap  → **Social Hub** .
The Social Hub Welcome page describes all of the available features.
2. To setup your Social Hub account, tap **Set up now**.
3. Tap on the Social Hub account type that you would like to set up.
4. Read the SNS disclaimer, tap the **I accept all the terms above** checkbox, then tap **Agree** to continue.
5. Tap **Next**.
6. Follow the on-screen instructions for adding an account.
7. From the Social Hub main screen, tap the **Feeds** or **Messages** tabs to see information pertaining to your account.
8. To add another account, press  → **Accounts** → **Add account**.
9. To refresh your status, press  → **Status update**.

Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to “*Google Talk*” on page 106.

Task

With the Task application you can create a task list of things you need to do and check them off after the task is complete.



1. From the Home screen, tap  → **Task** .
2. Tap **Create task** to start a new task entry.
3. Tap the **Name** field and enter a task name using the keypad.
4. Tap the **Due date** field and enter a due date name using the keypad. If there is no date that the task is due, tap the **No due date** checkbox.
5. If desired, enter **Task**, **Priority**, **Reminder**, and **Notes** then tap **Save**.
6. At the Task list screen, press  to display the following options:

- **Create:** allows you to create a new task.
 - **Delete:** allows you to delete one or all of your tasks.
 - **Search:** allows you to search your tasks for a particular word or words.
 - **List by:** allows you to sort by Due date, Status, or Priority.
 - **Sync task:** allows you to sync your tasks to any of your accounts.
7. From the Task list screen, tap a task once you have completed it and a checkmark appears next to the task. The task name is also grayed out so that you can still read it.

Task manager

The Task manager application provides information about the processes and programs running on your phone, as well as the memory status. It can also be used to terminate processes and applications.

To access the Task manager, follow these steps:

1. From the Home screen, tap  → **Task manager** .
2. The Task Manager options are located at the top of the screen. The following options are available:

- **Active applications:** displays all of the applications that are presently running on your phone. Tap Exit to end an application, or tap Exit all to end all running applications.
- **Downloaded:** displays the size of your downloaded application programs.
- **RAM:** displays the Random Access Memory (RAM) and allows you to clear RAM.
- **Storage:** displays a summary of your device's storage (used and available).
- **Help:** displays information on how to extend battery life.

Video player




The Video player application plays video files stored on your memory card. For more information, refer to “*Video player*” on page 82.

Visual Voicemail

AT&T Visual Voicemail provides an email-like inbox that lets you listen to voicemail messages in any order that you choose. You can also upgrade this service to transcribe your voicemail messages into text so that you can read or listen to them. For more information, refer to “*Setting Up Visual Voicemail*” on page 14.










Voice command

With the Voice command application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

1. From the Home screen, tap  → **Voice command** .
2. Read the Samsung Disclaimer then tap **Confirm** to continue.
3. Read the Vlingo Terms of Service then tap **Agree** to continue.
4. Read the information on the **How to Use Samsung voice** screen, then tap **Confirm**.
5. Tap **Finish**.
6. At the Voice command screen, tap on an icon for assistance in using Voice command or tap **Tap & Speak** to speak what you would like to do.
7. Follow the on-screen instructions.
8. For more information, press  → **Help**.

Voice recorder

The Voice recorder allows you to record an audio file up to one minute long and then immediately share it using AllShare, Messaging, Gmail, or via Bluetooth. Recording time will vary based on the available memory within the phone.



1. From the Home screen, tap  → **Voice recorder** .
2. To start recording, tap  and speak into the microphone.
3. During the recording process you can either tap **Stop**  to stop and save the recording or **Pause**  to temporarily halt the recording. After pausing, tap  to resume recording. Once the audio recording has stopped, the message is automatically saved. Tap  to cancel the recording without saving.
4. Tap  to display a list of all your voice recordings. Tap a voice recording to play it.
5. Press  to display the following options:
 - **Share**: allows you to share your recording using Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.

- **Delete:** allows you to delete 1 or more voice recordings. Tap the recordings to delete and tap **Done**.
- **Rename:** allows you to rename your recordings.
- **Settings:** the following settings are available:
 - **Storage:** allows you to choose where your recordings will be saved. Select between Phone or memory card.
 - **Default name:** allows you to choose the name prefix for your recordings. For example, if your Default name is Voice, your recordings would be named Voice 001, Voice 002, Voice 003, etc.
 - **Recording quality:** allows you to set the recording quality to High or Normal.
 - **Limit for MMS:** allows you to select On or Off. If you Limit for MMS by selecting On, you will be assured that the recording can be sent in a message.

2. Read the Samsung Disclaimer then tap **Confirm** to continue.
3. Read the Vlingo Terms of Service then tap **Agree** to continue.
4. Read the information on the **How to use Samsung voice** screen, then tap **Next**.
5. Read the information on the **Wake up Voice talk** screen, then tap **Next**.
6. Read the information on the **What can I say?** screen, then tap **Done**.
7. At the Voice talk screen, tap on an icon for assistance in using Voice command or tap **Tap & Speak** to speak what you would like to do.
8. Follow the on-screen instructions.

Voice talk





With the Voice talk application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

1. From the Home screen, tap  → **Voice talk** .

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. It is recommended that you upgrade to an unlimited data plan to avoid additional data charges.



1. From the Home screen, tap  → **YouTube** .
2. Tap the search field  to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
3. To view a video, tap an available preview thumbnail or tap the title link.
4. If you prefer high quality video, as the video starts to play, tap **HQ**.
5. Tap  to go to your camcorder so you can take your own videos.


Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, access the page via the Web browser and tap **Sign in** at the top right corner, enter your YouTube or Google username and password, and tap **Sign in**.

YP

The Yellowpages Mobile application provides quick and ready access to businesses, map locations, and storage of your favorite searches. This application allows you to tap into local businesses, locations, and events, connecting you to your search in real-time.

Note: The first time you use YP, you will need to download the updated application from the Market. When the Market page displays, tap **Update** or **Install** then follow the onscreen instructions. For more information, refer to “*Play Store*” on page 181.

1. From the Home screen, tap  → **YP** .
2. Read the End-User License Agreement (EULA) and tap **Accept** to continue.
3. Read the introduction information and tap **Continue**.
4. Your location is found using GPS. Tap **OK** to allow YP to use your current location.
5. Enter a subject or business name, city, and state in the search field and tap **Search**.
6. Results will be displayed.

7. Tap the globe icon to see the locations marked with pins on the map.
8. Pinch the map screen inwards to zoom out or pinch it outwards to zoom in.
9. Tap a pin to read information about the location.
10. Tap  to display additional options.

Section 11: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device.**

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated

with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at

http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at

<http://www.ukcosmos.org/index.html>.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at

http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at

<http://seer.cancer.gov/>.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/>.
(Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/>.
- World Health Organization (WHO):
<http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>.
- Health Protection Agency:
<http://www.hpa.org.uk/Topics/Radiation/>.

- US Food and Drug Administration:
[http://www.fda.gov/Radiation-EmittingProducts/
RadiationEmittingProductsandProcedures/
HomeBusinessandEntertainment/CellPhones/default.htm](http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm).

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC RF exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The RF exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body

expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum reported value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the SAR limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body-worn operation, this phone has been tested and meets

FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

WCDMA/GSM/EDGE and 700 MHz/AWS LTE

The highest reported SAR values are:

- Head: 0.30 W/kg
- Body-worn accessory: 0.55 W/kg
- Product Specific: 0.85 W/kg
- Simultaneous Transmission: 0.87 W/kg

WLAN

The highest reported SAR values are:

- Head: 0.13 W/kg
- Body-worn accessory: < 0.10 W/kg
- Product Specific: < 0.10 W/kg
- Simultaneous Transmission: 0.87 W/kg

SAR information on this and other model phones can be accessed online on the FCC's website through <http://transition.fcc.gov/oet/rfsafety/sar.html>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional SAR information can also be obtained at <http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones>.

FCC Part 15 Information to User

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Smart Practices While Driving

On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. **Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired.** Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require.

Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to <http://www.ctia.org>.

Battery Use and Safety

Important! Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.** Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.

- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.
- **Do not place your battery in or near a heat source.** Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your phone in your car in high temperatures.
- **Do not dispose of the phone or the battery in a fire.** The phone or the battery may explode when overheated.
- **Do not handle a damaged or leaking battery.** Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.
- **Avoid dropping the cell phone.** Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**
- **Do not allow the battery to touch metal objects.** Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

Important! Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

WARNING!

Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible cell phone batteries and chargers.**

Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers.

Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.

- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at:

http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: <http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm> or at <http://www.call2recycle.org/>.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to http://www.samsung.com/us/aboutsamsung/citizenship/usactivities_environment_samsungrecyclingdirect.html?INT=ST [A recycle your phone page](#) and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website: www.samsung.com/recyclingdirect
Or call, (877) 278-0799.

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning! Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the “Standard Limited Warranty”.

GPS & AGPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore

airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**.

Therefore:

- Always tell the emergency responder your location to the best of your ability; and

- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation-data, including data relating to your current location, may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. **Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

Emergency Calls



This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances.

Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to

make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. From the Home screen, tap . The dialer is displayed.
3. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
4. Tap the  key.

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device

may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion.

Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss.

This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones

that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300
Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet:

<http://www.audiology.org/Pages/default.aspx>

**National Institute on Deafness and Other
Communication Disorders**

National Institutes of Health
31 Center Drive, MSC 2320
Bethesda, MD 20892-2320
Email: nidcdinfo@nih.gov

Internet:

<http://www.nidcd.nih.gov/>

**National Institute for Occupational Safety
and Health (NIOSH)**

395 E Street, S.W., Suite 9200
Patriots Plaza Building
Washington, DC 20201

Voice: 1-800-35-NIOSH
(1-800-356-4674)

1-800-CDC-INFO (1-800-232-4636)
Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet:

[http://www.cdc.gov/niosh/topics/noise/
default.html](http://www.cdc.gov/niosh/topics/noise/default.html)

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: <http://www.fcc.gov/oet/rfsafety/rf-faqs.html#>.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion

or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

When your Device is Wet

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

The U.S. Federal Communications Commission (FCC) has established requirements for digital wireless mobile devices to be compatible with hearing aids and other assistive hearing devices.

When individuals employing some assistive hearing devices (hearing aids and cochlear implants) use wireless mobile devices, they may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not

be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Wireless mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings. M-ratings refer to enabling acoustic coupling with hearing aids that do not operate in telecoil mode.

T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings. T-ratings refer to enabling inductive coupling with hearing aids operating in telecoil mode.


Hearing devices may also be rated. Your hearing aid manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

Under the current industry standard, American National Standards Institute (ANSI) C63.19, the hearing aid and wireless mobile device rating values are added together to indicate how usable they are together. For example, if a

hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equals M5.

Under the standard, this should provide the hearing aid user with normal use while using the hearing aid with the particular wireless mobile device. A sum of 6 or more would indicate excellent performance.

However, these are not guarantees that all users will be satisfied. T ratings work similarly.

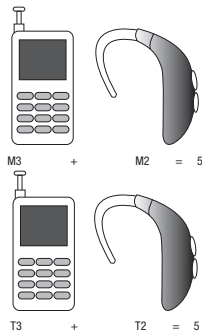

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

HAC for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device.

Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- When using a headset in dry environments, static electricity can build up in the headset and cause a small quick static electrical shock. To minimize the risk of electrostatic discharge from the headset avoid using the headset in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before inserting the headset.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing games for extended periods. If you feel any discomfort, stop using the device immediately.

- Reduce risk of repetitive motion injuries. When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.
- If your device has a camera flash or light, do not use the flash or light close to the eyes of people or pets. [122011]

Section 12: Warranty Information

Standard Limited Warranty

What is covered and for how long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC (“SAMSUNG”) warrants that SAMSUNG’s handsets and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

What is not covered?

This Limited Warranty is conditioned upon proper use of the Product.

This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception

or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG's sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product.

Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the

remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address.

To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What are the limits on SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS.

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE

OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees.

Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG's employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082

Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2012 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [111611]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement (“EULA”) is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, “online” or electronic documentation (“Software”).

BY CLICKING THE “I ACCEPT” BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE “I ACCEPT”, AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE “DECLINE” BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. **GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. **RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual

property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. **LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after

the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. **SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. **EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **THIRD-PARTY APPLICATIONS.** Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to

Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. **Disclaimer of Warranty Regarding Third-Party Applications.** SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY

THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY,

ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES

CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOT WITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. Government End Users Restricted Rights. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Software and Products provided to the United States Government pursuant to solicitations issued on or after December 1, 1995 is provided with the commercial rights and restrictions described elsewhere herein. All Software and Products provided to the United States Government pursuant to solicitations issued prior to December 1, 1995 are provided with RESTRICTED RIGHTS as provided for in FAR, 48 CFR 52.227-14 (JUNE 1987) or DFAR, 48 CFR 252.227-7013 (OCT 1988), as applicable.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the

Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Social Hub

Legal Terms and Privacy

Samsung's Social Hub and (if applicable) the website where you accessed this Disclaimer (collectively, the "Service"), is being made available to you by Samsung Electronics Co., Ltd., and its affiliates and suppliers (collectively "Samsung") subject to the following enclosed documents:

- Social Hub Terms and Conditions which governs your use of the Service generally;

- Social Hub End User License Agreement which specifically governs your use of the software which forms part of, or enables you to access, the Service; and
- Social Hub Privacy Policy which governs our collection and use of personal information in connection with your access to and use of the Service.

By using the Service, you agree to be bound by the above documents. Please read through those documents to make sure you understand the basis on which Samsung is providing the Service to you.

You will be able to access additional features available at socialhub.samsungmobile.com.

Social Hub Terms and Conditions

Acceptance of the Terms

These Social Hub Terms and Conditions together with the Social Hub Privacy Policy and Social Hub End User Licence Agreement (collectively "Terms") govern your use of Social Hub, which comprises all content and services accessible through Social Hub (including third party content and services), and (if applicable) the website where you accessed these Terms (collectively the "Service"). The Terms constitute an agreement between you and Samsung

Electronics Co., Ltd., and its affiliates (collectively "Samsung") with respect to the Service. By using the Service, you agree to be legally bound to the Terms.

You are not allowed to use the Service if you do not agree to the Terms. To the extent permitted by applicable law, Samsung reserves the right to modify, update, supplement, revise or otherwise change the Terms, and to impose new or additional rules, policies, terms or conditions in relation to the Service, from time to time with or without notice to you ("Amendments").

Samsung may provide you with notice of the Amendments by sending an email message to the email address listed in your account information (if any), or by posting the notice on the Social Hub website.

Such Amendments will be effective immediately and incorporated into the Terms upon sending or posting of such notice. You are responsible for regularly reviewing the Terms. Your continued use of the Service will be deemed to constitute your acceptance of any and all such Amendments.

Eligibility

To use the Service, you must be at least sixteen (16) years of age. If you are at least sixteen (16) years of age but are a minor for legal purposes where you live, you must review the

Terms and have your parent or legal guardian accept the Terms on your behalf in order for you to use the Service. The person accepting the Terms on your behalf must be legally competent.

Your Information

When required to provide information in connection with your use of the Service, you agree to provide truthful and complete information. Providing misleading information about your identity is forbidden. When you first use the Service, you may be required to create a username and a password.

You (and your parent or legal guardian, if you are a minor) are personally responsible for any use of the Service with your username and password.

You agree to take due care in protecting your username and password against misuse by others and promptly notify Samsung about any misuse.

Termination of Service

Samsung may terminate or restrict your access to certain parts of the Service if there is an indication that you have breached the Terms or at any time in its sole discretion.

Your Material

Except as set forth in the Social Hub Privacy Policy, Samsung shall not be responsible for any removal of the information or content you have submitted in the course of using the Service ("Material") when your access to the Service is terminated. Your submission of Material in the course of using the Service does not transfer ownership rights in the Material to Samsung. After the Material is removed from the Service by either you or Samsung, some traces of the Material may remain and copies of the Material may still reside within the servers used in providing the Service. However, Samsung does not claim ownership in your Material.

You represent and warrant that you have obtained any consents, permission or licenses that may be required for you to have the legal right to submit any Material. Samsung reserves the right to terminate your access to the Service if Samsung determines, at its sole discretion, that you have repeatedly submitted infringing Materials to the Service.

Using the Service

You agree to:

- Use the Service only for your private, non-commercial purposes;
- Comply with applicable laws, the Terms and good manners;

- Not submit unlawful, offensive, abusive, pornographic, harassing, libelous or other inappropriate Material;
- Respect the privacy of others;
- Obtain any consents, permission or licenses that may be required for you to have the legal right to submit any Material; and
- Not distribute or post spam, unreasonably large files, chain letters, pyramid schemes, viruses or any other technologies that may harm the Service, or the interest or property of the Service users.

Unauthorized use of the Service (including any use in contravention of the Terms) is prohibited and may result in criminal prosecution and/or civil liability.

Restrictions

You and any third party directed by You must not display, copy, store, modify, sell, publish or redistribute the Service (whether all or any portion of it), and such displaying, copying, storing, modification, sale, publishing and redistribution shall be prohibited unless you have obtained all necessary rights and permissions from Samsung and the owners and right holders of such the Service or relevant part.

You must not use the Service for any purposes other than those permitted under the Terms. Without limiting this restriction, you must not use the service for any illegal purposes, to make unsolicited offers or advertisements, to impersonate or falsely claim affiliation with any person or entity, to misrepresent, harass, defraud or defame others, to post obscene or unreasonably offensive material, to negatively present the Service, nor for any commercial purposes.

Except as expressly permitted by the Terms, and except to the extent that applicable laws prevent Samsung from restraining you from doing so, you are not allowed to disassemble, reverse engineer, tamper with the Service, transmit malicious code or collect information of other users through the Service.

You may not take any action to interrupt the functionality of or tamper with the Service or any content or service contained in or provided through the Service, or any servers used in providing the Service, or to unreasonably affect others' enjoyment of the Service in any way.

Actions Required by Law

Samsung may need to comply with lawful interception and/or data retention requirements imposed by your country of residence or any other country in which you use the Service. Samsung may restrict access to any part of the Service or terminate your access to the Service, at any time in its sole discretion if required by law or by the relevant authorities or regulatory agencies to do so.

Third Party Sites and Content

The Service may allow access to sites on the Internet that are owned or operated by third parties. Access to such sites does not imply that Samsung endorses the site or the conduct, products or services on the site. Upon accessing any such site, you must review and agree to the rules of use of the relevant site before using the site.

You acknowledge and agree that Samsung has no control over the content, products or services of third-party sites and does not assume any responsibility for or in respect of such content, products or services. Third party content and services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of

time. Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any third party content or service.

In addition, Samsung is neither responsible nor liable for customer service related to third party sites. Any question or request for service relating to third party sites should be made directly to the relevant site operator.

Subscription Information

Use of the Service may involve transmission of data through your service provider's network. Your network service provider may charge you for such data transmission. Samsung assumes no responsibility for the payment of any such charges.

Availability

The Service may be network dependent - contact your network service provider for more information. Samsung reserves the right, in its sole discretion, to change, improve and correct the Service. The Service may not be available during maintenance breaks and other times. Samsung may also decide to discontinue the Service or any part thereof in its sole discretion. In such case you will be provided with prior notification.

Samsung does not represent or warrant that the Service, or any part thereof, is appropriate or available for use in any particular jurisdiction. If you choose to access the Service, you do so on your own initiative and at your own risk, and you are responsible for complying with all US federal, state and local laws, rules and regulations.

Dealings with Others

You may interact with other users on or through the Service. You agree that any such interactions do not involve Samsung and are solely between you and the other user(s).

Intellectual Property

The Service and related software are protected under international copyright laws and you are hereby notified that copyrights are claimed by Samsung.

Subject to the Terms, Samsung retains all right, title and interest in the Service and in all Samsung's products, software and other properties provided to you or used by you through the Service.

Personal Data

The Social Hub Privacy Policy and the following additional provisions govern the use of your personal information. When you access the Service, Samsung may ask for or otherwise

collect certain personal information such as your email address along with your user name and password and, in certain cases, your mobile phone number so that we can communicate with you, for example to send notifications of incoming messages. When you use the Service, certain technical information such as the type and serial number of your mobile device, Internet protocol address, your mobile network and country codes, timezone, technical details of your client as well as your transactions with Samsung, for example your acceptance of the Terms, will be automatically collected by Samsung.

The purposes for which Samsung may use such data are explained in the Social Hub Privacy Policy. Samsung may also participate with your selected service providers in maintaining your contact lists.

The third party services and content you access through the Service and the telecommunications carriers and the network through which you access the Service are provided and hosted by your selected third party content and service providers who typically has a privacy policy of its own. We recommend you familiarize yourself with your service provider's privacy policy. Samsung is not responsible for the privacy or any other practices of such service providers. Although your messages will be transmitted through

Samsung's servers, Samsung will not process the content or headers of your messages for any purpose other than as necessary to deliver and manage your messages, unless otherwise required by law.

In connection with certain services accessible via the Service, Samsung may cooperate with your operator and other third parties. Samsung may receive from such third parties certain device specific non-personal information, such as device serial number of the devices sold by the operator with preinstalled software for the Service. Such information may be used for analyzing the activation of the Service.

LIMITATION OF LIABILITY

THE SERVICE IS PROVIDED ON "AS IS" AND "AS AVAILABLE" BASIS. TO THE FULLEST EXTENT PERMITTED BY THE LAW AND SUBJECT TO THE TERMS, SAMSUNG DOES NOT WARRANT THAT THE SERVICE WILL BE UNINTERRUPTED OR ERROR OR VIRUS-FREE.

TO THE FULLEST EXTENT PERMITTED BY THE LAW AND SUBJECT TO THE TERMS, NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE OR NON-INFRINGEMENT OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS

FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE AVAILABILITY, ACCURACY, RELIABILITY, OF THE SERVICE, INCLUDING ANY INFORMATION OR CONTENT PROVIDED THROUGH THE SERVICE. YOU EXPRESSLY AGREE AND ACKNOWLEDGE THAT THE USE OF THE SERVICE IS AT YOUR SOLE RISK AND THAT YOU MAY BE EXPOSED TO CONTENT FROM VARIOUS SOURCES.

SAMSUNG SHALL NOT BE HELD RESPONSIBLE FOR ANY THIRD PARTY CONTENT OR SERVICE THAT MAY BE ACCESSED THROUGH THE SERVICE, NOR SHALL SAMSUNG BE HELD RESPONSIBLE FOR MALICIOUS CODE CONTAINED ON OR DISTRIBUTED THROUGH BY THIRD PARTIES.

YOU ASSUME FULL RESPONSIBILITY FOR ANY DAMAGES, LOSSES, COSTS, OR HARM ARISING FROM YOUR USE OF OR INABILITY TO USE THE SERVICE. TO THE EXTENT PERMITTED BY LAW, EXCEPT FOR LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY GROSS NEGLIGENCE OR INTENTIONAL MISCONDUCT, SAMSUNG DISCLAIMS ALL LIABILITIES WITH RESPECT TO YOUR USE OF THE SERVICE (INCLUDING DIRECT, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES).

IF THERE IS A CLAIM THAT WE HAVE BREACHED ANY OF THE PROVISIONS IN THE TERMS, THIS DOES NOT AFFECT OR INVALIDATE THE OTHER PROVISIONS.

CERTAIN STATUTORY PROVISIONS UNDER APPLICABLE LAW MAY IMPLY WARRANTIES OR CONDITIONS OR IMPOSE OBLIGATIONS UPON SAMSUNG WHICH CANNOT BE EXCLUDED, RESTRICTED OR MODIFIED OR CANNOT BE EXCLUDED, RESTRICTED OR MODIFIED EXCEPT TO A LIMITED EXTENT. THE TERMS MUST BE READ SUBJECT TO THESE STATUTORY PROVISIONS. IF THESE STATUTORY PROVISIONS APPLY, TO THE EXTENT TO WHICH SAMSUNG IS ABLE TO DO SO, SAMSUNG LIMITS ITS LIABILITY UNDER THOSE PROVISIONS TO, AT ITS OPTION, IN THE CASE OF SERVICES (A) THE SUPPLYING OF THE SERVICES AGAIN; OR (B) THE PAYMENT OF THE COST OF HAVING THE SERVICES SUPPLIED AGAIN AND, IN THE CASE OF GOODS, (A) THE REPLACEMENT OF THE GOODS OR THE SUPPLY OF EQUIVALENT GOODS; (B) THE REPAIR OF THE GOODS; (C) THE PAYMENT OF THE COST OF REPLACING THE GOODS OR OF ACQUIRING EQUIVALENT GOODS; OR (D) THE PAYMENT OF THE COST OF HAVING THE GOODS REPAIRED.

Indemnification

You agree to defend, indemnify and hold harmless Samsung from and against any and all third party claims and all liabilities, assessments, losses, costs or damages resulting from or arising out of i) your breach of the Terms, ii) your infringement or violation of any intellectual property, other rights or privacy of a third party, iii) misuse of the Service by a third party where such misuse was made possible due to your failure to take reasonable measures to protect your username and password against misuse.

Choice of Law

Except where prohibited by applicable law or provided otherwise herein, the Terms shall be governed by the laws of the State of New York without regard to its conflict of law provisions.

You and Samsung agree to submit to the non-exclusive jurisdiction of the competent courts in the State of New York to resolve any legal matters arising from the Terms.

Notwithstanding this, you agree that Samsung shall still be allowed to apply for injunctive remedies (or equivalent type of urgent legal relief) in any jurisdiction.

Miscellaneous

The Terms (including all documents comprising the Terms) constitute the entire agreement between you and Samsung, and supersedes any prior agreement between you and Samsung, with respect to your use of the Service. Your use of any third-party content or service accessed via the Service will be governed by the terms and conditions furnished with, and applicable to that content or service. If any provision of the Terms is held invalid, illegal or unenforceable, that portion of the Terms shall be construed in a manner consistent with applicable law to reflect, as nearly as possible, the original intentions of the parties, and the remaining portion of the Terms shall remain in full force and effect. Samsung's failure to enforce any right or provision of the Terms will not constitute a waiver of such provision, or any other provision of the Terms.

Samsung will not be liable or responsible for any failure to fulfill any of its obligations under the Terms which failure is due to any cause or condition beyond the reasonable control of Samsung. If there is any conflict between these Social Hub Terms and Conditions and the Social Hub Privacy Policy, the provisions of these Social Hub Terms and Conditions shall

prevail. The provisions of the Terms that are intended to or by their nature should survive termination of your use of the Service shall remain valid after any such termination.

Social Hub Privacy Policy

Samsung Electronics Co., Ltd. ("Samsung") is committed to protecting the online privacy of visitors, users and customers to our Social Hub service. This privacy policy ("Privacy Policy") forms part of the Terms which govern your use of Social Hub(excluding any third party content and services), and (if applicable) the website where you accessed this Privacy Policy, (collectively, the "Service"). The purpose of the Privacy Policy is to inform you about the types of information we gather about you when you access or use the Service, how we may use that information, and if and how we disclose it to third parties.

All users of the Service are required to provide true, current, complete and accurate personal information when prompted and we will reject and delete any entry that we believe in good faith to be incorrect, false, falsified, or fraudulent, or inconsistent with or in violation of the Privacy Policy.

We will provide you with an opportunity to give your consent in relation to your use of the Service. Separate from such consent, your access or use of the Service will be construed

as your acceptance of the Privacy Policy and of our collection, use, disclosure, management and storage of your personal information as described below. We may, from time to time, transfer or merge any personal information collected off-line to our online databases or store off-line information in an electronic format. We may also combine personal information we collect online with information available from other sources, including information received from our affiliates, marketing companies, or advertisers. This Privacy Policy covers all such personal information and will remain in full force and effect as long as you are a user of the Service, even if your use of or participation in any particular service, feature, function or promotional activity terminates, expires, ceases, is suspended or deactivated for any reason.

INFORMATION THAT WE COLLECT

Personal Information

We may request that you supply us with "personal" information, such as your name, e-mail address, mailing address, home or work telephone number in the course of you accessing or using the Service, such as via registration forms, surveys, and polls. In each such case, you will know what categories of information we collect because you will actively provide the information to us. You may not be able to

fully utilize all of the features or components of the Service if you choose not to provide certain information. If you do choose to give us personal information through the Service, we will collect and retain that information.

Non-Personal Information

When you use the Service, we may also collect "non-personal" information. We consider "non-personal information" to be information that, by itself, cannot be used to identify or contact you personally, such as demographic information (your age, gender, income, education, profession, zip code, etc.). Non-personal information may also include technical information, such as your IP address and other anonymous data involving your use of the Service.

Non-personal information may also include information that you provide us through your use of the Service, such as the terms you enter into the search functions of Social Hub, mail inbox and instant messenger. We reserve the right to use or disclose non-personal information in any way we see fit.

USE OF INFORMATION WE COLLECT

Our Services

We use your personal information to provide you with any services that you may request or require, to communicate with you and to allow you to participate in online surveys. We

use aggregated non-personal information about our users to understand the demographics of users of the Service, such as the percentage of male and female users, the geographic distribution of our users, the age ranges of our users, a combination of these and/or other demographics. We may also use the personal or non-personal information we collect to analyze how Service is being used, and to improve the content of the Service, and for marketing and promotional efforts.

E-mail Communications

If you send us an e-mail with questions or comments, we may use your personal information to respond to your questions or comments, and we may save your questions or comments for future reference. Aside from our reply to such an e-mail, it is not our standard practice to send you e-mail unless you request a particular service that involves e-mail communications. However, you consent to us contacting you by e-mail, and sending you information about products and services which we believe may be of interest to you. You may have the opportunity to subscribe to an electronic newsletter in which case information about the Service or our advertisers will be sent to your e-mail address. We will provide you with the option to change your preferences and opt-out of receiving those communications. You may request

at any time that we not e-mail you in future by clicking the "unsubscribe" link which is included at the bottom of any e-mail that you receive from us. If you unsubscribe, we will make reasonable efforts to discontinue e-mail communications to you as soon as practicable.

DISCLOSURE OF INFORMATION TO THIRD PARTIES

Aggregate Information

Except as specifically set forth in this Privacy Policy, we do not share your personal information with any third party without your permission. We may disclose aggregate information, such as demographic information, and our statistical analyses to third parties, including advertisers or other business partners. This aggregate information does not include your personal information.

Service Providers

We sometimes engage unaffiliated businesses to assist us in providing you certain services. For example, we may use third parties to provide advertising, marketing and promotional assistance, provide e-mail services, or facilitate our online services. In those instances, we may need to share your personal information with them.

We require these companies to use your personal information only to provide the particular product or service and do not authorize them to use your personal information for any other reason. We sometimes offer promotions in conjunction with a third party sponsor.

If you choose to participate in those promotions, we may share your information with the sponsor if they need it to send you a product or other special promotion they offer.

Third Party Advertisers

We may use third-party advertising companies to deliver specific advertisements to you. These companies may collect non-personal information about your visits to Social Hub in order to provide advertisements about products and services that may be of interest to you.

These companies may also aggregate your non-personal information for use in targeted advertising, marketing research, and other similar purposes. These companies may place their own cookies on your computer. If you want to prevent a third-party advertiser from collecting and using this information, you may visit each third party advertiser's website directly and opt-out.

Other Disclosures

We may disclose personal information when we are required or requested to do so by law, court order or other government or law enforcement authority or regulatory agency; to enforce or apply our rights and agreements; or when we believe in good faith that disclosing this information is necessary or advisable, including, for example, to protect the rights, property, or safety of the Service and Samsung, our users, or others.

CHILDREN

The Service is not designed for use by children without their parent's supervision. We ask that anyone under the age of sixteen (16) not submit any personal information through the Service. We do not knowingly collect any personal information from children under the age of eighteen, and therefore we do not knowingly distribute such information to third parties.

SECURITY OF THE INFORMATION WE COLLECT

The security of your personal information is important to us. We maintain physical, electronic, and procedural safeguards to secure your personal information. However, there is

always some risk in transmitting information electronically. The personal information we collect is stored within databases that we control.

As we deem appropriate, we use security measures consistent with industry standards, such as firewalls and encryption technology, to protect your information. However, we cannot guarantee the security of our databases, nor can we guarantee that information you supply won't be intercepted while being transmitted to us over the Internet.

CHAT ROOMS AND OTHER PUBLIC AREAS

Our third party service and content providers may offer chat, user reviews, bulletin boards, or other public functions and any posting by you is considered public information available to other users. Any posting is governed in accordance with the third party service and content providers' terms and conditions. You should take care not to use personal information in your screen name or other information that might be publicly available to other users.

Archived Information

We maintain archives of web logs, database, and other systems and information in relation to the Service. Please note that it is possible some of this information may remain

archived after we delete the information from its active database. We maintain archives for disaster recovery, legal and other non-marketing purposes.

How can I update my profile?

You can help us maintain the accuracy of your profile by notifying us when you change zip/postal code, country of residence, age range, or e-mail address. If at any time you wish to update your information or stop receiving communication from us, sign in to the Service and then select 'update your profile' to change your preferences.

CONTESTS AND SWEEPSTAKES

Registration may be required to enter promotions such as contests and sweepstakes on Social Hub. These registration or entry processes may require your submission of personal information such as your first and last name, street address, city, state and zip code, e-mail address, telephone number and date of birth. The entry page and/or rules for the promotion will provide the specific requirements for the promotion. You may also have the opportunity to opt-in to special offers from our advertisers in connection with these promotions.

ACCURACY OF THE INFORMATION WE COLLECT

Any questions you may have regarding this Privacy Policy, the accuracy of your personal information or the use of your personal information, or any requests that we correct, update, or remove your information in our databases, should be directed via e-mail to s.dufresne@Samsung.com, or via regular mail to:

Samsung Telecommunications America, LLC
1301 E. Lookout Drive, Richardson, TX 75082
Attn: Customer Support Department

After receiving a request to change your information, we will make reasonable efforts to ensure that all of your personal information stored in databases we actively use to operate the Service will be updated, corrected, changed or deleted, as appropriate, as soon as reasonably practicable. However, we reserve the right to retain in our archival files any information we remove from or change in our active databases. We may retain such information to resolve disputes, troubleshoot problems and enforce our Terms.

In addition, it is not technologically possible to remove each and every record of the information you have provided to us. A copy of your personal information may exist in a non-erasable form that will be difficult or impossible for us to locate.

CHANGES TO PRIVACY POLICY

This Privacy Policy is effective as of May 29, 2010 and complies with Samsung's Corporate Privacy Policy. We reserve the right to change this Privacy Policy at any time, and will post any such changes to this Privacy Policy on the Social Hub website. Please refer back to the Social Hub website on a regular basis to obtain the most up to date Privacy Policy.

Social Hub End User License Agreement

1. SOCIAL HUB

This end user license ("License") allows you to use Social Hub ("Software") made available on your mobile device. This License is a legally binding agreement between you and Samsung Electronics Co. Ltd. the ("Licensor").

2. LICENSE

2.1 Licensor grants you for the term of this License a limited, personal, non-exclusive, non-transferable license to use the Software in object code executable only form on a single device for non-commercial uses.

2.2 All rights not expressly granted to you under this License are reserved to Licensor, and you agree not to take or permit any action with respect to the Software that is not expressly authorised under this License. For the avoidance of doubt, you have no right to use, incorporate into other products, copy, modify, translate or transfer to any third party the Software or any modification, adaptation or copy of the Software or any part thereof, nor to decompile, reverse engineer, or disassemble the binary code of the Software, either in whole or in part, except as expressly provided in this License.

2.3 The Software is licensed to you only. You may not rent, lease, sub-license, sell, assign, pledge, transfer or otherwise dispose of the Software, on a temporary or permanent basis without the prior written consent of Licensor.

3. OWNERSHIP OF INTELLECTUAL PROPERTY RIGHTS

3.1 Your only right to use the Software is by virtue of this License and you acknowledge that all intellectual property rights in or relating to the Software and all parts of the Software are and shall remain the exclusive property of Licensor or its licensors.

3.2 You agree that you will not remove or alter any copyright notices or similar proprietary devices, including without limitation any electronic watermarks or other identifiers, that may be incorporated in the Software or any copy of the Software.

4. CONFIDENTIALITY

4.1 The structure, organisation and source code of the Software are the valuable trade secrets and proprietary confidential information of Licensor and its licensors. You agree not to provide or disclose any such confidential information in the Software or derived from it to any third party.

4.2 The provisions of clause 4.1 will not apply to any information which is:

4.2.1 lawfully obtained free of any duty of confidentiality (otherwise than directly or indirectly from Licensor); or

4.2.2 already in your possession, provided that Licensee can show such possession from written records (other than as a result of a breach of this clause 4); or

4.2.3 which you can demonstrate is in the public domain (other than as a result of a breach of this clause 4).

4.3 To the extent that any information is necessarily disclosed pursuant to a statutory or regulatory obligation or court order, such disclosure shall not be a breach of this clause 4 provided you do what you can to prevent any such disclosure.

5. WARRANTY AND SUPPORT

The Software is provided "as is" with no representation, guarantee or warranty of any kind as to its functionality or that it does not and will not infringe any third party rights (including intellectual property rights). Licensor has no obligation under this License to provide technical or other support to you.

6. LIMITATION AND EXCLUSION OF LIABILITY

6.1 Licensor does not exclude its liability (if any) to you:

6.1.1 for personal injury or death resulting from Licensor's negligence;

6.1.2 for fraud; or

6.1.3 for any matter for which it would be illegal for Licensor to exclude or to attempt to exclude its liability.

6.2 LICENSOR MAKES NO EXPRESS WARRANTIES WITH RESPECT TO THE SOFTWARE AND LICENSOR HEREBY EXCLUDES (TO THE FULLEST EXTENT PERMISSIBLE IN LAW), ALL CONDITIONS, WARRANTIES (INCLUDING WITHOUT LIMITATION ANY WARRANTY THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT ITS OPERATION WILL BE UNINTERRUPTED OR ERROR FREE) AND STIPULATIONS, EXPRESS (OTHER THAN THOSE SET OUT IN THIS LICENSE) OR IMPLIED, STATUTORY, CUSTOMARY OR OTHERWISE WHICH, BUT FOR SUCH EXCLUSION, WOULD OR MIGHT SUBSIST IN FAVOUR OF YOU. EXCEPT AS SET OUT IN THIS LICENSE YOU ASSUME THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE.

6.3 SUBJECT TO CLAUSE 6.1 LICENSOR WILL BE UNDER NO LIABILITY TO YOU WHATSOEVER (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), BREACH OF STATUTORY DUTY, RESTITUTION OR OTHERWISE) FOR ANY INJURY, DEATH, DAMAGE OR DIRECT, INDIRECT OR CONSEQUENTIAL LOSS (ALL THREE OF WHICH TERMS INCLUDE, WITHOUT LIMITATION, PURE ECONOMIC LOSS, LOSS OF PROFITS,

LOSS OF BUSINESS, LOSS OF DATA, LOSS OF SAVINGS, DEPLETION OF GOODWILL AND LIKE LOSS) HOWSOEVER CAUSED ARISING OUT OF OR IN CONNECTION WITH:

6.3.1 THE SOFTWARE, OR THE MANUFACTURE OR SALE OR SUPPLY, OR FAILURE OR DELAY IN SUPPLY, OF THE SOFTWARE BY LICENSOR OR ON THE PART OF LICENSOR'S EMPLOYEES, AGENTS OR SUB-CONTRACTORS;

6.3.2 ANY BREACH BY LICENSOR OF ANY OF THE EXPRESS OR IMPLIED TERMS OF THIS LICENSE;

6.3.3 ANY USE MADE OF THE SOFTWARE; OR

6.3.4 ANY STATEMENT MADE OR NOT MADE, OR ADVICE GIVEN OR NOT GIVEN, BY OR ON BEHALF OF LICENSOR.

6.4 Disclaimer of Certain Damages. IN NO EVENT SHALL SAMSUNG BE LIABLE TO YOU OR ANY PARTY RELATED TO YOU FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES OR LOST PROFITS, EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION WILL APPLY REGARDLESS OF THE THEORY OF LIABILITY, WHETHER FRAUD, MISREPRESENTATION, BREACH OF CONTRACT, NEGLIGENCE, PERSONAL INJURY, PRODUCTS LIABILITY, INTELLECTUAL PROPERTY INFRINGEMENT, OR ANY OTHER THEORY REGARDLESS OF WHETHER OR NOT SAMSUNG HAS

BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS MEANS THAT YOU WILL NOT SEEK, AND HEREBY WAIVE, ANY INDIRECT, SPECIAL, CONSEQUENTIAL, TREBLE, OR PUNITIVE DAMAGES FROM SAMSUNG. THIS LIMITATION AND WAIVER ALSO APPLIES TO ANY CLAIMS YOU MAY BRING AGAINST ANY OTHER PARTY TO THE EXTENT THAT SAMSUNG WOULD BE REQUIRED TO INDEMNIFY THAT PARTY FOR SUCH CLAIM.

6.5 You acknowledge that the above provisions of this clause 6 are reasonable for the Software and you will accept such risk and/or insure accordingly.

6.6 Any rights that you have as a consumer are not affected by this clause 6.

7. TERM AND TERMINATION

7.1 This License shall commence upon the earlier of your acceptance of this License or your activation of the Software and shall continue until terminated in accordance with clause 7.2 or otherwise in accordance with this License.

7.2 This License will terminate automatically if you fail to comply with any term or condition of this License or if you cease to use the Software for any reason.

7.3 Upon termination of this License for any reason whatsoever Licensor retains the right to permanently disable your access to the Software.

7.4 The termination of this License howsoever arising is without prejudice to the rights, duties and liabilities of either party accrued prior to termination. Clauses 2.2, 2.3, 3, 4, 5, 6, 7.3, 8, 9 and 10 of this License will continue to be enforceable notwithstanding termination.

8. GOVERNING LAW AND JURISDICTION

8.1 The formation, existence, construction, performance, validity and all aspects whatsoever of this License or of any term of this License will be governed by the laws of the State of New York.

8.2 The courts in New York City will have non-exclusive jurisdiction to settle any disputes which may arise out of or in connection with this License. The parties irrevocably agree to submit to that jurisdiction.

9. COMPLIANCE WITH APPLICABLE LAW

You acknowledge and agree that notwithstanding the fact that this License is governed by the laws of the Republic of Korea, you may be subject to additional laws in other jurisdictions with respect to your use of the Software. You

will comply with the laws of any jurisdiction that apply to the Software, including without limitation any applicable export laws or regulations.

10. GENERAL

10.1 If any clause or part of this License is found by any court, tribunal, administrative body or authority of competent jurisdiction to be illegal, invalid or unenforceable then that provision will, to the extent required, be severed from this License and will be ineffective without, as far as is possible, modifying any other clause or part of this License and this will not affect any other provisions of this License which will remain in full force and effect.

10.2 No failure or delay by any party to exercise any right, power or remedy will operate as a waiver of it nor will any partial exercise preclude any further exercise of the same, or of some other right, power or remedy.

10.3 The parties to this License do not intend that any of its terms will be enforceable by any person not a party to it.

10.4 This License contains all the terms which the parties have agreed in relation to the subject matter of this License and supersedes any prior written or oral agreements, representations or understandings between the parties in relation to such subject matter.

10.5 Licensor reserves the right to revise the terms of this License by updating the License on its web site, or by notifying you by post or by e-mail. You are advised to check the Licensor's website periodically for notices concerning revisions. Your continued use of the Software shall be deemed to constitute acceptance of any revised terms.

10.6 You will be deemed to have accepted the terms of this License by using the Software on any device.

Section 13: Samsung Product Registration

Sign Up Now

Customize your Samsung device experience

- Activate product warranty
- Access to a personalized My Samsung Mobile account
 - No monthly fees

Get More

- Latest info on promotions, events and special offers on related products
 - Review Samsung products and share your opinion
 - Great deals on downloads



Register now at
www.samsung.com/register

Scan this code to go
directly to the registration page.

SAMSUNG
mob!le

A

Abc mode 58

About Phone 139

Accounts and Synchronization settings 123

Adding a New Contact

Idle Screen 62

Address Book 62

Adding a New Contact 62

Adding Pauses to Contact

Numbers 64

Copying an entry to the Phone 72

Copying Entry to Phone 72

Copying Entry to SIM Card 72

Deleting Address Book Entries 73

Dialing a Number 65

Favorites 71

Finding an Address Book Entry 65

Group Settings 70

Managing Address Book Entries
71

Service Dialing Numbers 73

242

Using Contacts List 65

Address Book Options 68

Airplane mode 110, 114

Alarm 165

Amazon Kindle 159

Android System Recovery 16

Applications

Using the Camcorder 90

Using the Camera 84

World Clock 166

Applications settings

allow mock locations 138

managing 123

running services 123

stay awake 138

USB debugging 138

AT&T Code Scanner 159

AT&T GPS

Navigator 161

AT&T Music

Playlists 78

AT&T Navigator 161

AT&T Smart Wi-Fi 152

B

Back key 33

Battery

charging 9

Installing 8

Low Battery Indicator 11

Battery Use & Safety 197

Bluetooth

Sending contacts 155

Browser

Power Saving 143

Setting Brightness 143

Setting Color Saturation 143

C

Calculator 163

Calendar 163

Call Functions 46

3-Way Calling (Multi-Party Calling)
54

Address Book 48

Adjusting the Call Volume 52

- Answering a Call 48
- Call Back Missed Call 50
- Call Duration 52
- Call Log 49
- Call Waiting 56
- Correcting the Number 47
- Dialing a Recent Number 47
- Ending a Call 47
- International Call 46
- Making a Call 46
- Manual Pause Dialing 46
- Options During a Call 52
- Putting a Call on Hold 53
- Saving the Missed Call Number to Address Book 50
- Searching for a Number in Address Book 56
- Using the Speakerphone 55
- Viewing All Calls 50
- Viewing Missed Calls 50
- Camcorder** 90
 - Accessing the Video Folder 93
 - Camcorder Options 91
 - Shooting Video 91

- Camcorder Options**
 - Camcorder Options after a Video is Taken 93
- Camera** 84
 - Accessing the Pictures Folder 89
 - Camera Options 86, 91
 - Picture Folder 89
 - Taking Pictures 84
- Care and Maintenance** 203
- Changing Your Settings** 108
- Charging battery** 9
- Children and Cell Phones** 193
- Clock** 165
- Code Scanner** 159
- Contacts** 62
- Cookies**
 - Emptying 146
- Creating a Playlist** 78

D

- Developer Options** 138
- Diary** 174
- Display**
 - icons 22
- Display / Touch-Screen** 201

- Do cell phones pose a health hazard?** 189
- Downloads** 168

E

- Email** 103
 - Creating Additional Email Accounts 104
 - Switching Between Email Accounts 104
 - Synchronizing a Corporate Email Account 103
- Emergency Calls** 202
- Entering Text** 57
 - Changing the Text Entry Mode 57, 58
 - Using 123Sym Mode 57, 59
 - Using Abc Mode 58
 - Using Android Keyboard 60
 - Using Swype 60
 - Using Symbol/Numeric Mode 59
- Exposure to Radio Frequency (RF) Signals** 189

F

- Facebook** 169

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices 208
FCC Notice and Cautions 210

G

Gallery 82
 viewing pictures 83
 viewing videos 83
Getting Started 6
 Setting Up Your Phone 6
 Voice mail 14

Gmail 104

Google Maps 171

Google Search Bar 33

Google Voice Typing 61

GPS & AGPS 201

Group

 Adding an Entry 70
 Editing 71
 Removing an Entry 70

Group Settings

 Editing a Caller Group 71

H

Health and Safety Information 189

Home key 33

244

Hotspot Guru 152

Hotspots 152

I

Icons

 Application 26
 Indicator 22

Icons, description 22

In-Call Options 52

Incognito 144

 Create Window 144
 Exit Window 144

International Call 46

Internet 142

J

Joining Contacts 66

K

Keyboard Settings 129

 Android keyboard 129
 Samsung keypad 131
 Swype 133

Keypad

 Changing Text Input 58

Kindle 159

L

Landscape 57

Language and keyboard settings
 select locale 129

Latitude 170

Live TV 80

Location services settings 124

M

Maps 171

Media Hub 29, 74

Memo 173

Memory Card 44

Memory Card Installation 7

Menu

 key 33

Menu Navigation 33

Message Options 98

Message Search 101

Messaging

 Creating and Sending Text
 Messages 97

 Deleting a message 101

 Gmail 104

 Options 98

- Settings 102
- Signing into Email 103
- Signing into Gmail 105
- Types of Messages 97
- MicroSD Card** 7
- microSD card** 44
 - Installing 7
 - Removing 8
- microSDHC card** 7, 44
- Mini Diary** 174
- Mobile Web** 142
 - Entering Text in the Mobile Web
 - Browser 143
 - Navigating with the Mobile Web 142
 - Using Bookmarks 145
- Motion** 137
- Multimedia** 74
- Music File Extensions**
 - 3GP 76
 - AAC 76
 - AAC+ 76
 - eAAC+ 76
 - M4A 76

- MP3 76
- MP4 76
- WMA 76
- Music Player** 76
 - adding music 79
 - creating a playlist 78
 - removing music 79
- Mute** 53, 56
- My files** 176
- myAT&T** 176

N

- Navigation** 177
 - command keys 33
 - context-sensitive menus 34
 - terms used 34
 - touch gestures 34
- Navigation Options** 177
- Navigator** 161
- News** 179
- News & Weather** 179
- NFC** 157
- Noise reduction** 53
- Operating Environment** 206

- Other Important Safety Information** 211

P

- PC Connections** 156
- Phone**
 - Front View 19
 - icons 22
 - Rear View 21
 - Side View 20
 - Switching On/Off 11
- Pictures** 82
 - Gallery 82
- Places** 180
- Play Books** 180
- Play Movies** 180
- Play Music** 181
- Play Store** 181
- Portable Wi-Fi hotspot** 111
- Powering**
 - Off 11
 - On 11
- Predictive text** 59
- Privacy settings**
 - factory data reset 135

Q
Qik Lite 81

Quickoffice 182

QWERTY keypad 57

R

Ready2Go 12

Reducing Exposure

Hands-Free Kits and Other
Accessories 192

Reject List 52

Reject list 52

Reset

factory data 135

Responsible Listening 204

**Restricting Children's Access to Your
Mobile device** 210

S

Safe Mode 17

**Samsung Mobile Products and Recy-
cling** 199

SD Card 44

Search Bar 33

Security settings

device administration 127

trusted credentials 128

Service Dialing Numbers 73

Settings 108

Shortcuts 22

Show Corrections 60

SIM card

installation 7

Installing 6

Smart Practices While Driving 196

Smart Wi-Fi 152

Snooze 166

Social Hub 182, 223

Software Update 140

Speakerphone Key 55

**Specific Absorption Rate (SAR) Certi-
fication Information** 194

Standard Limited Warranty 213

Stopwatch 167

Storage 121

Swap 54

Swype

entering text using 60

Preferences 61

Symbol/Numeric mode 57, 59

Synchronization settings

auto-sync 124

System Recovery 16

T

Task 183

Task manager 184

Tethering 111

Text Input

Abc mode 58

Methods 57

numeric mode 57, 59

symbol mode 57, 59

Timer 167

Touch Screen 11

Lock/Unlock 11

Travel Charger 9

Using 10

TTY Mode 116

U

UL Certified Travel Charger 200

Understanding Your Phone 18

Features of Your Phone 18

Front View 19

Rear View 21

Side Views 20

USB connection modes 156

USB connections

as a mass storage device 156

USB settings

as a mass storage device 156

mass storage device 156

USB Tethering 111

USB utilities 110

Using Favorites

Adding Favorites 144

Deleting a Favorite 146

Editing Favorites 145

V

Video Chat 81

Video player 82

Visual Voicemail 14

Setup 14

Voice Mail

From Another Phone 16

Voice Recorder 185

Voice Talk 186

Voice mail

Accessing 14

Volume 118

W

Warranty Information 213

Weather 179

Web 142

Widgets

Calculator 27

Calendar 27

Camera 27

Gmail 28, 169

Memo 29

Settings 31, 182

Video Player 32

Voice Recorder 32, 185

YouTube 32

Wi-Fi 149

Wi-Fi Direct 113, 151

World Clock

Deleting an Entry 167

World clock 166

Y

Yellowpages 187

YouTube 186