



TP-LINK®
PHAROS

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.

TP-LINK is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders. No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2015 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

Website: <http://www.tp-link.com>
Tel: +86 755 26504400
E-mail: support@tp-link.com

7106505975 REV2.0.1



Installation Guide

WBS210 / WBS510
Outdoor Wireless Base Station

Contents

Overview	1
Hardware Installation	3
Connect cables	4
Mount Antenna	5
Power On	7
Lightning and ESD Protection	8
Configuration with PharOS	9
Log in to the PharOS	9
Configure the Base Station	10
Installer Compliance Responsibility	11
Specification	12
FAQ	13

Overview

TP-LINK's Outdoor Wireless Base Stations of the Pharos series products are designed for outdoor wireless network solutions, aiming at long-distance transmission and large coverage of wireless network.

- **Package Contents**



Base Station



Passive PoE Adapter



Waterproof Rubber Insert



Power Cord




Metal Strap




Installation Guide

• Panel Layout

The panel of Base Station

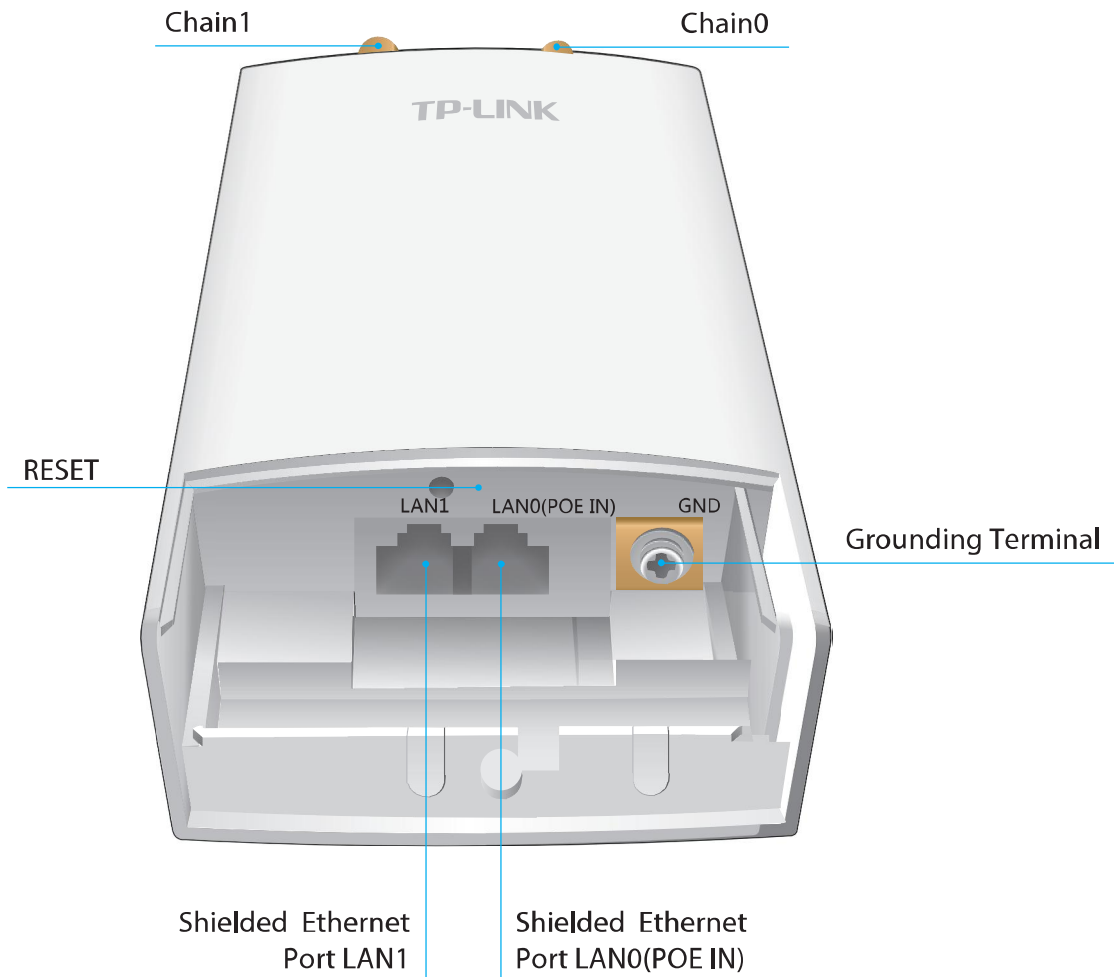


LED Explanation

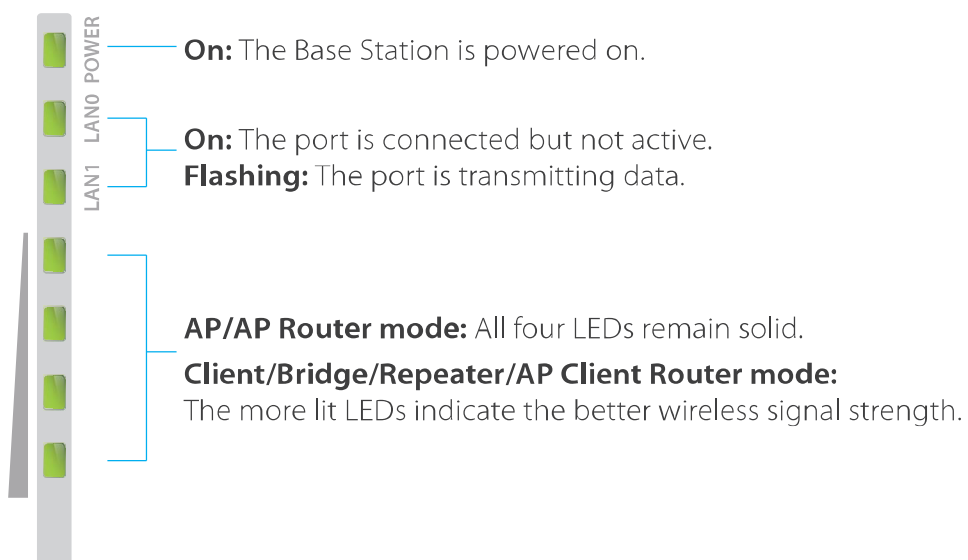

Passive PoE Adapter

Power LED:

The Power LED indicates the status of the electric current:
Green: 0-0.8A , Red: 0.8-1A

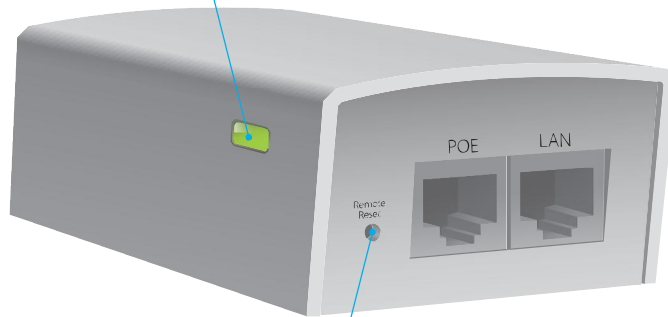

Remote Reset:


Press and hold for 8 seconds to reset the Base Station to its factory defaults.

Hardware Installation


The Outdoor Wireless Base Stations require external antenna that corresponds to your network environment. It is recommended to buy and use TP-LINK's matching antennas.

Connect Cables


- 1 Firmly grasp the rear of the interface cover and pull it downward.

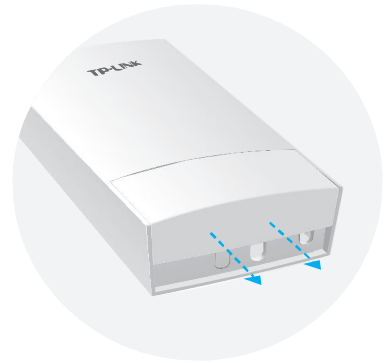

- 2 Use an adequate Ethernet cable to connect the LAN0 (POE IN) port. The length of cable is up to 60m for steady power supply. Shielded CAT5e (or above) cable with an integrated ground wire is recommended.

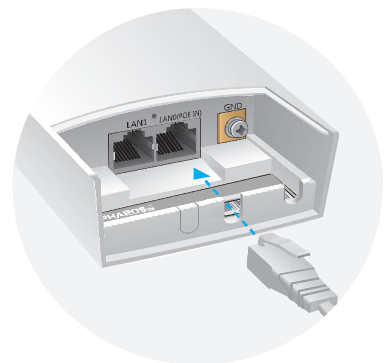

- 3 Affix the waterproof rubber insert to the underside of the device for waterproofing and replace the cover until it firmly locks into place.

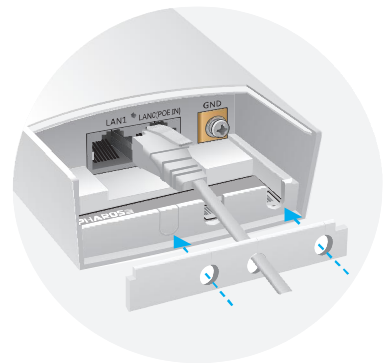

- 4 Connect the RF Cables to the Base Station.




Mount Antenna

Mount the Base Station on an antenna with a suitable mounting bracket or on a pole for the antenna without the mounting bracket.

- **Option 1: Mounting the Base Station on an Antenna**

 *Sector antenna is used as a demonstration below.*


- 1 Align the mounting tabs on the back of the Base Station with the four slots of the mounting bracket. Push and slide the Base Station downward until it locks into place.

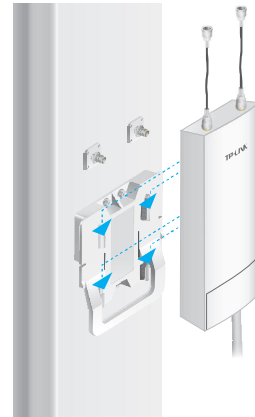


- 2 Connect the RF cables from the Base Station to the corresponding connectors on the antenna.



- 3 Attach the protective cap. Push and slide the protective cap down over the Base Station until it firmly locks into place.

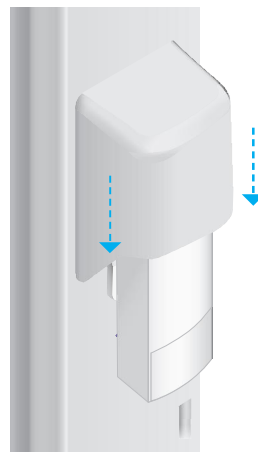

- 1 Loosen and completely remove the end of the metal strap by turning the captive screw counterclockwise with a flathead screwdriver.

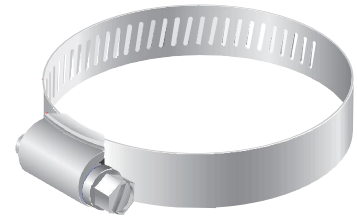

- 2 Lead the end of the metal strap through the back of the Base Station.




- 3 Position the Base Station and wrap the metal strap around the pole. Feed the end back through the screw-block and turn the screw clockwise to tighten the metal strap using a flathead screwdriver until the Base Station is secure.



- 4 Connect the RF cables from the Base Station to the corresponding connectors on the antenna.

Power On

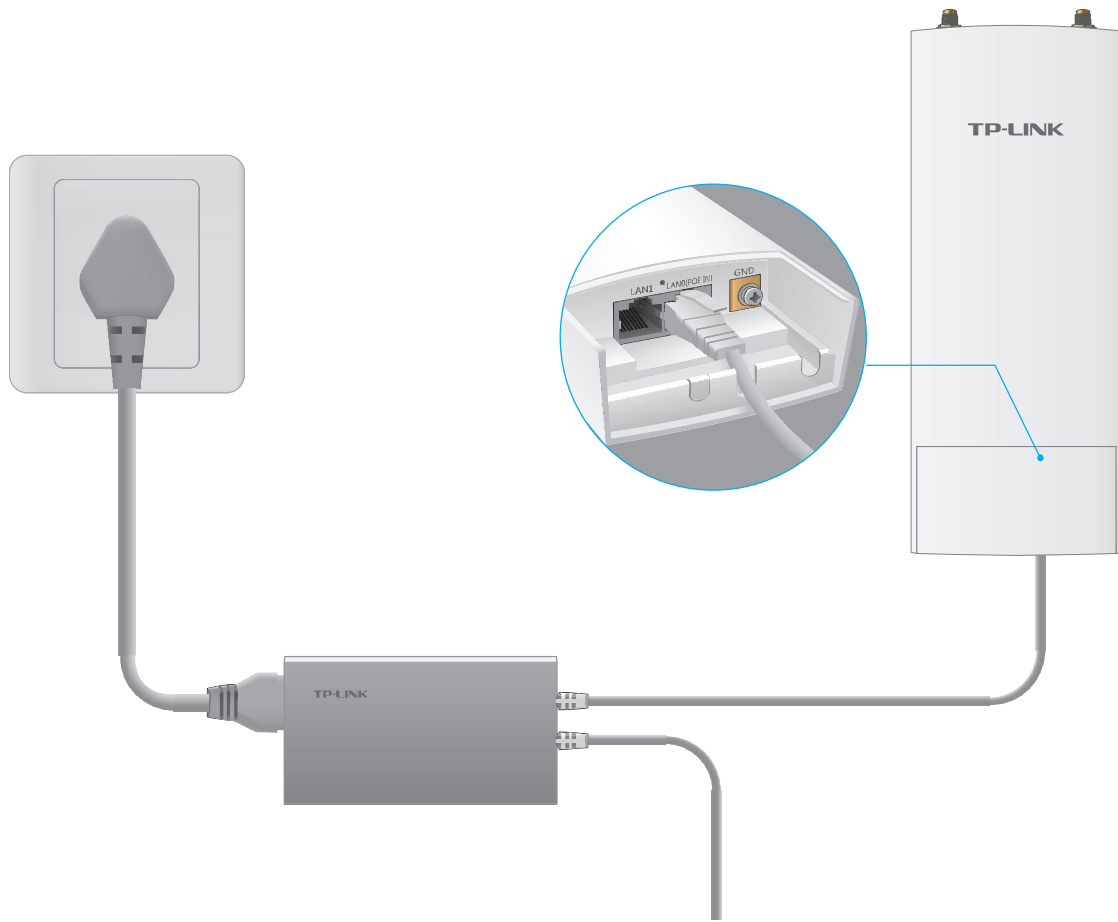

Connect the Base Station to a Power over Ethernet (PoE) adapter as follows:


- 1 Connect the Ethernet cable from the Base Station to the **POE** port of the PoE adapter.
- 2 Connect an Ethernet cable from your LAN device (a computer, router or switch) to the LAN port on the PoE adapter.
- 3 Connect the power cord to the power port on the PoE adapter and plug it into an electrical outlet.

Lightning and ESD Protection

Proper grounding is extremely important for outdoor devices. There are two effective techniques for grounding the Base Station.

Use a shielded CAT5e (or above) cable with an integrated grounding wire for connection.

If you have the standard CAT5e cable for the connection, use a separate grounding cable to connect the grounding Terminal (GND) to earth ground.

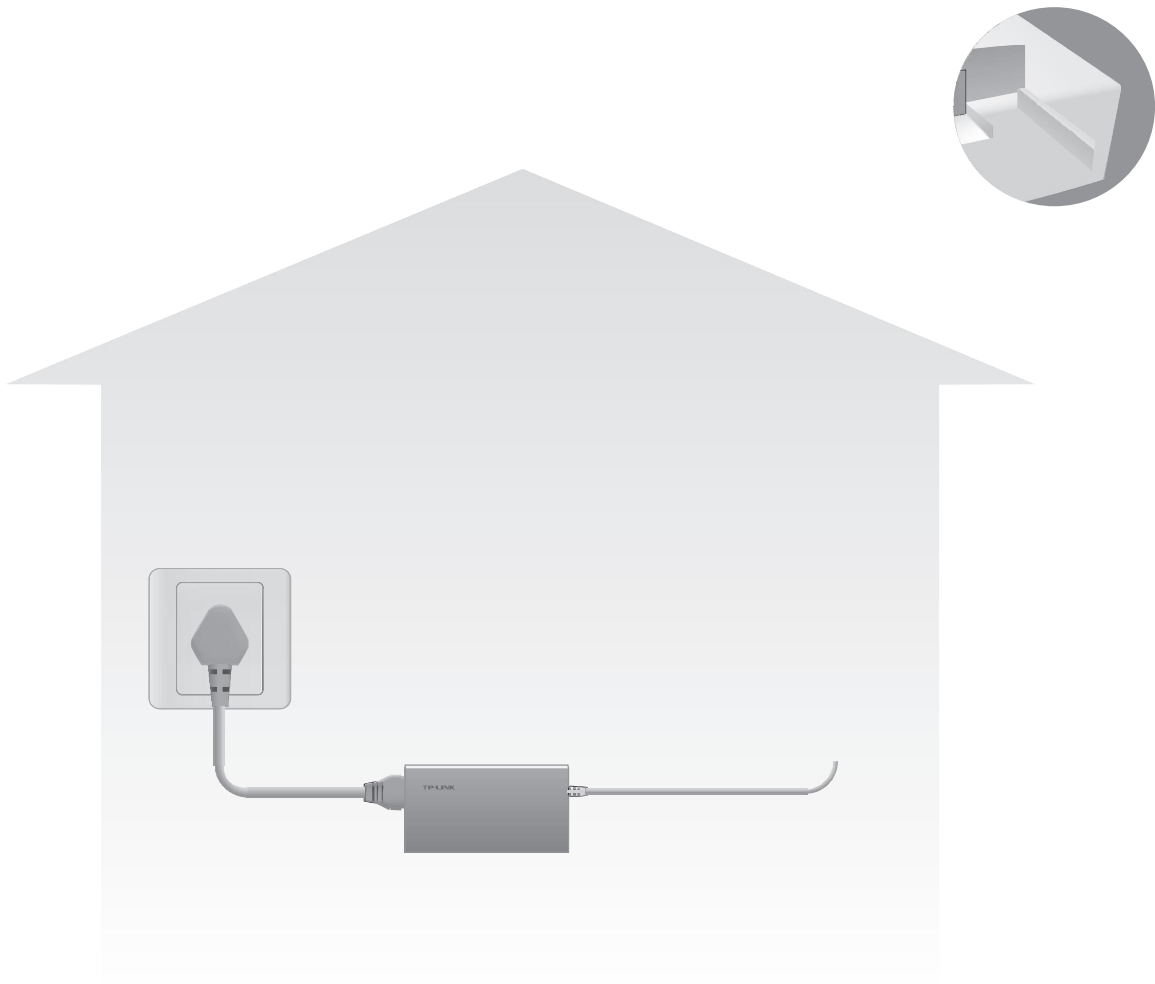


Configuration with PharOS

Based on your network needs, this section will guide you through the Base Station configuration using PharOS, a web-based management system that allows you to do more specific configurations.

Log in to the PharOS

- 1 Before accessing the PharOS Web Interface, you need to assign a static IP address 192.168.0.X (X ranges between 2 and 253, e.g. 192.168.0.10) to your computer.

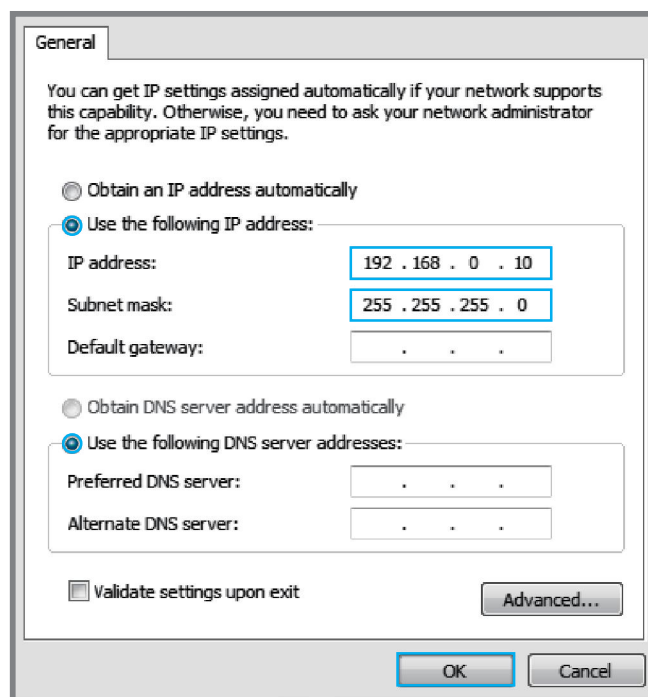

- 2 Open a web browser, type **http://192.168.0.254** into the address field and press **Enter** (Windows) or **return** (Mac). It is recommended to use the latest version of Google Chrome, Firefox or Safari.




3 Enter **admin** for both **User Name** and **Password**, then select the **Language** from the drop-down list. Read and agree the terms of use, then click **Login**.

4 Change the default User Name and Password to protect your Base Station. Let's start configuring the Base Station.

 For subsequent logins, use the new username and password.

Configure the Base Station

The typical topology is as follows. A wireless bridge is built between two locations that are far from each other. Follow the instructions below to configure the Access Point and the Client.

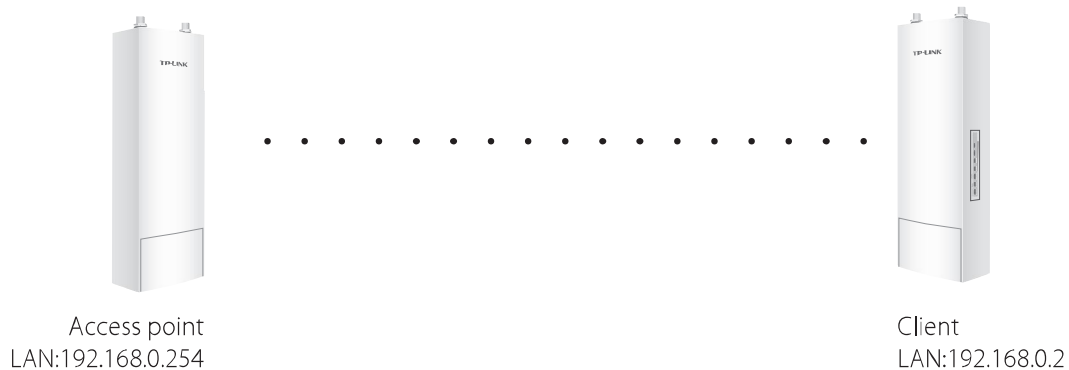

Configure the Access Point (AP)

1. Log in to PharOS and go to the Quick Setup page.
2. Operation Mode: Select **Access Point** and click **Next**.
3. LAN Settings: Click **Next**.
4. Wireless AP Settings:
 - a. Create a new SSID (Network name) for your wireless network.
 - b. Select **WPA-PSK/WPA2-PSK** for the Security method and create a PSK Password to protect your AP.
 - c. Enter the distance between the Access Point and the Client into the Distance Setting field.
 - d. Select the **MAXtream** checkbox (Refer to Q2 in FAQ for details about MAXtream), and click **Next**.
5. Finish: Verify your settings and click **Finish** to complete the configuration.

Configure the Client

1. Log in to PharOS and go to the Quick Setup page.
2. Operation Mode: Select **Client** and click **Next**.
3. LAN Settings: Change the IP Address to 192.168.0.X (X ranges between 2 and 253), the same subnet with the access point, and click **Next**.
4. Wireless Client Settings:
 - a. Click **Survey** and select the SSID of the Access Point in the AP list, then click **Connect**.
 - b. Select **WPA-PSK/WPA2-PSK** from the Security option, enter the same PSK password and distance value of the Access Point, then click **Next**.
5. Finish: Verify your settings and click **Finish** to complete the configuration.

Installer Compliance Responsibility

Devices must be professionally installed and it is the professional installer's responsibility to make sure the device is operated within local country regulatory requirements.



The screenshot displays the 'Wireless Basic Settings' interface. At the top, there are navigation tabs: QUICK SETUP, STATUS, NETWORK, WIRELESS (selected), MANAGEMENT, and SYSTEM. Below the tabs, the settings are as follows:

- Mode: 802.11b/g/n
- Channel Width: 20/40MHz
- Max TX Rate: MCS15 - 270/300 Mbps
- Channel/Frequency: Auto
- Antenna Gain: 0 (0-30)dBi
- Transmit Power: 27 dBm
- MAXtream: Enable
- Spectrum Analysis button
- Apply button

Since PharOS can be paired with a variety of antennas, the Antenna Gain and Output Power fields are provided to the professional installer to assist in meeting regulatory requirements.

Specification

Dimensions	198*74*40mm
Interface	LAN0 (POE IN): 10/100Mbps Ethernet port LAN1: 10/100Mbps Ethernet port GND: Grounding terminal for lightning protection RESET: Button to restore the device to its factory defaults Chain0/Chain1: 2 RP-SMA antenna interfaces
Power Supply	24V passive PoE adapter included
ESD Protection ¹	15kV
Lightning Protection ¹	Up to 6kV
Operating Temperature	-30°C ~ 70°C (-22°F ~ 158°F)
Operating Humidity	10% ~ 90%
Certification	CE, FCC, RoHS, IP65
802.11 Standards	11b/g/n (WBS210) 11a/n (WBS510)

Estimation is based on copper grounding cable and shielded CAT5e(or above) cable with an integrated grounding wire.

FAQ

Q1. How to restore the Base Station to its factory default settings?

With the Base Station powered on, press and hold the **RESET** button on the Base Station or the **Remote Reset** button on the passive PoE adapter for about 8 seconds until the Wireless Signal Strength LEDs flash.

Q2. What is Pharos MAXtream?

Pharos MAXtream is a proprietary protocol developed on the basis of Time Division Multiple Access (TDMA) by TP-LINK.

The MAXtream technology has the following advantages:


- Eliminates hidden node collisions & improves channel efficiency.
- Lower latency, higher throughput, larger network capacity & more stability.
- Improves the QoS for video, voice and sound data stream

By dividing the timing of transmission into different time slots, MAXtream allows the Pharos devices to transmit in rapid succession, one after another, each using its own time slot to transmit and receive they own frames, which greatly reduces the chance of collision.


Pharos MAXtream is a non-standard Wi-Fi protocol that is only compatible with TP-LINK's Pharos series products. Please notice that you will not be able to connect other Wi-Fi devices to an AP with MAXtream enabled.

Q3. How can I use Spectrum Analysis to find the appropriate channel for the devices?

1. Log in to PharOS, click **Spectrum Analysis** in the tools drop-down list, a window will pop up to remind you that all wireless connections will be lost during spectrum analysis. Click **Yes** to continue to the Spectrum Analysis page.

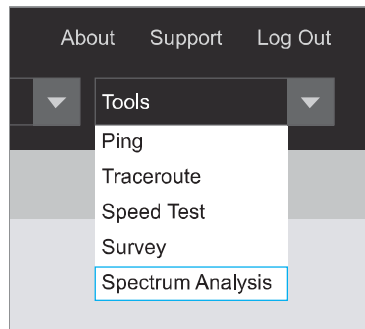

2. Click **Start**, the PharOS will begin to analyze the power of frequency. Observe the curves for a period of time, and then click stop. Note that the relatively low and continuous part of the average curve indicates less radio noise. Here, we use the figure below as an example.

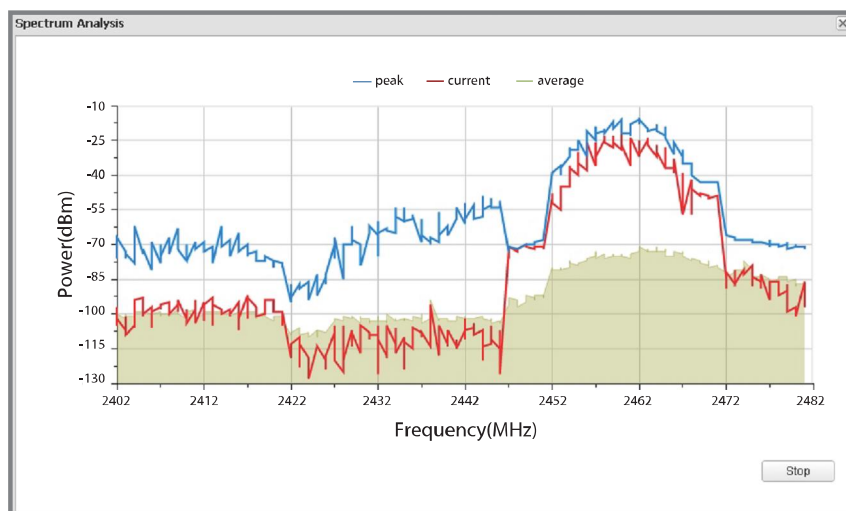

3. When choosing channel/frequency, you should avoid the spectrum with large radio noise. In this example, the recommended channel/frequency is 1/2412MHz and 6/2437MHz.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCCRF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

CE Mark Warning

CE1588

This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

IC STATEMENT

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Canadian Compliance Statement

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause interference, and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

This radio transmitter (IC: 8853A-WBS210/Model: WBS210 and IC: 8853A-WBS510/Model: WBS510) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Model	WBS210 (8853A-WBS210)	WBS510 (8853A-WBS510)
Antenna	2 dBi omni (50 ohm) 15 dBi sector (50 ohm)	3 dBi omni (50 ohm) 19 dBi sector (50 ohm)

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet émetteur radio (IC: 8853A-WBS210/Model: WBS210 and IC: 8853A-WBS510/Model: WBS510) a été approuvée par Industrie Canada pour l'exploitation avec l'antenne types énumérés ci-dessous avec le gain maximal admissible et requis l'impédance de l'antenne pour chaque type d'antenne indiqué. Types d'antenne non inclus dans cette liste, ayant un gain supérieur au gain maximal indiqué pour ce type, sont strictement interdits pour une utilisation avec cet appareil.

Immédiatement suite à la remarque, le fabricant doit fournir une liste de tous les types d'antenne approuvé pour une utilisation avec l'émetteur, ce qui indique le gain maximal d'antenne permis (en dBi) et requis d'impédance pour chacun.

Model	WBS210 (8853A-WBS210)	WBS510 (8853A-WBS510)
Antenna	2 dBi omni (50 ohm) 15 dBi sector (50 ohm)	3 dBi omni (50 ohm) 19 dBi sector (50 ohm)

Pour réduire le risque d'interférence aux autres utilisateurs, le type d'antenne et son gain doivent être choisies de façon que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour une communication réussie.

Caution (For WBS510)

- 1) The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- 2) For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate.

Avertissement (For WBS510)

- 1) Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- 2) Le gain maximal d'antenne permis pour les dispositifs avec antenne(s) amovible(s) utilisant la bande 5725-5850 MHz doit se conformer à la limitation P.I.R.E. spécifiée pour l'exploitation point à point et non point à point, selon le cas.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (A)/NMB-3(A)



Safety Information

- When product has a power button, the power button is one of the way to shut off the product; When there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.



- Use only power supplies which are provided by manufacturer and in the original packing of this product.

NCC Notice & BSMI Notice

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

減少電磁波影響，請妥適使用。

安全諮詢及注意事項

請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。

- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

此為甲類資訊技術設備，于居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

This product can be used in the following countries:

AT / BG / BY / CA / CZ / DE / DK / EE / ES / FI / FR / GB / GR / HU / IE / IT
LT / LV / MT / NL / NO / PL / PT / RO / RU / SE / SG / SK / TR / UA / US