

Telertronics

EzBridge

TTN-11-208

TTN-11-208

EzBridge

User's Guide

Version: 2.11

Last Updated: 08/11/2004

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, (example – use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/CE OF THE EUROPEAN PARLIAMENT AND THE COUNCIL OF 9 March 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) as of April 8,2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France (with Frequency channel restrictions), Germany, Greece, Ireland, Italy, Luxembourg, Portugal, Spain, Sweden, The Netherlands, and United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states Norway and Switzerland.

EU Countries Not Intended for Use

None.

Potential Restrictive Use

France: only channels 10, 11, 12, and 13.

Table of Contents

1. Introduction	1
1.1. Overview	1
1.2. Features	1
1.3. Feature Comparison	3
1.4. LED Definitions	3
2. First-Time Installation and Configuration	4
2.1. Inserting the Accompanying PCMCIA WLAN Card	4
2.2. Selecting a Power Supply Method	4
2.3. Mounting the AP on a Wall	4
2.4. Preparing for Configuration	5
2.4.1. Connecting the Managing Computer and the AP	5
2.4.2. Changing the TCP/IP Settings of the Managing Computer	6
2.5. Configuring the AP	6
2.5.1. Entering the User Name and Password	6
2.5.2. Step 1: Selecting an Operational Mode	8
2.5.3. Step 2: Configuring TCP/IP Settings	9
2.5.4. Step 3: Configuring IEEE 802.11 Settings	10
2.5.5. Step 4: Reviewing and Applying Settings	10
2.6. Deploying the AP	11
2.7. Setting up Client Computers	11
2.7.1. Configuring IEEE 802.11b-Related Settings	11
2.7.2. Configuring TCP/IP-Related Settings	11
2.8. Confirming the Settings of the AP and Client Computers	12
2.8.1. Checking if the IEEE 802.11b-Related Settings Work	12
2.8.2. Checking if the TCP/IP-Related Settings Work	12
3. Using Web-Based Network Manager	13
3.1. Overview	13
3.1.1. Menu Structure	13
3.1.2. Save, Save & Restart, and Cancel Commands	14
3.1.3. Home and Refresh Commands	15
3.2. Viewing Status	15
3.2.1. Associated Wireless Clients	15
3.2.2. Current DHCP Mappings	16
3.2.3. System Log	16
3.3. General Operations	17
3.3.1. Specifying Operational Mode	17
3.3.2. Changing Password	18
3.3.3. Managing Firmware	18
3.3.3.1. Upgrading Firmware by HTTP	18
3.3.3.2. Backing up and Restoring Configuration Settings by HTTP	19
3.3.3.3. Upgrading Firmware by TFTP	19
3.3.3.4. Backing up and Restoring Configuration Settings by TFTP	21
3.3.3.5. Resetting Configuration to Factory Defaults	22
3.4. Configuring TCP/IP Related Settings	23
3.4.1. Addressing	23
3.4.2. DHCP Server	23
3.4.2.1. Basic	23
3.4.2.2. Static DHCP Mappings	24
3.5. Configuring IEEE 802.11b-Related Settings	24
3.5.1. Communication	24
3.5.1.1. Basic	24
3.5.1.2. Link Integrity	25

3.5.1.3. Association Control.....	25
3.5.1.4. AP Load Balancing	25
3.5.1.5. Wireless Distribution System.....	26
3.5.2. Security	29
3.5.2.1. Basic	29
3.5.2.2. MAC-Address-Based Access Control	30
3.5.3. IEEE 802.1x/RADIUS	31
3.6. Configuring Advanced Settings	33
3.6.1. Packet Filters	33
3.6.1.1. Ethernet Type Filters	33
3.6.1.2. IP Protocol Filters	33
3.6.1.3. TCP/UDP Port Filters.....	34
3.6.2. Management	34
3.6.2.1. UPnP.....	34
3.6.2.2. System Log	35
3.6.2.3. SNMP	35
Appendix A: Default Settings	37
Appendix B: Troubleshooting.....	38
B-1: Wireless Settings Problems.....	38
B-2: TCP/IP Settings Problems.....	39
B-3: Unknown Problems.....	40
Appendix C: Additional Information	42
C-1: Firmware Upgrade Using Xmodem Upgrade	42
C-2: Distances and Data Rates.....	43

1. Introduction

1.1. Overview

The wireless access point (AP) enables IEEE 802.11b client computers to access the resources on the Ethernet network. There are 3 different model variations, *Pro*, *Advanced*, and *Advanced+*, which are classified in terms of features. The *Pro* edition provides the fewest features while the *Advanced+* edition provides the most. With the sleek Web-based user interface and Windows-based user interface (Wireless Network Manager), a network administrator can easily and clearly manage the AP.

In Chapter 2, we describe the steps to install and configure a newly acquired AP. Following the steps, the AP can be quickly set up to work. In Chapter 3, detailed explanation of each Web management page is given for the user to understand how to fine-tune the settings of an AP to meet his or her specific needs. In addition to using Web-based management user interface to configure an AP, the Windows-based Wireless Network Manager can also be used to configure and monitor deployed APs. See the on-line help of Wireless Network Manager for more information.

1.2. Features

- **IEEE 802.11b**

- **Operational modes**

- ◆ **AP/Bridge.** This mode provides both Access Point and *Static* LAN-to-LAN Bridging functionality. The static LAN-to-LAN bridging function is supported through Wireless Distribution System (WDS).
- ◆ **AP Client.** This mode is for *Dynamic* LAN-to-LAN Bridging. The AP Client automatically establishes bridge links with APs from any vendors.

- **64-bit and 128-bit WEP (Wired Equivalent Privacy).** For authentication and data encryption.

- **Enabling/disabling SSID broadcasts.** When the AP is in AP/Bridge mode, the administrator can enable or disable the SSID broadcasts functionality for security reasons. When the SSID broadcasts functionality is disabled, a client computer cannot connect to the AP with an “any” network name (SSID, Service Set ID); the correct SSID has to be specified on client computers.

- **MAC-address-based access control.** When the AP is in AP/Bridge mode, it can be configured to block unauthorized wireless client computers based on MAC (Media Access Control) addresses. The ACL (Access Control List) can be downloaded from a TFTP server.

- **IEEE 802.1x/RADIUS.** When the AP is in AP/Bridge mode, it can be configured to authenticate wireless users and distribute encryption keys dynamically by IEEE 802.1x Port-Based Network Access Control and RADIUS (Remote Authentication Dial-In User Service).

- **Repeater.** When the AP is in AP/Bridge mode, it can communicate with other APs or wireless bridges via WDS (Wireless Distribution System). Therefore, an AP can wirelessly forward packets from wireless clients to another AP, and then the later AP forwards the

packets to the Ethernet network.

- **Wireless client isolation.** When the AP is in AP/Bridge mode, wireless-to-wireless traffic can be blocked so that the wireless clients cannot see each other. This capability can be used in hotspots applications to prevent wireless hackers from attacking other wireless users' computers.
- **AP load balancing.** Several APs can form a load-balancing group. Within a group, wireless client associations and traffic load can be shared among the APs. This function is available when the AP is in AP/Bridge mode.
- **Transmit power control.** Transmit power of the AP's RF module can be adjusted to change RF coverage of the AP.
- **Link integrity.** When the AP is in AP/Bridge mode and its Ethernet LAN interface is detected to be disconnected from the wired network, all currently associated wireless clients are disassociated by the AP and no wireless client can associate with it.
- **Association control.** When the AP is in AP/Bridge mode, it can be configured to deny association requests when it has served too many wireless clients or traffic load is too heavy.
- **Associated wireless clients status.** When the AP is in AP/Bridge mode, it can show the status of all wireless clients that are associated with the AP.
- **Detachable antennas.** The factory-mounted antennas can be replaced with high-gain antennas for different purposes.
- **DHCP client.** The AP can automatically obtain an IP address from a DHCP server.
- **DHCP server.** The AP can automatically assign IP addresses to computers or other devices by DHCP (Dynamic Host Configuration Protocol).
 - **Static DHCP mappings.** The administrator can specify static IP address to MAC address mappings so that the specified IP addresses are always assigned to the hosts with the specified MAC addresses.
 - **Showing current DHCP mappings.** Showing which IP address is assigned to which host identified by an MAC address.
- **Packet Filtering.** The AP provides Layer 2, Layer 3, and Layer 4 filtering capabilities.
- **Firmware Tools**
 - **Firmware upgrade.** The firmware of the AP can be upgraded in the following methods:
 - ◆ **Xmodem-based.** Upgrading firmware over RS232.
 - ◆ **TFTP-based.** Upgrading firmware by TFTP (Trivial File Transfer Protocol).
 - ◆ **HTTP-based.** Upgrading firmware by HTTP (Hepertext Transfer Protocol).
 - **Configuration backup.** The configuration settings of the AP can be backed up to a file via [TFTP](#) or [HTTP](#) for later restoring.
 - **Configuration reset.** Resetting the configuration settings to factory-default values.

- **Management**

- **Windows-based Wireless Network Manager** for configuring, monitoring, and diagnosing the local computer and neighboring APs. The management protocol is MAC-based.
- **Web-based Network Manager** for configuring and monitoring the AP via a Web browser. The management protocol is HTTP (Hepertext Transfer Protocol)-based.
- **SNMP**. SNMP (Simple Network Management Protocol) MIB I, MIB II, IEEE 802.1d, IEEE 802.1x, and Private Enterprise MIB are supported.
- **UPnP**. The AP responds to UPnP discovery messages so that a Windows XP user can locate the AP in My Network Places and use a Web browser to configure it.
- **Telnet**. The user is enabled to manage the AP by Telnet.
- **System log**. For system operational status monitoring.
 - ◆ **Local log**. System events are logged to the on-board RAM of the AP and can be viewed using a Web browser.
 - ◆ **Remote log by SNMP trap**. Systems events are sent in the form of SNMP traps to a remote SNMP management server.
- **Power over Ethernet (optional)**. Supplying power to an AP over an Ethernet cable using PowerDsine (<http://www.powerdsine.com>) technology (IEEE 802.3af compliant in the future). This feature facilitates large-scale wireless LAN deployment.
- **Hardware Watchdog Timer**. If the firmware gets stuck in an invalid state, the hardware watchdog timer will detect this situation and restart the AP. This way, the AP can provide continuous services.

1.3. Feature Comparison

	<i>Pro</i>	<i>Advanced</i>	<i>Advanced+</i>
IEEE 802.1x/RADIUS		■	■
SNMP IEEE 802.1x MIB		■	■
Wireless client isolation			■
AP load balancing			■
Association control			■

- PoE is *optional*.

1.4. LED Definitions

There are several LED indicators on the housing of the AP. They are defined as follows:

- **ALV**: *Alive*. Blinks when the AP is working normally.
- **RF**: IEEE 802.11b interfaces activity
- **LAN**: Ethernet LAN interface activity
- **PWR**: Power

2. First-Time Installation and Configuration

2.1. Inserting the Accompanying PCMCIA WLAN Card

For some models, the wireless interface of an AP is a WLAN PCMCIA card inserted into the PCMCIA socket labeled **Wireless LAN Card**. Since an AP and its accompanying WLAN PCMCIA card are placed separately within a package, you have to insert the PCMCIA card to the socket of the AP after they are taken out of the package. And then, plug the connector of the power adapter to the power jack of the AP to power it on.

NOTE: Unless an AP is to be packed and moved to a distant place, don't pluck out the PCMCIA card from the socket.

2.2. Selecting a Power Supply Method

Optionally, the AP can be powered by the supplied power adapter or PoE (Power over Ethernet). The AP automatically selects the suitable one depending on your decision.

To power the AP by the supplied power adapter:

1. Plug the power adapter to an AC socket.
2. Plug the connector of the power adapter to the power jack of the AP.

NOTE: This product is intended to be power-supplied by a Listed Power Unit, marked "Class 2" or "LPS" and output rated "5V DC, 1 A minimum" or equivalent statement.

To power the AP by PoE:

1. Plug one connector of an Ethernet cable to an available port of a PoE hub.
2. Plug the other connector of the Ethernet cable to the **LAN/CONFIG** port of the AP.

NOTE: The PoE capability of the bridge is PowerDsine-compatible. Please visit the Web site of PowerDsine for more information (<http://www.powerdsine.com>).

2.3. Mounting the AP on a Wall

The AP is wall-mountable.

1. Stick the supplied sticker for wall-mounting.
2. Use a $\phi 7.0$ mm driller to drill a 25mm-deep hole at each of the cross marks.
3. Plug in a supplied plastic conical anchor in each hole.
4. Screw a supplied screw in each plastic conical anchor for a proper depth so that the wireless AP can be hung on the screws.

5. Hang the wireless AP on the screws.

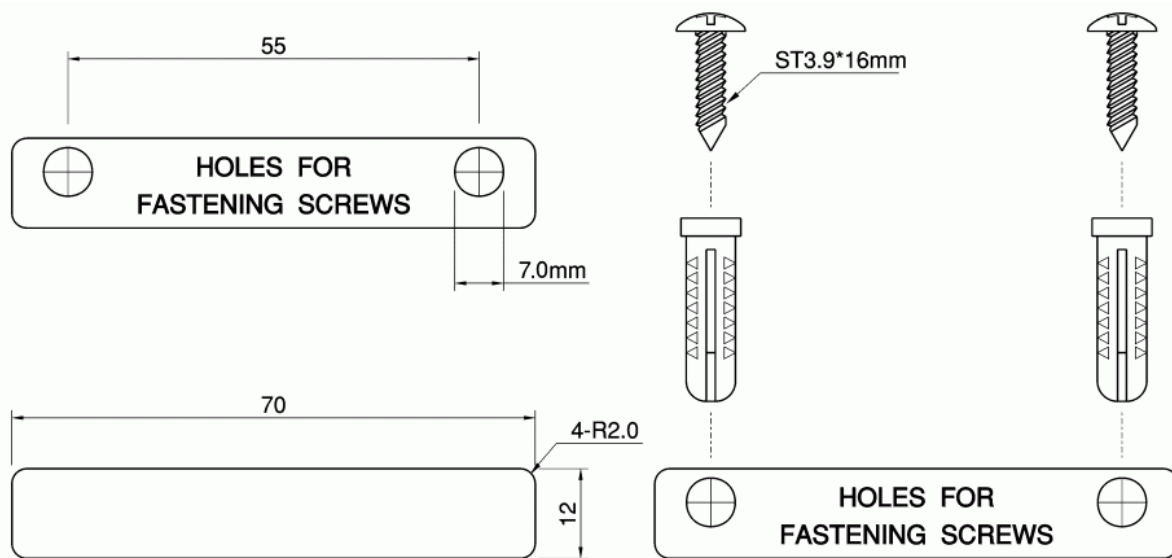


Fig. 1. Mounting the AP on a wall.

2.4. Preparing for Configuration

For you to configure an AP, a *managing computer* with a Web browser is needed. For first-time configuration of an AP, an Ethernet network interface card (NIC) should have been installed in the managing computer. For maintenance-configuration of a deployed AP, either a wireless computer or a wired computer can be employed as the managing computer.

NOTE: If you are using the browser, *Opera*, to configure an AP, click the menu item **File**, click **Preferences...**, click **File types**, and edit the MIME type, **text/html**, to add a file extension “.sht” so that Opera can work properly with the Web management pages of the AP.

Since the configuration/management protocol is HTTP-based, you have to make sure that **the IP address of the managing computer and the IP address of the managed AP are in the same IP subnet** (the default IP address of an AP is **192.168.0.1** and the default subnet mask is **255.255.255.0**.)

2.4.1. Connecting the Managing Computer and the AP

To connect the Ethernet managing computer and the managed AP for first-time configuration, you have two choices as illustrated in Fig. 2.

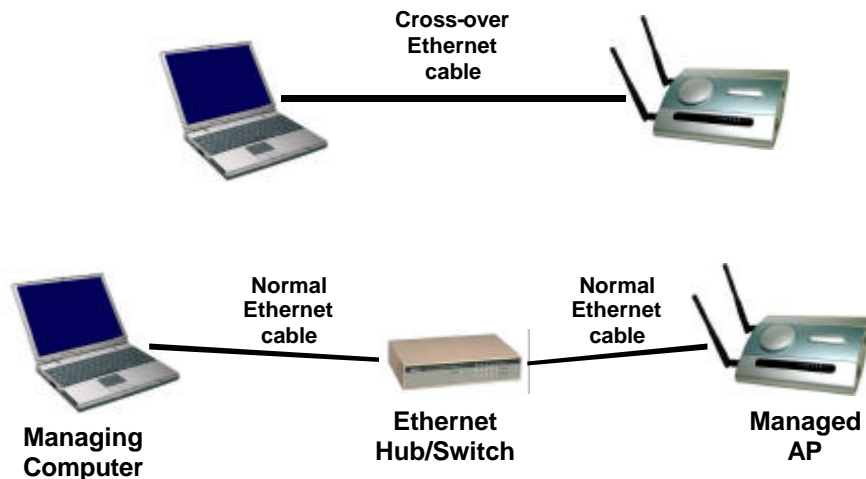


Fig. 2. Connecting a managing computer and an AP via Ethernet.

You can use either a *cross-over* Ethernet cable (included in the package) or a switch/hub with 2 normal Ethernet cables.

NOTE: One connector of the Ethernet cable must be plugged into the **LAN/CONFIG** Ethernet jack of the AP for configuration.

2.4.2. Changing the TCP/IP Settings of the Managing Computer

Use the **Windows Network Control Panel Applet** to change the TCP/IP settings of the managing computer, so that the IP address of the computer and the IP address of the AP are in the same IP subnet. Set the IP address of the computer to **192.168.0.xxx** (the default IP address of an AP is **192.168.0.1**) and the subnet mask to **255.255.255.0**.

NOTE: For some versions of Windows, the computer needs to be restarted for the changes of TCP/IP settings to take effect.

TIP: After you have connected the managing computer and the AP via Ethernet, you can install Wireless Network Manager on the managing computer and use it to configure the AP without being concerned about the TCP/IP settings of the managing computer. Refer to the on-line help of Wireless Network Manager for more information.

2.5. Configuring the AP

After the IP addressing issue is resolved, launch a Web browser on the managing computer. Then, go to "**http://192.168.0.1**" to access the *Web-based Network Manager* start page.

TIP: For maintenance configuration of an AP, the AP can be reached by its *host name* using a Web browser. For example, if the AP is named "AP", you can use the URL "**http://AP**" to access the Web-based Network Manager of the AP.

2.5.1. Entering the User Name and Password

Before the start page is shown, you will be prompted to enter the user name and password to gain the

right to access the Web-based Network Manager. For first-time configuration, use the default user name “root” and default password “root”, respectively.

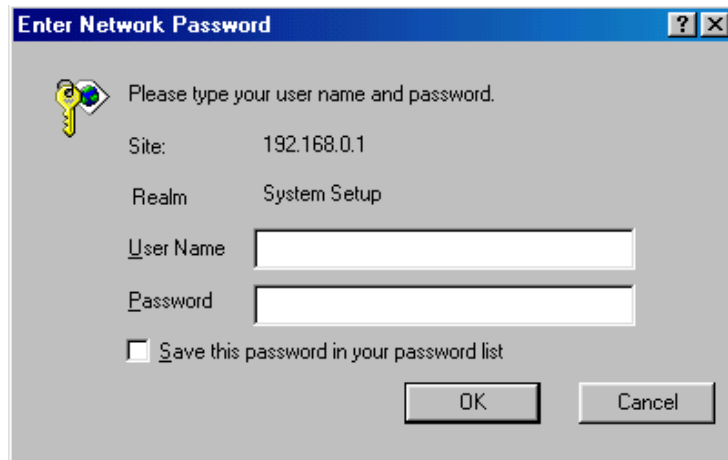


Fig. 3. Entering the user name and password.

NOTE: It is strongly recommended that the password be changed to other value for security reasons. On the start page, click the **General, Password** link to change the value of the password (see Section 3.3.1 for more information).

TIP: Since the start page shows the current settings and status of the AP, it can be saved or printed within the Web browser for future reference.

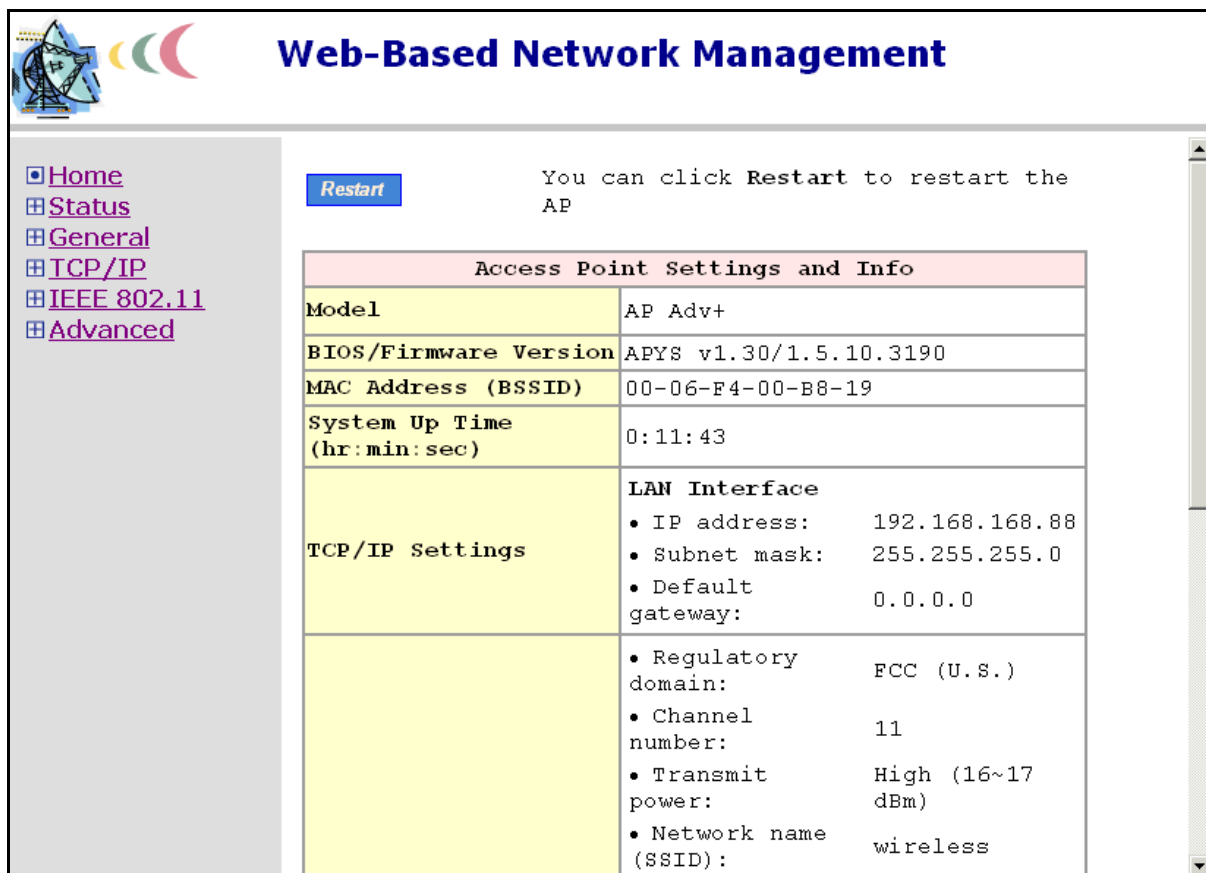


Fig. 4. The Start page.

2.5.2. Step 1: Selecting an Operational Mode

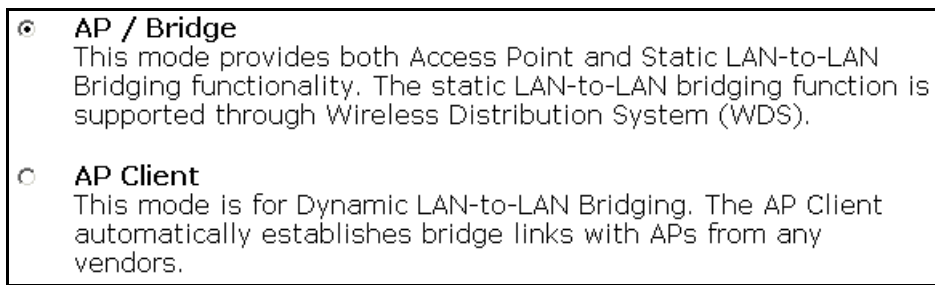


Fig. 5. Operational modes settings.

Go to the **General, Operational Mode** section, select an operational mode and click **Save** at the bottom of this page, and then you are brought back to the start page.

The AP supports 2 operational modes:

- **AP/Bridge.** This mode provides both Access Point and *Static* LAN-to-LAN Bridging functionality. The static LAN-to-LAN bridging function is supported through Wireless Distribution System (WDS).
- **AP Client.** This mode is for *Dynamic* LAN-to-LAN Bridging. The AP Client automatically establishes bridge links with APs from any vendors.

In either mode, the AP forwards packets between its Ethernet interface and wireless interface for wired hosts on the Ethernet side and wireless host(s) on the wireless side.

There are 2 types of wireless links as specified by the IEEE 802.11 standard.

- **STA-AP.** This type of wireless link is established between an IEEE 802.11 Station (STA) and an IEEE 802.11 Access Point (AP). An STA is usually a client computer (PC or PDA) with a WLAN network interface card (NIC). The AP Client mode is actually an STA.
- **WDS.** This type of wireless link is established between two IEEE 802.11 APs. Wireless packets transmitted along the WDS link comply with the IEEE 802.11 WDS (Wireless Distribution System) format at the link layer.

The relationships among the operational modes and the wireless link types are shown in the following table:

Table 1. Operational modes vs. wireless link types.

	AP/Bridge	AP Client
AP/Bridge	WDS	STA-AP
AP Client	STA-AP	

To establish a *static* bridge link based on WDS, the AP/bridges at both end of the WDS link must be *manually* configured with each other’s MAC addresses (see Section 3.5.1.5 for more information). To establish a *dynamic* bridge link between an AP and an AP Client, both devices have to be configured with the same SSID and WEP settings. The AP Client automatically scans for any AP that is using the matched SSID and establishes a bridge link with the scanned AP.

NOTE: Although it’s more convenient to use dynamic bridging, it has a limitation—the AP Client only can forward TCP/IP packets between its wireless interface and Ethernet interface; other type of traffic (such as IPX and AppleTalk) is not forwarded.

TIP: When the AP is configured to be in AP Client, it can be used as an Ethernet-to-wireless network adapter. For example, a notebook computer equipped with an Ethernet adapter can be connected to this device with a crossover Ethernet cable for wireless connectivity to another access point.

2.5.3. Step 2: Configuring TCP/IP Settings

Method of obtaining an IP address:	<input type="text" value="Set Manually"/>
IP address:	<input type="text" value="192.168.168.214"/>
Subnet mask:	<input type="text" value="255.255.255.0"/>
Default gateway:	<input type="text" value="0.0.0.0"/>
Host name:	<input type="text" value="AP1"/>
Domain (DNS suffix):	<input type="text"/>

Fig. 6. TCP/IP settings.

Go to the **TCP/IP, Addressing** section to configure IP address settings. The IP address can be manually set or automatically assigned by a DHCP server on the LAN. If you are manually setting the **IP address**, **Subnet mask**, and **Default gateway** settings, set them appropriately, so that they comply with your LAN environment. In addition, you can specify the **Host name** and **Domain (DNS suffix)** of the AP.

When you are finished, click **Save** at the bottom of this page, and then you are brought back to the start page.

2.5.4. Step 3: Configuring IEEE 802.11 Settings

AP functionality:	Enabled
Regulatory domain:	FCC (U.S.)
Channel number:	11
Network name (SSID):	wireless

Fig. 7. IEEE 802.11b communication settings.

Go to the **IEEE 802.11, Communication** section to configure IEEE 802.11b-related communication settings, including **Network name (SSID)**.

The number of available RF channels depends on local regulation (FCC (US)). **The SSID of a wireless client computer and the SSID of the AP must be identical for them to communicate with each other.**

When you are finished, click **Save** at the bottom of this page, and then you are brought back to the start page.

2.5.5. Step 4: Reviewing and Applying Settings

[Restart](#) [Cancel](#)

The settings have been changed. Click **Restart** to restart the access point for the settings to take effect.

Access Point Settings and Info	
Model	AP Adv+
BIOS/Firmware Version	APYS v1.30/1.5.10.3190
MAC Address (BSSID)	00-06-F4-00-B8-19
System Up Time (hr:min:sec)	0:31:38
TCP/IP Settings	LAN Interface
	• IP address: 192.168.0.88
	• Subnet mask: 255.255.255.0
	• Default gateway: 0.0.0.0
	• Regulatory domain: FCC (U.S.)
	• Channel number: 6
	• Transmit power: High (16~17 dBm)

Fig. 8. Settings changes are highlighted in red.

On the start page, you can review all the settings you have made. Changes are highlighted in red. If they are OK, click **Restart** to restart the AP for the new settings to take effect.

NOTE: About 7 seconds are needed for the AP to complete its restart process.

2.6. Deploying the AP

After the settings have been configured, deploy the AP to the field application environment. Connect the AP to an Ethernet LAN through an Ethernet switch/hub.

2.7. Setting up Client Computers

The TCP/IP and IEEE 802.11b-related settings of wireless client computers must match those of the AP.

2.7.1. Configuring IEEE 802.11b-Related Settings

Before the TCP/IP networking system of a wireless client computer can communicate with other hosts, the underlying wireless link must be established between this wireless computer and an AP.

To establish a wireless link to an AP:

1. Launch the configuration/monitoring utility provided by the vendor of the installed WLAN NIC.
2. Use the utility to make appropriate *Operating Mode*, *SSID* and *WEP* settings.

NOTE: A wireless client computer must be in *infrastructure* mode, so that it can associate with an AP.

NOTE: The SSID of the wireless client computer and the SSID of the AP must be identical. Or, in case the **SSID broadcasts** capability of the AP is enabled (by default), the SSID of the wireless client computer could be set to “any”.

NOTE: Both the wireless client computer and the AP must have the same WEP settings for them to communicate with each other.

NOTE: For better wireless security, IEEE 802.1x capability of the AP must be enabled so that only authenticated wireless users can access the wireless network. Refer to the IEEE 802.1x-related white papers on the companion CD-ROM for more information about deploying secure WLANs with IEEE 802.1x support.

2.7.2. Configuring TCP/IP-Related Settings

Use **Windows Network Control Panel Applet** to change the TCP/IP settings of the client computers, so that the IP addresses of the client computers and the IP address of the AP are in the same IP subnet.

If a client computer is originally set a static IP address, you can either change its IP address to match the IP address of the AP, or select an automatically-obtain-an-IP-address option if there is a DHCP server on the network.

NOTE: For some versions of Windows, the computer needs to be restarted for the changes of TCP/IP settings to take effect.

2.8. Confirming the Settings of the AP and Client Computers

After you have completed deploying the AP and setting up client computers, you have to make sure the settings you have made are correct.

2.8.1. Checking if the IEEE 802.11b-Related Settings Work

To check if a wireless client computer can associate with the AP:

1. Launch the configuration/monitoring utility provided by the vendor of the installed WLAN NIC.
2. Check if the client computer is associated to an access point, and the access point is the AP.

If the check fails, see Appendix B-1, “Wireless Settings Problems” for troubleshooting.

2.8.2. Checking if the TCP/IP-Related Settings Work

To check if a client computer can access the Internet:

1. Open a **Windows Command Prompt** window on the client computer.
2. Type “**ping** *advap*”, where *advap* is a placeholder for the IP address of the AP. Replace it with your real IP address—for example, 192.168.0.1. Then press **Enter**.

If the AP responds, go to the next step; else, see Appendix B-2, “TCP/IP Settings Problems” for troubleshooting.

3. Type “**ping** *default_gateway*”, where *default_gateway* is a placeholder for the IP address of the default gateway of the wireless client computer. Then press **Enter**.

If the gateway responds, go to the next step; else, see Appendix B-2, “TCP/IP Settings Problems” for troubleshooting.

4. Type “**ping** *1st_dns_server*”, where *1st_dns_server* is a placeholder for the IP address of the primary DNS server of the wireless client computer. Then press **Enter**.

If this DNS server responds, go to the next step; else, see Appendix B-2, “TCP/IP Settings Problems” for troubleshooting.


5. Type “**ping** *2nd_dns_server*”, where *2nd_dns_server* is a placeholder for the IP address of the secondary DNS server of the wireless client computer. Then press **Enter**.

If this DNS server responds the client should have no problem with TCP/IP networking; else, see Appendix B-2, “TCP/IP Settings Problems” for troubleshooting.

3. Using Web-Based Network Manager

In this chapter, we'll explain each Web management page of the Web-based Network Manager.

3.1. Overview

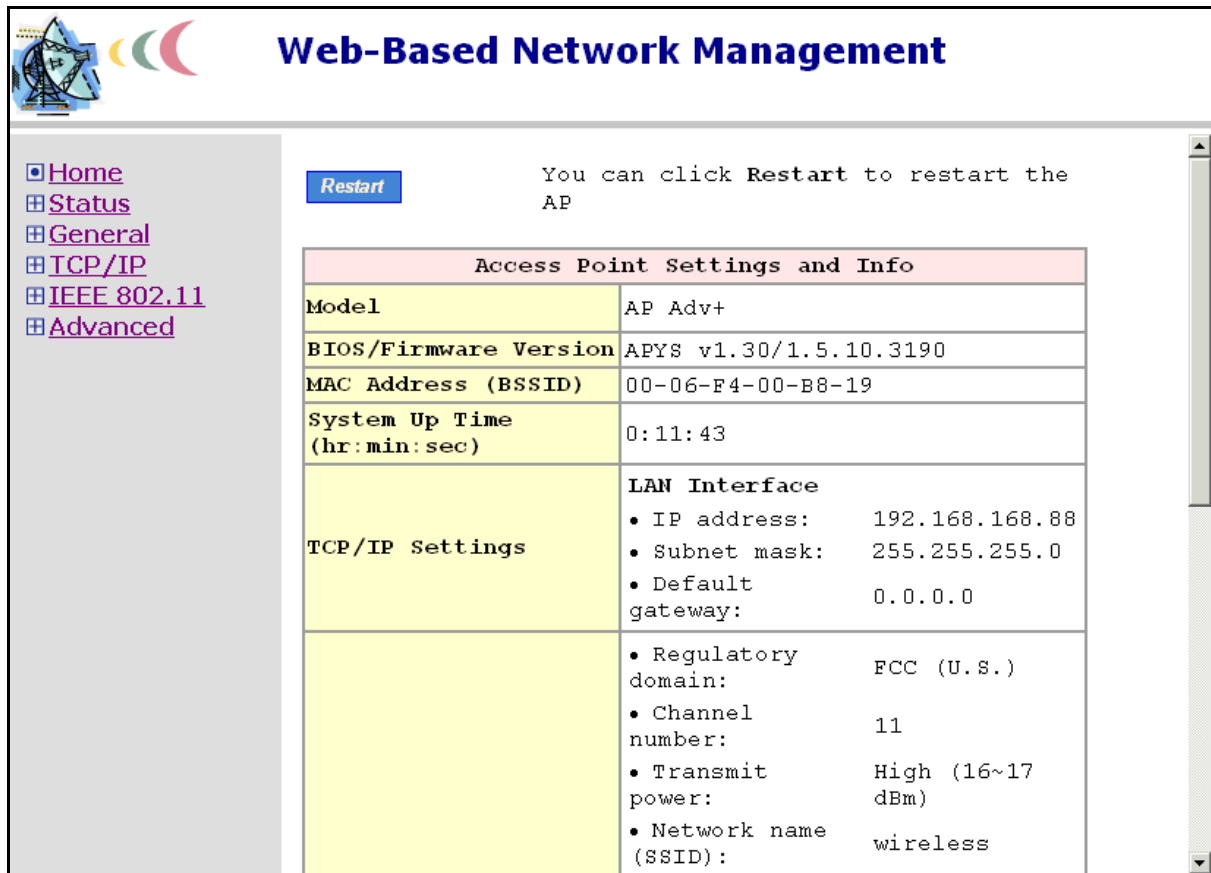

Access Point Settings and Info	
Model	AP Adv+
BIOS/Firmware Version	APYS v1.30/1.5.10.3190
MAC Address (BSSID)	00-06-F4-00-B8-19
System Up Time (hr:min:sec)	0:11:43
TCP/IP Settings	LAN Interface
	• IP address: 192.168.168.88 • Subnet mask: 255.255.255.0 • Default gateway: 0.0.0.0
	• Regulatory domain: FCC (U.S.)
	• Channel number: 11
	• Transmit power: High (16~17 dBm)
	• Network name (SSID): wireless

Fig. 9. The Start page.

3.1.1. Menu Structure

The left side of the start page contains a menu for you to carry out commands. Here is a brief description of the hyperlinks on the menu:

- **Home.** For going back to the start page.
- **Status.** Status information.
 - **Wireless Clients.** The status of the wireless clients currently associated with the AP.
 - **DHCP Mappings.** Current IP-MAC address mappings of the built-in DHCP server.
 - **System Log.** System events log.
- **General.** Global operations.

- **Password.** For gaining rights to change the settings of the AP.
- **Firmware Tools.** For upgrading the firmware of the AP, backing up and restoring configuration, and configuration reset settings of the AP.
- **TCP/IP.** TCP/IP-related settings.
 - **Addressing.** IP address settings for the AP to work with TCP/IP.
 - **DHCP Server.** Settings for the DHCP (Dynamic Host Configuration Protocol) server on the AP.
- **IEEE 802.11.** IEEE 802.11b-related settings.
 - **Communication.** Basic settings for the IEEE 802.11b interface of the AP to work properly with wireless clients.
 - **Security.** Security settings for authenticating wireless users and encrypting wireless data.
 - **IEEE 802.1x/RADIUS.** IEEE 802.1x Port-Based Network Access Control and RADIUS (Remote Authentication Dial-In User Service) settings for better wireless security.
- **Advanced.** Advanced settings of the AP.
 - **Packet Filters.** Ethernet Type Filters, IP Protocol Filters, and TCP/UDP Port Filters settings.
 - **Management.** UPnP, System Log, and SNMP settings.

3.1.2. Save, Save & Restart, and Cancel Commands



Fig. 10. Save, Save & Restart, and Cancel.

At the bottom of each page that contains settings you can configure, there are up to three buttons—**Save**, **Save & Restart**, and **Cancel**. Clicking **Save** stores the settings changes to the memory of the AP and brings you back to the start page. Clicking **Save & Restart** stores the settings changes to the memory of the AP and restarts the AP immediately for the settings changes to take effect. Clicking **Cancel** discards any settings changes and brings you back to the start page.

If you click **Save**, the start page will reflect the fact that the configuration settings have been changed by showing two buttons—**Restart** and **Cancel**. In addition, changes are highlighted in red. Clicking **Cancel** discards all the changes. Clicking **Restart** restarts the AP for the settings changes to take effect.

The settings have been changed.
Click **Restart** to restart the
access point for the settings to
take effect.

[Restart](#) [Cancel](#)

Access Point Settings and Info	
Model	AP Adv
BIOS/Firmware Version	APXS v1.20/1.4.1.2535
MAC Address (BSSID)	00-02-6F-01-62-C5
System Up Time (hr:min:sec)	2:41:32
TCP/IP Settings	LAN Interface <ul style="list-style-type: none"> • IP address: 192.168.0.1 • Subnet mask: 255.255.255.0 • Default gateway: 0.0.0.0
Wireless Settings	<ul style="list-style-type: none"> • Regulatory domain: FCC (U.S.) • Channel number: 11 • Transmission power: High • Network name (SSID): wireless1

Fig. 11. Settings have been changed.

3.1.3. Home and Refresh Commands



Fig. 12. Home and Refresh.

At the bottom of each status page that shows read-only information, there are two buttons—**Home** and **Refresh**. Clicking **Home** brings you back to the start page. Clicking **Refresh** updates the shown status information.

3.2. Viewing Status

3.2.1. Associated Wireless Clients

Wireless Clients Status						
No.	MAC Address	IP Address	Name	Tx Bytes	Rx Bytes	Last Activity Time
1	00-90-4B-00-40-94	192.168.168.226		7521	1162	00h:01m:56s

Fig. 13. Status of associated wireless clients.

On this page, the status information of each associated client, including its MAC address, IP address, user name (if the client has been IEEE 802.1x authenticated), number of bytes it has send, number of bytes it has received, and the time of its last activity, is shown.

3.2.2. Current DHCP Mappings

DHCP Mapping Table			
No.	MAC Address	IP Address	Type
1	00-90-4B-00-B9-BD	192.168.168.214	Static
2	00-BB-DE-AD-BE-EF	192.168.168.224	In use
3	00-90-4B-00-40-94	192.168.168.226	Dynamic
4	00-40-01-43-1D-E8	192.168.168.230	In use

Fig. 14. Current DHCP mappings.

On this page, all the current *static* or *dynamic* DHCP mappings are shown. A DHCP mapping is a correspondence relationship between an IP address assigned by the DHCP server and a computer or device that obtains the IP address. A computer or device that acts as a DHCP client is identified by its MAC address.

A static mapping indicates that the DHCP client always obtains the specified IP address from the DHCP server. You can set static DHCP mappings in the **Static DHCP Mappings** section of the **DHCP Server** configuration page (see Section 3.4.2). A dynamic mapping indicates that the DHCP server chooses an IP address from the IP address pool specified by the **First allocatable IP address** and **Allocatable IP address count** settings on the **DHCP Server** configuration page.

3.2.3. System Log

Model:	AP Adv+
BIOS/Firmware version:	APYS-8947 v1.4/1.5.3.3931
Operational mode:	Simple Access Point
Current time:	07/02/2003 15:05:56
<hr/>	
07/02/2003 13:33:57 SYSTEM START UP!	
07/02/2003 13:33:57 Wireless LAN interface initializes success.	
07/02/2003 13:33:57 BSSID --> 00-90-4B-00-B9-BD	
07/02/2003 13:33:57 LAN IP address --> 192.168.168.214.	
07/02/2003 15:00:30 The administrator from 192.168.168.128 logins the device successfully.	
07/02/2003 15:05:49 The administrator from 192.168.168.220 logins the device successfully.	

Fig. 15. System log.

System events are recorded in the memory of the AP. The logged information is useful for troubleshooting purposes. The system events are divided into several categories, and you can select which categories of events to log. See Section 3.6.2.2 for more information.

3.3. General Operations

3.3.1. Specifying Operational Mode

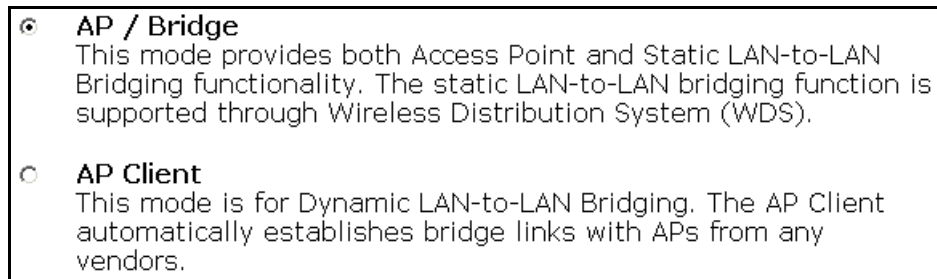


Fig. 16. Operational modes settings.

The AP supports 2 operational modes:

- **AP/Bridge.** This mode provides both Access Point and *Static* LAN-to-LAN Bridging functionality. The static LAN-to-LAN bridging function is supported through Wireless Distribution System (WDS).
- **AP Client.** This mode is for *Dynamic* LAN-to-LAN Bridging. The AP Client automatically establishes bridge links with APs from any vendors.

In either mode, the AP forwards packets between its Ethernet interface and wireless interface for wired hosts on the Ethernet side and wireless host(s) on the wireless side.

There are 2 types of wireless links as specified by the IEEE 802.11 standard.

- **STA-AP.** This type of wireless link is established between an IEEE 802.11 Station (STA) and an IEEE 802.11 Access Point (AP). An STA is usually a client computer (PC or PDA) with a WLAN network interface card (NIC). The AP Client mode is actually an STA.
- **WDS.** This type of wireless link is established between two IEEE 802.11 APs. Wireless packets transmitted along the WDS link comply with the IEEE 802.11 WDS (Wireless Distribution System) format at the link layer.

The relationships among the operational modes and the wireless link types are shown in the following table:

Table 2. Operational modes vs. wireless link types.

	AP/Bridge	AP Client
AP/Bridge	WDS	STA-AP
AP Client	STA-AP	

To establish a *static* bridge link based on WDS, the AP/bridges at both end of the WDS link must be *manually* configured with each other's MAC addresses (see Section 3.5.1.5 for more information). To establish a *dynamic* bridge link between an AP and an AP Client, both devices have to be configured with the same SSID and WEP settings. The AP Client automatically scans for any AP that is using the matched SSID and establishes a bridge link with the scanned AP.

NOTE: Although it's more convenient to use dynamic bridging, it has a limitation—the AP Client only can forward TCP/IP packets between its wireless interface and Ethernet interface; other type of traffic (such as IPX and AppleTalk) is not forwarded.

TIP: When the AP is configured to be in AP Client, it can be used as an Ethernet-to-wireless network adapter. For example, a notebook computer equipped with an Ethernet adapter can be connected to this device with a crossover Ethernet cable for wireless connectivity to another access point.

3.3.2. Changing Password

Old password:	****
New user name:	admin
New password:	*****
New password again:	*****

Fig. 17. Password.

On this page, you can change the user name and password for the right to modify the configuration of the bridge. The new password must be typed twice for confirmation.

3.3.3. Managing Firmware

Firmware management protocol:	HTTP
-------------------------------	------

Fig. 18. Firmware management protocol setting.

Firmware management operations for the AP include *firmware upgrade*, *configuration backup*, *configuration restore*, and *configuration reset*. Firmware upgrade, configuration backup, and configuration restore can be achieved via HTTP or TFTP. The HTTP-based way is suggested because it's more user friendly. However, due to different behavior of different Web browser types and versions, HTTP-based firmware management operations may not work properly with some Web browsers. If you cannot successfully perform HTTP-based firmware management operations with your Web browser, try the TFTP-based way.

TIP: You can use Upgrade Wizard of Wireless Network Manager to upgrade firmware. See the on-line help of Wireless Network Manager for more information.

3.3.3.1. Upgrading Firmware by HTTP

Firmware Upgrade	
Firmware file name:	<input type="text"/> Browse...
<input type="button" value="Upgrade"/>	

Fig. 19. Firmware upgrade by HTTP.

To upgrade firmware of the AP by HTTP:

1. Click **Browse** and then select a correct firmware **.bin** file. The firmware file path will be shown in the **Firmware file name** text box.

2. Click **Upgrade** to begin the upgrade process.

3.3.3.2. Backing up and Restoring Configuration Settings by HTTP



Fig. 20. Firmware backup by HTTP.

To back up configuration of the AP by HTTP:

1. Click **Back Up**.
2. You'll be prompted to open or save the configuration file. Click **Save**.
3. The configuration file is named by the AP's MAC address. For example, if the AP's MAC address is 00-01-02-33-44-55, the configuration backup file should be "000102334455.hex". Don't change the configuration file name in the **Save As** dialog box. Select a folder in which the configuration file is to be stored. And then, click **Save**.

NOTE: The procedure may be a little different with different Web browsers.

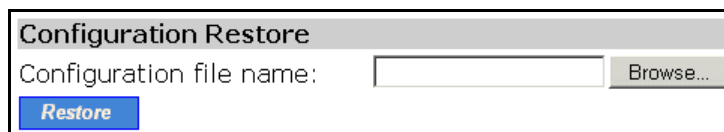


Fig. 21. Configuration restore by HTTP.

To restore configuration of the AP by HTTP:

1. Click **Browse** and then select a correct configuration **.hex** file. You have to make sure the file name is the AP's MAC address. The firmware file path will be shown in the **Firmware file name** text box.
2. Click **Restore** to upload the configuration file to the AP.

3.3.3.3. Upgrading Firmware by TFTP

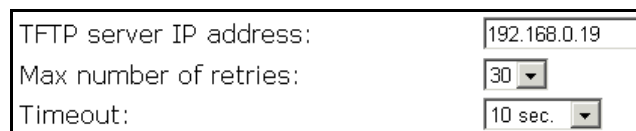


Fig. 22. TFTP server settings.

When use TFTP as the firmware management protocol, you can configure settings for the AP's TFTP client to communicate with a TFTP server. If the TFTP client does not get a response from the TFTP server within a period specified by the **Timeout** setting, it will resend the previous request. The **Max number of retries** setting specifies the maximal number of resend before the TFTP client stops communicating with the TFTP server.

Within the folder "**Utilities**" on the companion CD-ROM disk, we offered a TFTP server program

(TftpSrvr.exe) for firmware upgrade. Run this program on the computer that is to serve as a TFTP server.



Fig. 23. Firmware upgrade by TFTP.

To upgrade firmware of the AP by TFTP:

1. Get a computer that will be used as a TFTP server and as a managing computer to trigger the upgrade process.
2. Connect the computer and one of the LAN Ethernet switch port with a normal Ethernet cable.
3. Configure IP address of the computer so that the AP and the computer are in the same IP subnet.
4. On the computer, run the TFTP Server utility. And specify the folder in which the firmware files reside.
5. On the computer, run a Web browser and click the **General, Firmware Tools** hyperlink.
6. Choose **TFTP** as the **Firmware management protocol**.
7. Specify the IP address of the computer, which acts as a TFTP server. If you don't know the IP address of the computer, open a Command Prompt, and type IpConfig, then press the **Enter** key.
8. Trigger the firmware upgrade process by clicking **Upgrade**.

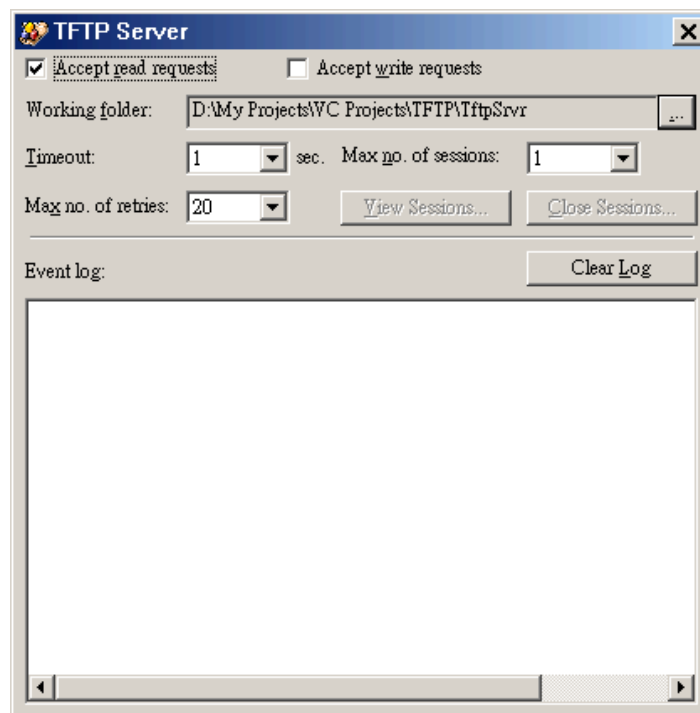


Fig. 24. TFTP Server.

NOTE: After the dialog box of the TFTP server program appears, be sure to specify the working

folder within which the downloaded firmware files reside.

NOTE: Make sure the **Accept read requests** check box of TFTP Server is selected.

NOTE: The LAN IP address of the AP and the IP address of the TFTP server must be in the same IP subnet for TFTP to work.

NOTE: Due to the unreliable nature of wireless media, it's highly recommended that the TFTP server and the to-be-upgraded wireless AP be connected by Ethernet, and on the same LAN, so that the upgrade process would be smooth.

NOTE: After the firmware is upgraded, be sure to delete the contents of the Web browser cache, so that the Web management pages can be shown correctly.

NOTE: A failed upgrade may corrupt the firmware and make the AP unstartable. When this occurs, call for technical support.

TIP: If you want to remotely upgrade the firmware of a deployed AP from the Internet, adjust the **Timeout** and **Max no. of retries** settings of TFTP Server for remote TFTP upgrade to succeed.

3.3.3.4. Backing up and Restoring Configuration Settings by TFTP



Fig. 25. Configuration backup/restore.

To back up configuration of the AP by TFTP:

1. Get a computer that will be used as a TFTP server and as a managing computer to trigger the backup process.
2. Connect the computer and one of the LAN Ethernet switch port with a normal Ethernet cable.
3. Configure the IP address of the computer so that the computer and the AP are in the same IP subnet.
4. On the computer, run the TFTP Server utility. Select the **Accept write requests** check box, and specify the folder to which the configuration settings of the AP will be saved.
5. On the computer, run a Web browser and click the **General, Firmware Tools** hyperlink.
6. Choose **TFTP** as the **Firmware management protocol**.
7. Within the **Configuration Backup/Restore** section, specify the IP address of the computer, which acts as a TFTP server. If you don't know the IP address of the computer, open a Command Prompt, and type IpConfig, then press the **Enter** key.
8. Trigger the backup process by clicking **Back Up**. The AP's configuration settings will be saved as "**AaBbCcDdEeFf.hex**" by the TFTP server, where "**AaBbCcDdEeFf**" is the AP's MAC address. For example, if the AP's MAC address is 00-01-02-33-44-55, the configuration backup file will be "000102334455.hex".

NOTE: Remember to select the **Accept write requests** check box of TFTP Server.

To restore configuration of the AP by TFTP:

1. Get a computer that will be used as a TFTP server and as a managing computer to trigger the restoring process.
2. Connect the computer and one of the LAN Ethernet switch port with a normal Ethernet cable.
3. Configure the IP address of the computer so that the computer and the AP are in the same IP subnet.
4. On the computer, run the TFTP Server utility. And specify the folder in which the configuration backup file resides. A configuration backup file is named by the AP's MAC address. For example, if the AP's MAC address is 00-01-02-33-44-55, the configuration backup file should be "000102334455.hex".
5. On the computer, run a Web browser and click the **General, Firmware Tools** hyperlink.
6. Choose **TFTP** as the **Firmware management protocol**.
7. Within the **Configuration Backup/Restore** section, specify the IP address of the computer, which acts as a TFTP server. If you don't know the IP address of the computer, open a Command Prompt, and type IpConfig, then press the **Enter** key.
8. Trigger the restoring process by clicking **Restore**. The AP will then download the configuration backup file from the TFTP server.

NOTE: Make sure the file is a valid configuration backup file for the AP.

TIP: If you want to remotely back up or restore configuration from the Internet, adjust the **Timeout** and **Max no. of retries** settings of TFTP Server for remote TFTP configuration backup/restore to succeed.

3.3.3.5. Resetting Configuration to Factory Defaults

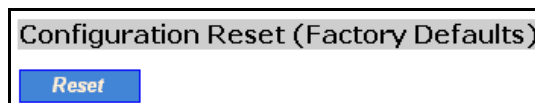


Fig. 26. Configuration reset.

Clicking the **Reset** button resets the device configuration to factory defaults.

WARNING: Think twice before clicking the **Reset** button. You'll lose all your current configuration settings.

3.4. Configuring TCP/IP Related Settings

3.4.1. Addressing

Method of obtaining an IP address:	Set Manually
IP address:	192.168.168.214
Subnet mask:	255.255.255.0
Default gateway:	0.0.0.0
Host name:	AP1
Domain (DNS suffix):	

Fig. 27. TCP/IP settings.

The IP address of the AP can be manually set (**Set Manually**) or automatically assigned by a DHCP server on the LAN (**Obtain from a DHCP Server**). If you are manually setting the **IP address**, **Subnet mask**, and **Default gateway** settings, set them appropriately, so that they comply with your LAN environment. In addition, you can specify the **Host name** and **Domain (DNS suffix)** of the AP.

3.4.2. DHCP Server

3.4.2.1. Basic

Functionality:	Disabled
Default gateway:	192.168.0.1
Subnet mask:	255.255.255.0
Primary DNS server:	192.168.0.1
Secondary DNS server:	
First allocatable IP address:	192.168.0.2
Allocatable IP address count:	20

Fig. 28. Basic DHCP server settings.

The AP can automatically assign IP addresses to client computers by DHCP. In this section of the management page, you can specify the **Default gateway**, **Subnet mask**, **Primary DNS server**, and **Secondary DNS server** settings that will be sent to a client at its request. Additionally, you can specify the first IP address that will be assigned to the clients and the number of allocatable IP addresses.

NOTE: There should be only *one* DHCP server on the LAN; otherwise, DHCP would not work properly. If there is already a DHCP server on the LAN, disable the DHCP server functionality of the AP.

NOTE: By default the DHCP server function is disabled.

3.4.2.2. Static DHCP Mappings

Enabled	Desc.	MAC Address	IP Address
<input type="checkbox"/>	Bill	00-22-32-5D-80-02	192.168.0.203
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			

Fig. 29. Static DHCP mappings.

IP addresses of servers are often static so that clients could always locate the servers by the static IP addresses. By **Static DHCP Mappings**, you can ensure that a host will get the same IP address when it requests one from the DHCP server. Therefore, instead of configuring the IP address of an intranet server manually, you can configure the server to obtain an IP address by DHCP and it is always assigned the same IP address.

To always assign a static IP address to a specific DHCP client:

1. Specify the MAC address of the DHCP client and the IP address to be assigned to it. Then, give a description for this mapping.
2. Select the corresponding **Enabled** check box.

3.5. Configuring IEEE 802.11b-Related Settings

3.5.1. Communication

3.5.1.1. Basic

Basic IEEE 802.11b-related communication settings include **AP functionality**, **Regulatory domain**, **Channel number**, **Network name (SSID)**, **Data rate**, and **Transmit power**.

AP functionality:	Enabled
Regulatory domain:	FCC (U.S.)
Channel number:	11
Network name (SSID):	wireless
Data rate:	Auto
Transmit power:	High

Fig. 30. Basic IEEE 802.11b communication settings.

For specific needs such as configuring the AP as a wireless LAN-to-LAN bridge, the AP functionality can be disabled, so that no wireless client can associate with the AP.

The number of available RF channels depends on local regulations; therefore you have to choose an appropriate regulatory domain to comply with local regulations. The SSID of a wireless client computer and the SSID of the AP must be identical for them to communicate with each other.

If there is RF interference, you may want to reduce the **Data rate** for more reliable wireless transmission. In most cases, leave the setting to **Auto**.

The transmit power of the RF module of the AP can be adjusted so that the RF coverage of the AP can be changed.

3.5.1.2. Link Integrity

Functionality:	Disabled ▾
Reference host:	0.0.0.0

Fig. 31. Link integrity settings.

When the Ethernet LAN interface is detected to be disconnected from the wired network, all currently associated wireless clients are disassociated by the AP and no wireless client can associate with the AP. The detection mechanism is based on pinging the IP address specified in **Reference host**.

3.5.1.3. Association Control

Max number of clients (1~64):	64
Block clients if traffic load exceeds:	Disabled ▾

Fig. 32. Association control settings.

If the number of currently associated wireless clients exceeds the value specified in the **Max number of clients** setting, no more wireless client can associate with the AP. If traffic load of the AP exceeds the load specified in the **Block clients if traffic load exceeds** setting, no more wireless client can associate with the AP.

3.5.1.4. AP Load Balancing

Functionality:	Enabled ▾
Group ID:	APLB_Group
Policy by:	Number of Users ▾

Fig. 33. AP load balancing settings.

Several APs can form a load-balancing group if they are set with the same **Group ID**. The load-balancing policy can be by **Number of Users** or by **Traffic Load**.

If the *by-number-of-users* policy is selected, a new wireless user can only associate with an AP that has the smallest number of associated wireless users in the group. On the other hand, if the *by-traffic-load* policy is selected, a new wireless user can only associate with an AP that has the less traffic load in the group.

3.5.1.5. Wireless Distribution System

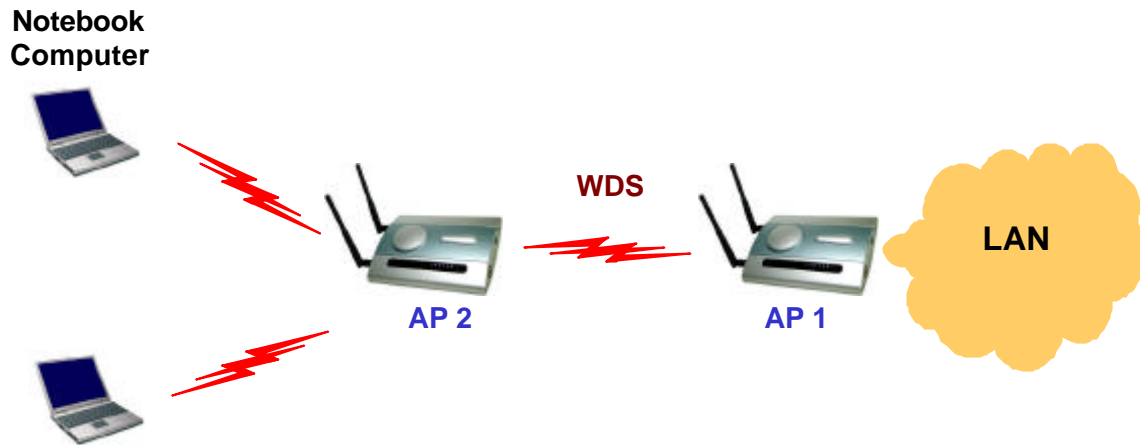


Fig. 34. Wireless Distribution System.

Traditionally, access points are connected by Ethernet. By Wireless Distribution System (WDS), APs can communicate with one another wirelessly. For example, in Fig. 34, AP 2 acts as an access point for the notebook computers and it forwards packets sent from the notebook computers to AP 1 through WDS. Then, AP 1 forwards the packets to the Ethernet LAN. Packets destined for the notebook computers follow a reverse path from the Ethernet LAN through the APs to the notebook computers. In this way, AP 2 plays a role of “AP repeater”.

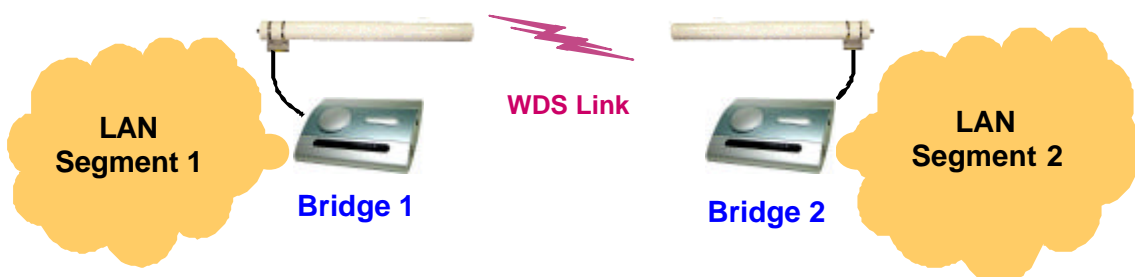


Fig. 35. LAN-to-LAN bridging.

By WDS, two or more LAN segments can be connected wirelessly. As illustrated in Fig. 35, a pair of wireless LAN-to-LAN bridges is used to connect two LAN segments. Since the AP is WDS-enabled, it can be used as a wireless bridge.

NOTE: An AP can have up to 6 WDS links to other APs or wireless bridges.

Port	Enabled	Peer MAC Address
1	<input type="checkbox"/>	00-02-6F-01-62-C5
2	<input type="checkbox"/>	
3	<input type="checkbox"/>	
4	<input type="checkbox"/>	
5	<input type="checkbox"/>	
6	<input type="checkbox"/>	

Fig. 36. Wireless Distribution System settings.

To enable a WDS link:

1. Specify the MAC address of the AP at the other end of the WDS link.
2. Select the corresponding **Enabled** check box.

For example, assume you want two APs with MAC addresses 00-02-65-01-62-C5 and 00-02-65-01-62-C6 to establish a WDS link between them. On AP 00-02-65-01-62-C5, set the peer MAC address of port 1 to 00-02-65-01-62-C6 and on AP 00-02-65-01-62-C6, set the peer MAC address of port 1 to 00-02-65-01-C5.

TIP: Plan your wireless network and draw a diagram, so that you know how an AP is connected to other peer APs or wireless bridges by WDS.

TIP: Plan your wireless network and draw a diagram, so that you know how a bridge is connected to other peer bridges by WDS. See the following figure for an example network-planning diagram.

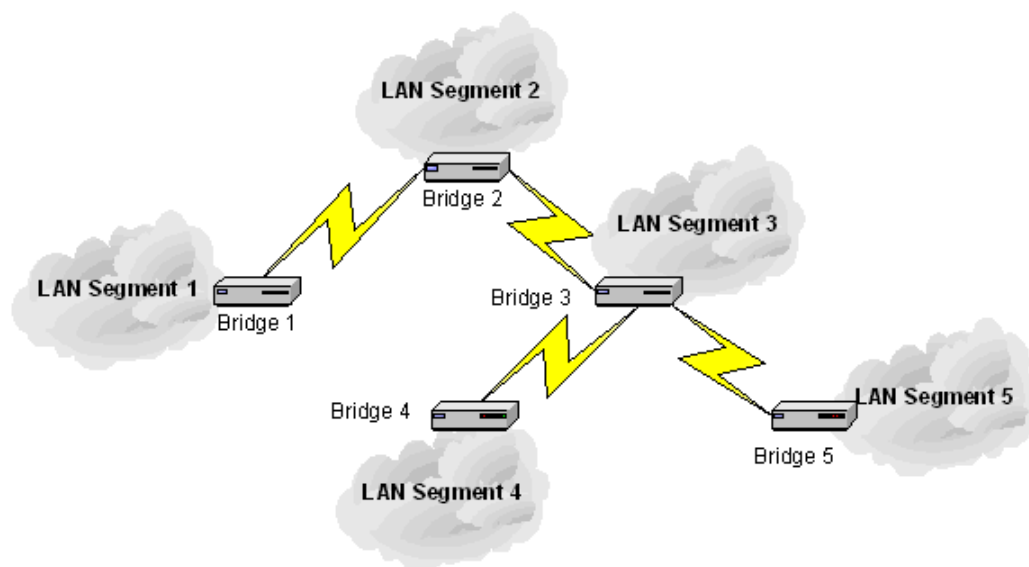


Fig. 37. Sample wireless bridge network topology.

WARNING: Don't let your network topology consisting of wireless bridges, Ethernet switches, Ethernet links, and WDS links contain *loops*. If any loops exist, packets will circle around the loops and network performance will be seriously degraded.

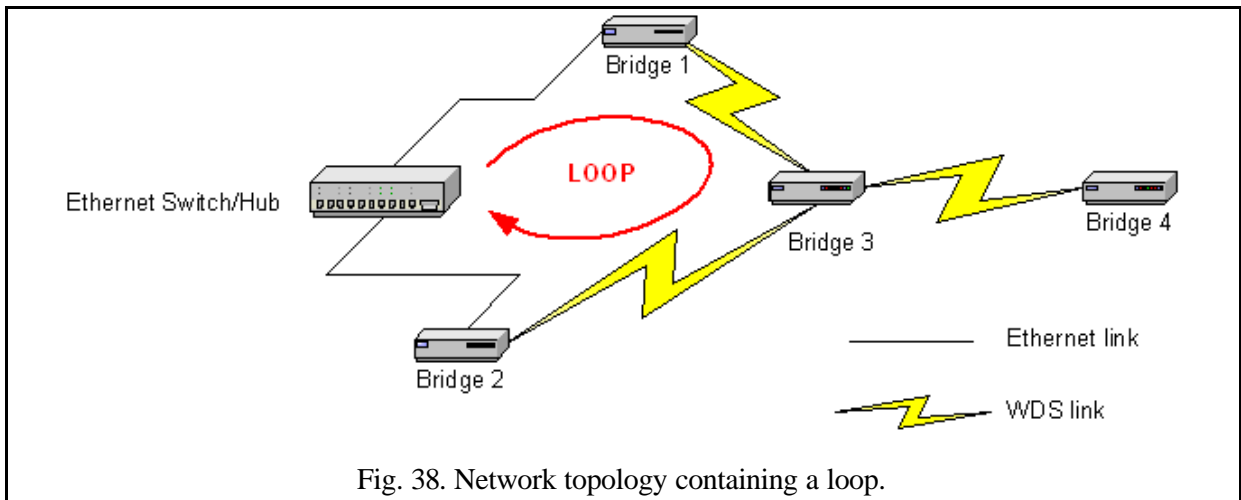


Fig. 38. Network topology containing a loop.

If external high-gain *directional* antennas are used, it's difficult to align the antennas when the distance between the bridges is long.

To adjust the alignments of a pair of bridges' directional antennas:

1. Connect each bridge to a computer via Ethernet.
2. Configure the data rate of each bridge to the lowest value, 1Mbps.
3. Fix the alignment of the antenna on one side.
4. Adjust the alignment of the antenna on other side by using response time information obtained from PINGing (run PING.exe) the "fixed-side" computer.
5. Fine-tune the alignment of the antenna until you get a best response time.
6. Increase the data rate of each bridge simultaneously until a maximal workable data rate is reached. You may not be able to use the highest data rate, 11Mbps, because of the distance and the gain of the antennas.

Fig. 39 illustrates the idea.

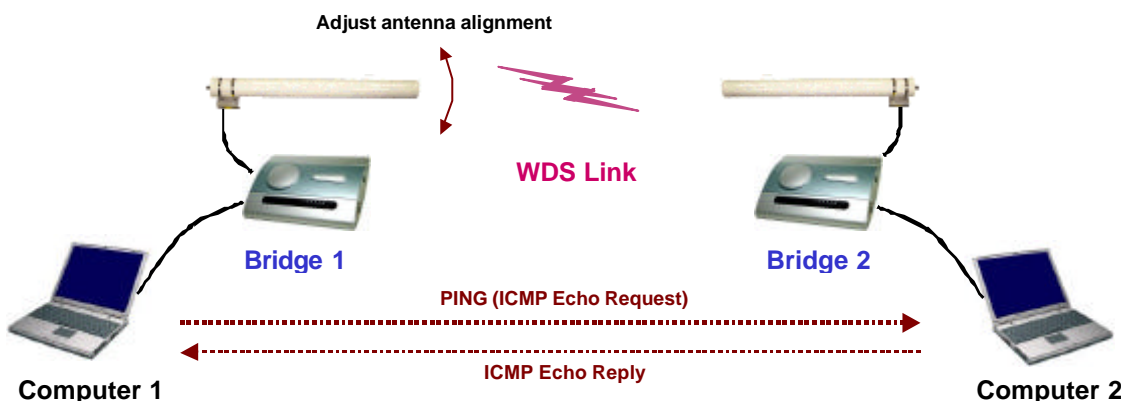


Fig. 39. Adjusting alignments of external directional antennas.

NOTE: There are two antenna connectors on one side of the bridge. Connect your high-gain antenna to the connector labeled "Primary".

3.5.2. Security

IEEE 802.11b security settings include **SSID broadcasts**, **Wireless client isolation**, **Security mode**, **IEEE 802.11 Authentication algorithm**, **WEP keys**, **MAC-Address-Based Access Control**.

3.5.2.1. Basic

SSID broadcasts:	Enabled
Wireless client isolation:	Disabled
Security mode:	Static WEP
Authentication algorithm:	Auto
Key length:	64 Bits
Selected key:	Key 1
Key 1:	*****
Key 2:	*****
Key 3:	*****
Key 4:	*****

Fig. 40. Basic IEEE 802.11b security settings.

For security reasons, it's highly recommended that the security mode be set to options other than *Open System*. When the security mode is set to *Open System*, no authentication and data encryption will be performed. Additionally, you can *disable* the SSID broadcasts functionality so that a wireless client computer with an "any" SSID cannot associate with the AP.

When the **Wireless client isolation** setting is set to **This AP Only**, wireless clients of this AP as an AP cannot see each other, and wireless-to-wireless traffic is blocked. When the setting is set to **All APs in This Subnet**, traffic among wireless users of different APs in the same IP subnet is blocked. This feature is useful for WLANs deployed in public places. In this way, hackers have no chance to attack other wireless users in a *hotspot*.

There are up to 5 security modes depending on AP model variations:

- **Open System.** No authentication, no data encryption.
- **Static WEP.** WEP (Wired Equivalent Privacy) keys must be manually configured.
- **IEEE 802.1x EAP without Encryption.** The IEEE 802.1x functionality is enabled and the user-name/password-based EAP-MD5 authentication is used. No data encryption.
- **IEEE 802.1x EAP with Static WEP.** The IEEE 802.1x functionality is enabled and the user-name/password-based EAP-MD5 authentication is used. Data encryption is achieved by static WEP.
- **IEEE 802.1x EAP with Dynamic WEP.** The IEEE 802.1x functionality is enabled and dynamic WEP key distribution authentication (EAP-TLS, EAP-TTLS, or PEAP) is used. Data encryption is achieved by dynamic WEP.

See Section 3.5.3 for more information about IEEE 802.1x.

According to the IEEE 802.11 standard, WEP can be used for authentication and data encryption.

Normally, *Shared Key* authentication is used if WEP data encryption is enabled. In rare cases, *Open System* authentication may be used when WEP data encryption is enabled. The **Authentication algorithm** setting is provided for better compatibility with wireless clients with various WLAN network adapters. There are three options available, including *Open System*, *Shared Key*, and *Auto*.

When WEP is enabled by a security mode, the **Key length** can be specified to be **64 Bits** or **128 Bits**. The **Selected key** setting specifies the key to be used as a *send-key* for encrypting traffic from the AP side to the wireless client side. All 4 WEP keys are used as *receive-keys* to decrypt traffic from the wireless client side to the AP side.

NOTE: Each field of a WEP key setting is a *hex-decimal* number from 00 to FF. For example, when the security mode is **Static WEP** and the key length is **64 Bits**, you could set Key 1 to “00012E3ADF”.

3.5.2.2. MAC-Address-Based Access Control

Functionality:

Access control type: inclusive exclusive

MAC address format: 00-02-DD-30-03-1E

MAC Address	Delete
00-50-C2-01-96-4D	<input type="button" value="Delete"/>
00-09-92-01-02-55	<input type="button" value="Delete"/>

Fig. 41. MAC-address-based access control settings.

With **MAC-Address-Based Access Control**, you can specify the wireless client computers that are permitted or not permitted to associate with the AP. When the table type is set to *inclusive*, entries in the table are permitted to associate with the AP. When the table type is set to *exclusive*, entries in the table are not permitted to associate with the AP.

To deny wireless clients' access to the wireless network:

1. Select *Enabled* from the **Functionality** drop-down list.
2. Set the **Access control type** to *exclusive*.
3. Specify the MAC address of a wireless client to be denied access, and then click **Add**.
4. Repeat Steps 3 for other wireless clients.

To grant wireless clients' access to the wireless network:

1. Select *Enabled* from the **Functionality** drop-down list.
2. Set the **Access control type** to *inclusive*.
3. Specify the MAC address of a wireless client to be denied access, and then click **Add**.
4. Repeat Steps 3 for other wireless clients.

To delete an entry in the access control table:

- Click **Delete** next to the entry.

NOTE: The size of the access control table is 64.

TFTP server IP address:	<input type="text" value="192.168.0.125"/>
MAC ACL file name:	<input type="text" value="MacAcl.txt"/>
<input type="button" value="Download"/>	

Fig. 42. MAC ACL download settings.

Instead of manually entering MAC addresses to the access control table one by one, you can prepare a text file that contains all the MAC addresses and put it on a TFTP server, and then command the AP to download the MAC ACL (Access Control List) file from the TFTP server. Fig. 43 shows the contents of a sample ACL file.

```
00-11-22-33-44-50
00-11-22-33-44-51
00-11-22-33-44-52
00-11-22-33-44-53
00-11-22-33-44-54
00-11-22-33-44-55
00-11-22-33-44-56
00-11-22-33-44-57
00-11-22-33-44-58
00-11-22-33-44-59
00-11-22-33-44-5a
00-11-22-33-44-5b
00-11-22-33-44-5c
00-11-22-33-44-5d
00-11-22-33-44-5e
00-11-22-33-44-5f
00-11-22-33-44-60
```

Fig. 43. Sample MAC ACL file.

To download a MAC ACL file from a TFTP server:

1. Specify the IP address of the TFTP server in the **TFTP server IP address** text box.
2. Specify the name of the MAC ACL file on the TFTP server in the **MAC ACL file name** text box.
3. Click **Download**.

3.5.3. IEEE 802.1x/RADIUS

IEEE 802.1x *Port-Based Network Access Control* is a new standard for solving some security issues associated with IEEE 802.11, such as lack of user-based authentication and dynamic encryption key distribution. With IEEE 802.1x and the help of a RADIUS (Remote Authentication Dial-In User Service) server and a user account database, an enterprise or ISP (Internet Service Provider) can manage its mobile users' access to its wireless LANs. Before granted access to a wireless LAN supporting IEEE 802.1x, a user has to issue his or her *user name* and *password* or *digital certificate* to the backend RADIUS server by EAPOL (Extensible Authentication Protocol Over LAN). The RADIUS server can record accounting information such as when a user logs on to the wireless LAN and logs off from the wireless LAN for monitoring or billing purposes.

The IEEE 802.1x functionality of the access point is controlled by the *security mode* (see Section

3.5.2.1). So far, the wireless access point supports two authentication mechanisms—EAP-MD5 (Message Digest version 5), EAP-TLS (Transport Layer Security). If EAP-MD5 is used, the user has to give his or her *user name* and *password* for authentication. If EAP-TLS is used, the wireless client computer automatically gives the user's *digital certificate* that is stored in the computer hard disk or a smart card for authentication. And after a successful EAP-TLS authentication, a session key is automatically generated for wireless packets encryption between the wireless client computer and its associated wireless access point. To sum up, EAP-MD5 supports only user authentication, while EAP-TLS supports user authentication as well as dynamic encryption key distribution.

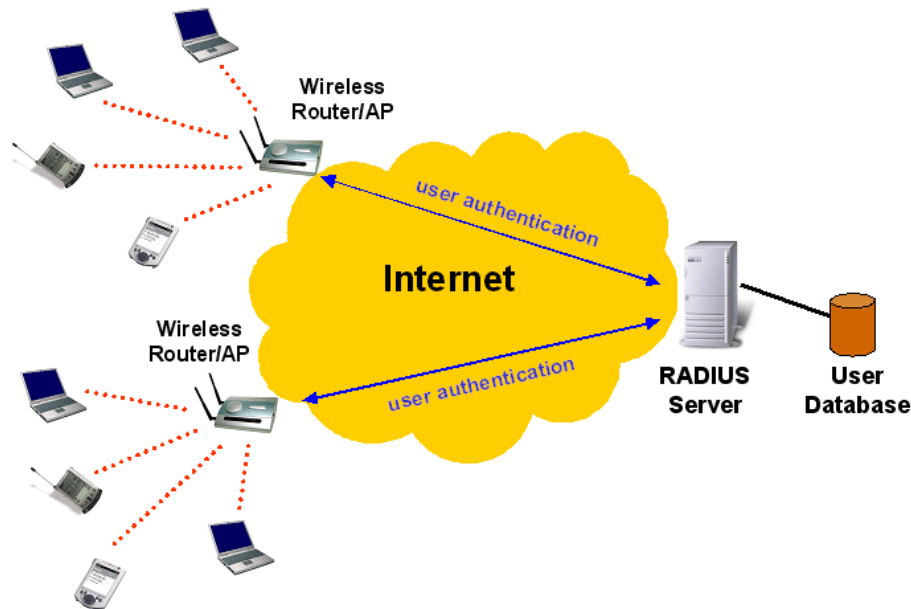


Fig. 44. IEEE 802.1x and RADIUS.

An access point supporting IEEE 802.1x can be configured to communicate with two RADIUS servers. When the primary RADIUS server fails to respond, the wireless access point will try to communicate with the secondary RADIUS server. You can specify the length of timeout and the number of retries before communicating with the *secondary* RADIUS server after failing to communicate with the primary RADIUS server.

An IEEE 802.1x-capable wireless access point and its RADIUS server(s) share a secret key so that they can authenticate each other. In addition to its IP address, a wireless access point can identify itself by an NAS (Network Access Server) identifier. Each IEEE 802.1x-capable wireless access point must have a *unique* NAS identifier.

Primary RADIUS server:	<input type="text" value="192.168.168.220"/>
Secondary RADIUS server:	<input type="text"/>
Authentication port:	<input type="text" value="1812"/>
Accounting port:	<input type="text" value="1813"/>
Timeout (sec.):	<input type="text" value="5"/>
Max number of retries:	<input type="text" value="3"/>
Shared key:	<input type="text" value="*****"/>
Identifier of this NAS:	<input type="text" value="AP1"/>

Fig. 45. IEEE 802.1x/RADIUS settings.

TIP: Refer to the IEEE 802.1x-related white papers on the companion CD-ROM for more information

3.6. Configuring Advanced Settings

3.6.1. Packet Filters

The AP provides layer 2 (Ethernet Type Filters), layer 3 (IP Protocol Filters), and layer 4 (TCP/UDP Port Filters) filtering capabilities. The configuration processes for the filters are similar.

Functionality: whether this filtering capability is *enabled* or *disabled*.

Policy for matched packets: how a matched packet is processed—*discard* or *pass*.

To enable a filtering rule: select the check box to the left of the rule.

3.6.1.1. Ethernet Type Filters

Functionality:	Disabled
Policy for matched packets:	Discard
Name	Number
<input checked="" type="checkbox"/> RARP	0x8035
<input type="checkbox"/> ARP	0x0806
<input type="checkbox"/> NetBUI	0xF0F0
<input type="checkbox"/> Novell IPX	0xB138
<input type="checkbox"/> IPX 802.3	0x00FF

Fig. 46. Ethernet type filters settings.

The *Ethernet type* field of the MAC (Media Access Control) header of a packet incoming from the WLAN or Ethernet interface is inspected for filtering. In a rule, specify the hex-decimal Ethernet type number and give the rule a name.

3.6.1.2. IP Protocol Filters

Functionality:	Disabled			
Policy for matched packets:	Discard			
Protocol Number	Source Address	Subnet Mask	Destination Address	Subnet Mask
<input checked="" type="checkbox"/> 0x01	192.168.0.3	255.255.255.255	192.168.0.5	255.255.255.255
<input type="checkbox"/> 0x02	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0
<input type="checkbox"/> 0x06	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0
<input type="checkbox"/> 0x11	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0
<input type="checkbox"/> 0x62	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0

Fig. 47. IP protocol filters settings.

The protocol, source address, and destination address fields of a packet incoming from the WLAN or Ethernet interface is inspected for filtering. In a rule, specify the hex-decimal protocol number, source IP address range (Source IP Address AND Source Subnet Mask), and destination IP address range (Destination IP Address AND Destination Subnet Mask).

A source (destination) IP address range is determined by performing an AND operation on the source (destination) IP address field and the source (destination) subnet mask field. For example, if the source IP address field is 192.168.0.1 and the source subnet mask field is 255.255.255.0, the resultant source IP address range is 192.168.0.0 to 192.168.0.255.

3.6.1.3. TCP/UDP Port Filters

Functionality:	Disabled		
Policy for matched packets:	Discard		
	Destination Port	Protocol	Application Name
<input checked="" type="checkbox"/>	80	TCP	HTTP
<input type="checkbox"/>	0	TCP	
<input type="checkbox"/>	0	TCP	
<input type="checkbox"/>	0	TCP	
<input type="checkbox"/>	0	TCP	

Fig. 48. TCP/UDP port filters settings.

The *destination port* field the TCP or UDP header of a packet incoming from the WLAN or Ethernet interface is inspected for filtering. In a rule, specify the decimal **Destination Port**, **Protocol** type (TCP/UDP), and the name of the higher-level protocol (**Application Name**).

3.6.2. Management

3.6.2.1. UPnP

Functionality:	Enabled
Device friendly name:	Wireless AP

Fig. 49. UPnP settings.

UPnP (Universal Plug and Play) enables a Windows XP user to automatically discover peripheral devices by HTTP. When the UPnP functionality is enabled, you can see the AP in My Network Places of Windows XP. The AP can be given a *friend name* that will be shown in My Network Places. *Double-clicking* the icon in My Network Places that stands for the AP will launch the default Web browser for you to configure the AP.

3.6.2.2. System Log

<input checked="" type="checkbox"/> Local log
<input type="checkbox"/> Remote log by SNMP trap
Event Types
<input checked="" type="checkbox"/> General
<input checked="" type="checkbox"/> Build-in AP
<input checked="" type="checkbox"/> MIB II traps
<input checked="" type="checkbox"/> RADIUS user authentication

Fig. 50. System log settings.

System events can be logged to the on-board RAM of the AP (**Local log**) or sent to a remote computer on which an SNMP trap monitor program runs (**Remote log by SNMP trap**). See the next subsection for more information about SNMP trap settings.

The system events are divided into the following categories:

- **General:** system and network connectivity status changes.
- **Built-in AP:** wireless client association and WEP authentication status changes.
- **MIB II traps:** *Cold Start, Warm Start, Link Up, Link Down* and *SNMP Authentication Failure*.
- **RADIUS user authentication:** RADIUS user authentication status changes.

NOTE: The *SNMP Authentication Failure* trap is issued when using an incorrect community string to manage the AP via SNMP and the SNMP MIB II OID, **snmpEnableAuthenTraps**, is enabled (*disabled* by default).

3.6.2.3. SNMP

Functionality:	Enabled ▾
Read-only community:	*****
Read-write community:	*****
SNMP Trap Table	
IP Address	Community
<input checked="" type="checkbox"/> 192.168.0.2	*****
<input type="checkbox"/> 0.0.0.0	
<input type="checkbox"/> 0.0.0.0	
<input type="checkbox"/> 0.0.0.0	
<input type="checkbox"/> 0.0.0.0	

Fig. 51. SNMP settings.

The SNMP (Simple Network Management Protocol) functionality can be disabled, and you can specify the name (used as a *password*) of the read-only and read-write community. In addition, up to 5 SNMP trap targets can be set in the **SNMP Trap Table**.

To specify a trap target:

1. Type the IP address of the target host.
2. Type the **Community** for the host.
3. Select the corresponding check box next to the IP address text box.

Appendix A: Default Settings

TIP: Press the **Default (SF-Reset, or Soft-Reset)** switch on the housing of a *powered-on* AP to reset the configuration settings to factory-default values.

Setting Name	Default Value
Global	
User Name	root
Password	root
IEEE 802.11b	
Regulatory Domain	FCC (U.S.)
Channel Number	11
SSID	wireless
SSID Broadcasts	Enabled
Transmission Rate	Auto
Transmit Power	High
MAC Address	See the label on the accompanying PCMCIA card or the label on the housing of the AP.
Security Mode	Open System
Selected WEP Key	Key #1
WEP Key #1	00-00-00-00-00
WEP Key #2	00-00-00-00-00
WEP Key #3	00-00-00-00-00
WEP Key #4	00-00-00-00-00
MAC-Address-Based Access Control	Disabled
Access Control Table Type	Inclusive
Wireless Client Isolation	Disabled
AP Load balancing	Disabled
Link Integrity	Disabled
Association Control	
Max Number of Clients	64
Block Clients if Traffic Load Exceeds	Disabled
LAN Interface	
Method of obtaining an IP Address	Set manually
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DHCP Server	Disabled
Management	
UPnP	Enabled
System Log	Local Log
SNMP	Enabled
SNMP read community	public
SNMP write community	private
Telnet	Enabled

Appendix B: Troubleshooting

Check the following first:

- Make sure that the power of the AP is on and the Ethernet cables are connected firmly to the RJ-45 jacks of the AP.
- Make sure that the LED ALV of the AP is blinking to indicate the AP is working.
- Make sure the types of the Ethernet cables are correct. Recall that there are two types—*normal* and *crossover*.

B-1: Wireless Settings Problems

- **The wireless client computer cannot associate with an AP.**
 - Is the wireless client set in *infrastructure* mode?
 - ◆ Check the *operating mode* of the WLAN NIC.
 - Is the SSID of the WLAN NIC identical to that of the prospective AP?
 - ◆ Check the SSID setting of the WLAN NIC and of the AP.
 - Is the WEP functionality of the prospective AP enabled?
 - ◆ Make appropriate WEP settings of the client computer to match those of the AP.
 - Is the prospective AP within range of wireless communication?
 - ◆ Check the *signal strength* and *link quality* sensed by the WLAN NIC.

B-2: TCP/IP Settings Problems

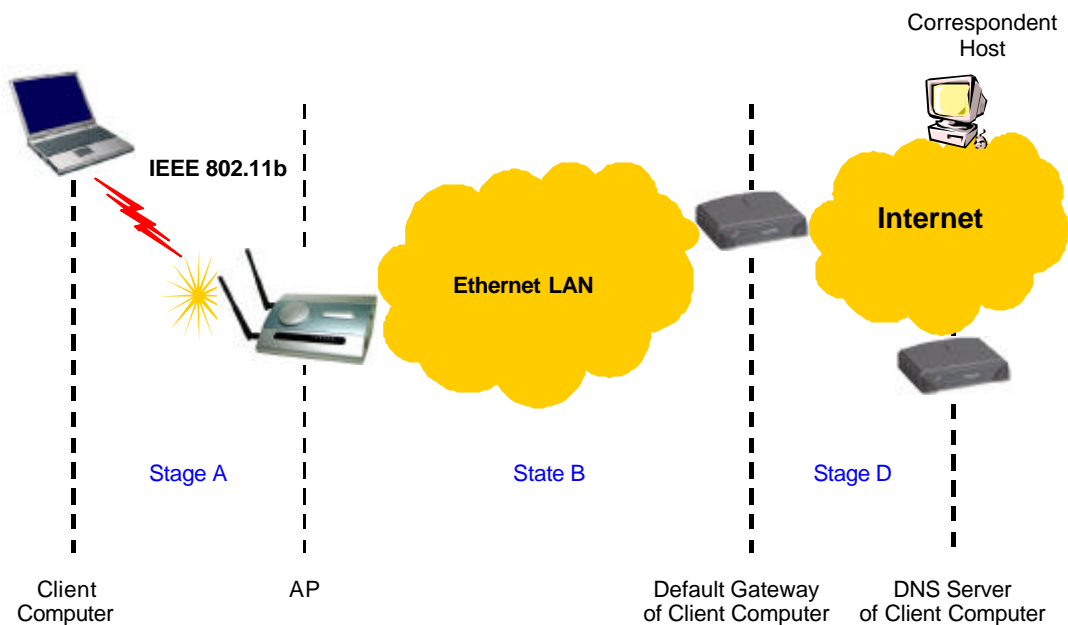


Fig. 52. Communication stages for a client to reach its correspondent host.

For a wireless client computer to communicate with a correspondent host on the Internet by the host's domain name (e.g. <http://www.wi-fi.com>), it first sends a DNS request to a DNS server on the Internet. The DNS request travels first to the AP, then the AP relays this request to the default gateway of the client computer. Finally, this request is forwarded by the gateway to the DNS server on the Internet. The DNS reply issued by the DNS server is transmitted back to the client computer following a reverse path. When the client computer receives the DNS reply, it knows the IP address of the correspondent host and sends further packets to this IP address.

As illustrated in Fig. 52, the communication path could be broken at some of the stages. The OS-provided network diagnostic tool, **ping.exe**, can be employed to find out TCP/IP-related communication problems.

NOTE: If *two or more* NICs are installed and operating on a client computer, TCP/IP may not work properly due to incorrect entries in the routing table. Use the OS-provided command-line network tool, **route.exe**, to add or delete entries from the routing table. Or, use Windows-provided **Device Manager** to disable unnecessary NICs.

Solve the following problems in order:

- **The AP does not respond to *ping* from the client computer.**
 - Are two or more NICs installed on the client computer?
 - ◆ Use the OS-provided command-line network tool, **route.exe**, to modify the contents of the routing table.
 - ◆ Use Windows-provided **Device Manager** to disable unnecessary NICs.
 - Is the underlying link (Ethernet or IEEE 802.11b) established?

- ◆ Make sure the Ethernet link is OK.
- ◆ Make sure the wireless settings of the wireless client computer and of the AP match.
- Are the IP address of the *client computer* and the IP address of the *AP* in the same IP subnet?
 - ◆ Use **WinIPCfg.exe** or **IPConfig.exe** to see the current IP address of the client computer. Make sure the IP address of the client computer and the IP address of the AP are in the same IP subnet.

◆ **TIP:** If you forget the current IP address of the AP, use Wireless Router/AP Browser to get the information (see Appendix B-3).

- **The default gateway of the client computer does not respond to *ping* from the client computer.**
 - Solve the preceding problem first.
 - Are the IP address of the *AP* and the IP address of the *client computer* in the same IP subnet?
 - If you cannot find any incorrect settings of the AP, the default gateway may be really down or there are other communication problems on the network backbone.
- **The DNS server(s) of the client computer do not respond to *ping* from the client computer.**
 - Solve the preceding problems first.
 - If you cannot find any incorrect settings of the AP, the default gateway of the AP may be really down or there are other communication problems on the network backbone.

B-3: Unknown Problems

- **The AP has been set to obtain an IP address automatically by DHCP. How can I know its acquired IP address so that I can manage it using a Web browser?**
 - Use the utility, Wireless Router/AP Browser (**WLBwrsr.exe**), in the “**Utilities**” folder on the companion CD-ROM disc. This utility can discover nearby APs and show their MAC addresses and IP addresses. In addition, it can launch the default Web browser on your computer.

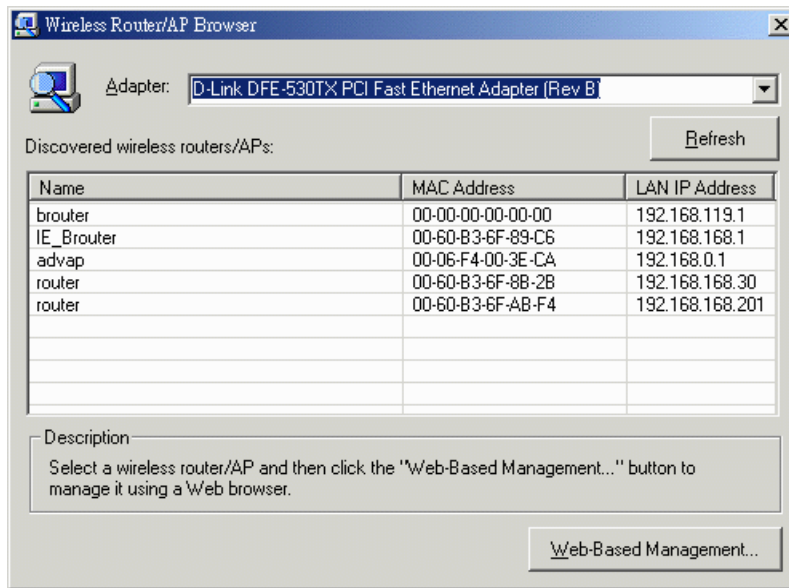


Fig. 53. Wireless Router/AP Browser.

- **The AP stops working and does not respond to Web management requests.**
 - The firmware of the AP may be stuck in an incorrect state.
 - ◆ Unplug the power connector from the power jack, and then re-plug the connector to restart the AP.
 - ◆ Contact our technical support representatives to report this problem, so that the bugs can be static in future firmware versions.
 - If the AP still does not work after restarting, there may be hardware component failures in the AP.
 - ◆ Contact our technical support representatives for repair.

Appendix C: Additional Information

C-1: Firmware Upgrade Using Xmodem Upgrade

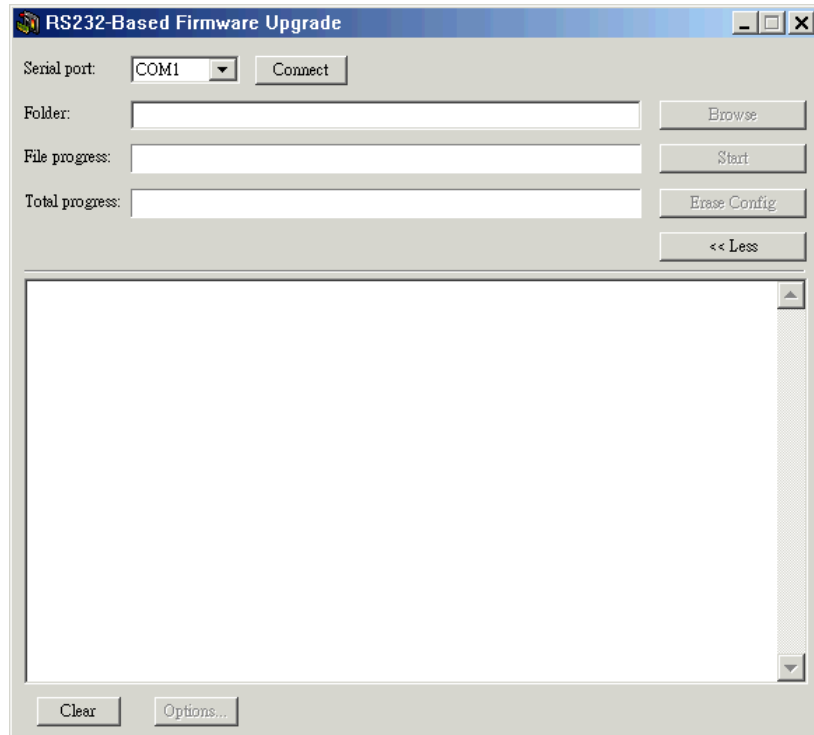


Fig. 54. Xmodem Upgrade.

To upgrade the firmware of AP using Xmodem Upgrade over RS232:

1. Power off the AP whose firmware will be upgraded.
2. Connect the managing PC and the AP with an *RS232 Null Modem* cable.
3. Select the serial port (COM1 or COM2) you use for connecting the device from the **Serial port** drop-down list and click **Connect**.
4. Chose the folder in which the firmware files reside by click **Browse**.
5. Power on the AP and you'll see bootup information.
6. Click **Start** to begin upgrade the firmware of the AP.
7. You will be prompted when the upgrade process completes.

Click **Erase Config** to reset the configuration settings of the AP to default values.

C-2: Distances and Data Rates

Important Notice: Maximum distances posted below are actual tested distance thresholds. However, there are many variables such as barrier composition and construction and local environmental interference that may impact your actual distances and cause you to experience distance thresholds far lower than those we post below.

IEEE 802.11b Maximum Distance Table				
Environmental Condition	Speed and Distance Ranges			
	11 Mbps	5.5 Mbps	2 Mbps	1 Mbps
Open Environment: A "line-of-sight" environment with no interference or obstructions between Access Point and Users.	160 m (524 ft)	270 m (886 ft)	400 m (1312 ft)	457 m (1500 ft)
Semi-Open Environment: An environment with no major obstructions such as walls or privacy cubicles between Access Point and users.	50 m (164 ft)	70 m (230 ft)	90 m (295 ft)	120 m (394 ft)
Closed Environment: A typical office or home environment with floor to ceiling obstructions between Access Point and users.	25 m (82 ft)	35 m (115 ft)	45 m (148 ft)	55 m (180 ft)