



TT™900

User Manual



Table of Contents

Disclaimers	3
Introduction	4
Product Features	5
Product Specifications	5
Installation	10
Configuring windows for IP Networking	11
Web Configuration Interface	13
Client Bridge Mode	13
Access Point Mode	30
Appendix A: Warranty Policy	50
Appendix B: RMA Policy	51
Appendix C: Regulatory Information	52
Appendix D: Contact Information	54
Appendix E: WDS Explained	55
Appendix F: TT900 Upgrade FAQ	57

Disclaimers

No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from the copyright owner.

All other trademarks and registered trademarks are the property of their respective owners.

Statement of Conditions

We may make improvements or changes in the product described in this documentation at any time. The information regarding the product in this manual is subject to change without notice.

We assume no responsibility for errors contained herein or for direct, indirect, special, incidental or consequential damages with the furnishing, performance or use of this manual or equipment supplied with it, even if the suppliers have been advised about the possibility of such damages.

Electronic Emission Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC INFORMATION

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment usage generates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no grantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment is for home or office use.

IMPORTANT NOTE


FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the antenna and your body and must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Introduction

The TT900 is Teletronics's answer to the ever growing demand for higher bandwidth and security in a wireless network environment. It is based on a brand new redesigned platform that not only offers faster performance and capacity but also supports all current pre IEEE 802.11i wireless security standards. The TT900 is housed in a weather-proof NEMA 4 enclosure, supports high power 802.11 b/g radio, industrial grade construction, multiple antenna options, surge protection on the radio and PoE (Power Over Ethernet) adaptor, and RoHS compliance.

TT5800 Product Photos

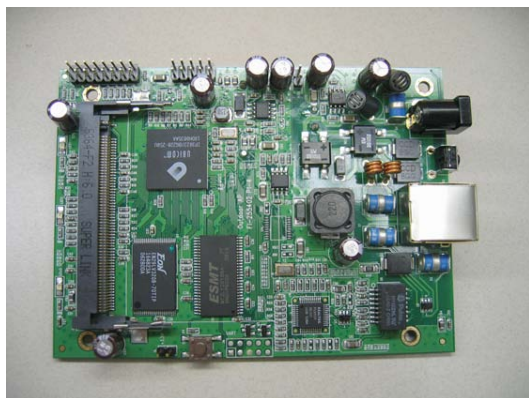

TT900 PCB



IEEE 802.11a miniPCI Card



TT900 Enclosure (Die Cast Aluminum NEMA 4 Box)

Product Features

- Compact size for small enterprise or system integrate service market
- Compliant with IEEE 802.11b/g specifications
- Supports 64/128-bit WEP, WPA and IEEE802.1x
- Intelligent firmware upgrade via Web browser
- Built-in Web-based utility for easy configuration from any Web browser
- Support POE (IEEE 802.3af) function
- Supports wireless bridging and MAC address filtering
- Provide 10/100M, auto sensing MDI/MDI-X Ethernet port
- EzManager Support

Product Specifications

Main Chips

- CPU: Uicom IP3023
- Radio: Supports 802.11b/g Atheros AR5414

Mechanical

- Chassis Dimension (W x D x L): 7.5" x 2.75"x 9"

Board Specifications

Specification	Description
Network Standard	IEEE 802.11 b/g, IEEE 802.3, IEEE802.3x
Ethernet	10/100BaseT Ethernet, Auto MDI/MDI-X
Network Architecture	Infrastructure; Ad-Hoc
MAC	CSMA/CA
Status Indicators	POWER, Wireless LAN(RF),Ethernet LAN, Receives Signal Strength(RSS)
Push Button	Reset to Default Button

Radio Specifications

Specification	Description
Chipset	MAC/BB Processor Atheros AR5414
Power Consumption	IEEE 802.11b TX: ~1100 mA RX: ~600 mA IEEE 802.11g TX: ~1100 mA RX: ~600 mA
Antenna Connector	SMA connector
Output Power	<p>IEEE 802.11b:</p> <ul style="list-style-type: none"> • 23dBm (± 1.5dB) @ 1Mbps • 22dBm (± 1.5dB) @ 2Mbps • 21dBm (± 1.5dB) @ 5.5Mbps • 20dBm (± 1.5dB) @ 11Mbps <p>IEEE 802.11g:</p> <ul style="list-style-type: none"> • 23dBm (± 1.5dB) @ 54Mbps • 22dBm (± 1.5dB) @ 48Mbps • 21dBm (± 1.5dB) @ 36Mbps • 20dBm (± 1.5dB) @ 1~24 Mbps
Receiver Sensitivity	<p>IEEE 802.11b/g Sensitivity @ 8% Packet Error Rate</p> <ul style="list-style-type: none"> • 54Mbps:-72dBm • 6Mbps:-92dBm
Modulation	<p>IEEE 802.11b (DSSS)</p> <ul style="list-style-type: none"> • 5.5/11 Mbps (CCK) • 2 Mbps (DQPSK) • 1 Mbps (DBPSK) <p>IEEE 802.11g (OFDM/DSSS)</p> <ul style="list-style-type: none"> • 48/54 Mbps (QAM-64) • 24/36 Mbps (QAM-16) • 12/18 Mbps (QPSK) • 6/9 Mbps (BPSK) • 5.5/11Mbps (CCK) • 2Mbps (DQPSK) • 1Mbps (DBPSK)
Operating Frequency	<ul style="list-style-type: none"> • USA(FCC): 902 MHz ~ 928 MHz

LED Definition (Optional)

Item	Specification	
Power	ON (Red)	Power on
	Off	No power
RF(WLAN)	On (Yellow)	Connected
	Off	Not connected
	Blinking(Green)	Connected and transmitting
LAN	On (Green)	Connected
	Off	Not connected
	Blinking(Green)	Connected and transmitting
Received Signal Strength Indicator (RSSI)	Blinking left to right	Not connected (Scanning for AP)
	On	Connected, indicating Received Signal Strength.

Software Specification

Item	Specification
Bridge Features	<ul style="list-style-type: none"> • Universal Bridging • MAC Address Cloning • RTS Threshold/Fragmentation Threshold • Infrastructure or Ad-Hoc Mode • Non-IP Traffic Bridging
Security Features	<ul style="list-style-type: none"> • 64-Bit/128-Bit WEP Encryption • WPA Personal Using TKIP or AES • WPA Enterprise Using TKIP or AES • 802.1x Authenticator • Cisco LEAP Support • MAC Address Filter
Management Features	<ul style="list-style-type: none"> • Web Access (Username/Password Protected) • Static IP • Automatic Device Discovery & Configuration • SNMP v1, DHCP and PPPoE (Ethernet or Wireless) • Firmware Upgrade via Web Browser • Transmit Power Adjustment

External AC Power Adapter

Item	Specification
Input Voltage	110-240VAC
Line Frequency	50/60Hz
Power Output to M/B	48VDC, 1A

Environmental

Item	Specification
Operating Temperature	-20 C to 70 C (-4 F to 158 F), 10 to 90% (non-condensing)
Storage Temperature	-25 C to 80 C (-13 F to 176 F), 10 to 90% (non-condensing)

Standards / Regulatory Compliance

- CE, FCC

Product Kit Part Listing

1. TT900 802.11b/g PCBA (1)
2. IEEE 802.11b/g mini-PCI radio card (1)
3. Power over Ethernet Injector (1)
4. 48VDC Power Adapter (1)
5. Ethernet Cable (2)
6. Waterproof RJ-45 Connector (1)
7. Mounting Hardware (1)
8. User Manual

Note: If any item listed above is damaged or missing, please contact your dealer immediately.

System Requirements

- Any desktop or laptop with an Ethernet interface
- TCP/IP protocol suite installed
- Standard CAT5 Ethernet cables with RJ45 connectors
- Internet Explorer 5.0 or later / Firefox 1.0 or higher

Note:

Professional must install this device.

End-user cannot set the functionality by hardware or software from one to another directly.

End-user can adjust output power through a drop down menu, but cannot adjust the output power over the application.

The EUT will be settled output power not greater than the application by Manufacturer.

Installation of this device should be accomplished only by a qualified wireless LAN system installer who is:

• Knowledgeable of the use, installation and configuration procedures and associated networking components.

• Knowledgeable of each system component's equipment User and Installation Guide.

• Knowledgeable of the installation procedures, safety, and code requirements for the site's antenna, antenna mast, antenna cabling, and installation. TELETRONICS highly recommends that the antenna installation be

performed by a qualified antenna installation professional.

The intended use is generally not for the general public. It is generally for industry/commercial use.

The device cannot be sold retail, to the general public or by mail order. It must be sold to dealers or have strict marketing control.

The intended use is generally not for the general public. It is generally for industry/commercial use.

Installation

Preparation for Installation

Always double check for any missing parts from the kit you received before deployment.

The next step is to set up the computer Ethernet interface for configuring the TT900. Since the default IP Address of the unit is on the 192.168.10.x IP range in both Client Bridge and AP mode you will need to set the Ethernet interface within the same IP range, where x will have to be a free IP address number from 1-254.

Check the following section - “Hardware Installation” and the next chapter - “Configuring Windows for IP Networking” to obtain complete details.

Hardware Installation

Follow the procedure below to install your TT900 device:

1. Select a suitable place on the network to install the TT900. For best wireless reception and performance the external antenna should be positioned within Line of Sight from the AP with proper alignment.
2. Connect the TT900 to the ODU side of the PoE Injector, via a straight Ethernet cable (Cat-5), and then connect the NET side of the PoE Injector to either a computer or an Ethernet Switch. *Note: The TT900 now fully supports the MDI/MDI-X standard and no longer requires the use of a cross over cable to connect directly with a computer.*
3. Connect the 48VDC power adapter to the power jack on the PoE injector to power on the TT900.
4. Check the LEDs on the TT900 to confirm if the status is okay. At this point the Power (PWR) LED indicator should be red and Ethernet (LAN) LED should be green. The RF light should light up once the unit is associated wirelessly with another wireless device. However at this point the unit is still in factory default setting so do not be alarmed that the WLAN light doesn't light up.
5. Now the hardware installation is complete and you may proceed to the next chapter –“Configuring Windows for IP Networking” for instructions on setting up network configurations.


* The installation of the equipment should allow at least 20 centimeter between the equipment and persons to be in compliance with FCC RF exposure guidelines.

Configuring Windows for IP Networking


To establish a communication link between your PC and TT900, you will need to set up a static IP address for your computer first. This section helps you configure the network settings for your operating system. Please follow the procedures below to complete the settings:

Windows XP

1. Click **Start** on the taskbar and from the **Control Panel** choose **Network Connections**. Right-click the **Local Area Connection** icon and then choose **Properties** from the menu. You should see the **Local Area Connection Properties** dialog box shown below.

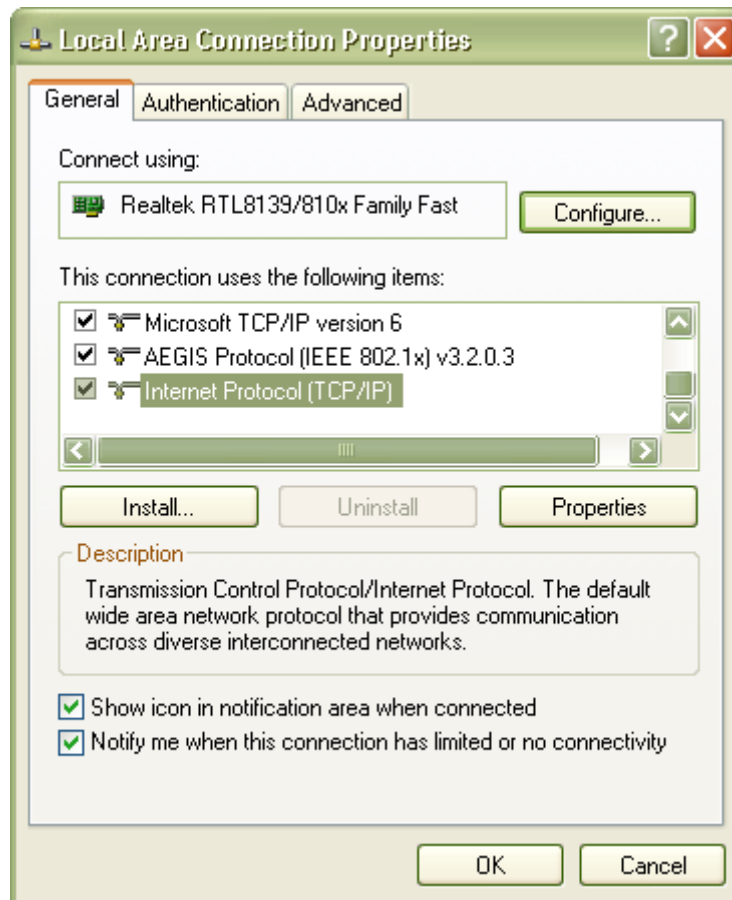

2. Select the **Internet Protocol (TCP/IP)** for your network card, and then click **Properties**.
3. In the opened dialog box, choose **Use the following IP address**
4. Under the **General** tab, choose **Use the following IP address**, and then specify an IP address. For example, type in **192.168.10.X** in the **IP Address** (where X is any free IP number from 1-254, excluding 241) area and **255.255.255.0** in the **Subnet Mask** area.

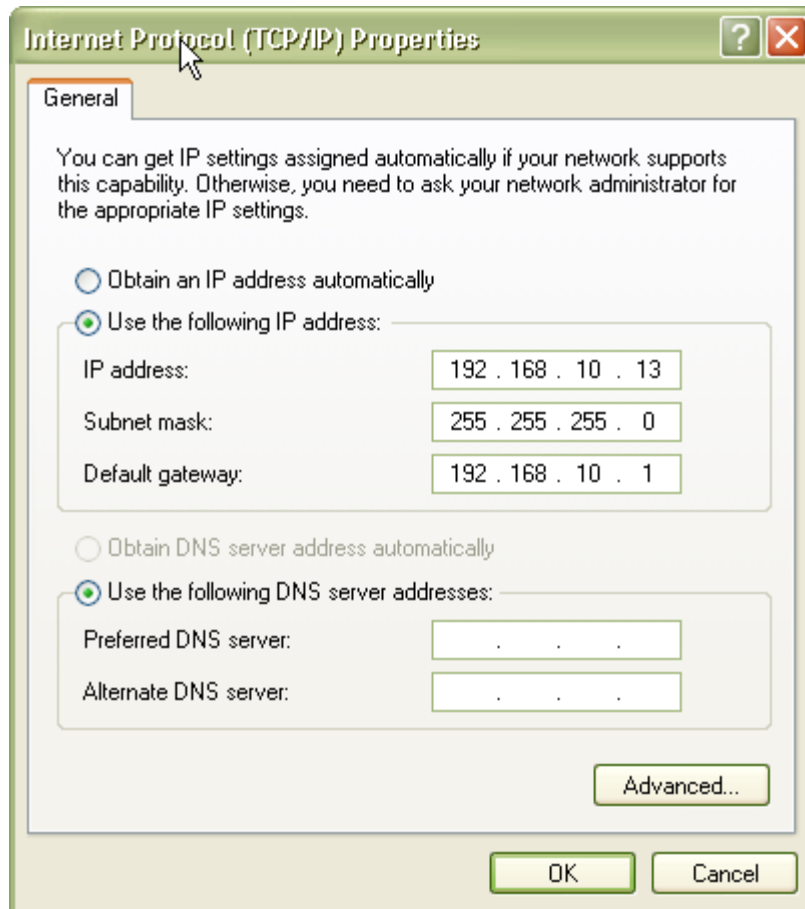

5. Click **OK** to finish configuration.

Web Configuration Interface

Client Bridge Mode

Default IP Address in Client Bridge Mode: **192.168.10.241**

To access the web control interface please open up a browser window and type in the factory default IP address in the URL.



Press Enter on your keyboard and a login prompt window similar to the one shown below will appear.



There is no default User name or Password. Leave User name and Password field blank and click OK.

Note: You may set a new password by clicking the Admin tab after you enter the Web Configuration page.

Information

The screenshot shows the web interface for a TT 900 Subscriber Unit. The top navigation bar includes the Teletronics International Inc. logo and the title "TT™ 900 SUBSCRIBER UNIT". A left sidebar contains a menu with links for Information, APs, Wireless, Security, Admin, and Advanced. The main content area is titled "Information" and contains a note: "NOTE: You may need to reload this page to see the current settings." Below this is a white box titled "Subscriber Unit Information" containing a table of device details.

Subscriber Unit Information	
Subscriber Unit Name:	TT Subscriber Unit
Radio Type:	Z900
MAC Address:	0060B36239DC
Firmware version:	C3.10.0 (0212)
SSID of AP:	Not associated
BSSID of AP:	000000000000
Current transmit rate:	Automatic
Current channel:	10
Current Signal Strength:	0 %
Security:	None
IP address:	192.168.10.241 (Static)
Register Status:	Not Registered
Unit SysUpTime:	0d 0h 00m 40s

NOTE : You are using the empty username/password

@2006
Teletronics
International,
INC. All Rights
Reserved.

Under the main web interface home page you will see the following configuration menu pages: **Information, APs, Wireless, Security, Admin** and **Advanced**. Detailed information for each section is provided below:

Access Points (APs)

The screenshot shows the web interface for a TT 900 Subscriber Unit, specifically the "Access Points" page. The top navigation bar and sidebar are identical to the previous screenshot. The main content area is titled "Access Points" and contains a note: "NOTE: You may need to reload this page to see new changes." Below this is a white box containing a table header for the list of available access points.

MAC address	SSID	Channel	Security	Mode	Rate	Signal
-------------	------	---------	----------	------	------	--------

The APs section displays available hotspots in the area along with the MAC address, SSID, Channel, Wireless mode, signal strength and transmission rate for each access point.



- [Information](#)
- [APs](#)
- [Wireless](#)
- [Security](#)
- [Admin](#)
- [Advanced](#)

Basic Wireless

On this page you can configure the basic 802.11a/g wireless settings. Any new settings will not take effect until the bridge is rebooted.

Wireless On/Off ON OFF
Enable/Disable wireless port.

Wireless Mode Infrastructure Ad-hoc
Select 'Infrastructure' to connect to a wireless (AP) Access Point, select 'Ad-hoc' to connect to another bridge or wireless station.

Wireless Network Name (SSID)
This is the name of the wireless access point that this station will associate to. Leave this field blank to associate to any access point.

BSSID
This is the MAC address of the Access point which subscriber unit is forced to associate with. Leave this field blank to associate to any access point with the same SSID. Please input MAC address like this format, 000DF5123456.

RF TX power
Select TX power. The valid range is 0..30 (1..1000mw) in unit of dBm. The actual TX power may be limited by your radio card model number. Example: for 200mw version, use 23 dbm.

802.11 Mode
This setting controls the types of 802.11 wireless clients or stations that can connect to this AP.

Super mode
Select super mode.

Transmission rate (Mbits/s)
This is the speed at which the device will transmit data. Normally you should select 'best' here, although if your wireless network is unusually noisy or quiet you may wish to use a fixed low or high rate.

Country & Region
Select the proper country or region where this device is installed.

Channel
This is the radio channel that the access point will use. Note that 802.11g and 802.11b use only 2.4 GHz channels, and 802.11a uses only 5 GHz channels.

DISCLAIMER : Each device should be configured to use the proper regional setting that does NOT violate the radio regulatory at the installed location. Teletronics takes NO responsibility of misusing the regional settings. If you find the local radio regulatory differs with teletronics' region/channel list, please email your findings to support@teletronics.com, thanks!

Wireless On/Off

This is the on/off switch of the radio card.

Wireless Mode

Infrastructure: An 802.11 networking framework in which devices communicate with each other by first going through an Access Point (AP).

Ad-hoc: An 802.11 networking framework in which devices or stations communicate directly with each other, without the use of an access point (AP). Use this mode if there is no wireless infrastructure or where services are not required.

Wireless Network Name (SSID)

Network Name is also known as SSID, which stands for Service Set Identifier. Any client in Infrastructure mode has to indicate the SSID of an Access Point to access a service such as internet access through the Access point.

Access Point Identifier (BSSID)

The Basic Service Set Identifier is the unique identifier (MAC address) of an access point in a Basic Service Set (BSS) network. The subscriber unit is forced to associate with this particular unit if there are multiple access points in the network.

Transmission rate (Mbits/s)

This option indicates the transmission rate of the bridge. Specify the rate according to the speed of your wireless network from the list. Most of the time the default setting, Best (automatic), should be selected for best performance. The setting can be adjusted manually if the link quality and signal strength are unusually low or high to get the best performance.

802.11 Mode

Wireless mode allows the user to select whether this subscriber unit will connect to an 802.11b only network, an 802.11g only network or both b/g networks. For b or g only wireless devices on the network, selecting 802.11b or 802.11g only mode will provide better performance than mixed mode. For TT900 the options of 802.11b, 802.11g only or mixed 802.11g and 802.11b are available.

RF Transmit Power

This section controls the power output for the mini-PCI radio card. The valid input range for this section is in the range of 0-23 in dBm units or (1mw – 200mw). The default value is 20 dBm or 100mW.

Country and Region

This option selects the country and region of operation. Every device should be configured to use the proper regional settings which comply with and do NOT violate the radio regulatory laws at the installed location.

Channel

Channels are important to understand because they affect the overall capacity of your Wireless LAN. A channel represents a narrow band of radio frequency. A radio frequency modulates within a band of frequencies; as a result there is a limited amount of bandwidth within any given range to carry data. It is important that the frequencies do not overlap or else the throughput would be significantly reduced as the network sorts and reassembles the data packets sent over the air.

For the TT900: 902-928 GHz frequency range, there are only 1 channel out of 2 channels available that do not overlap with one another.

- Channel 1 = 913 MHz
- Channel 2 = 918 MHz

Security

Security and Encryption Settings

On this page you can set the security and encryption options. Any new settings will not take effect until the bridge is rebooted.

WPA configuration

Enable WPA Authenticator to require stations to use high grade encryption and authentication.

WPA Enable

WPA Mode
[Select the WPA Mode.](#)

Cipher Type
[Select the cipher type.](#)

PSK
[Enter a text pass phrase between 8 and 63 characters.](#)

WEP configuration

WEP is the wireless encryption standard. To use it you must enter the same key(s) into the bridge and the access point. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. If you leave a key box blank then this means a key of all zeros.

Enable WEP
[Check this box to enable WEP. For the most secure use of WEP, also set authentication type to "Shared Key" when WEP is enabled](#)

Default WEP key to use
[Select the key to be used as the default key. Data transmissions are always encrypted using the default key. The other keys can only be used to decrypt received data.](#)

Authentication
[Select the type of authentication used when connecting to an access point. 'Open' is used if anyone can connect to the AP. 'Shared key' is used if both devices must know the encryption key.](#)

WEP key lengths
[Select the WEP key size. This length applies to all keys.](#)

WEP key 1

WEP key 2

WEP key 3

WEP key 4

WPA Configuration

Short for Wi-Fi Protected Access, WPA is a Wi-Fi standard that was designed to improve upon the security features of WEP. WPA has the following improvements over WEP:

- Improved data encryption through temporal key integrity protocol (TKIP). TKIP scrambles the keys using a hashing algorithm. By adding an integrity-checking feature, TKIP ensures that keys have not been tampered with.
- User authentication through the Extensible Authentication Protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA Enable

This option enables the WPA Authenticator. Note that any client that does not support the WPA standard will not be able to handshake / authenticate with a WPA enabled device.

WPA Mode

- WPA
 - Designed to secure present and future versions of IEEE 802.11 devices, WPA is a subset of the IEEE 802.11i specification. WPA addresses all known vulnerabilities in WEP. WPA also provides user authentication, since WEP lacks any means of authentication. WPA replaces WEP with a strong new encryption technology called Temporal Key Integrity Protocol (TKIP) with Message Integrity Check (MIC). It also provides a scheme of mutual authentication using IEEE 802.1X/Extensible Authentication Protocol (EAP) authentication or pre-shared key (PSK) technology. WPA was designed and has been scrutinized by well-known cryptographers. It can be implemented immediately and inexpensively as a software or firmware upgrade to most existing Wi-Fi CERTIFIED™ access points and client devices with minimal degradation in network performance. WPA offers standards-based, Wi-Fi CERTIFIED security. It assures users that the Wi-Fi CERTIFIED devices they buy will be cross-vendor compatible. When properly installed, WPA provides a high level of assurance to enterprises, small businesses and home users that data will remain protected and that only authorized users may access their networks. For enterprises that have already deployed IEEE 802.1X authentication, WPA offers the advantage of leveraging existing authentication databases and infrastructure.
- WPA2
 - WPA2 is the second generation of WPA security; providing enterprise and consumer Wi-Fi® users with a high level of assurance that only authorized users can access their wireless networks. Launched in September 2004 by the Wi-Fi Alliance, WPA2 is the certified interoperable version of the full IEEE 802.11i specification which was ratified in June 2004. Like WPA, WPA2 supports IEEE 802.1X/EAP authentication or PSK technology. It also includes a new advanced encryption mechanism using the Counter-Mode/CBC-MAC Protocol (CCMP) called the Advanced Encryption Standard (AES). AES satisfies U.S. government security requirements. It has been adopted as an official government standard by the U.S. Department of Commerce and the National Institute of Standards and Technology (NIST). Organizations that require the AES encryption available in WPA2 should be aware that upgrading to it may require new hardware. Section II of this document offers a roadmap for organizations planning to upgrade to WPA2. Considerations for its deployment are outlined in Section III.

Cipher Type

- TKIP
 - Temporal Key Integrity Protocol is an upgrade to the WEP known as WEP 1.1 that fixes known security problems in WEP's implementation of the RC4 stream cipher. TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with.
- AES
 - Advanced Encryption Standard (Rijndael Cypher) is the U.S. government's next-generation cryptography algorithm, which will replace DES and 3DES. AES works at multiple network layers simultaneously. AES Supports 128, 192 and 256 bit keys. Unlike the older standard, AES and 802.11i (WEP version 2) are based on 32bit processing.
- TKIP and AES
 - If clients support both the TKIP and AES standards then this would be the strongest cipher type to use that combines both TKIP and AES security.

PSK

PSK stands for Pre-Shared-Key and serves as a password. User may key in 8 to 63 characters string to set the password and activate 802.1x Authentication. Note that the same password must be used at both ends of the communication link (access point and client end).

WEP Configuration

Short for Wired Equivalent Privacy, a security protocol for wireless local area networks (WLANs) defined in the 802.11b standard. WEP is designed to provide the same level of security as that of a wired LAN.

Enable WEP

To enable the WEP Authenticator

Default WEP key to use

- WEP Key 1-4

Select the key to be used as the default key. Data transmissions are always encrypted using the default key. The other keys can only be used to decrypt received data.

Authentication

- Open - Open system authentication involves a two-step authentication transaction sequence. The first step in the sequence is the identity assertion and request for authentication. The second step in the sequence is the authentication result. If it is "successful", the station shall be mutually authenticated. Open system authentication does not provide authentication. It provides identification using the wireless adapter's MAC address. Open system authentication is used when no authentication is required. It is the default authentication algorithm.

Open system authentication uses the following process:

1. The authentication-initiating wireless client sends an IEEE 802.11 authentication management frame that contains its identity.
2. The receiving wireless AP checks the initiating station's identity and sends back an authentication verification frame.
3. With some wireless APs, you can configure the MAC addresses of allowed wireless clients. However, configuring

the MAC address does not provide sufficient security because the MAC address of a wireless client can be spoofed.

- Shared Key - Shared key authentication supports authentication of stations as either a member of those who know a shared secret key or a member of those who do not. Shared key authentication is not secure and is not recommended for use. It verifies that an authentication-initiating station has knowledge of a shared secret. This is similar to pre-shared key authentication for Internet Protocol security (IPSec). The 802.11 standard currently assumes that the shared secret is delivered to the participating wireless clients by means of a more secure channel that is independent of IEEE 802.11. In practice, a user manually types this secret for the wireless AP and the wireless client.

Shared key authentication uses the following process:

1. The authentication-initiating wireless client sends a frame consisting of an identity assertion and a request for authentication.
2. The authenticating wireless node responds to the authentication-initiating wireless node with challenge text.
3. The authentication-initiating wireless node replies to the authenticating wireless node with the challenge text that is encrypted using WEP and an encryption key that is derived from the shared key authentication secret.
4. The authentication result is positive if the authenticating wireless node determines that the decrypted challenge text matches the challenge text originally sent in the second frame. The authenticating wireless node sends the authentication result.
5. Because the shared key authentication secret must be manually distributed and typed, this method of authentication does not scale appropriately in large infrastructure network mode, such as corporate campuses.

WEP key lengths

64 bit (10 Hex Digit)

WEP Key type	Example
64-bit WEP with 5 characters	Key1= 2e3f4 Key2= 5y7js Key3= 24fg7 Key4= 98jui
64-bit WEP with 10 hexadecimal digits ('0-9', 'A-F')	Key1= 123456789A Key2= 23456789AB Key3= 3456789ABC Key4= 456789ABCD

128 bit (26 Hex Digit)

WEP Key type	Example
128-bit WEP with 13 characters	Key1= 2e3f4w345ytre Key2= 5y7jse8r4i038 Key3= 24fg70okx3fr7 Key4= 98jui2wss35u4
128-bit WEP with 26 hexadecimal digits ('0-9', 'A-F')	Key1= 112233445566778899AABBCCDEF Key2= 2233445566778899AABBCCDDEE Key3= 3344556677889900AABBCCDDFF Key4= 44556677889900AABBCCDDEEFF

Admin



TT™ 900 SUBSCRIBER UNIT

- Information
- APs
- Wireless
- Security
- Admin
- Advanced

Administration

On this page you can configure the IP address used by the Web server running on this bridge. For "static" mode, the IP address settings are given here. For "DHCP" mode, these settings are supplied by a DHCP server on your network. You can also change the password, reboot the bridge, or reset all settings to their factory defaults. If you have changed any settings it is necessary to reboot the bridge for the new settings to take effect.

Device name

Device name

This is the name that the bridge will use to identify itself to external configuration and IP-address-finding programs. This is not the same as the SSID. It is okay to leave this blank if you are not using these programs.

SNMP Setting

SNMP enabled

Check this option if you need pull information from the bridge thru SNMP.

Community

IP settings

IP Address Mode Static DHCP Client

Select 'DHCP' to get the IP settings from a DHCP server on your network. Select 'Static' to use the IP settings specified on this page.

Default IP address

Type the IP address of your bridge

Default subnet mask

Device Name

This is the name that the bridge will use to identify itself to external configuration and IP address programs. This is not the same as the SSID. It is okay to leave this blank if you are not using these programs.

SNMP Setting

SNMP enable

Option to enable or disable SNMP support.

Community

The SNMP Read-only Community string is like a user id or password that allows access to a router's or other device's statistics or management information. InterMapper sends the community string along with all SNMP requests. If the community string is correct, the device responds with the requested information. If the community string is incorrect, the device simply discards the request and does not respond.

Factory default setting for the read-only community string is set to "public". It is standard practice to change all the community strings so that outsiders cannot see information about the internal network. (In addition, the administrator may also employ firewalls to block any SNMP traffic to ports 161 and 162 on the internal network.)

Change this value to have InterMapper use the new string when querying SNMP devices.

IP Settings

IP Address Mode

- **Static**
 - Manually setup an IP address for this device.
- **DHCP**
 - Set up the bridge as a DHCP client which will pick up an IP address from a DHCP server.

Default IP address

The default Client Bridge Mode IP address: 192.168.10.241

Default subnet mask

The factory subnet default value is 255.255.255.0

Default gateway

The factory gateway default address is 192.168.10.1

[Information](#)
[APs](#)
[Wireless](#)
[Security](#)
[Admin](#)
[Advanced](#)

Default gateway
 This is the IP address of the gateway that connects you to the internet. The factory default is 192.168.1.1.

Security

User name
 This is the user name that you must type when logging in to these web pages.

Administrator password

 This is the password that you must type when logging in to these web pages. You must enter the same password into both boxes, for confirmation

Syslog

Syslog enabled
 It is the option to enable the syslog

IP address of the syslog daemon server

Ping Watchdog Utility

Ping Watchdog Utility enabled
 It is the option to enable the Ping Watchdog Utility

Destination IP address of the Ping Watchdog Utility

Security

This section is used to set up the administrative login name and password.

User name

This is the user name that you must type when logging into the web interface.

Administrator Password

This is the password that you must type when logging into the web interface. You must enter the same password into both boxes for confirmation.

Syslog

Syslog Enabled

Option to enable or disable Syslog support.

Syslog Daemon Server

The Syslog server IP address input box.

Ping Watchdog Utility

Ping Watchdog Utility Enabled

If enabled, the Ping Watchdog utility tracks the TCP/IP link between this device and another remote destination at the other end of the wireless link. When the remote destination is unreachable (loss of connection) the Ping Watchdog Utility will reboot the unit in an attempt to re-establish the connection. When the TT is up for 2 minutes, the ping watchdog utility will start to ping the remote network device every 20 seconds, if there is no icmp response for 3 times in a row then the ping watchdog will kick off the reboot action.

Destination IP address of the Ping Watchdog Utility

This is the IP address of the remote destination.

Device Control

This section has functions that will allow the TT900 to Reboot and Reset the system configuration to factory defaults.

The screenshot shows the web interface for the TT900 Subscriber Unit. At the top, there is a header with the Teletronics International Inc. logo and the text "TT™ 900 SUBSCRIBER UNIT". On the left side, there is a navigation menu with links for "Information", "APs", "Wireless", "Security", "Admin", and "Advanced". The main content area is titled "Device Control" and contains the following sections:

- Device Control**: A section with a description: "Clicking the button below will immediately reboot the device. A reboot is necessary in order to change most configuration options." Below this is a "Reboot" button.
- Reset Configuration**: A section with a description: "Clicking the button below will reset all configuration options to their factory default values and the device will reboot. Note that the IP address of the device will also be reset and it may be necessary to change the address in your browser to access this website again." Below this is a "Reset Configuration" button.
- Firmware Upgrade**: A section with a description: "To upgrade the firmware, enter the name of the firmware upgrade file, and click on the upgrade button below." Below this is a form with a "File to upload:" label, a text input field, a "Browse..." button, and an "Upload" button. A note below the form states: "The upload may take up to 60 seconds."
- Register**: A section with a description: "To register your product, input your Activation Key and click the register button below. By default, you needn't register your product. Whenever you change the radio card, you need ask Teletronics Inc for Activation Key to regist. Please get the MAC address of the radio card and call teletronics technical support. You will get a Activation Key and then input here. If your product is not registered, you can not change some of the wireless settings, such as SSID and channel." Below this is a form with an "Activation Key:" label, a text input field, and a "Register" button.

At the bottom left of the page, there is a copyright notice: "@2006 Teletronics International, INC. All Rights Reserved."

Firmware Upgrade

This section allows the TT900 firmware to be upgraded or changed directly from the web interface. Click on the Browse button to select a file from the host machine.

Register

The screenshot shows the "Register" section of the web interface. It contains a description: "To register your product, input your Activation Key and click the register button below. By default, you needn't register your product. Whenever you change the radio card, you need ask Teletronics Inc for Activation Key to regist. Please get the MAC address of the radio card and call teletronics technical support. You will get a Activation Key and then input here. If your product is not registered, you can not change some of the wireless settings, such as SSID and channel." Below this is a form with an "Activation Key:" label, a text input field, and a "Register" button. At the bottom left of the page, there is a copyright notice: "@2006 Teletronics International, INC. All Rights Reserved."

The TT900 has implemented a hardware modification authorization process to prevent use by fraudulent hardware from other manufacturers. This will require any hardware change on the radio card used on the TT900 to input a serial code generated based on each unique MAC address. Please contact Teletronics Support to a pickup a valid serial number to deactivate the pre-registration protection after a radio card swap. If the unit is not registered some features such as SSID and Wireless Channel selection will be disabled.

Advanced

On this page you can configure the advanced 802.11a/g wireless settings. Any new settings will not take effect until the bridge is rebooted.

Cloning

Cloning mode WLAN Card Ethernet Client

This feature controls the MAC Address of the Bridge as seen by other devices (wired or wireless).

If set to "Ethernet Client", the MAC Address from the first Ethernet client that transmits data through the Bridge will be used. This setting is useful when connected to an Xbox or if there is only one Ethernet device connected to the Bridge. When multiple Ethernet devices are connected to the Bridge, it may not be obvious which MAC Address is being used.

If set to "WLAN Card", the MAC Address of the WLAN Card (typically written on the back of the card) will be used. When multiple Ethernet devices are connected to the Bridge, the MAC Address of the Bridge will not change.

Advanced wireless

Fragmentation threshold

Transmitted wireless packets larger than this size will be fragmented to maintain performance in noisy wireless networks. The valid range is 256..65535. Values larger than about 1560 will prevent fragmentation from taking place.

RTS threshold

Transmitted wireless packets larger than this size will use the RTS/CTS protocol to (a) maintain performance in noisy wireless networks and (b) prevent hidden nodes from degrading performance. The valid range is 1..65535. Values larger than about 1560 will prevent RTS/CTS from taking place.

Beacon period

In adhoc mode beacons are sent out periodically. This is the number of milliseconds between each beacon. The valid range is 20..1000.

802.11d

Check this box to enable support for receiving regional information from the access point.

ACK Timeout

The value is used for ack time out adjustment. It is useful for the long distance application. Following is a reference table for the ack timeout value and distance:

range	ack-timeout		
	5GHz	5GHz-turbo	2.4GHz-G
0km	default	default	default
5km	52	30	62
10km	85	48	96
15km	121	67	133
20km	160	89	174
25km	203	111	219
30km	249	137	368
35km	298	168	320
40km	350	190	375
45km	405	-	-

Antenna selection

Select antenna of non-MiMo radios for testing. The valid values are 0(auto-switching), 1(antenna 1) and 2(antenna 2).

Cloning

Cloning Mode

- WLAN Card
 - If set to "WLAN Card", the MAC Address of the WLAN Card will be used. When multiple Ethernet devices are connected to the Bridge, the MAC Address of the Bridge will not change.
- Ethernet Client
 - If set to "Ethernet Client", the MAC Address from the first Ethernet client that transmits data through the Bridge will be used. This means the client MAC address will become the alias address to the Bridge.

Advanced Wireless

Fragmentation threshold

Fragmentation Threshold is the maximum length of the frame beyond which payload must be broken up (fragmented) into two or more frames. Collisions occur more often for long frames because sending them occupies the channel for a longer period of time, increasing the chance that another station will transmit and cause collision. Reducing Fragmentation Threshold results in shorter frames that "busy" the channel for shorter periods, reducing packet error rate and resulting retransmissions. However, shorter frames also increase overhead, degrading maximum possible throughput, so adjusting this parameter means striking a good balance between error rate and throughput.

RTS threshold

RTS Threshold is the frame size above which an RTS/CTS handshake will be performed before attempting to transmit. RTS/CTS asks for permission to transmit to reduce collisions but adds considerable overhead. Disabling RTS/CTS can reduce overhead and latency in WLANs where all stations are close together but can increase collisions and degrade performance in WLANs where stations are far apart and unable to sense each other to avoid collisions (aka Hidden Nodes). If you are experiencing excessive collisions you can try turning RTS/CTS on or (if already on) reduce RTS/CTS Threshold on the affected stations.

Burst time

Maximum burst time is a feature based on the PRISM Nitro; a new WLAN software solution that more than triples 802.11g throughput in a mixed-mode environment and offers up to 50 percent greater throughput performance in 802.11g-only networks. PRISM Nitro is fully IEEE 802.11 compliant and uses prioritization algorithms and enhanced protection mechanisms to significantly increase wireless networking performance.

The recommended value for the maximum burst time for 11b or the mixed 11b/g environment is 650. The 11g only mode uses the value 1400.

Beacon Period

In wireless networking, a beacon is a packet sent by a connected device to inform other devices of its presence and readiness. When a wirelessly networked device sends a beacon, it includes with it a beacon interval which specifies the period of time before it will send the beacon again. The interval tells receiving devices on the network how long they can wait in low-power mode before waking up to handle the beacon. Network managers can adjust the beacon interval, usually measured in milliseconds (ms) or its equivalent, kilo microseconds (Kµsec).

802.11d

802.11d is a wireless network communications specification for use in countries where systems using other standards in the 802.11 family are not allowed to operate. The 802.11d specification is well suited for systems that want to provide global Roaming.

ACK Timeout

ACK Timeout

The value is used for ack time out adjustment. It is usefull for the long distance application. Following is a reference table for the ack timeout value and distance:

range	ack-timeout		
	5GHz	5GHz-turbo	2.4GHz-G
0km	default	default	default
5km	52	30	62
10km	85	48	96
15km	121	67	133
20km	160	89	174
25km	203	111	219
30km	249	137	368
35km	298	168	320
40km	350	190	375
45km	405	-	-

Antenna selection

Select antenna of non-MiMo radios for testing. The valid values are 0(auto-switching), 1(antenna 1) and 2(antenna 2).

When a packet is sent out from 802.11 Station A it will wait for an 'ACKnowledgement frame' from 802.11 Station B. Station A will only wait for a certain amount of time (ACK timeout) or ACK window. If the ACK is NOT received within that timeout period then the packet will be re-transmitted from Station A resulting in reduced throughput. When sending LOTS of packets as in 802.11g and 802.11a the constant re-transmission could cost severe performance degradation due to the ACK frame not making it back to 802.11 Station A in time. This will have a dramatic impact on the throughput of the link regardless of the quantity of signal strength and good receiver sensitivity.

Antenna Selection

* Please refer to [Appendix G](#) on page 58 for further information.

Access Point Mode

Default IP Address in Access Point Mode: **192.168.10.240**

To access the web control interface please open up a browser window and type in the factory default IP address in the URL.



Press Enter on your keyboard and a login prompt window similar to the one shown below will appear.



There is no default User name or Password. Leave User Name and Password field blank and then click OK.

Note: You may set a new password by clicking the Admin tab after you enter the Web Configuration page

Information

The screenshot shows the web interface for a TT 900 Access Point. The top navigation bar includes the Teletronics International Inc. logo and the product name 'TT 900 ACCESS POINT'. A left sidebar contains a menu with links for Information, Stations, Wireless, WDS, Security, Access, Admin, and Advanced. The main content area is titled 'Information' and contains a note about reloading the page. Below this is a white box titled 'Access Point Information' containing a table of device details.

Information
On this page you can get the current status about the device.

NOTE: You may need to reload this page to see the current settings.

Access Point Information	
Access Point Name:	TT Access Point
Radio Type:	Z900
MAC Address:	0060B36239DC
Firmware version:	C3.10.1 (0212)
SSID:	teletronics
Current transmit rate:	Automatic
Current channel:	10
Security:	None
IP address:	192.168.10.240 (Static)
Register Status:	Not Registered
Unit SysUpTime:	0d 0h 00m 27s

NOTE : You are using the empty username/password

@2006
Teletronics
International,
INC. All Rights
Reserved.

Under the main web interface home page you will see the following configuration menu pages:

Information, Stations, Wireless, WDS, Security, Access, Admin, Advanced. Detailed information on each section is provided below.

Stations

The screenshot shows the 'Associations' page in the web interface. The left sidebar menu is the same as in the previous screenshot. The main content area is titled 'Associations' and contains a note about reloading the page. Below this is a white box showing 'Total 0 stations associated' and a table header for associated stations.

Associations
This is a list of MAC addresses of stations that have associated to the access point.

NOTE: You may need to reload this page to see new changes.

Total 0 stations associated

MAC address	Mode	Rate	Signal	StationIdleTime
-------------	------	------	--------	-----------------

The Stations section will display all the associated clients along with the MAC address and basic RF related information on the Mode, Rate, Signal and StationIdleTime for each associated client.

Basic Wireless

On this page you can configure the basic 802.11a/g wireless settings. Any new settings will not take effect until the device is rebooted.

Wireless On/Off	<input checked="" type="radio"/> ON <input type="radio"/> OFF
	Enable/Disable wireless port.
Visibility Status	<input checked="" type="radio"/> Visible <input type="radio"/> Invisible
	When Invisibility is selected, this device will not broadcast its SSID in the beacons, so that each wireless client needs to explicitly know and use the SSID (Wireless Network Name).
Wireless Network Name (SSID)	<input type="text" value="teletronics"/>
	This is the wireless network name of this device. Stations that associate to this device should know this name.
Adaptive Radio Selection	<input type="checkbox"/>
	Check this box to enable Adaptive Radio feature in Dynamic Turbo mode. When this feature is enabled, Access Point stays out of turbo mode whenever it detects any non-turbo traffic on adjacent channels.
Auto Channel Select	<input type="checkbox"/>
	Check this box to enable Access Point to automatically select the best channel at start up. This may take upto 20 seconds and no clients will be able to associate during this period.
RF TX power	<input type="text" value="20"/>
	Select TX power. The valid range is 0..30 (1..1000mw) in unit of dBm. The actual TX power may be limited by your radio card model number. Example: for 200mw version, use 23 dbm.
802.11 Mode	<input type="text" value="Mixed 802.11g and 802.11b"/>
	This setting controls the types of 802.11 wireless clients or stations that can connect to this AP.
Super mode	<input type="text" value="Disabled"/>
	Select super mode.
Transmission rate (Mbits/s)	<input type="text" value="Best (automatic)"/>
	This is the speed at which the device will transmit data. Normally you should select 'best' here, although if your wireless network is unusually noisy or quiet you may wish to use a fixed low or high rate.
Country & Region	<input type="text" value="united states - Region 4"/>
	Select the proper country or region where this device is installed.
Channel	<input type="text" value="913 MHz - CH10"/>
	This is the radio channel that the access point will use. Note that 802.11g and 802.11b use only 2.4 GHz channels, and 802.11a uses only 5 GHz channels.
	DISCLAIMER : Each device should be configured to use the proper regional setting that does NOT violate the radio regulatory at the installed location. Teletronics takes NO responsibility of misusing the regional settings. If you find the local radio regulatory differs with teletronics' region/channel list, please email your findings to support@teletronics.com, thanks!

Wireless On/Off

Enable or disable the wireless port.

Wireless Network Name (SSID)

Network Name is also known as SSID, which stands for Service Set Identifier. This is where you're going to setup the Service Set Identifier name for this AP. Remember that the SSID is cap sensitive just like the password.

Visibility Status

This controls the SSID broadcasting function. If enabled, the SSID will be broadcasted to all wireless clients in the area. If disabled, wireless clients will not be able to pickup the SSID but must explicitly know the SSID of the unit in order to associate. The recommended practice is to set the visibility status to invisible after setting up the wireless network.

Transmission rate (Mbits/s)

This option indicates the transmission rate of the bridge. Specify the rate according to the speed of your wireless network from the list. Most of the time the default setting, Best (automatic), should be selected for best performance. The setting can be adjusted manually if the link quality and signal strength are unusually low or high to get the best performance.

802.11 Mode

Wireless mode allows the user to select whether this Access Point will connect to an 802.11b only network, an 802.11g only network, an 802.11a only network or both b/g networks. For b or g only wireless devices on the network, selecting 802.11b or 802.11g only mode will provide better performance than mixed mode. For TT900 the options of 802.11b, 802.11g only or Mixed 802.11g and 802.11b are available.

Adaptive Radio Selection

When using dynamic turbo mode with a compatible Atheros radio chipset, this option allows the Access point to switch to non-turbo mode when non-turbo traffic is detected and vice versa.

Auto Channel Select

Check this box to enable the Access Point to automatically select the best channel at start up. This may take up to 20 seconds and during this period no clients will be able to associate.

RF Transmit Power

This section controls the power output for the mini-PCI radio card. The valid input range for this section is in the range of 0-30 in dBm units. The default value is 23 dBm or 200mW.

Channel

Channels are important to understand because they affect the overall capacity of your Wireless LAN. A channel represents a narrow band of radio frequency. A radio frequency modulates within a band of frequencies; as a result there is a limited amount of bandwidth within any given range to carry data. It is important that the frequencies do not overlap or else the throughput would be significantly reduced as the network sorts and reassembles the data packets sent over the air.

For the TT900: 902-928 GHz frequency range, there are only 1 channel out of 2 channels available that do not overlap with one another.

- Channel 1 = 913 MHz
- Channel 2 = 918 MHz

WDS (Wireless Distribution System)

WDS

Wireless Distribution System (WDS). When (WDS) is enabled, this access point functions as a wireless repeater and is able to wirelessly communicate with other APs. Please note that WDS is incompatible with WPA - both features can not be used at the same time. You can specify the MAC addresses of up to six other WDS-capable APs.

Enable WDS

Check this box to enable this access point to communicate with other APs over WDS links.

AP MAC address 1

AP MAC address 2

AP MAC address 3

AP MAC address 4

AP MAC address 5

AP MAC address 6

Save Cancel

Enable WDS

The Wireless Distribution System (Repeater) functionality enables this AP to support wireless traffic to other WDS relay Access Points. In other words it is like bridging between the 2 access points in order to extend the reach of the wireless network beyond that of a single AP. By enabling the WDS feature the coverage area of the wireless network is thus extended for authenticated client devices that can roam from this Access Point to another. WDS can extend the reach of your network into areas where cabling might be difficult. The TT900 in Access Point mode can support up to 6 other Access Points for WDS communication.

Enter the MAC Address of other Access Points in the area that you want to add to the WDS. The MAC Address of this Access Point should be also be added to other access points in the same WDS network to enable intra-AP communication.

*** Please Consult [Appendix E](#) on page 54 for further information.**

Security

Security and Encryption Settings

On this page you can set the 802.11a/g security and encryption options. Any new settings will not take effect until the device is rebooted.

WPA configuration

Enable WPA Authenticator to require stations to use high grade encryption and authentication.

WPA Enable

WPA Mode Select the WPA Mode.

Cipher Type Select the cipher type.

PSK Enter a text pass phrase between 8 and 63 characters. Leave blank to enable 802.1X Authentication.

WPA Group Key Update Interval seconds.

802.1X configuration

When 802.1X authentication is enabled then the AP will authenticate clients via a remote RADIUS server.

802.1X enabled

Authentication timeout (mins)

RADIUS server IP address

RADIUS server port number

RADIUS server shared secret

MAC Address Authentication

RADIUS server IP address

RADIUS server port number

RADIUS server shared secret

MAC Address Authentication

WEP configuration

WEP is the wireless encryption standard. To use it you must enter the same key (s) into the access point and all stations that associate to it. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. If you leave a key box blank then this means a key of all zeros.

Enable WEP Check this box to enable WEP. For the most secure use of WEP, also set the authentication type to "Shared Key" when WEP is enabled

Default WEP key to use Select the key to be used as the default key. Data transmissions are always encrypted using the default key. The other keys can only be used to decrypt received data.

Authentication Select the type of authentication used when connecting to stations. 'Open' is used if anyone can connect to this device. 'Shared key' is used if both devices must know the encryption key.

WEP key lengths Select the WEP key size. This length applies to all keys.

WEP key 1

WEP key 2

WEP key 3

WEP key 4

WPA Configuration

Short for Wi-Fi Protected Access, WPA is a Wi-Fi standard that was designed to improve upon the security features of WEP. WPA has the following improvements over WEP:

- Improved data encryption through temporal key integrity protocol (TKIP). TKIP scrambles the keys using a hashing algorithm. By adding an integrity-checking feature, TKIP ensures that keys have not been tampered with.
- User authentication through the Extensible Authentication Protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA Enable

This option enables the WPA Authenticator. Note that any client that does not support the WPA standard will not be able to handshake / authenticate with a WPA enabled device.

WPA Mode

- WPA
 - Designed to secure present and future versions of IEEE 802.11 devices, WPA is a subset of the IEEE 802.11i specification. WPA addresses all known vulnerabilities in WEP. WPA also provides user authentication, since WEP lacks any means of authentication. WPA replaces WEP with a strong new encryption technology called Temporal Key Integrity Protocol (TKIP) with Message Integrity Check (MIC). It also provides a scheme of mutual authentication using IEEE 802.1X/Extensible Authentication Protocol (EAP) authentication or pre-shared key (PSK) technology. WPA was designed and has been scrutinized by well-known cryptographers. It can be implemented immediately and inexpensively as a software or firmware upgrade to most existing Wi-Fi CERTIFIED™ access points and client devices with minimal degradation in network performance. WPA offers standards-based, Wi-Fi CERTIFIED security. It assures users that the Wi-Fi CERTIFIED devices they buy will be cross-vendor compatible. When properly installed, WPA provides a high level of assurance to enterprises, small businesses and home users that data will remain protected and that only authorized users may access their networks. For enterprises that have already deployed IEEE 802.1X authentication, WPA offers the advantage of leveraging existing authentication databases and infrastructure.
- WPA2
 - WPA2 is the second generation of WPA security; providing enterprise and consumer Wi-Fi® users with a high level of assurance that only authorized users can access their wireless networks. Launched in September 2004 by the Wi-Fi Alliance, WPA2 is the certified interoperable version of the full IEEE 802.11i specification which was ratified in June 2004. Like WPA, WPA2 supports IEEE 802.1X/EAP authentication or PSK technology. It also includes a new advanced encryption mechanism using the Counter-Mode/CBC-MAC Protocol (CCMP) called the Advanced Encryption Standard (AES). AES satisfies U.S. government security requirements. It has been adopted as an official government standard by the U.S. Department of Commerce and the National Institute of Standards and Technology (NIST). Organizations that require the AES encryption available in WPA2 should be aware that upgrading to it may require new hardware. Section II of this document offers a roadmap for organizations planning to upgrade to WPA2. Considerations for its deployment are outlined in Section III.

Cipher Type

- TKIP
 - Temporal Key Integrity Protocol is an upgrade to the WEP known as WEP 1.1 that fixes known security problems in WEP's implementation of the RC4 stream cipher. TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with.
- AES
 - Advanced Encryption Standard (Rijndael Cypher) is the U.S. government's next-generation cryptography algorithm, which will replace DES and 3DES. AES works at multiple network layers simultaneously. AES Supports 128, 192 and 256 bit keys. Unlike the older standard, AES and 802.11i (WEP version 2) are based on 32bit processing.
- TKIP and AES
 - If clients support both the TKIP and AES standards then this would be the strongest cipher type to use that combines both TKIP and AES security.

PSK

PSK stands for Pre-Shared-Key and serves as a password. User may key in 8 to 63 characters string to set the password and activate 802.1x Authentication. Note that the same password must be used at both ends of the communication link (access point and client end).

WPA Group Key Update Interval

The Group Key (Group Transient Key) is a shared key among all Supplicants connected to the same AP, and is used to secure multicast/broadcast traffic. It is not used for normal unicast traffic. A pair wise Transient Key secures the unicast traffic. Group Key renewal controls how often the Group Transient Key is changed. The Group Key renewal does not control the update period for the pair wise Transient Key. The pair wise Transient Key is changed each time the Supplicant authenticates or re-authenticates.

802.1X Configuration

Remote RADIUS server configuration settings. There are two sections to setup 2 RADIUS servers for the TT900 to connect to. At any given time the TT900 will connect to one RADIUS server for authentication and will use the other one as a backup if that option is configured.

802.1X enabled

Option that enables or disables remote RADIUS authentication.

Authentication timeout (mins)

The default value is 60(minutes). When the time expires, the device will re-authenticate with RADIUS server.

RADIUS server IP address

Enter the RADIUS server IP address.

RADIUS server port number

Port used for RADIUS, the port number must be the same as the RADIUS server's, normally the port is 1812.

RADIUS server shared secret

When registered with a RADIUS server, a password will be assigned. This would be the RADIUS server shared secret.

MAC Address Authentication

Use client MAC address for authentication with RADIUS server.

WEP Configuration

Short for Wired Equivalent Privacy, a security protocol for wireless local area networks (WLANs) defined in the 802.11b standard. WEP is designed to provide the same level of security as that of a wired LAN.

Enable WEP

To enable the WEP Authenticator

Default WEP key to use

- WEP Key 1-4

Select the key to be used as the default key. Data transmissions are always encrypted using the default key. The other keys can only be used to decrypt received data.

Authentication

- Open - Open system authentication involves a two-step authentication transaction sequence. The first step in the sequence is the identity assertion and request for authentication. The second step in the sequence is the authentication result. If it is "successful", the station shall be mutually authenticated. Open system authentication does not provide authentication. It provides identification using the wireless adapter's MAC address. Open system authentication is used when no authentication is required. It is the default authentication algorithm.

Open system authentication uses the following process:

1. The authentication-initiating wireless client sends an IEEE 802.11 authentication management frame that contains its identity.
 2. The receiving wireless AP checks the initiating station's identity and sends back an authentication verification frame.
 3. With some wireless APs, you can configure the MAC addresses of allowed wireless clients. However, configuring the MAC address does not provide sufficient security because the MAC address of a wireless client can be spoofed.
- Shared Key - Shared key authentication supports authentication of stations as either a member of those who know a shared secret key or a member of those who do not. Shared key authentication is not secure and is not recommended for use. It verifies that an authentication-initiating station has knowledge of a shared secret. This is similar to pre-shared key authentication for Internet Protocol security (IPSec). The 802.11 standard currently assumes that the shared secret is delivered to the participating wireless clients by means of a more secure channel that is independent of IEEE 802.11. In practice, a user manually types this secret for the wireless AP and the wireless client.

Shared key authentication uses the following process:

6. The authentication-initiating wireless client sends a frame consisting of an identity assertion and a request for authentication.
7. The authenticating wireless node responds to the authentication-initiating wireless node with challenge text.
8. The authentication-initiating wireless node replies to the authenticating wireless node with the challenge text that is encrypted using WEP and an encryption key that is derived from the shared key authentication secret.
9. The authentication result is positive if the authenticating wireless node determines that the decrypted challenge text matches the challenge text originally sent in the second frame. The authenticating wireless node sends the authentication result.
10. Because the shared key authentication secret must be manually distributed and typed, this method of authentication does not scale appropriately in large infrastructure network mode, such as corporate campuses.

WEP key lengths

64 bit (10 Hex Digit)

WEP Key type	Example
64-bit WEP with 5 characters	Key1= 2e3f4 Key2= 5y7js Key3= 24fg7 Key4= 98jui
64-bit WEP with 10 hexadecimal digits ('0-9', 'A-F')	Key1= 123456789A Key2= 23456789AB Key3= 3456789ABC Key4= 456789ABCD

128 bit (26 Hex Digit)

WEP Key type	Example
128-bit WEP with 13 characters	Key1= 2e3f4w345ytre Key2= 5y7jse8r4i038 Key3= 24fg70okx3fr7 Key4= 98jui2wss35u4
128-bit WEP with 26 hexadecimal digits ('0-9', 'A-F')	Key1= 112233445566778899AABBCDEF Key2= 2233445566778899AABBCCDDEE Key3= 3344556677889900AABBCCDDFF Key4= 44556677889900AABBCCDDEEFF

Access

Access Control

On this page you can enable Access Control. If enabled, only the MAC addresses entered into the 'MAC address' boxes are allowed to associate to this AP. Note that you can cut and paste the addresses from the 'Station List' page into the MAC address boxes. Any new settings will not take effect until the device is rebooted.

Enable access control (Check this box to enable access control.)

MAC address 1	<input type="text"/>
MAC address 2	<input type="text"/>
MAC address 3	<input type="text"/>
MAC address 4	<input type="text"/>
MAC address 5	<input type="text"/>
MAC address 6	<input type="text"/>
MAC address 7	<input type="text"/>
MAC address 8	<input type="text"/>
MAC address 9	<input type="text"/>
MAC address 10	<input type="text"/>

Access Control

Enable access control

If enabled, this feature allows you to associate up to 64 different units/devices by MAC addresses. Any MAC addresses not programmed into the list will be prohibited from associating with this unit.

Administration

On this page you can configure the IP address used by the Web server running on this device. For "static" mode, the IP address settings are given here. For "DHCP" mode, these settings are supplied by a DHCP server on your network. You can also change the password, reboot the device, or reset all settings to their factory defaults. If you have changed any settings it is necessary to reboot the device for the new settings to take effect.

Device name

Device name

This is the name that the device will use to identify itself to external configuration and IP-address-finding programs. This is not the same as the SSID. It is okay to leave this blank if you are not using these programs.

SNMP Setting

SNMP enabled

Check this option if you need pull information from the bridge thru SNMP.

Community

IP settings

IP Address Mode Static DHCP Client

Select 'DHCP' to get the IP settings from a DHCP server on your network. Select 'Static' to use the IP settings specified on this page.

Default IP address

Type the IP address of your device

Default subnet mask

The subnet mask specifies the network number portion of an IP address. The factory default is 255.255.255.0.

Default gateway

This is the IP address of the gateway that connects you to the internet. The factory default is 192.168.1.1.

Security

User name

This is the user name that you must type when logging in to these web pages.

Administrator password

This is the password that you must type when logging in to these web pages. You must enter the same password into both boxes, for confirmation

Device Name

Device Name

This is the name that the Access Point will use to identify itself to external configuration and IP address programs. This is not the same as the SSID. It is okay to leave this blank if you are not using these programs.

SNMP Setting

SNMP enabled

Option to enable or disable SNMP support

Community

The SNMP Read-only Community string is like a user id or password that allows access to a router's or other device's statistics. InterMapper sends the community string along with all SNMP requests. If the community string is correct, the device responds with the requested information. If the community string is incorrect, the device simply discards the request and does not respond.

Factory default setting for the read-only community string is set to "public". It is standard practice to change all the community strings so that outsiders cannot access/read information about the internal network. (In addition, the administrator may also employ firewalls to block any SNMP traffic to ports 161 and 162 on the internal network.)

Change this value to have InterMapper use the new string when querying SNMP devices.

IP Settings

IP Address Mode

- **Static**
 - Manually setup a static IP address for this device.
- **DHCP**
 - Set up the access point as a DHCP client which will pick up an IP from a DHCP server.

Default IP address

The default Access Point Mode IP address: 192.168.10.240

Default subnet mask

The factory subnet default value is 255.255.255.0

Default gateway

The factory gateway default address is 192.168.10.1

Security

This section is used to set up the administrative login name and password.


User name

This is the user name that you must type when logging into the web interface.

Administrator Password

This is the password that you must type when logging into the web interface. You must enter the same password into both boxes for confirmation.

Syslog

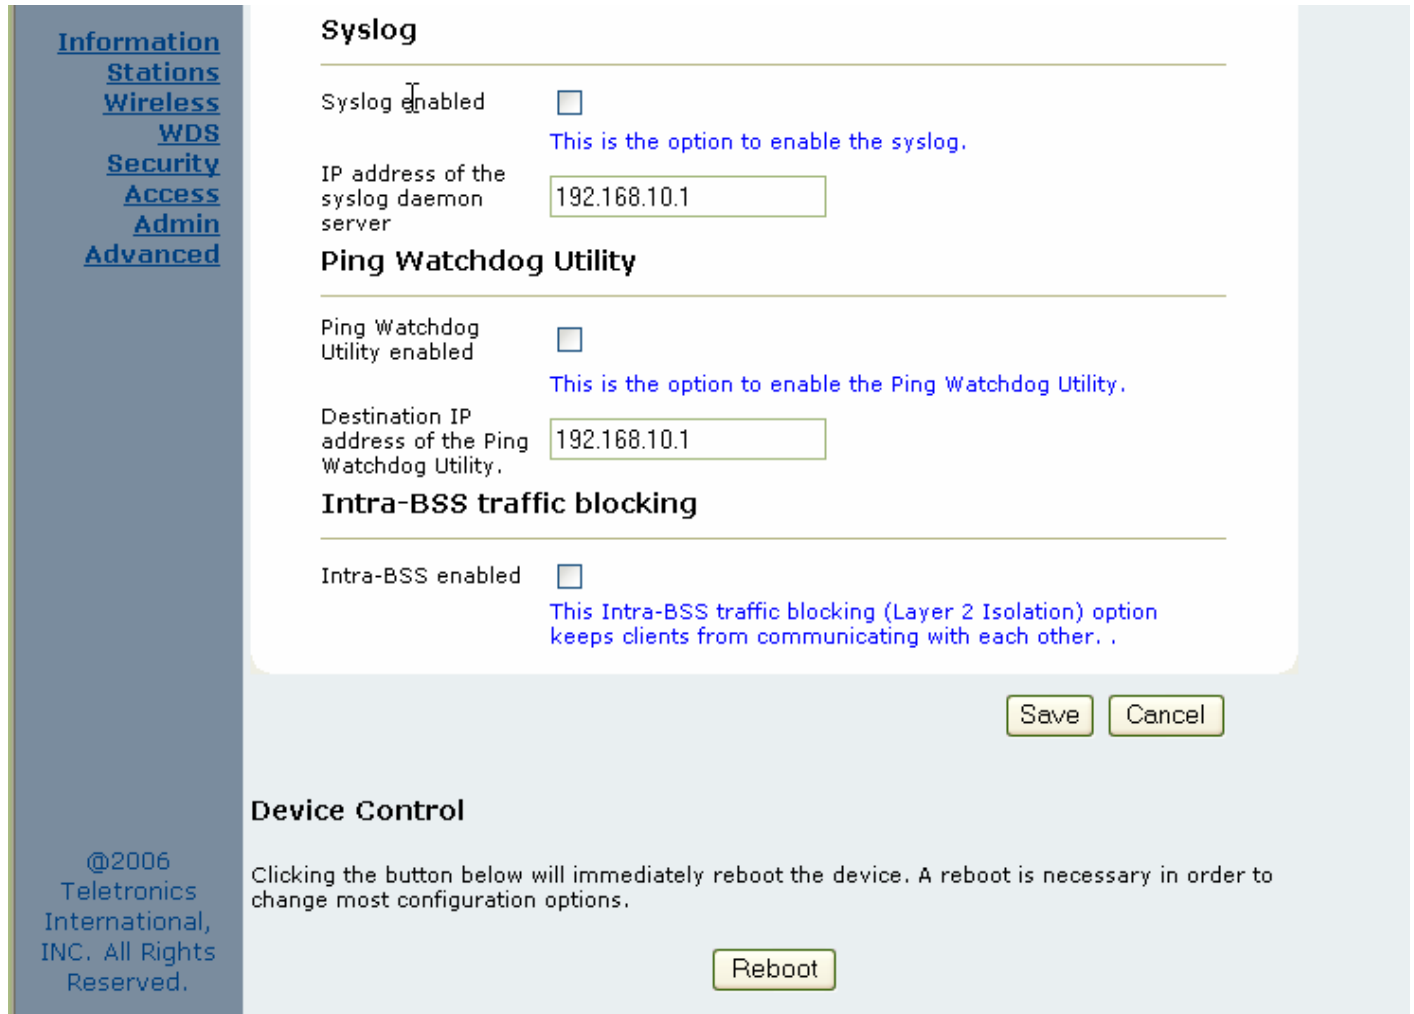

Syslog

Syslog enabled

This is the option to enable the syslog.

IP address of the syslog daemon server

Ping Watchdog Utility

Ping Watchdog Utility enabled

This is the option to enable the Ping Watchdog Utility.

Destination IP address of the Ping Watchdog Utility

Intra-BSS traffic blocking

Intra-BSS enabled

This Intra-BSS traffic blocking (Layer 2 Isolation) option keeps clients from communicating with each other. .

Save Cancel

Device Control

Clicking the button below will immediately reboot the device. A reboot is necessary in order to change most configuration options.

Reboot

@2006 Teletronics International, INC. All Rights Reserved.

Syslog Enabled

Option to enable or disable Syslog support.

Syslog Daemon Server

The Syslog server IP address input box.

Ping Watchdog Utility

Ping Watchdog Utility Enabled

If enabled, the Ping Watchdog utility tracks the TCP/IP link between this device and another remote destination at the other end of the wireless link. When the remote destination is unreachable (loss of connection) the Ping Watchdog Utility will reboot the unit in an attempt to re-establish the connection.

Destination IP address of the Ping Watchdog Utility

This is the IP address of the remote destination.

Intra-BSS traffic blocking

This option blocks clients in the same BSS from communicating with each other. (Layer 2 Isolation)

Device Control

This section has functions that will allow the TT900 to Reboot and Reset the system configuration to factory defaults.

Firmware Upgrade

To upgrade the firmware, enter the name of the firmware upgrade file, and click on the upgrade button below.

File to upload:

The upload may take up to 60 seconds.

Register

To register your product, input your S/N and click the register button below. By default, you needn't register your product. Whenever you change the radio card, you need ask Teletronics Inc for S/N to regist. Please get the MAC address of the radio card and call teletronics technical support. You will get a S/N and then input here. If your product is not registered, you can not change some of the wireless settings, such as SSID and channel.

S/N:

Firmware Upgrade

This section allows the TT900 firmware to be upgraded or changed directly from the web interface. Click on the Browse button to select a file from the host machine.

Register

The TT900 has implemented a hardware modification authorization process to prevent use by fraudulent hardware from other manufacturers. This will require any hardware change on the radio card used on the TT900 to input a serial code generated based on each unique MAC address. Please contact Teletronics Support to a pickup a valid serial number to deactivate the pre-registration protection after a radio card swap. If the unit is not registered some features such as SSID and Wireless Channel selection will be disabled.

Advanced



TT™ 900 ACCESS POINT

- Information
- Stations
- Wireless
- WDS
- Security
- Access
- Admin
- Advanced

Advanced

On this page you can configure the advanced 802.11a/g wireless settings. Any new settings will not take effect until the device is rebooted.

Advanced wireless

Fragmentation threshold

Transmitted wireless packets larger than this size will be fragmented to maintain performance in noisy wireless networks. The valid range is 256..65535. Values larger than about 1560 will prevent fragmentation from taking place.

RTS threshold

Transmitted wireless packets larger than this size will use the RTS/CTS protocol to (a) maintain performance in noisy wireless networks and (b) prevent hidden nodes from degrading performance. The valid range is 1..65535. Values larger than about 1560 will prevent RTS/CTS from taking place.

Beacon period

Access point beacons are sent out periodically. This is the number of milliseconds between each beacon. The valid range is 20..1000.

DTIM interval

This controls the rate at which broadcast and multicast packets are delivered to stations in power save mode. A value of '1' means send these packets after each beacon, '2' means after every second beacon, etc. The valid range is 1..255.

802.11d

Check this box to enable support for sending regional information to the stations.

Advanced Wireless

Fragmentation threshold

Fragmentation Threshold is the maximum length of the frame beyond which payload must be broken up (fragmented) into two or more frames. Collisions occur more often for long frames because sending them occupies the channel for a longer period of time, increasing the chance that another station will transmit and cause collision. Reducing Fragmentation Threshold results in shorter frames that "busy" the channel for shorter periods, reducing packet error rate and resulting retransmissions. However, shorter frames also increase overhead, degrading maximum possible throughput, so adjusting this parameter means striking a good balance between error rate and throughput.

RTS threshold

RTS Threshold is the frame size above which an RTS/CTS handshake will be performed before attempting to transmit. RTS/CTS asks for permission to transmit to reduce collisions but adds considerable overhead. Disabling RTS/CTS can reduce overhead and latency in WLANs where all stations are close together but can increase collisions and degrade performance in WLANs where stations are far apart and unable to sense each other to avoid collisions (aka Hidden Nodes). If you are experiencing excessive collisions you can try turning RTS/CTS on or (if already on) reduce RTS/CTS Threshold on the affected stations.

Burst time

Maximum burst time is a feature based on the PRISM Nitro; a new WLAN software solution that more than triples 802.11g throughput in a mixed-mode environment and offers up to 50 percent greater throughput performance in 802.11g-only networks. PRISM Nitro is fully IEEE 802.11 compliant and uses prioritization algorithms and enhanced protection mechanisms to significantly increase wireless networking performance. The recommended value for the maximum burst time for 11b or the mixed 11b/g environment is 650. The 11g only mode uses the value 1400.

Beacon Period

In wireless networking, a beacon is a packet sent by a connected device to inform other devices of its presence and readiness. When a wirelessly networked device sends a beacon, it includes with it a beacon interval which specifies the period of time before it will send the beacon again. The interval tells receiving devices on the network how long they can wait in low-power mode before waking up to handle the beacon. Network managers can adjust the beacon interval, usually measured in milliseconds (ms) or its equivalent, kilo microseconds (Kμsec).

DTIM interval

A Delivery Traffic Indication Message (DTIM) is a signal sent as part of a beacon by an access point to a client device in sleep mode, alerting the device to a packet awaiting delivery. A DTIM interval, also known as a Data Beacon Rate, is the frequency at which an access point's beacon will include a DTIM. This frequency is usually measured in milliseconds (ms) or its equivalent, kilo microseconds (Kμsec).

802.11d

802.11d is a wireless network communications specification for use in countries where systems using other standards in the 802.11 family are not allowed to operate. The 802.11d specification is well suited for systems that want to provide global roaming.

ACK Timeout

ACK Timeout

The value is used for ack time out adjustment. It is usefull for the long distance application. Following is a reference table for the ack timeout value and distance:

range	ack-timeout		
	5GHz	5GHz-turbo	2.4GHz-G
0km	default	default	default
5km	52	30	62
10km	85	48	96
15km	121	67	133
20km	160	89	174
25km	203	111	219
30km	249	137	368
35km	298	168	320
40km	350	190	375
45km	405	-	-

Antenna selection

Select antenna of non-MiMo radios for testing. The valid values are 0(auto-switching), 1(antenna 1) and 2(antenna 2).

When a packet is sent out from 802.11 Station A it will then wait for an 'ACKnowledgement frame' from 802.11 Station B. Station A will only wait for a certain amount of time (ACK timeout) or ACK window. If the ACK is NOT received within that timeout period then the packet will be re-transmitted from Station A resulting in reduced throughput. When sending lots of packets as in 802.11g and 802.11a the constant re-transmission could cost severe performance degradation due to the ACK frame not making it back to 802.11 Station A in time. This will have a dramatic impact on the throughput of the link regardless of signal strength or good receiver sensitivity.

Antenna Selection

Antenna
selection

Use antenna #1

Select antenna of non-MiMo radios for testing. The valid values are 0(auto-switching), 1(antenna 1) and 2(antenna 2).

* Please refer to [Appendix G](#) on page 58 for further information.

Appendix A: Warranty Policy

Limited Warranty

All Teletronics' products are warranted to the original purchaser to be free from defects in materials and workmanship under normal installation, use, and service for a period of one (1) year from the date of purchase.

Under this warranty, Teletronics International Inc. shall repair or replace (at its discretion) during the warranty period, any part that proves to be defective in material of workmanship under normal installation, use and service, provided the product is returned to Teletronics International Inc. or to one of its distributors with transportation charges prepaid. Returned products must include a copy of the purchase receipt. In the absence of a purchase receipt, the warranty period shall be one (1) year from the date of manufacture.

This warranty shall be voided if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or party other than a Teletronics International, Inc. employee or authorized service facility, or any use in violation of instructions furnished by Teletronics International, Inc.

This warranty is also rendered invalid if this product is removed from the country in which it was purchased, if it is used in a country in which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in communications laws, this product may be illegal for use in some countries. Teletronics International, Inc. assumes no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it is intended.

IN NO EVENT SHALL TELETRONICS INTERNATIONAL, INC. BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental or consequential damages, so the above exclusion or limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Appendix B: RMA Policy

Product Return Policy

It is important to us that all Teletronics' products are bought with full confidence. If you are not 100% satisfied with any product purchased from Teletronics you may receive a prompt replacement or refund subject to the terms and conditions outlined below.

IMPORTANT: Before returning any item for credit or under warranty repair, you must obtain a Return Merchandise Authorization (RMA) number by filling out the RMA form. Products will not be accepted without an RMA number. All products being shipped to Teletronics for repair / refund / exchange must be freight prepaid (customer pays for shipping). For all under warranty repair/replacement, Teletronics standard warranty applies.

30-Day full refund or credit policy:

1. Product was purchased from Teletronics no more than 30 day prior to the return request.
2. All shipping charges associated with returned items are non-refundable.
3. Products are returned in their original condition along with any associated packaging, accessories, mounting hardware and manuals. Any discrepancy could result in a delay or partial forfeiture of your credit.

Unfortunately Teletronics cannot issue credits for:

1. Products not purchased from Teletronics directly. If you purchased from a reseller or distributor you must contact them directly for return instructions.
2. Damaged items as a result of misuse, neglect or improper environmental conditions.
3. Products purchased directly from Teletronics more than 30 days prior to a product return request.

To return any product under 1 year warranty for repair/replacement, follow the RMA procedure.

Appendix C: Regulatory Information

Statement of Conditions

We may make improvements or changes in the product described in this documentation at any time. The information regarding the product in this manual are subject to change without notice.

We assume no responsibility for errors contained herein or for direct, indirect, special, incidental, or consequential damages with the furnishing, performance or use of this manual or equipment supplied with it, even if the suppliers have been advised of the possibility of such damages.

Electronic Emission Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Information

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph: The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to overcome the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The equipment is for home or office use.

Important Note

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the antenna and your body and must not be co-located or operated in conjunction with any other antenna or transmitter.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Appendix D: Contact Information

Need to contact Teletronics?

Visit us online for information on the latest products and updates to your existing products at:

<http://www.teletronics.com>

Can't find information about a product you want to buy on the web? Do you want to know more about networking with Teletronics products?

Give us a call at: 301-309-8500 or fax your request to: 301-309-8551

For technical support issues you can e-mail us at: support@teletronics.com

If any Teletronics product proves defective during its warranty period, you can email the Teletronics Return Merchandise Authorization department to obtain a Return Authorization Number at: rma@teletronics.com


(Details on Warranty and RMA issues can be found in [Appendix A](#) and [B](#))

Appendix E: WDS Explained

One of the requirements for a WDS network is that the operational frequency channel on all the APs must be the same. This is one of the reasons why there is a huge bandwidth penalty when setting up a wireless network in WDS mode.


How to properly configure your APs in a WDS network will foremost depend on the locations of your wireless hotspots. Please take a look at the following two WDS topology examples:

WDS in a Star Configuration:

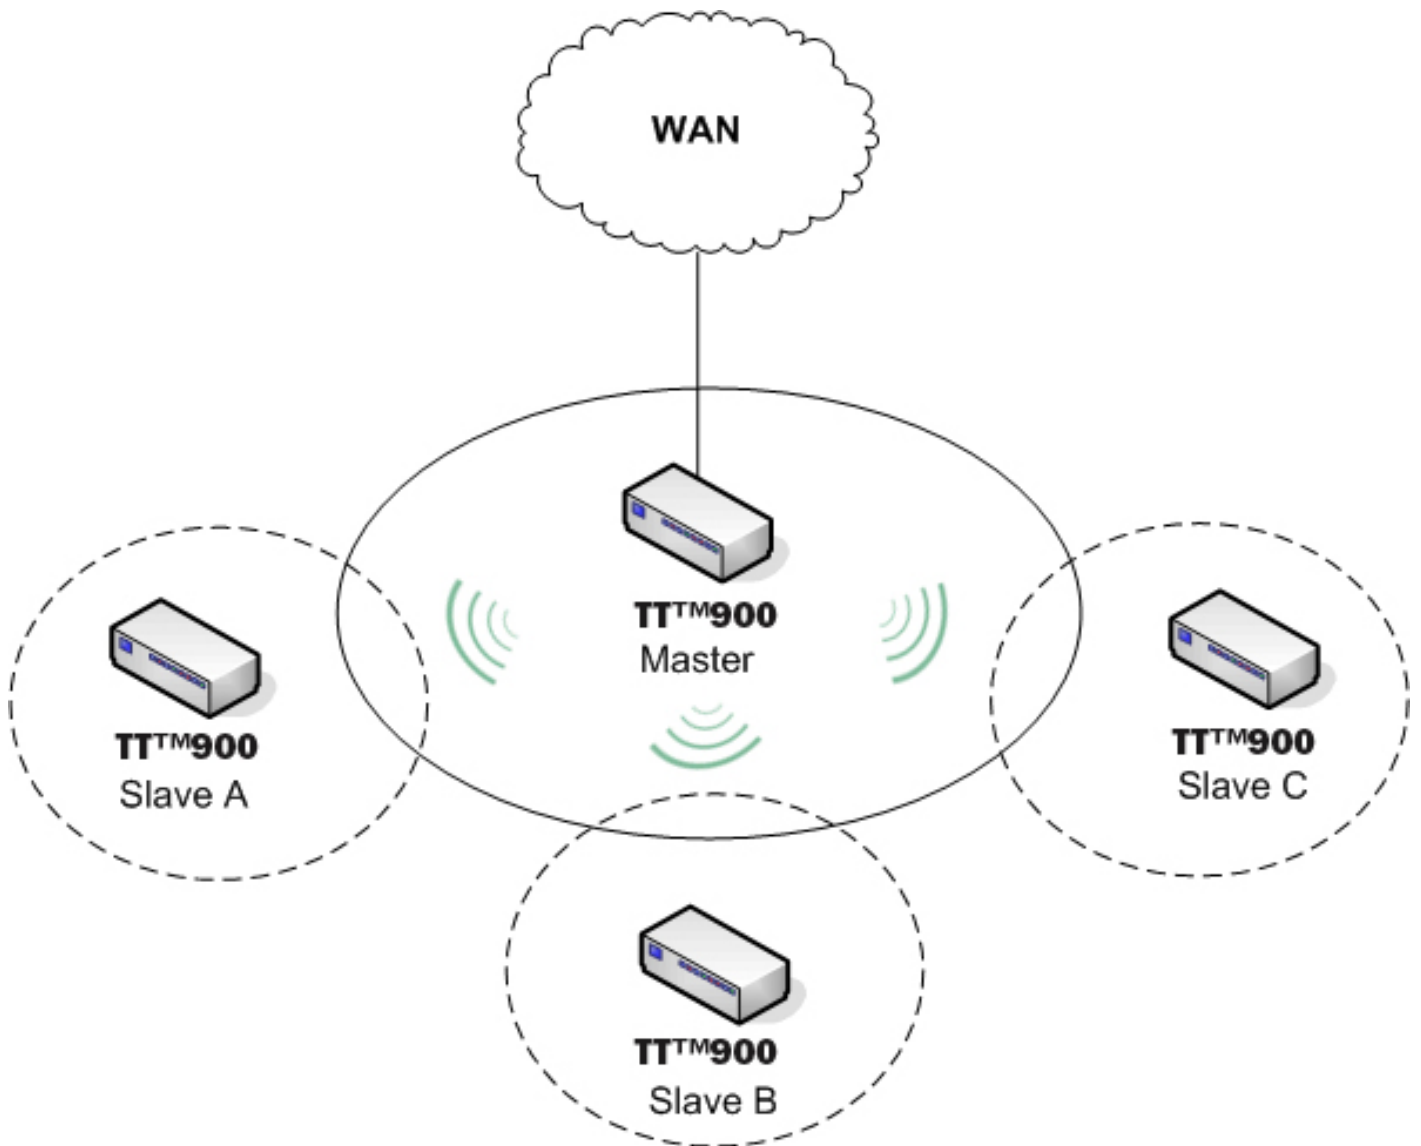

This is the mode to use if you're expanding the hotspots in the area around your master AP that is connected to the WAN. What you'll need to do is enable WDS and ACL on all the APs. Then input each of the MAC addresses of Slave A,B,C into the Master AP under both the WDS and ACL section. For the Slave APs A,B,C you'll input only the MAC address of the Master AP into the WDS and ACL list to limit them to direct their traffic through the Master AP only.

WDS in Chain Configuration:

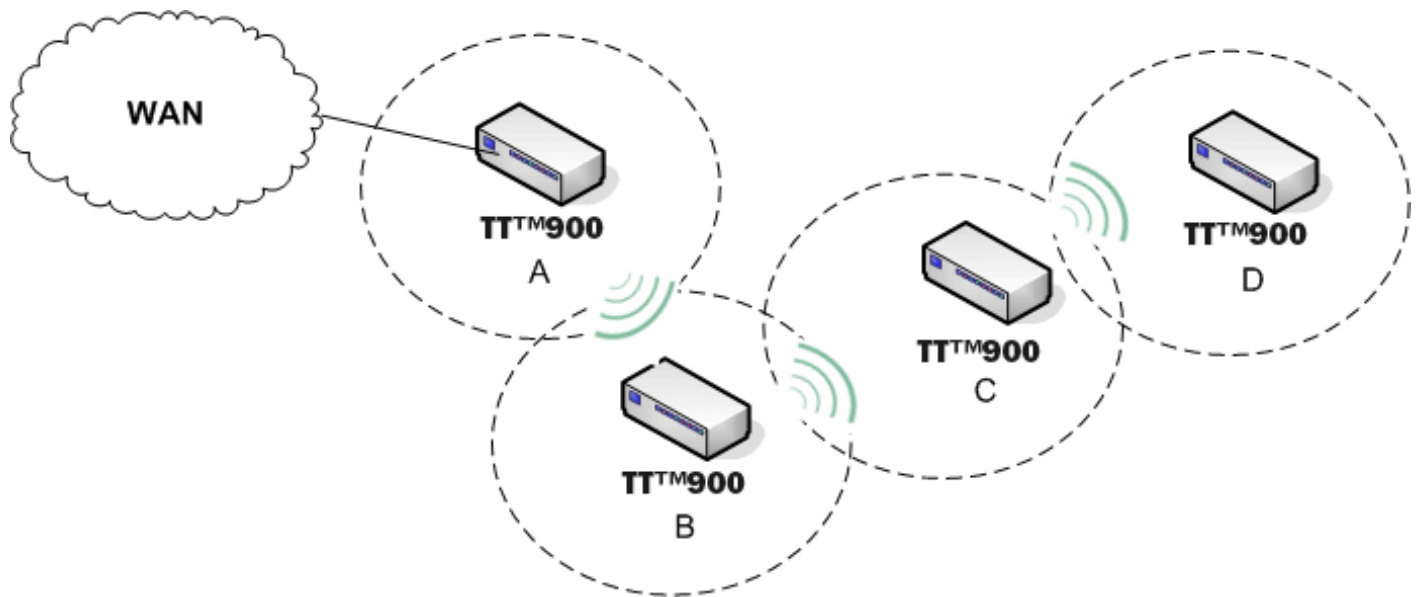

In this configuration setup example you'll be expanding your wireless network coverage that will span an area in length.

- AP A will have only AP B's MAC address in its WDS and ACL configuration setting.
- AP B will have AP A and C's MAC address in its WDS and ACL configuration setting.
- AP C will have AP B and D's MAC address in its WDS and ACL configuration setting.
- AP D will have only AP C's MAC address in its WDS and ACL configuration setting.

Appendix F: TT900 Upgrade FAQ

How to upgrade?

The TT900 could be upgraded either through the web interface or from EZ-Manager. Please check [Web Configuration Interface](#) and [Installation](#) sections of this manual for detailed instructions.

Do I need an Activation Key after flashing with a newer firmware, 3.7.x or higher?

No. All the TT900 units shipped from Teletronics are already activated. Since Firmware 3.1.7X and 3.7.X or higher, Teletronics has now removed the necessary step to provide an activation key to change from SU to AP and vice versa in our TT900 product line. For example, if you have a TT900 in SU mode with 3.6.0 firmware, the activation key is not required if you upgrade to either 3.7.0 (SU mode) or 3.7.1 (AP mode), or later.

Do I need an Activation Key after flashing with an older firmware, 3.6.x or lower?

You might need an activation key for older firmware. Please check the upgrade guide released with the older firmware.

Do I need an Activation Key after swapping out with another radio card?

Yes, if the radio card is swapped out with another card an activation key will still be required. This rule will apply to all radio cards swapped out with a different MAC address from the original card.

Which firmware to upgrade?

Currently there are two PCB Hardware revisions V3.0 and V5.0.0, both have 4MB Flash on the board. However the old firmware 3.1.x released for our first batch back in year 2005 utilized 2MB flash only, while the firmware 3.2.x (or above) utilized the whole 4MB flash.

The firmware revision 3.1.X and 3.2.X (or above) are not interchangeable due to the different flash size utilization. If you received boards by default with firmware 3.1.X then you have the 2M version. If you received boards by default with firmware 3.2.X or above then you have the 4M version. If you were to upgrade a 4M unit with a 2M firmware the unit will show no change after the flashing process.

For each release, we publish 2 series of firmware, one for 2M version and one for 4M version. Function and performance wise, there's no difference between these two. So the customer with 2M version will continue to enjoy the latest feature upgrades and bug fixes. For instance, 3.1.70 is the 2M version, while the counterpart 4M version is 3.7.0.

What does the prefixed Alphabet mean from version 3.9.x or later?

You probably notice the new version name changed to Cx.x.x since C3.9.0 and C3.9.1. The prefix "C" means the firmware is to be upgraded on hardware revisions V3.0 and V5.0.0. In the future, we'll use prefix "D" for our next hardware revision to distinguish between hardware revisions.

Important: Activation Key might be needed when upgrading to a higher firmware version. Check the key requirement chart below and get the activation key first before proceeding with the firmware upgrade.

Do I need an Activation Key for new firmware?

Please check the [key requirement chart](#).

How to get the activation key?

Please use our online help desk to submit a key request ticket. You may need to include the following information:

1. Purchase Number
2. Purchase Date
3. Serial No
4. MAC Address
5. Current Firmware version
6. Firmware version to be upgraded

Or you may send all activation key requests to: keyrequest@teletronics.com. All you have to provide in the email will be the model of the unit and the MAC address.

Is there a fee for the activation key?

Right now, we don't charge our customer for firmware upgrade, or switching between AP and SU/Bridge mode.

Will upgrade keep my previous configuration?

Although the upgrade might keep your previous configuration, we suggest customer to reset the unit to factory default located in "admin" section and configure it again.