

Introduction

The SPC56x/RPC56x family of devices has internal Flash used for code and data. The Nexus debug interface can be used to program the Flash using the JTAG communication protocol through the JTAG port. This allows programming of the internal Flash by an external tool.

This application note first addresses the JTAG and Nexus communication protocol. The JTAG discussion includes the JTAG signals, TAP controller state machine, and the JTAG controller. The explanation of Nexus includes the on-chip emulation (OnCE) module and the Nexus read/write (R/W) access block.

Nexus/JTAG Flash programming supports the following products:

- SPC563Mxx
- SPC564Axx
- SPC56APxx
- SPC560Dxx
- SPC560Bxx
- SPC564Bxx
- SPC560Cxx
- SPC560Pxx
- SPC56ECxx
- SPC56ELxx
- RPC56ELxx
- RPC560Bxx
- RPC564Bxx
- RPC56APxx
- RPC564Axx

Contents

1	JTAG	6
1.1	JTAG signals	6
1.2	TAP controller state machine	6
1.3	JTAG controller (JTAGC)	8
1.4	Modes of operation	8
1.4.1	Reset	9
1.4.2	Test mode	9
1.5	Enabling debug of a censored device	10
1.5.1	CENSOR_CTRL register	12
2	On-Chip Emulation (OnCE)	13
2.1	Enabling the OnCE TAP controller	13
2.2	OnCE register access	14
2.3	OnCE command register	14
2.3.1	Example of OnCE register write	17
2.3.2	Example of OnCE register read	18
2.4	OnCE status register	19
2.5	Entering debug mode during reset	20
2.6	Enabling external debug mode and other initialization	21
2.7	CPU Status and Control Scan Chain Register (CPUSCR)	21
2.7.1	Instruction Register (IR)	22
2.7.2	Control State Register (CTL)	23
2.7.3	Program Counter Register (PC)	24
2.7.4	Write-Back Bus Register (WBBRlow, WBBRhigh)	24
2.7.5	Machine State Register (MSR)	24
2.8	Single step	24
2.9	Exit from debug mode to normal execution	25
2.10	GPR access	25
2.11	SPR access	25
2.12	OnCE memory access	26
2.13	Breakpoints	26
2.13.1	Software breakpoints	27

	2.13.2	Instruction address hardware breakpoints	27
3		Nexus Read/Write access block	28
	3.1	Nexus register access	30
	3.2	Single memory write access	32
	3.3	Burst block memory write access	32
	3.4	Single memory read access	33
	3.5	Burst block memory read access	34
4		System initialization	35
	4.1	Internal SRAM initialization	35
	4.2	Setting up the memory management unit	35
5		Creating the Flash programming tool	36
	5.1	Flash programming drivers	36
	5.2	Tool requirements	36
	5.2.1	Debug and driver initialization	36
	5.2.2	FlashInit	37
	5.2.3	SetLock	37
	5.2.4	FlashErase	38
	5.2.5	FlashProgram	38
	5.2.6	Using other drivers	39
	5.3	Functional division of the external tool	40
6		Revision history	41

List of tables

Table 1. JTAG signal properties 6

Table 2. JTAG instructions 10

Table 3. OnCE command register bit definitions 15

Table 4. e200z0 OnCE Register Addressing 16

Table 5. RWCS field description 28

Table 6. Read/Write access status bit encoding 29

Table 7. Nexus register index 31

Table 8. Document revision history 41



List of figures

Figure 1.	TAP controller finite state machine	7
Figure 2.	JTAG controller block diagram	8
Figure 3.	Enabling JTAG/Nexus port access on a censored device	11
Figure 4.	e200z OnCE block diagram	13
Figure 5.	Steps for enabling the OnCE TAP controller	14
Figure 6.	Signal transitions for enabling the OnCE TAP controller	14
Figure 7.	OnCE command register	15
Figure 8.	DBCR0 register.	17
Figure 9.	Signal transitions for writing OCMD to select a write to DBCR0.	18
Figure 10.	Signal transitions for writing DBCR0.	18
Figure 11.	Signal transitions for writing OCMD to select a read from DBCR0.	19
Figure 12.	Signal transitions for reading DBCR0	19
Figure 13.	OnCE status register.	20
Figure 14.	Signal transitions of reading the OnCE status register	20
Figure 15.	OnCE control register	20
Figure 16.	Debug Status Register (DBSR)	21
Figure 17.	CPU status and control scan chain register	22
Figure 18.	Control State Register (CTL)	23
Figure 19.	Read/Write Access Control/Status Register (RWCS).	28
Figure 20.	Read/Write access data register (RWD).	30
Figure 21.	Read/Write access address register (RWA)	30
Figure 22.	JTAG Data Register (DR).	31

1 JTAG

JTAG is a serial communication protocol created by the Joint Test Access Group. Originally developed for boundary scan, JTAG is also used for communication with the Nexus debug interface (NDI) on the SPC56x/RPC56x devices.

1.1 JTAG signals

The JTAG port of the SPC56x/RPC56x devices consists of the TCK, TDI, TDO, TMS and JCOMP pins. TDI, TDO, TMS, and TCK are compliant with the IEEE 1149.1-2001 standard and are shared with the NDI through the test access port (TAP) interface. See [Table 1](#) for signal properties.

Table 1. JTAG signal properties


Name	I/O	Function
TCK	I	Test Clock
TDI	I	Test Data In
TDO	O	Test Data Out
TMS	I	Test Mode Select
JCOMP	I	JTAG Compliancy

The JCOMP pin assertion allows to put the JTAGC in reset state.

1.2 TAP controller state machine

The TAP controller state machine controls the JTAG logic. The TAP controller state machine is a 16-state finite state machine (FSM) as shown in [Figure 1](#). The TCK and TMS signals control transition between states of the FSM. These two signals control whether an instruction register scan or data register scan is performed. Both the TDI and TMS inputs are sampled on the rising edge of TCK while the TDO output changes on the falling edge of TCK. The value shown next to each state of the state machine in [Figure 2](#) is the value of TMS required on the rising edge of TCK to transition to the connected state. Five rising edges of TCK with TMS at logic 1 guarantee entry into the TEST LOGIC RESET state.


Figure 1. TAP controller finite state machine

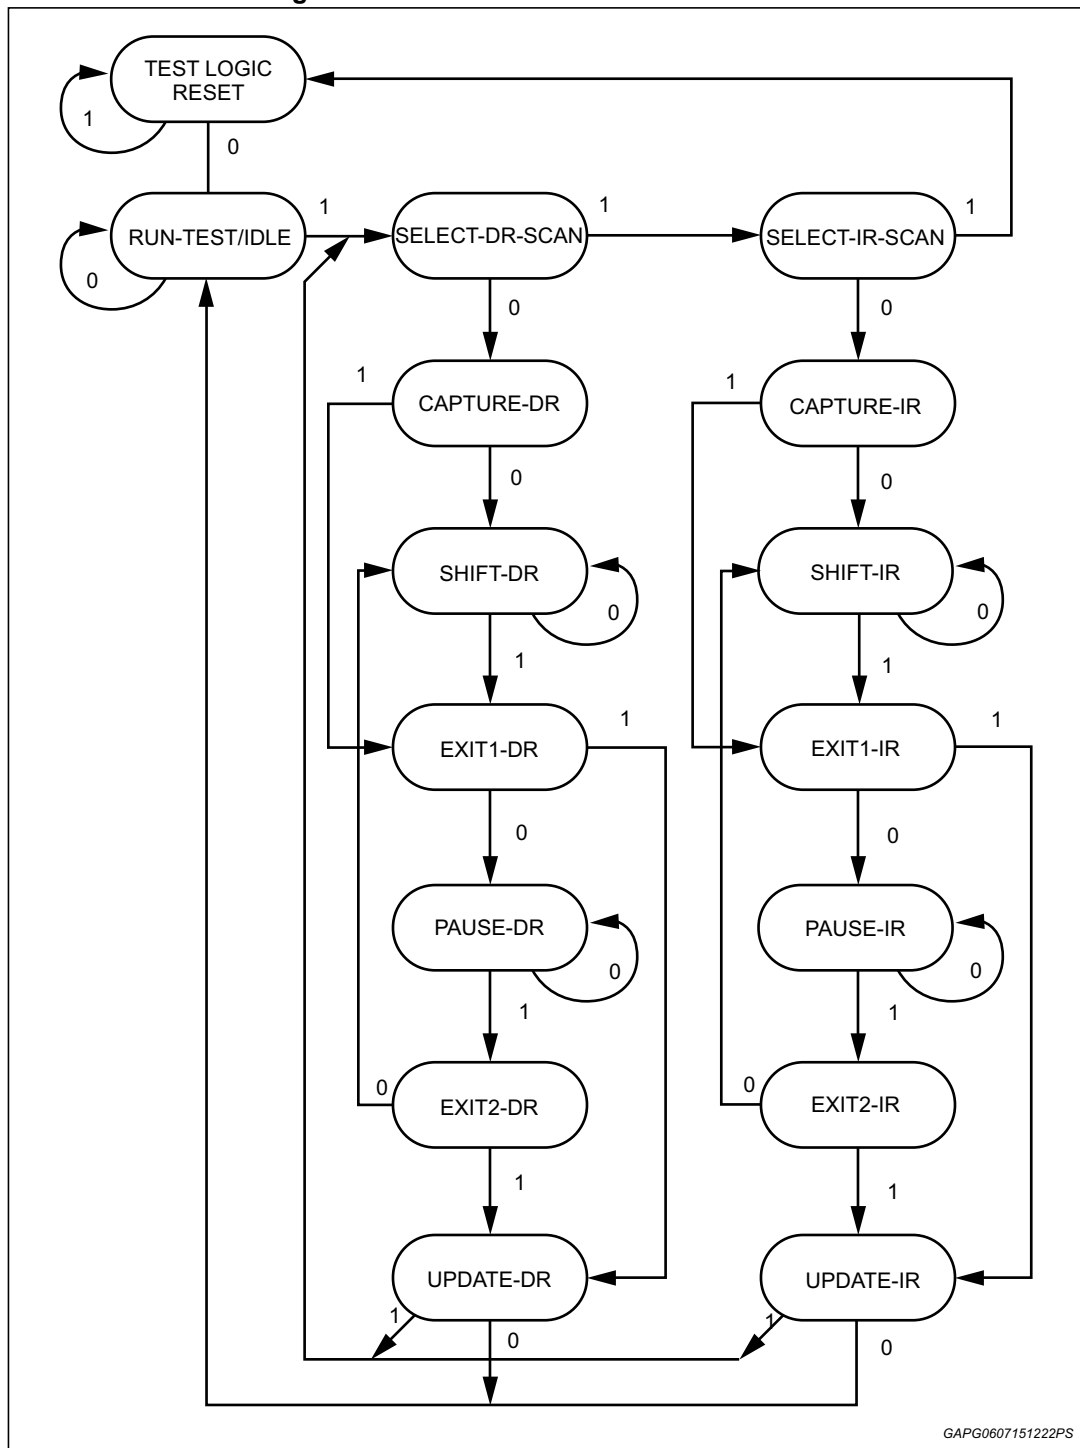

1.3 JTAG controller (JTAGC)

The JTAGC provides the means to test chip functionality and connectivity while remaining transparent to system logic when not in TEST mode. Testing is performed via a boundary scan technique, as defined in the IEEE 1149.1-2001 standard. In addition, instructions can be executed in order to allow the Test Access Port (TAP) to be shared with other modules on the MCU. All data input to and output from the JTAGC is communicated in serial format. A block diagram of the JTAGC is shown in [Figure 2](#).

Figure 2. JTAG controller block diagram

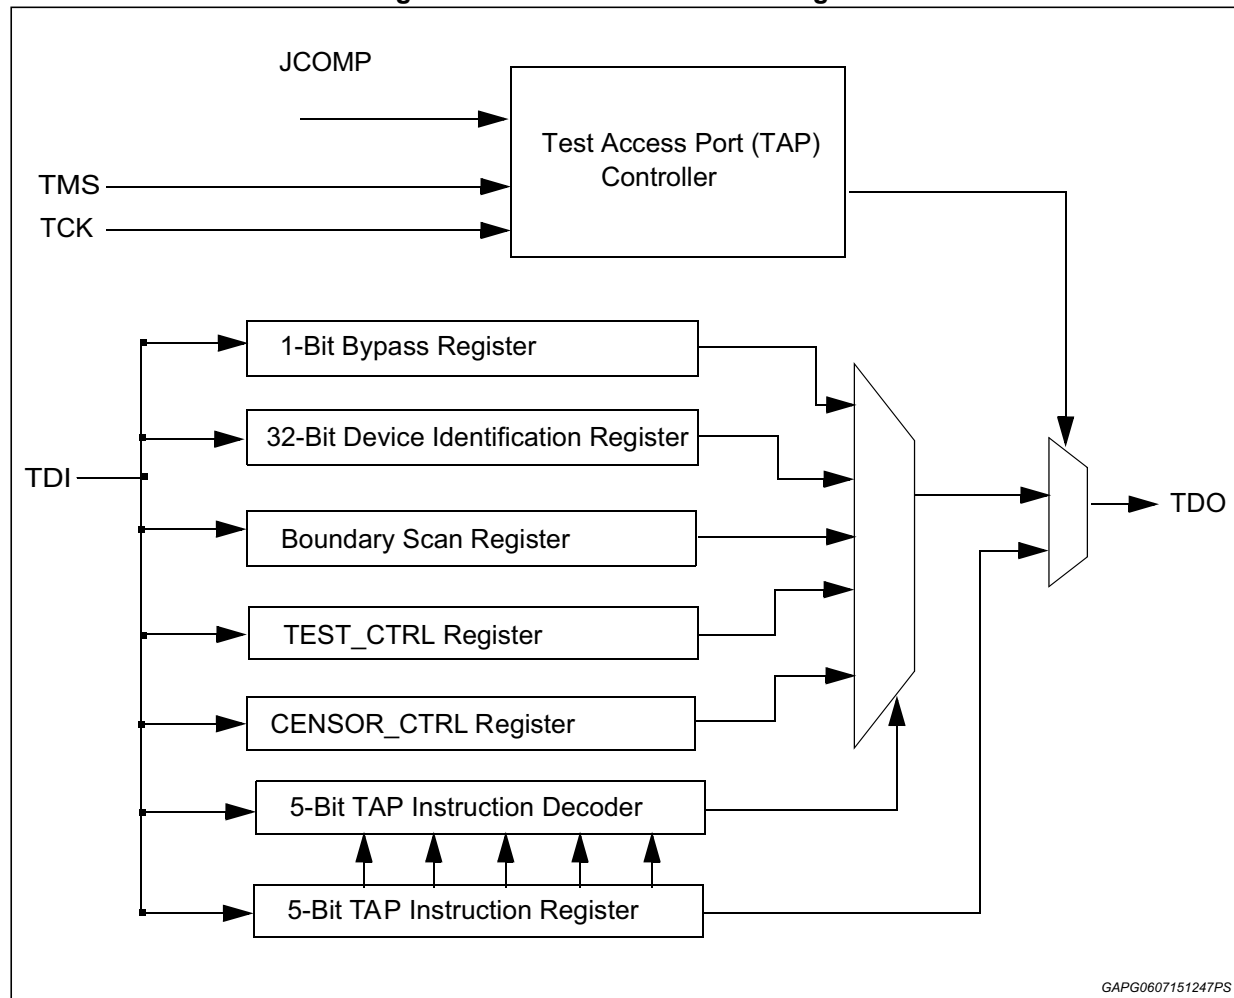

1.4 Modes of operation

Access to the JTAGC data registers is done by loading the instruction register with any of the JTAGC instructions while the JTAGC is enabled. Instructions are shifted in via the select-IR-scan path and loaded in the update-IR state. At this point, all data register access is performed via the select-DR-scan path.

The select-DR-scan path is used to read or write the register data by shifting in the data (LSB first) during the shift-DR state. When reading a register, the register value is loaded into the shifter during the capture-DR state. When writing a register, the value is loaded from

the shifter to the register during the update-DR state. When reading a register, there is no requirement to shift out the entire register contents. Shifting can be terminated after fetching the required number of bits.

1.4.1 Reset

The JTAGC is placed in reset when the TAP controller state machine is in the TEST-LOGIC-RESET state.

The TEST-LOGIC-RESET state is entered upon the assertion of the power-on reset signal, negation of JCOMP, or through TAP controller state machine transitions controlled by TMS. Asserting power-on reset or negating JCOMP results in asynchronous entry into the reset state. While in reset, the following actions occur:

- The TAP controller is forced into the test-logic-reset state, thereby disabling the test logic and allowing normal operation of the on-chip system logic to continue unhindered.
- The instruction register is loaded with the IDCODE instruction.

In addition, execution of EXTEST instruction results in assertion of the internal system reset.

1.4.2 Test mode

Several TEST modes are supported, as well as a bypass mode and they are entered using the following instructions:

- EXTEST
- SAMPLE
- SAMPLE/PRELOAD

Each instruction defines the set of data registers that can operate and interact with the on-chip system logic while the instruction is current. Only one test data register path is enabled to shift data between TDI and TDO for each instruction.

Following the test modes available:

1. BYPASS mode

When no test operation is required, the BYPASS instruction can be loaded to place the JTAGC into bypass mode. While in bypass mode, the single-bit bypass shift register is used to provide a minimum-length serial path to shift data between TDI and TDO.

2. TAP Sharing Mode

There are three selectable auxiliary TAP controllers that share the TAP with the JTAGC. Selectable TAP controllers include:

- a) Nexus port controller (NPC)
- b) On Chip Emulator (ONCE) controller
- c) TCU controller

The instructions required to grant ownership of the TAP to the auxiliary TAP controllers are ACCESS_AUX_TAP_NPC, ACCESS_AUX_TAP_ONCE, ACCESS_AUX_TAP_TCU. Instruction opcodes for each instruction are shown in [Table 2](#).

When the access instruction for an auxiliary TAP is loaded, control of the JTAG pins is transferred to the selected TAP controller. Any data input via TDI and TMS is passed to the selected TAP controller, and any TDO output from the selected TAP controller is sent back to the JTAGC to be output on the pins. The JTAGC regains control of the JTAG port during the UPDATE-DR state if the PAUSE-DR state was entered. Auxiliary TAP controllers are held in RUN-TEST/IDLE while they are inactive.

Table 2. JTAG instructions

Instruction	Code[4:0]	Instruction summary
IDCODE	00001	Selects device identification register for shift
SAMPLE/PRELOAD	00010	Selects boundary scan register for shifting, sampling, and preloading without disturbing functional operation
SAMPLE	00011	Selects boundary scan register for shifting and sampling without disturbing functional operation
EXTEST	00100	Selects boundary scan register while applying preloaded values to output pins and asserting functional reset
ACCESS_AUX_TAP_TCU	10000	Grants the TCU ownership of the TAP
ACCESS_AUX_TAP_ONCE	10001	Grants the PLATFORM ownership of the TAP
ACCESS_AUX_TAP_NPC	10010	Grants the Nexus port controller (NPC) ownership of the TAP
Reserved	10010	-
BYPASS	11111	Selects bypass register for data operations
Factory Debug Reserved	00101 00110 01010	Intended for factory debug only
Reserved	All other codes	Decoded to select bypass register


1.5 Enabling debug of a censored device

When a device is in a censored state, the debug port (JTAG/Nexus) is disabled and only JTAG BSDL commands can be used. Access to the Nexus/JTAG clients on a censored device requires inputting the proper password into the JTAG Censorship Control Register during reset.

When the debug port is enabled on a censored device, it is enabled only until the next reset.

[Figure 3](#) shows the logic that enables access to Nexus clients in a censored device using the JTAG port.

Figure 3. Enabling JTAG/Nexus port access on a censored device

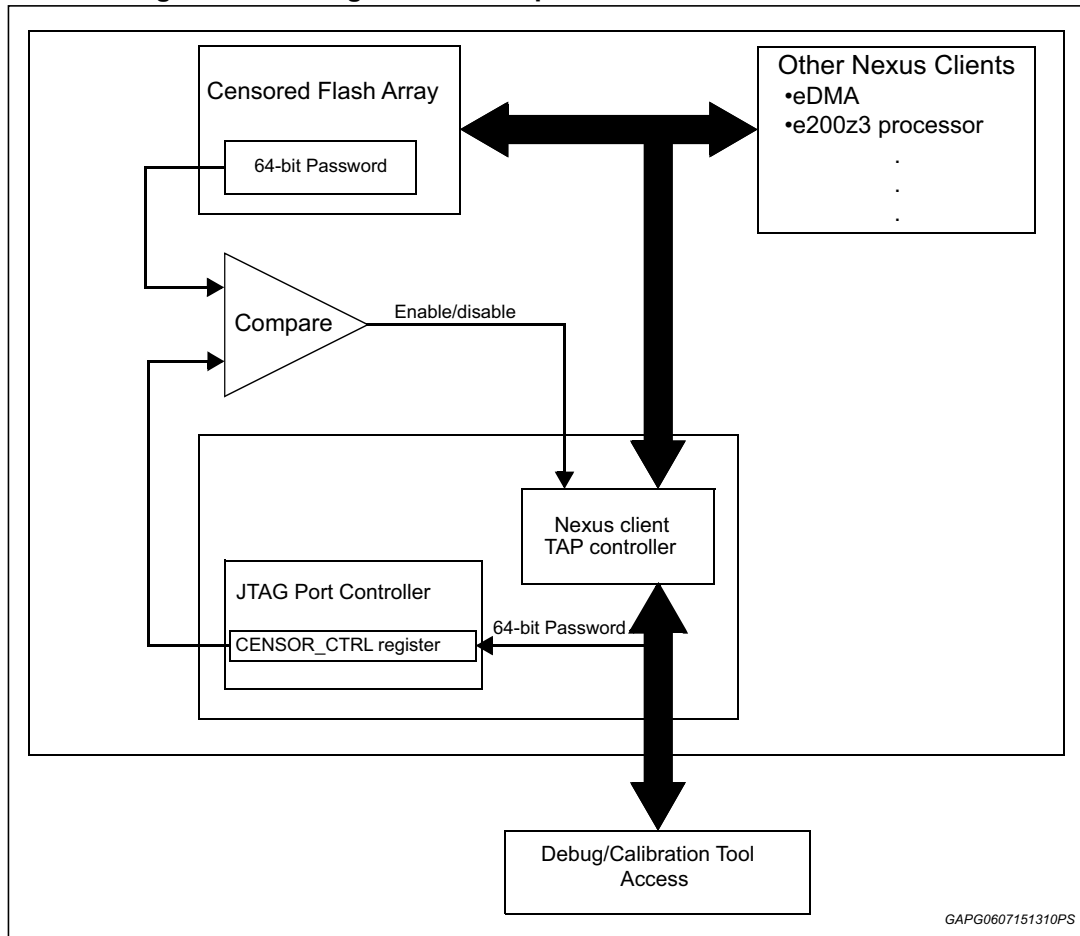

The steps to enable the debug port on a censored device are as follows:

1. After the RSTOUT pin has been negated, hold the device in system reset state using a debugger or other tool.
2. While the device is being held in system reset state shift the 64-bit password into the CENSOR_CTRL register (via the JTAG port using the JTAG ENABLE_CENSOR_CTRL instruction). The JTAG serial password is compared against the serial boot flash password from the flash shadow block.
3. If there is a match the Nexus client TAP controller enters normal operation mode and the DISNEX flag in the SIU_CCR register is negated (for the SPC56xB/RPC56xB and SPC56xP/RPC56xP families the flag NXEN in the SSCM_STATUS register is negated) indicating Nexus is enabled. Upon negation of reset the debug / calibration tool is able to access the device via NEXUS port and JTAG. If the JTAG serial password does not match the serial boot flash password or the serial boot flash password is an illegal password then the debug / calibration tool is not able to access the device. After the debug port is enabled, the tool can access the censored device and can erase and reprogram the shadow flash block in order to uncensor the device.

Note:

If the shadow flash block is erased without reprogramming a new valid password before a reset, it contains an illegal password and the debug port is inaccessible.

4. Subsequent resets clear the JTAG censor password register and the Nexus client TAP controller holds in reset again. Therefore, the tool must resend the JTAG serial

password, as described above, in order to enable the Nexus client TAP controller again.


1.5.1 CENSOR_CTRL register

The CENSOR_CTRL register is a shift register path from TDI to TDO selected when the ENABLE_CENSOR_CTRL instruction is active. The CENSOR_CTRL register transfers its value to a parallel hold register on the rising edge of TCK when the TAP controller state machine is in the Update-DR state. The parallel hold register bits CENSOR_CTRL correspond directly to the JTAGC output control internal signals jtag_censor_ctrl. The jtag_censor_ctrl signals are used to control chip dependent censorship features. Once the ENABLE_CENSOR_CTRL instruction is executed, jtag_censor_ctrl remains valid until a JTAGC reset occurs.

2 On-Chip Emulation (OnCE)

All of the SPC56x/RPC56x devices possess a OnCE module for debug control of the Power Architecture® e200 core. The OnCE logic provides Nexus class 1 static debug capability including run-time control, register access, and memory access to all memory-mapped regions including on-chip peripherals, as well as providing access to the Nexus2 & Nexus3 configuration registers. The OnCE module is controlled by the JTAG signals through the OnCE TAP controller.

Figure 4. e200z OnCE block diagram

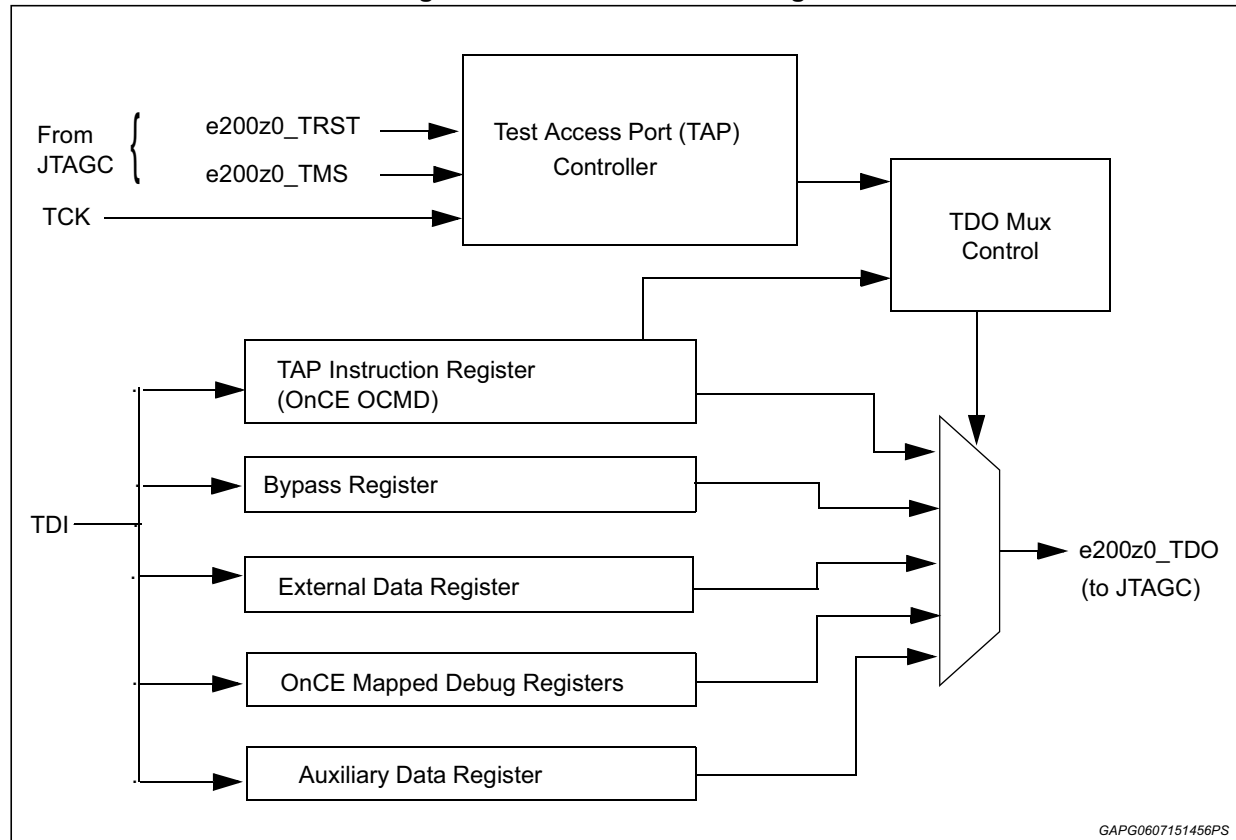

2.1 Enabling the OnCE TAP controller

Control of the OnCE module is obtained through the OnCE TAP controller. To enable the OnCE TAP controller, the JTAGC must have control of the TAP and the ACCESS_AUX_TAP_ONCE (0b10001) opcode must be loaded into the 5-bit JTAGC instruction register with the JCOMP signal set to a logic 1.


The JTAGC instruction register is loaded by scanning in the appropriate bits on the TDI pin, the least significant bit (LSB) first, while the TAP controller state machine is in SHIFT-IR state. The last bit is shifted in with TMS set to a logical 1 causing transition from the SHIFT-IR state to the EXIT1-IR state. Table 3-1 shows the steps required to enable the OnCE TAP controller, assuming the TAP controller state machine is initially in the RUN-TEST/IDLE

state. The state machine is returned to the RUN-TEST/IDLE state when the write is complete.

Figure 5. Steps for enabling the OnCE TAP controller

TCK tick	TMS	TDI	Resulting state
1	1	X	SELECT-DR-SCAN
2	1	X	SELECT-IR-SCAN
3	0	X	CAPTURE-IR
4	0	X	SHIFT-IR
5	0	1	SHIFT-IR
6	0	0	SHIFT-IR
7	0	0	SHIFT-IR
8	0	0	SHIFT-IR
9	1	1	SHIFT-IR
10	1	X	UPDATE-IR
11	0	X	RUN-TEST/IDLE

Figure 6. Signal transitions for enabling the OnCE TAP controller

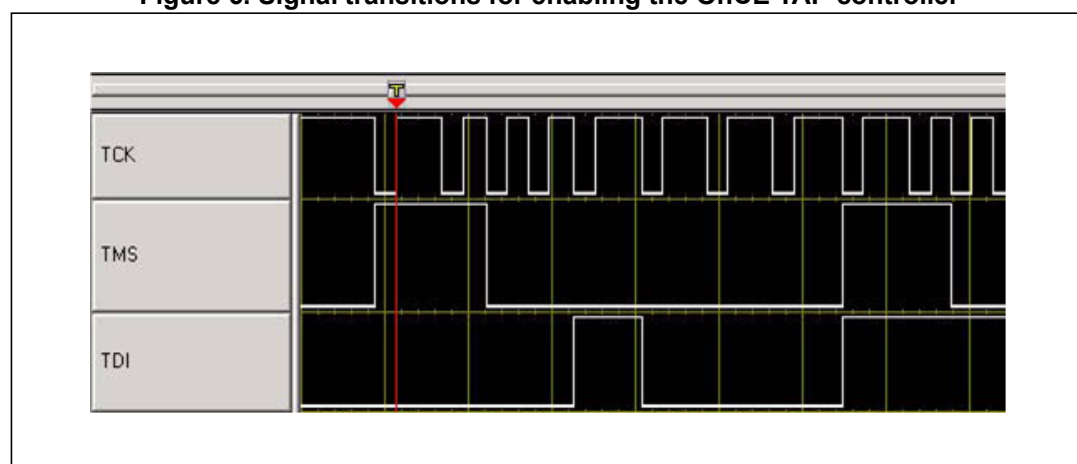

2.2 OnCE register access


The OnCE module provides several registers for static debug support. The OnCE command register (OCMD) is a special register and acts as the IR for the TAP controller state machine and is used to access other OnCE resources.

2.3 OnCE command register

The OnCE command register (OCMD) is a 10-bit shift register that receives its serial data from the TDI pin and acts as the IR register of the TAP controller state machine. The OCMD is updated when the TAP controller enters the UPDATE-IR state. It contains fields for

controlling access to a resource, as well as controlling single step operations and exit from debug mode. [Figure 7](#) shows the register definition for the OnCE command register.

Figure 7. OnCE command register

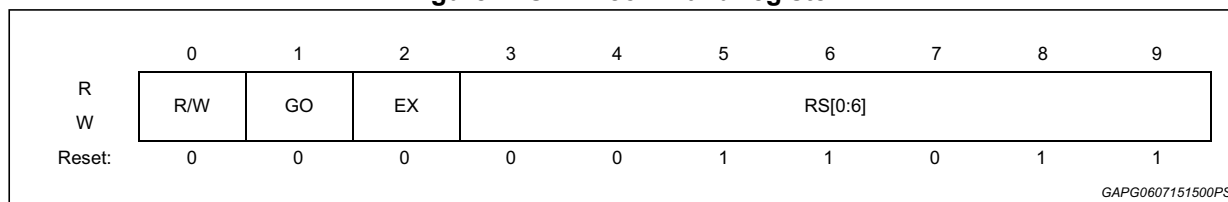

[Table 3](#) provides bit definitions for the OnCe command register.

Reset - 0b10_0000_0010 on assertion of JCOMP, during power on reset, or while in the TEST LOGIC RESET state.

Table 3. OnCE command register bit definitions

Bit(s)	Name	Description
0	R/W	Read/Write Command Bit The R/W bit specifies the direction of data transfer. The table below describes the options defined by the R/W bit. 0 Write the data associated with the command into the register specified by RS[0:6] 1 Read the data contained in the register specified by RS[0:6] <i>Note: The R/W bit is ignored for read-only or write-only registers. In addition, it is ignored for all bypass operations. When performing writes, most registers are sampled in the Capture-DR state into a 32-bit shift register, and subsequently shifted out on TDO during the first 32 clocks of Shift-DR.</i>
1	GO	Go Command Bit 0 Inactive (no action taken) 1 Execute instruction in IR If the GO bit is set, the chip executes the instruction which resides in the IR register in the CPUSCR. To execute the instruction, the processor leaves debug mode, executes the instruction, and if the EX bit is cleared, returns to debug mode immediately after executing the instruction. The processor goes on to normal operation if the EX bit is set, and no other debug request source is asserted. The GO command is executed only if the operation is a read/write to CPUSCR or a read/write to "No Register Selected". Otherwise the GO bit is ignored. The processor leaves debug mode after the TAP controller Update-DR state is entered. On a GO+NoExit operation, returning to debug mode is treated as a debug event, thus exceptions such as machine checks and interrupts may take priority and prevent execution of the intended instruction. Debug firmware should mask these exceptions as appropriate. The OSR[ERR] bit indicates such an occurrence.

Table 3. OnCE command register bit definitions (continued)

Bit(s)	Name	Description
2	EX	0 Remain in debug mode 1 Leave debug mode If the EX bit is set, the processor leaves debug mode and resume normal operation until another debug request is generated. The Exit command is executed only if the Go command is issued, and the operation is a read/write to CPUSCR or a read/write to “No Register Selected”. Otherwise the EX bit is ignored. The processor leaves debug mode after the TAP controller Update-DR state is entered. Note that if the DR bit in the OnCE control register is set or remains set, or if a bit in the DBSR is set, or if a bit in the DBSR is set and DBCR0[EDM]=1 (external debug mode is enabled), then the processor may return to debug mode without execution of an instruction, even though the EX bit was set.
3-9	RS	Register Select The Register Select bits define which register is source (destination) for the read (write) operation. Attempted writes to read-only registers are ignored.

[Table 4](#) shows the OnCE register addresses. Access to the registers CPUSCR, DAC1-2, DBCNT, DBCR0-3, DBSR, and IAC1-4 require that the external debug mode bit, DBCR0[EDM], be set to a logical 1. Only the DBCR0[EDM] is accessible in the DBCR0 register prior to that bit being set. Setting DBCR0[EDM] enables external debug mode and disables software updates to debug registers. The CPU should be placed in debug mode via the OCR[DR] bit prior to setting the DBCR0[EDM] bit.

Table 4. e200z0 OnCE Register Addressing

RS[0:6]	Register selected
000 0000	Reserved
000 0001	Reserved
000 0010	JTAG ID (read-only)
000 0011-000 1111	Reserved
001 0000	CPU Scan Register (CPUSCR)
001 0001	No Register Selected (Bypass)
001 0010	OnCE Control Register (OCR)
001 0011-001 1111	Reserved
010 0000	Instruction Address Compare 1 (IAC1)
010 0001	Instruction Address Compare 2 (IAC2)
010 0010	Instruction Address Compare 3 (IAC3)
010 0011	Instruction Address Compare 4 (IAC4)
010 0100	Data Address Compare 1 (DAC1)
010 0101	Data Address Compare 2 (DAC2)
010 0110	Data Value Compare 1 (DVC1)
010 0111	Data Value Compare 2 (DVC2)

Table 4. e200z0 OnCE Register Addressing (continued)

RS[0:6]	Register selected
010 1000 -010 1011	Reserved
010 1100	Debug Counter Register (DBCNT)
010 1101	Debug PCFIFO (PCFIFO) (read-only)
010 1110 -010 1111	Reserved
011 0000	Debug Status Register (DBSR)
011 0001	Debug Control Register 0 (DBCR0)
011 0010	Debug Control Register 1 (DBCR1)
011 0011	Debug Control Register 2 (DBCR2)
011 0100-101 1111	Reserved
111 0000 -111 1001	General Purpose register selects [0:9]
111 1010	Cache Debug Access Control Register (CDACNTL)
111 1011	Cache Debug Access Data Register (CDADATA)
111 1100	Nexus3-Access
111 1101	Reserved
111 1110	Enable_OnCE
111 1111	Bypass

2.3.1 Example of OnCE register write

OnCE registers can be written by selecting the register using the RS[0:6] field and clearing the R/W bit in the OnCE command register (OCMD). This requires a scan through the IR path of the TAP controller state machine to write the OCMD and a scan through the DR path of the TAP controller state machine to write the selected register. As mentioned above, the external debug mode bit, DBCR0[EDM], must be set to a logical 1 to allow access to most of the OnCE registers. Therefore, writing the DBCR0 register to set the EDM bit is used as an example of a writing a OnCE register. [Figure 8](#) shows the register definition of DBCR0.

Figure 8. DBCR0 register

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	EDM	IDM	RST	ICMP	BRT	IRPT	TRAP	IAC1	IAC2	IAC3	IAC4	DAC1	DAC2			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	RET	0	0	0	0	DEVT1	DEVT2	DCNT1	DCNT2	CRPT	CRET	0	0	0	0	FT
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

GAPG0607151507PS

The example of writing DBCR0 is divided into two parts: writing OCMD to select a write to DBCR0, and writing the value 0x80000000 to DBCR0. All data are scanned in the least significant bit first.

Figure 9 shows writing the value 0b00_0011_0001 to OCMD through the IR path to select a write to DBCR0 assuming the TAP controller state machine is initially in the RUN-TEST/IDLE state. The state machine is returned to the RUN-TEST/IDLE state when the write is complete.

Figure 9. Signal transitions for writing OCMD to select a write to DBCR0


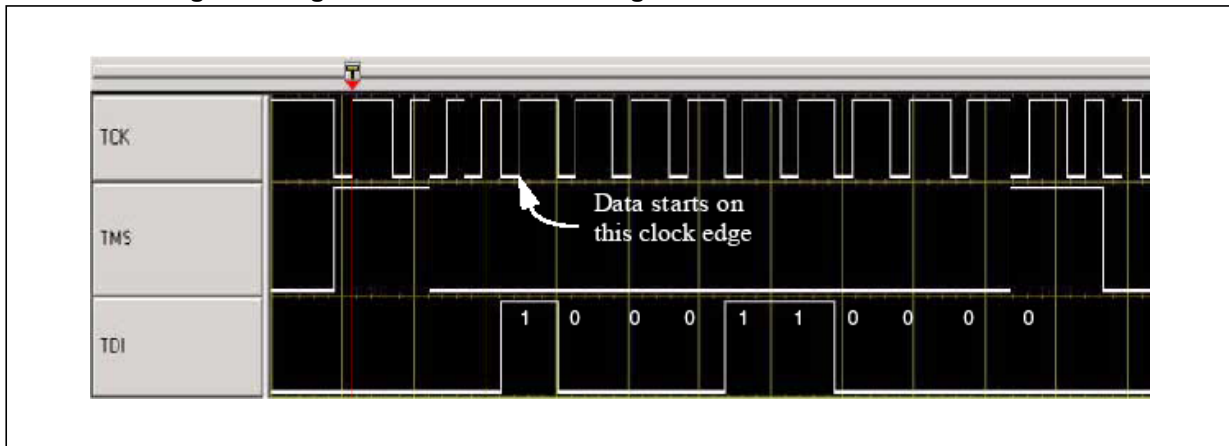


Figure 10 shows writing the value 0x80000000 to DBCR0 through the DR path to set the EDM bit assuming the TAP controller state machine is initially in the RUN-TEST/IDLE state. The state machine is returned to the RUN-TEST/IDLE state when the write is complete.

Figure 10. Signal transitions for writing DBCR0

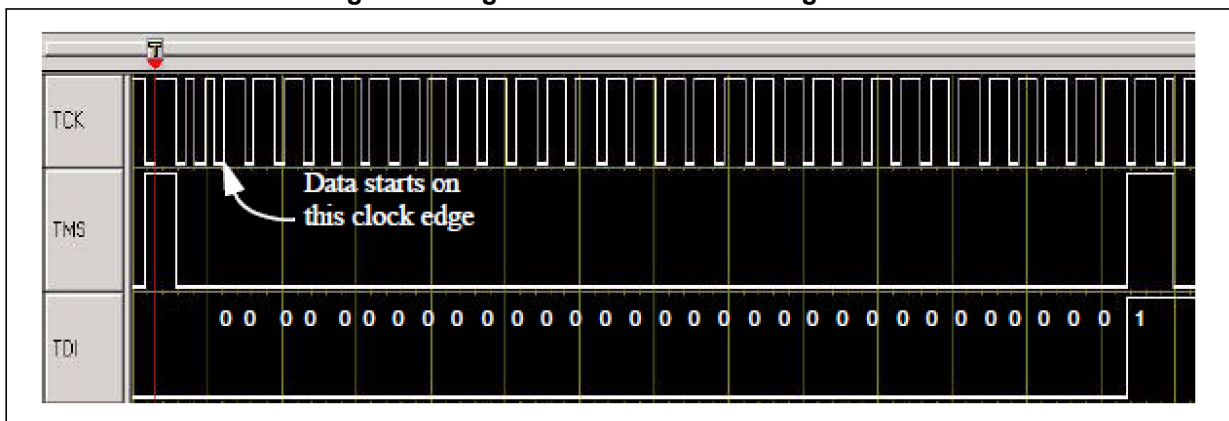

2.3.2 Example of OnCE register read

OnCE registers can be read by selecting the register using the RS[0:6] field and setting the R/W bit in the OnCE command register (OCMD). This requires a scan through the IR path of the TAP controller state machine to write the OCMD and a scan through the DR path of the TAP controller state machine to read the selected register. This read example reads DBCR0 after the EDM bit is set.

Figure 11 shows writing the value 0b10_0011_0001 to OCMD through the IR path to select a read from DBCR0 assuming the TAP controller state machine is initially in the RUN-TEST/IDLE state. The state machine is returned to the RUN-TEST/IDLE state when the write is complete.

Figure 11. Signal transitions for writing OCMD to select a read from DBCR0


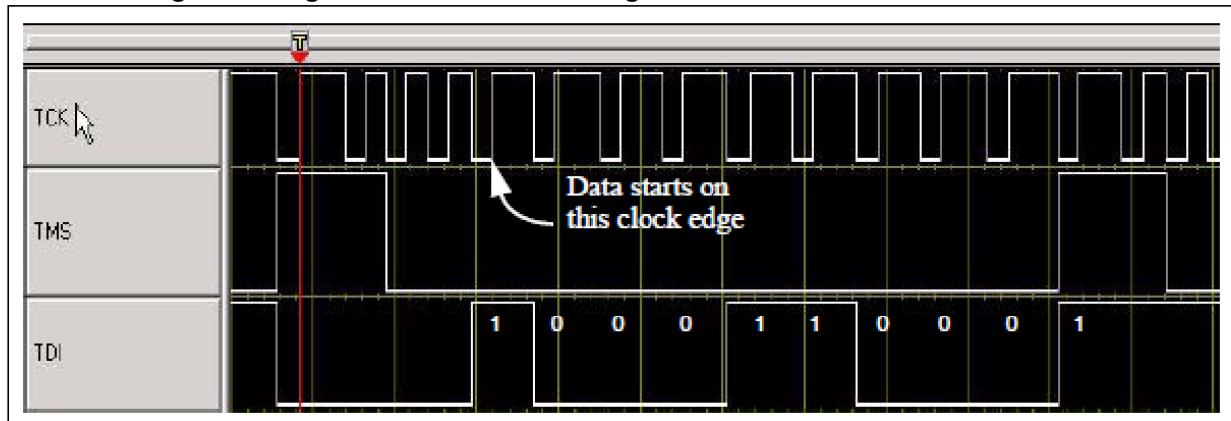


Figure 12 shows reading the value 0x80000000 from DBCR0 through the DR path assuming the TAP controller state machine is initially in the RUN-TEST/IDLE state. The state machine is returned to the RUN-TEST/IDLE state when the read is complete.

Figure 12. Signal transitions for reading DBCR0

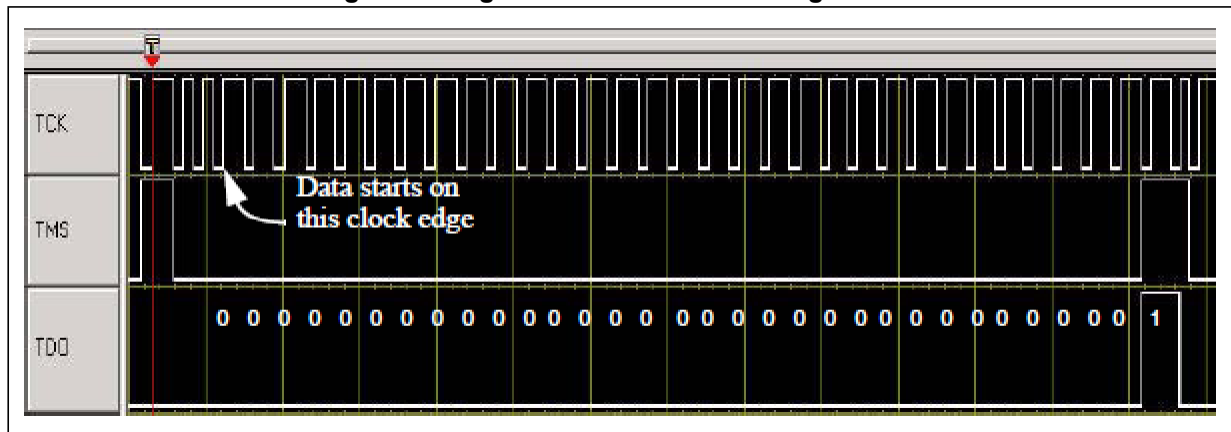

2.4 OnCE status register

The OnCE status register (OSR) is a special register in terms of how it is read. Status information related to the state of the CPU is latched into the OnCE status register when the OnCE TAP controller state machine enters the CAPTURE-IR state. The status information is shifted out serially through the SHIFT-IR state on TDO. The OSR is a 10-bit register like the OCMD. Therefore, the status information can be read while writing OCMD. The OSR is shown in *Figure 13*.


Figure 13. OnCE status register

MCLK	ERR	CHKSTOP	RESET	HALT	STOP	DEBUG	0	1	
0	1	2	3	4	5	6	7	8	9

GAPG0607151516PS

Figure 14 shows reading the OnCE status register on TDO while writing the OCMD on TDI assuming the TAP controller state machine is initially in the RUN-TEST/IDLE state. The state machine is returned to the RUN-TEST/IDLE state when the read is complete. The OCMD is written with the value 0b10_0001_0001 choosing a read of No Register Selected. The data read on TDO from the OnCE status register is 0b10_0000_1001 showing that the OSR[MCLK] and OSR[DEBUG] status bits are set. All data is scanned in and out least significant bit first.

Figure 14. Signal transitions of reading the OnCE status register

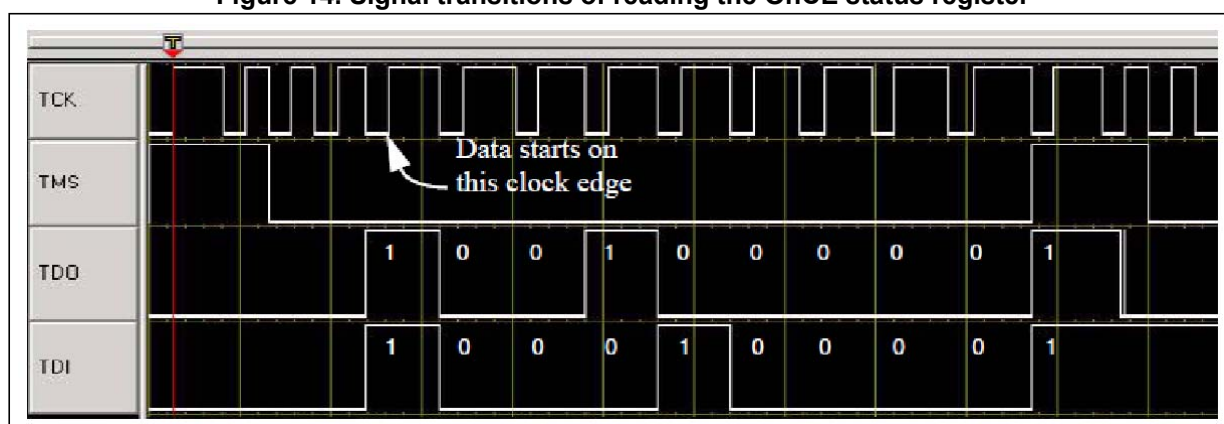

2.5 Entering debug mode during reset

There are several different methods of entering debug mode. This section covers entering debug mode while the RESET pin is asserted. Entering debug mode while the RESET pin is asserted is useful, because the debug session begins with the CPU in a known state. The OnCE control register (OCR) controls entry into debug mode for this method. Figure 15 shows the register definition for the OCR.

Figure 15. OnCE control register

0																																	
0																DMDIS	0		DW	DI	DM	DG	DE	0							WK UP	FDB	DR
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31		

GAPG0607151521PS

The OCR[DR] bit is the CPU debug request control bit and requests the CPU to unconditionally enter debug mode. The OCR[WKUP] bit is the wakeup request bit used to guarantee that the CPU clock is running. Debug status and CPU clock activity can be determined by reading the DEBUG and MCLK bits in the OnCE status register. After entering debug mode, the OCR[DR] bit should be cleared leaving the OCR[WKUP] bit set. OCR[FDB] should also then be set to enable recognition of software breakpoints.

The steps required for entering debug mode during reset assuming the OnCE TAP controller has been enabled are listed below:

1. Assert RESET.
2. Set the OCR[DR] and OCR[WKUP] bits.
3. De-assert RESET.
4. Verify debug mode via the DEBUG bit in the OnCE status register.
5. Clear the OCR[DR] bit while leaving OCR[WKUP] set and set OCR[FDB].

2.6 Enabling external debug mode and other initialization

Before enabling external debug mode, the CPU should be placed into debug mode via the method outlined in the previous section.

The external tool should then write the DBCR0[EDM] bit to enable external debug mode. Note that the first write to DBCR0 only affects the EDM bit. All other bits in that register require DBCR0[EDM] to be set prior to writing them. After enabling external debug mode, the DBSR status bits should be cleared by writing 0xFFFFFFFF to DBSR. The register definition of DBSR is shown in [Figure 16](#).

Figure 16. Debug Status Register (DBSR)


	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	IDE	UDE	MRR		ICMP	BRT	IRPT	TRAP	IAC1	IAC2	IAC3	IAC4	DAC 1R	DAC 1W	DAC 2R	DAC 2W
W																
Reset	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	RET	0	0	0	0	DEVT 1	DEVT 2	DCNT 1	DCNT 2	CIRPT	CRET	0	0	0	0	CNT 1RG
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

GAPG0607151558PS

2.7 CPU Status and Control Scan Chain Register (CPUSCR)

CPU information is accessible via the OnCE module through a single scan chain register named the CPUSCR. The CPUSCR provides access to this CPU information and a mechanism for an external tool to set the CPU to a desired state before exiting debug mode. The CPUSCR also provides the ability to access register and memory contents. [Figure 17](#) shows the CPUSCR. Once debug mode has been entered, it is required to scan in and update the CPUSCR prior to exiting debug mode or single stepping. Access to the CPUSCR is controlled by the OCMD.

Figure 17. CPU status and control scan chain register

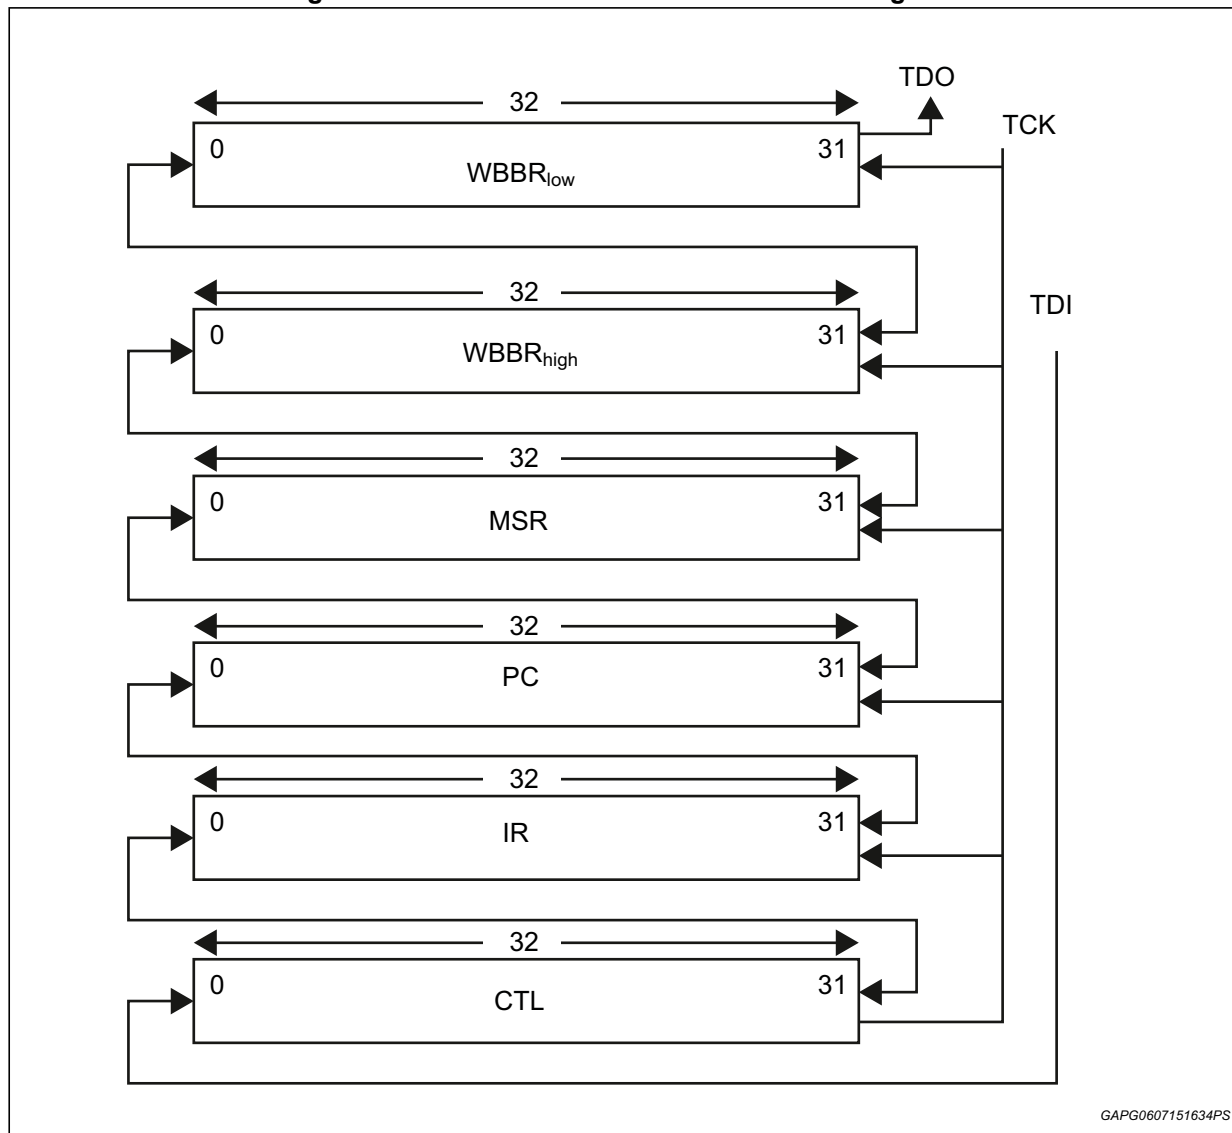

2.7.1 Instruction Register (IR)


After entering debug mode, the opcode of the next instruction to be executed is in the instruction register (IR). The value in the IR should be saved for later restoration if continuation of the normal instruction stream is desired.

The external tool has the capability to put instructions directly into the instruction register (IR) via the CPUSCR. These instructions can then be executed by the debug control block. By selecting appropriate instructions and single stepping them, the external tool can examine or change memory locations or CPU registers.

2.7.2 Control State Register (CTL)

The control state register (CTL) stores the value of certain internal CPU state variables before debug mode is entered. [Figure 18](#) shows the CTL register.

Figure 18. Control State Register (CTL)

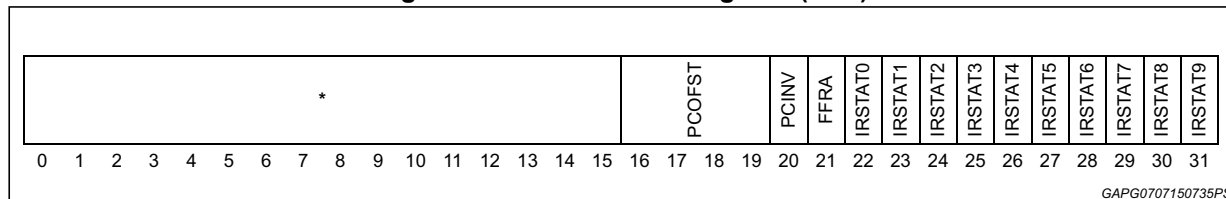

The “*” in the CTL register represents the internal processor state bits that should be restored to the value they held when debug mode was entered prior to exiting debug mode. If a single step is executing an instruction that is in the normal instruction flow of the program that was running when debug mode was entered, these bits should be restored. If a single step is executing an instruction outside the normal instruction flow, these bits should be cleared to zero.

The PCOFST field indicates whether the value in the PC portion of the CPUSCR must be adjusted prior to exiting debug mode. Due to the pipelined nature of the CPU, the PC value must be backed-up under certain circumstances. The PCOFST field specifies the value to be subtracted from the PC value when debug mode was entered. This PC value should be adjusted according to PCOFST prior to exit from debug mode if continuation of the normal instruction stream is desired. In the event that PCOFST is non-zero, the IR should be loaded with a **nop** instruction instead of the value in the IR when debug mode was entered. Below are the possible values and meanings of the PCOFST field:

- 0000—No correction required.
- 0001—Subtract 0x04 from PC.
- 0010—Subtract 0x08 from PC.
- 0011—Subtract 0x0C from PC.
- 0100—Subtract 0x10 from PC.
- 0101—Subtract 0x14 from PC.

All other encodings are reserved.

After entering debug mode, the PCINV field overrides the PCOFST field and indicates that values in the PC and IR are invalid. Exiting debug mode with these PC and IR values have unpredictable results:

- No error condition exists.
- Error condition exists. PC and IR are corrupted.

The FFRA control bit causes the contents of WBBR to be used as the rA (rS for logical and shift operations) operand value of the first instruction to be executed when exiting debug mode or the instruction to be single stepped. This allows the external tool to update CPU registers and memory. rA and rS are instruction syntax used to identify a source GPR:

- No action.
- Contents of WBBR used as rA (rS for logical and shift operations) operand value.

The IRStat0-9 bits provide status information to the external tool. The IRStat8 bit indicates that the instruction in the IR is a VLE or non-VLE instruction. For MPC5500 devices without

VLE, bits IRstat8 and IRstat9 of the CTL do not exist. Below is a description of the IRStat8 bit.

All other CTL bits are discussed as needed.:

- IR contains a BookE instruction.
- IR contains a PowerPC VLE instruction, aligned in the most significant portion of IR if 16-bit.

2.7.3 Program Counter Register (PC)

The PC stores the value of the program counter that was present when debug mode was entered. The PC value is affected by operations performed during debug mode and must be restored prior to exiting debug mode. It may be necessary to adjust the PC before exiting debug mode according to the PCOFST field in the CTL. If the external tool desires to redirect program flow to an arbitrary location, the PC and IR should be initialized corresponding to the first instruction to be executed. Alternatively, the IR may be set to a **nop** instruction and the PC may be set to the location prior to the location at which it is desired to redirect flow. When debug mode is exited, the **nop** executes and then instruction fetch and execution begins at the location where it is desired to redirect flow.

2.7.4 Write-Back Bus Register (WBBR_{low}, WBBR_{high})

WBBR is used as a means of passing operand information to/from the CPU from/to the external tool. Whenever the external tool needs to read the contents of a CPU register or memory location, it can force the CPU to single step an instruction that brings that information to WBBR. To write the contents of a CPU register or memory location, the external tool can force the CPU to single step an instruction that uses the information in WBBR. For the purpose of this document, only WBBR_{low} is used. WBBR_{high} is used for SPE instructions that generate 64-bit results or use 64-bit operands. Such instructions are outside the scope of this document.

2.7.5 Machine State Register (MSR)

The MSR is used to read/write the machine state register of the CPU. This register is affected by operations performed while in debug mode. If consistency of the machine state is desired, the MSR should be saved when entering debug mode and restored prior to exiting debug mode.

2.8 Single step

Single stepping of instructions is achieved by first placing the CPU in debug mode if the CPU is not already in debug mode. The next step is to write the appropriate information into the CPU scan chain register (CPUSCR), followed by writing to OCMD to set the OCMD[GO] bit and clear the OCMD[EX] bit with the OCMD[RS] field indicating either the CPUSCR or No Register Selected. Once debug mode has been entered, it is required that a scan in and update to the CPUSCR must be performed prior to single stepping. For single step, the CPU returns to debug mode after executing a single instruction. The external tool should read the OnCE status register (OSR) to verify that the CPU has returned to debug mode without the OSR. During single step, exception conditions can occur, if not masked, and may prevent the desired instruction from being executed. After stepping over the instruction, the core fetches the next instruction. The new program counter and instruction are loaded into the

PC and IR portions of the CPUSCR. Care must be taken to insure that the next instruction fetched after the single step, points to a valid memory location.

For SPC56x/PC56x devices with VLE, the CTL[IRStat8] bit indicates that the instruction in the IR is a VLE or non-VLE instruction. The CTL[FFRA], CTL[IRStat8], and the CTL bits indicated by “*” should be set as appropriate before single stepping. All other CTL bits should be set to zero. Single stepping can be used during normal execution of the instruction flow or to force execution of a particular instruction by loading the desired instruction into the IR portion of the CPUSCR. By forcing execution of particular instructions, single stepping can be used for memory and register access by the tool.

2.9 Exit from debug mode to normal execution

Exiting debug mode and returning to normal execution is achieved by first clearing the OCR[DMDIS] and OCR[DR] bits if not already cleared while leaving the OCR[MCLK] set. The next step is to write the appropriate information into the CPU scan chain register (CPUSCR), followed by a write to OCMD to set the OCMD[GO] bit and OCMD[EX] bit with the OCMD[RS] field indicating either the CPUSCR or No Register Selected. Once debug mode has been entered, it is required that a scan in and update to the CPUSCR be performed prior to exiting debug mode. If continuation of the normal instruction stream is desired, the external tool is responsible for inspection of the CTL register value when debug mode was entered to determine if the PC is invalid or needs to be offset prior to exiting debug mode. Also, the internal state bits indicated by “*” in the CTL should be restored to their original value when debug mode was entered if continuation of the normal instruction stream is desired. The IRStatus bits of the CTL should be set to zero with the exception of CTL[IRStat8] on SPC56x/PC56x devices with VLE. CTL[IRStat8] indicates if the current instruction in the IR is a VLE or non-VLE instruction. To begin instruction execution from an arbitrary location, the PC should be set to the desired location for execution to begin minus 0x4. The IR should be set to a **nop** (ex: 0x60000000). Then exit debug mode as mentioned above. The **nop** executes, then the core begins fetching instructions at the desired location for execution.

2.10 GPR access

The OnCE module provides the ability to read and write the general purpose registers (GPR) while in debug mode. Reading a general purpose register is achieved by single stepping over an **ori** instruction. As an example, to read the lower 32 bits of GPR **r1**, an **ori r1,r1,0** instruction is executed, and the result of the instruction is latched into WBBR_{low}. The external tool can then read the contents of WBBR_{low} by scanning out the CPUSCR.

Writing a register is achieved by single stepping over an **ori** instruction with the CTL[FFRA] bit set causing the WBBR_{low} to be used as the source register for the instruction. As an example, to write the lower 32 bit of GPR **r1**, an **ori r1, X, 0** is executed with the data to be written in WBBR_{low}. The X in the instruction is replaced by the WBBR_{low} register.

2.11 SPR access

The OnCE module provides the ability to read and write the special purpose registers (SPR) while in debug mode. Reading a special purpose register is achieved by saving the value in a GPR, single stepping over a **mf spr** instruction which brings the spr value into both the

saved GPR and WBBR_{low}, and then restoring the GPR. As an example, to read SPR 624, first save r31. Then execute **mfspir r31, 624**. The value that was in SPR 624 is now in WBBR_{low} of the CPUSCR and can be read by the external tool. Finally r31 should be restored.

To write an SPR, single step over a **mtspr** instruction with the value to write to the SPR in WBBR_{low} and the CTL[FFRA] bit set. For example, to write SPR 624 with the value 0x10050000, single step over **mtspr 624, X** with the value to write to SPR 624 in WBBR_{low} and CTL[FFRA] set. The X in the instruction is replaced by WBBR_{low}. DBCR0-3, DBSR, DBCNT, IAC1-4, DAC1-2 cannot be written by single stepping over **mtspr** like the other SPRs while in external debug mode. They can however be written by the method detailed in [Section 2.2: OnCE register access](#).

2.12 OnCE memory access

There are two ways to access memory mapped locations on the SPC56x/RPC56x devices: one is through the OnCE module, and the other is through the Nexus R/W access block. The OnCE module method requires that the CPU be in debug mode. The Nexus R/W access block does not require that the CPU be in debug mode. The Nexus R/W access block is also the faster method of accessing memory. This section covers access to memory mapped locations using the OnCE method. The Nexus R/W access block is covered in a following section.

Writing a memory location is achieved by first reading the contents of a GPR and saving that value, writing that GPR with the value to be written to memory, and single stepping over a **stw**, **sth**, or **stb** instruction with the address to write in WBBR_{low} and the CTL[FFRA] bit set. The GPR that was previously saved should be used as the rS field of the store instruction. After single stepping over the store instruction, the saved GPR value should then be restored. For example, to write the word 0xA5A5A5A5 to location 0x40000000, first save the value in r31. Then write the value 0xA5A5A5A5 to r31. The next step is to step over the instruction **stw r31, 0(X)** with 0x40000000 in WBBR_{low} and the CTL[FFRA] bit set. The X in the instruction is replaced by the WBBR_{low} register. GPR r31 should then be restored to its saved value.

Reading a memory location is achieved by first reading the contents of a GPR and saving that value, then single stepping a **lwz**, **lhz**, or **lbz** with the address to be read in WBBR_{low} and the CTL[FFRA] bit set. The GPR that was previously saved should be used as the rD field of the load instruction. The value read from the memory location is then in both the WBBR_{low} and the GPR whose value was previously saved.

After single stepping the load instruction and getting the read data from WBBR_{low}, the saved GPR value should then be restored. For example, to read a word from address location 0x40000000, first save the value in r31. Then single step over the instruction **lwz r31, 0(X)** with 0x40000000 in WBBR_{low} and the CTL[FFRA] bit set. The X in the instruction is replaced by the WBBR_{low} register. After the single step is complete, the data read from memory can be read by the external tool from WBBR_{low}. GPR r31 should then be restored to its saved value.

2.13 Breakpoints

The OnCE debug module provides the capability for both software and hardware breakpoints to be set at a particular address.

As a reference, instruction address hardware breakpoints are also discussed in this section.

2.13.1 Software breakpoints

Recognition of software breakpoints by the OnCE module are enabled by setting the OCR[FDB] bit along with the DBCR0[EDM] bit. Upon executing a **bkpt** pseudo-instruction, the CPU enters debug mode after the instruction following the **bkpt** pseudo-instruction has entered the instruction register. The **bkpt** pseudo-instruction is defined to be an all 0's instruction opcode.

2.13.2 Instruction address hardware breakpoints

The OnCE module provides the capability to set up to four instruction address hardware breakpoints.

When an instruction address breakpoint is hit, the CPU enters debug mode prior to executing the instruction at that address location. When debug mode is entered due to a breakpoint, the CPUSCR holds the address at which the breakpoint was set in the PC, and the IR contains the instruction at that address.

To use an instruction address hardware breakpoint, these steps are required:

1. Write the address at which a breakpoint is desired to one of the instruction address compare registers IAC1, IAC2, IAC3, or IAC4.
2. Enable the instruction address compare debug event in the DBCR0 by setting the appropriate enable bit; DBCR0[IAC1], DBCR0[IAC2], DBCR0[IAC3], or DBCR0[IAC4].
3. Exit from debug mode to normal execution to execute the desired code.
4. Poll the DBSR for the appropriate status bit to be set; DBSR[IAC1], DBSR[IAC2], DBSR[IAC3], or DBSR[IAC4].
5. If the appropriate status bit in DBSR is set, verify entry into debug mode by reading the OnCE status register.
6. Clear the appropriate status bit by writing a 1 to that bit location in the DBSR; DBSR[IAC1], DBSR[IAC2], DBSR[IAC3], or DBSR[IAC4].

3 Nexus Read/Write access block

The Nexus module provided on the cores of the SPC56x/RPC56x family of devices offers the capability for program trace, data trace, ownership trace, watch-point messaging and trigger, and read/write (R/W) access to memory mapped regions. This section covers R/W access using the Nexus R/W access block. The other features of the Nexus module are out of the scope of this document and are not covered.

Unlike the OnCE method of memory access, the Nexus R/W access block provides the ability to read and write memory without having to stop code execution by entering debug mode. The Nexus R/W access method provides faster memory access over the OnCE method due to fewer JTAG scans, and it doesn't require loading and single stepping over any instructions. The Nexus R/W access block is independent of the CPU.

The R/W access block is controlled by three Nexus registers. These registers are the Read/Write Access Control/Status register (RWCS), Read/Write Access Data register (RWD), and Read/Write Access Address register (RWA). Access to the Nexus registers is covered in [Section 3.1](#). RWCS is shown in [Figure 19](#) and [Figure 5](#) gives the field descriptions.

Figure 19. Read/Write Access Control/Status Register (RWCS)

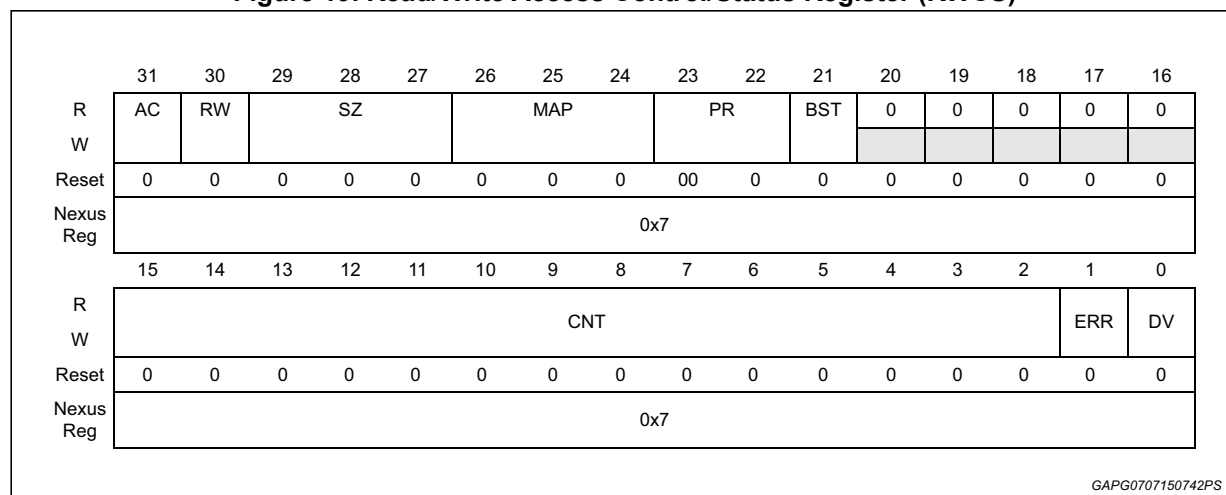


Table 5. RWCS field description

Bits	Name	Description
31	AC	Access control. 0 End access 1 Start access
30	RW	Read/write select. 0 Read access 1 Write access

Table 5. RWCS field description (continued)

Bits	Name	Description
29–27	SZ [2:0]	Word size. 0008-bit (byte) 0016-bit (half-word) 01032-bit (word) 01164-bit (double-word - only in burst mode) 100–111 Reserved (default to word)
26–24	MAP [2:0]	MAP select. 000Primary memory map 001–111 Reserved
23–22	PR [1:0]	Read/write access priority. 00Lowest access priority 01Reserved (default to lowest priority) 10Reserved (default to lowest priority) 11Highest access priority
21	BST	BST Burst control. 0 Module accesses are single bus cycle at a time. 1 Module accesses are performed as burst operation.
20–16	—	Reserved.
15–2	CNT [13:0]	Access control count. Number of accesses of word size SZ.
1	ERR	Read/write access error. See Table 6 .
0	DV	Read/write access data valid. See Table 6 .

[Table 6](#) details the status bit encodings.

Table 6. Read/Write access status bit encoding

Read action	Write action	ERR	DV
Read access has not completed	Write access completed without error	0	0
Read access error has occurred	Write access error has occurred	1	0
Read access completed without error	Write access has not completed	0	1
Not allowed	Not allowed	1	1

RWD is shown in [Figure 20](#).

Figure 20. Read/Write access data register (RWD)

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Read/Write Data															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Nexus Reg	0xA															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Read/Write Data															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Nexus Reg	0xA															

GAPG0707150750PS

RWA is shown in [Figure 21](#).

Figure 21. Read/Write access address register (RWA)

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Read/Write Address															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Nexus Reg	0x9															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Read/Write Address															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Nexus Reg	0x9															

GAPG0707150752PS

3.1 Nexus register access

Access to the Nexus registers is enabled by loading the Nexus3-Access instruction (0b00_0111_1100) into the OCMD of the OnCE. Once the Nexus3-Access instruction has been loaded, reading/writing a Nexus register requires two passes through the DR path the OnCE TAP controller state machine that are detailed below.

1. The first pass through the DR selects the Nexus register to be accessed and whether the access is a read or a write. This is achieved by loading an 8-bit value LSB first into the JTAG Data Register (DR). The format of this register is described in [Figure 22](#).

Figure 22. JTAG Data Register (DR)

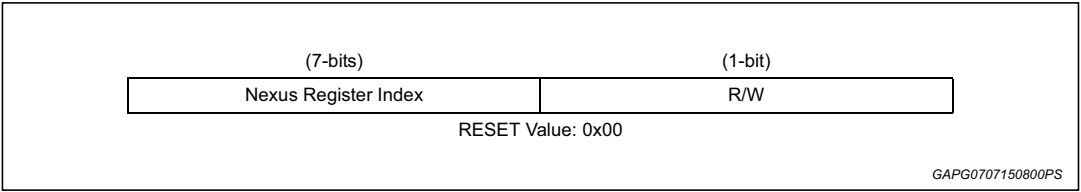


Table 7. Nexus register index

Nexus register index	Value shown at bottom of register description
Read/Write (R/W)	0 Read 1 Write

2. The second pass through the DR then shifts the data in or out depending on the type of access LSB first.
- a) During a read access, the data is latched from the Nexus register when the TAP controller state machine passes through the CAPTURE-DR state. The data from the Nexus register can be read by the external tool by shifting the data out in the SHIFT-DR state. The last bit is shifted out with TMS set to 1, causing transition to the EXIT1-DR state.
 - b) During a write access, the data is shifted in while in the SHIFT-DR state. The last bit is shifted in with TMS set to 1, causing transition to the EXIT1-DR state. The data is latched into the Nexus register when the TAP controller state machine passes through the UPDATE-DR state.

3.2 Single memory write access

The steps to perform a single memory write access via the Nexus R/W access block are:

1. Initialize RWA with the address to be written using Nexus register index 0x9.
2. Initialize RWCS using Nexus register index 0x7.
 - a) Access Control (AC) = 0b1 (to indicate start access)
 - b) Map Select (MAP) = 0b000 (primary memory map)
 - c) Access Priority (PR) = 0b00 (lowest priority)
 - d) Read/Write (RW) = 0b1 (write access)
 - e) Word Size (SZ) = 0b000 (8-bit) or 0b001 (16-bit) or 0b010 (32-bit)
 - f) Access Count (CNT) = 0b00_0000_0000_0000 or 0b00_0000_0000_0001 (single access)
 - g) Burst Control (BST) = 0b0 (burst disabled)
3. Initialize RWD using Nexus register index 0xA with the data to be written to the address in RWA. The endianness of the data needs to be right-justified little endian.
 - a) 8-bit value of 0xDE to be written to memory: RWD = 0x000000DE
 - b) 16-bit value of 0xDEAD to be written to memory: RWD = 0x0000ADDE
 - c) 32-bit value of 0xDEADBEEF to be written to memory: RWD = 0xEFBEADDE
4. The Nexus block then arbitrates for the system bus and transfer the data value from RWD to the memory mapped address in RWA. When the access has completed without error, then RWCS[ERR] = 0 and RWCS[DV] = 0. This indicates that the device is ready for the next access. Nexus also asserts the RDY pin when the transaction has completed without error. The external tool can use this as an alternative to polling the RWCS status bits.

3.3 Burst block memory write access

The steps to perform a burst block memory write access via the Nexus R/W access block are:

1. Initialize RWA with the first address to be written using Nexus register index 0x9. The address needs to be aligned on an 8-byte boundary. RWA[2:0] are ignored on a burst write.
2. Initialize RWCS using Nexus register index 0x7.
 - a) Access Control (AC) = 0b1 (to indicate start access)
 - b) Map Select (MAP) = 0b000 (primary memory map)
 - c) Access Priority (PR) = 0b00 (lowest priority)
 - d) Read/Write (RW) = 0b1 (write access)
 - e) Word Size (SZ) = 0b011 (64-bit)
 - f) Access Count (CNT) = 0b00_0000_0000_0100 (four double-words)
 - g) Burst Control (BST) = 0b1 (burst enabled)
3. Write all 32 bytes of data to be burst to RWD using Nexus register index 0xA, 32-bits at a time, starting with the first 32-bit word to be written to the address in RWA. This data

is buffered internally by the burst data buffer. The endianness of the 32-bit data written to RWD needs to be little endian.

Value of 0xDEADBEEF to be written to memory: RWD = 0xEFBEADDE

4. The Nexus block then arbitrates for the system bus and transfer the burst data from the burst data buffer to the memory starting at the address in RWA. When the access has completed without error, then RWCS[ERR] = 0 and RWCS[DV] = 0. This indicates that the device is ready for the next access. Nexus also asserts the RDY pin when the transaction has completed without error. The external tool can use this as an alternative to polling the RWCS status bits.

3.4 Single memory read access

The steps to perform a single memory read access via the Nexus R/W access block are:

1. Initialize RWA with the address to be read using the register index 0x9.
 - a) Initialize RWCS using Nexus register index 0x7.
 - b) Access Control (AC) = 0b1 (to indicate start access)
 - c) Map Select (MAP) = 0b000 (primary memory map)
 - d) Access Priority (PR) = 0b00 (lowest priority)
 - e) Read/Write (RW) = 0 (read access)
 - f) Word Size (SZ) = 0b000 (8-bit) or 0b001 (16-bit) or 0b010 (32-bit)
 - g) Access Count (CNT) = 0b00_0000_0000_0000 or 0b00_0000_0000_0001 (single access)
 - h) Burst Control (BST) = 0b0 (burst disabled)
2. The Nexus block then arbitrates for the system bus and the read data is transferred to RWD from the memory mapped address in RWA. When the access has completed without error, then RWCS[ERR] = 0 and RWCS[DV] = 1. This indicates that the device is ready for the next access. Nexus also asserts the RDY pin when the transaction has completed without error. The external tool can use this as an alternative to polling the RWCS status bits.
3. The data can then be read from the RWD register using Nexus register index 0xA. The data in RWD are right-justified little endian.
 - a) 8-bit value of 0xDE read from memory: RWD = 0x000000DE
 - b) 16-bit value of 0xDEAD read from memory: RWD = 0x0000ADDE
 - c) 32-bit value of 0xDEADBEEF read from memory: RWD = 0xEFBEADDE

3.5 Burst block memory read access

The steps to perform a burst block memory read access via the Nexus R/W access block are:

1. Initialize RWA with the first address to be read using Nexus register index 0x9. The address needs to be aligned on an 8-byte boundary. RWA[2:0] are ignored on a burst read.
2. Initialize RWCS using Nexus register index 0x7.
 - a) Access Control (AC) = 0b1 (to indicate start access)
 - b) Map Select (MAP) = 0b000 (primary memory map)
 - c) Access Priority (PR) = 0b00 (lowest priority)
 - d) Read/Write (RW) = 0b0 (read access)
 - e) Word Size (SZ) = 0b011 (64-bit)
 - f) Access Count (CNT) = 0b00_0000_0000_0100 (four double-words)-
 - g) Burst Control (BST) = 0b1 (burst enabled)
3. The Nexus block then arbitrates for the system bus and transfer the burst data from memory to the burst data buffer starting at the address in RWA. When the access has completed without error then RWCS[ERR] = 0 and RWCS[DV] = 1. See [Table 7](#) for details. This indicates that the device is ready for the next access. Nexus also asserts the RDY pin when the transaction has completed without error. The external tool can use this as an alternative to polling the RWCS status bits.
4. Read all 32 bytes of data from RWD using Nexus register index 0xA, 32-bits at a time, starting with the first 32-bit word read from the address in RWA. The endianness of the 32-bit data read from RWD is little endian.

Value of 0xDEADBEEF read from memory: RWD = 0xEFBEADDE

4 System initialization

For Flash programming, there is some system initialization that needs to be performed by the external tool.

The initialization to perform is the SRAM initialization.

4.1 Internal SRAM initialization

The SPC56x/RPC56x family of devices all contain internal SRAM that must be initialized after power-on-reset by 64-bit writes to the entire memory. This is necessary to initialize the error-correcting code (ECC) logic.

The easiest way to do this with an external tool is to single step over a number of **stmw** (store multiple words) instructions with r0 as the rS field, the address to begin the writes in WBBR_{low}, and CTL[FFRA] set. This causes all 32 GPRs to be written to memory beginning at the address in WBBR_{low} using 64-bit writes. For example, the starting physical address of the internal SRAM is 0x40000000. Stepping over **stmw** r0, 0(X) with the 0x40000000 in WBBR_{low} causes all 32 GPRs to be written to memory starting at address 0x40000000 using 64-bit writes. Then 0x80 should be added to the address, written to WBBR_{low} and **stmw** executed again. This should be done [size of internal SRAM] / [0x80] times to initialize the entire internal SRAM.

4.2 Setting up the memory management unit

The memory management unit (MMU) on the SPC56x/RPC56x devices, that include this hardware implementation (for example SPC560B/RPC560B devices don't have this hardware implementation), provides memory translation from effective to real addresses. For the purpose of Flash programming, it is easier to setup the MMU so that the effective addresses are the same as the real addresses. For the CPU to access a memory mapped region, an MMU entry for that memory space must be configured. The external tool has the capability to setup MMU entries by writing the appropriate SPRs and single stepping over the **tlbwe** instruction.

For Flash programming, the external tool should set up at least four MMU entries. The steps required to setup an MMU entry are:

1. Setup MAS0 (SPR 624).
2. Setup MAS1 (SPR 625).
3. Setup MAS2 (SPR 626).
4. Setup MAS3 (SPR 627).
5. Execute **tlbwe** (0x7C0007A4).

5 Creating the Flash programming tool

This section covers the Flash drivers provided by STMicroelectronics®, the tool requirements, and also suggests a functional division of the tool.

5.1 Flash programming drivers

STMicroelectronics provides a set of Flash drivers called Standard Software Driver for C90FL Flash (SSD). These drivers are easy to use and well documented. The drivers come in a c-array format, s-record format, and library format. For external tools, the s-record format is the easiest to use. Instructions on how to use the s-record format set of drivers are discussed in the next section. There are also examples of using the three driver formats provided with the installation of the SSD.

5.2 Tool requirements

The Flash programming tool must perform several required tasks to program the Flash on the SPC56x/PC56x devices.

5.2.1 Debug and driver initialization

The first requirement is to enter debug mode followed by the appropriate initialization. These steps must be performed every time a reset occurs or a new SPC56x/PC56x device is connected to the Flash programming tool. The steps to do this are listed below.

1. Ensure that the JTAGC currently has control of the TAP by going through the PAUSE-DR state. See [Section 1.4.2: Test mode](#) for details.
2. Enable the OnCE TAP controller by the method outlined in [Section 2.1: Enabling the OnCE TAP controller](#).
3. Enter debug mode during reset and enable recognition of software breakpoints as mentioned in [Section 2.5: Entering debug mode during reset](#).
4. Enable external debug mode and clear the debug status bits as mentioned in [Section 2.6: Enabling external debug mode and other initialization](#).
5. Setup the MMU as described in [Section 4.2: Setting up the memory management unit](#), if it is necessary depending on the device used.
6. Initialize the internal SRAM as mentioned in [Section 4.1: Internal SRAM initialization](#).

The next step is to load the s-record format Flash driver set. The required drivers to load are FlashInit, SetLock, FlashProgram, and FlashErase. The other drivers are not required but could be loaded if features other than erasing and programming are desired. The s-record drivers all specify the start address to be 0x0 however the drivers are position independent. The tool should load each driver into internal SRAM at a desired location. The tool is responsible for knowing where these drivers are located in memory. Space should also be reserved in the internal SRAM for variables needed for the driver set. For example, the SSD_CONFIG structure is used for all drivers.

Space must be allocated for this structure. Space should also be allocated in internal SRAM for the stack and a buffer for the data to be programmed to Flash. The drivers and variables can be written by the method described [Section 2.12: OnCE memory access](#) or the methods described in [Section 3: Nexus Read/Write access block](#).

5.2.2 FlashInit

After the drivers are loaded into internal SRAM, operations on the Flash can begin. The FlashInit driver should be called first to initialize the Flash.

This function reads the Flash configuration information from the Flash control registers and initialize parameters in SSD configuration structure. 'FlashInit()' must be called prior to any other flash operations.

The steps required are outlined below.

1. Setup the SSD_CONFIG structure as required. This is documented in the SSD user's manual. The user should correctly initialize the fields *c90flRegBase*, *mainArrayBase*, *shadowRowBase*, *shadowRowSize*, *pageSize*, and *BDMEnable*. The other fields are initialized when FlashInit is executed. *BDMEnable* should be set to 1 to cause debug mode to be entered via a software breakpoint when each driver completes execution. This is the easiest way for the external tool to determine when driver execution is complete.
2. Setup r1 as the stack pointer by writing r1 using the method described in [Section 2.10: GPR access](#).
3. Setup r3 to point to the SSD_CONFIG structure in internal SRAM.
4. Set the PC to the beginning of FlashInit minus 0x4 and load the IR with a **nop** (0x60000000). See [Section 2.7: CPU Status and Control Scan Chain Register \(CPUSCR\)](#) for details.
5. Exit debug mode and begin execution of the driver as described in [Section 2.9: Exit from debug mode to normal execution](#).
6. Poll the OnCE Status Register to determine when debug mode has been re-entered. Reading the OnCE Status Register is described in [Section 2.4: OnCE status register](#).
7. When debug mode has been entered, read the return value in r3.

5.2.3 SetLock

After the Flash has been initialized using the FlashInit function, the SetLock function should be called as many times as required to unlock or lock the appropriate Flash blocks. This function sets the block lock state for Shadow/Low/Middle/High address space on the C90FL module to protect them from program/erase. The API provides password to enable block lock register writes when needed and write the block lock value to block lock register for the requested address space.

For the low and mid blocks as well as the shadow block, the lock bits in both the primary and secondary lock registers must be set appropriately. It is recommended to lock the shadow block unless programming of the shadow block is absolutely necessary. Erasing the shadow block without re-programming the censorship information prior to a reset causes the device to be censored with an invalid password and the Flash of the device is not able to be uncensored.

The steps to call the SetLock driver are listed below.

1. Setup r1 as the stack pointer.
2. Setup r3 to point to the SSD_CONFIG structure in internal SRAM.
3. Setup r4 with the lock indicator.
4. Setup r5 with the lock state.
5. Setup r6 with the correct password.
6. Set the PC to the beginning of SetLock minus 0x4 and load the IR with a **nop** (0x60000000).
7. Exit debug mode and begin execution of the driver.
8. Poll the OnCE Status Register to determine when debug mode has been re-entered.
9. When debug mode has been entered, read the return value in r3.

5.2.4 FlashErase

When the appropriate blocks have been locked or unlocked, then an erase of the unlocked blocks can be performed.

This function erases the enabled blocks in the main array or the shadow row. Input arguments together with relevant Flash module status is checked, and relevant error code returns if there is any error.

The steps to call the FlashErase driver are listed below.

1. Setup r1 as the stack pointer.
2. Setup r3 to point to the SSD_CONFIG structure in internal SRAM.
3. Setup r4 to indicate either the main array or shadow block to be erased. Erasing the shadow block without re-programming the censorship control information prior to a reset results in the device being censored.
4. Setup r5 to select the low address array blocks to be erased.
5. Setup r6 to select the mid address array blocks to be erased.
6. Setup r7 to select the high address array blocks to be erased.
7. Setup r8 with the pointer to the call back function.
8. Set the PC to the beginning of FlashErase minus 0x4 and load the IR with a **nop** (0x60000000).
9. Exit debug mode and begin execution of the driver.
10. Poll the OnCE Status Register to determine when debug mode has been re-entered.
11. When debug mode has been entered, read the return value in r3.

5.2.5 FlashProgram

When Flash blocks have been erased, they then can be programmed. To program the Flash, the internal SRAM should first be written with the data to be programmed in Flash. Depending on the size of the data buffer in internal SRAM and the size of the data to be programmed to Flash, the FlashProgram driver may need to be called multiple times.

This function programs the specified flash areas with the provided source data. Input arguments together with relevant flash module status is checked, and relevant error code is returned if there is any error.

The steps to call the FlashProgram driver are listed below.

1. Setup r1 as the stack pointer.
2. Setup r3 to point to the SSD_CONFIG structure in internal SRAM.
3. Setup r4 to point to the destination address to be programmed in Flash. This address must be aligned on a double word boundary.
4. Setup r5 to the size of the data in bytes to be programmed to Flash. This size should be a multiple of 8 and the combination of the destination address and size should be entirely contained in the main array or shadow block.
5. Setup r6 to point to the source buffer of data in internal SRAM to be programmed to Flash. This address should be aligned on a word boundary.
6. Setup r7 with the pointer to the call back function.
7. Set the PC to the beginning of FlashProgram minus 0x4 and load the IR with a **nop** (0x60000000).
8. Exit debug mode and begin execution of the driver.
9. Poll the OnCE Status Register to determine when debug mode has been re-entered.
10. When debug mode has been entered, read the return value in r3.

5.2.6 Using other drivers

There are other useful drivers provided with the driver set. For example, BlankCheck can be used to verify that a particular region is erased, and ProgramVerify can be used to verify that the data was programmed correctly. The method to use these other drivers is similar to the above mentioned drivers except that the GPRs needs to be setup appropriately for that particular driver.

5.3 Functional division of the external tool

Before creating the external tool for Flash programming, thought should be given to how the software should be divided to meet the tool's functional requirements. The following list gives an example of a simple functional division of the software:

- OnCE TAP controller enable, [Section 2.1: Enabling the OnCE TAP controller](#).
- OnCE register read, [Section 2.2: OnCE register access](#).
- OnCE register write, [Section 2.2: OnCE register access](#).
- OnCE status register read, [Section 2.4: OnCE status register](#).
- Debug mode during reset, [Section 2.5: Entering debug mode during reset](#).
- Single step, [Section 2.8: Single step](#).
- Exit from debug mode, [Section 2.9: Exit from debug mode to normal execution](#).
- Write GPR, [Section 2.10: GPR access](#).
- Read GPR, [Section 2.10: GPR access](#).
- Write SPR, [Section 2.11: SPR access](#).
- Read SPR, [Section 2.11: SPR access](#).
- OnCE memory read, [Section 2.12: OnCE memory access](#).
- OnCE memory write, [Section 2.12: OnCE memory access](#).
- Nexus3 single write, [Section 3.2: Single memory write access](#).
- Nexus3 burst write, [Section 3.3: Burst block memory write access](#).
- Nexus3 single read, [Section 3.4: Single memory read access](#).
- Nexus3 burst read, [Section 3.5: Burst block memory read access](#).
- MMU initialization, [Section 4.2: Setting up the memory management unit](#).
- Internal SRAM initialization, [Section 4.1: Internal SRAM initialization](#).
- S-record parser and loader, [Section 5.1: Flash programming drivers](#)
- Debug and driver initialization, [Section 5.2.1: Debug and driver initialization](#).
- Flash initialization, [Section 5.2.2: FlashInit](#).
- Flash block lock initialization, [Section 5.2.3: SetLock](#).
- Flash erase, [Section 5.2.4: FlashErase](#).
- Flash program, [Section 5.2.5: FlashProgram](#).

6 Revision history

Table 8. Document revision history

Date	Revision	Changes
24-Jan-2012	1	Initial release.
18-Sep-2013	2	Updated disclaimer.
23-Sep-2015	3	Added new Root Part Numbers.

IMPORTANT NOTICE – PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2015 STMicroelectronics – All rights reserved