



Grandstream Networks, Inc.

XML Configuration File Generator User Guide



Table of Content

INTRODUCTION.....	4
CHANGE LOG.....	5
Version 4.1.....	5
Version 4.0.....	5
Version 3.5.....	5
Version 3.4.....	5
Version 3.3.....	5
Version 3.2.....	5
Version 3.1.....	5
Version 3.0.....	5
FILES IN THE PACKAGE.....	6
Example TXT Config Template (Config_Example_Ver1.txt).....	6
Example CSV File (MAC_Ver1.csv).....	9
Example XML Config Template (Config_Example_Ver2_GXV.xml).....	10
Example CSV File (MAC_Ver2_GXV.csv).....	11
USE THE XML CONFIGURATION GENERATOR.....	13
Program Menu.....	15
General Settings.....	16
Use CSV file to Generate XML files.....	17
Use Manual Settings to Generate XML Files.....	18



Table of Figure

Figure 1: Files in the package	6
Figure 2: Example CSV file in Excel	9
Figure 3: Example CSV file in Notepad++	9
Figure 4: Example CSV file in Excel	11
Figure 5: Example CSV file in Notepad++	11
Figure 6: Program GUI - I.....	13
Figure 7: Program GUI -II.....	14
Figure 8: Program GUI - III.....	15
Figure 9: Program Menu	15
Figure 10: General Settings	16
Figure 11: Use CSV file to generate XML	17
Figure 12: Use Manual Settings.....	18



INTRODUCTION

All Grandstream SIP products support being provisioned by an XML configuration file which consists of <Pxxxx > tags (xxxx is a number that can be 0-99999) known as P values. Every P value is mapped to a configurable option of the device. By setting/changing the values of those P values, we can provision the device with zero touch. This XML provisioning mechanism is beneficial to every GS customer since the very beginning. To learn more about Grandstream SIP device provisioning, please refer [GS SIP Device Provisioning Guide](#).

Since there are thousands of P values for each product, and all required configurations come with a default value, usually there is no need to set all the P values but only the ones to be customized in real usage. Also, some users, especially resellers and VoIP providers, need to deploy a lot of devices by using the XML files that only have different SIP credentials while all other settings such as network settings, call feature settings, audio settings and etc., which are the same parameters. Creating XML file one by one for each device is very time consuming. This XML configuration file generator is designed to save time for these customers in this situation.

The principle of this software is to use a TXT/XML format file to store all these “same” values of P values, and use a CSV format file to store the “various” value of P values, and generate a batch of XML configuration files from the two input files, with most identical settings having only a few fields different.

This user guide introduces how to use the windows-based XML configuration file generator to create XML configuration files.



CHANGE LOG

Version 4.1

- Added support for Ver 2 XML template. (Only with CSV setting, not manual setting as alias may be different for each product.)
- Added support to self-adjust to high resolution screen and the scale and layout settings.

Version 4.0

- Added support for customized CSV file header to support unlimited P values. (for multiple accounts). Since v4.0, the CSV header must be the P values except the “mac” column. Users can add as many P values as needed into their CSV files to generate new XML config files.
- Removed restriction for GS MAC OUI, now it supports any MAC OUI address for GS Wave devices.
- Updated the UI to break CSV file and manual settings into 2 separate tabs to avoid confusing.

Version 3.5

- Fixed the issue that Windows Defense consider this tool as virus.

Version 3.4

- Added support for Grandstream new MAC OUI, now MAC address start with “C074AD” (not case sensitive) will also be supported.

Version 3.3

- Fixed bug that mistakenly escape \ sign into ', correct it to escape ' into '.

Version 3.2

- Added Gateway and Subnet Mask setting in CSV file.

Version 3.1

- Added IP address setting in CSV file.
- Fixed encrypt xml file could crash because of some template have non-ascii string issue.

Version 3.0

- Initial Version of 3.x, changed GUI framework from windows 2.3.



FILES IN THE PACKAGE

After unzipping the software package, you will find all the files as below screenshot.




Name	Date modified	Type	Size
 Example_Configure_CSV_file	7/21/2020 4:43 PM	File folder	
 gs_xml_generator.exe	7/8/2020 3:36 AM	Application	58,826 KB
 XML Configuration File Generator User Guide 4.1.pdf	7/21/2020 4:41 PM	Adobe Acrobat Docu...	542 KB

Figure 1: Files in the package

Main program is: **GSXmlGenerator_[version].exe**, double click the exe file to open it.

Example_Configure_CSV_file: It is a folder contains four example files. One example file is the “TXT format file” which is the configuration template containing all the constant P values (SIP credential P values can be different). The second example file is a CSV file which contains variables for SIP credential related P values for the “TXT format file”. The third example file is the “XML format file” (using GXV model as the example) which is the configuration template containing all pre-configure parameters (SIP credential parameters can be different). The fourth example file is a CSV file which contains variables for the pre-configure parameters for the “XML format file” (using GXV model as the example).

Notes:

1. For XML format file examples, the parameters in the XML template and the CSV file should match the parameters in the corresponding model (for different models, e.g. GXV/DP models, the parameter for the same option may be different) so that the parameters can be provisioned into the device successfully.
2. If the parameters in the CSV file do not exist in the XML template, the parameters will be created in the generated XML files.

Example TXT Config Template (Config_Example_Ver1.txt)

Below is the txt config template in the downloaded folder. It only includes a few P values for the most basic SIP account settings. You can always add as many P values as you need.

To find all the P values, you can download the full P value config template for all the devices from Grandstream Networks official website [tools page](#).



```
#####  
### Configuration Template Example for testing the converting tool ###  
#####  
#####  
## Example P values ##  
#####  
  
# Account 1:  
# Account Active. 0 - No, 1 - Yes. Default value is 0  
# Number: 0, 1  
P271 =  
  
# Account Name  
P270 =  
  
# SIP Server  
P47 =  
  
# SIP User ID  
P35 =  
  
# SIP Authenticate ID  
P36 =  
  
# SIP Authenticate Password  
P34 =  
  
# Name (Display Name, e.g., John Doe)  
P3 =  
  
# Account 2:  
# Account Active. 0 - No, 1 - Yes. Default value is 0  
# Number: 0, 1  
P401 =  
  
# Account Name  
P417 =  
  
# SIP Server  
P402 =  
  
# SIP User ID  
P404 =  
  
# SIP Authenticate ID  
P405 =  
  
# SIP Authenticate Password  
P406 =  
  
# Name (Display Name, e.g., John Doe)  
P407 =  
  
### IP Address.  
### Note: Please change Subnet mask, Gateway, DNS Servers to your network.  
### GS_XML_Generator will only configure the IP address.
```



```

# IP Address Mode. 0 - DHCP, 1 - Static IP, 2 - PPPoE
# Number: 0,1,2
# Mandatory
# Reboot required
# If you want to use this tool to set IP address, set P8=1 then.
P8=1

#IP Address. Ignore if DHCP or PPPoE is used
P9=
P10=
P11=
P12=

#Subnet mask. Ignore if DHCP or PPPoE is used
P13=
P14=
P15=
P16=

#Gateway. Ignore if DHCP or PPPoE is used
P17=
P18=
P19=
P20=

#DNS server 1. Ignore if DHCP or PPPoE is used
P21=
P22=
P23=
P24=

#DNS server 2. Ignore if DHCP or PPPoE is used
P25=
P26=
P27=
P28=
#####
## Example P values End                                     ##
#####

```

There are some regulations for the txt config template file:

1. Lines starting with “#” will be commented in XML file.
2. Lines starting with “Pxxxxx = value” will be set in XML as <Pxxxxx>values</Pxxxxx>.
3. The SIP account 1 and account 2 related P values in template will be replaced with the value in the CSV file and all other values will use the same ones in template. For example, if we set SIP server P47 = Grandstream.com in the template, all the XML files will be <P47>Grandstream.com</P47>.



Example CSV File (MAC_Ver1.csv)

You can open and edit the CSV file in MS Office Excel or editor like Notepad++ (be aware of the comma).

MS Office Excel:

	A	B	C	D	E	F	G	H	I	J	K	L	P11
1	mac	P35	P34	P36	P270	P404	P406	P405	P417	P8	P9	P10	P11
2	000B82200001	test1_1	pass1_1	auth1_1	name1_1	test2_1	pass2_1	auth2_1	name2_1	1	192	168	
3	000B82200002	test1_2	pass1_2	auth1_2	name1_2	test2_2	pass2_2	auth2_2	name2_2	1	192	168	
4	000B82200003	test1_3	pass1_3	auth1_3	name1_3	test2_3	pass2_3	auth2_3	name2_3	1	192	168	
5	000B82200004	test1_4	pass1_4	auth1_4	name1_4	test2_4	pass2_4	auth2_4	name2_4	1			
6	000B82200005	test1_5	pass1_5	auth1_5	name1_5	test2_5	pass2_5	auth2_5	name2_5	1	192	168	

Figure 2: Example CSV file in Excel

Notepad++

```

MAC_Ver1.csv
1 mac, P35, P34, P36, P270, P404, P406, P405, P417, P8, P9, P10, P11, P12, P13, P14, P15, P16, P17, P18, P19, P20
2 000B82200001, test1_1, pass1_1, auth1_1, name1_1, test2_1, pass2_1, auth2_1, name2_1, 1, 192, 168, 1, 101, 255, 255
3 000B82200002, test1_2, pass1_2, auth1_2, name1_2, test2_2, pass2_2, auth2_2, name2_2, 1, 192, 168, 2, 102, 255, 255
4 000B82200003, test1_3, pass1_3, auth1_3, name1_3, test2_3, pass2_3, auth2_3, name2_3, 1, 192, 168, 3, 103, 255, 255
5 000B82200004, test1_4, pass1_4, auth1_4, name1_4, test2_4, pass2_4, auth2_4, name2_4, 1, , , , , , 192, 168, 4, 1
6 000B82200005, test1_5, pass1_5, auth1_5, name1_5, test2_5, pass2_5, auth2_5, name2_5, 1, 192, 168, 5, 105, 255, 255
7
  
```

Figure 3: Example CSV file in Notepad++

There are some regulations for the CSV file:

1. The first line of the CSV file includes the parameters in the config template. The P values must match the actual P values in the config template in order to provision the correct parameters to the device.
2. The MAC address is used for identifying each XML files. If there are any duplicated MAC addresses in the CSV file, the generated XML file will be updated with the last row parameters of the duplicated MAC address.
3. The order of the columns does not matter; however, a column of "mac" is required. The value of "mac" column is not case sensitive, it only allows 0-9, a-f and A-F.
4. Other than MAC address, all other settings in CSV file are optional and can be left blank.



Example XML Config Template (Config_Example_Ver2_GXV.xml)

Below is the XML config template in the downloaded folder. The example file is generated based on the parameters in GXV models. It only includes a few parameters for GXV account settings. You can always add as many P values as you need based on the parameters in GXV models. To find all the parameters, you can download the full parameters config template for other models from Grandstream Networks official website [tools page](#).

```
<?xml version="1.0" encoding="UTF-8"?>
<gs_provision version="1">
  <config version="2">

    <!--#####-->
    <!--## Configuration Template ##-->
    <!--#####-->

<!-- Account 1 Active -->
    <!-- Yes, No -->
    <item name="account.1.enable">Yes</item>
    <!-- Account Name -->
    <item name="account.1.name"></item>
    <!-- SIP Server -->
    <item name="account.1.sip.server.1.address"></item>
    <!-- SIP User ID -->
    <item name="account.1.sip.userid"></item>
    <!-- SIP Authentication ID -->
    <item name="account.1.sip.subscriber.userId"></item>
    <!-- SIP Authentication Password -->
    <item name="account.1.sip.subscriber.password"></item>
    <!-- Display Name -->
    <item name="account.1.sip.subscriber.name"></item>
<!-- Account 2 Active -->
    <!-- Yes, No -->
    <item name="account.2.enable">Yes</item>
    <!-- Account Name -->
    <item name="account.2.name"></item>
    <!-- SIP Server -->
    <item name="account.2.sip.server.1.address"></item>
    <!-- SIP User ID -->
    <item name="account.2.sip.userid"></item>
    <!-- SIP Authentication ID -->
    <item name="account.2.sip.subscriber.userId"></item>
    <!-- SIP Authentication Password -->
    <item name="account.2.sip.subscriber.password"></item>
    <!-- Display Name -->
    <item name="account.2.sip.subscriber.name"></item>

    <!--#####-->
    <!--## P values End ##-->
    <!--#####-->
  </config>
</gs_provision>
```



There are some regulations for the XML config template file:

1. Lines starting with “<!--” will be commented in XML file.
2. Lines starting with “<item name = parameter” will be set in XML as <Pxxxx>values</Pxxxx>, the parameter must correspond the P value in the device.
3. The SIP account 1 and account 2 related P values in template will be replaced with the value in the CSV file and all other values will use the same ones in template. For example, if we set SIP server **account.1.sip.server.1.address** = Grandstream.com in the template, all the generated XML files will be <P47>Grandstream.com</P47>.

Example CSV File (MAC_Ver2_GXV.csv)

You can open and edit the CSV file in MS Office Excel or editor like Notepad++ (be aware of the comma). The screenshots below are the CSV example based on GXV model.

MS Office Excel:

	A	B	C	D	E	F	G
1	mac	account.1.name	account.1.sip.server.1.address	account.1.sip.userid	account.1.sip.subscriber.userid	account.1.sip.subscriber.password	account.1.sip.subscriber.name
2	000B82000001	test1_1	pass1_1	auth1_1	name1_1	test1_2	pass1_2
3	000B82000002	test2_1	pass2_1	auth2_1	name2_1	test2_2	pass2_2
4	000B82000003	test3_1	pass3_1	auth3_1	name3_1	test3_2	pass3_2
5	000B82000004	test4_1	pass4_1	auth4_1	name4_1	test4_2	pass4_2
6	000B82000005	test5_1	pass5_1	auth5_1	name5_1	test5_2	pass5_2

Figure 4: Example CSV file in Excel

Notepad++

```

MAC_Ver2_GXV.csv
1 mac,account.1.name,account.1.sip.server.1.address,account.1.sip.userid,account.1.sip.subscriber.userid,
2 000B82000001,test1_1,pass1_1,auth1_1,name1_1,test1_2,pass1_2,test6_1,pass6_1,auth6_1,name6_1,test6_2,
3 000B82000002,test2_1,pass2_1,auth2_1,name2_1,test2_2,pass2_2,test7_1,pass7_1,auth7_1,name7_1,test7_2,
4 000B82000003,test3_1,pass3_1,auth3_1,name3_1,test3_2,pass3_2,test8_1,pass8_1,auth8_1,name8_1,test8_2,
5 000B82000004,test4_1,pass4_1,auth4_1,name4_1,test4_2,pass4_2,test9_1,pass9_1,auth9_1,name9_1,test9_2,
6 000B82000005,test5_1,pass5_1,auth5_1,name5_1,test5_2,pass5_2,test8_1,pass10_1,auth10_1,name10_1,test1
  
```

Figure 5: Example CSV file in Notepad++

There are some regulations for the CSV file:

1. The first line of the CSV file includes the parameters in the XML file. The parameters must match the actual parameters in the device in order to provision the correct parameters to the device.
2. The MAC address is used for identifying each XML files. If there are any duplicated MAC addresses in the CSV file, the generated XML file will be updated with the last row parameters of the duplicated MAC address.



3. The order of the columns does not matter; however, a column of “mac” is required. The value of “mac” column is not case sensitive, it only allows 0-9, a-f and A-F.
4. Other than MAC address, all other settings in CSV file are optional and can be left blank.

Notes:

1. For XML format file examples, the parameters in the XML template and the CSV file should match the parameters in the corresponding model (for different models, e.g. GXV/DP models, the parameter for the same option may be different) so that the parameters can be provisioned into the device successfully.
2. If the parameters in the CSV file do not exist in the XML template, the parameters will be created in the generated XML files.



USE THE XML CONFIGURATION GENERATOR

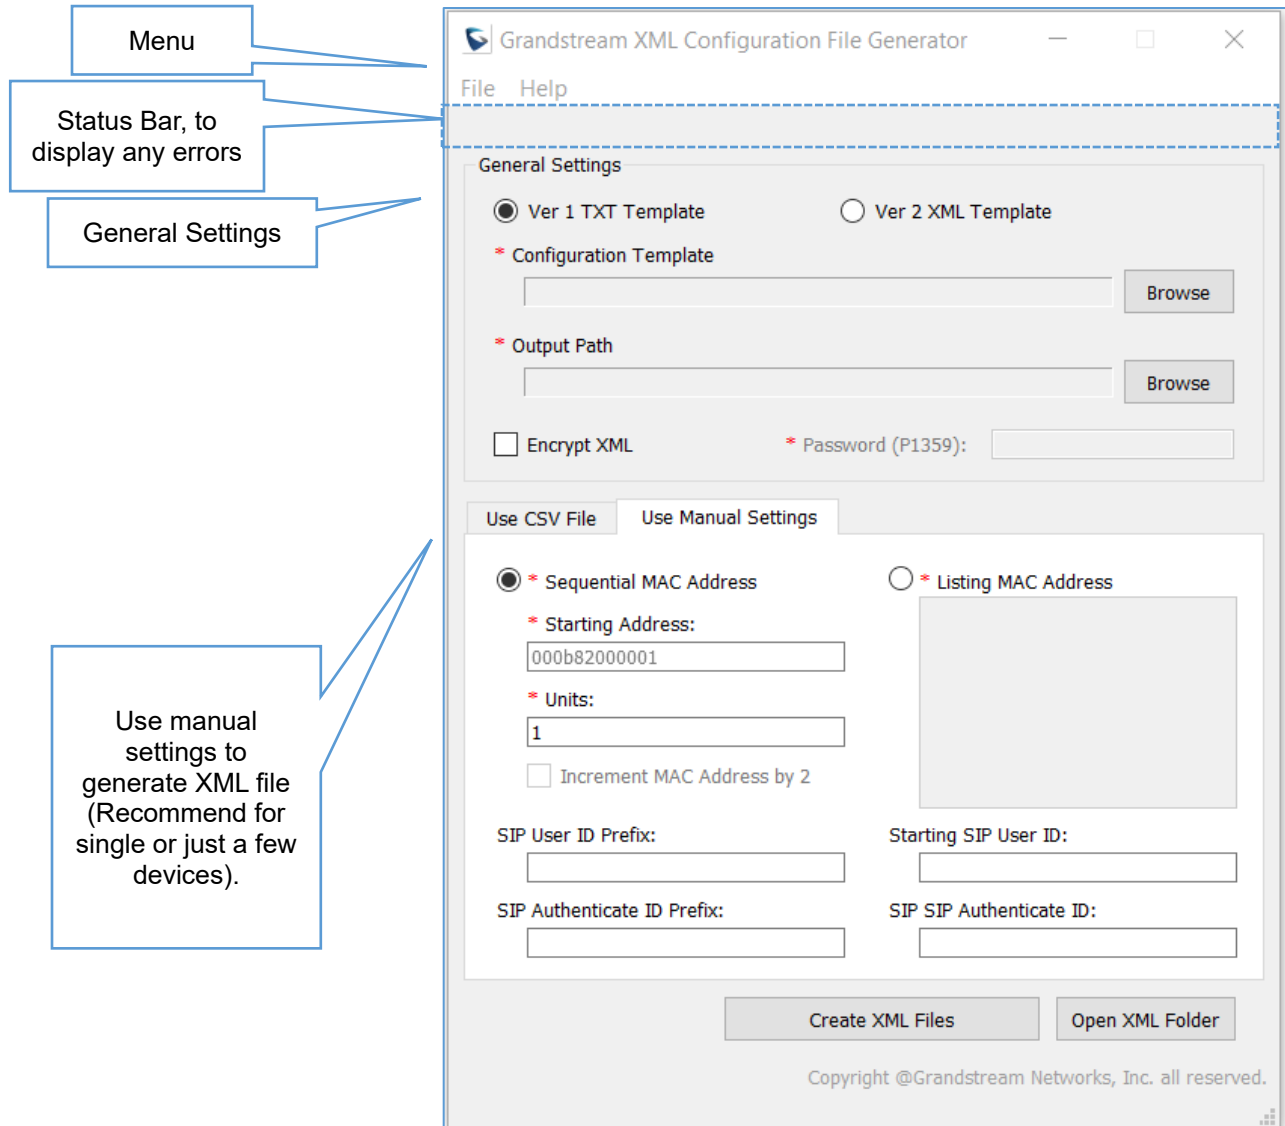


Figure 6: Program GUI - I



Use CSV file to generate XML file (Recommend for massive devices).

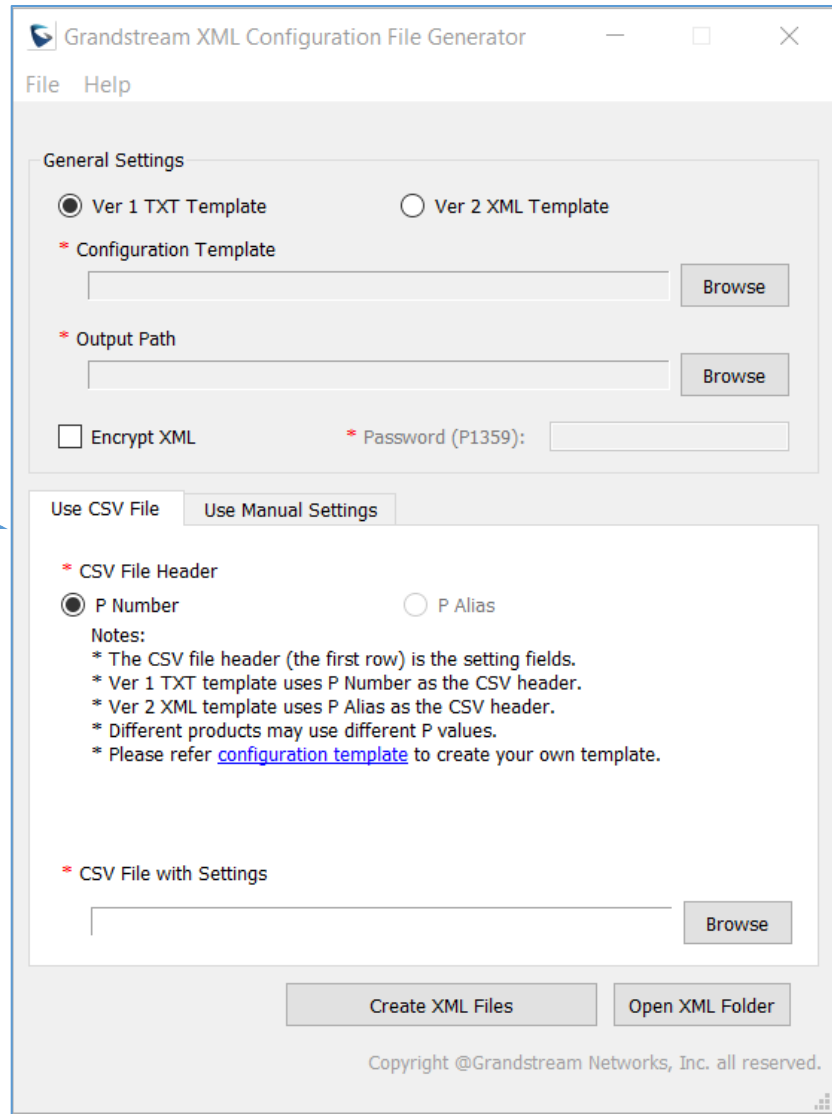


Figure 7: Program GUI -II



For Ver 2 XML template mode, use CSV file to generate XML file. Use Manual Settings mode is disabled.

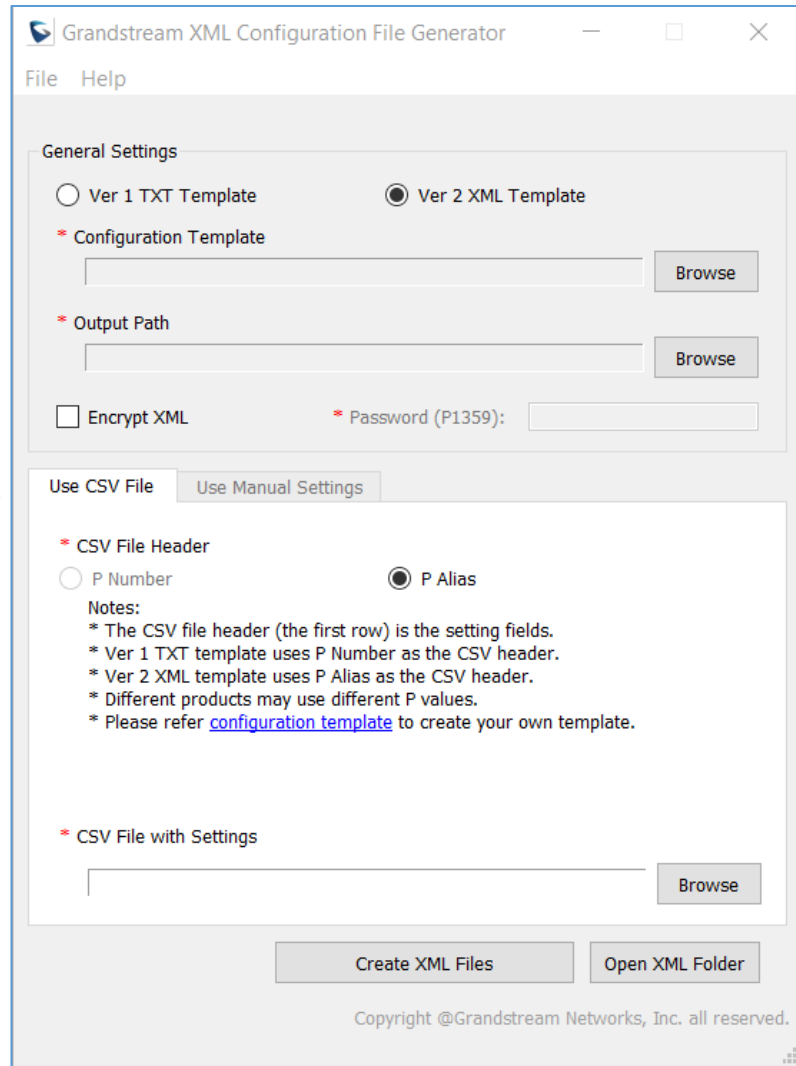


Figure 8: Program GUI - III

Program Menu

Program menu provide 2 functions allow user to change the XML header text and reset all the field to make this tool more helpful for general users. You can use the help menu to access the user manual online.

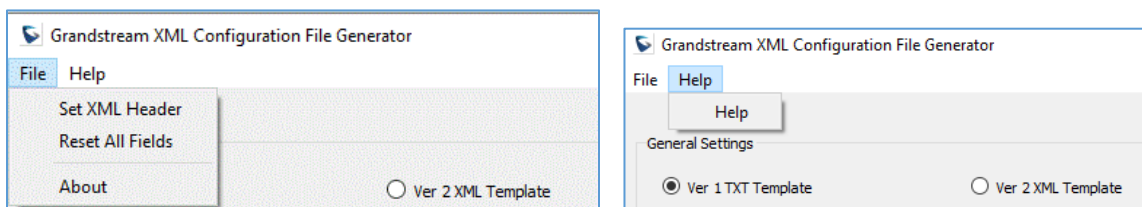


Figure 9: Program Menu



Menu	Description
Set XML Header	Default XML header is “Grandstream XML Provisioning Configuration”, you can change the file header to others.
Reset All Fields	Click to clear all the input on the program GUI.
About	Version and copyright about this program.
Help	Click to open the online User Manual.

General Settings

Users can select “Ver 1 TXT Template” to generate the XML files with “.txt” file or generate the XML files with “.xml” file by selecting “Ver 2 XML Template”. Users can use “Ver 1 TXT Template” to generate XML files by CSV file or Manual Settings each time. If users select “Ver 2 XML Template”, users can only use CSV file to generate XML configuration files.

For all methods, users must configure this General Settings section. User must choose the configuration template which is a TXT/XML file, and the output path. Users can optionally choose to encrypt the XML file or not. Any pre-check error will display in the Status Bar.

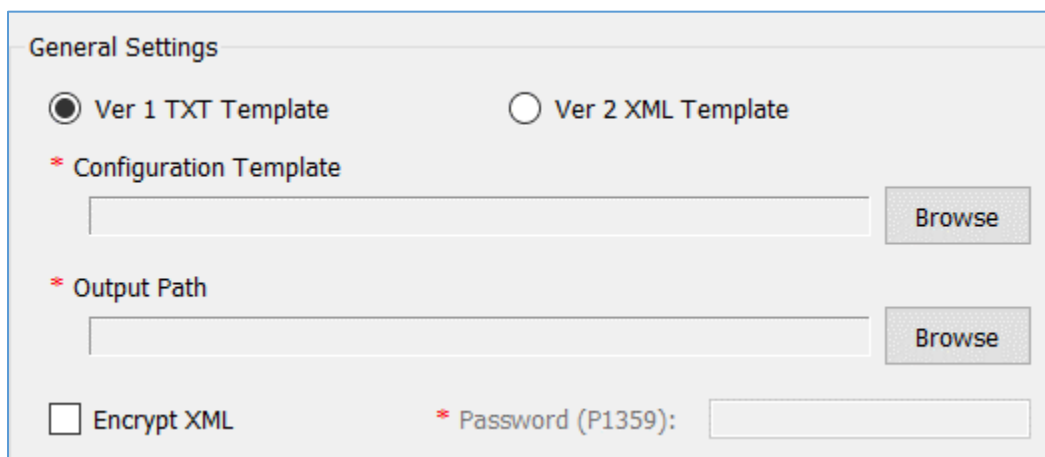


Figure 10: General Settings

General Settings	Description
Configuration Template	Click “Browse” button to choose the TXT/XML template you want to use. You can download all the parameters from Grandstream Support page and add more parameters to the template.



Output Path	Click “Browse” button to choose the output path of your XML files.
Encrypt XML	Check this option if you want to encrypt your XML files.
Password	If you checked “Encrypt XML” option, you can enter the password here. The password cannot be null and should only contains ASCII characters between 33 to 126. If you choose to encrypt the XML files, make sure your devices have pre-configured P1359 with the same value of this password. When the device tries to be provisioned by the XML file, it will use P1359 to decrypt the XML file. More detailed please refer GS Provisioning Guide .

Use CSV file to Generate XML files

Use CSV file is one option to use this tool, after you click “Browse” button choose the CSV file, you can select the CSV file with the configured parameters. You can click the “Open XML Folder” option to open the Output Path you configured in the General Settings.

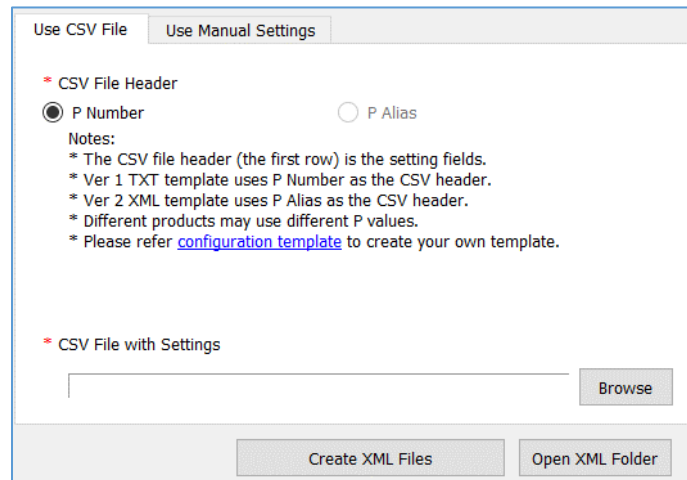


Figure 11: Use CSV file to generate XML

Use CSV File	Description
Browse	Click “Browse” button to choose the CSV file you want to use. The csv file requires a MAC field in each row and options to have the parameters of the device. On the CSV file, each row corresponds to an XML file. Every XML file will be named as cfg{MAC}.xml and use the values in CSV file, if no values have been find in CSV, it will use null value.
Open XML Folder	Click this button to open the directory of your configured XML Output path.



Use Manual Settings to Generate XML Files

If you do not have very much devices need XML files, you can choose to use manual settings which is convenient without any need to configure the CSV file. You can choose to use either sequential MAC address or listing Mac address to do so. This method is only available for “Ver 1 TXT Template”.

If you select “Sequential MAC Address”, you will need to set the starting address and units (how many devices you have) and if the MAC address is incremented by 2 (by default it is increment by 1).

If you select “Listing MAC address”, you will need to emulate all the MAC addresses in the text field, break them by skipping the lines, it must have no break signs like , ; : “ ” between the MAC addresses, just make sure to skip the lines. The MAC address is not capital sensitive.

Click the “Create XML Files” which will start to generate the XML files, once completed, you will see a message box with either success info or error info. Any pre-check error will be displayed in the Status Bar. You can click the “Open XML Folder” file to open the Output Path you have configured in the General Settings.

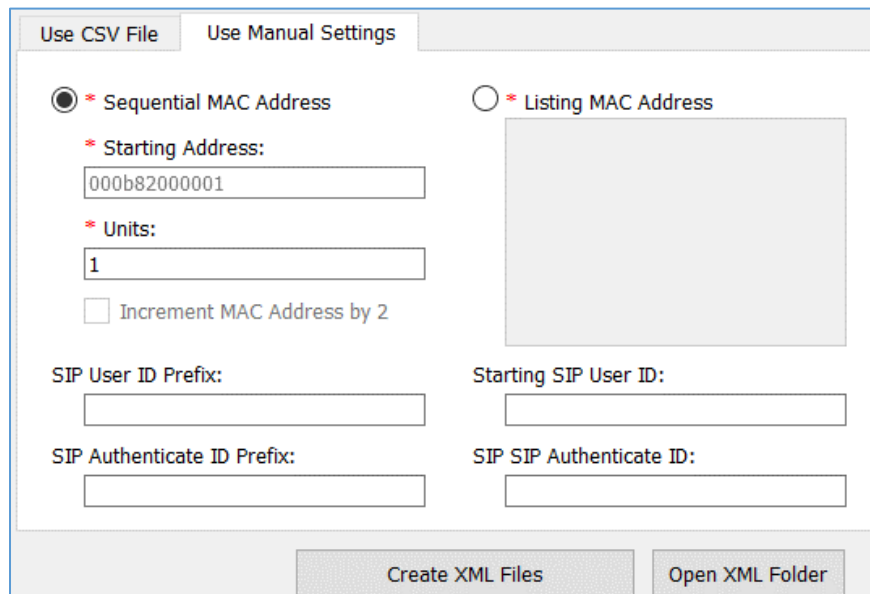


Figure 12: Use Manual Settings

Use Manual Settings		Description
Sequential MAC Address	Starting Address	Select “Sequential MAC address” to use the sequential MAC address settings. This will generate an XML files with the SIP User ID/Authenticate ID fields configured. All the other P values will stay the same as in the TXT file.



	Units	Enter the number of units to provision, this also will be the number of output XML files.
	Increment MAC address by 2	Check this option if you want to increment MAC address by 2 instead of default 1.
Listing MAC address	Select "Listing MAC Address" will use all the listed MAC address in this text field. Every MAC address is divided by new line. Must not contain any special break sign such as , ; " in the MAC address.	
SIP User ID Prefix	The prefix for SIP User ID, it can be numbers or strings, if you set Prefix to 100, and Starting SIP User ID as 1, the SIP User ID be generated will be 1001, or if the prefix is "Company", and the start SIP User ID is 1001, the generated User ID will be "Company1001". It will increment by 1 since the first sequential MAC address or listing MAC address.	
Starting SIP User ID	<p>The SIP User ID, it can be numbers or strings, if you set Prefix to 100, and Starting SIP User ID as 1, the SIP User ID be generated will be 1001, or if the prefix is "Company", and the start SIP User ID is 1001, the generated User ID will be "Company1001". It will increment by 1 since the first sequential MAC address or listing MAC address.</p> <p>Note: "Starting SIP User ID" must be digit only if not using CSV file</p>	
SIP Authenticate ID Prefix	The prefix for SIP Authenticate ID, it can be numbers or strings, if you set Prefix to 100, and Starting SIP User ID as 1, the SIP User ID be generated will be 1001, or if the prefix is "Company", and the start SIP User ID is 1001, the generated User ID will be "Company1001". It will increment by 1 since the first sequential MAC address or listing MAC address.	
Starting SIP Authenticate ID	<p>The SIP Authenticate ID, it can be numbers or strings, if you set Prefix to 100, and Starting SIP User ID as 1, the SIP User ID be generated will be 1001, or if the prefix is "Company", and the start SIP User ID is 1001, the generated User ID will be "Company1001". It will increment by 1 since the first sequential MAC address or listing MAC address.</p> <p>Note: "Starting SIP Authenticate ID" must be digit only if not using CSV file</p>	

