

NETSCREEN-5GT WIRELESS

User's Guide

Version 5.0.0

P/N 093-1481-000

Rev. A



Copyright Notice

Copyright © 2005 Juniper Networks, Inc. All rights reserved.

Juniper Networks, the Juniper Networks logo, NetScreen, NetScreen Technologies, GigaScreen, and the NetScreen logo are registered trademarks of Juniper Networks, Inc. NetScreen-5GT, NetScreen-5XP, NetScreen-5XT, NetScreen-25, NetScreen-50, NetScreen-100, NetScreen-204, NetScreen-208, NetScreen-500, NetScreen-5200, NetScreen-5400, NetScreen-Global PRO, NetScreen-Global PRO Express, NetScreen-Remote Security Client, NetScreen-Remote VPN Client, NetScreen-IDP 10, NetScreen-IDP 100, NetScreen-IDP 500, GigaScreen ASIC, GigaScreen-II ASIC, and NetScreen ScreenOS are trademarks of Juniper Networks, Inc. All other trademarks and registered trademarks are the property of their respective companies.

Information in this document is subject to change without notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without receiving written permission from:

Juniper Networks, Inc.
ATTN: General Counsel
1194 N. Mathilda Ave.
Sunnyvale, CA 94089-1206

FCC Statement

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. The equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with NetScreen's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Caution: Changes or modifications to this product could void the user's warranty and authority to operate this device.

Disclaimer

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR JUNIPER NETWORKS REPRESENTATIVE FOR A COPY.

Contents

Preface	5
Organization	5
WebUI Conventions	6
CLI Conventions	6
NetScreen Publications	7
Chapter 1 Connecting the Device	9
Connecting the NetScreen Device to Your Networks	9
Connecting the Device to an Untrusted Network	9
Connecting the ADSL Port	9
Connecting the Untrusted Port	11
Connecting the Device to Your Internal Network or Workstations.....	11
Connecting Trusted Ethernet Ports	11
Using the Wireless Interface	11
Connecting the Power	12
Rack Mounting (Optional)	12
Chapter 2 Configuring the Device	15
Accessing the Device	15
Using the WebUI.....	15
Using Telnet	16
Using a Console Connection.....	17
Required Configuration	17
Changing the Admin Name and Password.....	18
Setting the Date and Time	18
Wireless Configuration	19
Configuring the Wireless Network	20
ADSL Configuration	21
Configuring the ADSL Interface	22
Adding Virtual Circuits to an ADSL Interface	23
VPI/VCI and Multiplexing Method	23
PPPoE or PPPoA	24
Annex B Mode	25
Static IP Address and Netmask	25
Optional Configuration	26
Restricting Management.....	27
Configuring Additional Policies.....	27
Operational Mode	27
Changing the Port Mode.....	28
Configuring a Backup Untrust Zone Interface.....	30

Changing the Trust or Wireless2 Interface Address	31
Verifying External Connectivity	31
Resetting the Device to Factory Defaults	31
Using the Reset Pinhole.....	32
Chapter 3 Hardware Descriptions.....	33
Port and Power Connectors	33
Status LEDs	34
Main Status LEDs for the Device.....	35
Port Status LEDs	35
Specifications	A-37
Index.....	IX-39

Preface

The Juniper Networks NetScreen-5GT Wireless device provides IPSec Virtual Private Network (VPN) and firewall services for a branch office or a retail outlet that uses an integrated wireless 802.11b/g interface. The NetScreen-5GT Wireless device uses the same firewall, VPN, antivirus, deep inspection, and traffic management technology as NetScreen's high-end central site products.

Juniper Networks offers three models of the NetScreen-5GT Wireless device:

- **NetScreen-5GT Wireless:** The Wireless only model.
- **NetScreen-5GT Wireless ADSL A:** The Wireless with Annex A model supports ADSL over standard telephone lines (POTS).
- **NetScreen-5GT Wireless ADSL B:** The Wireless with Annex B model supports ADSL over Integrated Services Digital Network (ISDN).

All models support up to four wireless security zones. Both ADSL models support ANSI T1.413 Issue 2, ITU G.992.1 (G.dmt), and ITU 992.2 (G.lite) standards.

Each model supports three software versions:

- The 10-user version supports up to 10 users.
- The Plus version supports an unrestricted number of users.
- The Extended version provides the same capabilities as the Plus version, with additional features: High Availability (NSRP Lite), the DMZ security zone, and additional sessions and tunnel capacity.

ORGANIZATION

This manual has three chapters and one appendix.

Chapter 1, “Connecting the Device” describes how to connect the device to your network, connect the power and an antenna, and install the NetScreen-5GT Wireless device in a rack.

Chapter 2, “Configuring the Device” describes the default settings and operation of the NetScreen-5GT Wireless (ADSL) and the configuration required to use the device.

Chapter 3, “Hardware Descriptions” provides an overview of NetScreen-5GT Wireless ports, LEDs, and power requirements.

Appendix A, “Specifications” provides a list of physical specifications about the NetScreen-5GT Wireless device.

WEBUI CONVENTIONS

Throughout this book, a chevron (>) is used to indicate navigation through the WebUI by selecting menu options and links.

Example: Objects > Addresses > List > New

To access the new address configuration dialog box:

1. Click **Objects** in the menu column.
The Objects menu option expands to reveal a subset of options for Objects.
2. (Applet menu¹) Hover the mouse over **Addresses**.
(DHTML menu) Click **Addresses**.
The Addresses option expands to reveal a subset of options for Addresses.
3. Click **List**.
The address book table appears.
4. Click the **New** link in the upper right corner.
The new address configuration dialog box appears.

CLI CONVENTIONS

The following conventions are used when presenting the syntax of a command line interface (CLI) command:

- Anything inside square brackets [] is optional.
- Anything inside braces { } is required.
- If there is more than one choice, each choice is separated by a pipe (|). For example,

```
set interface { ethernet1 | ethernet2 | ethernet3 }  
manage
```


means “set the management options for the ethernet1, ethernet2, or ethernet3 interface”.
- Variables appear in *italic*. For example:

```
set admin user name1 password xyz
```

1. You can choose either the applet or DHTML menu types by clicking the **Toggle Menu** option at the bottom of the menu column.

When a CLI command appears within the context of a sentence, it is in **bold** (except for variables, which are always in *italic*). For example: “Use the **get system** command to display the serial number of a NetScreen device.”

*Note: When typing a keyword, you only have to type enough letters to identify the word uniquely. For example, typing **set adm u joe j12fmt54** is enough to enter the command **set admin user joe j12fmt54**. Although you can use this shortcut when entering commands, all the commands documented here are presented in their entirety.*

NETSCREEN PUBLICATIONS

To obtain technical documentation for any Juniper Networks NetScreen product, visit www.juniper.net/techpubs/.

For technical support, open a support case using the Case Manager link at <http://www.juniper.net/support/> or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (outside the United States).

If you find any errors or omissions in the following content, please contact us at the e-mail address below:

techpubs-comments@juniper.net

Connecting the Device

This chapter describes how to connect the NetScreen-5GT Wireless device to the network, connect the power, and connect an antenna. If you are using the optional NetScreen-5GT Wireless rack mount kit, use the rack mounting instructions that are included at the end of this chapter.

Note: For safety warnings and instructions, refer to the NetScreen Safety Guide. The instructions in this guide warn you about situations that could cause bodily injury. Before working on any equipment, be aware of the hazards involved with electrical circuitry and familiar with standard practices for preventing accidents.

CONNECTING THE NETSCREEN DEVICE TO YOUR NETWORKS

The NetScreen device provides firewall and general security for your networks when it is placed between your internal networks and the Untrusted network. This section describes the physical connections.

Connecting the Device to an Untrusted Network

Depending upon which model of the NetScreen-5GT Wireless device you have, you can connect to the Untrusted network in one of the following ways:

- Through an ADSL connection from the ADSL port on the NetScreen device
- Through an Ethernet connection from the Untrusted port on the NetScreen device

Connecting the ADSL Port

Connect the provided ADSL cable from the ADSL port on the NetScreen-5GT Wireless ADSL device to your telephone outlet. The ADSL port on the Annex A version of the device uses an RJ-11 connector, while the Annex B version uses an RJ-45 connector. In the case of Annex B models, the cable you connect from the ADSL port to the telephone outlet is identical in appearance and wiring to a straight-through 10 Base-T Ethernet cable.

Warning: Make sure that you do not inadvertently connect the Console, Modem, or Ethernet ports on the NetScreen device to the telephone outlet.

On the NetScreen-5GT Wireless ADSL device, the ADSL line is your *primary* connection to an outside network. For a backup data link to an outside network, you can either connect an Ethernet cable from the Untrusted port on the NetScreen-5GT Wireless ADSL device to an external router or a DSL, or cable modem, or you can connect a serial cable from the Modem port on the device to an external modem.

Warning: You cannot connect both the Untrusted port and the Modem port on the device to an outside network at the same time.


Connecting Splitters and Microfilters

A *signal splitter* divides the telephone signal into low-frequency voice signals for voice calls and high-frequency data signals for data traffic. Your service provider usually installs the splitter as part of the equipment that connects your site telephone lines to the provider network.

There are also splitters that you may be able to install yourself, depending upon your service provider equipment. If you are installing such a splitter yourself, connect the ADSL cable from the NetScreen device and the telephone line to the appropriate connectors (for example, “data” or “voice”) on the splitter. You connect the other end of the splitter to the telephone outlet.

You may need to install a *microfilter* on each telephone, fax machine, answering machine, or analog modem that connects to the ADSL line. The microfilter filters out high-frequency noise on the telephone line. You install the microfilter on the telephone line between the telephone, fax machine, answering machine, or analog modem and the voice connector on the splitter.

The following shows an example of a microfilter and a splitter that you install on your site. (You must obtain the appropriate microfilters or splitters from your service provider.)

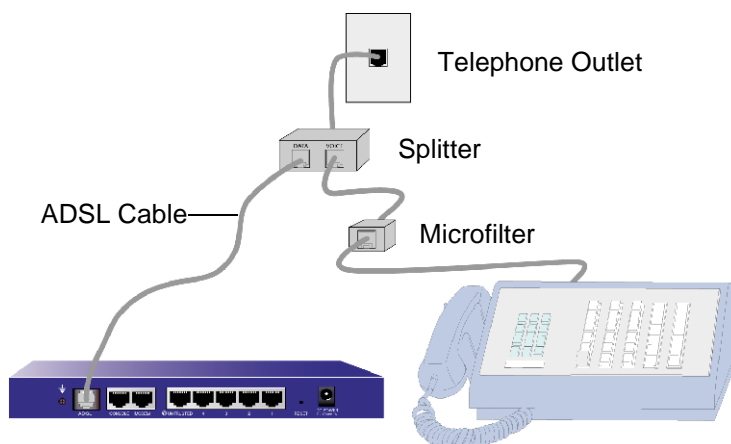

Connecting the Untrusted Port

You can establish an Internet connection to an external router or a DSL, or cable modem and provide firewall and general security for your network. To establish a high-speed connection, connect the provided Ethernet cable from the Untrusted interface on the NetScreen-5GT Wireless device to the external router or modem. The NetScreen-5GT Wireless device autosenses the correct speed, duplex, and polarity settings.

If you are using the NetScreen-5GT Wireless ADSL device, refer to [“Connecting the ADSL Port” on page 9](#) and [“Connecting Splitters and Microfilters” on page 10](#) for ADSL connection instructions.

Connecting the Device to Your Internal Network or Workstations

You can connect your local area network (LAN) or workstation using one or both of the following methods:

- Connecting through one or more of the Trusted Ethernet ports on the NetScreen device
- Using a wireless interface on the NetScreen device

Connecting Trusted Ethernet Ports

The NetScreen-5GT Wireless device contains four Trust Ethernet ports. You can use one or more of these ports to connect to LANs via switches or hubs. You can also connect one or all of the ports directly to workstations, eliminating the need for a hub or switch. You can use either cross-over or straight-through cables to connect the Ethernet ports to other devices.

Using the Wireless Interface

If you are using the wireless interface, you need to connect the provided antennae on the device. If you have the standard 2dB omnidirectional antennae, then screw them onto the posts marked A and B at the back of the device, please refer to [“Port and Power Connectors” on page 33](#). Bend the antennae at their elbows, making sure not to put pressure on the bulkhead connector.

If you are using the optional high-gain antenna, follow the connection instructions for the high-gain antenna.

CONNECTING THE POWER

To connect the power to the NetScreen-5GT Wireless device:

1. Plug the DC connector end of the power cable into the DC power receptacle on the back of the device.
2. Plug the AC adapter end of the power cable into an AC power source.

Warning: We recommend using a surge protector for the power connection.

RACK MOUNTING (OPTIONAL)

With a NetScreen-5GT Wireless rack-mount kit, you can mount one or two NetScreen-5GT Wireless devices in a standard 19-inch equipment rack. The NetScreen-5GT Wireless rack-mount kit includes installation instructions and a rack-mounting tray. The dimensions of the tray are as follows:

Width:	48.26 cm.	19 in.
Height:	4.013 cm.	1-5/8 in. (1 rack unit)
Depth:	33.655 cm.	13-1/4 in.

In addition to the NetScreen-5GT Wireless device(s), rack-mount kit, and equipment rack, you will need the following:


- Phillips-head screwdriver
- Four screws that match the thread size of the equipment rack

To mount the device in a rack:

1. Use the Phillips-head screwdriver to remove the two screws from the underside of each NetScreen-5GT Wireless device that you intend to mount. (Keep the screws for use in the next step.) The screws are located on the underside of the device near the front panel.



2. Insert each device on the rack-mount tray and attach it to the tray with the screws that you removed in step 1.

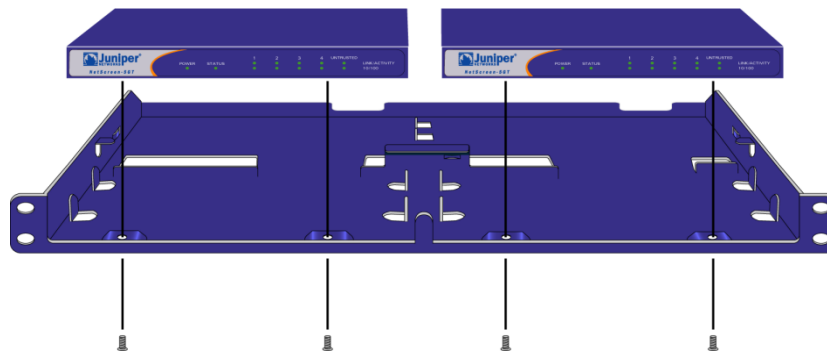

3. Attach the left and right tray plates to the equipment rack using the remaining screws.



You can run power cords and Ethernet cables through the openings in the floor of the tray or out the depressions in the back wall. You can also use the space behind the devices to hold power supplies.

Configuring the Device

This chapter describes how to configure a NetScreen-5GT Wireless device after you have connected it to your network. If you are accessing the device for the first time using the ScreenOS WebUI graphical interface, then you can use the Initial Configuration Wizard (IWC) to guide you through the basic configuration. To use this wizard, refer to the *Juniper Networks NetScreen-5GT Wireless Getting Started Guide*.

Topics explained in this chapter include:

- [Accessing the Device](#)
- [Required Configuration](#)
- [Wireless Configuration](#)
- [ADSL Configuration](#)
- [Optional Configuration](#)
- [Verifying External Connectivity](#)
- [Resetting the Device to Factory Defaults](#)

Note: After you configure the NetScreen device and verify connectivity to the Internet, you must register your product at www.juniper.net/support/ so that certain ScreenOS services, such as internal antivirus or Deep Inspection Signature Service, can be activated on the device. After registering your product, use the WebUI to obtain the subscription for the service. For more information about registering your product and obtaining subscriptions for specific services, see the “System Parameters” chapter in the “Fundamentals” volume of the NetScreen Concepts & Examples ScreenOS Reference Guide for ScreenOS 5.0.0.

ACCESSING THE DEVICE

This section describes how to access your NetScreen device using the WebUI, Telnet, or a Console connection.


Using the WebUI

The ScreenOS WebUI is a graphical interface that is available through a web browser. To use the WebUI, you must be on the same subnetwork as the NetScreen device. To access the NetScreen-5GT Wireless device with the WebUI management application:

1. Connect your workstation (or your LAN hub) to the Trust 1 Ethernet port.
2. Make sure your workstation is on the same subnetwork as the NetScreen device. If there are no DHCP servers available on the LAN, then the NetScreen device acts as a DHCP server. The NetScreen device provides addresses from 192.168.1.33 to 192.168.1.xx.

3. Launch your browser, enter the default IP address for the Trust interface in the URL field, and press Enter. For example, enter the following in the URL field:
`192.168.1.1`

The NetScreen WebUI software displays the login prompt.

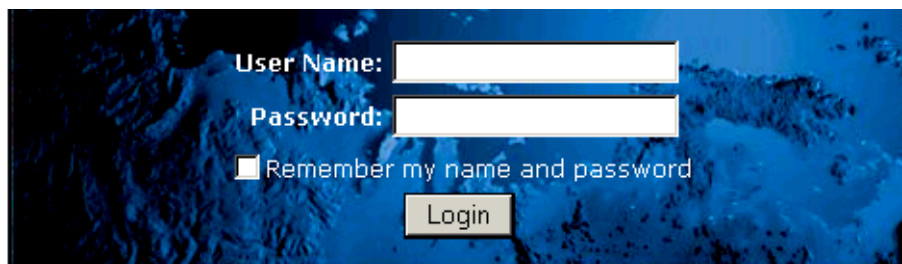

***Note:** If you choose to skip the Initial Configuration Wizard, the WebUI login prompt automatically appears.*

4. If you have not yet changed the default user name and password, enter **netscreen** in both the **User Name** and **Password** fields and click **Login**. (Use lowercase letters only. The User Name and Password fields are both case-sensitive.)

Using Telnet

Telnet is an application that allows you to access devices through an Internet Protocol (IP) network.

***Note:** You can also access NetScreen devices using Secure Shell (SSH) applications. For more information, refer to the “Administration” chapter in the “Administration” volume of the NetScreen Concepts & Examples ScreenOS Reference Guide for ScreenOS 5.0.0.*

To configure the device using Telnet, you enter ScreenOS Command Line Interface (CLI) commands in a Telnet session from your workstation.

1. Connect your workstation (or your LAN hub) to the Trust 1 Ethernet port.
2. Start a Telnet client application to the default IP address for the Trust interface. For example, enter the following:
`telnet 192.168.1.1`
3. If you have not yet changed the default user name and password, enter **netscreen** at both the **login** and **password** prompts. (Use lowercase letters only. The login and password prompts are both case-sensitive.)

Using a Console Connection

The Console port on the NetScreen-5GT Wireless device allows you to access the device through a serial cable connected to your workstation or terminal. To configure the device using a console connection, you enter ScreenOS CLI commands on your terminal or in a terminal emulation program on your workstation.

Note: For the console connection, use a serial cable with a male RJ-45 connector on one end and female DB-9 connector on the other end. See [Appendix A, “Specifications”](#) for the connector pinouts for the serial cable.

To establish a console connection:

1. Plug the female DB-9 end of the serial cable into the serial port of your computer. (Be sure that the DB-9 connector is seated properly in the port.)
2. Plug the other end of the DB-9 connector into the RJ-45 DB-9 port. (Be sure that the DB-9 connector is seated properly in the RJ-45 DB-9 port.)
3. Plug the male RJ-45 end of the serial cable into the Console port of the NetScreen-5GT Wireless device. (Be sure that the RJ-45 connector is seated properly in the port.)
4. Launch a serial terminal emulation program. (A commonly used terminal program is Hilgreave HyperTerminal.) The required settings to launch a console session with your NetScreen-5GT Wireless device are as follows:
 - Baud Rate: 9600
 - Parity: No
 - Data Bits: 8
 - Stop Bit: 1
 - Flow Control: None
5. If you have not yet changed the default user name and password, enter **netscreen** in both the **login** and **password** prompts. (Use lowercase letters only. The login and password fields are both case-sensitive.)

REQUIRED CONFIGURATION

This section describes the configurations that you need to complete to use the device.

Note: If at any point you need to restore the device to its default settings, see [“Resetting the Device to Factory Defaults” on page 31](#).

Changing the Admin Name and Password

Because all NetScreen products use the same default admin name and password (**netscreen**), it is highly advisable to change your admin name and password immediately. To change the administrator name and password from “netscreen” and “netscreen” to “darwin1” and “1240jes”:

WebUI

Configuration > Admin > Administrators > Edit (for the NetScreen administrator name): Enter the following, and click OK:

Administrator Name: darwin1

Old Password: netscreen

Note: Passwords do not display in the WebUI when you type them in.

New Password: 1240jes

Confirm New Password: 1240jes

CLI

```
set admin name darwin1
set admin password 1240jes
save
```

For information about creating different levels of administrators, see the “Administration” chapter in the “Administration” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

Setting the Date and Time

The time set on the NetScreen device affects events such as the setup of VPN tunnels and the timing of schedules. The easiest way to set the date and time on the NetScreen device is to synchronize the system clock on the NetScreen device with the clock on your computer. To do this in the WebUI:

1. Configuration > Date/Time: Click the **Sync Clock with Client** button.
A pop-up message prompts you to specify if you have enabled the daylight saving time (DTS) option on your computer clock.
2. Click **Yes** to synchronize the system clock and adjust it according to DTS or **No** to synchronize the system clock without adjusting it for DTS.


You can also use the CLI **set clock** command in a Telnet or Console session to manually set the date and time.

WIRELESS CONFIGURATION

This section provides information for configuring the wireless interface on the NetScreen device. Depending on the type of license you have installed, you can configure up to four wireless security zones on a NetScreen-5GT Wireless device. The interface to zone bindings are predefined and are dependent on the port mode you configure, and you cannot assign wireless interfaces to the Untrust zone. You must configure at least one wireless interface on the NetScreen device to create a wireless local area network (WLAN).

Note: If you are operating the NetScreen-5GT Wireless device in a country other than the United States or Japan, then you must use the `set wlan country-code` command before a WLAN connection can be established. This command sets the selectable channel range and transmit power level.

The figure below shows the default configuration for the NetScreen-5GT Wireless device.

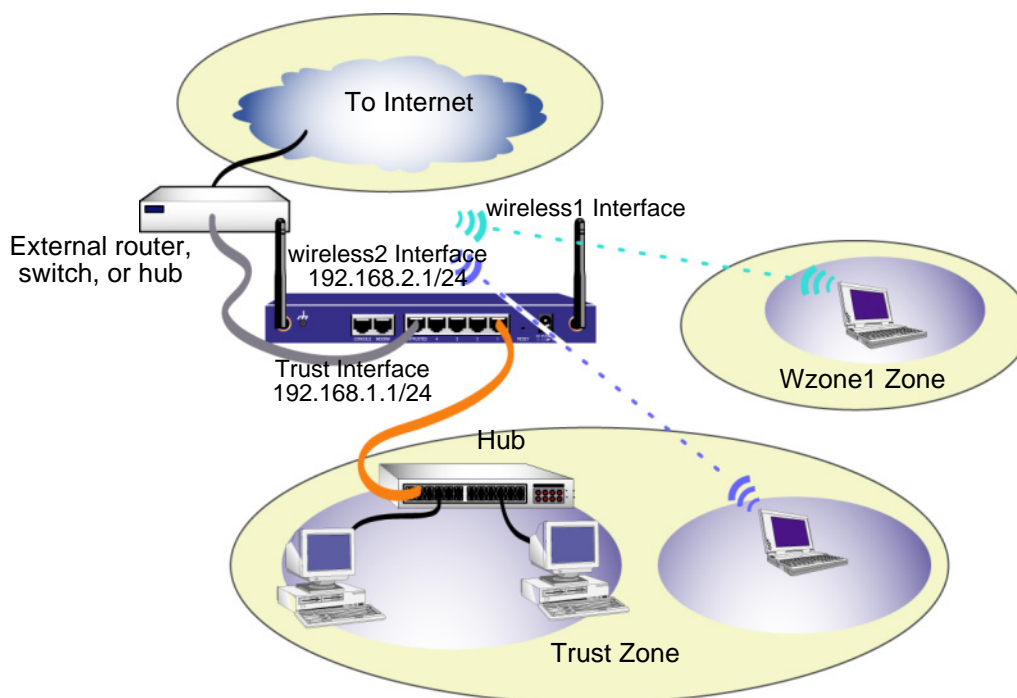

The default wireless interface has the predefined name “wireless2”. The Trust and wireless2 interfaces are bound to the Trust zone and are configured with the subnetwork addresses 192.168.1.1/24 and 192.168.2.1/24, respectively. This means that all devices that you connect to in the Trust zone must be in the same subnetwork as either the Trust or wireless2 interface and have IP addresses in one of the two subnetworks. The NetScreen device is also configured to assign IP addresses for the 192.168.1.1/24 and 192.168.2.1/24 subnetworks to your devices. For more information, refer to [“Changing the Trust or Wireless2 Interface Address” on page 31](#).

By default, the wireless1 interface is bound to the Wzone1 zone and does not have an IP address assigned to it. If you want to use the wireless1 interface, you must configure an IP address for it. Refer to the *NetScreen-5GT Wireless Reference Guide* for more information.

The NetScreen device allows any type of traffic to the Internet that originates from devices in your Trust zone, but it does not allow any traffic that originates in the Internet to reach your network. You can configure additional restrictions; refer to [“Configuring Additional Policies” on page 27](#).

Configuring the Wireless Network

Wireless networks consist of names referred to as Service Set Identifiers (SSIDs). Specifying an SSID allows you to have multiple wireless networks residing in the same location. You can have a maximum of eight SSIDs configured on each device. Once the SSID name is set, you can configure SSID attributes.

To set the SSID name **netscreen open**, allow wireless network connectivity, and activate the wireless2 interface:

WebUI

Wireless > SSID > New: Enter the following, and click **OK**:

SSID: “netscreen open”

Wireless Interface Binding: wireless2 (select)

Activate Changes > click the **Activate Changes** button

CLI

```
set ssid name "netscreen open"
set ssid "netscreen open" authentication open encryption
none
set ssid "netscreen open" interface wireless2
exec wlan reactivate
```

Once you have set an SSID to the wireless2 interface, you can access the device using the default wireless2 interface IP address in the steps provided with [“Accessing the Device” on page 15](#) to configure the device. Refer to the *NetScreen-5GT Wireless Reference Guide* for configuration examples, SSID attributes, and CLI commands relating to wireless security configurations.

ADSL CONFIGURATION


This section describes the default settings and operation of the NetScreen-5GT Wireless ADSL Annex A and B devices as they are shipped from the factory. These default settings are such that, in most cases, there are only a few items that you must configure.

This section describes the following configurations for the Untrust zone interface:

- [Configuring the ADSL Interface](#)
- [Adding Virtual Circuits to an ADSL Interface](#)
- [VPI/VCI and Multiplexing Method](#)
- [PPPoE or PPPoA](#)
- [Annex B Mode](#)
- [Static IP Address and Netmask](#)

Note: If at any point you need to restore the device to its default settings, see [“Resetting the Device to Factory Defaults” on page 31](#).

The figure below shows the default configuration for the NetScreen-5GT Wireless ADSL device.

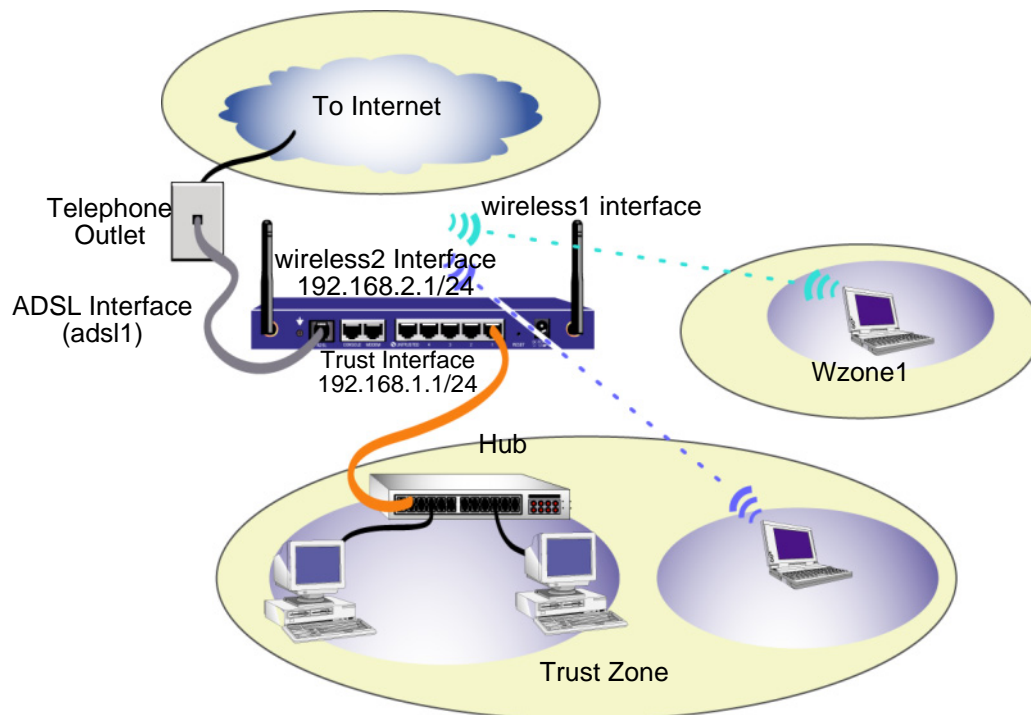

The ADSL interface has the predefined name “adsl1” and is the main connection from your network to the Internet. To allow the NetScreen device (and the devices on your network) to connect to the Internet, you must configure the adsl1 interface according to information obtained from your service provider. Refer to [“Configuring the ADSL Interface” on page 22](#).

The NetScreen device allows any type of traffic to the Internet that originates from devices in your Trust zone, but it does not allow any traffic that originates in the Internet to reach your network. You can configure additional restrictions; refer to [“Configuring Additional Policies” on page 27](#).

Configuring the ADSL Interface

Your network uses the ADSL interface “adsl1” on the NetScreen device to connect to the service provider’s network through an Asynchronous Transfer Mode (ATM) virtual circuit. You can configure additional virtual circuits by creating ADSL subinterfaces (for more information, see [“Adding Virtual Circuits to an ADSL Interface” on page 23](#)).

In the WebUI, navigate to the Network > Interfaces page to see a list of the current interfaces on the NetScreen device. If you are using a Telnet or Console session, enter the CLI command `get interface`. You should see that the adsl1 interface is bound to the Untrust zone. If you used the ICW to configure the device, there may be an IP address and netmask already assigned to the adsl1 interface.

***Note:** If you do not want to use the ADSL interface, you can bind it to the Null zone with the `set interface adsl1 zone null` command. If you use the ICW to configure the device, you can choose an interface other than the ADSL interface as the default interface to the Untrust zone.*

You must configure the adsl1 interface to enable the NetScreen device to connect to the service provider’s network. To do this, you must obtain the following information from your service provider:

- Virtual Path Identifier and Virtual Channel Identifier (VPI/VCI) values
- ATM Adaptation Layer 5 (AAL5) multiplexing method, which can be one of the following:
 - Virtual Circuit (VC)-based multiplexing, in which each protocol is carried over a separate ATM VC
 - Logical Link Control (LLC) encapsulation, which allows several protocols to be carried on the same ATM VC (the default multiplexing method)
- User name and password assigned by the service provider for connection to the service provider’s network using either the Point-to-Point Protocol over Ethernet (PPPoE) or Point-to-Point Protocol over ATM (PPPoA)
- Authentication method, if any, provided for the PPPoE or PPPoA connection
- Optionally, a static IP address and netmask value for your network

Adding Virtual Circuits to an ADSL Interface

To add virtual circuits, you create subinterfaces to the ADSL interface. You can create up to 10 ADSL subinterfaces. For example, to create a new subinterface named `adsl1.1` that is bound to the user-defined zone named “Corp1”:

WebUI

Network > Interfaces > New ADSL Sub-IF: Enter the following, and then click **Apply**:

Interface Name: `adsl1.1`

VPI/VCI: `0/35`

Zone Name: Corp1 (select)

CLI

```
set interface adsl1.1 pvc 0 35 zone corp1
save
```

You need to configure an ADSL subinterface in the same way as the main ADSL interface, including setting the VPI/VCI values, as described in [“Configuring the ADSL Interface” on page 22](#). You configure an ADSL subinterface independently of the main ADSL interface; that is, you can configure a different multiplexing method, VPI/VCI, and PPP client on the subinterface than the main ADSL interface. You can also configure a static IP address on a subinterface, even if the main ADSL interface does not have a static IP address. Note that a subinterface and the main ADSL interface can use the same VPI/VCI values if one interface is configured for PPPoA and the other for PPPoE and they both use LLC multiplexing.

VPI/VCI and Multiplexing Method

Your service provider assigns a VPI/VCI pair for each VC connection. For example, you may receive the VPI/VCI pair 1/1, which means a VPI value of 1 and a VCI value of 1. These values must match the values that the service provider has configured on the subscriber’s side of the Digital Subscriber Line Access Multiplexer (DSLAM).

To configure the VPI/VCI pair 1/1 on the `adsl1` interface:

WebUI

Network > Interfaces > Edit (for the `adsl1` interface): Enter 1/1 in the VPI/VCI field, and then click **Apply**.

CLI

```
set interface adsl1 pvc 1 1
save
```

By default, the NetScreen-5GT Wireless ADSL device uses LLC-based multiplexing for each VC. To configure the VPI/VCI 1/1 on the `adsl1` interface and use LLC encapsulation on the VC:

WebUI

Network > Interfaces > Edit (for the adsl1 interface): Enter the following, and click **Apply**:

VPI/VCI: 1 / 2

Multiplexing Method: LLC (selected)

CLI

```
set interface adsl1 pvc 1 1 mux llc
save
```

PPPoE or PPPoA

The NetScreen device includes both PPPoE and PPPoA clients to connect to the service provider's network over the ADSL link. PPPoE is the most common form of ADSL encapsulation and is intended for termination on each host on your network. PPPoA is used primarily for business class service as PPP sessions can be terminated on the NetScreen device. To allow the NetScreen device to connect to the service provider's network, you need to configure the user name and password assigned by the service provider. The configuration for PPPoA is similar to the configuration for PPPoE.

Note: The NetScreen device supports only one PPPoE session on each virtual circuit.

To configure the user name "roswell" and password "area51" for PPPoE and bind the PPPoE configuration to the adsl1 interface:

WebUI

Network > PPPoE > New: Enter the following, and then click **OK**:

PPPoE Instance: poe1

Bound to Interface: adsl1 (select)

Username: roswell

Password: area51

CLI

```
set pppoe name poe1 username roswell password area51
set pppoe name poe1 interface adsl1
save
```

There are other PPPoE or PPPoA parameters that you can configure on the NetScreen device, including method of authentication (by default, the NetScreen device supports either Challenge Handshake Authentication Protocol or Password Authentication Protocol), idle timeout (default is 30 minutes), and so on. Ask your service provider if there are additional PPPoE or PPPoA parameters that you need to configure to enable proper communications with the service provider's server.

Annex B Mode

If you connect the Annex B model of the NetScreen-5GT Wireless ADSL device to a Deutsch Telecom ADSL line, then you must configure the physical interface on the ADSL port for operation with this equipment. To do this:

WebUI

Network > Interfaces > Edit (for the adsl1 interface): Select **DT** for the Annex B Mode, and click **Apply**.

CLI

```
set interface adsl1 phy annex-b-mode dt
save
```

You do not need to configure this setting if you are using the Annex A model of the device or if you are connecting the device to non-Deutsch Telecom equipment.

Static IP Address and Netmask

If your ISP gave you a specific, fixed IP address and netmask for your network, then configure the IP address and netmask for the network and the IP address of the router port connected to the NetScreen device. You need to also specify that the device is to use the static IP address. (By default, the NetScreen device acts as a PPPoE or PPPoA client and receives an IP address for the ADSL interface through negotiations with the PPPoE or PPPoA server.)

To configure the static IP address 1.1.1.1/24 for the network:

WebUI

Network > Interfaces > Edit (for the adsl1 interface): Enter the following, and click **Apply**:

IP Address/Netmask: 1.1.1.1/24

Static IP: (select)

Note: You need to configure a PPPoE or PPPoA instance and bind it to the adsl1 interface, as described in the previous section. Make sure that you select “Obtain IP using PPPoE” or “Obtain IP using PPPoA” and the name of the PPPoE or PPPoA instance.

CLI

```
set interface adsl1 ip 1.1.1.1/24
set pppoe name poe1 static-ip
save
```

or

```
set interface adsl1 ip 1.1.1.1/24
set pppoa name poa1 static-ip
save
```

To use Domain Name System (DNS) for domain name and address resolution, the computers in your network need to have the IP address of at least one DNS server. If the NetScreen device receives an IP address for the ADSL interface through PPPoE or PPPoA, then it also automatically receives IP addresses for the DNS server(s). If the computers in your network obtain their IP addresses from the DHCP server on the NetScreen device, then the computers also obtain these DNS server address(es).

If you assign a static IP address to the ADSL interface, then the service provider must give you the IP address(es) of the DNS server(s). You can either configure the DNS server address on each computer in your network or configure the DHCP server on the Trust zone interface so that it provides the DNS server address to each computer.

To configure the DHCP server on the Trust interface to provide the DNS server address 1.1.1.152 to computers in your network:

WebUI

Network > DHCP > Edit (for the Trust interface) > DHCP Server: Enter 1.1.1.152 for DNS1, and click **Apply**.

CLI

```
set interface trust dhcp server option dns1 1.1.1.152
save
```

OPTIONAL CONFIGURATION

This section describes the following features on the NetScreen-5GT Wireless devices that you may want to configure:

- [Restricting Management](#)
- [Configuring Additional Policies](#)
- [Operational Mode](#)
- [Changing the Port Mode](#)
- [Configuring a Backup Untrust Zone Interface](#)
- [Changing the Trust or Wireless2 Interface Address](#)

Note: Not all of the optional configurations are described in detail in this manual. For more information, refer to the appropriate chapters in the NetScreen Concepts & Examples ScreenOS Reference Guide for ScreenOS 5.0.0.

Restricting Management

By default, anyone in your network can manage the NetScreen device if they know the login and password. You can configure the NetScreen device to be managed only from one or more specific hosts on your network. (You can choose which services — for example, WebUI, Telnet, ping — you want enabled on the NetScreen device.)

For more information, refer to the “Administration” chapter in the “Administration” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

Configuring Additional Policies

The NetScreen-5GT Wireless devices are configured with a default policy that permits workstations in the Trust zone of your network to access any kind of service with outside computers, while outside computers are not allowed to access or start sessions with your workstations. You can configure policies that direct the NetScreen device to permit outside computers to start specific kinds of sessions with your computers. To create or modify policies, refer to the “Policies” chapter in the “Fundamentals” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

Operational Mode

The *operational mode* is the way an interface on a NetScreen device processes traffic between zones. By default, the NetScreen-5GT Wireless devices operates in Route mode with Network Address Translation (NAT) enabled on the Trust interface. This means that when devices in the Trust zone send traffic to the Internet, the NetScreen device replaces the original source IP addresses with the IP address of the Untrust interface. While the NetScreen device assigns private IP addresses to the devices in your network, these addresses remain hidden to computers outside your network.

If all devices in your network have public IP addresses, then you can configure the NetScreen device for Route mode without NAT enabled. In Route mode without NAT enabled, the NetScreen device routes traffic by checking IP addresses. For more information about configuring the device for Route mode without NAT enabled, refer to the “Interface Modes” chapter in the “Fundamentals” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

Changing the Port Mode

The *port mode* is the binding of physical ports, logical interfaces, and zones.

Warning: Changing the port mode removes any existing configurations on the NetScreen device. Therefore, you should change the port mode before you configure the device.

The following table summarizes the port, interface, and zone bindings provided by the port modes that are available on the NetScreen-5GT Wireless devices:

Port Name ^a	Trust-Untrust Port Mode ^b		Home-Work Port Mode		Trust/Untrust/DMZ (Extended) Mode	
	Interface	Zone	Interface	Zone	Interface	Zone
1	trust	Trust	ethernet1	Work	ethernet1	Trust
2	trust	Trust	ethernet1	Work	ethernet1	Trust
3	trust	Trust	ethernet2	Home	ethernet2	DMZ
4	trust	Trust	ethernet2	Home	ethernet2	DMZ
Untrusted	untrust	Null ^c	ethernet4	Null ^c	ethernet4	Null ^c
Modem	serial	Null ^c	serial	Null ^c	serial	Null ^c
ADSL ^d	adsl1	Untrust	adsl1	Untrust	adsl1	Untrust
	wireless1	Wzone1	wireless1	Wzone1	wireless1	Wzone1
	wireless2	Trust	wireless2	Work	wireless2	Trust
			wireless3	Home	wireless3	DMZ
					wireless4	Wzone2

- As labeled on the NetScreen appliance chassis.
- Default port mode.
- You can configure a backup interface to the Untrust zone, using either the Untrusted Ethernet port or the Modem port. See [“Configuring a Backup Untrust Zone Interface”](#) on page 30.
- Only available on the ADSL Annex A and B devices.

The following table applies to wireless only port modes

Port Name ^a	Dual Untrust Port Mode		Combined Port Mode	
	Interface	Zone	Interface	Zone
1	ethernet1	Trust	ethernet1	Work
2	ethernet1	Trust	ethernet2	Home
3	ethernet1	Trust	ethernet2	Home
4	ethernet2	Untrust	ethernet3	Untrust
Untrusted	ethernet3	Untrust	ethernet4	Untrust
Modem	serial	Null ^c	serial	Null ^c
	wireless1	Wzone1	wireless1	Wzone1
	wireless2	Trust	wireless2	Work
			wireless3	Home

a. As labeled on the NetScreen appliance chassis.

To change the NetScreen device to the Home-Work port mode:

WebUI

Configuration > Port Mode: Select Home-Work from the drop-down list, and then click **Apply**.

At the following prompt, click **OK**:

Operational mode change will erase current configuration and reset the device, continue?

CLI

```
exec port-mode home-work
```

At the following prompt, enter **y** (for yes):

```
Change port mode from <trust-untrust> to <home-work> will
erase system configuration and reboot box
Are you sure y/[n]? y
```

Configuring a Backup Untrust Zone Interface

By default, on NetScreen-5GT Wireless ADSL device, the `adsl1` interface is the primary connection to an outside network. Each port mode available on the NetScreen-5GT Wireless ADSL device allows you the option of connecting either the Untrusted Ethernet port or the Modem port as a backup connection to the outside network (see [“Changing the Port Mode” on page 28](#)). You must bind the backup interface to the Untrust zone and configure the interface appropriately.

Note: You can configure only one backup interface, using either the Untrusted Ethernet port or Modem port connection. If you use the Untrusted port for the backup connection, configure the Untrust interface in Trust-Untrust port mode or the `ethernet3` interface for other port modes. If you use the Modem port for the backup connection, configure the serial interface for all port modes.

For example, to bind the Untrust interface to the Untrust zone:

WebUI

Network > Interfaces > Edit (for the untrust interface): Select Untrust from the Zone Name drop-down list, and click **OK**.

CLI

```
set interface untrust zone untrust
save
```

You also need to set a static IP address for the Untrust interface or to specify whether the IP address for the interface is obtained via either DHCP or PPPoE. See the “Interfaces” chapter in the “Fundamentals” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0 for more information about configuring interface parameters.

When the `adsl1` interface and either the Ethernet interface (named `untrust` or `ethernet3`, depending upon the port mode) or the serial interface is bound to the Untrust zone, interface failover is automatically configured. That is, if the `adsl1` interface becomes unavailable, the NetScreen device automatically sends traffic to the backup interface. The device automatically sends traffic to the `adsl1` interface when the `adsl1` interface is again available.

Note: Only the `adsl1` interface is affected by failover. That is, if you have also configured ADSL subinterfaces, the subinterfaces do not fail over to the backup interface.

You can also manually force failover and failback on the `adsl1` interface. For more information, see the “Interface Redundancy” chapter in the “High Availability” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

Changing the Trust or Wireless2 Interface Address

You can change the IP address and netmask of the Trust and wireless interfaces if necessary. (Remember that when the Trust or wireless2 interface is in NAT mode, the IP addresses of devices in your network are never seen by computers outside your network; outside computers see only the IP address of the Untrust interface.) For example, you might need to change the Trust or wireless2 interface to match the IP addresses that already exist on your network. If you change the IP address and netmask of the Trust or wireless2 interface, then you also need to change either the range of addresses that the NetScreen device assigns via DHCP to devices in the network or disable the DHCP server on the Trust or wireless2 interfaces.

If the computers in your network obtain their IP addresses from the DHCP server on the NetScreen device, then the computers also obtain their default gateway from the NetScreen device. If a computer has a statically assigned IP address, then you must manually set its default gateway to the IP address of the Trust or wireless2 interface on the NetScreen device.

To assign a different IP address and netmask to the Trust or wireless2 interface, refer to the “Interfaces” chapter in the “Fundamentals” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

To change the DHCP settings for the NetScreen device, refer to the “System Parameters” chapter in the “Fundamentals” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.

VERIFYING EXTERNAL CONNECTIVITY

To verify that workstations in your network can access resources on the Internet, start a Web browser from any workstation in the network and enter the following URL:
www.juniper.net.

RESETTING THE DEVICE TO FACTORY DEFAULTS

If you lose the admin password, you can reset the NetScreen device to its default settings. This destroys any existing configurations but restores access to the device.

Warning: *Resetting the device deletes all existing configuration settings and renders existing firewall and VPN service inoperative.*

You can restore the device to its default settings in one of the following ways:

- Using a Console connection. For further information, see the “Administration” chapter in the “Administration” volume of the *NetScreen Concepts & Examples ScreenOS Reference Guide* for ScreenOS 5.0.0.
- Using the reset pinhole on the rear panel of the device, as described in the next section.

Using the Reset Pinhole

You can reset the device and restore the factory default settings by pressing the reset pinhole. To perform this operation, you need to either view the device status LEDs on the front panel or start a Console session as described in [“Using a Console Connection” on page 17](#).

1. Locate the reset pinhole on the rear panel. Using a thin, firm wire (such as a paper clip), push the pinhole for four to six seconds and then release.



The Status LED blinks amber. A message on the Console states that erasure of the configuration has started and the system sends an SNMP/SYSLOG alert.

2. Wait for one to two seconds.

After the first reset, the Status LED blinks green; the device is now waiting for the second reset. The Console message now states that the device is waiting for a second confirmation.

3. Push the reset pinhole again for four to six seconds.

The Console message verifies the second confirmation. The Status LED lights amber for one-half second and then returns to the blinking green state.

The device then resets to its original factory settings. When the device resets, the Status LED turns amber for one-half second and then glows green. The Console displays device bootup messages. The system generates SNMP and SYSLOG alerts to configured SYSLOG or SNMP trap hosts.

After the device has rebooted, the Console displays the login prompt for the device. The status LED now blinks green.

If you do not follow the complete sequence, the reset process cancels without any configuration change and the console message states that the erasure of the configuration is aborted. The Status LED returns to blinking green. If the device did not reset, an SNMP alert is sent to confirm the failure.

Hardware Descriptions

This chapter provides detailed descriptions of the NetScreen-5GT Wireless chassis.

PORT AND POWER CONNECTORS

The rear panel of the NetScreen-5GT Wireless device contains port and power connectors.

Antenna B

Antenna A



The DC power receptacle is for connecting power to the NetScreen-5GT Wireless device. The reset pinhole allows you to reset the device and restore its factory default settings. The NetScreen-5GT Wireless device includes the following ports:

Port	Description	Connector	Speed/Protocol
ADSL	When applicable, enables an Internet connection through an ADSL data link.	RJ-11 (Annex A) RJ-45 (Annex B)	ANSI T1.413 Issue 2 ITU G.992.1 (G.dmt) ITU 992.2 (G.lite)
Console	Enables a serial connection with the system. Used for launching Command Line Interface (CLI) sessions.	RJ-45	9600 bps/ RS-232
Modem	Enables a dial backup serial Internet connection through an external modem.	RJ-45	9600 bps-115 Kbps/ RS-232
Untrusted	Enables a primary or backup Internet or untrusted network connection through an external router or a DSL or cable modem.	RJ-45	10/100 Mbps/ Ethernet Autosensing duplex and polarity
Ports 1-4	Enables direct connections to workstations or a LAN connection through a switch or hub. This connection also allows you to manage the device through a Telnet session or the WebUI management application.	RJ-45	10/100 Mbps/ Ethernet Autosensing duplex and polarity
Antenna A & B	Enables direct connection to workstations in vicinity of a wireless radio connection. This connection allows you to manage the device through a Telnet session or the WebUI management application.	RPSMA	802.11b 802.11g

Warning: Do not connect a phone line or ISDN line directly to the Modem port on the NetScreen-5GT Wireless device. You must first connect the device to a modem, using an RS-232 port, and then connect the modem to the line.

STATUS LEDs

The front panel of the NetScreen-5GT Wireless device has power and status LEDs for the device and port status LEDs for the interfaces.



Main Status LEDs for the Device

The device status LEDs indicate whether the device is operating properly. The following table describes the status for each LED.

LED	Status	Meaning
POWER	green	Indicates the system is receiving power.
	off	Indicates the system is not receiving power.
STATUS	blinking green	Indicates the system is functioning.
	green	Indicates the system is starting up.
	red	Indicates a diagnostics or system initialization error.
	off	Indicates the system is not operational.
ADSL (on the Wireless ADSL only)	green	Indicates the ADSL loop is up.
	off	Indicates the ADSL loop is down.
WLAN	slow blinking green	Indicates that a Wireless connection is established but there is no link activity.
	fast blinking green	Indicates that a Wireless connection is established. The blink rate is proportional to the link activity.
	off	Indicates there is no Wireless connection established.

Port Status LEDs

The port status LEDs indicate whether the ports on the device are operating properly. The following table describes the possible status for the ports.

LED	LED Color	Meaning of the LED
Link/Activity	blinking green	Indicates the device detects Ethernet traffic for the port.
	off	Indicates the port has not established a link with another device.
	green	Indicates the port has established a link with another device.
10/100	green	Indicates the port is connected to a 100 Base-T device.
	off	Indicates the port is connected to a 10 Base-T device.

Specifications

This appendix provides general system specifications for the NetScreen-5GT Wireless device.

Attributes		
Height	2.93 centimeters	1.15 inches
Depth	18.45 centimeters	7.26 inches
Width	20.8 centimeters	8.19 inches
Weight	.9 kilograms	1.98 pounds
Electrical		
Switching Regulator	AC voltage: 100-240 VAC +/- 10% 50/60 Hz AC Watts: 15 - 18 Watts DC voltage: 12 Volts, 1.25 - 1.5 Amps	
Environmental		
Normal altitude	0° -40° C, 32-105° F	
Relative humidity	10-90%	
Non-condensing	10-90%	
The maximum normal altitude is 2,000 meters (6,562 feet)		
Certifications		
Safety	UL, CUL, TUV, CE, CB	
EMI	FCC Part 15 class B, VCCI, CE	
Ethernet Connectors		
Standard	100Base-TX	
Media Type	Category 5 and higher Unshielded Twisted Pair (UTP) Cable	
Maximum Distance	100 meters (328.08 feet)	
The RJ-45 twisted-pair ports are compatible with the IEEE 802.3 Type 10/100 Base-T standard		
ADSL Connector		
Types	6-pin RJ-11 connector for Annex A RJ-45 connector for Annex B	
Media Type	Standard telephone cable	

CONSOLE AND MODEM ADAPTER CONNECTIONS

The following table lists the RJ-45 connector definitions. To employ a standard UART port, both the console and the modem ports use this configuration.

RJ-45	Signal	Abbreviation	DCE
1	Request To Send	RTS	In
2	Data Terminal Ready	DTR	In
3	Transmitted Data	TD	In
4, 5	Signal Ground	SGND	N/A
6	Received Data	RD	Out
7	Not Connected		
8	Clear To Send	CTS	Out

The table below lists the RJ-45 to DB-9 adapter connection definitions. To employ a standard UART port, both the console and the modem ports must use this configuration.

DB9	Signal	Abbreviation	DTE	DCE	RJ45
1	Data Carrier Detect	DCD	In	Out	NC
2	Received Data	RD	In	Out	3
3	Transmitted Data	TD	Out	In	6
4	Data Terminal Ready	DTR	Out	In	7
5	Signal Ground	SGND	N/A	N/A	4
6	Data Set Ready	DSR	In	Out	2
7	Request To Send	RTS	Out	In	8
8	Clear To Send	CTS	In	Out	1
9	Ring Indicator	RI	In	Out	NC

Note: If you use the Console cable that is provided with the NetScreen device to connect to a modem, you need to obtain and install a null modem adapter on the modem connector.

Index

A

- AAL5 multiplexing [22](#)
- adding virtual circuit [23](#)
- address of Trust zone interface [31](#)
- admin name, changing [18](#)
- ADSL
 - configuring interface [22](#)
 - connecting the cable [9](#)
 - connecting the port [9](#)
- Annex A [9](#)
- Annex B [9](#)
 - configuring for Deutsch Telecom [25](#)
- antennae [11](#)
- ATM Adaptation Layer 5 [22](#)

B

- backup interface to Untrust zone [30](#)

C

- changing login name and password [18](#)
- changing the port mode [28](#)
- configuration
 - default settings [21](#)
 - optional [26](#)
 - required [17](#), [21](#)
 - SSID [20](#)
 - wireless network [19](#)
- connecting power [12](#)
- connectors
 - port [33](#)
 - power [33](#)
- Console, using [17](#)
- conventions [15](#)
 - CLI [6](#)
 - WebUI [6](#)

D

- date, setting [18](#)
- DB-9 connector [38](#)
- default settings [21](#)
 - restoring [31](#)

- Deutsch Telecom, configuring Annex B [25](#)

G

- Guide Organization [5](#)

L

- LEDs
 - port status [35](#)
 - status [34](#)

M

- managing device from specific host [27](#)
- microfilter [10](#)
- mounting device in rack [12](#)
- multiplexing, configuring [23](#)

N

- NetScreen Publications [7](#)

P

- password, changing [18](#)
- Point-to-Point Protocol over ATM
 - See* PPPoA
- Point-to-Point Protocol over Ethernet
 - See* PPPoE
- policies, configuring additional [27](#)
- port connectors [33](#)
- port mode, changing [28](#)
- port status LEDs [35](#)
- power connectors [33](#)
- power, connecting [12](#)
- PPPoA [22](#)
 - configuring [24](#)
- PPPoE [22](#)
 - configuring [24](#)

R

- rack mounting the device [12](#)
- registering the device [15](#)
- reset pinhole, using [32](#)

restoring default settings [31](#)
restricting management from specific host [27](#)
RJ-45 connector [38](#)
Route mode [27](#)

S

Service Set Identifier
 See SSID
setting device clock [18](#)
signal splitter [10](#)
SSID, Service Set Identifier [20](#)
static IP address [22](#)
 configuring [25](#)
status LEDs [34](#)

T

Telnet, using [16](#)
time, setting [18](#)
Transparent mode [27](#)
Trust Ethernet Ports [11](#)

U

Untrust zone, configuring backup interface [30](#)
Untrusted port [11](#)

V

verifying connectivity [31](#)
virtual circuit, adding [23](#)
Virtual Path Identifier/Virtual Channel Identifier
 See VPI/VCI
VPI/VCI [22](#)
 configuring [23](#)

W

WebUI
 accessing [15](#)
WebUI, conventions [6](#)
Wireless
 antennae [11](#)
 configuration [19](#)
 connecting [9, 11](#)
 Trust zone [19](#)
 using the default interface [11](#)
 Wzone1 zone [20](#)
wireless1 interface [20](#)
wireless2 interface
 accessing [15](#)
 binding zones [19](#)
 changing interface address [31](#)
 setting SSID for [20](#)
 Trust zone [19](#)