

TECH600PRO
Tire Pressure Monitoring System Tool

User Guide



IMPORTANT NOTICES

COPYRIGHT

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means - electronic, mechanical, photocopying, recording, or otherwise - without prior written permission from Bartec.

DISCLAIMER

Bartec makes commercially reasonable efforts to provide accurate and complete data in connection with our tools and our website, but the volume of data compiled and the variety of sources from which the data comes makes it impossible to warrant full accuracy or completeness of any kind. AS A RESULT, BARTEC DOES NOT WARRANT, AND SPECIFICALLY DISCLAIMS ANY WARRANTY, THAT THE SITE, TOOLS, AND/OR THE CONTENT CONTAINED THEREIN IS ACCURATE OR COMPLETE. All specifications, illustrations and information contained within this manual are based on the most current information available at the time of publication. Bartec USA reserves the right to make changes at any time without obligation to notify any person or organization. Bartec USA will do its best to keep you the customer informed of any changes that might affect the tools performance. Important items will be called out by using **“NOTE.”** Information following this indication should always be paid attention to.

FCC COMPLIANCE

FCC ID: SX8DSW9 IC: 5736A-DSW9

Contains FCC ID:

QOQWT12, IC: 5123A-BGTWT12A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

L’émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d’Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L’exploitation est autorisée aux deux conditions suivantes :

- 1. L’appareil ne doit pas produire de brouillage;*
- 2. L’appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d’en compromettre le fonctionnement.*

Table of Contents

IMPORTANT NOTICES.....	2
SAFETY DEFINITIONS	5
WHEN WORKING ON THE VEHICLE:	5
DISPOSING OF EQUIPMENT	5
DISPOSING OF BATTERIES	6
CORRECT USE OF THE TOOL.....	6
WHEN USING THE TOOL REMEMBER:.....	6
RECEPTION, MAINTENANCE AND GUARANTEE:.....	6
BEFORE GETTING STARTED.....	7
CHARGING TOOL	7
REGISTRATION	7
UPDATE.....	7
KIT COMPONENTS	8
TOOL LAYOUT	8
POWER ON/OFF SEQUENCE	8
HOME MENU.....	9
SELECTING A VEHICLE.....	10
SELECTING BY VIN/DICATE.....	10
SELECTING BY MMY	11
NEW SERVICE	12
MORE TPMS INFORMATION	13
TEST SENSORS	13
LF ACTIVATED SENSORS.....	13
TOOL POSITIONING	13
NON-LF ACTIVATED SENSORS (EARLY BERU AND PACIFIC SENSORS UP TO 2009)	13
POSSIBLE SENSOR READING RESULTS.....	14
RELEARN	15
STATIONARY RELEARNS:.....	15
DRIVE RELEARNS:	15
OBD RELEARNS:	15
RITE SYNC®:.....	16
RELEARN INFORMATION:.....	17

PROGRAMMABLE SENSOR	18
OBD DIAGNOSTICS.....	19
TECHNICAL INFORMATION	20
REVIEW VEHICLE DATA.....	21
SETTINGS	21
CONNECTING TO A WI-FI NETWORK.....	22
CONNECTING TO THE WIRELESS VCI	22
REGISTRATION AND TPMS DESKTOP	23
UPDATING THE TOOL VIA USB CABLE	25
UPDATING YOUR TOOL VIA WI-FI.....	26
VCI UPDATING.....	26
APPENDIX	27
TPMS DESKTOP	27
<i>TPMS Desktop Updates</i>	27
<i>Inspection Reports:</i>	27
<i>Placard (400PRO/600PRO/450PRO Only)</i>	27
<i>Tool Updating:</i>	28
<i>Vehicle Lookup:</i>	28
<i>Desktop Settings:</i>	28
<i>Technical Support:</i>	28
TOOL SERVICE	29
PROPER CARE AND CLEANING:	29
SERVICE:.....	29
TECHNICAL SPECIFICATION.....	29
MODES AND MODE CHANGING.....	30
ACCESSORIES AND REPLACEMENT PARTS.....	31
TECHNICAL SUPPORT	32
GLOSSARY	33
VEHICLE IDENTIFICATION NUMBER OR VIN	34
FAQ & TROUBLESHOOTING GUIDE	35
COMMS ERROR TROUBLESHOOTING.....	35
LIMITED WARRANTY AND REPAIR.....	36
TOOL REGISTRATION FORM	37

SAFETY DEFINITIONS

All **Danger**, **Warning**, **Important**, and **Note** messages must be followed for your safety. These safety messages are in the following form.



DANGER: Means you may risk possible loss of life.
harm.



WARNING: Means you may risk possible bodily

CAUTION: Means you risk damage to the vehicle or the tool.

These safety messages cover situations Bartec is aware of. Bartec cannot know, evaluate, and advise you as to all the possible hazards. You must be certain that any conditions or service procedures encountered do not jeopardise your personal safety.

Safety Precautions:

Carefully read the installation, operating and maintenance instructions in the user guide.

Do not allow unqualified personnel to use this equipment. This will prevent injury to persons and damage to the equipment. The workplace must be dry, sufficiently lit, and well ventilated.

Do not forget that breathing carbon monoxide (odourless) can be very dangerous and even fatal.

WHEN WORKING ON THE VEHICLE:

- Wear suitable clothing and act in such a way as to prevent industrial accidents.
- Before starting, check to be certain the gear shift is in neutral (or in PARK (P) if the transmission is automatic) and put the handbrake on and check to be sure the wheels are completely locked.
- Do not smoke or use naked flames when working on a vehicle.
- Wear safety glasses to protect your eyes from dirt, dust, or metal chips.



DISPOSING OF EQUIPMENT

- Do not dispose of this equipment as miscellaneous solid waste but arrange to have collected separately.
- The re-use or correct recycling of electronic equipment (EEE) is important to protect the environment and human health.
- Public administrators and producers of electrical and electronic equipment are involved in facilitating the re-use and recovery of waste electrical and electronic equipment through these collection activities and use of appropriate planning arrangements.
- Unauthorised disposal of waste electrical and electronic equipment is punishable by law with appropriate penalties.

DISPOSING OF BATTERIES

- The Tech 600 contains a Lithium Polymer rechargeable battery which is not accessible to the user.
- Batteries must be recycled or disposed of properly. Do not throw batteries away as part of normal refuse disposal.
- Do not throw batteries on to an open fire.
- Return tool to BARTEC USA for proper disposing of the tool.



CORRECT USE OF THE TOOL

- Do not expose the tool to excessive moisture.
- Do not use the tool near sources of heat or polluting emissions (stoves, ovens, etc.).
- Do not drop the tool.
- Do not allow the tool to come into contact with water or other liquids.
- Do not open the tool or attempt to perform maintenance or repair operations on any internal parts.
- You are advised to keep the packaging and to re-use it if the tool is moved to another site.

WHEN USING THE TOOL REMEMBER:

- Do not subject the tool to magnetic or electric interference.

RECEPTION, MAINTENANCE AND GUARANTEE:

Inspect the tool when delivered. Damage sustained during shipment is not covered by the guarantee. Bartec will accept no responsibility for material or bodily harm resulting from inappropriate use of the product, failure to maintain it, or incorrect storage conditions.

Bartec provides training for clients desirous of acquiring the knowledge required for the correct use of its products.

Only personnel authorized by Bartec are permitted to make any repairs that may be necessary. This tool is guaranteed against any manufacturing fault for two years as of date of invoice (parts and labour) only if product has been correctly used. Serial number must stay readable and proof of purchase must be retained for presentation upon request.

BEFORE GETTING STARTED

CHARGING TOOL

The TECH600PRO is shipped with a charged battery. It is recommended that the tool is charged **2+ hours** before first use. For optimum performance, always keep it sufficiently charged.

The TECH600PRO will notify the user when the battery has low power, and the battery icon will change color from white to red. When there is an insufficient amount of power remaining in the battery, the TECH600PRO will save all of the TPM Data and then power itself off.

Your Tech600PRO Series tool comes with a factory-installed rechargeable battery. **Battery replacement must be done at the Bartec USA Repair facility.**

The Qi Inductive Charging Pad is the preferred method of charging. You can also use the supplied Micro USB cable attached to either the Standard Wall Plug Power Supply or a PC. Only use the power supply or Micro USB cable that is included in the PRO Series kit to charge this tool.



Use of unapproved power supplies may damage your tool and will void the warranty

REGISTRATION

To create your Bartec Account and/or register your tool, please download the TPMS Desktop application from www.tpmsdesktop.us. TPMS Desktop will register your tools automatically and download the latest updates to your tool. If you are unable to download TPMS DT the Bartec TECH600PRO can be registered at <https://tools.bartecusa.com> Follow the on-screen prompts filling in the information and tool serial number. A valid serial number and supplier is required to process the registration, which can take up to 24hrs once submitted.

UPDATE

Once the tool is registered, verify the software level loaded to the level available online and update the tool if necessary.

KIT COMPONENTS

The **TECH600PRO** kit inside the toolbox includes:

- Tool Case
- Quick Start Guide
- TECH600PRO and Wireless VCI
- USB cable/Power supply



Identifying Kit Components and Features

The TECH600PRO tool is battery operated and generates a low-frequency magnetic field to activate tire sensors. It receives UHF radio signals from the tire sensors typically at 315MHz & 434MHz.

TOOL LAYOUT

Up/Down/Left/Right Navigation-allows the user to navigate in different directions on the menus.

Enter-Allows you to proceed to next menu.



Test- When pressed in the relearn/test sensor function will commence a test on the sensor.

Home/Back/Esc: When pressed once will take you back a menu or escape the current function. When held will take the user to the home menu.

On/Off & Quick Menu- On/Off used for powering the Tech600PRO on and off. The quick menu can be used when the is illuminated on the menu bar.




POWER ON/OFF SEQUENCE

Press and hold the  power button for two seconds to power on the tool. To power off the tool, press and hold the  power button for three seconds.

Auto power off is after 10 minutes of inactivity. This can be changed in the Settings menu.

The unit automatically powers up when the charger or USB port is in use – auto power off is not operational. The tool cannot be operated when plugged in.

HOME MENU

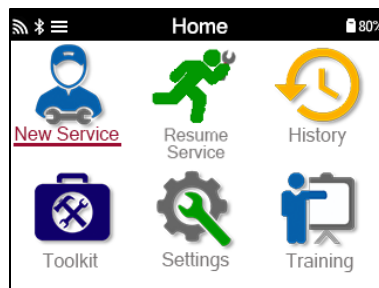

New Service

Used to check sensors, relearn sensors to the vehicle, perform OBD diagnostic, program sensors, and receive TPMS information



Resume Service

Used to resume your last job



History

Used to call up all stored works. User is able to search by registration or model and can also use this history function to upload and clear Service Data.



Toolkit

Allows the user to test the signal strength of a key fob (RKE Test) and test the strength of a UHF signal (UHF monitor). Identifying programmable sensors with RITE-ID® and Unlocking REDI Sensors®



Settings

Used to set up your personal settings in the tool – language, Wi-Fi/Bluetooth, units, auto off, sound, etc.



Training

Used to get tips related to TPMS

SELECTING A VEHICLE

The phrase “New TPMS Service” is exactly that: Starting a New TPMS Service on a vehicle.

The first recommended step with TPMS service will be selecting the correct vehicle which can be set up in the following ways:

- Select by VINdicate.
- Select by MMY (Make, Model, Year)
- **Note:** VINdicate is the process of working through the vehicles OBDII port and decoding the vehicle identification number (VIN) along with and diagnostic trouble codes providing the user with a more complete understanding of what the potential issues might be.





SELECTING BY VINDICATE

Once the user selects VINdicate the tool will begin with prompts giving the user directions as well as what the tool is doing.

1. Connect the Wireless VCI to the OBDII port and turn the ignition on.
2. If the ignition is on or VCI is not properly connected you will receive a pop-up message.
3. Press Enter to lookup vehicle or ESC to cancel.
4. Tool will then begin to read the VIN.
5. Once VIN is read tool will indicate a check mark that it read the VIN.
6. Then it will auto populate the YMM of the vehicle you are working on.

Note:

Some vehicles may not auto populate the MMY.

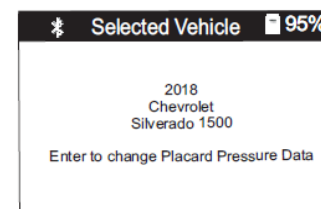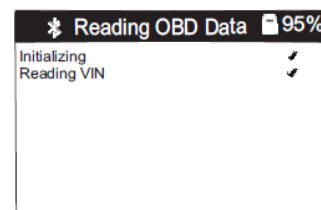
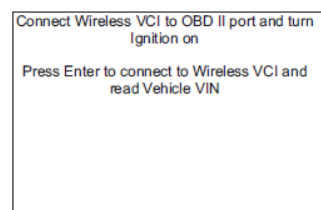
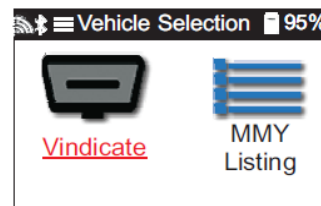


SELECTING BY MMY

1. Press MMY Listing- This will then progress you into selecting the vehicles Make (manufacture).
2. Select the Make- This is where you will choose the Make (manufacture) of the vehicle you are working on.
3. Select the Model- Here you will select the model of vehicle it is you are working on.
Note- SRW-Single Rear Wheel, DRW-Dual Rear Wheel.
4. Select the Year (10th digit of the VIN)- Selecting the year ensure the user will have the proper relearn functions of that vehicle. If unsure of the year, please look at the 10th digit of the VIN.

NOTE:

After selecting the Vehicle some may require a qualifier such as Steel/Alloy wheels, Ikey/Non Ikey.

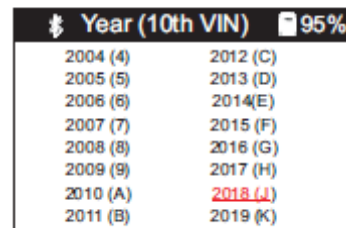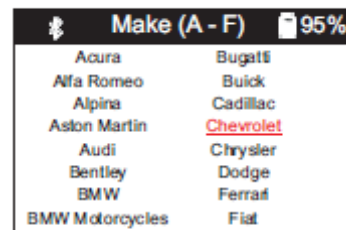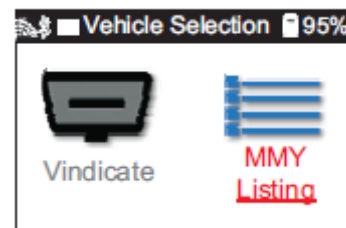

NEW SERVICE



Check Sensors

This uses a quick and easy to follow process which allows the user to read sensors, process the data, read battery status & ID's.



Relearn

All relearn procedures that are available on the selected vehicle.



OBD Diagnostics

Used to diagnose vehicle problems, receive sensor ID's, and reads the vehicle VIN



Program Sensor

Create
Copy/clone ID (single)
Copy/clone ID (set)
Copy using stored data
Enter ID manually
RITE-ID®



Technical Information

Detailed sensor & service kits information



Vehicle Data

Allows the user to review the service data captured with the TECH600




Placard Change

Allows the user to change the placard to adjust for different load range tires.

MORE TPMS INFORMATION





If you see this icon on the screen press  for more TPMS information

TEST SENSORS

Use this function to test the fitted sensors before continuing with further steps.

To check the status of the TPMS sensors on the vehicle, select Check Sensors from the Service Screen. A screen similar to the following should be displayed:

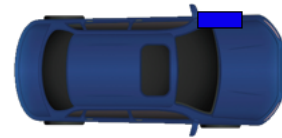

Use the arrow keys to select the sensor which needs to be read.

Press Enter to read sensor
Press menu for more options

LF ACTIVATED SENSORS

To test a sensor the tool should be placed alongside the valve stem and the 'Test' key



pressed.

TOOL POSITIONING

Do NOT touch the metal rim. The tool needs to point through the rubber at the sensor.



(Note: with Ford Banded sensors the tool should be held 180°/opposite from the stem's position)

NON-LF ACTIVATED SENSORS (EARLY BERU AND PACIFIC SENSORS UP TO 2009)








If the tool requires rapid tire deflation (of the order of 10psi or 0.5bar), then deflate the tire and place the tool alongside the stem while pressing the test key.

During testing, the screen confirms the sensor type being tested and displays a progress bar.


Different makes of Sensors respond at different speeds/ time intervals.

POSSIBLE SENSOR READING RESULTS

Note that if a faulty Sensor has been replaced, some method of relearn procedure will need to be followed, as explained later in this manual.

	<p>Successful Sensor Read Sensor was successfully activated and decoded. Displays pressure (in Bar or PSI) at wheel location.</p>
	<p>Failed Sensor Read No Sensor Activation or Decode. May be wrong sensor fitment or non-functioning sensor. Tool will prompt to attempt reading the sensor 3 times.</p>
	<p>Duplicate ID A Sensor with a duplicate ID has been read. Tool will direct to re-read those sensors.</p>
	<p>Wrong Sensor Type A Sensor was activated and decoded, but does not match the protocol for the Make, Model and Year that the tool was set-up for.</p>
	<p>No Pressure</p>
	<p>Low Sensor Battery Sensor's internal battery has dropped below a certain voltage threshold.</p>
	<p>New Sensor Found Icon indicates that a new sensor was found on the vehicle.</p>

RELEARN

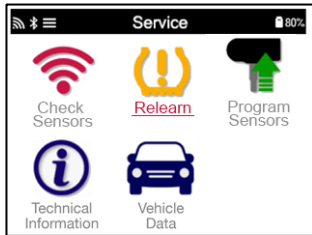

To find out which relearn type is available for a vehicle, just turn on the tool and select Relearn. Or refer to the current coverage list at <https://www.bartecusa.com/tpms-tool-coverage-charts>.

A TPMS relearn is the process in which TPMS sensor IDs are stored or written to the ECM of the vehicle. There are three categories of TPMS relearns for a Direct TPMS System:

- Stationary
- Auto (Drive)
- OBDII Connect
- Indirect (Vehicles have no sensors)

Your Tech600 tool will display the relearn process right on the screen of what is available to use for that specific vehicle. The tool will also list the Tire Industry Association (TIA) Relearn Process Reference number for cross-reference to the TIA TPMS Relearn Chart. Bartec recommends performing a TPMS relearn any time a vehicles' tires are removed.

STATIONARY RELEARN:

Stationary Relearns use the vehicle's on-board TPMS system to listen for transmissions from TPMS sensors while the vehicle is in "Learn Mode". This is usually achieved through a series of actions performed on the vehicle to place it into this mode. Once the vehicle is in Learn Mode, use your PRO Series tool to activate the sensors. The vehicle will listen for the sensor IDs and assign them to the correct wheel positions on the vehicle.

DRIVE RELEARN:

Some vehicles can be reset by driving. Refer to the on-screen relearn procedures for details on how far/long to drive. It can take up to 20 minutes to relearn the sensor IDs.

OBD RELEARN:

An OBDII relearn is either a vehicle that requires the OBDII connection to complete the registration of new TPMS sensor IDs to the vehicle or is optional coverage for Stationary or Auto Relearn vehicles. Connection to a vehicle allows the Tech600 to directly program the vehicle's ECM with TPMS sensor IDs. OBD can be connected when all sensors are successfully read and the message "All Sensors OK" is displayed. Please use the "Technical Information" menu and select "View Vehicle Info" to find the OBD location. **NOTE:** Not all vehicles support OBD vehicle communications.

RITE SYNC®:

RITE-SYNC® allows the Technician to install a NEW RITE-SENSOR® into a vehicle just like the OE sensor, and during the RELEARN Process, “sync” that sensor to the Make-Model-Year selected, keeping the RELEARN process the same as using an OE sensor. This means that there is no need for the extra step in Programming the sensor before installing it within the wheel and tire assembly.

- No longer forgetting to program the sensor.
- Keeps process consistent.
- Sensor programs in Wheel and under pressure!

*RELEARNS listed with RITE-SYNC® still support other sensors, both OE and Aftermarket. Other programmable sensors used will need to be pre-programmed before the RELEARN process. Other brands of programmable sensors do not support programming at the wheel and tire or under pressure.

Note:


Stnry RITE-SYNC = Stationary Relearn process with RITE-SENSOR® Support

OBDRITE-SYNC = OBDR Relearn process with RITE-SENSOR® Support

Drive RITE-SYNC = Drive (Auto) Relearn process with RITE-SENSOR® support (activate sensors before drive)

Process (RITE-SYNC®):

1. Configure the Make-Model-Year (see VINdicate TSB for more info)
2. Select the Relearn Process
3. Follow the process with Activating the LF/RF/RR/ and LR wheel locations.
4. Tool will “RITE-SYNC®” any new RITE-SENSORS® automatically.

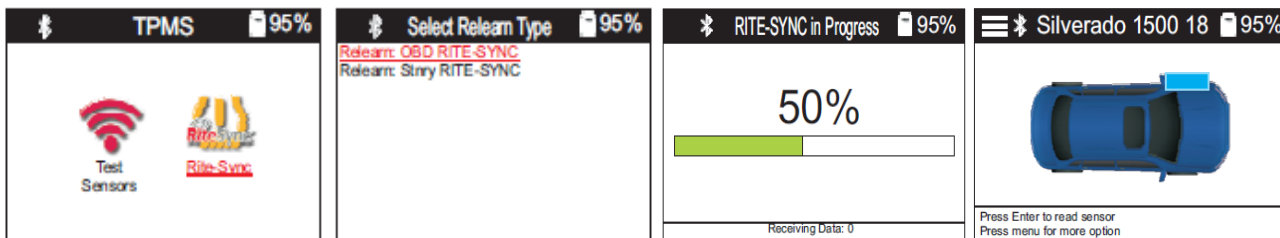

Note:


Test Sensors diagnostics for RITE-SENSOR®

Tool will declare an un-synchronized RITE-SENSOR if found and will inform the technician it can be sync’d in the Relearn process.

RELEARN INFORMATION:

This contains extra information about the relearn for the selected vehicle, which can assist you if you have any problems. An example would be for some Toyota and Lexus vehicles which use a summer and winter tire set.

After selecting a Relearn method, follow the instructions given by the tool to relearn Sensors.

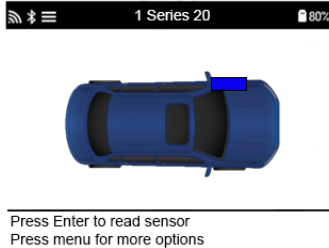


Selected tire.
Processing order:
Left Front,
Right Front,
Right Rear,
Left Rear

As well as the pressure and temperature, we also display the “mode” of the sensor. In some cases, the mode cannot be changed and is not important, but in some cases it will need to be changed in order for the relearn to work.

For example, if sensors for a vehicle show “Park” or “Drive” they are already in the correct mode. Otherwise use the “Mode Change” command in the Quick Access Menu. If the sensors are shown as Ship, Off or Test mode, put them in Park mode, using the “Mode Change” command in the Quick Access Menu



Press the  to access the Quick Access Menu and see the options available for the vehicle requiring a Relearn. Options that are not required on a vehicle will not be displayed.

Special service advice for Toyota Models:

Toyota ECU Reset

If at any time the vehicle TPMS Reset button is pressed with the new sensor IDs fitted, the ECU OBD relearn will not work until the Toyota ECU Reset is selected (with the tool connected to OBD). The TPMS Reset button should only be used to set new tire pressures, and on some vehicles to change between winter and summer ID sets.

Special service advice for Kia and Hyundai Models:


Reset YD Sensor

For some Kia and Hyundai vehicles with the newer low line TRW YD sensors, this allows you to put the sensors back into the correct mode (Sleep or Rest) to work with the vehicle.

These specific Service advices will only appear if applicable for the preselected Make, Model and Year combination.

PROGRAMMABLE SENSOR

The “Programmable Sensor” Point on the service menu enables the function of programming aftermarket replacement sensors like the RITE-SENSOR®, HUF IntelliSens® or the Schrader EZ-sensor®. Even when they are already mounted in a wheel or programmed to another vehicle. The user can choose from a selection of sensors which match the preselected MMY. At which point the user has the ability to create or copy a sensor. Note- the sensor has to be read before copying.

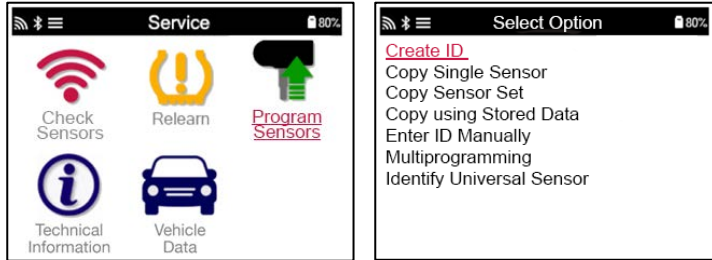

Copy Sensor Set	Used to Copy/Clone a winter tyre set with the same ID's as the summer tyre set. Requires the reading of the old sensor to program the same ID on the replacement sensor to avoid the relearning process.
Create ID	Used to create a single sensor with a new ID. Can be repeated as many times as requested. The ID needs to be relearned to the vehicle's ECU.
Copy/Clone ID	Used to Copy/Clone a single ID. Can be repeated as many times as requested. Requires the reading of the old sensor to program the same ID on the replacement sensor to avoid the relearning process.
Enter ID Manually	Used to create a Sensor with a new ID that can be typed in manually. This option only appears for some sensors. If it is not possible to copy the ID, enter the same ID manually, which is written on the sensors body.
Copy Using stored data	Gives you the option of using stored IDs either read from the TPMS sensors or from the vehicle OBD

The current coverage list is available at <https://www.bartecusa.com/tpms-tool-coverage-charts>




Recommended sensor position for programming:






OBD DIAGNOSTICS

OBD Diagnostics is the function of connecting the Wireless VCI to the OBDII port of the vehicle in order to be able and read any TPMS related information in the ECM. The tool will capture the following information:


- DTCs (TPMS)
- VIN
- Sensor IDs
- Placard Settings

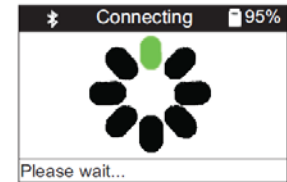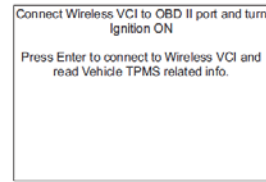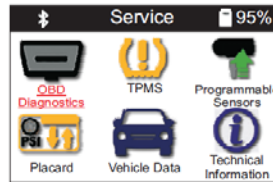



Viewing the DTCs will allow you to determine if there is another fault before beginning the TPMS service or allowing the vehicle to leave the facility. Some DTCs may need further diagnostics as to what they are. If a code is followed by a H it is a historic code that has been present for some time.

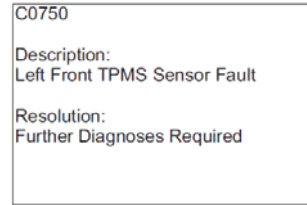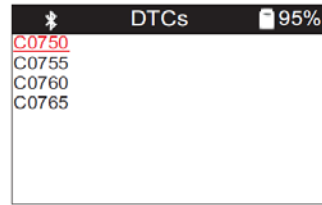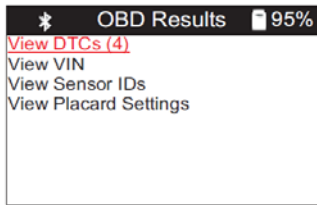



Viewing the vin will display the vin stored in the ECM (Should be the same as other VINs on vehicle).

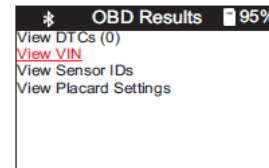

Viewing the Sensor Ids will allow you to determine what current TPMS ids are stored in what location on the vehicle according to the ECM.

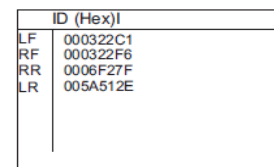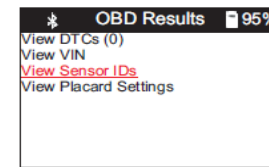


Viewing the placard settings will identify what they are currently set at in the ECM. Please note that all not all vehicles allow you to change the placard settings.

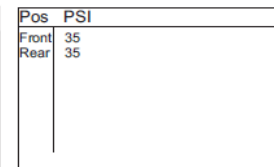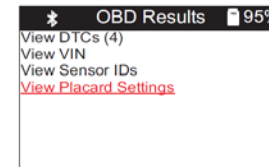


After any TPMS service is completed you can go back to OBD diagnostics to ensure that the TPMS IDs have been changed to the correct location. As well as if you change the placard settings you can go back through the OBD diagnostics to ensure that the value is set to +/- 3% of the original wheel size.


TECHNICAL INFORMATION

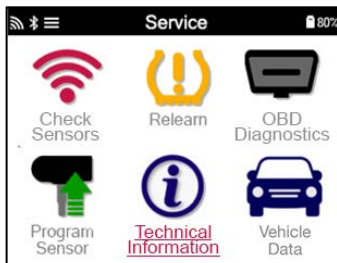


Technical Information Gives detailed information about replacement parts, service kits, sensors, vehicles, and service tips.

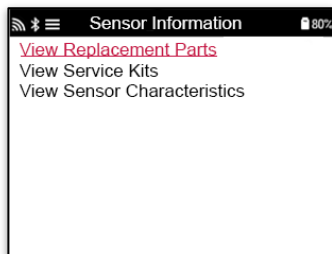

Sensors do not have to be read to access the following information.	
View Replacement Parts	Used to show all Replacement Sensor part numbers that can be fitted to the preselected MMY
View Service Kits	Used to show all Replacement Service Kit part numbers that can be fitted to the preselected MMY
View Sensor Characteristics	Used to show technical sensor information of the sensor that needs to be fitted. e.g., Nut torque settings

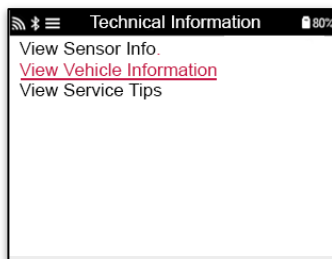

View Vehicle Information This option provides information about the Relearn method, the OBD port location and if there are programmable Sensors for the preselected MMY available.

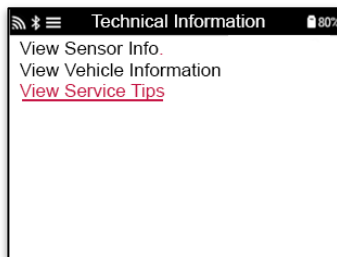


View Service Tips This option provides information about the specific meaning of the TPMS light as well as common mechanical faults for the preselected MMY.



REVIEW VEHICLE DATA

Sensors and OBD need to have been read for data to be shown.

The menu gives direct access to specific screens that display the Vehicle data. This option is helpful if the user wants to have a second look at the Sensor Data, OBD Data.

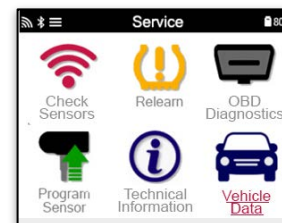

SETTINGS

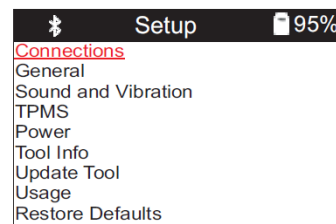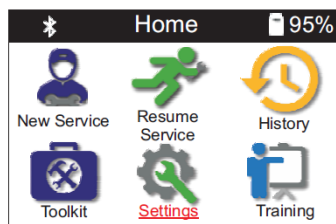

Connections

Connect to a Wireless VCI, TPMS Desktop, and Wi-Fi.

General

Check and update time and date on the tool, and change the language displayed

Sound and Vibration

Enable or disable tool sounds or vibrations

TPMS

Change the units displayed when reading a TPMS sensor, for Pressure, Temperature, and the TPMS ID

Power

Change the length of time before the tool automatically turns off

Tool Info

Display the tool info, including software version, serial number etc.

Update Tool

Update the tool to the latest software (requires the tool to be registered).

Usage

View tool usage such as Power Cycles, Sensor Activation, OBD Relearns, RITE-SYNC®, RITE-SENSOR® and VINdicate®

Restore Default


Restore the tool settings to factory settings.

CONNECTING TO A WI-FI NETWORK


After selecting **Connections** in the Settings menu, it is possible to choose between Bluetooth (OBDII Module and TPMS Desktop), and Wi-Fi.

To connect to a Wi-Fi network, highlight 'Wi-Fi: Join Network' and press Enter. Select the correct available network displayed by highlighting it and pressing Enter. Use Up Arrow key to start with upper case, Down Arrow key for numbers and lower case to enter the passphrase. ESC to go back a position and Enter to enter the next character. TEST to connect. Special characters like ß, ä, ö, etc. cannot be selected.

When connected, it is possible to check for updates. To go ahead, press enter. To check later, press ESC.



Current network displays information about the network the tool is connected to.

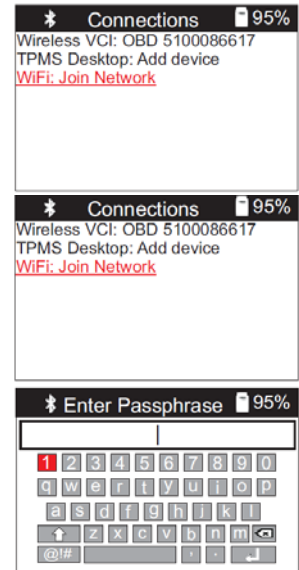

CONNECTING TO THE WIRELESS VCI

Step 1:

To connect the TECH600 to the Bluetooth OBDII module, select **Connections** in the Settings menu.

Step 2:

Select 'Wireless VCI: Add device' to allow the tool to find the OBDII module via Bluetooth. Please note, the Wireless VCI must have power for the tool to be able to discover it.


Step 3:

Once the TECH600 has discovered the Wireless VCI, it will display a list of all possible connections. From this list, select the item which begins with 'OBD' and ends with the Wireless VCI serial number, i.e.: 'OBD 5100086617'. The Wireless VCI serial number can be confirmed by checking the label affixed to the module.

Step 4:

Press enter to confirm and pair the TECH600 with the OBDII Bluetooth Module. A confirmation message will be displayed when the connection is successful.

To disconnect the TECH600 from the Wireless VCI, go to Settings > Connections > Wireless VCI, and press enter to disable the connection

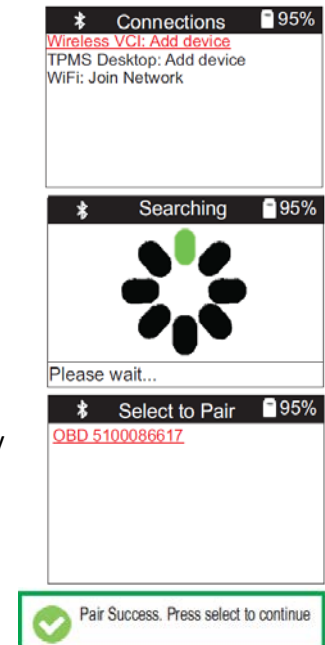

REGISTRATION AND TPMS DESKTOP

Recommended registration takes place when the tool is first turned on. Registration enables the notification of software updates and the ability to download update files to the tool.

To register a tool on TPMS Desktop, navigate to the Bartec TPMS Desktop at tpmsdesktop.us on your PC.




tpmsdesktop.us

Download TPMS Desktop and register your tool to receive the latest updates and unlock other great benefits.

For technical support:
help@bartecusa.com
1-866-987-8767

Download the TPMS Desktop software, and then install it using 'setup.exe'. When the TPMS Desktop has been load for the first time, the user will be presented with the following. The user then has the ability to log in using their Tools.Bartecusa.com log in credentials or registering as a new user.

Select 'Register' to create a new account. The following screen will open up in a web browser:

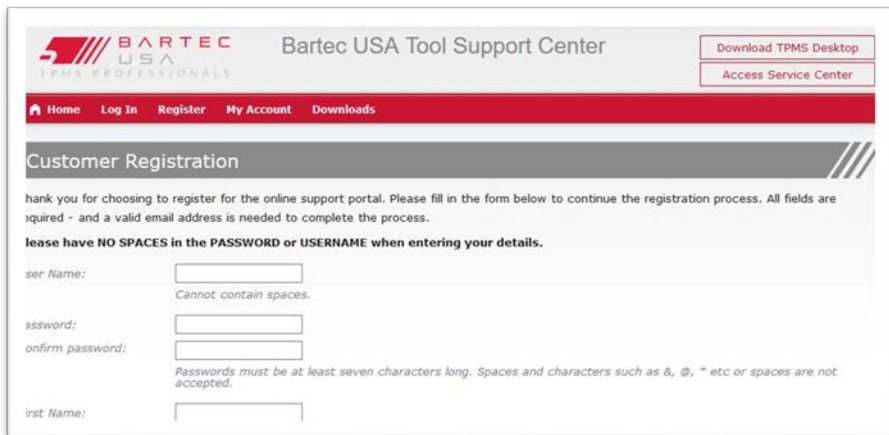


The screenshot shows the 'Customer Registration' page on the Bartec USA Tool Support Center website. It includes a navigation bar with 'Home', 'Log In', 'Register', 'My Account', and 'Downloads'. The registration form contains fields for 'User Name', 'Password', 'Confirm Password', and 'First Name'. A note states: 'Please have NO SPACES in the PASSWORD or USERNAME when entering your details.' Another note specifies: 'Passwords must be at least seven characters long. Spaces and characters such as &, @, * etc or spaces are not accepted.'

It is important to fill in all fields completely and accurately. This information will help Bartec remain in contact regarding updates and other important TPMS information. Choose a username (without a space) and password.


If the details are accepted, this message will show:



The following email should arrive within a few minutes:

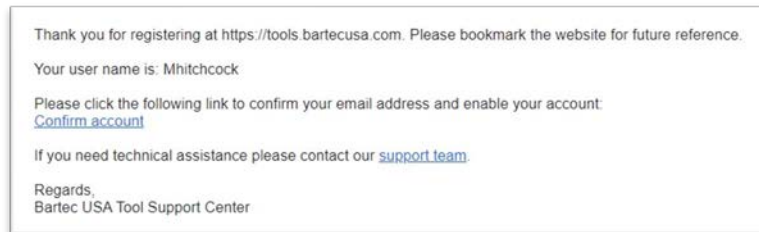


When clicking 'Confirm account' it will bring the user back to the website and the following page will show that the registration was successful.

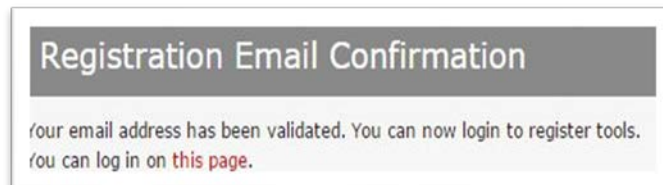

After creating an account, resume TPMS Desktop and Log in using the created credentials. Connect the Tech600 to the computer. The TPMS Desktop will automatically register the tool and will display the message: "Tool successfully registered".

NOTE: If you are unable to download TPMS Desktop, Please register your tool at tools.bartecusa.com and download the registration file and update file via Wi-Fi through the tool.

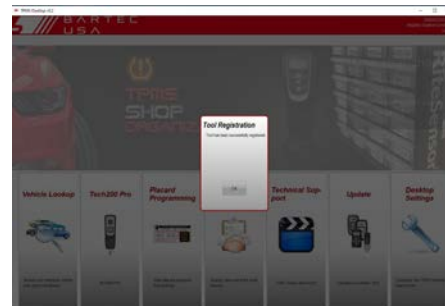

UPDATING THE TOOL VIA USB CABLE

If you are unable to download the latest software through Wi-Fi on the tool or TPMS Desktop, the other method is connecting the tool to the PC and updating manually. The tool is compatible with PCs running Windows operating systems.

Step 1:

Power on the Tech600 and connect to a PC. The Tool will display a USB icon, to indicate that it is ready to receive update files.

Step 2:

The tool should open a window on the computer screen. The PC should detect the tool as the Tech600.

OR: To open window, navigate to My Computer and open the Tech600.

Step 3:

Copy and Paste or Drag and Drop the saved Update file (*.tprp or *.T6U) into the Updates folder.

Note: Every tool needs its own unique update file. The file can only be used for the specific tool identified by the serial number.



Step 4:

The tool will load the update file to the operating system.

Once the verification is complete the update finishes and the tool can be unplugged.

Step 5:

The tool is now updated and ready to go. The software version can also be checked in the Tool Info screen.

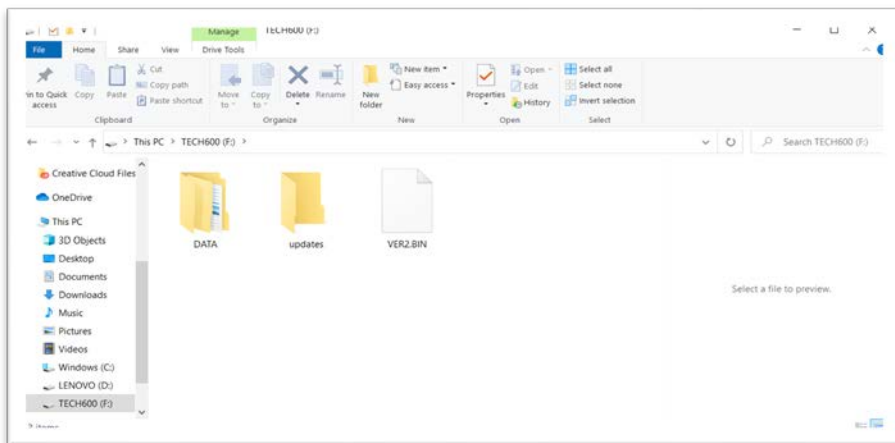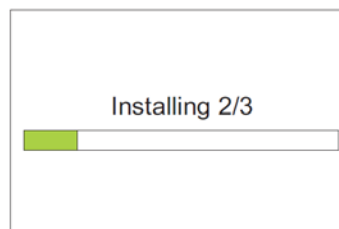

Trouble Shooting Tips:

- If Windows does not recognize the tool, please check that the USB cable is connected and that there are no unnecessary update files on your PC available.
- Make sure the right update file is used.
- Do not delete any files that may already be in the removable disk window.
- If device does not show, try a different USB cable or USB port on your PC.


Note- Please go to Settings>Tool Info to ensure that the tool is at the latest software update. Visit Tools.bartecusa.com to see the latest software version available for the tool and the latest attributes for the update.

UPDATING YOUR TOOL VIA WI-FI

Once the tool is set up to connect to Wi-Fi network, it will be ready for updating via Wi-Fi. Go to Settings > Update Tool > Wi-Fi Updates. The user will have the option of:




Check Now

When pressing Enter, the tool connects to the Wi-Fi network.
If there is an update: press Enter to download and install or ESC to cancel downloading.

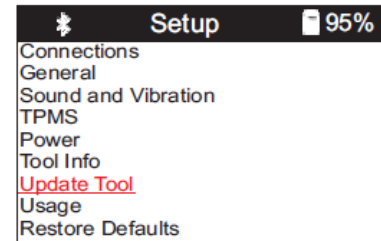





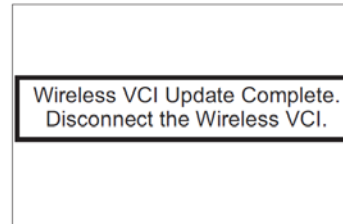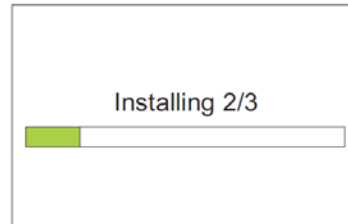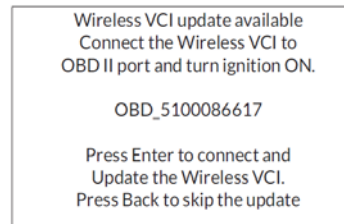

VCI UPDATING

After a successful software update to the Tech600PRO it may indicate there is a software update for the Wireless VCI, the user will need to connect the Wireless VCI to a vehicle in order to update the Wireless VCI. Please note the Wireless VCI led indicator will change colors to indicate an update is in process.



Wireless VCI Led Indicator:
During Update color will change to multiple different colors indicating an update is underway.

VCI Color Indicators:

-  **No light**- Means no power to Wireless VCI. Check ignition is on.
-  **Flashing Red**- Malfunction has occurred. Recycle the ignition, ensure its fully inserted.
-  **Solid Red**- Indicates Wireless VCI is ready to connect to. Ensure within 15 feet of range and ignition is on.
-  **Solid Amber**- Indicates Wireless VCI is connected to a device.
-  **Solid Green**- Indicates connection to vehicle and tool is good.
-  **Solid White**- Indicates connection is loss due to distance. Ensure within 15 feet range.


APPENDIX

TPMS DESKTOP

Bartec created the TPMS Desktop software to let you easily manage and update your Bartec TPMS tools, and to enhance your ability to provide complete TPMS diagnostics and service to your customers.

TPMS Desktop Updates

If your PC has an internet connection, TPMS Desktop may periodically prompt for updates when first launched. Click **OK** on the update prompt, and the update will download and install automatically. Follow any additional on-screen instructions.

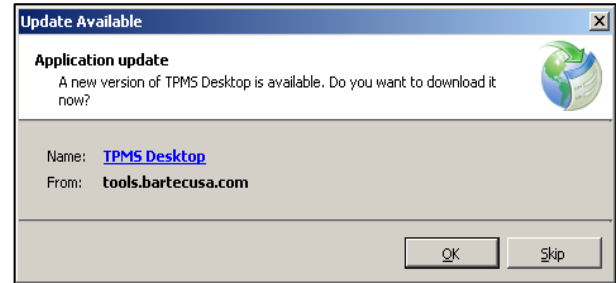

Inspection Reports:



Search, view, and print your TPMS tool's Relearn audit data after sending it wirelessly to TPMS Desktop. Use the Filters options in the left menu to sort by Date and/or

Make/Model/Year or search by vehicle license.



Print: Select between Customer and Detailed formats to print an individual audit report.



Edit: Edit or add data to an individual report (e.g., vehicle license, customer name and contact information).



Link: Use to link multiple audit files for the same vehicle.



Placard (400PRO/600PRO/450PRO Only)



Search, view, and print your 400PRO tool's Placard audit data after sending it wirelessly to TPMS Desktop. Use the Filters options in the left menu to sort by Date and/or Make/Model/Year or search by vehicle license.



Print: Select between Customer and Detailed formats to print an individual audit report.



Edit: Edit or add data to an individual report (e.g., vehicle license, customer name and contact information).




Link: Use to link multiple audit files for the same vehicle.

Tool Updating:



Tool Updating provides access to tool management and software updates for your registered TPMS tools, and automatically retrieves available update files as needed.

With the **Tool Updating** screen selected, connect your PRO Series tool to the PC using the provided micro-USB cable. Under **Connected Tools**, your tool's information will populate. If the **Update** button is highlighted, click it and the TPMS desktop application will walk you through the update process. **Note**-All tools must be registered to update.

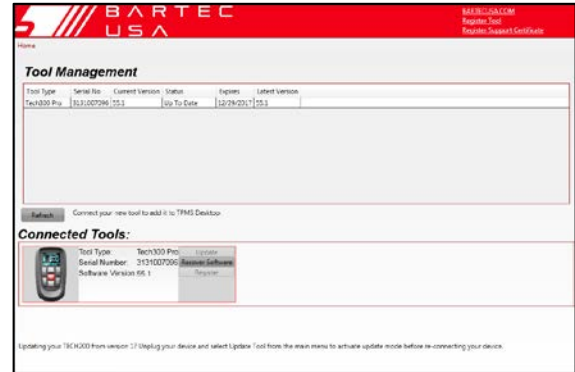

Vehicle Lookup:




Select a Make/Model/Year to view the information on vehicle TPMS type, supported sensors, and relearn procedures. There is a quick link to the Bartec TPMS HUB for a full description of TPMS data, procedures, and part lookup data. Vehicle look up coverage will match current

released software.

Desktop Settings:




View and configure the settings for TPMS Desktop, including Bluetooth connections. Access log files when requested by Technical Support.

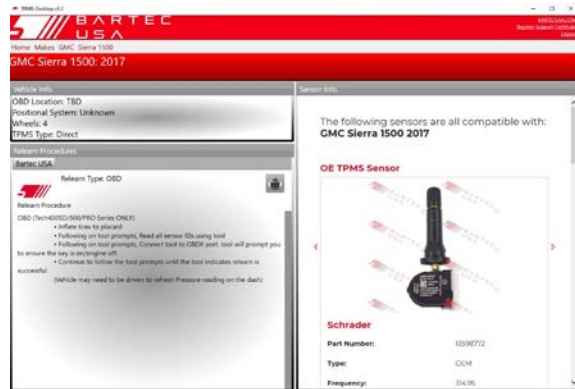

Want to connect with Bluetooth. Connectivity is just a few clicks away with TPMS Desktop.



The TECH600 will connect wirelessly to the TPMS Desktop using Bluetooth technology. While this will work easily with most computers, some have software which can be difficult to setup. In these rare circumstances, or if the computer does not support Bluetooth, a Bluetooth adaptor can be used. To be able to use the TECH600 with Bluetooth, the tool first needs to be configured. Go to Settings > Connections > "TPMS Desktop: Add device" The Tool will then attempt to connect with TPMS Desktop on the PC.

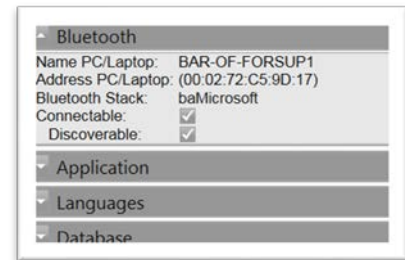

Technical Support:



Links to Bartec's Online Training, including Technical Service Bulletins, User Guides, training videos, and more.

TOOL SERVICE

Your Tech600 has been designed especially for the rugged automotive shop environment. When properly cared for and maintained, it will provide years of service. However, accidents happen, and when they do, Bartec stands at the ready to deliver excellent support and service to get you up and running again.

PROPER CARE AND CLEANING:

Like all electronic tools, your PRO Series tool should always be kept in a safe place away from liquids and damaging chemicals. From time to time, cleaning of the enclosure and the screen will be required. To clean the tool, use a mild, non-abrasive spray cleanser applied to a soft cloth, and wipe the external surfaces of the tool.



SERVICE:

The PRO Series tool is not field serviceable. If damage occurs, or the tool does not power on, follow these steps to get you back up and running again:

1. Contact our Technical Support team with your concerns. Please ensure your tool is registered and have the serial number ready.
2. If our Technical Support team cannot correct your issues in the field, they will begin the process for a Return Material Authorization (RMA) to have your tool sent in for service. Our Technical Support team will pass your information along to our Repair department.

Information you should receive includes:

- Your RMA #
- Ship-to address of our repair facility.
- Confirmation of your return shipping address



TECHNICAL SPECIFICATION

Power Supply	Lithium Polymer rechargeable battery, not user serviceable
Max power consumption	1.5W Schrader TPM, 0.5W all others
Display	LCD 16-bit colour, graphic, resolution 320x240
Keyboard	7 keys, dust, water and grease-resistant
Input/output	Micro-USB style USB used to Connect to PC for firmware update and audit file download.
Vehicle connection	Uses Bluetooth to connect to a Wireless VCI
Working environment	Temperature 32°F - 113°F, Humidity: 20-55%
Storage environment	Temperature 14°F - 122°F, Humidity: 20-60%
Dimensions	7.4" x 4.2" x 1.9"
Weight (including batteries)	1.09 Lbs

MODES AND MODE CHANGING

Sensors can have many different “modes” when they have been read, such as Learn, Tool LF, YD Sleep, YD Rest, Hi Norm Dly. Some of those are called sleep mode to preserve battery life.


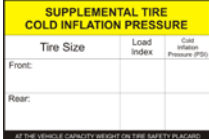





Mostly, these modes are not important because the sensor will be supplied already in the correct mode to use. But for some sensors made by Continental it is important that the mode is displayed as “Park”, as otherwise it will not work on the vehicle.

The TECH600 tool has the ability to perform the necessary mode change. If a sensor is shown as “Ship”, “Test” or “Off” and the relearn toolkit provides the option “Set Sensor to Park Mode”, please use this option to change the sensor mode into the correct one:

- Go to “Relearn” and select vehicle (MMY).
- Press enter when relearn procedure shows.
- Select the spanner in the upper left corner with the Up/Down buttons. Press Enter.
- Select “Set Sensor to Park Mode”, press Enter.
- Go to the wheel, hold the tool near the sensor and press “Test”.
- Repeat for each wheel.
- Start the Relearn procedure.

Also, some sensors are supplied in a mode where they cannot be read by the tool unless they are pressurized in a wheel. Some examples would be replacement sensors bought from a Ford dealership, and some Mitsubishi Continental sensors.

ACCESSORIES AND REPLACEMENT PARTS

Item	Description	Bartec Part Number
	Dual Purpose charging cradle; safely store the tool and VCI and inductive charge your tool at the same time.	WRTPROWMC05
	Supplemental Placard Labels	Roll of 25: WRTPLACARD25 Roll of 100: WRTPLACARD100
	TIA Relearn Chart	WRTTIA20
	Wall Mount Power Supply	WRT400PWS
	Inductive Charging Pad w/ Power Supply	WRTPROQIPAD
	TPMS Magnet	WRTMAGNET
	Bluetooth Dongle	WRTBTDONGLE

TECHNICAL SUPPORT

To speak with our Technical Support team, please call our toll-free number:

(866) 407-8767

Hours of operation: 8am-8pm EST, Monday-Friday.

Or contact us by email: help@bartecusa.com

Visit our website at www.bartecusa.com for a complete directory.

For efficient and accurate service, please have the following information ready when contacting us:

- **Tool Serial Number:** This allows your call information to be added to our database for future reference. Can be found on the back side of the tool or in the settings/tool info.
- **Ensure your tool is registered:** A tool registered with Bartec USA gives you access to technical information which may assist you with your current issue.
- **Ensure your tool is up to date:** Having an updated tool ensures you have all the latest information and features.
- **Sensor Part Number:** If you have installed one or more sensors to a vehicle, please have the part number ready in case Technical Support needs to reference sensor-specific information.
- **Make, Model, and Year of the vehicle:** Technical Support will need this information to reference any vehicle-specific issues.
- **Status of the TPMS light on the vehicle:** Is the TPMS light solid or flashing when the vehicle is first keyed on?
- **Have the vehicle in question in-house:** This helps our Technical Support team to walk you through resolving the situation.



If you are unable to reach a customer support agent, please leave a voicemail. A Bartec customer support agent will contact you as soon as possible.

GLOSSARY

Audit Data: is all the sensor and OBD data stored on the tool.

Bar: units are commonly used in many Western European countries as a metric unit of pressure. 1 bar equals 100 kPa, or approximately 14.5038 psi.

Bluetooth: is a wireless technology standard for exchanging data over short distances from fixed and mobile devices.

Direct System: is a TPMS that has RF sensors in the wheels.

Hi-Line or High-Line is a TPMS type that has wheel-mounted receivers, which can force periodic transmissions from each wheel sensor to keep a continuously updated pressure status. Vehicles using hi-line TPMS usually have a graphic display in the dash.

Indirect System: are the systems that do not have air pressure sensors inside the tires. Instead, they detect a low tire by comparing relative wheel speeds via the Anti-Lock Brake System (ABS) wheel speed sensors.

Inductive Charging: or Qi (also known as "wireless charging") uses an [electromagnetic field](#) to transfer energy between two objects. This is usually done with a charging station. Energy is sent through an [inductive coupling](#) to an electrical device, which can then use that energy to charge batteries or run the device.

kPa (or kilopascal): is a metric unit of pressure measurement widely used throughout the world. 1 kPa equals approximately 0.145038 psi.

LF (Low Frequency): is the [ITU](#) designation for radio frequencies in the range of 30 kHz–300 kHz, usually 125 kHz with respect to TPMS technology.

Lo-Line or Low-Line is a TPMS type that uses a passive receiver to listen for sensor transmissions. Vehicles using low-line TPMS usually have a simpler dash display (e.g., a single on/off/flashing TPMS warning light).

Micro-USB (Universal Serial Bus): is a smaller connector that is used by various handheld electronic devices. It is often used for both [USB](#) data connectivity as well as charging.

On-board diagnostics (OBD): is an automotive term referring to a vehicle's self-diagnostic and reporting capability. Modern OBD implementations use a standardized digital communications port to provide real-time data in addition to a standardized series of [diagnostic trouble codes](#) (DTCs), which allow one to rapidly identify and remedy malfunctions within the vehicle.

OBDII: is a newer system standard introduced by the [SAE](#) in the mid-'90s. All cars built since January 1st, 1996 have OBDII systems.

PSI (pound per square inch or, more accurately, pound-force per square inch): is a unit of pressure based on avoirdupois units, commonly used in the United States.

Relearn: refers to the process of registering the sensor IDs to the vehicle's ECM.

RKE (Remote Keyless Entry): an electronic lock that controls access to a vehicle without using a traditional key.

TPMS (Tire Pressure Monitoring System): is an electronic system designed to monitor the air pressure inside the tires on various types of vehicles.

UHF (Ultra High Frequency): is the [ITU](#) designation for radio frequencies in the range between 300 MHz and 3 GHz, usually 315 and 433.92 MHz with respect to TPMS technology.

VIN (Vehicle Identification Number): is a unique code used by the automotive industry to identify individual motor vehicles.

WLAN or Wi-Fi: Is a local area network that uses high frequency radio signals to transmit and receive data over distances of a few hundred feet; uses Ethernet protocol.

VEHICLE IDENTIFICATION NUMBER OR VIN

When using the PRO Series tool, it is important to verify the Model Year you are working on to ensure that you are looking for the proper sensor and are using the proper vehicle COMs when necessary.

By using the vehicle's VIN instead of the manufacture date, you can accurately determine that vehicle's Model Year. Refer to that vehicle's VIN and locate the 10th digit from the left. Use the 10th digit to reference the chart below to determine the correct Model Year. The VIN is most commonly located at the base of the windshield on the driver's side, or on the tire placard in the driver's-side door jamb as per the diagram below.

10 Digit in VIN	YEAR
2	2002
3	2003
4	2004
5	2005
6	2006
7	2007
8	2008
9	2009
A	2010
B	2011
C	2012
D	2013
E	2014
F	2015
G	2016
H	2017
J	2018
K	2019
L	2020
M	2021

FAQ & TROUBLESHOOTING GUIDE

The tool is set up correctly for make/model/ year, but the tool does not work on the sensor.

- **Answer:** Check [tool positioning](#). Use the [10th digit of the VIN](#) to verify the vehicle's Model Year. TPM sensor could be faulty, or the vehicle could have the incorrect sensor type installed.

I have a faulty sensor and the dealership gave me a new one, but it will not program to the vehicle.

- **Answer:** The dealership may have provided the wrong sensor. Many vehicles of the same model might have 2 or 3 possible sensor variations to accommodate high- and low-pressure ranges, frequency, etc.

I just rotated the vehicle's wheels. Do I need to relearn the sensors to the vehicle?

- **Answer:** Yes. Bartec recommends that you ALWAYS perform a [relearn](#) after a tire rotation.

The tool will not turn on.

- **Answer:** Make sure battery is fully charged. [Charge your tool](#) for 4+ hours and retry powering it on.

The option for "Send Data" does not appear under Send/Store Data.

- **Answer:** Bluetooth is not [enabled](#) under My Tool > Bluetooth.

I send data to TPMS Desktop, but nothing appears in the Audit section.

- **Answer:** Verify the [Date/Time](#) is properly set on the tool (located under My Tool > Settings) and on your PC.

I just updated. What is new with my tool?

- **Answer:** Read the latest [Software Release Document](#) to review the latest updates Bartec has made to your software.

How do I know if the sensor battery is low?

- **Answer:** In some cases, you will not know since the battery might be too low to even transmit. If the sensor spec allows, when the sensor battery gets low, it will transmit a status and the Bartec tool will prompt with a Low Battery icon.

I installed a sensor, and I cannot read it.

- **Answer:** Did you use a programmable sensor? If so, you may have forgotten to program it. Programmable sensors usually must be programmed prior to reading.

COMMS ERROR TROUBLESHOOTING

- **Check vehicle ignition.**

The vehicle's ignition must be in the Key On position for the vehicle's communication (COMS) process to finish.

- **Check cable-to-tool connection.**

Ensure the cable is connected at the DB15 port on the tool, and that the thumb screws are finger-tight.

- **Check cable-to-vehicle connection.**

Ensure the OBDII cable is connected securely to the vehicle's OBDII port. Inspect the cable for bent and/or missing pins.

- **Verify Make, Model, and Year**

COMS can change from Model to Model, and Year to Year. Verify the tool is set up with the proper MMY.

- **Verify tool power level.**

If your tool has a low battery charge, this may affect the COMS process. Charge the tool and try again with a full battery.

LIMITED WARRANTY AND REPAIR

Bartec products are guaranteed for a period of 2 years from the original date of purchase (either from the factory or authorized dealer). In order for your warranty to become active, you must register your tool with Bartec USA by mailing in the warranty card or registering on our website. We warranty that the tool will be free from defects in material and workmanship, when properly used. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL CONSUMER PURCHASER OF THIS PRODUCT. In the event of a defect, Bartec USA LLC will, at its discretion, repair or replace the tool with a product of like kind or quality, which may be new or reconditioned. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. Claims of all defects must be submitted within 30 days of occurrence and verified by an authorized Bartec representative.

Limitation of Liability:

Under no circumstances shall Bartec be liable for any special, consequential, or incidental damage arising from any defect in products manufactured or sold by Bartec outside of the responsibilities expressed by this warranty. No person, distributor, or representative of Bartec is authorized to make any representations on behalf of Bartec beyond those expressly stated in the applicable literature. Bartec reserves the right to make design and other changes, modifications, or improvements without any obligation to install the same on previously sold or delivered products.

It is expressly agreed that the liability of Bartec is limited, and we do not function as an insurer. The remedies set forth in this warranty shall continue the exclusive remedies available to the purchaser or user and are in lieu of all other remedies expressed or implied. The liability of Bartec, whether in contract, or in tort, under any warranty or otherwise, shall not exceed the selling price by Bartec or the manufacture of the particular product made, sold, or supplied by Bartec.

Exclusions:

The following items are excluded from the warranty coverage:

- periodic maintenance and repair or replacement of parts due to normal wear and tear
- batteries (except internal)
- finishes
- service performed or attempted by anyone other than an authorized Bartec service technician.

Opening, dismantling, or repairing of this product by anyone other than an authorized Bartec technician will void this warranty.

This warranty does not apply to damage or loss by and for all the conditions:

- Freight Damage
- Decals, Overlays or Decorative Items
- Misuse or misapplication or failure to follow the directions, or failure to follow cautions or warnings on product, operation, service guides, etc.
- Minor stress cracks in surfaces that are considered cosmetic and have no effect on tool function or performance or safe use.
- Any damage related to fire, accident, misuse, acts of war, disaster, terrorism, or God.

It is expressly agreed that the liability of Bartec limited WARRANTY IS EXCLUSIVE. BARTEC DISCLAIMS ANY AND ALL OTHER WARRANTIES.

Bartec USA, LLC does its very best to ensure the accuracy of the information contained in work instructions but cannot be responsible for errors or omissions by third party sources.

This warranty is exclusive to the original purchaser of the tool and is not transferable.

Repair Terms:

To obtain service for your Bartec tool the purchaser must obtain a Return Materials Authorization (RMA) number from Bartec USA customer service prior to shipping. Bartec shall not be liable for any expense incurred by purchaser in order to remedy a defect without prior authorization. To obtain your RMA number, you will need to provide at a minimum the follow: 1) Model and Serial Number, 2) Supplier from which the tool was purchased 3) Date of purchase, 4) Description of problem, how and when it occurred. Please note that Bartec USA may attempt to have you try some things in the field prior to issuing an RMA number to determine if the tool does need to come back. The purchaser must return the product per the instructions on the RMA form.

Bartec USA may refuse your delivery if the RMA number is not clearly marked on the outside of the box.

Bartec USA reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number is altered or removed. Bartec USA is not reasonable for any losses or damage to the product incurred while the product is in transit or is being shipped for repair.

IMPORTANT NOTE: IN ORDER TO COMPLETELY & PROPERLY DIAGNOSE THE ISSUE THE ENTIRE KIT MUST BE RETURNED

Warranty Repair Freight:

Inbound freight costs for warranty repair tools will be the responsibility of the customer. Freight costs out bound will be paid by Bartec and returned in the same method as the inbound.

Non-Warranty Repair Freight:

Inbound freight costs for non-warranty repair tools will be the responsibility of the customer. Outbound Freight costs will be paid by Bartec and returned UPS ground.

Freight:

Warranty Repair:

Inbound freight costs for warranty repair tools will be the responsibility of the customer. Freight costs out bound will be paid by Bartec and returned in the same method as the inbound.

Non-Warranty Repair:

Inbound freight costs for non-warranty repair tools will be the responsibility of the customer. Outbound Freight costs will be paid by Bartec and returned UPS ground.

MECHANICAL TOOLS & CABLES:

Warranty:

Bartec MECHANICAL Tools and cables are warranted for 180 days from the ORIGINAL purchase date (from an AUTHORIZED DEALER). When properly used and maintained, Bartec will warranty the tool to be free from defects in material and workmanship. The Warranty applies ONLY to the ORIGINAL OWNER and is not transferable. In the unlikely event of a defect, Bartec will at its discretion repair or replace the tool with a product of like kind or quality which may be new or reconditioned. The repaired or replaced product will be warranted for 90 days from the date of the return or the balance of the original warranty, whichever is longer. Claims of ALL defects must be submitted within 30 days of occurrence and verified by an AUTHORIZED BARTEC agent or representative.

TOOL REGISTRATION FORM

Only complete and send this form if you do not have access to register your tool online.

First Name: _____ Last Name: _____

Company: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone #: (_____) _____ - _____

Fax #: (_____) _____ - _____

Date of Purchase: ____/____/____ Supplier Purchased From: _____

Tool Serial Number: _____ Model: _____

Email Address: _____

Desired Username: _____

Desired Password: _____

Detach and mail to:

Bartec USA
44231 Phoenix Drive
Sterling Heights, MI 48314

Or fax to:

(586) 323-3801



Bartec USA, LLC
44231 Phoenix Drive
Sterling Heights, MI 48314
(866) 407-8767