



High Bandwidth Memory (HBM2) Interface Intel® FPGA IP User Guide

Updated for Intel® Quartus® Prime Design Suite: **21.2**

IP Version: **19.6.1**



Subscribe

Send Feedback

UG-20031 | 2021.06.21

Latest document on the web: [PDF](#) | [HTML](#)

Contents

1. About the High Bandwidth Memory (HBM2) Interface Intel® FPGA IP.....	4
1.1. Release Information.....	4
2. Introduction to High Bandwidth Memory.....	5
2.1. HBM2 in Intel Stratix 10 Devices.....	5
2.2. HBM2 DRAM Structure.....	6
2.3. Intel Stratix 10 HBM2 Features.....	6
2.4. Intel Stratix 10 HBM2 Controller Features.....	7
3. Intel Stratix 10 HBM2 Architecture.....	9
3.1. Intel Stratix 10 HBM2 Introduction.....	9
3.2. Intel Stratix 10 UIB Architecture.....	9
3.3. Intel Stratix 10 HBM2 Controller Architecture.....	13
3.3.1. Intel Stratix 10 HBM2 Controller Details.....	13
4. Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	17
4.1. Creating an Intel Quartus Prime Pro Edition Project for High Bandwidth Memory (HBM2) Interface FPGA IP.....	17
4.2. Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	19
4.2.1. General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	19
4.2.2. FPGA I/O Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	24
4.2.3. Controller Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	25
4.2.4. Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	28
4.2.5. Example Designs Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	31
4.2.6. Register Map IP-XACT Support for HBM2 IP.....	32
4.3. Pin Planning for the High Bandwidth Memory (HBM2) Interface Intel FPGA IP	32
5. Simulating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP.....	34
5.1. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Example Design.....	34
5.2. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with ModelSim* and Questa*.....	35
5.3. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Synopsys VCS*.....	36
5.4. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Riviera- PRO*.....	36
5.5. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Cadence Xcelium* Parallel Simulator.....	36
5.6. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP for High Efficiency.....	37
5.7. Simulating High Bandwidth Memory (HBM2) Interface IP Instantiated in Your Project....	38
6. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface.....	39
6.1. High Bandwidth Memory (HBM2) Interface Intel FPGA IP High Level Block Diagram.....	39
6.2. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Interface Signals....	39

6.2.1. Clock Signals.....	40
6.2.2. Reset Signals.....	42
6.2.3. Calibration Status Signals.....	44
6.2.4. Memory Interface Signals.....	44
6.2.5. User-interface Signals.....	45
6.2.6. AXI User-interface Signals.....	45
6.2.7. Sideband APB Interface.....	54
6.2.8. Avalon Memory-Mapped (AVMM) Interface Signals.....	55
6.3. User AXI Interface Timing.....	56
6.3.1. AXI Write Transaction.....	57
6.3.2. AXI Read Transaction.....	58
6.3.3. Improving User Logic to HBM2 Controller AXI Interface Timing.....	59
6.4. User APB Interface Timing.....	62
6.4.1. Advanced Peripheral Bus Protocol.....	63
6.4.2. APB Interface Timing.....	63
6.5. User-controlled Accesses to the HBM2 Controller.....	65
6.5.1. User-controlled Refreshes.....	66
6.5.2. Temperature and Calibration Status Readout.....	70
6.5.3. Controller Idle State Status	70
6.5.4. Power Down Status.....	71
6.5.5. ECC Error Status.....	71
6.5.6. User Interrupt.....	73
6.5.7. ECC Error Correction and Detection.....	76
6.6. Soft AXI Switch.....	77
6.6.1. AXI Switch Selection in HBM2 IP Catalog GUI.....	78
7. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance.....	84
7.1. High Bandwidth Memory (HBM2) DRAM Bandwidth.....	84
7.2. High Bandwidth Memory (HBM2) Interface Intel FPGA IP HBM2 IP Efficiency.....	84
7.3. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Latency.....	86
7.4. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Timing.....	87
7.5. High Bandwidth Memory (HBM2) Interface Intel FPGA IP DRAM Temperature Readout...	87
8. High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide Archives.....	88
9. Document Revision History for High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide.....	89

1. About the High Bandwidth Memory (HBM2) Interface Intel® FPGA IP

1.1. Release Information

IP versions are the same as the Intel® Quartus® Prime Design Suite software versions up to v19.1. From Intel Quartus Prime Design Suite software version 19.2 or later, IP cores have a new IP versioning scheme.

The IP versioning scheme (X.Y.Z) number changes from one software version to another. A change in:

- X indicates a major revision of the IP. If you update your Intel Quartus Prime software, you must regenerate the IP.
- Y indicates the IP includes new features. Regenerate your IP to include these new features.
- Z indicates the IP includes minor changes. Regenerate your IP to include these changes.

Table 1. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Core Current Release Information

Item	Description
IP Version	19.6.1
Intel Quartus Prime Version	21.2
Release Date	2021.06.21

2. Introduction to High Bandwidth Memory

High Bandwidth Memory (HBM) is a JEDEC specification (JESD-235) for a wide, high bandwidth memory device. The next generation of High Bandwidth Memory, HBM2, is defined in JEDEC specification JESD-235A. The HBM2 implementation in Intel Stratix® 10 devices complies with JESD-235A.

The High Bandwidth Memory DRAM is tightly coupled to the host die with a distributed interface. The interface is divided into independent channels, each completely independent of one another. Each channel interface maintains a 128-bit data bus, operating at DDR data rates.

2.1. HBM2 in Intel Stratix 10 Devices


Intel Stratix 10 devices incorporate a high-performance FPGA fabric along with a HBM2 DRAM in a single package. Intel Stratix 10 devices support up to a maximum of two HBM2 interfaces.

Intel Stratix 10 devices incorporate Intel's Embedded Multi-Die Interconnect Bridge (EMIB) technology to implement a silicon bridge between HBM2 DRAM memory and the Universal Interface Block Subsystem (UIBSS), which contains the HBM2 controller (HBMC), physical-layer interface (PHY), and I/O ports to interface to the HBM2 stack.

As illustrated below, each Intel Stratix 10 device contains a single universal interface bus per HBM2 interface, supporting 8 independent channels.

The user interface to the HBM2 controller is maintained through the AXI4 protocol. Sixteen AXI interfaces are available in the user interface from each HBM2 controller, with one AXI interface available per HBM2 Pseudo Channel. HBM2 DRAM density of 4GB and 8GB are supported.

Figure 1. Intel Stratix 10 Device with UIB, EMIB, and HBM2 DRAM

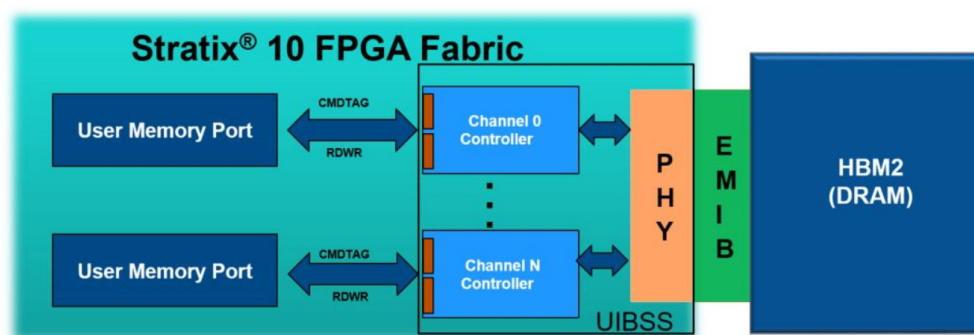


2.2. HBM2 DRAM Structure

The HBM DRAM is optimized for high-bandwidth operation to a stack of multiple DRAM devices across several independent interfaces called *channels*. Each DRAM stack supports up to eight channels.

The following figure shows an example stack containing four DRAM dies, each die supporting two channels. Each die contributes additional capacity and additional channels to the stack, up to a maximum of eight channels per stack. Each channel provides access to an independent set of DRAM banks. Requests from one channel may not access data attached to a different channel.

Figure 2. High Bandwidth Memory Stack of Four DRAM Dies

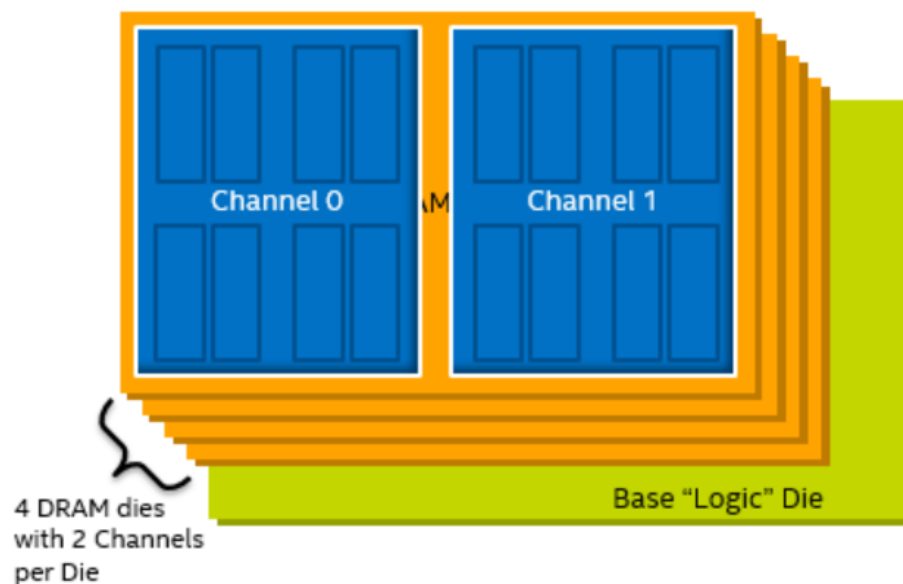

2.3. Intel Stratix 10 HBM2 Features

Intel Stratix 10 FPGAs offer the following HBM2 features.

- Supports one to eight HBM2 channels per HBM2 interface in the Pseudo Channel mode.
- Each HBM2 channel supports a 128-bit DDR data bus, with optional ECC support.
- Pseudo Channel mode divides each channel into two individual 64-bit I/O pseudo-channels. The two pseudo-channels operate semi-independently; they share the channel's row and column command bus as well as CK and CKE inputs, but they decode and execute commands individually. Address BA4 directs commands to either pseudo-channel 0 (BA4 = 0) or pseudo-channel 1 (BA4 = 1), offering unique address space to each pseudo-channel. Pseudo Channel mode requires that the burst length for DRAM transactions is set to 4.
- Data referenced to strobes RDQS_t / RDQS_c and WDQS_t / WDQS_c, one strobe pair per 32 DQs.

- Differential clock inputs (CK_t / CK_c). Unterminated data/address/cmd/clk interfaces.
- DDR commands entered on each positive CK_t and CK_c edge. Row Activate commands require two memory cycles; all other command are single-cycle commands.
- Supports command, write data and read data parity.
- Support for bank grouping.
- Support for data bus inversion.
- 64-bit data per pseudo-channel. Eight additional data bits are available per pseudo-channel; you can use these data bits for any of the following:
 - ECC. The ECC scheme implemented is single-bit error correction with double-bit error detection (SECDEC). This includes 8 bits of ECC code (also known as syndrome).
 - Data mask (DM). The data mask for masking write data per byte.
 - Can be left unused.
- I/O voltage of 1.2V and DRAM core voltage of 1.2V.

2.4. Intel Stratix 10 HBM2 Controller Features

Intel Stratix 10 FPGAs offer the following controller features.

- User applications communicate with the HBMC using the AXI4 Protocol.
- There is one AXI4 interface per HBM2 Pseudo Channel. Each HBM2 interface supports a maximum of sixteen AXI4 interfaces to the sixteen Pseudo Channels. An optional Avalon[®] interface is supported to each Pseudo Channel from the Intel Quartus Prime software.
- The user interface can operate at a frequency lower than the HBM2 interface frequency. The maximum supported HBM2 interface frequency depends on the FPGA device speed grade. The minimum frequency of the core clock is one quarter of the HBM2 interface frequency.
- Each AXI interface supports a 256-bit Write Data interface and a 256-bit Read Data interface.
- The controller offers 32B and 64B access granularity supporting burst length 4 (BL 4) and pseudo-BL 8 (two back to back BL4).
- The controller offers out-of-order command scheduling and read data reordering.
- The controller supports user-initiated Refresh commands, and access to the HBM2 channel status registers, through the side band Advanced Peripheral Bus (APB) interface.
- The controller supports data mask or error correction code (ECC). When you do not use data mask or ECC, you may use those bits as additional data bits.

Related Information

[Clock Signals](#) on page 40



3. Intel Stratix 10 HBM2 Architecture

This chapter provides an overview of the Intel Stratix 10 HBM2 architecture.

3.1. Intel Stratix 10 HBM2 Introduction

Intel Stratix 10 devices use the Intel EMIB technology to interface to the HBM2 memory devices.

- The Intel Stratix 10 FPGAs offer up to two HBM2 interfaces.
- Each HBM2 device can have a device density of 4GB or 8GB, based on the FPGA chosen.

This system-in-package solution helps to achieve maximum bandwidth and low power consumption in a small footprint.

3.2. Intel Stratix 10 UIB Architecture


The Intel Stratix 10 device architecture includes the universal interface bus (UIB) subsystem (UIBSS) which contains the necessary logic to interface the FPGA core to the HBM2 DRAM.

Each UIB subsystem includes the HBM2 hardened controller and the universal interface bus, consisting of the hardened physical interface and I/O logic needed to interface to each HBM2 DRAM device. The AMBA AXI4 protocol interfaces the core logic with the universal interface bus subsystem. An optional soft logic adapter implemented in the FPGA fabric helps to efficiently interface user logic to the hardened HBM2 controller. Commencing with the Intel Quartus Prime software version 20.2, an optional Avalon memory-mapped interface is supported to each Pseudo Channel.

The following figure shows a high-level block diagram of the Intel Stratix 10 HBM2 universal interface bus subsystem. The UIB subsystem includes the following hardened logic:

- Rate-matching FIFOs that transfer logic from the user core clock to the HBM2 clock domain.
- HBM2 memory controller (HBMC).
- UIB PHY, including the UIB physical layer and I/O.

Figure 3. Block Diagram of Intel Stratix 10 HBM2 Implementation

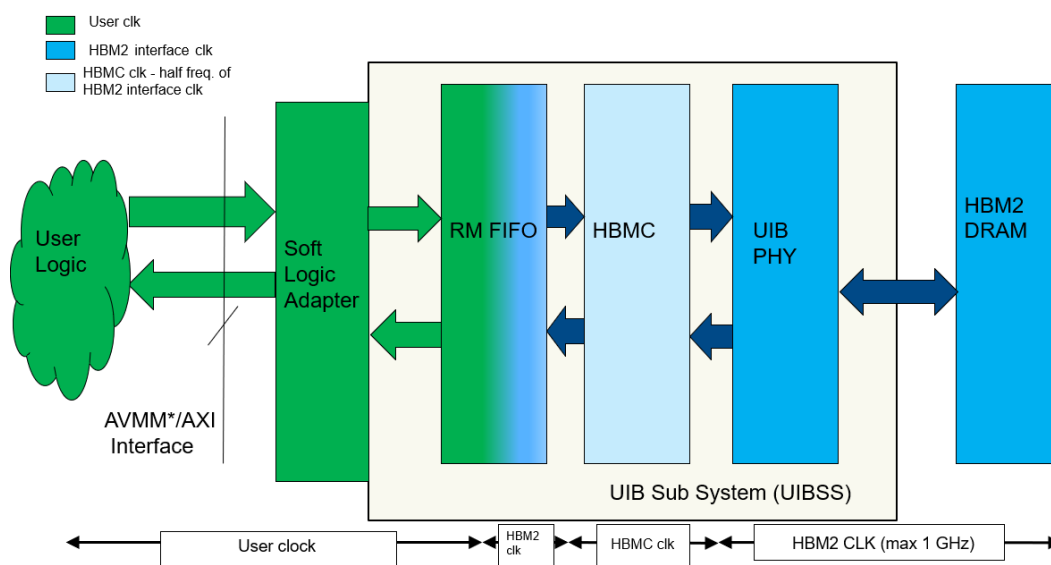

(* Avalon memory-mapped interface is supported beginning with the Intel Quartus Prime software version 20.2.)

The user core clock drives the logic highlighted in green, while the UIB clocks the logic highlighted in blue. The UIB clock also drives the HBM2 interface clock. User logic can run up to one-to-four times slower than the HBM2 interface.

Soft Logic AXI Adaptor

The HBM2 IP also includes a soft logic adaptor implemented in FPGA core logic. The soft logic adaptor gates the user valid signals (write address valid, write data valid, and read address valid) with the corresponding pipelined ready signals from the HBM2 controller. The soft logic adaptor also temporarily stores output from the HBM2 controller (AXI write response and AXI read data channels) when the AXI ready signal is absent. You can disable the temporary storage logic if user logic is always ready to accept output from the HBM2 controller through the parameter editor when generating the HBM2 IP.

HBM2 DRAM

The following table lists the HBM2 signals that interface to the UIB. The UIB drives the HBM2 signals and decodes the received data from the HBM2. These signals cannot be accessed through the AXI4 User Interface.

Table 2. Summary of Per-channel Signals

Signal Name	Signal Width	Notes
Data	128	128 bit bidirectional DQ per channel
Column command/address	8	8-bit wide column address bits
Row command/address	6	6-bit wide row address bits
DBI	16	1 DBI per 8 DQs
continued...		

Signal Name	Signal Width	Notes
DM_CB	16	1 DM per 8 DQs. You can use these pins for DM or ECC, but not both.
PAR	4	1 parity bit per 32 DQs
DERR	4	1 data error bit per 32 DQs
Strobes	16	Separate strobes for read and write strobes. One differential pair per 32 DQs for read and write.
Clock	2	Clocks address and command signals
CKE	1	Clock enable
AERR	1	Address error

The following table lists the HBM2 signals that are common to all Pseudo Channels in each HBM2 interface. The HBM2 controller interfaces with the following signals; these signals are not available at the AXI4 user interface.

Table 3. Summary of Global HBM2 Signals

Signal Name	Signal Width	Notes
Reset	1	Reset input
TEMP	3	Temperature output from HBM2.
Cattrip	1	Catastrophic temperature sensor.


The Intel Stratix 10 HBM2 IP supports only the Pseudo Channel mode of the HBM2 specification. Pseudo Channel mode includes the following features:

- Pseudo Channel mode divides a single HBM2 channel into two individual subchannels of 64 bit I/O.
- Both Pseudo Channels share the channel's row and column command bus, CK, and CKE inputs, but decode and execute commands individually.
- Pseudo Channel mode requires a burst length of 4.
- Address BA4 directs commands to either Pseudo Channel 0 (BA4 = 0) or Pseudo Channel 1 (BA4 = 1). The HBM2 controller handles the addressing requirements of the Pseudo Channels.
- Power-down and self-refresh are common to both Pseudo Channels, due to a shared CKE pin. Both Pseudo Channels also share the channel's mode registers.

User AXI Interface

Each Intel Stratix 10 HBM2 interface supports a maximum of eight HBM2 channels. Each HBM2 channel has two AXI4 interfaces, one per Pseudo Channel. Each AXI4 interface includes a 256-bit wide Write and Read Data interface per Pseudo Channel. The following figure shows the flow of data from user logic to the HBM2 DRAM through the UIBSS, while selecting HBM2 channels 0 and 7.

Figure 4. Intel Stratix 10 HBM2 Interface Using HBM2 Channels 0 and 7 through the UIBSS

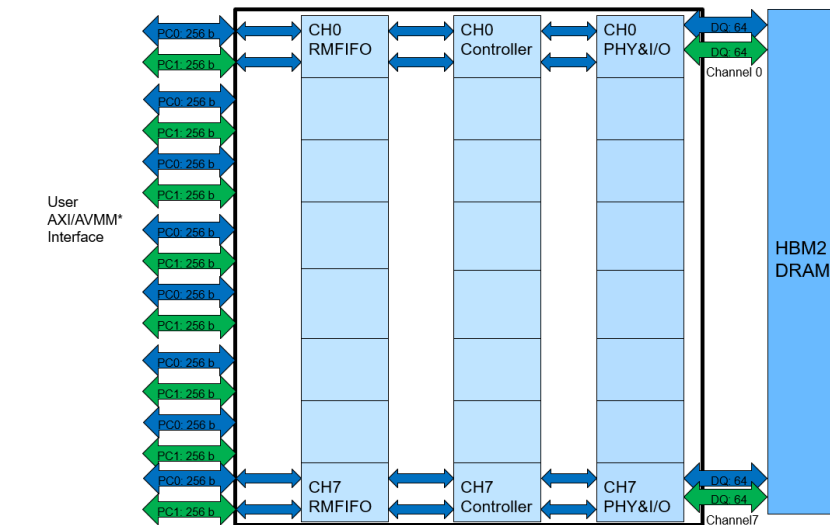

(* Avalon memory-mapped interface is supported beginning with the Intel Quartus Prime software version 20.2.)

AXI User Interface

There is one AXI interface per Pseudo Channel. Each AXI interface supports a 256-bit wide Write Data interface and a 256-bit wide Read Data interface, to and from the HBM2 controller. The AXI4 protocol can handle concurrent writes and reads to the HBM2 controller. There is also a sideband user port per user channel pair, compliant to the Advanced Peripheral Bus (APB). The sideband provides access to user-controlled features such as refresh requests, ECC status, Power Down status, HBM2 temperature readout, Avalon memory-mapped user interface, calibration status, and User Interrupt.

Avalon Memory-Mapped Interface

Starting with the Intel Quartus Prime software version 20.2, a 256-bit Avalon memory-mapped interface is supported per Pseudo Channel.

Soft AXI Switch

Beginning with the Intel Quartus Prime software version 20.1, the HBM2 IP supports a soft 4x4 AXI switch that provides each AXI master the ability to access the memory space of its corresponding two HBM2 Channels or four HBM2 Pseudo Channels (one HBM2 Channel = two HBM2 Pseudo Channels) in the HBM2 DRAM. The switch feature is not supported in the Avalon memory-mapped interface flow. For more details on the AXI switch, refer to [Soft AXI Switch](#).

For information on the AXI protocol features supported by the Intel Stratix 10 HBM2 controller, refer to *High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface*.

Related Information


- [Intel Stratix 10 HBM2 Controller Details](#) on page 13
- [High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP Interface](#) on page 39

3.3. Intel Stratix 10 HBM2 Controller Architecture

The hardened HBM2 controller provides a controller per Pseudo Channel.

Each controller consists of a write and read data path and the control logic that helps to translate user commands to the HBM2 memory. The HBM2 controller logic accounts for the HBM2 memory specification timing and schedules commands in an efficient manner. The following figure shows a block diagram of the HBM2 controller, corresponding to channel 0. The HBM2 controller's user-logic interface follows the AXI interface as well as the Avalon memory-mapped interface (commencing in the Intel Quartus Prime software version 20.2. You can find more information about the interface timing details in the *User AXI Interface Timing* section.

Figure 5. Intel Stratix 10 HBM2 Controller Block Diagram

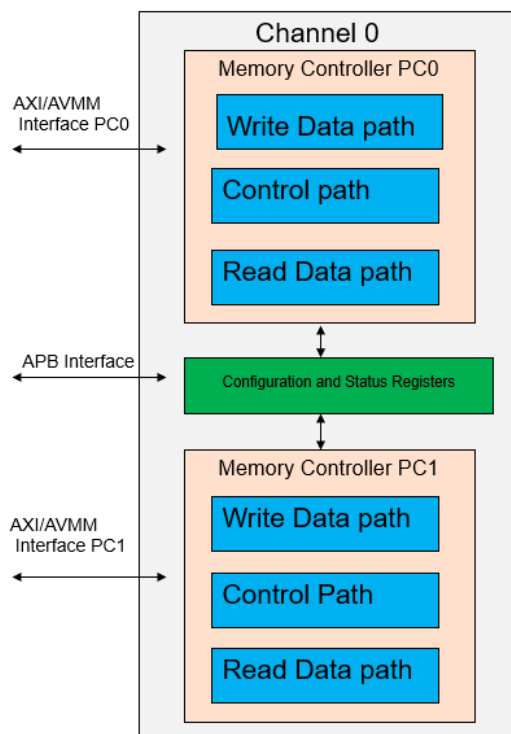

3.3.1. Intel Stratix 10 HBM2 Controller Details

This topic explains some of the high level HBM2 controller features.

HBM2 burst transactions

The HBM2 controller supports only the Pseudo Channel mode of accessing the HBM2 device; consequently, it can only support BL4 transactions to the DRAM. For improving efficiency, it supports the pseudo-BL8 mode, which helps to provide two back-to-back BL4 data using a given start address, similar to a BL8 transaction.

Each BL4 transaction corresponds to 4*64 bits or 32 bytes and a BL8 transaction corresponds to 64 bytes per Pseudo Channel. You can select the burst transaction mode (32 B vs 64B) through the parameter editor.

User interface vs HBM2 Interface Frequency

The user interface runs at a frequency lower than the HBM2 interface; the maximum interface frequency depends on the chosen device speed grade and the FPGA core logic frequency. The rate-matching FIFOs within the UIB subsystem handle the data transfer between the two clock domains.

Command Priority

You can set command priority for a write or read command request through the AXI interface, through the qos signal in the AXI write address channel, or in the AXI read address channel. The HBM2 controller supports normal and high priority levels. The system executes commands with the same priority level in a round-robin scheme.

Starvation limit

The controller tracks how long each command waits and leaves no command unserved in the command queue for a long period of time. The controller ensures that it serves every command efficiently.

Command scheduling

The HBM2 controller schedules the incoming commands to achieve maximum efficiency at the HBM2 interface. The HBM2 controller also follows the AXI ordering model of the AXI4 protocol specification.

Data re-ordering

The controller can reorder read data to match the order of the read requests.

Address ordering

The HBM2 controller supports different address ordering schemes that you can select for best efficiency given your use case. The chosen addressing scheme determines the order of address configurations in the AXI write and read address buses, including row address, column address, bank address, and stack ID (applicable only to the 8H devices). The HBM2 controller remaps the logical address of the command to physical memory address.

Thermal Control

The HBM2 controller uses the TEMP and CATTRIP outputs from the HBM2 device to manage temperature variations in the HBM2 interface.

- Temperature compensated refresh (TEMP): The HBM2 DRAM provides temperature compensated refresh information to the controller through the TEMP[2:0] pins, which defines the proper refresh rate that the DRAM expects to maintain data integrity. Absolute temperature values for each encoding are vendor-specific. The encoding on the TEMP[2:0] pins reflects the required refresh rate for the hottest device in the stack. The TEMP data updates when the temperature exceeds vendor-specified threshold levels appropriate for each refresh rate.
- Catastrophic temperature sensor (CATTRIP): The CATTRIP sensor detects whether the junction temperature of any die in the stack exceeds the catastrophic trip threshold value CATTEMP. The device vendor programs the CATTEMP to a value less than the temperature at which permanent damage to the HBM stack would occur. The CATTEMP value is also the Absolute Max Junction temperature value as specified in the Intel Stratix 10 data sheet for the family of devices that include the HBM2 DRAM. You can find the Intel Stratix 10 data sheet at the following location: https://www.intel.com/content/dam/www/programmable/us/en/pdfs/literature/hb/stratix-10/s10_datasheet.pdf.

If a junction temperature anywhere in the stack exceeds the CATTEMP value, the HBM stack drives the external CATTRIP pin to 1, indicating that catastrophic damage may occur. When the CATTRIP pin is at 1, the controller stops all traffic to HBM and stalls indefinitely. To resolve the overheating situation and return the CATTRIP value to 0, remove power from the device and allow sufficient time for the device to cool before again applying power.

- Thermal throttling: Thermal throttling is a controller safety feature that helps control thermal runaway if the HBM2 die overheats, preventing a catastrophic failure. You can specify the HBM2 device junction temperature at which the controller begins to throttle input commands, and the throttle ratio that determines the throttle frequency. The controller deasserts the AXI ready signals (awready, wready and arready) when it is actively throttling the input commands and data.

Refresh requests

The HBM2 controller handles HBM2 memory refresh requirements and issues refresh requests at the optimal time, as specified by the JEDEC specification of the HBM2 DRAM. The controller automatically controls refresh rates based on the temperature setting of the memory through the TEMP vector that the memory provides. You can select the HBM2 controller refresh policy, based on the frequency of refresh requests. You can choose to issue refresh commands directly, through the sideband APB interface.

Precharge policy

The HBM2 controller issues precharge commands to the HBM2 memory based on the write/read transaction address. In addition, you can issue an auto-precharge command together with a write and read command, through the AXI write address port and AXI read address port.

There are two auto-precharge modes:

- HINT – You can issue the auto-precharge request. The controller then decides when to issue the precharge command.
- FORCED – You provide auto-precharge requests through the AXI interface and the precharge request executes.

Power down enable

To conserve power, the HBM2 controller can enter power-down mode when the bus is idle for a long time. You can select this option if required.

ECC

The HBM2 controller supports ECC. The ECC scheme implemented is single-bit error correction with double-bit error detection, with 64-bits of data and 8-bits of ECC code (also known as the syndrome).

HBM2 Controller features enabled by default

The HBM2 controller enables the following features by default:

- DBI – The DBI option supports both write and read DBI, and optimizes SI/power consumption by restricting signal switching on the HBM2 DQ bus.
- Parity – Supports command/address parity and DQ parity.

Related Information

- [Clock Signals](#) on page 40
- [Intel Stratix 10 UIB Architecture](#) on page 9



4. Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP


This chapter contains information on project creation, IP parameter descriptions, and pin planning for your High Bandwidth Memory (HBM2) Interface Intel FPGA IP.

4.1. Creating an Intel Quartus Prime Pro Edition Project for High Bandwidth Memory (HBM2) Interface FPGA IP

You can parameterize and generate the High Bandwidth Memory (HBM2) Interface Intel FPGA IP using the Intel Quartus Prime Pro Edition software.

1. Before generating the HBM2 IP, you must create a new project:
 - a. Launch the Intel Quartus Prime Pro Edition software.
 - b. Launch the New Project Wizard by clicking **File > New Project Wizard**.
 - c. Type a name for your project in the **Directory, Name, Top-Level Entity** field.
 - d. In the **Project Type** section, select **Empty Project**.
 - e. In the **Add Files** section, click **Next**.
 - f. In the **Family, Device, and Board Settings** section, select **Stratix 10** as the device family.
 - g. Under **Available Devices**, select any device and your desired speed grade.
 - h. Click **Next** and follow the Wizard's prompts to finish creating the project.
2. In the **IP Catalog**, open **Library > Memory Interfaces and Controllers**.
3. Launch the parameter editor by selecting **High Bandwidth Memory (HBM2) Interface Intel FPGA IP**.

Figure 6. Selecting High Bandwidth Memory (HBM2) Interface Intel FPGA IP in the IP Catalog

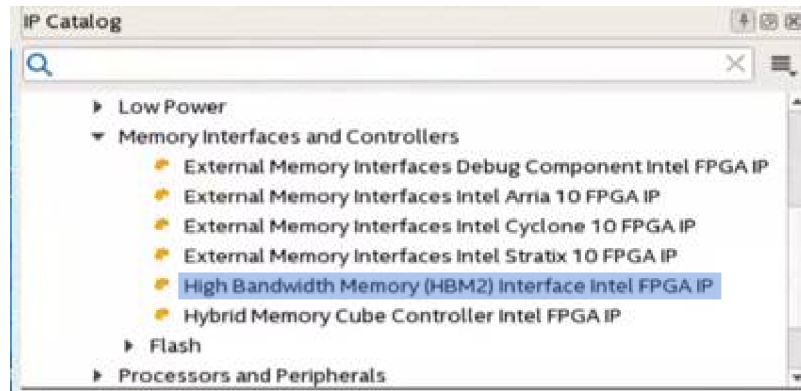

4.2. Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP

You can parameterize your HBM2 IP with the HBM2 IP parameter editor.

The parameter editor comprises the following tabs, on which you set the parameters for your IP:

- General
- FPGA I/O
- Controller
- Diagnostics
- Example Designs

4.2.1. General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP

The **General** tab allows you to select the channels that you want to implement, and to select the memory and fabric core clock frequency.

Figure 7. General Tab

High Bandwidth Memory (HBM2) Interface Intel FPGA IP
altera_hbm

HBM device type:

HBM Interface

Select the HBM channels to enable. Each channel consists of two pseudo-channels.

Channel 0 and 1 Interface Settings

☒ Enable channel 0 interface Interface protocol: AXI
☐ Enable channel 1 interface ☐ Enable AXI Switch for channel 0 and 1

Master	Transaction Count	Honor
Ch 0 Pc 0	0	☐
Ch 0 Pc 1	0	☐
Ch 1 Pc 0	0	☐
Ch 1 Pc 1	0	☐

Channel 2 and 3 Interface Settings

☐ Enable channel 2 interface Interface protocol: AXI
☐ Enable channel 3 interface ☐ Enable AXI Switch for channel 2 and 3

Master	Transaction Count	Honor
Ch 2 Pc 0	0	☐
Ch 2 Pc 1	0	☐
Ch 3 Pc 0	0	☐
Ch 3 Pc 1	0	☐

Channel 4 and 5 Interface Settings

☐ Enable channel 4 interface Interface protocol: AXI
☐ Enable channel 5 interface ☐ Enable AXI Switch for channel 4 and 5

Master	Transaction Count	Honor
Ch 4 Pc 0	0	☐
Ch 4 Pc 1	0	☐
Ch 5 Pc 0	0	☐
Ch 5 Pc 1	0	☐

Channel 6 and 7 Interface Settings

☐ Enable channel 6 interface Interface protocol: AXI
☐ Enable channel 7 interface ☐ Enable AXI Switch for channel 6 and 7

Master	Transaction Count	Honor
Ch 6 Pc 0	0	☐
Ch 6 Pc 1	0	☐
Ch 7 Pc 0	0	☐
Ch 7 Pc 1	0	☐

☐ Assign AXI switch module(s) to LogicLock regions in the example design

Communication Interface

☒ Allow backpressure of AXI read data and write response channels
Set backpressure latency for AXI write address, read address and write data channels.
Backpressure latency (clock cycles):
☒ Automatically instantiate backpressure registers within HBM2 IP
Threshold temperature for interface throttling:
Interface throttling ratio:

Clocks

Memory clock frequency: MHz
☒ Use recommended PLL reference clock frequency
PLL reference clock frequency: MHz
Core clock frequency: MHz
☒ Use recommended example design core clock PLL reference clock frequency
Reference clock frequency for example design core clock PLL: MHz

Resets

☐ Enable reset debounce

Table 4. Group: General / FPGA

Display Name	Description
Speed Grade	Speed grade of FPGA device and whether it is an engineering sample (ES) or a production device. The value is automatically determined based on the device selected under View > Device Family . If you do not specify a device, the system assumes a production device of the fastest speed grade. You should always specify the correct target device during IP generation; failure to specify the correct device may result in generated IP that does not work on hardware.

continued...

Display Name	Description
	Specifies the speed grade of the Intel Stratix 10 FPGA.
HBM2 Location	Determines the location of the HBM2 interface in the Intel Stratix 10 FPGA. The FPGA offers HBM2 interfaces on the top and bottom of the FPGA core.
HBM2 Device Type	The HBM device type. 4GB/4H refers to HBM2 device with a total device density of 4GB in a 4-high Stack, and 8GB8H refers to a total HBM2 device density of 8GB in an 8-high Stack.

Table 5. Group: General / HBM2 Interface

Display Name	Description
Channel 0 and 1 Interface Settings (Applies to HBM2 Channels 2 and 3, 4 and 5, 6 and 7)	
Enable Channel 0 interface	Adds a High Bandwidth Memory controller on channel 0 of the Universal Interface Block. Each controller handles two HBM Pseudo Channels. You can select the HBM2 memory channels that you want to implement. Each HBM2 channel supports a 128-bit interface to the HBM2 device, using two 64-bit Pseudo Channels. The user interface to the HBM2 controller uses the AXI4 protocol. Each controller has one AXI4 interface per Pseudo Channel or two AXI4 interfaces per channel.
Enable Channel 1 interface	Adds a High Bandwidth Memory controller on channel 1 of the Universal Interface Block. Each controller handles two HBM Pseudo Channels. You can select the HBM2 memory channels that you want to implement. Each HBM2 channel supports a 128-bit interface to the HBM2 device, using two 64-bit Pseudo Channels. The user interface to the HBM2 controller uses the AXI4 protocol. Each controller has one AXI4 interface per Pseudo Channel or two AXI4 interfaces per channel.
Interface Protocol	The Interface protocol can be selected per channel pair (0 and 1, 2 and 3, 4 and 5, 6 and 7). The following protocols are supported: - AXI – provides an AXI user interface per Pseudo Channel. - AVMM – provides an Avalon memory-mapped user interface per Pseudo Channel.
Enable AXI Switch for channel 0 and 1	Adds soft AXI switch logic that enables each AXI master to access the entire memory space of Channels 0 and 1 in HBM2 DRAM. The soft AXI switch is available only when you select the AXI Interface Protocol. Refer to Soft AXI Switch for information on using the AXI switch. <i>Note:</i> You must enable two HBM2 channels to access the corresponding 4x4 AXI switch.
Master	Enables selection of arbitration schemes to provide efficient memory access for each AXI master.
Transaction Count	Provide the total transaction count that the master intends to issue when provided access. Each transaction count refers to a single BL4 or pseudo-BL8 transaction. The total transaction count includes transaction counts to all the Pseudo Channels that the master intends to issue when provided access. The default value is 0. The HBM2 IP can support a maximum of 65535 transactions. Be aware that
continued...	

Display Name	Description
	high transaction counts can reduce fabric performance. Refer to AXI Switch Selection in HBM2 IP Catalog for information on transaction count.
Honor	Select the master that requires higher priority over other masters. You can choose only one master; if you do not choose a master, all masters receive the same priority and round robin arbitration is followed.

Table 6. Group: General / AXI Interface

Display Name	Description
Allow backpressure of AXI read data and write response channels	Instantiates FIFOs in soft logic to buffer read data and write response on the AXI interfaces. This is required if the RREADY/BREADY signals are ever deasserted. You can disable this option to reduce latency but only if RREADY/BREADY are never used to backpressure the interface. The backpressure feature is available only in the AXI under-interface flow; it is not available in the Avalon memory-mapped interface flow.
Backpressure latency (clock cycles)	Select a value from 0 to 2 (0 is the default). Allows the user interface time to react to the controller READY signals (AXI Write Address / Read Address / Write Data) and can also be used to improve timing between the AXI User Interface and the HBM2 IP with no increase in latency.
Automatically instantiate backpressure registers within the HBM2 IP	This option is available beginning in the Intel Quartus Prime software version 20.3. This option allows you to let the HBM2 IP place the back pressure registers within the IP or place the registers manually as needed. The design example places the backpressure registers inside the HBM2 IP. Refer to Improving User Logic to HBM2 Controller AXI Interface Timing for information on using this feature. <i>Note:</i> From Intel Quartus Prime software version 19.4 through 20.2, the backpressure registers were internally generated within the HBM2 IP; in releases earlier than 19.4, you were required to implement these registers as needed, manually.
Threshold temperature for AXI throttling	This parameter defines the temperature of the HBM2 stack, in degrees Celsius, above which the HBM2 controller throttles AXI interface transactions. The temperature setting applies to all the AXI4 interfaces; however, you must enable this feature on the corresponding controller tab of each HBM2 controller. When you enable throttling, the HBM2 controller reduces the amount of traffic on the DRAM channel.
AXI throttling ratio	If AXI interface throttling is enabled based on temperature this parameter defines the throttle ratio as a percentage (0 = no throttling, 100 = full throttling). You can enable or disable throttling on the individual controller tabs.

Table 7. Group: General / Reset

Display Name	Description
Enable reset debounce	If enabled, reset debouncing logic is added on the wmcst_n_in signal
Debounce period	Set the debounce period in ms. The minimum period is 20 ms.

Table 8. Group: General / Clocks

Display Name	Description
Memory clock frequency	The frequency of the memory clock in MHz. Specifies the clock frequency for the HBM2 interface. The maximum supported HBM2 clock frequency depends on the FPGA device speed grade: -1 Speed grade : 1 GHz -2 Speed grade : 800 MHz -3 Speed grade : 600 MHz
Use recommended PLL reference clock frequency	When checked the PLL reference clock frequency is automatically calculated for best performance. Uncheck the check box if you want to specify your own PLL reference clock frequency. Automatically calculates the PLL reference clock frequency for best performance. You should disable this parameter if you want to select a different PLL reference clock frequency
PLL reference clock frequency	PLL reference clock frequency. This is a universal interface bus (UIB) PLL reference clock. You must feed a clock of this frequency to the PLL reference clock input of the memory interface. Enable this parameter only if you disable Use recommended PLL reference clock frequency, and want to specify a PLL reference clock frequency. You should use the fastest possible PLL reference clock frequency to achieve best jitter performance.
Core clock frequency	The frequency of the user AXI4 interface in MHz. This clock must be provided from an I/O PLL (not instantiated by the HBM2 IP). The reference clock driving the core I/O PLL must be provided from the same oscillator that supplies the UIB PLL reference clock on the board for a given HBM2 interface, to achieve maximum performance. The maximum supported core frequency depends on the device speed grade and timing closure of the core interface clock within the FPGA. The minimum frequency of the core clock is one-fourth the HBM2 interface frequency. Intel does not guarantee timing closure of the HBM2 IP core logic above the recommended core clock frequencies shown in Table 9 on page 24, when the maximum supported HBM2 interface frequency is selected. You may still run your design above the recommended values and within the maximum allowable range, but core timing closure may be difficult—Intel will not provide support for such timing closure failure. Techniques such as using logic lock regions and/or design partitions may help with timing closure.
Use recommended example design core clock PLL reference clock frequency	Automatically calculates the PLL reference clock frequency for best performance. Uncheck the check box if you want to specify your own PLL reference clock frequency. Automatically calculates the example design core clock PLL reference clock frequency for best performance. Disable this parameter if you want to select a different reference clock frequency.
Reference clock frequency for example design core clock PLL	The PLL reference clock frequency in MHz for the PLL supplying the core clock. This parameter is used only in the example design PLL. Specify the externally provided reference clock frequency for the core clock PLL.

Table 9. Recommended Core Clock Frequencies when the Maximum Supported HBM2 Interface Frequency is Selected


Speed Grade	Maximum HBM2 Interface Frequency	Minimum Allowable Core Clock (Hardware Limit)	Maximum Allowable Core Clock (Hardware Limit)	Recommended Maximum Core Clock Frequency
-3	600 MHz	150 MHz	300 MHz	300 MHz
-2	800 MHz	200 MHz	400 MHz	370 MHz
-1	1 GHz	250 MHz	500 MHz	405 MHz

Related Information

- [Clock Signals](#) on page 40
- [Intel Quartus Prime Pro Edition User Guide: Block-Based Design](#)
- [Intel Quartus Prime Pro Edition User Guide: Timing Analyzer](#)

4.2.2. FPGA I/O Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP

Figure 8. FPGA I/O Tab

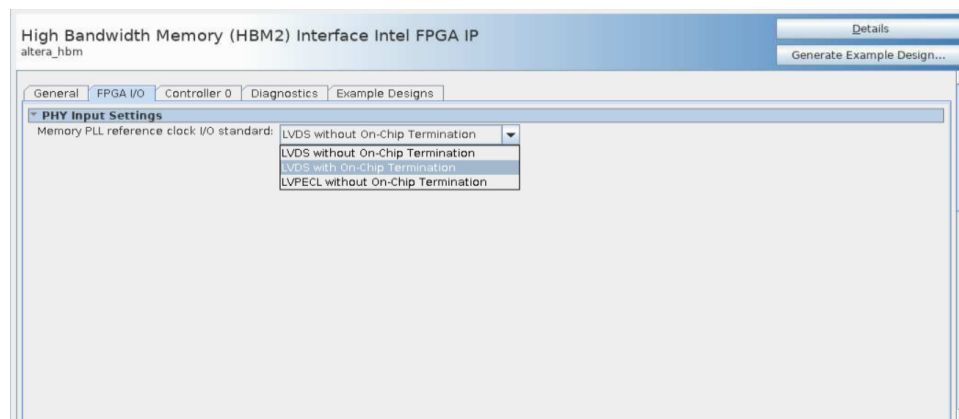

Note: The *LVPECL without On-Chip Termination* option is not supported for HBM2 pll_ref_clk.

Table 10. FPGA I/O Parameters

Display Name	Description
Memory PLL Reference clock I/O standard	Specifies the I/O standard for the PLL reference clock of the memory interface. The termination options available are LVDS with on-chip termination and LVDS without on-chip termination. This parameter is available beginning with Intel Quartus Prime software version 20.3. For designs migrating from previous releases, LVDS without on-chip termination is selected.

4.2.3. Controller Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP

The parameter editor contains one **Controller** tab for each memory channel that you specify on the **General** tab. The **Controller** tab allows you to select the HBM2 controller options that you want to enable.

Figure 9. Controller Tab

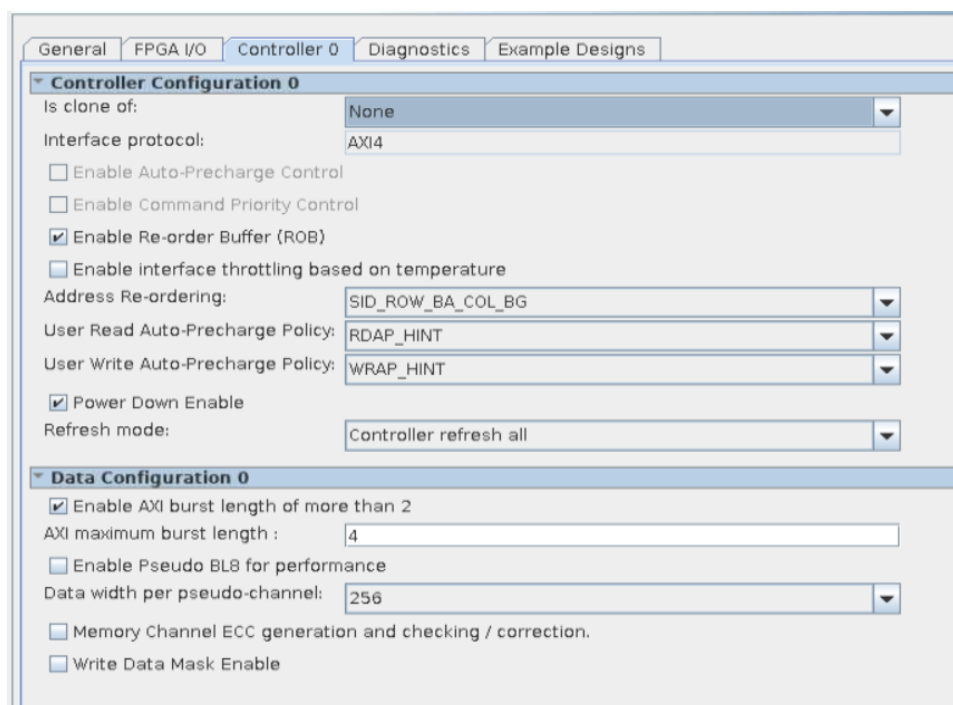


Table 11. Group: Controller/ Controller 0 Configuration

Note: When you enable the AXI Switch option, the controller configurations for the corresponding two HBM2 channels should use the same AXI Data Configuration and Enable Re-order buffer options.

Display Name	Description
Is clone of	Set this option to make this controller a clone of the selected controller. Parameters are copied from the specified controller. This parameter applies when you select more than one HBM2 controller. Set this parameter if you want one controller to have the same settings as another.
Interface Protocol	AXI or AVMM (Avalon memory-mapped) is displayed, based on the interface protocol that you select for the channel on the General tab.
Enable Auto Precharge Control	Select this parameter to enable the auto-precharge control on the controller top level. If you assert the auto-precharge control signal while requesting a read or write burst, you can specify whether the controller should close (auto-precharge) the currently open page at the end of the read

continued...

Display Name	Description
	or write burst, potentially making a future access to a different page of the same bank faster. Applicable to Avalon-MM channel only.
Enable Command Priority Control	Select this parameter to enable user-requested command priority control on the controller top level. This parameter instructs the controller to treat a read or write request as high-priority. The controller attempts to fill high priority requests sooner, to reduce latency. Connect this interface to the conduit of your logic block that determines when the external memory interface IP treats the read or write request as a high priority command. Applicable to Avalon-MM channel only.
Enable Re-order buffer	Specifies that read data be reordered to match the order in which transactions are issued. If you disable this feature, the Read Data provided at the AXI Interface is not expected to follow the same order in which the Read Requests were issued. You can then reorder the data, based on the AXI read ID of the transaction. This parameter applies to cases with multiple AXI transaction IDs. By using different AXI read/write IDs, you allow the HBM2 controller to reorder transactions for better efficiency. If you use the same AXI ID for all transactions, the controller issues the commands to memory in the order in which they arrive; in this instance, you need not enable the reorder buffer.
Enable AXI interface throttling based on temperature	Enables temperature-based throttling for this channel. You can specify the threshold temperature and throttling ratio on the General tab. Enables AXI thermal throttling for the specific HBM2 controller. The parameter that sets the trigger temperature for thermal throttling resides on the General tab. When the temperature of the HBM2 stack reaches the threshold temperature for HBM2 throttling as set on the <i>General</i> tab, the HBM2 controller begins to throttle user requests.
Address reordering	Describes the mapping of AXI address to HBM address. Specifies the pattern for mapping from the AXI interface to the HBM2 memory device. By choosing the right address reordering configuration, you help to improve the efficiency of accesses to the HBM2 memory device, based on user traffic pattern. The HBM2 supports three types of address reordering: Address order (32B access: pseudo-BL8 disabled): SID-BG-BANK-ROW-COL[5:1] SID-ROW-BANK-COL[5:1]-BG ROW-SID-BANK-COL[5:1]-BG COL[0]=0 Address order (64B access (pseudo-BL8 enabled): SID-BG-BANK-ROW-COL[5:1] SID-ROW-BANK-COL[5:2]-BG-COL[1] ROW-SID-BANK-COL[5:2]-BG-COL[1] COL[1:0] = {00} SID applies only to the 8GB/8H HBM2 devices and is not available for 4GB/4H devices.
User Read Auto-Precharge Policy	Describes the policy for determining whether to issue auto-precharge. FORCED indicates that the controller follows the user auto-precharge request exactly. HINT indicates that the controller may override the auto-precharge request by disabling it when a page hit is detected (that is, if it receives two commands, one with auto-precharge and one without auto-precharge to the same page, the controller changes auto-precharge for the first to 0 so that the second can
continued...	

Display Name	Description
	access the page without reopening it). You can issue the request to precharge together with the read command, through the <code>axi_x_y_aruser</code> input, where <code>x</code> denotes the HBM2 channel number (0-7) and <code>y</code> denotes the HBM2 Pseudo Channel number (0/1). You can choose between two values for this parameter: • RDAP_FORCED mode, in which the HBM2 controller implements a user-requested auto-precharge command. • RDAP_HINT mode, in which the controller determines when to issue an auto-precharge command, based on user-issued auto-precharge input and the address specified. (Applicable to the AXI user interface mode only.)
User Write Auto-Precharge Policy	Describes the policy for determining whether to issue auto-precharge. FORCED indicates that the controller follows the user auto-precharge request exactly. HINT indicates that the controller may override the auto-precharge request by disabling it when a page hit is detected (that is, if it receives two commands, one with auto-precharge and one without auto-precharge to the same page, the controller changes auto-precharge for the first to 0 so that the second can access the page without reopening it). You can issue a precharge request together with the write command, through the <code>axi_x_y_awuser</code> input, where <code>x</code> denotes the HBM2 channel number (0-7) and <code>y</code> denotes the HBM2 Pseudo Channel number (0/1). You can choose between two values for this parameter: • WRAP_FORCED mode, in which the HBM2 controller implements a user-requested auto-precharge command. • WRAP_HINT mode, in which the controller determines when to issue an auto-precharge command, based on user-issued auto-precharge input and the address specified. (Applicable to the AXI user interface mode only.)
Power Down Enable	Causes the controller to power down when idle.
Refresh mode	Specifies the method of controlling refreshes to the high bandwidth memory. User refresh modes are initiated with an access on the Advanced Peripheral Bus (APB). You can choose one of three values for this parameter: • The default value is Controller refresh all, which allows the controller to decide when to issue refresh requests. • The User refresh all mode issues commands to all banks that correspond to an HBM2 Pseudo-Channel. User refresh all follows the APB protocol; the request must be addressed to one Pseudo-Channel at a time. A user-controlled refresh example is enabled in the design example when you select the User refresh all mode. • The User refresh per-bank mode issues commands to a specific bank that corresponds to an HBM2 Pseudo-Channel. User refresh per-bank follows the APB protocol; the request must be addressed to one Pseudo-Channel at a time.
Enable AXI Burst length of more than 2	When this option is enabled, the HBM2 IP supports sequential burst transactions at the AXI Interface. This feature is applicable to AXI channel without switch enabled only. This option enables you to use the <code>AWLEN/ARLEN</code> inputs of the AXI interface and issue sequential burst traffic. The burst size is defined by the value provided by <code>AWLEN/ARLEN</code> in the burst length 4 mode. You can select this option only when using the BL4 mode at the HBM2 DRAM.
continued...	

Display Name	Description
AXI Maximum burst length	Maximum of 256 is supported when the <i>enable more than 2 Burst length</i> option is enabled. If the option is disabled, a default value of 1 is set. The maximum burst length value determines the width of the awid/arid. Refer to the AXI Interface Signals section for more details.
Enable Pseudo BL8 for performance	If enabled, data access granularity is 64B (64 bits per Pseudo-Channel at BL8) which can achieve greater efficiency. Otherwise data access granularity is 32B (64 bits per Pseudo-Channel at BL4). The controller sets the memory transactions burst length based on this setting and ignores the input provided on the user-driven axi_awsiz and axi_arsize signals on the AXI interface.
Data width per Pseudo-Channel	Data width per Pseudo Channel. The available data widths are: 256 bits - This refers to 256-bit data transfers at the AXI interface. ECC or write data mask option is available in this data width mode only. 288 bits - This refers to 288-bit data transfers at the AXI interface. ECC or write data mask option is not available in this mode. You must implement your own ECC logic when choosing this data width option.
Memory channel ECC generation and checking/correction	Memory Channel ECC generation and checking / correction. The HBM2 controller supports single-bit error correction and double-bit error detection. This feature is available only when you select the 256-bit data width mode. The controller does not support write data mask in ECC generation mode.
Write data mask enable	Enables the write data mask (DM) input to the HBM2 DRAM. When you use the DM pins, you cannot use ECC. This feature is available only when you select the 256-bit AXI data width mode.

4.2.4. Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP

The **Diagnostics** tab allows you to select traffic options and to enable the efficiency monitor that measures HBM2 controller efficiency during functional simulation.

Figure 10. Diagnostics Tab

The screenshot shows the 'Diagnostics' tab in the configuration tool. It contains three main sections: 'Traffic Generator', 'Performance', and 'Example Design'. The 'Traffic Generator' section has several checkboxes, with 'Run the default traffic pattern' being checked. The 'Performance' section has 'Enable Efficiency Monitor' and 'Use efficiency pattern' unchecked, and input fields for 'Read count' (5000), 'Write count' (2500), and 'Sequence' (Random). The 'Example Design' section has 'Enable In-System-Sources-and-Probes' unchecked.

Table 12. Group: Diagnostics / Traffic Generator

Display Name	Description
Run the default traffic pattern	Runs the default traffic pattern after reset. The default traffic pattern consists of multiple stages testing single/block reads and writes using sequential and random addressing. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
Enable mixed traffic	Configures the traffic generator to send out a variety of traffic patterns, including single and block reads/writes, using a mix of sequential and random addressing. If you do not enable this parameter, the traffic generator sends block reads/writes with sequential addressing. This parameter can help you understand the HBM2 interface performance over different traffic patterns. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
Force traffic generator to issue traffic with different read/write IDs	Forces the traffic generator to issue traffic with different read/write IDs regardless of whether the reorder buffer is on. Using different read/write IDs allows the controller to reorder transactions for higher efficiency, but results in data mismatches if you have disabled the reorder buffer and the user logic does not handle read data returning out-of-order. When you do enable the reorder buffer, the traffic generator automatically generates transactions with different IDs. If you do not enable this parameter, the traffic generator does not issue AXI transactions with different read/write IDs, unless you have enabled the reorder buffer. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
Enable Traffic Generator Configuration Module	Enables instantiation of the traffic generator configuration module, which is necessary only if you are creating custom traffic patterns. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
continued...	

Display Name	Description
Run the user-configured traffic stage	Runs the user-configured traffic pattern after reset. (You can still reconfigure the traffic generator later.) The traffic generator does not assert a pass or fail status until the Avalon configuration interface configures it and signals it to start. You can perform configuration by connecting to the traffic generator via the EMIF Debug Toolkit or by using custom logic connected to the Avalon-MM configuration slave port on the traffic generator. You can also simulate configuration with the example testbench provided in the <code>altera_hbm_tg_axi_tb.sv</code> file. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
Export Traffic Generator Configuration Interface	Exports an Avalon-MM slave port for configuring the traffic generator. This is necessary only if you are configuring the traffic generator with user-configured traffic. This parameter applies to the AXI user interface only; the Avalon memory-mapped interface uses the default traffic pattern.
Disable HBM model transaction messages in simulation	If enabled, HBM model transaction messages are not displayed in simulation.
Enable AXI R/W data transaction messages in simulation	Displays AXI data transaction messages in simulation.

Table 13. Group: Diagnostics / Performance

Display Name	Description
Enable Efficiency Monitor	Adds an Efficiency Monitor component to the AXI interface of the memory controller. The Efficiency Monitor gathers and reports statistics on the efficiency of the interface during simulation. The Efficiency Monitor is available only in the AXI user interface flow.
Use efficiency pattern	The traffic generator generates a high-efficiency concurrent traffic pattern with features integrated in the design example. This parameter applies to the AXI user interface only.
Read count	Defines the read count for the traffic generator. The read and write count should be equal, for the validity check to pass. This parameter applies to the AXI user interface only.
Write count	Defines the write count for the traffic generator. The read and write count should be equal, for the validity check to pass. This parameter applies to the AXI user interface only.
Sequence	Defines the write and read sequence for the traffic generator, with the selection of <i>Random</i> or <i>Sequential</i> . (For best HBM2 efficiency, select <i>Sequential</i> for this parameter.) This parameter applies to the AXI user interface only.
Enable data check for efficiency measurement	Enables a data check for soft traffic generator efficiency measurement. This parameter applies to the AXI user interface only.

Table 14. Group: Diagnostics / Example Design

Display Name	Description
Enable in-System-Source-and-Probes	Enables In-System-Sources-and-Probes in the design example for common debug signals such as calibration status or example traffic generator per-bit status. You must enable this parameter if you want to do driver margining.

4.2.5. Example Designs Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP

The **Example Designs** tab allows you to configure example design files for simulation and synthesis.

Figure 11. Example Designs tab of HBM2 IP Parameters

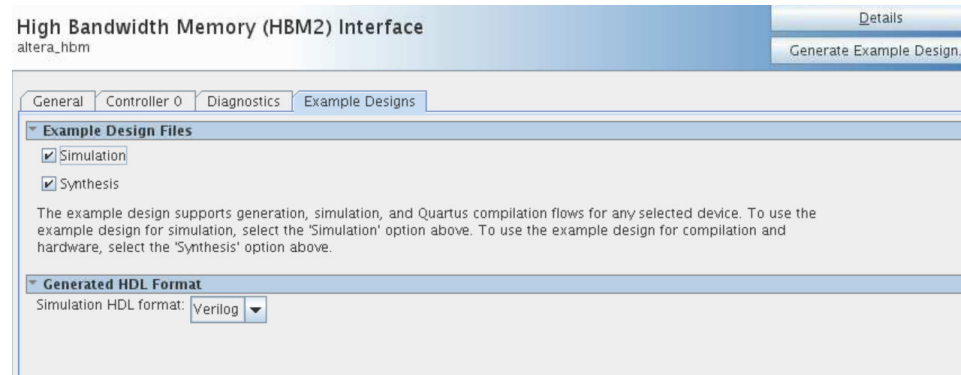


Table 15. Group: Example Designs / Example Design Files

Display Name	Description
Simulation	Specifies that the system generate all necessary file sets for simulation when you click Generate Example Design. Expect an additional 1-2 minute delay when generating the simulation fileset. If you do not enable this parameter, the system does not generate simulation file sets. Instead, the output directory contains the ed_sim.qsys file which contains details of the simulation example design for Platform Designer, and a make_sim_design.tcl file with other corresponding tcl files. You can run the make_sim_design.tcl file from a command line to generate a simulation example design. The generated example designs for various simulators reside in the /sim subdirectory.
Synthesis	Specifies that the system generate all necessary file sets for synthesis when you click Generate Example Design. Expect an additional 1-2 minute delay when generating the synthesis file set. If you do not enable this parameter, the system does not generate synthesis file sets. Instead, the output directory contains the ed_synth.qsys file which contains details of the synthesis example design for Platform Designer, and a make_qii_design.tcl file with other corresponding tcl files. You can run the make_qii_design.tcl file from a command line to generate a synthesis example design. The generated example design resides in the /qii subdirectory.

Tip: The example design supports generation, simulation, and Intel Quartus Prime compilation flows for any selected device. To use the example design for simulation, enable the **Simulation** parameter. To use the example design for compilation and hardware, enable the **Synthesis** parameter.

Table 16. Group: Example Designs / Generated HDL Format

Display Name	Description
Simulation HDL format	Format of HDL files generated for simulating the design example.

Related Information

[High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP Design Example User Guide](#)

4.2.6. Register Map IP-XACT Support for HBM2 IP

IP-XACT is an XML format that describes reusable intellectual property (IP). When you generate an IP from the Intel Quartus Prime software version 20.4 or later, IP-XACT information for that IP is included in the generated .ip file. The generated IP-XACT information includes the register map for the HBM2 IP.

The register block that you can access is the User MMR to HBM controller block, within the HBM2 IP. You access this register block through the Advanced Peripheral Bus (APB) interface. (One APB interface is associated with every two HBM channels. For example, interface apb_0 is associated with channels CH0-1, interface apb_1 is associated with channels CH2-3, and so forth.)

For information on the registers available for you to access through the APB interface, refer to [User-controlled Accesses to the HBM2 Controller](#), in the *High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface* chapter.

4.3. Pin Planning for the High Bandwidth Memory (HBM2) Interface Intel FPGA IP

The High Bandwidth Memory (HBM2) Interface Intel FPGA IP requires the following clock inputs:

- UIB PLL reference clock – Reference clock input for the UIB PLL. There is one UIB PLL reference clock per HBM2 interface.
- Core clock input – Fabric core clock, generated through an I/O PLL.

When the core clock frequency is one-half of the HBM2 clock frequency, the reference clock that drives the core I/O PLL should come from the same oscillator as that supplying the UIB PLL reference clock on the board for a given HBM2 interface.

Table 17. Placement Requirements for PLL Reference Input Clocks

Signal	Description	Pin Placement Guidelines
pll_ref_clk	The HBM2 IP parameter editor allows the selection of the following I/O standards: • LVDS with on-chip termination • LVDS without on-chip termination Refer to the <i>Intel Stratix 10 General Purpose I/O User Guide</i> and <i>Intel Stratix 10 Pin Connection Guidelines</i>	Place this reference clock input on the UIB_PLL_REF_CLK_00 pins while using the HBM2 device on the bottom of the FPGA, or the UIB_PLL_REF_CLK_01 pins while using the HBM2 on the top of the FPGA.
continued...		

Signal	Description	Pin Placement Guidelines
	for termination recommendations based on the I/O standard chosen for the UIB PLL reference clock	
ext_core_clk	LVDS differential input clock used to generate the fabric core clock. Instantiate the I/O PLL that shall generate the core clock for the HBM2 IP.	Place the reference clock input on <i>CLK_</i> pins to access the I/O PLL. You should select pins that are close to the <i>UIB_PLL_REF_CLK</i> input. You must instantiate the I/O PLL in the design flow. The output of the I/O PLL serves as the <i>EXT_CORE_CLK</i> .

Jitter Specifications for the Input Reference Clocks

Both the reference clock inputs should meet and not exceed the following time interval error (TIE) jitter requirements:

- 20ps peak-to-peak
- 1.42ps RMS at 1e-12 BER
- 1.22ps at 1e-16 BER

5. Simulating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP

This section describes how to simulate the generated HBM2 IP.

Simulation Assumptions

The parameter settings that you make on the **Controller** tab affect efficiency during simulation. In the default configuration, with the default parameter settings, the traffic generator issues sequential transactions.

Supported Simulators


The HBM2 IP supports the following simulators:

- ModelSim*- Intel FPGA Edition
- ModelSim SE
- Questa* Advanced Simulator
- Aldec Riviera-PRO*
- Synopsys* VCS
- Xcelium* Parallel Simulator

5.1. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Example Design

The following illustration shows a high-level block diagram of the HBM2 example design that provides the simulation environment for the High Bandwidth Memory (HBM2) Interface Intel FPGA IP HBM2 IP when generated for simulation.

Figure 12. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Generated for Simulation

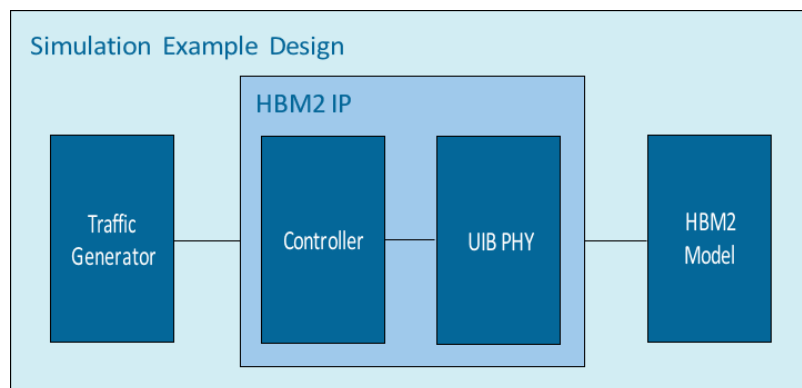

The Traffic Generator emulates a real-world application that writes to, and reads back from memory and validates the read data. You can modify the traffic generator logic to fit your traffic pattern or drive the transactions to the HBM2 memory with your own logic.

Simulation incorporates an abstract model of the hardened HBM2 controller and the universal interface block (UIB). The HBM2 controller performs data reordering and enhancement functions, and allows communication between the AXI4 user interface and the UIB PHY. The universal interface block PHY (UIB PHY) is the physical-layer interface that carries low-level signaling.

The HBM2 Model is an abstract generic model representative of the HBM2 DRAM for simulation. This is not a vendor-specific model.

5.2. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with ModelSim* and Questa*

1. Launch the ModelSim simulator.
2. Select **File** ► **Change Directory** and navigate to: `project_directory/sim/ed_sim/sim/mentor`
3. Verify that the **Transcript** window is visible; if it is not, display it by selecting **View** ► **Transcript**.
4. In the **Transcript** window, run source `msim_setup.tcl` at the bottom of the ModelSim tool screen.
5. After the Tcl script finishes running, run `ld_debug` in the **Transcript** window. This command compiles the design files and elaborates the top-level design.
6. After `ld_debug` finishes running, the **Objects** window appears. In the **Objects** window, select the signals to simulate by right-clicking and selecting **Add Wave** from the context menu.
For example, if you want to see the HBM2 interface signals, select the module `mem0_0` from the **Instance** window. With `mem0_0` selected, go to the **Objects** window and select the signals that you want to see. (If the **Objects** window is not visible, you can display it by selecting **View** ► **Objects**.)
7. To run the HBM2 simulation, type run `-all`.
If the simulation is not visible, select **View** ► **Wave**. With the **Wave** window open, select **File** ► **Save Format**. Click **OK** to capture your selected waveforms in a `wave.do` file. To display the waveforms, type `do wave.do`, and then type run `-all`.

Whenever you make changes to the design or to the `wave.do`, you must repeat step 7 of this procedure. Alternatively, you can combine the instructions into a script and run that script instead. The following example illustrates a `run.do` script containing the necessary commands:

```
if {[file exists msim_setup.tcl]} {  
    source msim_setup.tcl  
    ld_debug  
    do wave.do  
    run -all } else {  
    error "The msim_setup.tcl script does not  
    exist.  
    Please generate the example design RTL and simulation scripts. See ../../  
    README.txt  
    for help." }
```

Save the `run.do` script in the same directory as the `msim_setup.tcl` file. Type `do run.do` to run this script from the **Transcript** window.

8. Upon completion of the simulation, the **Transcript** window displays efficiency data and other useful information.

5.3. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Synopsys VCS*

1. Navigate to the `project_directory/hbm_0_example_design/sim/ed_sim/sim/synopsys/vcs` directory.
2. To run the simulation, type `sh vcs_setup.sh`. To view the simulation results, write the output to a log file. The simulation log provides efficiency data and other useful information.
3. To view the waveform, add `+vcs+dumpvars+test.vcd` to the `vcs` command.
4. To view the waveform, type `dve &` to launch the waveform viewer. Add the necessary signals or module to the waveform view to view the required signals.

5.4. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Riviera-PRO*

1. Navigate to: `project_directory>/sim/ed_sim/aldec`.
2. Type `rungui` to launch the Riviera-PRO simulator.
3. Type `source rivierapro_setup.tcl`.
4. Type `ld_debug` to compile the design files and elaborate the top-level design.
5. Type `run -all` to run the HBM2 simulation.

5.5. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Cadence Xcelium* Parallel Simulator

1. Navigate to: `project_directory>/sim/ed_sim/xcelium`.
2. Type `sh xcelium_setup.sh` to launch the Xcelium simulator.
3. To view the simulation results, write the output to a log file. The simulation log provides efficiency data and other useful information.

5.6. Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP for High Efficiency

The default traffic pattern can achieve high efficiency by efficiently utilizing the HBM2 memory bandwidth and providing an efficient flow of traffic between the HBM2 controller and AXI user interface.

The main steps to deriving higher efficiency are:

- Turn off **Enable Reorder Buffer** on the **Controller** tab. The Reorder Buffer rearranges the read data in the order of the issued requests.
- Turn on **Force traffic generator to issue different AXI Read/Write IDs** and **Enable Efficiency Test Mode** on the **Diagnostics** tab. In this configuration, the traffic generator issues concurrent read and write transactions; consequently, you may receive data mismatch warnings, which you can ignore.
- Turn on **Use efficiency pattern** and **Enable data check for efficiency measurement** on the **Diagnostics** tab, to have the traffic generator use an efficiency pattern to test both synthesis and simulation designs. Ensure that the **Read count** and **Write count** values are equal, for the validity check to pass. For best HBM2 efficiency, select a **Sequence** value of *Sequential*.

The following sections explain the **General**, **Controller**, and **Diagnostic** tab parameters required to perform high efficiency HBM2 simulation. The following figures illustrate parameter settings for a high-efficiency simulation for a single-channel HBM2 controller.

For more information about improving controller efficiency, refer to *High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance*.

Figure 13. Controller Tab Settings for High Efficiency Simulation

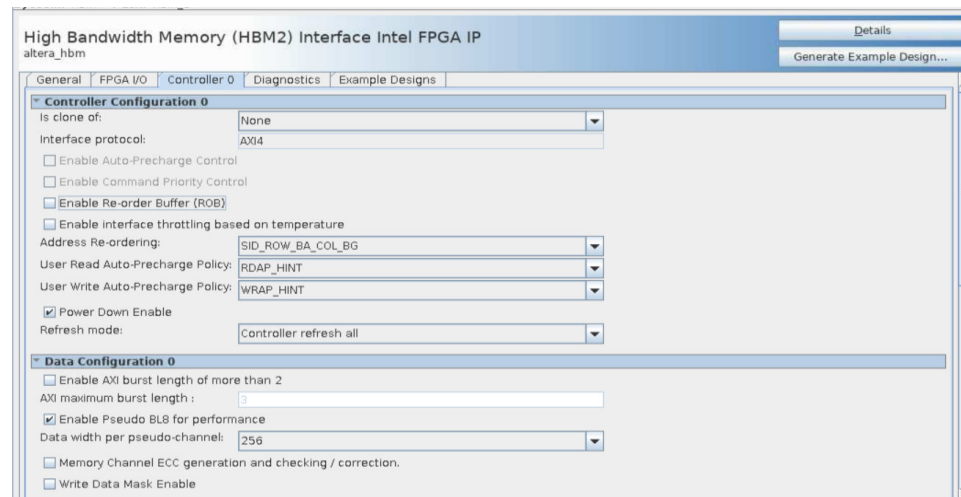


Figure 14. Diagnostics Tab Settings for High Efficiency Simulation

5.7. Simulating High Bandwidth Memory (HBM2) Interface IP Instantiated in Your Project

This topic outlines the flow for simulating the HBM2 IP instantiated in your project, rather than the HBM2 design example.

1. In your simulation project, include `<project_directory>\<IP_name>\sim\<IP_name>.v`
2. The generated HBM2 IP simulation file set does not include an HBM2 memory model file; you must add a memory model file to the project. Intel recommends that you use the memory model from the design example simulation file set generated from your IP: `hbm_0_example_design\sim\ip\ed_sim\ed_sim_mem\sim\ed_sim_mem.v`

6. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface

This chapter provides an overview of the signals that interface to the HBM2 IP.


Related Information

[Intel Stratix 10 UIB Architecture](#) on page 9

6.1. High Bandwidth Memory (HBM2) Interface Intel FPGA IP High Level Block Diagram

The following figure shows a high-level block diagram of the High Bandwidth Memory (HBM2) Interface Intel FPGA IP per Pseudo Channel. The IP communicates with user logic through the AXI protocol.

Figure 15. High Level Block Diagram of HBM2 Implementation

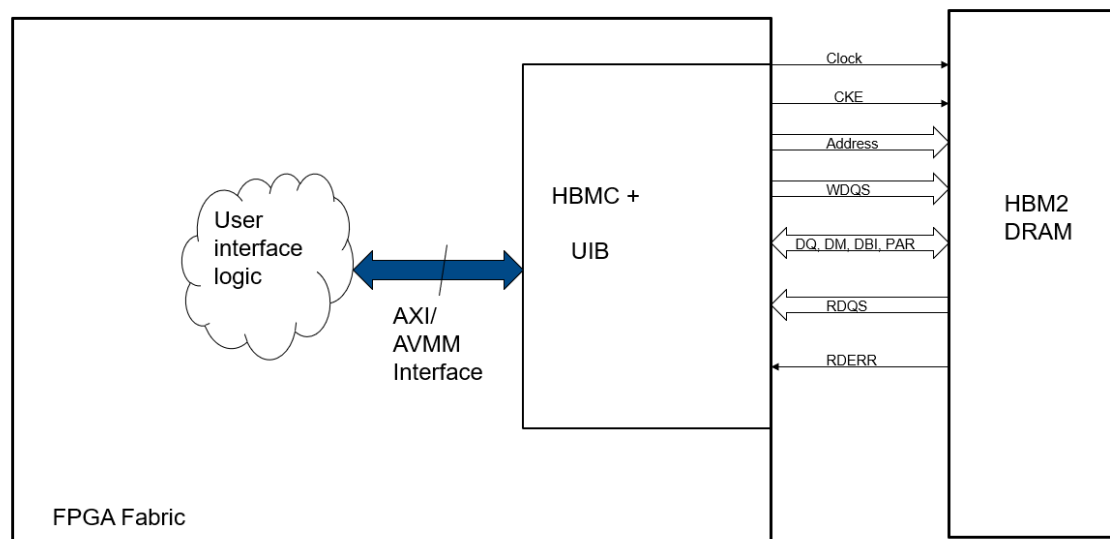

6.2. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Interface Signals

This section lists the signals that connect core logic to the High Bandwidth Memory (HBM2) Interface Intel FPGA IP.

6.2.1. Clock Signals

Figure 16. HBM2 IP Clocking and Reset Diagram

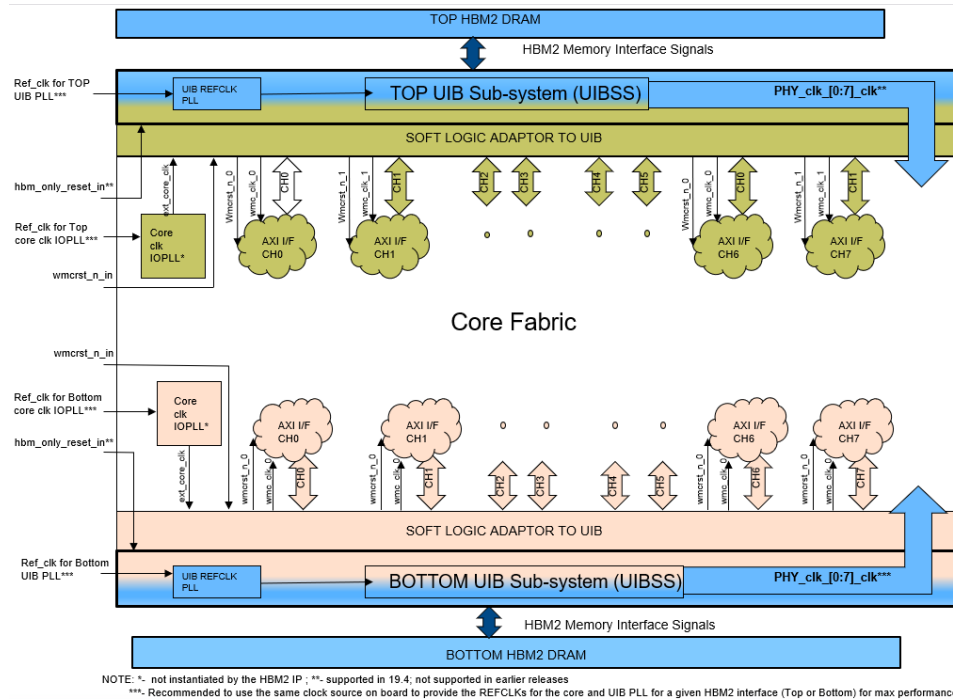


Table 18. Clock Signals

Signal	Direction	Description
ext_core_clk	Input	Core clock. Output of user-instantiated I/O PLL. The HBM2 IP does not instantiate the I/O PLL required to generate the ext_core_clk. When the core clock frequency is one-half of the HBM2 interface frequency, the reference clock that drives the core I/O PLL must come from the same oscillator as that supplying the UIB PLL reference clock on the board for a given HBM2 interface. Failure to follow this guideline can result in calibration not completing successfully or the AXI bus locking up. Although you can set the core clock frequency to a maximum of one-half of the memory clock, Intel recommends not exceeding the recommended core clock limits presented in Table 9 on page 24 to avoid potential timing closure problems.
ext_core_clk_locked	Input	LOCKED status of I/O PLL driving ext_core_clk, indicating the ext_core_clk is stable. This I/O PLL should achieve LOCKED status within 1ms of device configuration for

continued...

Signal	Direction	Description
		calibration to be successful. The I/O PLL driving the ext_core_clk cannot be reset after calibration is completed.
pll_ref_clk	Input	LVDS reference clock input for UIB PLL. This reference clock must be provided through dedicated UIB_PLL_REF_CLK_p/n pins available in Intel Stratix 10 devices and cannot be provided through an internal I/O PLL. The pll_ref_clk must be stable and free-running at device power-up for successful configuration. Refer to Intel Stratix 10 pin connection guidelines for information on how to supply these clocks.
wmc_clk_x_clk	Output	Core clock output feedback from UIB, based on ext_core_clk provided, one per HBM2 Channel (represented by x). Intel recommends that the user interface drive the AXI interface for the corresponding channels with this clock.
phy_clk_x_clk	Output	UIB PHY clk output. Not supported. Leave unconnected. This signal appears as phy_clk_x conduit in the Platform Designer.

Clocking recommendations for Reliable Calibration of the HBM2 Interface

Observe the following clock guidelines for reliable calibration of the HBM2 interface:

- The UIB PLL reference clocks (one per HBM2 interface) must be provided through an external clock source and must be stable and free running prior to configuration and stable thereafter.
- The I/O PLL driving the core clock (ext_core_clk) should achieve a LOCKED condition within one millisecond of device configuration. This I/O PLL cannot be reset once the interface is calibrated.
- For a given HBM2 interface, Intel recommends that the same clock source provide the reference clocks for both the I/O PLL and the UIB PLL.

Related Information

- [Intel Stratix 10 HBM2 Controller Features](#) on page 7
- [Intel Stratix 10 HBM2 Controller Details](#) on page 13
- [General Parameters for High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP](#) on page 19
- [High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP Design Example](#)

6.2.2. Reset Signals

Table 19. Reset Signals


Signal	Direction	Description
wmcrst_n_in	Input	Core logic external input reset, active LOW. Resets all fabric logic, including the Soft Logic Adaptor. This is an asynchronous reset signal. You should assert this reset only when the AXI Interface is idle and there are no pending memory transactions.
hbm_only_reset_in	Input	Reset request for the soft fabric AXI logic as well as the hardened UIBSS, including the HBM2 DRAM, HBM Controller and PHY. From the Intel Quartus Prime software version 19.4 onwards, Intel recommends to use only hbm_only_reset_in whenever you need to reset the HBM subsystem, both during active traffic to the DRAM or when the interface is idle. (See additional information immediately following this table.)
wmcrst_n_x_reset_n	Output	Core input reset synchronized to the AXI interface clock domain. One per AXI Channel (represented by x). Intel recommends that the user interface use the respective channel reset outputs in the logic that drives the AXI interfaces for the corresponding channels.

hbm_only_reset_in Timing

The **hbm_only_reset_in** signal requests the reset of the soft AXI logic as well as the hardened UIBSS, and the HBM2 DRAM, without initiating a recalibration. This signal is supported only in the Intel Quartus Prime software version 19.4 and later.

The following waveform illustrates the timing associated with this signal.

Figure 17. hbm_only_reset_in Timing

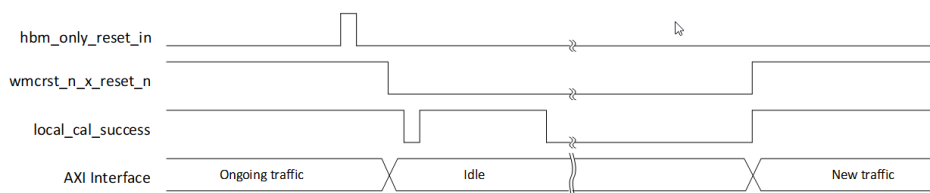

The following sequence explains the requirements and timing of the hbm_only_reset_in signal:

- The hbm_only_reset_in signal is internally synchronized to the core clock (ext_core_clk). This reset input detects the rising edge. The minimum requirement is to assert this signal for one core clock cycle.
- wmcrst_n_x_reset_n is reset output synchronized to the core clock. Intel recommends that you connect user logic reset to this reset output so that AXI traffic can be stopped during the reset sequence.
- The start of the reset sequence is indicated by wmcrst_n_x_reset_n going low.
- The end of the reset sequence is indicated by wmcrst_n_x_reset_n going high.
- The hbm_only_reset_in can be asserted again after wmcrst_n_x_reset_n goes high (reset completed). Any assertion of hbm_only_reset_in *during* the reset sequence is ignored.
- The local_cal_success signal deasserts for several core clock cycles after the reset sequence begins, however this does not perform a recalibration.

Reset Recommendations for Reliable Calibration of the HBM2 Interface

Observe the following reset signal guidelines for reliable calibration of the HBM2 interface:

- Ensure that the Reset Release Intel FPGA IP is instantiated in your design. This IP helps to hold the FPGA in reset until all registers and core logic are in user mode. Intel recommends that you use the ninit_done output of the Reset Release Intel FPGA IP as one of the initial inputs to your reset circuit. You can find this IP in the IP Catalog under **Basic Functions > Configuration and Programming > Reset Release Intel FPGA IP**. You can find more information on using this IP, in **AN 891: Using the Reset Release Intel FPGA IP**, available here: <https://www.intel.com/content/www/us/en/programmable/documentation/prh1555609801770.html#iuj1556119879221>.

Use the ninit_done signal output of this IP to gate the core input reset (wmcrst_n_in). The ninit_done output is active low; that is, ninit_done = 0 after FPGA enters user mode.

- Ensure that wmcrst_n_in (active low soft logic reset input) and hbm_only_reset_in (active high reset signal for soft logic as hard logic of the HBM subsystem) are not asserted until after completion of calibration.
- Commencing with the Intel Quartus Prime software version 19.4, Intel recommends using hbm_only_reset_in whenever you need to reset the HBM subsystem, both during active traffic to the DRAM or when the interface is idle.
- The I/O PLL that generates ext_core_clk, the core AXI interface input clock, cannot be reset once the I/O PLL has achieved a locked condition.
- The wmcrst_n_x_reset_n signal that is driven as an output from the UIBSS per HBM2 channel (represented by x) is to be used by the user AXI interface along with the wmc_clk_x_clk provided per channel as shown in [Figure 16](#) on page 40.

Related Information

[High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP Design Example](#)

6.2.3. Calibration Status Signals

Table 20. Calibration Status Signals

Signal	Direction	Description
local_cal_success	Output	Indicates calibration success. This signal is asynchronous to the wmc_clk_x_clk signals. Once asserted, this signal remains high until the system is reset.
local_cal_fail	Output	Indicates calibration failure. This signal is asynchronous to the wmc_clk_x_clk signals. Once asserted, this signal remains high until the system is reset.
cal_lat	Output	Calibrated latency output. Not supported.

6.2.4. Memory Interface Signals

The following HBM2 memory signals are driven by the HBM2 controller through the UIBSS; you do not need to drive these signals.. These signals are provided at the top level, for successful compilation.

Table 21. HBM2 Memory Interface Signals

Signal	Direction	Width	Description
Cattrip	Input	1	HBM2 signals common to each HBM2 interface; these signals must be brought out to the design top level. You do not need to drive these signals and can leave them unconnected. These signals are grouped under a conduit named m2u_bridge in the Platform Designer, and must be exported.
Temp	Input	3	
Wso	Input	8	
Reset_n	Output	1	
Wrst_n	Output	1	
Wrck	Output	1	
Shiftwr	Output	1	
Capturewr	Output	1	
Selectwir	Output	1	
Wsi	Output	1	
Ck_t	Output	1	HBM2 signals per HBM2 channel. You do not need to drive these signals and can leave them unconnected. These signals are grouped under a conduit named mem_x in the Platform Designer. You should leave this conduit unconnected and ignore any warning message about mem_x being unconnected.
Ck_c	Output	1	
Cke	Output	1	
C	Output	8	
R	Output	6	
Dq	Inout	128	
Dm	Inout	16	
Dbi	Inout	16	
Par	Inout	4	
continued...			

Signal	Direction	Width	Description
Derr	Inout	4	
Rdqs_t	Input	4	
Rdqs_c	Input	4	
Wdqs_t	Output	4	
Wdqs_c	Output	4	
Rd	Inout	8	
Rr	Output	1	
Rc	Output	1	
Aerr	Input	1	

6.2.5. User-interface Signals

The HBM2 IP supports both the AXI interface and the Avalon memory-mapped interface user interface.

6.2.6. AXI User-interface Signals

The AXI user interface to the HBM2 controller follows the Amba AXI4 protocol specification. Each AXI port serves the read and write operations for one Pseudo Channel. Each HBM2 channel consists of two Pseudo Channels, therefore each controller has two AXI ports.

AXI Interface Signals

Each AXI port consists of five subchannels:

- Write Address Channel –AXI Write Address that maps to the HBM2 DRAM Write Address.
- Write Data Channel – AXI Write data provided by the core logic corresponding to the Write Address.
- Write Response Channel – Response from the HBM2 controller on the status of the Writes.
- Read Address Channel – AXI Read Address that maps to the HBM2 DRAM Read Address.
- Read Data Channel – AXI Read Data provided from the corresponding HBM2 DRAM Read Address.

AXI ID Definition

- The AXI burst transactions greater than 2 are available beginning in the Intel Quartus Prime software version 20.3. When the burst transactions are enabled through the HBM2 IP GUI, the width of arid/awid is set to $\lceil 9 - \log_2(\text{maximum burst length}) \rceil$, where up to 256 can be set as the maximum burst length.
- Burst transactions greater than 2 cannot be used with the soft AXI switch.
- When the soft AXI switch is not enabled, the AXI ID is 9-bits wide. A total of 2^9 AXI IDs are supported.
- When the soft AXI switch is enabled, the AXI ID is 7-bits wide. A total of 2^7 AXI IDs are supported.

AXI Address Definition

The HBM2 DRAM addressing consists of the following:

- 14-bit wide Row Address.
- 6-bit wide Column Address. The user logic drives Column Address bits COL[5:1], while the controller sets the lower order Column Address bit COL[0] to 0. For BL8 transactions, the user logic sets COL[1] to 0.
- 4-bit wide Bank Address. Bank Group corresponds to the higher order 2 bits of the Bank Address (BA[3:2]).
- 1-bit wide Stack ID(SID) available only in the 8GB configuration.
- 2-bit wide Slave ID, available only when the soft 4x4 AXI switch is enabled through the HBM2 IP parameter editor.

The *AXI Address Definition* figure illustrates the mapping of the AXI Address bus (28-bit wide for 4GB configurations and 29-bit wide for 8GB configurations) for the various address ordering schemes to address the HBM2 DRAM, when the soft AXI switch is not used. The *Address Definition with AXI Switch Enabled* figure shows the AXI address definition when you have enabled the soft AXI switch. Refer to the AXI Interface Signals and [Soft AXI Switch](#) sections, for information for when the soft AXI switch is enabled.

Figure 18. AXI Address Definition

AXIAWADDR/AXIARADDR bus definition		28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
4GB - AXIAWADDR/AXIARADDR (28 bits wide)																															
BL4: 32B																															
SID-BG-BA-R-COL																															
SID-R-BA-COL-BG																															
R-SID-BA-COL-BG																															
COL[0] - set to 0, not driven by user (both 32B and 64B)																															
pseudo-BL8-64B																															
SID-BG-BA-R-COL																															
SID-R-BA-COL-BG																															
R-SID-BA-COL-BG																															
COL[0] - set to 0, not driven by user (both 32B and 64B)																															
COL[1] - driven to 0 by user for 64B access only (BL8)																															
User drives AXI_ADDR[4:0] to 0.																															
8GB - AXIAWADDR/AXIARADDR (29 bits wide)																															
BL4: 32B																															
SID-BG-BA-R-COL																															
SID-R-BA-COL-BG																															
R-SID-BA-COL-BG																															
COL[0] - set to 0, not driven by user (both 32B and 64B)																															
pseudo-BL8-64B																															
SID-BG-BA-R-COL																															
SID-R-BA-COL-BG																															
R-SID-BA-COL-BG																															
COL[0] - set to 0, not driven by user (both 32B and 64B)																															
COL[1] - driven to 0 by user for 64B access only (BL8)																															
User drives AXI_ADDR[4:0] to 0.																															

Figure 19. Address Definition with AXI Switch Enabled


AXIAWADDR/AXIARADDR bus definition	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1		
4GB - AXIAWADDR/AXIARADDR (28 bits wide)																																
BL4: 32B																																
SID-BG-BA-R-COL	SID[1:0]	BA[3:2]	BA[1:0]	ROW[13:0]																	COL[5:1]		TIED TO ZERO									
SID-R-BA-COL-BG	SID[1:0]	ROW[13:0]													BA[1:0]	COL[5:1]		BA[3:2]		TIED TO ZERO												
R-SID-BA-COL-BG	SID[1:0]	ROW[13:0]													BA[1:0]	COL[5:1]		BA[3:2]		TIED TO ZERO												
COL[0] - set to 0, not driven by user (both 32B and 64B)																																
pseudo-BL8-64B																																
SID-BG-BA-R-COL	SID[1:0]	BA[3:2]	BA[1:0]	ROW[13:0]																	COL[5:1]		TIED TO ZERO									
SID-R-BA-COL-BG	SID[1:0]	ROW[13:0]													BA[1:0]	COL[5:2]		BA[3:2]		COL[1]	TIED TO ZERO											
R-SID-BA-COL-BG	SID[1:0]	ROW[13:0]													BA[1:0]	COL[5:2]		BA[3:2]		COL[1]	TIED TO ZERO											
COL[0] - set to 0, not driven by user (both 32B and 64B)																																
COL[1] - driven to 0 by user for 64B access only (BL8)																																
8GB - AXIAWADDR/AXIARADDR (29 bits wide)																																
BL4: 32B																																
SID-BG-BA-R-COL	SID[1:0]	SID	BA[3:2]	BA[1:0]	ROW[13:0]																	COL[5:1]		TIED TO ZERO								
SID-R-BA-COL-BG	SID[1:0]	SID	ROW[13:0]													BA[1:0]	COL[5:1]		BA[3:2]		TIED TO ZERO											
R-SID-BA-COL-BG	SID[1:0]	ROW[13:0]													SID	BA[1:0]	COL[5:1]		BA[3:2]		TIED TO ZERO											
COL[0] - set to 0, not driven by user (both 32B and 64B)																																
pseudo-BL8-64B																																
SID-BG-BA-R-COL	SID[1:0]	SID	BA[3:2]	BA[1:0]	ROW[13:0]																	COL[5:1]		TIED TO ZERO								
SID-R-BA-COL-BG	SID[1:0]	SID	ROW[13:0]													BA[1:0]	COL[5:2]		BA[3:2]		COL[1]	TIED TO ZERO										
R-SID-BA-COL-BG	SID[1:0]	ROW[13:0]													SID	BA[1:0]	COL[5:2]		BA[3:2]		COL[1]	TIED TO ZERO										
COL[0] - set to 0, not driven by user (both 32B and 64B)																																
COL[1] - driven to 0 by user for 64B access only (BL8)																																

when the pseudo-BL8 mode is disabled through the HBM2 IP GUI). This feature is available when the AXI Switch is disabled and you have not selected the AVMM Interface mode. Support for this feature is added in the soft logic adaptor for the Hard HBM Controller (HBMC).

This feature has the following specifications and requirements:

- Enabling AXI burst transactions through the HBM2 IP GUI:
 - To enable the feature, select *Enable the AXI Burst length of more than 2* in the Controller Tab of the parameter editor.
 - Provide the AXI Maximum burst length value – a maximum value of 256 is allowed. Any AXI transaction can have an AWLEN/ARLEN value of 0 to the value configured in the **AXI Maximum burst length** minus 1, where the maximum burst length is set in the parameter editor. For example, if you enter a maximum burst length value of 3, the valid AWLEN/ARLEN values are from 0 to 2.

Figure 20. Parameters to Enable BL>2 and Set Maximum Burst Length

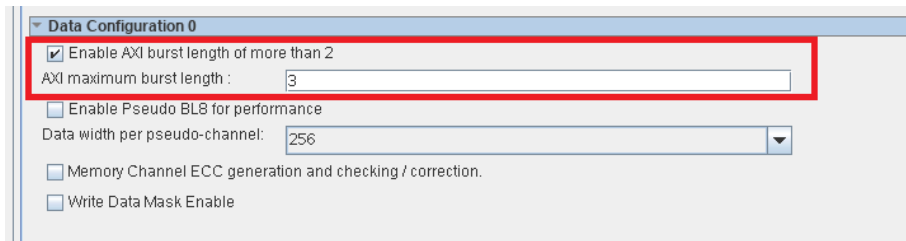

- The sequential address ordering required for the burst transactions is managed by the soft logic adaptor. You provide the starting AXI address of the transaction and the length of transaction (AWLEN/ARLEN).
- AWREADY/ARREADY is asserted once (along with AWVALID/ARVALID) to capture the start address and the current burst size. When AXI burst transactions are enabled, the HBM2 IP does not accept any new commands until the previous burst transaction is served. Consequently, AWREADY/ARREADY is de-asserted after the start address and the burst size are captured, until all addresses within the burst are issued internally.
- Transaction ID (AWID/ARID) widths are reduced to accommodate having internal IDs with the sliced bursts. When using this feature, the ID width is reduced to $\lceil 9 \text{ bits} - \log_2(\text{maximum burst length}) \rceil$.
- You should take care to provide the correct address range, so that you do not accidentally write into unintended address space.
- You should also ensure the burst does not exceed 4KB of data as specified by the AXI4 spec. (Each AXI transaction in BL4 configuration provides 32B of data).
- You must handle buffering of data if the Controller READY is not asserted HIGH.
- WLAST signal should be asserted HIGH on the last burst data.
- Response ID width follows the ARID/AWID width.
- The read response follows the write transactions and has the RLAST pulse HIGH at the last transaction.
- Write response is provided for each Write command.
- ARSIZE/AWSIZE are not used and are not monitored by the controller.

The following HBM2 IP features are not available when using burst length values greater than 2:

- High efficiency pattern and mixed traffic in the Example design traffic generator.
- Efficiency monitor (under Diagnostics -> Enable efficiency monitor)
- AXI 4x4 soft switch.
- AVMM interface.

AXI Subchannels Descriptions

The syntax for referencing AXI port signal names is *axi_x_y_portname* where *x* is the channel number and *y* is the Pseudo Channel number. For example, *axi_0_1_awid* refers to the write address ID of the AXI port corresponding to channel 0 and Pseudo Channel 1. This applies to the bottom HBM2 interface.

For each channel in the top HBM2 interface, the AXI port for Pseudo Channel 0 is actually connected to the HBM2 memory for Pseudo Channel 1, and vice versa. This does not affect the HBM2 memory operation, but note that the Advanced Peripheral Bus (APB) register addresses for Pseudo Channel 0 are referring to Pseudo Channel 1, and vice versa.

The signals in the following tables refer to the signal names corresponding to a single AXI port: Channel 0, Pseudo Channel 0.

Table 22. User Port 0's AXI4 Write Address (Command) Channel

Port Name	Width	Direction	Description
<i>axi_0_0_awid</i>	7 (AXI switch enabled) 9 (AXI switch not enabled) [9 – $\text{ceil}(\log_2(\text{maximum burst length}))$] (AXI Burst transactions enabled through HBM2 IP GUI)	Input	Write address ID. This signal is the ID tag for the write address group of signals. This signal is 7-bits wide when the soft 4x4 AXI switch is enabled and 9-bits wide when the soft AXI switch is not enabled. When you enable the soft AXI Switch, this signal is 7-bits wide. When the soft 4x4 AXI switch is not enabled, the signal width is affected by the AXI burst transaction feature and the maximum burst length set through the HBM2 IP GUI. When you enable AXI burst transactions, the width is reduced to [9 bits – $\text{ceil}(\log_2(\text{maximum burst length}))$]. When the AXI Burst transactions are not enabled, the width is 9 bits.
<i>axi_0_0_awaddr</i>	28/29 (AXI switch not enabled) 30/31 (AXI switch enabled)	Input	Write address. The write address gives the address of the first transfer in a write burst transaction. This address bus is 28 bits wide for a 4 GB device and 29 bits for an 8 GB HBM2 device. When you enable the soft AXI switch, the higher-order 2-bits provide the slave address.
<i>axi_0_0_awlen</i>	8	Input	Burst Length. The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address. Beginning in the Intel Quartus Prime software version 20.3, for the <i>Burst Length 4</i> mode, more than 2 burst transactions up to a maximum value of 256 at the AXI Interface is supported. To use this feature, you must select Enable AXI Burst length of more than 2 and select a

continued...

Port Name	Width	Direction	Description		
			maximum burst length value in the HBM2 IP parameter editor. If this feature is not selected, then the following values are supported.		
			Value	Max Burst Length	Mode
			0b00000000 – 0b1111_1111	1-256	BL4 – Burst mode enabled (from Quartus 20.3). Only BL4 mode is supported in Burst mode. Pseudo-BL8 mode access is not supported in Burst mode.
			0b00000000	1	BL4 – non burst mode
			0b00000001	2	Pseudo BL8
axi_0_0_awsiz	3	Input	Burst Size. This signal indicates the size of each transfer in the burst.		
			Value	Burst Size (Bytes)	
			0b101	32	
			The HBM2 controller supports only 256 bits, or 32 Bytes, of data transfers at the AXI Interface per AXI clock cycle. The HBM2 controller sets the value of axi_awsiz and ignores any non-supported value driven through the axi_awsiz port.		
axi_0_0_awburst	2	Input	The burst type and the size information, determined how the address for each transfer within the burst is calculated.		
			Value	Burst Type	
			2'b01	INCR	
			Only INCR is supported. The HBM2 controller sets the value of axi_awburst and ignores any non-supported value driven through the axi_awburst port.		
axi_0_0_awprot	3	Input	Protection Type. [Reserved for Future Use] This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access. 3'b000 = No protection		
axi_0_0_awqos	4	Input	Quality of Service. The Quality of Service identifier sent for each write transaction. 4'b1111 = High priority 4'b0000 = Normal priority		
axi_0_0_awuser	1	Input	User Signal for auto-precharge.		
continued..					

Port Name	Width	Direction	Description
			1'b0 = No auto-precharge 1'b1 = Auto-precharge Optional user-defined auto-precharge signal in the write address channel.
axi_0_0_awvalid	1	Input	Write Address Valid. Indicates that the channel is signaling valid write address and control information.
axi_0_0_awready	1	Output	Write Address Ready. Indicates that the slave is ready to accept an address and associated control signals.

Table 23. User Port 0's AXI4 Write Data Channel

Port Name	Width	Direction	Description
axi_0_0_wdata	256	Input	Write Data.
axi_0_0_wstrb	32	Input	Write Strobes (Byte Enables). Indicates which byte lanes (for axi_0_0_wdata) hold valid data. There is one write strobe bit for every eight bits of write data.
axi_extra_0_0_wuser_data	32	Input	Extra Write Data (AXI WUSER port). Carries additional write data when AXI Data Width of 288-bits data is selected in the HBM2 IP GUI. When 256 bits data is chosen in the GUI, this bus should be left undriven.
axi_extra_0_0_wuser_strb	4	Input	Extra Write Strobes (AXI WUSER port). Indicates which byte lanes (for axi_extra_0_0_wuser_data) hold valid data. This bus is used only when the AXI Data width of 288 bits is chosen in the HBM2 IP GUI. These signals should be left undriven when the data width is selected as 256 bits.
axi_0_0_wlast	1	Input	Write Last. Indicates the last transfer in a write burst.
axi_0_0_wvalid	1	Input	Write Valid. Indicates that valid write data and strobes are valid.
axi_0_0_wready	1	Output	Write Ready. Indicates that the slave (HBM2 controller) can accept write data.

Table 24. User Port 0's Write Response Channel

Port Name	Width	Direction	Description
axi_0_0_bid	7 (AXI switch enabled) 9 (AXI switch not enabled)	Output	Response ID Tag. The ID tag of the write response.
axi_0_0_bresp	2	Output	Write response. Indicates the status of the write transaction. 2'b00 = OKAY; indicates that normal access is successful.
axi_0_0_bvalid	1	Output	Write response valid. Indicates that the channel is signaling a valid write response.
axi_0_0_bready	1	Input	Response ready. Indicates that the master can accept a write response.

Table 25. User Port 0's AXI4 Read Address (Command) Channel

Port Name	Width	Direction	Description												
axi_0_0_arid	7 (AXI switch enabled) 9 (AXI switch not enabled) [9 – ceil(log2(maximum burst length))] (AXI Burst transactions enabled through HBM2 IP GUI).	Input	Read address ID. The ID tag for the read address group of signals. This signal is 7-bits wide when the soft 4x4 AXI Switch is enabled and 9-bits wide when the soft AXI Switch is not enabled.s. When you enable the soft AXI Switch, this signal is 7-bits wide. When the soft 4x4 AXI switch is not enabled, the signal width is affected by the AXI burst transaction feature and the maximum burst length set through the HBM2 IP parameter editor. When the AXI burst transactions are enabled, the width is reduced to [9 bits – ceil(log2(maximum burst length))]. When AXI Burst transactions are not enabled, the width is 9 bits.												
axi_0_0_araddr	28/29 (AXI switch not enabled) 30/31 (AXI switch enabled)	Input	Read address. The address of the first transfer in a read burst transaction. This address bus is 28-bits wide for a 4 GB device and 29-bits wide for an 8 GB device. When you enable the soft AXI switch, the higher order 2-bits provide the slave address.												
axi_0_0_arlen	8	Input	Burst Length. The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address. Beginning in the Intel Quartus Prime software version 20.3, for the <i>Burst Length 4</i> mode, more than 2 burst transactions up to a maximum value of 256 at the AXI Interface is supported. To use this feature, you must select Enable AXI Burst length of more than 2 and select a maximum burst length value in the HBM2 IP parameter editor. If this feature is not selected, then the following values are supported. <table><tr><th>Value</th><th>Max Burst Length</th><th>Mode</th></tr><tr><td>0b00000000 – 0b1111_1111</td><td>1-256</td><td>BL4 – Burst mode enabled (from Quartus 20.3) Only BL4 mode is supported in Burst mode. Pseudo-BL8 mode access is not supported in Burst mode.</td></tr><tr><td>0b00000000</td><td>1</td><td>BL4 – non burst mode</td></tr><tr><td>0b00000001</td><td>2</td><td>Pseudo BL8</td></tr></table>	Value	Max Burst Length	Mode	0b00000000 – 0b1111_1111	1-256	BL4 – Burst mode enabled (from Quartus 20.3) Only BL4 mode is supported in Burst mode. Pseudo-BL8 mode access is not supported in Burst mode.	0b00000000	1	BL4 – non burst mode	0b00000001	2	Pseudo BL8
Value	Max Burst Length	Mode													
0b00000000 – 0b1111_1111	1-256	BL4 – Burst mode enabled (from Quartus 20.3) Only BL4 mode is supported in Burst mode. Pseudo-BL8 mode access is not supported in Burst mode.													
0b00000000	1	BL4 – non burst mode													
0b00000001	2	Pseudo BL8													
axi_0_0_arsize	3	Input	Burst Size. This signal indicates the size of each transfer in the burst. <table><tr><th>Value</th><th>Burst Size (Bytes)</th></tr><tr><td>0b101</td><td>32</td></tr></table>	Value	Burst Size (Bytes)	0b101	32								
Value	Burst Size (Bytes)														
0b101	32														
continued...															

Port Name	Width	Direction	Description				
			The HBM2 controller supports only 256-bits, or 32 Bytes, of data transfers at the AXI Interface per AXI clock cycle. The HBM2 controller sets the value of axi_arsize and ignores any non-supported value driven through the axi_arsize port.				
axi_0_0_arburst	2	Input	The burst type and the size information, determined how the address for each transfer within the burst is calculated.				
			<table><tr><th>Value</th><th>Burst Type</th></tr><tr><td>2'b01</td><td>INCR</td></tr></table>	Value	Burst Type	2'b01	INCR
			Value	Burst Type			
			2'b01	INCR			
Only INCR is supported. The HBM2 controller sets the value of axi_arburst and ignores any non-supported value driven through the axi_0_0_arburst port.							
axi_0_0_arprot	3	Input	Protection Type. [Reserved for Future Use] Indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access. 3'b000 = No protection				
axi_0_0_arqos	4	Input	Quality of Service. The Quality of Service identifier sent for each write transaction. 4'b1111 = High priority 4'b0000 = Normal priority				
axi_0_0_aruser	1		User Signal for auto-precharge. 1'b0 = No auto-precharge 1'b1 = Auto-precharge				
axi_0_0_arvalid	1	Input	Read address valid. Indicates that the channel signals valid read address and control information.				
axi_0_0_arready	1	Output	Read address ready. Indicates that the slave is ready to accept an address and associated control signals.				

Table 26. User Port 0's Read Data Channel

Port Name	Width	Direction	Description
axi_0_0_rid	ARID_WIDTH	Output	Read ID tag. The ID tag for the read data group of signals generated by the slave.
axi_0_0_rdata	256	Output	Read data.
axi_extra_0_0_ruser_data	32	Output	Extra Read Data (AXI RUSER port). Carries the extra read data when the data width of 288 is chosen in the HBM2 IP GUI. This bus can be left unconnected when a 256 Data option is chosen in the HBM2 IP GUI.
axi_extra_0_0_ruser_err_dbe	1	Output	Double-Bit-Error (AXI RUSER port). Carries DBE information. 1'b1 indicates error.
axi_0_0_rresp	2	Output	Read response. Indicates the status of the read transfer: 2'b00 = OKAY
continued...			

Port Name	Width	Direction	Description
axi_0_0_rlast	1	Output	Read last. Indicates the last transfer in a read burst.
axi_0_0_rvalid	1	Output	Read valid. Indicates that the channel is signaling the required read data. All AXI Read data Channel output signals that output from the HBM2 Controller are provided aligned to the axi_0_0_rvalid signal.
axi_0_0_rready	1	Input	Read ready. Indicates that the master can accept the read data and response information.

Related Information

[High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP Design Example](#)

6.2.7. Sideband APB Interface

The sideband APB interface allows user logic to issue refresh commands and also provides access to the controller status signals. Each HBM2 channel has one APB Interface.

Table 27. APB Interface Signals

Port Name	Width	Direction	Description
ur_paddr	16	Input	APB address bus. You can use the APB address bus to access the MMR register space, to issue specific user-requested commands.
ur_psel	1	Input	Select. The user interface generates this signal to indicate that the channel APB interface is selected and that a data transfer is required. There is a PSEL signal for each HBM2 channel APB interface and this signal can be tied HIGH.
ur_penable	1	Input	Enable. This signal indicates the start of an APB transfer.
ur_pwrite	1	Input	Write/Read access. When this signal is HIGH, it indicates an APB write access. When this signal is LOW, it indicates an APB read access.
ur_pwdata	16	Input	Write data. This signal is driven by user logic during write cycles when PWRITE is HIGH.
ur_pstrb	2	Input	Write strobes (byte enables). This signal indicates which byte lanes to update during a write transfer. There is one write strobe for each eight bits of
continued...			

Port Name	Width	Direction	Description
			the write data bus. Write transfers to the HBM2 controller require both the byte enables to be active and hence must be driven to 2'b11. Write strobes must not be active during a read transfer.
ur_prrdy	1	Output	Ready. This signal indicates the completion of a write or read transaction.
ur_prdata	16	Output	Read data. The read data bus provides useful HBM2 controller information and status signals.

6.2.8. Avalon Memory-Mapped (AVMM) Interface Signals

The following AVMM interface signals are provided per HBM2 Pseudo Channel.

Table 28. AVMM Interface Signals

Port Name	Direction	Width	Description
ctrl_amm_0_0_waitrequest_n	Output	1	Asserts when HBM is busy.
ctrl_amm_0_0_read	Input	1	Read request.
ctrl_amm_0_0_write	Input	1	Write request.
ctrl_amm_0_0_address	Input	28/29	Write or read address, 28-bits wide for 4G device, 29-bits wide for 8-G device.
ctrl_amm_0_0_readdata	Output	256	Read data.
ctrl_amm_0_0_writedata	Input	256	Write data.
ctrl_amm_0_0_burstcount	Input	7	AVMM burst count, set to 7'h1 for BL4, 7'h2 for burst length 8.
ctrl_amm_0_0_byteenable	Input	32	Byte-enable for write data.
ctrl_amm_0_0_readdatavalid	Output	1	Asserts when read data is valid.
ctrl_ecc_readdataerror_0_0	Output	1	Asserts high by the controller ECC logic to indicate that the read data has an uncorrectable error.
ctrl_auto_precharge_0_0	Input	1	Available when the Enable Auto Precharge Control option is selected in Controller Configuration. When asserted high along with a read or write request to the memory controller, indicates that auto-precharge is enabled.
ctrl_user_priority_0_0	Input	1	Available when the Enable Command Priority Control option is selected in Controller Configuration. When asserted high along with a read or write request to the memory controller, indicates that the request is high priority and should be fulfilled before other low priority requests.

For information on using the Avalon memory-mapped interface, refer to *Avalon Interface Specifications*.

Related Information

[Avalon Interface Specifications](#)

6.3. User AXI Interface Timing

This section explains the interface timing details between user logic and the HBM2 controller. User interface signals follow the AXI4 protocol specification while passing data to and from the HBM2 controller.

The AXI interface consists of the following channels:


- Write Address channel – Master (user logic) provides relevant signals to issue a write command to the slave (HBM2 controller).
- Write data channel – Master provides the write data signals corresponding to the write address.
- Write response channel – Slave provides response on the status of the issued write command to the master.
- Read Address channel – Master provides relevant signals to issue a read command to the slave.
- Read data channel – Slave provides read data and read data valid signals corresponding to the read command to the master.

All transactions in the five channels use a handshake mechanism for the master and slave to communicate and transfer information.

Handshake Protocol

All five transaction channels use the same VALID/READY handshake process to transfer address, data, and control information. Both the master and slave can control the rate at which information moves between master and slave. The source generates the VALID signal to indicate availability of the address, data, or control information. The destination generates the READY signal to indicate that it can accept the information. Transfer occurs only when both the VALID and READY signals are HIGH.

Figure 21. AXI Protocol Handshake Process

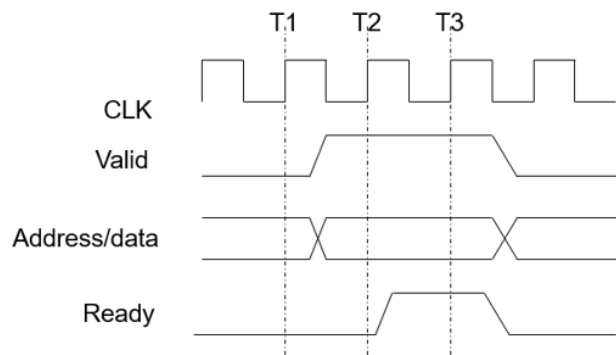

In the figure above, the source presents the address, data or control information after T1 and asserts the VALID signal. The destination asserts the READY signal after T2, and the source must keep its information stable until the transfer occurs at T3, when this assertion occurs. In this example, the source asserts the VALID signal prior to the destination asserting the READY signal. Once the source asserts the VALID signal, it must remain asserted until the handshake occurs, at a rising clock edge at which

VALID and READY are both high. Once the destination asserts READY, it can deassert READY before the source asserts VALID. The destination can assert READY whenever it is ready to accept data, or in response to a VALID assertion from the source.

AXI IDs

In an AXI system with multiple masters, the AXI IDs used for the ordering model include the infrastructure IDs that identify each master uniquely. The ordering model applies independently to each master in the system.

The AXI ordering model also requires that all transactions with the same ID in the same direction must provide their responses in the order in which they are issued. Because the read and write address channels are independent, if an ordering relationship is required between two transactions with the same ID that are in different directions, then a master must wait to receive a response to the first transaction before issuing the second transaction. If a master issues a transaction in one direction before it has received a response to an earlier transaction in the opposite direction, there is no ordering guarantee between the two transactions.

AXI Ordering

The AXI system imposes no ordering restrictions between read and write transactions. Read and write can complete in any order, even if the read address AXI ID (ARID) of a read transaction is the same as the write address AXI ID (AWID) of a write transaction. If a master requires a given relationship between a read transaction and a write transaction, it must ensure that the earlier transaction is completed before it issues a subsequent transaction. A master can consider the earlier transaction complete only when one of the following is true:

- For a read transaction, it receives the last of the read data.
- For a write transaction, it receives the write response.

6.3.1. AXI Write Transaction

AXI Write Address

You can initiate an AXI write transaction by issuing a valid Write Address signal on the AXI Write Address Bus, AWADDR. The user logic should provide a valid write address in the AWADDR bus and assert the AWVALID to indicate that the address is valid. The master can assert the AWVALID signal only when it drives valid address and control information.

When the HBM2 controller is ready to accept a Write command transaction, it asserts the AWREADY signal. Address transfer happens when both AWVALID and AWREADY are asserted.

AWUSER, the user signal for auto precharge, also follows the same timing as AWADDR ; that is, AWUSER must be presented with the same timing of AWADDR.


AXI Write Data

During a write burst, the master asserts the WVALID signal only when it drives valid write data. Once asserted, WVALID must remain asserted until the rising clock edge after the slave asserts WREADY. The master must assert the WLAST signal while it is

driving the final write transfer in the burst. User logic must issue the write data in the same order in which the write addresses are issued. Write data transfer happens when both WVALID and WREADY are HIGH.

The following diagram illustrates a BL8 Write transaction. The master asserts the Write address (WA0) in T1 using transaction ID AWID0, the HBM2 controller asserts the AWREADY when it is ready to accept write requests. The master asserts the Write data in clock cycle T3. Because the controller WREADY is already asserted, the write data is accepted starting cycle T3. The last piece of the burst 8 transaction is asserted in clock cycle T4.

Figure 22. AXI Write Transaction – Using Pseudo-BL8 Memory Write Transaction

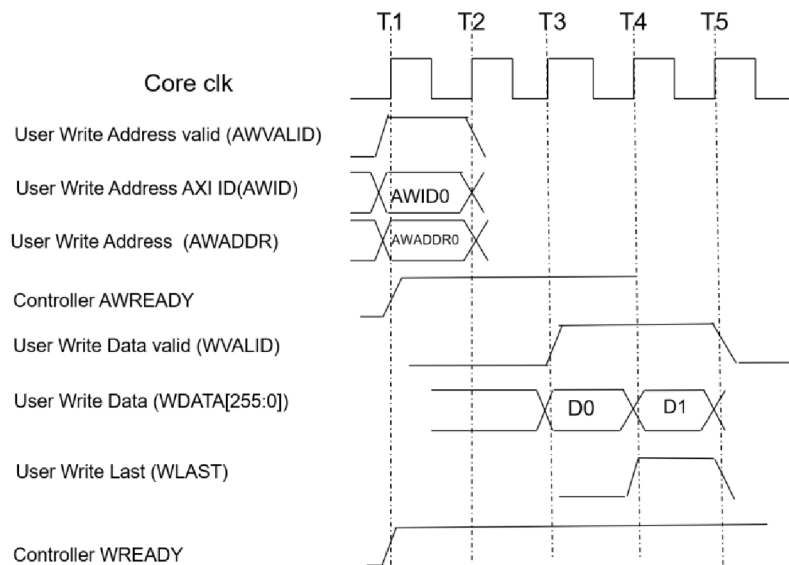

Write Response Channel

The HBM2 controller uses the Write Response channel to respond on successful Write transactions. The slave can assert the BVALID signal only when it drives a valid write response. When asserted, BVALID must remain asserted until the rising clock edge after the master asserts BREADY. The default state of BREADY can be high, but only if the master can always accept a write response in a single cycle.

6.3.2. AXI Read Transaction

Read Address

The user logic asserts the ARVALID signal only when it drives valid Read address, ARADDR, information. Once asserted, ARVALID must remain asserted until the rising clock edge after the HBM2 controller asserts the ARREADY signal. If ARREADY is high, the HBM2 controller accepts a valid address that is presented to it. Once calibration is completed and the HBM2 Controller is ready to accept commands, the ARREADY is


asserted high. ARUSER, the user signal for auto precharge, also follows the same timing as ARADDR, that is, ARUSER must be presented with the same timing of ARADDR.

Read Data Channel

The HBM2 controller asserts the RVALID signal when it drives valid read data to the user logic. The master interface uses the RREADY signal to indicate that it accepts the data. The state of RREADY can be always held high, if the master is always able to accept read data from the HBM2 Controller. The soft logic first in, first out (FIFO) buffers can be instantiated through the HBM2 parameter editor if the HBM2 controller expects to ever deassert the RREADY signal. The HBM2 controller asserts the RLAST signal when it is driving the final read transfer in the burst.

Figure below describes a BL8 Read transaction. The user logic asserts the Read address (RA0) in T1 using transaction ID ARID0, the HBM2 controller ARREADY is already asserted, the READ command is accepted. The controller provides the Read Data back to the user interface after issuing the READ command to the HBM2 DRAM. The HBM2 controller asserts the Read data in clock cycle TB. The Read transaction ID (RID) provided by the HBM2 controller corresponds to the Read Address ID (ARID). The last piece of the burst 8 transaction (RLAST) is asserted in clock cycle Ta+1.

Figure 23. AXI Read Transaction – Using Pseudo-BL8 Memory Read Transaction

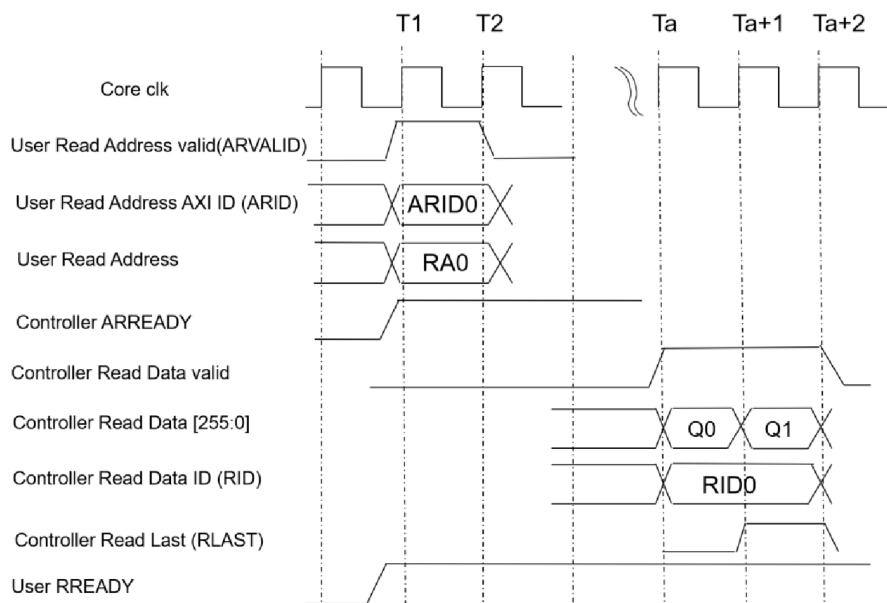

6.3.3. Improving User Logic to HBM2 Controller AXI Interface Timing

The HBM2 IP provides a non-zero cycle latency backpressure feature that can improve core timing and usability of the HBM2 IP from the AXI Write Address, Read Address and Write Data Interface. You can enable this feature through the parameter editor.


Controller Backpressure Latency

The Controller Backpressure Latency feature allows the user interface to interface to the controller READY signals (address write, address read and write channels) with flexibility. When you enable this feature, the READY signals provided by the HBM2 controller are issued early, according to a value that you specify.

By default, this feature is disabled, with a backpressure latency of 0 clock cycles. When you enable this feature, you specify a desired backpressure latency of 1 or 2 clock cycles. The READY signals provided by the HBM2 controller — AXI Write Address Ready (AXI_X_Y_AWREADY), AXI Read Address Ready (AXI_X_Y_ARREADY) and AXI Write Data Ready (AXI_X_Y_WREADY) — are then issued early by the number of cycles that you specified.

When this feature is enabled, set to N cycles (supported clock cycle values for N are 1, 2 when the feature is enabled and 0 when disabled), the READY signals provided by the HBM2 Controller (that is, AXI Write Address Ready (AXI_X_Y_AWREADY), AXI Read Address Ready (AXI_X_Y_ARREADY) and AXI Write Data Ready (AXI_X_Y_WREADY)) are issued N clock cycles early. Controller Backpressure Latency is enabled across all the AXI interfaces for the selected HBM2 interface.

Figure 24. AXI Backpressure Latency Selection

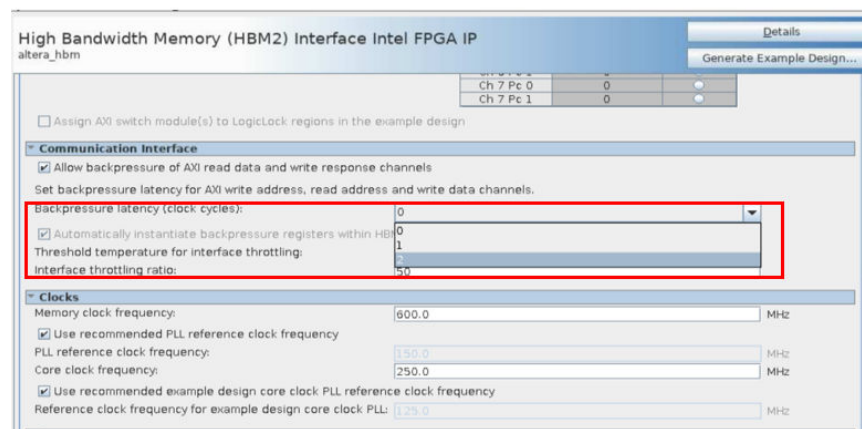

When you choose a non-zero backpressure register value, you can choose to add the register stages in either of the following ways:

- You can allow the HBM2 IP to add the registers in the soft logic adaptor on the AXI interface; this is the default behavior.
- You can handle the AXI interface timing (early READY deassertion) manually, by disabling the **Automatically instantiate back pressure registers within HBM2 IP** option.


Using AXI Backpressure Latency

The following timing diagram illustrates backpressure latency of two clock cycles. This value enables the deassertion of the READY signals to happen two core clock cycles earlier than otherwise. Backpressure latency of 2 clock cycles provides the user

interface two additional clock cycles to respond to the READY deassertion by continuing to provide valid Write Address/Write Data and Read Address for two clock cycles after the READY deassertion.

As illustrated in the diagram below, with backpressure latency of two clock cycles, READY deasserts in clock cycle T4; however, the HBM2 controller continues to accept input in clock cycles T4 and T5 (input D and E) provided that the corresponding VALID signal is active.

Figure 25. Early Controller READY Deassertion Using Backpressure Latency

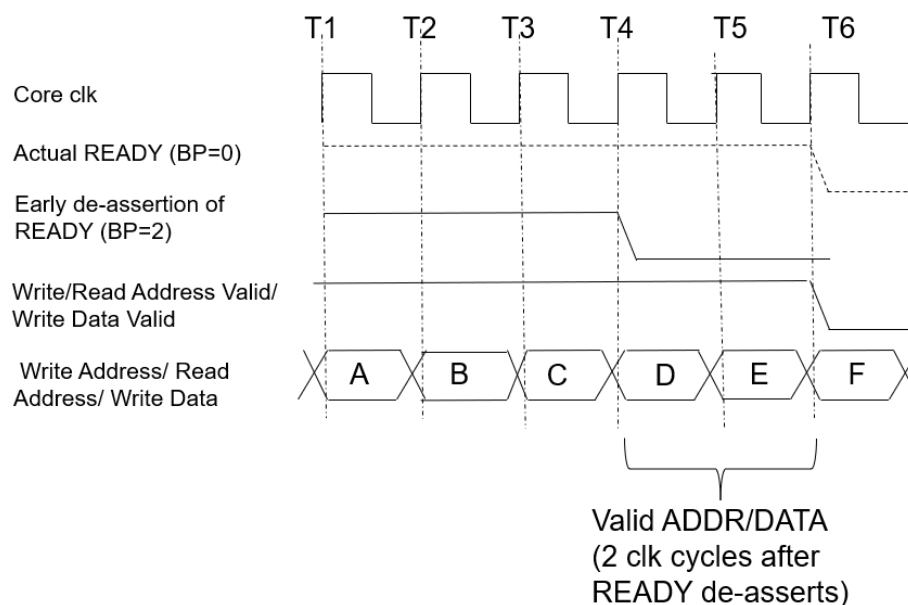

Using the Early READY Signal to Facilitate Timing Closure


When you specify a non-zero AXI backpressure latency of N , you can also add a total of N pipeline registers in the AXI interface outputs and the READY inputs from the HBM2 controller. By ensuring the total pipeline registers added in both Input and Output directions is N , you can ease timing closure. You can enable the HBM2 IP to generate these registers from the HBM2 IP parameter editor.

Beginning in the Intel Quartus Prime software version 19.4, the HBM2 IP adds the following registers based on the **Backpressure latency** setting; it is no longer necessary to manually insert the registers.

- When **Backpressure latency** is set to 1, the controller deasserts the READY signal one clock cycle early. A single register stage is added in signals in the AXI Interface Valid path from the core to the HBM2 controller.
- When **Backpressure latency** is set to 2, the controller deasserts the READY signal two clock cycles early. The HBM2 IP adds the following registers:
 - One register stage is added on the AXI Interface Valid and all related AXI interface signals from the user logic.
 - One register stage is added on READY signals (AWREADY, WREADY, ARREADY) from the controller to the core.

The following figure illustrates the backpressure register placement in the data path between the user core logic and the AXI soft logic adaptor to facilitate timing closure.

Figure 26. Non-zero Latency Backpressure Implementation

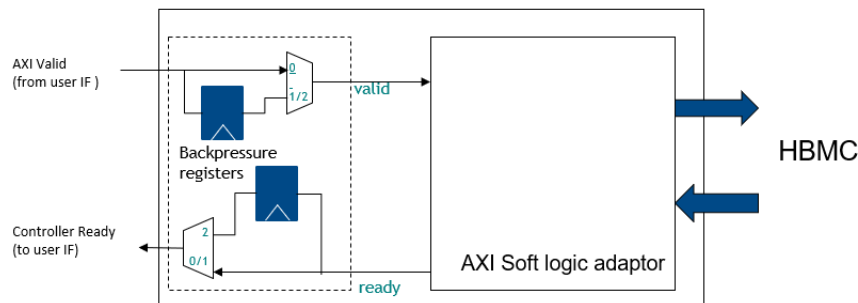

Write Response and Read Data Interface Timing

When you enable the read and write response backpressure feature, Write response and Read data interface timing must still be treated at zero cycle latency. The user-interface-issued BREADY and RREADY must be driven HIGH to ensure the controller can provide the outputs when applicable.

When you disable the read and write response backpressure feature, you can add pipeline registers to read and write response outputs, because BREADY and RREADY are always HIGH, indicating that the user interface is ready to accept response at any time.

6.4. User APB Interface Timing

The Advanced Peripheral Bus (APB) interface lets you issue user-controlled refresh signals and access the HBM2 controller's Control and Status registers.

Unlike the AXI4 interface which is used for high-bandwidth, main band operations and where each HBM pseudo-channel is mapped to its own dedicated AXI4 port, the APB interface is intended for relatively low-bandwidth sideband operations. (For example, to provide an alternative means of controlling refreshes without colliding with the main

traffic stream, and for issuing custom commands useful for debugging.) Another difference is that the APB bus interface commands can target one or both Pseudo Channels at the same time, as there is one APB interface per HBM2 channel or two HBM2 Pseudo Channels.

6.4.1. Advanced Peripheral Bus Protocol

The Advanced Peripheral Bus (APB) is part of the Advanced Microcontroller Bus Architecture (AMBA) protocol family. It defines a low-cost interface that is optimized for minimal power consumption and reduced interface complexity.


6.4.2. APB Interface Timing

Write Access

Referring to the following diagram, write transactions to the APB interface follow these steps:

1. At T1, a write transfer starts with address ADDR1, write data DATA1, write signal PWRITE and select signal PSEL registered at the rising edge of the core clock. This is the setup phase of the write transfer.
2. At T2, PENABLE is registered at the rising edge of the core clock and held HIGH until the HBM2 controller asserts PREADY HIGH. The values of PADDR, PSEL, PENABLE, PWDATA, PSTRB and PWRITE must remain unchanged while PREADY remains LOW.
3. At Tx, when PREADY goes HIGH, the write transaction completes at the next rising edge of the core clock. This indicates the end of the Write Access Phase. PREADY stays HIGH only for one clock cycle.
4. PENABLE is deasserted at the end of the transfer. The select signal PSEL, is also deasserted unless the transfer is to be followed immediately by another transfer.

Figure 27. APB Write Transaction

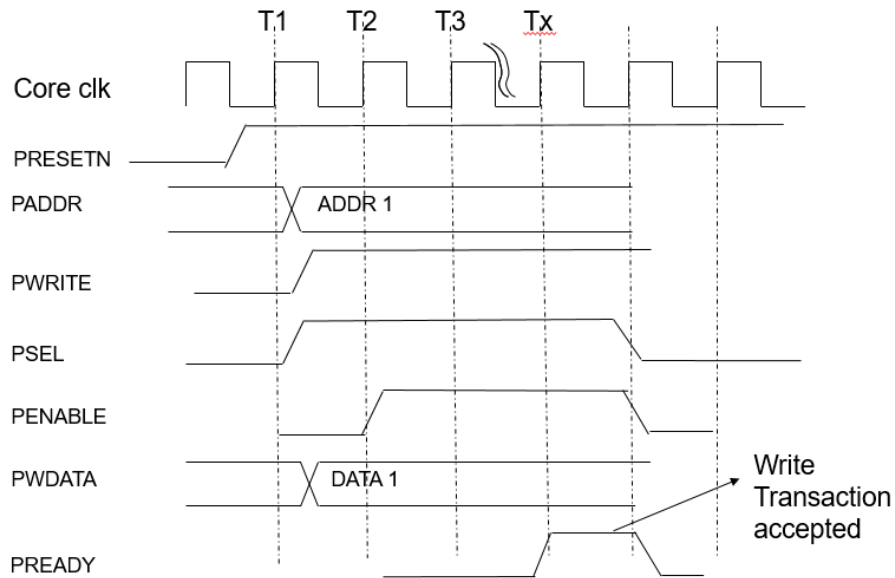


Read Access

Referring to the following diagram, read transactions to the APB interface follow these steps:

1. At T1, a read transfer starts with address ADDR1, PWRITE asserted LOW and select signal PSEL registered at the rising edge of the core clock. This is the setup phase of the write transfer.
2. At T2, PENABLE is registered at the rising edge of the core clock and held HIGH until the HBM2 controller asserts PREADY HIGH. The values of PADDR, PSEL, PENABLE and PWRITE must remain unchanged while PREADY remains LOW.
3. At Tx, when PREADY goes HIGH, Read Data is available on the PRDATA bus. PREADY stays HIGH only for one clock cycle.
4. PENABLE is deasserted at the end of the transfer. The select signal PSEL, is also deasserted unless the transfer is to be followed immediately by another transfer.

Figure 28. APB Read Transaction

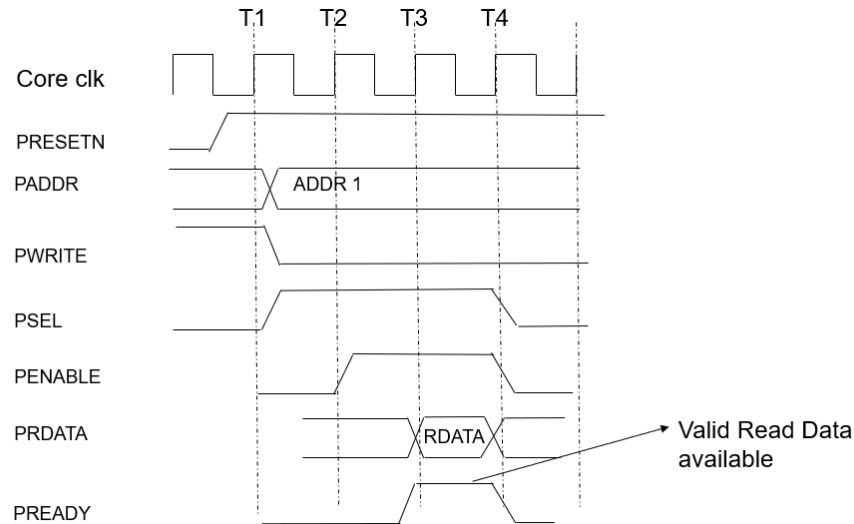

6.5. User-controlled Accesses to the HBM2 Controller

You can use the APB interface in applications when you need to directly control the HBM2 Refresh commands and access HBM2 Controller Status registers.

For information on using the APB interface signals, refer to [User APB Interface Timing](#).

Each physical HBM2 channel is mapped to its own sideband register space. The APB address accesses are byte-address based. If a write is issued to an unaligned address, it is ignored (that is, read returns 0 and write has no effect.) The sideband register map is shared between the two HBM2 Pseudo Channels and the allocation of addresses is organized as follows:

- Registers common to both Pseudo-Channels:
 - Address map – 16'h0000-16'h00FF.
 - Includes Refresh (per-bank, all banks), Self-Refresh, Temperature Readout and Power down status.
- Note:* The register bit descriptions of Pseudo Channel 0 (PC0) and Pseudo Channel 1 (PC1) in the registers common to both Pseudo Channels apply to the bottom HBM2 interface. For the top HBM2 interface, the PC0 and PC1 register bit definitions are swapped.
- Register Map for individual Pseudo Channels:
 - Address map – Pseudo Channel 0 (16'h0100- 16'h01FF) and Pseudo Channel 1 (0x200-0x2FF).
 - This map is used to access ECC and Interrupt Status Registers for each Pseudo Channel.

Note: The register address maps for individual Pseudo Channel 0 (PC0) and Pseudo Channel 1 (PC1) as shown above apply to the bottom HBM2 interface. For the top HBM2 interface, the PC0 and PC1 register address maps are swapped.

6.5.1. User-controlled Refreshes

By default, the HBM2 parameter editor settings allow the HBM2 controller to schedule Refresh commands to the HBM2 DRAM. However, user logic can also issue Refresh commands to memory.

If you want to allow user logic to issue Refresh requests, you must specify so in the Controller Settings of the parameter editor, as follows:

Change the **Controller Settings** ► **REFRESH MODE** value from **Controller Refresh All** to **User Refresh All** or **User Refresh Per-bank**.

Each APB interface corresponds to one HBM2 channel, therefore requests must be addressed to either of the two Pseudo Channels, one Pseudo Channel at a time.

The timing of the refresh interval is specific to the HBM2 DRAM timing. The required refresh rate is provided by the HBM2 DRAM through the TEMP[2:0] vector, which can be read through the APB interface.

Table 30. DRAM Refresh Timing

TEMP[2:0]	Refresh Rate
000	4x t_{REFI}
001	2x t_{REFI}
011	1x t_{REFI}
010	0.5x t_{REFI}
110	0.25x t_{REFI}
111	TBD
101	TBD
100	TBD

Refresh command options available from user logic are as follows:

- User refresh commands issued on a per bank basis. This corresponds to banks corresponding to the HBM2 Pseudo Channel.
- User refresh commands to all banks. This corresponds to all banks corresponding to the HBM2 Pseudo Channel.
- Self-refresh command.

All the user refresh requests follow the APB interface protocol. User logic issues the Refresh request and waits for the acknowledgement signal from the HBM2 controller before issuing another Refresh request.

User Refresh Per Bank

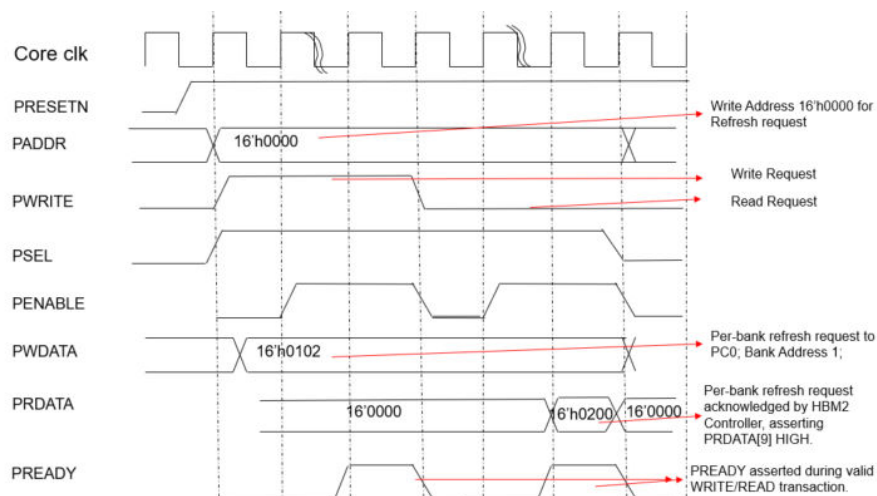
User refresh requests per-bank consist of the following commands issued to the APB Interface

Table 31. APB Write Data Definition for User Refresh Request Per Bank

Write Data Definition for Refresh Request	Description
[0]	Pseudo Channel Number. Set the following values to indicate the Pseudo channel number: 0 - Pseudo Channel 0 1 - Pseudo Channel 1
[5:1]	Bank number for per-bank refresh. Bit[5] - Stack ID in 8GB configuration. Bit[4:1] - 4-bit Bank Address.
[6]	Select Per bank or all bank refresh. Set to 1'b0 for per bank refresh.
[7]	Reserved. Set to 1'b0.
[8]	User initiated refresh request. Set this bit to 1'b1 to initiate refresh command.
[12:10]	Number of bursts for per bank refresh bursting feature. Burst = value[1:0] + 1. The per-bank refresh bursting is a feature supported by the HBM2 controller where the user interface can request refresh commands to be issued to more than one HBM2 DRAM bank.
[15:13]	Increment value for per bank refresh bursting feature; rolls over once it reached the max bank value. Increment = value[2:0] + 1, where <i>value</i> refers to the current bank address when the write command is issued. This becomes the starting bank address. <i>Note:</i> The ratio of maximum increment value to total number of banks per Pseudo Channel divided by 4. (For example, a 4H device has a maximum value of 16/4=4.)

To issue user refresh commands on a per-bank basis, follow these steps:

- Write to address 16'h0000 with corresponding Write Data.
 - For example, Write data of 16'b0000_0001_0000_0010 (Pseudo-channel 0; bank address is located in Bits[5:1] ; Bit[6] set to 0 for per-bank refresh; Bit [8] set to User initiated Refresh Request).
 - To issue multiple burst of per-bank refresh, set corresponding bits in PWDATA[12:10] and PWDATA[15:13] with desired settings.
- Read from address 16'h0000 for Refresh Request Acknowledge.
- Wait till PRDATA[9] returns 1'b1 to indicate refresh request is accepted by controller. You can ignore the values of all the other bits of PRDATA. The following figure explains the timing of per-bank refresh request to the APB Interface.

Figure 29. Timing of APB Refresh Request Per Bank


Individual requests to different Pseudo Channels must be issued serially. You must wait for the HBM2 controller to issue the Acknowledge signal before issuing another Refresh request.

User Refresh to All Banks

Table 32. APB Write Data Definition for User Refresh Request to All Banks

Write Data Bit Definition for Refresh Request	Description
[0]	Pseudo Channel Number. Set a value of 0 for Pseudo Channel 0, or a value of 1 for Pseudo Channel 1.
[5:1]	Bank number for per-bank refresh. Ignored for All bank refresh.
[6]	Select Per bank or all bank refresh. Set to 1'b1 - all banks refresh.
[7]	Reserved. Set to 1'b0.
[8]	User initiated refresh request. Set this bit to 1'b1 to initiate refresh command.
[15:9]	Ignored.


Table 33. APB Read Data Definition for User Refresh Request

Read Data Bit Definition for Refresh Request	Description
[8:0]	Reserved.
[9]	HBM2 controller-issued Refresh Request Acknowledge. 1'b1 – Read data of 1'b1 indicates that the HBM2 controller Acknowledge of Refresh command. - Once a refresh request has been issued, you must wait for the Acknowledge bit to be asserted before issuing further requests.
[15:10]	Reserved.

To issue user refresh commands to all banks, follow these steps:

1. Write to address 16'h0000 with corresponding Write Data.
 - For example, Write data of 16'b0000_0001_0100_0010 (Pseudo Channel 0; bank address is located in Bits[5:1] ; Bit[6] set to 1 for all-banks refresh; Bit [8] set to User initiated Refresh Request).
2. Read to Address 16'h0000 for Refresh Request Acknowledge.
3. Wait till PRDATA[9] returns a value of 1'b1 to indicate User Refresh request is accepted by the controller. The following figure explains the APB interface timing for refresh request to all banks.

Figure 30. Timing of APB Refresh Request to All Banks

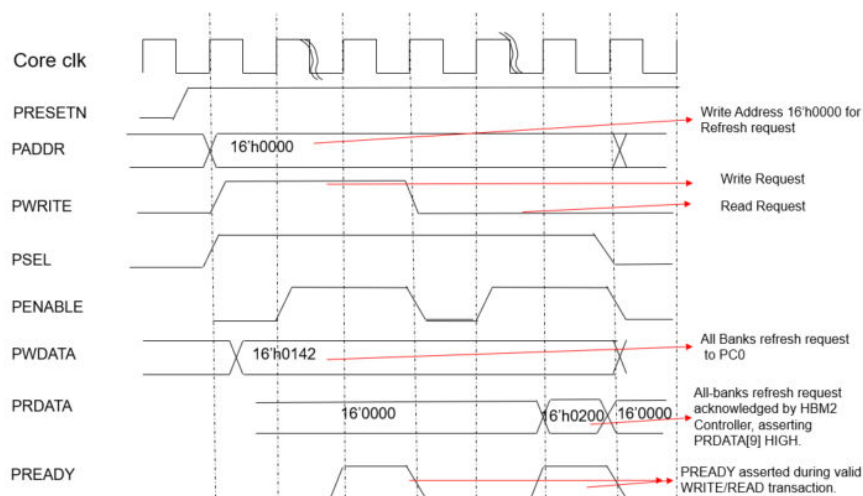

Self Refresh

To enter a Self Refresh state, issue these commands to the APB interface:

1. Write to address 16'h0004 with Write Data(PWDATA) of 16'h0001.
2. Read from address 16'h0004. Wait until Read Data (PRDATA [1]) returns a value of 1'b1 to indicate that the HBM2 controller is in a Self Refresh state.

To exit a Self Refresh state, issue this command to the APB interface:

- Write to address 16'h0004 with Write Data(PWDATA) of 16'h0000 to exit Self-Refresh. Wait for the Self Refresh Acknowledge to be 1'b0 prior to issuing another Self Refresh request.

The write data bus is used to request entry or exit from self refresh. The Read data bus is used to read the self-refresh status of the HBM2 channel. The following tables provide the Write and Read data definitions for accessing self refresh.

Table 34. APB Write Data Bit Definition for Self Refresh

Write Data Bit Definition	Description
[0]	User-initiated Self-Refresh Request. To enter Self Refresh:
<i>continued...</i>	

Write Data Bit Definition	Description
	1'b1: to enter Self Refresh. - When asserted, indicates Self Refresh request. Set this bit to 1'b1 to initiate entry to Self Refresh. To exit Self Refresh: 1'b0: to exit Self Refresh. - Clear this bit to 1'b0 to exit Self Refresh.
[15:1]	Reserved.

Table 35. APB Read Data Bit Definition for Self Refresh

Read Data Bit Definition	Description
[0]	Reserved.
[1]	Self refresh status: 1'b1 – HBM Channel is in Self Refresh. 1'b0 – HBM Channel is not in Self Refresh.
[15:2]	Reserved.

6.5.2. Temperature and Calibration Status Readout

User logic can read the HBM2 TEMP[2:0] signal output value and the CATTRIP signal value from APB address 16'h000C.

Table 36. APB Read Data Temperature and Calibration Status Information

Read Data Bit Definition	Description
[2:0]	TEMP [2:0] value from HBM2 device.
[3]	CATTRIP value from HBM2 device.
[6:4]	Firmware to Controller Temperature Value.
[7]	Reserved.
[8]	1 = calibration in progress. 0 = calibration complete.
[9]	1'b1: Calibration/training successful. 1'b0: Calibration/training failed.
[15:10]	Reserved.

Related Information

[High Bandwidth Memory \(HBM2\) Interface Intel FPGA IP DRAM Temperature Readout on page 87](#)

6.5.3. Controller Idle State Status

User logic can read the HBM2 controller idle status values from APB address 16'h000E.

Table 37. Controller Idle Status Information

Read Data Bit Definition	Description
[0]	Read Command Queue Idle for PC0.
[1]	Read Command Queue Idle for PC1.
[2]	Write Command Queue Idle for PC0.
[3]	Write Command Queue Idle for PC1.
[4]	PC0 Timer Idle.
[5]	PC1 Timer Idle.
[7:6]	Reserved.
[8]	PC0 AXI Read Data Idle.
[9]	PC1 AXI Read Data Idle.
[10]	PC0 AXI Write Data Idle.
[11]	PC1 AXI Write Data Idle.
[15:12]	Reserved.

6.5.4. Power Down Status

To invoke the Power Down mode in the HBM2 controller, enable the Power Down Enable Mode option in the parameter editor when generating the HBM2 IP.

To read the Power Down Enable status, issue a Read command to APB Address 16'h0008. The following table shows the HBM2 Power Down status information provided by APB Read data.

Table 38. APB Power Down Status Information

Read Data Bit Definition	Description
[0]	Power Down status. 1'b1 – HBM Channel is in Power Down mode. 1'b0 – HBM Channel is not in Power Down mode.
[15:1]	Reserved.

6.5.5. ECC Error Status

You can read the status of various registers used by the ECC feature, using the APB interface.

ECC registers provide the following information – and corresponding APB addresses – for Pseudo Channel 0 and Pseudo Channel 1:

- Single-bit error (SBE) counter
- Double-bit error (DBE) counter
- Logical address (AXI address) of the first single-bit error
- Logical address (AXI address) of the first double-bit error

- Read transaction ID (AXI) of the first single-bit error
- Read transaction ID (AXI) of the first double-bit error
- Read Data Parity error counter

The values of the ECC registers are read when the PRREADY output from the HBM2 controller is asserted. When the HBM2 controller is RESET, these register values are reset to zero.

Table 39. ECC Registers

Address	Read Data Bit Location	Description
16'h0120 – PC0 16'h0220 – PC1	[7:0]	Single-Bit-Error Counter. The counter does not overflow when value reaches maximum. Write 0 to clear the counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
	[15:8]	Reserved.
16'h0122 – PC0 16'h0222 – PC1	[7:0]	Double-Bit-Error Counter. The counter does not overflow when value reaches maximum. Write 0 to clear the counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
	[15:8]	Reserved.
16'h0124 – PC0 16'h0224 – PC1	[15:0]	First SBE logical address (lower order). This is the logical address of the first single-bit error, corresponding to the lower 16 bits of the AXI Address bus.
16'h0126 – PC0 16'h0226 – PC1	[15:0]	First SBE logical address (higher order). This is the logical address of the first single-bit error, corresponding to the higher 16 bits of the AXI address bus. The higher order 4 bits in 4GB configuration and higher-order 3 bits in 8GB configuration are padded with zeros.
16'h0128 – PC0 16'h0228 – PC1	[15:0]	First DBE logical address (lower order). This is the logical address of the first double-bit error, corresponding to the lower 16 bits of the AXI address bus.
16'h012A – PC0 16'h022A – PC1	[15:0]	First DBE logical address (higher order). This is the logical address of the first double-bit error, corresponding to the higher 16 bits of the AXI address bus. The higher order 4 bits in 4GB configuration and higher order 3 bits in 8GB configuration are padded with zeros.
16'h012C – PC0 16'h022C – PC1	[8:0]	Read Transaction ID of the first single-bit error.
	[15:9]	Reserved.
continued...		

Address	Read Data Bit Location	Description
16'h012E – PC0 16'h022E – PC1	[8:0]	Read Transaction ID of the first double-bit error.
	[15:9]	Reserved.
16'h0130 – PC0 16'h0230 – PC1	[7:0]	Read Data Parity Error Count. The counter does not overflow when value reaches maximum. Write 0 to clear the counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
	[15:8]	Reserved.

6.5.6. User Interrupt

An interrupt signal occurs when one or more of the Error Status signals are TRUE. You can configure the conditions that help to trigger the interrupt signal.

The various status signals on which you can generate the interrupt include the following:

- Single-bit error (SBE) or double-bit error (DBE) of AXI Read Data or internal RAM used for Write and Read data storage
- Read Data parity error (RDPE) or Write Data parity error (WDPE) of AXI Read Data
- Address Command parity error
- CATTRIP
- Calibration

6.5.6.1. Interrupt Enable and Conditions for Interrupt Generation

If you want interrupts to occur based on certain conditions, you must set the conditions to enable interrupt generation.

To enable interrupt generation, issue a Write command to address location 16'h0100 (for Pseudo Channel 0) and 16'h0200 (for Pseudo Channel 1), with the corresponding Write Data (PWDATA).

- PWDATA[0] – Interrupt enable.
- PWDATA[11:1] - Lists the various status signals that you can use, alone or in combination, to trigger the Interrupt signal.
 - Set the Mask value to 1'b0 to use the corresponding error condition to generate the Interrupt signal.
 - If you set the Mask value to 1'b1, the Interrupt generator ignores that specific error condition. For example, to use the double-bit error condition to generate the Interrupt signal, set PWDATA[2] to 1'b0.

The following table describes the 16-bit Write Data (PWDATA) for setting the Interrupt Enable, and the conditions of the interrupt.

Table 40. Interrupt Conditions

Write Data Bit Definition	Description
[0]	Interrupt Enable: Enables interrupt to the HBM2 controller when the conditions set in PWDATA[11:1] are TRUE. 1 – Enable Interrupt 0 – Disable Interrupt
[1]	SBE Interrupt Mask.
[2]	DBE Interrupt Mask.
[3]	Read DPE Interrupt Mask.
[4]	Write DPE Interrupt Mask.
[5]	Address Command Interrupt Mask.
[6]	CATTRIP Interrupt Mask.
[7]	Calibration Interrupt Mask.
[8]	Write SRAM SBE Interrupt Mask.
[9]	Write SRAM DBE Interrupt Mask.
[10]	Read SRAM SBE Interrupt Mask.
[11]	Read SRAM DBE Interrupt Mask.
[15:12]	Reserved.

6.5.6.2. Interrupt Status

You can read the interrupt status from address 16'h0102 for Pseudo Channel 0 and 16'h0202 for Pseudo Channel 1. The interrupt signal is cleared when the individual error status signals that contribute to the interrupt are cleared and the corresponding error counters are cleared.

Table 41. Read Data Definition for Interrupt Status

Read Data Bit Definition	Description
[0]	Interrupt asserted when one of the following events occurs: - Single-bit error - Double-bit error - Read Data parity error - Write Data parity error - Address Command parity error - CATTRIP assertion - Calibration status failure
[15:1]	Reserved.

6.5.6.3. Error Valid Status

You can read individual status signals from address 16'h0104 for Pseudo Channel 0 and 16'h0204 for Pseudo Channel 1. You can also write to these addresses to clear the status signals.

The above addresses provide the actual status signal for the following error conditions:

- Single bit/Double bit error value from the HBM2 memory
- Read data/Write Data parity error value from the HBM2 memory.
- Address/Command parity value.
- CATTRIP signal.
- Calibration error signal.
- Single-bit error and double-bit error from internal RAM used for Write and Read data storage.

To clear the individual Error Valid Signals, write 1'b1 to clear the Valid signal and the corresponding Error Counter.

Table 42. Read Data Definition for Error Valid Status

Read Data Bit Definition	Definition
[0]	DRAM Single-Bit-Error Valid. Asserted when single-bit error occurs and stays high until cleared. Write 1'b1 to clear. You can retrieve the number of single-bit errors from the single-bit error counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
[1]	DRAM Double-Bit-Error Valid. Asserted when double-bit error occurs and stays high until cleared. Write 1'b1 to clear. You can retrieve the number of double-bit errors from the double-bit error counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
[2]	Read Data Parity Error Valid. Asserted when a Read Data parity error occurs and stays high until cleared. Write 1'b1 to clear. You can retrieve the number of Read Data parity errors from the Read Data parity error counter. Clearing the counter does not clear this valid bit or vice-versa. You must issue a separate write command to valid and counter to clear both registers.
[3]	Write Data Parity Error Valid. Asserted when a Write Data parity error occurs and stays high until cleared. Write 1'b1 to clear.
[4]	Address Command Parity Error Valid. Asserted when an Address Command parity error occurs and stays high until cleared. Write 1'b1 to clear.
[5]	Cat Trip Error Valid. Asserted when a Cat Trip error occurs and stays high until cleared. Write 1'b1 to clear.
[6]	Calibration Error Valid. Asserted when a calibration error occurs and stays high until cleared. Write 1'b1 to clear.
[7]	Write SRAM Single-Bit Error Valid. Asserted when a Write SRAM Single-Bit error occurs and stays high until cleared. Write 1'b1 to clear.
[8]	Write SRAM Double-Bit Error Valid. Asserted when a Write SRAM Double-Bit error occurs and stays high until cleared. Write 1'b1 to clear.
[9]	Read SRAM Single-Bit Error Valid. Asserted when a Read SRAM Single-Bit error occurs and stays high until cleared. Write 1'b1 to clear.
[10]	Read SRAM Double-Bit Error Valid. Asserted when a Read SRAM Double-Bit error occurs and stays high until cleared. Write 1'b1 to clear.
[15:11]	Reserved.

6.5.7. ECC Error Correction and Detection

The HBM2 controller supports single-bit error correction and double-bit error detection. It does not support correction or detection of more than two error bits.

The ECC encoder and decoder blocks reside inside the UIB subsystem and help to efficiently perform the ECC logic without additional latency. The ECC logic performs the following operations:

- When a single-bit error is detected, the error is corrected and passed to the AXI Interface.
- When a double-bit error is detected, a signal is asserted to indicate the error and is passed through the `axi_ruser_err_dbe` signal in the AXI Read Data Channel Interface.
- Error information is available through the APB interface.

You can use the HBM2 controller's Read-Modify-Write feature to correct a single or double-bit error detected in the HBM2 DRAM. A single-bit error or a double-bit error corresponds to an error detected on every 64-bit HBM2 DQ bus; consequently, multiple errors could be detected:

- Multiple single-bit errors are treated as a single single-bit error, and the single-bit error count increases by 1.
- Multiple double-bit errors are treated as a single double-bit error, and the double-bit error count increases by 1.
- A single-bit error and a double-bit error are treated as a double-bit error, because the double-bit error has higher priority. The double-bit error count increases by 1 and the single-bit error count does not change.

Read-Modify-Write

The Read-Modify-Write feature reads from the HBM2 DRAM, modifies the data, and writes back to the HBM2 memory. The HBM2 controller supports the following functions as part of the Read-Modify-Write process:

- Dummy Writes – Corrects HBM2 DRAM data detected to have a single-bit error.
- Partial Writes – Issues partial writes to HBM2 DRAM where not all bytes are enabled.

Dummy Writes

When the ECC decoder logic detects and corrects a single-bit error on the Read data, user logic may correct the corresponding bit in the HBM2 DRAM, using the Dummy Write process. A Dummy Write issues a Read from the memory location and writes the corrected Read data back to the corresponding memory location.

To request a Dummy Write, issue a regular AXI Write transaction with all byte enables deasserted, to the corresponding address.

The HBM2 controller handles the Read-Modify-Write operation internally and corrects the DRAM data without additional user intervention. The Read-Modify-Write operation follows this process:

- The AXI Adaptor within the UIB subsystem decodes all the byte enables deasserted and identifies the Read-Modify-Write request.
- The HBM2 controller then issues a Read to the corresponding address in the HBM2 DRAM.
- The ECC Decoded Read data is used as Write Data – this is the corrected Read data if a single-bit error was detected.
- The HBM2 Controller issues an HBM2 Write transaction and later writes the decoded Read data into the memory.

Partial Writes

The HBM2 controller's Partial Write capability allows the user logic to issue a partial write to the HBM2 DRAM, when not all the byte enables are asserted and only selected DRAM bytes are written to. Partial writes are also supported for Pseudo Channel data widths of 256 and 288 bits when the controller tab parameters **Write Data Mask Enable** and **Memory Channel ECC Generation and Checking/Correction** are not selected. The Partial Write feature first issues a Read from the memory location, and then merges correct Read data with the correct Write data, to be written back to the memory location. (This process is necessary because Data Mask signals are not available to user logic when ECC is enabled.) The HBM2 controller intelligently supports Partial Writes using the AXI4 interface.

To request a Partial Write, you issue a regular AXI Write transaction, with not all byte enables asserted (that is, not a full Write), and with corresponding Write data to be written to the HBM2 DRAM.

The HBM2 controller handles the issuance of the corresponding memory transactions necessary to complete the Partial Write:


- The AXI Adaptor within the UIB Subsystem decodes the byte enables and identifies the Partial Write request.
- The HBM2 controller then issues a Read to the corresponding address in the HBM2 DRAM.
- The ECC Decoded Read data is merged with the requested Write data based on the byte enables.
- The HBM2 controller issues an HBM2 Write transaction and later writes the merged data into the memory with the updated ECC code.

6.6. Soft AXI Switch

Beginning with the Intel Quartus Prime software version 20.1, the HBM2 IP supports a soft 4x4 AXI switch that provides each AXI master the ability to access the memory space of its corresponding two HBM2 Channels or four HBM2 Pseudo Channels (one HBM2 Channel = two HBM2 Pseudo Channels) in the HBM2 DRAM.

The following figure shows the switch implementation when enabled for HBM2 Channels 0 and 1, through the HBM2 IP GUI. Four AXI Switches can be implemented per HBM2 interface.

Figure 31. 4x4 HBM2 AXI Switch

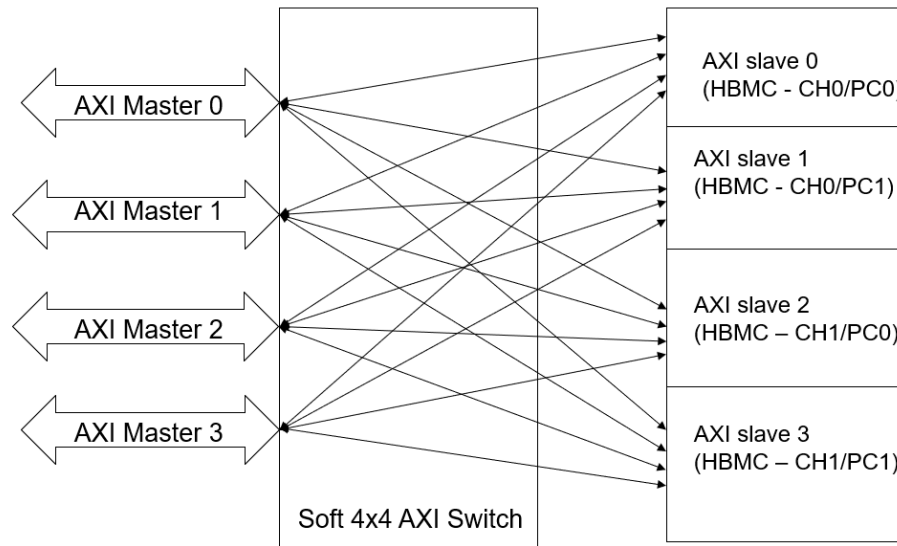

6.6.1. AXI Switch Selection in HBM2 IP Catalog GUI

One AXI switch component/module is attached to two HBM2 channels; therefore, for each HBM2 channel pair (for example, CH0 and CH1), there is a parameter to enable the AXI switch for that HBM2 channel pair. Equivalent parameters are available to enable an AXI switch for subsequent channel pairs—CH2 and CH3, CH4 and CH5, CH6 and CH7, respectively.

The parameters to enable the AXI switches are editable only when both channels of a channel pair are enabled, as shown in the figure below. When you enable the AXI switch, all four of the corresponding controllers should use the same AXI Data Width and Enable Reorder Buffer options.

Figure 32. AXI Switch Selection

HBM Interface

Select the HBM channels to enable. Each channel consists of two pseudo-channels.

Channel 0 and 1 Interface Settings

☒ Enable channel 0 interface Interface protocol: **AXI4** ☐ Enable AXI Switch for channel 0 and 1

Master	Transaction Count	Honor
Ch 0 Pc 0	0	☐
Ch 0 Pc 1	0	☐
Ch 1 Pc 0	0	☐
Ch 1 Pc 1	0	☐

Channel 2 and 3 Interface Settings

☐ Enable channel 2 interface Interface protocol: **AXI4** ☐ Enable AXI Switch for channel 2 and 3

Master	Transaction Count	Honor
Ch 2 Pc 0	0	☐
Ch 2 Pc 1	0	☐
Ch 3 Pc 0	0	☐
Ch 3 Pc 1	0	☐

Channel 4 and 5 Interface Settings

☐ Enable channel 4 interface Interface protocol: **AXI4** ☐ Enable AXI Switch for channel 4 and 5

Master	Transaction Count	Honor
Ch 4 Pc 0	0	☐
Ch 4 Pc 1	0	☐
Ch 5 Pc 0	0	☐
Ch 5 Pc 1	0	☐

Channel 6 and 7 Interface Settings

☐ Enable channel 6 interface Interface protocol: **AXI4** ☐ Enable AXI Switch for channel 6 and 7

Master	Transaction Count	Honor
Ch 6 Pc 0	0	☐
Ch 6 Pc 1	0	☐
Ch 7 Pc 0	0	☐
Ch 7 Pc 1	0	☐

☐ Assign AXI switch module(s) to LogicLock regions in the example design

If you enable multiple HBM channels, you can choose to enable the AXI switch for certain channel pairs, and leave the rest as direct AXI connection to AXI master (user logic side). For example, you can enable the AXI switch module for CH0 and CH1, then have direct AXI connection to CH2 and CH3, with that AXI switch disabled.

When you enable the AXI switch, you can edit the master's arbitration scheme parameter table. By default, the switch uses round-robin arbitration (no honor selected, and transaction count 0).

The soft 4×4 AXI switch provides the following features:

- Provides each AXI master access to memory space of four HBM2 Pseudo Channels (two HBM2 Channels).
- The switch provides access only in the 4×4 configuration. That is, you cannot modify this switch configuration to 2×2 or extended to 8×8, and so forth.
- The switch supports 4×4 access across the AXI Interface signals, including AXI Write address, AXI Write Data, AXI Write response, AXI Read Address and AXI Read data. The switch does not provide the switch capability on the APB side band interface.
- Switch access is as follows:
 - Any AXI master can send commands and receive responses from any slave channel.
 - Switching from one slave to another slave is treated as a non-posted transaction — that is, the master waits for the slave to provide all the responses back, before switching to the next slave.
- The AXI ID usage when the AXI Switch is enabled is as follows:
 - In the AXI switch-enabled mode, the higher-order two bits of the 9-bit AXI ID (awid/arid) are not available and only 7 bits (128 AXI IDs) are available to use as AXI IDs (awid/arid).
 - When you do not enable the AXI switch, 9 bits are available to use as AXI IDs.
 - The AXI Switch user interface expects that corresponding write data is available prior to accepting the next write command. Hence, you may see discontinuity in write command ready signal (awready) even if the slaves are ready to accept commands. This does not cause any reduction in efficiency. User logic must buffer the write commands if write commands are being sent in a stream.

- AXI Address usage when the AXI Switch is enabled:
 - AXI address bus (awaddr/araddr) is 31 bits wide when the 8GB HBM2 is used and 30 bits wide when the 4GB HBM2 is used.
 - In comparison, when the AXI switch is not enabled, the AXI addr bus is 29 bits wide when the 8GB HBM2 is used and 28 bits wide when the 4GB HBM2 is used.
 - The higher-order 2 bits of the AXI address bus are used to identify the slave for the corresponding AXI request.

When you generate the HBM2 IP with the AXI Switch option enabled, you must drive the following values on the higher-order bits, based on the slave addressed. The same values follow for all the HBM2 channel pairs, for example, HBM2 Channels 2 and 3, 4 and 5 and 6 and 7.

Table 43. AXI Address Higher-Order Bits and Corresponding Slave Addresses

AXI Address (Higher-Order 2 bits)	Slave Address
00	HBM2 Channel 0/Pseudo Channel 0
01	HBM2 Channel 0/Pseudo Channel 1
10	HBM2 Channel 1/Pseudo Channel 0
11	HBM2 Channel 1/Pseudo Channel 1

Note: The AXI switch does not have the option to restrict access to a specific slave. It is the responsibility of the master to mask access to a specific slave, if needed, and also to ensure the correct slave is accessed by providing the correct Slave Address

The option to assign an AXI module or modules to Logic Lock regions is available as reference in the HBM2 design example. You can use this in your actual design to improve timing. Final timing closure is based on several factors, including Intel Quartus Prime timing closure, core logic utilization and core clock frequency.

- Controller configurations for HBM2 Channels in the switch:
 - When you enable the AXI Switch, the controller configurations for the corresponding two HBM2 channels should use the same AXI Data configurations (AXI burst configuration, Data width etc) and Enable Reorder buffer options.

Command Arbitration is needed when multiple masters are competing to access a single slave and require help to efficiently schedule the transactions. The options available help to improve the efficiency of transactions and help to prioritize AXI masters. When AXI masters are not competing for access to a specific slave, all transactions are considered point-to-point and are serviced accordingly. The following arbitration schemes are supported:

- Arbitration scheme 1: Round-Robin
 - This is the default arbitration scheme, following the order from AXI master 0 to 3. Transaction Count for Masters is set to 0 and no Honoring is chosen. Every master can issue only 1 transaction, before the next master is granted access. (1 AXI transaction means 1 BL4 or 1 BL8 transaction, based on the burst configuration chosen.)

- Arbitration scheme 2: Honored Master
 - This option allows you to select one of the four AXI masters to be Honored and Transaction count set to 0.
 - When this option is selected, the master selected is granted the highest priority over the remaining AXI Masters.
 - Once this master is serviced, the remaining masters are serviced through round robin arbitration.
 - If none of the masters is selected to be honored, all the masters follow Round-Robin priority (Arbitration scheme 1).
- Arbitration scheme 3: Transaction counts
 - This arbitration scheme uses transaction counts with or without using the Honored Master option. This scheme sets a transaction-count for each master. The transaction count defines the count of the total transactions the AXI master would like to issue any given time. Each transaction count refers to a single Burst length 4 transaction (32B) or a single pseudo Burst length 8 transaction (64B) at the AXI interface. For example, a transaction count of 10 refers to 10 AXI command transactions that the Master can issue, when granted access. The AXI master can choose to issue all the 10 transactions to 1 AXI slave or divide them as necessary among all AXI slaves or issue fewer than 10 AXI transactions too.
 - After a master is granted access to a slave, it can issue all the “Transaction count” number of transactions, provided the master is able to issue them and the corresponding slaves are ready to service the requests. If a slave is not ready to service the master or the master is not ready to issue the expected total transactions, the next master is granted access through the round robin scheme. Every time a master is granted access, the number of allowed transactions resets to the *Transaction count* value. For example, if the *Transaction count* for master 0 is set to 50, and master 0 has issued 20 transactions and become idle, master 1 is then granted access. When master 0 is granted access again, master 0 is allowed to perform 50 transactions.
 - When you select the honor mode, the transaction count for this master is disabled and the value set to 0, indicating highest priority. This master can issue all its transactions, after which the next master in the round robin scheme is given access.
 - Large transaction counts, up to 65535, are supported, however, you must select the appropriate transaction count based on the application needs, as higher transaction count might adversely affect timing closure.

Note:

- All configuration for command arbitration occurs at IP generation, not at run time.
- It is advisable to run RTL simulations of representative traffic patterns for your application, to enable the arbitration scheme to be optimized.

Area Overhead Due to Switch

The area utilization due to four instances of the 4×4 AXI switch is ~7.1% (~50k out of total ~700k ALM) for 1 memory stack at four instances of 4×4 AXI switch. The design example provides an example of Logic Lock constraints for better timing closure.

Latency

A maximum of twenty AXI clock cycles of round-trip latency across AXI ports when the transactions are point to point. (This refers to the physical latency from the time the command is received to the time read data is available at the user interface, not including command scheduling or wait times in the command queue.) Additional latency when using the switch is based on the command arbitration logic. The AXI master must wait for all the slave responses to return before switching to another slave.



7. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance

This section discusses key aspects of the HBM2 IP controller performance: efficiency, latency, and timing.

7.1. High Bandwidth Memory (HBM2) DRAM Bandwidth

For each HBM2 DRAM in an Intel Stratix 10 device, there are eight channels of 128-bits each. The following example illustrates the calculation of bandwidth offered by one HBM2 interface.

Assuming an interface running at 1 GHz: $128 \text{ DQ} * 1 \text{ GHz} = 128 \text{ Gbps}$:

- The interface operates in double data-rate mode, so the total bandwidth per HBM2 is: $128 \text{ Gbps} * 2 = 256 \text{ Gbps}$
- The total bandwidth for the HBM2 interface is: $256 \text{ Gbps} * 8 = 2048 \text{ Gbps}$
- If the HBM2 controller operates at 90% efficiency, the effective bandwidth is: $2048 \text{ Gbps} * 0.9 = \sim 1843 \text{ Gbps}$

7.2. High Bandwidth Memory (HBM2) Interface Intel FPGA IP HBM2 IP Efficiency

The efficiency of the High Bandwidth Memory (HBM2) Interface Intel FPGA IP estimates data bus utilization at the AXI interface. The AXI4 protocol supports independent write and read address and data channel and accepts concurrent write and read transactions. Calculated efficiency values take into consideration that the core clock frequency and the memory clock frequency are different. The HBM2 IP design example includes an efficiency monitor that reports the efficiency and the minimum latency observed in the transactions that are simulated. You can enable the efficiency monitor on the Diagnostics tab of the HBM2 IP parameter editor.

The following equation represents the HBM2 controller efficiency:

```
Efficiency = ((Write transactions + Read transactions accepted by HBM2 controller) / total valid transaction count) * (core clk frequency * 2 / HBM2 interface frequency) * 100
```

- Write transactions – Refers to user write data transactions that the HBM2 controller accepts (user-asserted AXI WVALID and corresponding controller-asserted AXI WREADY).
- Read transactions – Refers to user read data transactions that the HBM2 controller has processed (controller-asserted AXI RVALID and corresponding user-asserted AXI RREADY).
- Total valid transaction count – Total transaction time after first valid transaction has been issued.
- Core frequency (MHz) – The frequency at which user logic operates. The core operates at a lower frequency than the HBM2 interface.
- HBM2 interface frequency (MHz) - The frequency at which the HBM2 interface operates.

The HBM2 controller provides high efficiency for any given address pattern from the user interface. The controller efficiently schedules incoming commands, avoiding frequent precharge and activate commands as well as frequent bus turn-around when possible.

Factors Affecting Controller Efficiency

Several factors can affect controller efficiency. For best efficiency, you should consider these factors in your design:

- User-interface frequency vs HBM2 interface frequency - The frequency of user logic in the FPGA fabric plays an important role in determining HBM2 memory efficiency, as shown in the example above.
- Controller Settings
 - Disable the Reorder Buffer in the Controller Settings to achieve improved efficiency. (However, if the application requires that read data be provided in the same order as the read requests, then it is preferable to enable the Reorder Buffer.)
 - Burst length - The pseudo-BL8 mode helps to ensure shorter memory access timing between successive BL4 transactions, to improve controller efficiency.
- Traffic Patterns - Traffic patterns play an important role in determining controller efficiency.
 - Sequential vs random DRAM addresses: Sequential addresses enable the controller to issue consecutive write requests to an open page and help to achieve high controller efficiency. Random addresses require constant PRECHARGE/ACTIVATE commands and can reduce controller efficiency.
 - Set the User Auto Precharge Policy to FORCED and set the awuser/aruser signal on the AXI interface to HIGH to enable Auto Precharge for random transactions. For sequential transactions, set the Auto Precharge Policy to HINT.
 - Sequential Read only or Write Only transactions: Sequential read-only or write-only transactions see higher efficiency as they avoid bus turnaround times of the DRAM bi-directional data bus.
- AXI Transaction IDs – Use of different AXI transaction IDs helps the HBM2 controller schedule the transactions for high efficiency. Use of the same AXI transaction ID preserves command order and may result in lower efficiency.
- Temperature – There are two main temperature effects that reduce the bandwidth available for data transfers in the Intel Stratix 10 HBM2 interface:
 - The HBM2 is exceeding a temperature threshold set in the **General ▶ Threshold temperature for AXI throttling** parameter, along with a value for the **AXI throttling ratio**.
 - Above 85°C, HBM2 refreshes occur more frequently, so there is less bandwidth available for data transfers. At 85°C, the refresh rate is 2×, and at 95°C, 4× more frequent than the standard refresh time interval of 7.8 microseconds.

The HBM2 TEMP register value can be read back via the AXI APB bus to help with the correlation of memory refreshes, temperature, and data bandwidth.

7.3. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Latency

Read latency measures the number of clock cycles from the time the HBM2 controller receives a valid read address command, to the time that valid read data is available at the user interface. (In other words, from the instant the master asserts the ARVALID signal and the slave asserts the ARREADY signal, until the slave asserts the RVALID signal and the master asserts the RREADY signal.)

Read latency includes the controller command path latency to issue the read command to the HBM2 memory, memory read latency, and the delay in the read data path through the HBM2 memory controller. Simulation reports the minimum latency in AXI core clock cycles seen during the simulation time.

7.4. High Bandwidth Memory (HBM2) Interface Intel FPGA IP Timing

The maximum HBM2 memory interface frequency is based on the Intel Stratix 10 device speed grade. The maximum core interface frequency is limited by the frequency at which the core logic can meet timing.

For the best HBM2 efficiency, ensure that your user logic follows best design practices. Take care to avoid combinatorial paths between the AXI master and slave input and output signals. Add pipeline registers as necessary and reduce logic levels in timing-critical paths to successfully meet core timing requirements. The Backpressure Latency feature allows you to add up to two register stages between the user interface and the HBM2 IP. Refer to *Improving User Logic to HBM2 Controller AXI Interface Timing* for details on Backpressure Latency.

The following documents provide detailed information on the Intel Stratix 10 device architecture and design techniques that you can adopt to achieve the best core performance:

- The *Intel Stratix 10 High Performance Design Handbook*.
- The *Timing Closure and Optimizations* chapter of the *Design Optimization User Guide: Intel Quartus Prime Pro Edition*.

Related Information

- [Intel Stratix 10 High-Performance Design Handbook](#)
- [Design Optimization User Guide: Intel Quartus Prime Pro Edition](#)

7.5. High Bandwidth Memory (HBM2) Interface Intel FPGA IP DRAM Temperature Readout

You can read the temperature of the HBM2 DRAM through the APB interface. Refer to the *Temperature and Calibration Status Readout* topic for more information.

You can also read the temperature using the Intel Stratix 10 Analog to Digital Converter. Refer to the *Intel Stratix 10 Analog to Digital Converter User Guide* for more information.

Related Information

- [Temperature and Calibration Status Readout](#) on page 70
- [Intel Stratix 10 Analog to Digital Converter User Guide](#)

8. High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide Archives

IP versions are the same as the Intel Quartus Prime Design Suite software versions up to v19.1. From Intel Quartus Prime Design Suite software version 19.2 or later, IPs have a new IP versioning scheme.

If an IP core version is not listed, the user guide for the previous IP core version applies.

IP Core Version	User Guide
19.6.1	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.6.1	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.6.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.5.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.4.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.3.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.2.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
19.1	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
18.1.1	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
18.0	High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide
17.1	Intel Stratix 10 MX HBM2 IP User Guide

9. Document Revision History for High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide

Document Version	Intel Quartus Prime Version	IP Version	Changes
2021.06.21	21.2	19.6.1	- In the <i>Creating and Parameterizing</i> chapter: - Added a paragraph to the <i>Core clock frequency</i> description in Table 8 on page 23, and added Table 9 on page 24. - Added a note beneath the figure in the <i>FPGA I/O Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic, and modified the description of <i>Memory PLL Reference clock I/O standard</i> in Table 10 on page 24. - In the <i>Pin Planning for the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic, modified the <code>pll_ref_clk</code> description in Table 17 on page 32. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter: - Modified the <code>ext_core_clk</code> description in Table 18 on page 40 in the <i>Clock Signals</i> topic. - Added content to the <i>AXI Subchannels Descriptions</i> section in the <i>AXI User-interface Signals</i> topic. - Added two notes to the <i>User-controlled Accesses to the HBM2 Controller</i> topic.
2021.03.29	21.1	19.6.1	- In the <i>Creating and Parameterizing the High Bandwidth Memory</i> chapter, added a sentence to the <i>Core clock frequency</i> description, in the <i>Group: General / Clocks</i> table. - In the <i>Simulating the High Bandwidth Memory</i> chapter, removed the <i>Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP with Cadence NCSim*</i> topic. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter: - Added one row to the <i>Temperature and Calibration Status Readout</i> topic. - Added the <i>Controller Idle State Status</i> topic. - Added a sentence to the first paragraph of the <i>Partial Writes</i> section in the <i>ECC Error Correction and Detection</i> topic.
continued...			

Document Version	Intel Quartus Prime Version	IP Version	Changes
2020.12.14	20.4	19.6.1	- Added the <i>Register Map IP-XACT Support for HBM2 IP</i> topic to the <i>Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> chapter. - Modified the descriptions of <code>axi_0_0_awlen</code> in Table 22, and <code>axi_0_0_arlen</code> in Table 25.
2020.10.05	20.3	19.6.0	- In the <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic in chapter 4: - Modified the figure. - Modified the <i>Automatically instantiate backpressure registers within the HBM2 IP</i> entry in Table 6. - Added the <i>FPGA I/O Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic in chapter 4. - In the <i>Controller Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic in chapter 4: - Modified the <i>Controller Tab</i> figure. - In table 10, modified the <i>Enable AXI Burst length of more than 2</i> and <i>AXI Maximum burst length</i> descriptions. - In the <i>Reset Signals</i> topic in chapter 6: - Modified the <i>Reset Signals</i> table. - Modified the paragraph under the <i>hbm_only_reset_in Timing</i> heading. - In the <i>AXI User-interface Signals</i> topic in chapter 6: - Modified the first bullet point in the <i>AXI ID Definition</i> section. - Added the <i>AXI Burst Transactions</i> section. - Modified the <i>axi_0_0_awid</i> and <i>axi_0_0_awlen</i> descriptions in Table 21. - Modified the <i>axi_0_0_arid</i> and <i>axi_0_0_arlen</i> descriptions in Table 24. - Removed <i>Non-zero Latency Backpressure</i> topic from chapter 6, and replaced with <i>Improving User Logic to HBM2 Controller AXI Interface Timing</i>.
2020.06.22	20.2	19.5.0	- In the <i>Introduction</i> chapter, added a new Avalon interface to the <i>Intel Stratix 10 MX HBM2 Controller Features</i> topic. - In the <i>Architecture</i> chapter: - Added a new Avalon interface to the <i>Intel Stratix 10 MX UIB Architecture</i> topic. - Replaced figure 5 and added a new Avalon interface to the <i>Intel Stratix 10 HBM2 Controller Architecture</i> topic. - In the <i>Creating and Parameterizing</i> chapter: - In the <i>General Parameters</i> topic, modified the description of the <i>Interface Protocol</i> and <i>Enable AXI Switch for channel 0 and 1</i> parameters in Table 5, and the description of the <i>Allow backpressure of AXI read data and write response channels</i> parameter in Table 6. - In the <i>Controller Parameters</i> topic, replaced Figure 8 and modified the following parameter descriptions in Table 9: <i>Interface Protocol</i> <i>Enable Auto Precharge Control</i> <i>Enable Command Priority Control</i> <i>User Read Auto-Precharge Policy</i> <i>User Write Auto-Precharge Policy</i> <i>Data Width per Pseudo-Channel</i> - In the <i>Diagnostic Parameters</i> topic, added the new Avalon interface to several parameter descriptions in Table 10. - In the <i>Pin Planning</i> topic, modified the paragraph immediately preceding Table 15. - In the <i>IP Interface</i> chapter: - Modified the <code>ext_core_clk</code> description in Table 16. - Modified the text of the <i>User-interface Signals</i> topic. - Added the <i>Avalon Memory-Mapped (AVMM) Interface Signals</i> topic. - In the <i>AXI Switch Selection in HBM2 IP Catalog GUI</i> topic: - Added a bullet point to the <i>soft 4x4 AXI switch</i> feature list. - Added text to the second bullet point under <i>Arbitration scheme 2: Transaction counts</i>.

Document Version	Intel Quartus Prime Version	IP Version	Changes
2020.04.13	20.1	19.4.0	- In the <i>Creating and Parameterizing</i> chapter, made the following changes to the <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic: - Updated the figure for the <i>General</i> tab. - Modified the <i>Group: General / HBM2 Interface</i> table. - In the <i>Group: General / AXI Interface</i> table, added a paragraph to the <i>Backpressure latency (clock cycles)</i> description. - In the <i>Simulating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> chapter: - Updated the figure for the <i>Diagnostics</i> tab. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter, made the following changes to the <i>AXI User-interface Signals</i> topic: - Added the <i>AXI ID Definition</i> section. - Added a bullet point and a second figure to the <i>AXI Address Definition</i> section. - In the <i>User Port 0's AXI4 Write Address (Command) Channel</i> table, modified the information for <i>axi_0_0_awid</i> and <i>axi_0_0_awaddr</i>. - In the <i>User Port 0's AXI4 Read Address (Command) Channel</i> table, modified the information for <i>axi_0_0_arid</i> and <i>axi_0_0_araddr</i>. - Updated the <i>AXI Backpressure Latency Selection</i> figure in the <i>Non-zero Latency Backpressure</i> topic. - Added the <i>Soft AXI Switch</i> and <i>AXI Switch Selection in HBM2 IP Catalog GUI</i> topics to the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter.
2020.03.02	19.4	19.3.0	In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter, in the <i>AXI User-Interface Signals</i> topic: - Modified the description of the <i>axi_0_0_awsz</i> port in the <i>User Port 0's AXI4 Write Address (Command) Channel</i> table. - In the <i>User Port 0's AXI4 Write Data Channel</i> table, changed the names and descriptions of the <i>axi_0_0_wuser_data</i> and <i>axi_0_0_wuser_strb</i> ports. Implemented minor changes to the descriptions of the <i>axi_0_0_wstrb</i> and <i>axi_0_0_wvalid</i> ports. - Modified the descriptions of the <i>axi_0_0_arsz</i> and <i>axi_0_0_arburst</i> ports in the <i>User Port 0's AXI4 Read Address (Command) Channel</i> table. - Changed the names of the third and fourth entries in the <i>User Port 0's Read Data Channel</i> table. Added a sentence to the description of the <i>axi_0_0_rvalid</i> port.
continued...			

Document Version	Intel Quartus Prime Version	IP Version	Changes
2019.12.16	19.4	19.3.0	- In the <i>Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> chapter: - In the <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic, modified the description of the <i>Backpressure latency</i> parameter, in the <i>Group: General / AXI Interface</i> table. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter: - Added additional information about the <i>hbm_only_reset_in</i> signal, in the <i>Reset Signals</i> topic. - Added additional information about clocks and resets in the <i>Reset Signals</i> topic. - Retitled the <i>Improving User Logic to HBM2 Controller AXI Interface Timing</i> topic to <i>Non-zero Latency Backpressure</i>. Implemented extensive changes to the topic content. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance</i> chapter: - Added content about temperature effects, in the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP HBM2 IP Efficiency</i> topic.
2019.09.19	19.2.0	19.2.0	- In the <i>Introduction to High Bandwidth Memory</i> chapter, clarified description of Pseudo Channel mode in the <i>Intel Stratix 10 MX HBM2 Features</i> topic. - In the <i>Intel Stratix 10 MX HBM2 Architecture</i> chapter, modified the <i>HBM2 DRAM</i> section of the <i>Intel Stratix 10 MX UIB Architecture</i> topic. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter: - Modified the descriptions of the <i>ext_core_clk_locked</i> and in <i>thepll_ref_clk</i> sig in the <i>Clock Signals</i> topic. - Modified the descriptions of the <i>axi_0_0_awlen</i>, <i>axi_0_0_awsz</i>, <i>axi_0_0_awburst</i>, <i>axi_0_0_arlen</i>, <i>axi_0_0_arsz</i>, and <i>axi_0_0_arburst</i> ports in the <i>AXI User-interface Signals</i> topic. - Minor additions to the <i>AXI Write Address</i> section of the <i>AXI Write Transaction</i> topic, and to the <i>Read Address</i> section of the <i>AXI Read Transaction</i> topic.
2019.07.25	19.2.0	19.2.0	- Added <i>About the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>. - Revised the <i>Refresh Mode</i> description in the <i>Group: Controller/ Controller 0 Configuration</i> table in the <i>Controller Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic. - Updated Figure 7 in <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>. - Updated Figure 9 in <i>Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>. - Added row for <i>Disable HBM model transaction messages in simulation</i> to Table 9 in <i>Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>.
continued...			

9. Document Revision History for High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide

UG-20031 | 2021.06.21



Document Version	Intel Quartus Prime Version	IP Version	Changes
			- Updated Figure 13 in <i>Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP for High Efficiency</i>. - Updated Figure 20 in <i>Improving User Logic to HBM2 Controller AXI Interface Timing</i>. - Updated Width values in Tables 23 and 26 in <i>AXI User-interface Signals</i>.
continued...			

Document Version	Intel Quartus Prime Version	IP Version	Changes
2019.05.03	19.1	19.1	- Updated image of the <i>Diagnostics</i> tab, in the <i>Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> and the <i>Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP for High Efficiency</i> topics. - Modified the descriptions of the <i>PLL reference clock frequency</i> description in the <i>Group: General / Clocks</i> table in the <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic - Added rows to <i>Group: Diagnostics / Traffic Generator</i> table in the <i>Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic. - Added bullet point to the <i>Simulating High Bandwidth Memory (HBM2) Interface Intel FPGA IP for High Efficiency</i> topic. - Minor rewording of the third bullet point in the <i>Intel Stratix 10 MX HBM2 Controller Features</i> topic.
continued...			

Document Version	Intel Quartus Prime Version	IP Version	Changes
			- Recast the <i>Jitter Specifications for the Input Reference Clocks</i> section in the <i>Pin Planning for the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic. - Added content to the <i>Factors Affecting Controller Efficiency</i> section in the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP HBM2 IP Efficiency</i> topic. - Added the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide Archives</i> chapter.
2018.12.24	18.1.1	18.1.1	- Replaced figure 3, <i>Block Diagram of Intel Stratix 10 MX HBM2 Implementation</i> in the <i>Intel Stratix 10 MX HBM2 Architecture</i> chapter. - Reorganized and changed the title of the <i>Generating the Intel Stratix 10 MX HBM2 IP</i> chapter to <i>Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>. - Removed the <i>Generating the Design Example and High Bandwidth Memory (HBM2) Interface Intel FPGA IP Design Example</i> topics from the <i>Creating and Parameterizing the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> chapter. - Replaced figure 15, <i>HBM2 IP Clocking and Reset Diagram</i>, figure 16, <i>AXI Address Definition</i>, figure 18, <i>AXI Write Transaction</i>, and figure 19, <i>AXI Read Transaction</i>, in the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter. - Added the topic <i>Improving User Logic to HBM2 Controller AXI Interface Timing</i> to the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i> chapter.
2018.05.07	18.0	18.0	- Changed document title from <i>Intel Stratix 10 MX HBM2 IP User Guide</i> to <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP User Guide</i>. - Chapter 1, <i>Introduction to High Bandwidth Memory</i>: - Added ECC support to <i>Intel Stratix 10 MX HBM2 Features</i> topic. - Modified fourth and sixth bullets in <i>Intel Stratix 10 MX HBM2 Controller Features</i> topic. - Chapter 2, <i>Intel Stratix 10 MX HBM2 Architecture</i>: - Modified both figures in the <i>Intel Stratix 10 MX HBM2 Architecture</i> topic. - Added sentence to the paragraph immediately before Figure 4, in the <i>Intel Stratix 10 MX HBM2 Architecture</i> topic. - Expanded the last paragraph in the <i>Intel Stratix 10 MX HBM2 Architecture</i> topic. - Changed the specified width of write and read data interfaces per AXI port from 128-bits to 256-bits, in the <i>HBM2 burst transactions</i> description in the <i>Intel Stratix 10 MX HBM2 Controller Details</i> topic. - Removed the last sentence from the <i>User interface vs HBM2 Interface Frequency</i> description, in the <i>Intel Stratix 10 MX HBM2 Controller Details</i> topic. - Added the ECC description near the end of the <i>Intel Stratix 10 MX HBM2 Controller Details</i> topic.

Document Version	Intel Quartus Prime Version	IP Version	Changes
			- Chapter 3, <i>Generating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>: - Changed chapter title from <i>Generating the Intel Stratix 10 MX HBM2 IP</i> to <i>Generating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>. - Changed name of the menu selection in step 3 of the procedure and replaced the figure. - Changed the IP name in topic titles throughout the chapter. - Changed the description of the <i>Core clock frequency</i> parameter in the <i>Group: General / Clocks</i> section of the <i>General Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic. - In the <i>Diagnostic Parameters for High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> topic, removed two existing graphics and added one new one. Added <i>Enable mixed traffic</i> parameter to the <i>Group: Diagnostics / Traffic Generator</i> section. - Revised the procedure in the <i>Generating the Example Design</i> topic. - Removed the <i>Intel Stratix 10 MX HBM2 IP Example Design for Synthesis</i> topic. - Added the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Design Example</i> and <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Pin Planning</i> topics. - In the <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Pin Planning</i> topic, changed <i>Jitter Specifications for the Input Reference Clocks</i> from 10ps peak-to-peak to 20ps peak-to-peak.

Document Version	Intel Quartus Prime Version	IP Version	Changes
			- Chapter 4, <i>Simulating the High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i>: - Changed product name from <i>Intel Stratix 10 MX HBM2 IP</i> to <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> in topic titles throughout the chapter. - Chapter 5, <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Interface</i>: - Changed product name from <i>Intel Stratix 10 MX HBM2 IP</i> to <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP</i> in topic titles throughout the chapter. - Revised content of <i>Clock Signals</i> and <i>Reset Signals</i> topics. - Added <i>Calibration Status Signals</i> and <i>Memory Interface Signals</i> topics. - Added <i>AXI Interface Signals</i> and <i>AXI Address Definition</i> sections to the <i>AXI User-interface Signals</i> topic. Removed content from the descriptions of the <i>axi_0_0_awaddr</i> and <i>axi_0_0_araddr</i> ports, in tables 15 and 18, respectively. - Added <i>User APB Interface Timing</i> and <i>User-controlled Access to the HBM2 Controller</i> topics. - Added figures to the <i>User Refresh Per Bank</i> and <i>User Refresh to All Banks</i> sections in the <i>User-controlled Refreshes</i> topic. - Chapter 6, <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance</i>: - Changed chapter title from <i>Intel Stratix 10 MX HBM2 IP Controller Performance</i> to <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP Controller Performance</i>. - Changed the IP name in topic titles throughout the chapter. - Added <i>High Bandwidth Memory (HBM2) Interface Intel FPGA IP DRAM Temperature Readout</i> topic.

Date	Version	Changes
December 2017	2017.12.22	Initial public release.