

Automatic Antenna Tuner

FC-30


Installation Instructions

Thank you for your purchase of the model FC-30 Automatic Antenna Tuner, designed specifically for the FT-897 HF/VHF/UHF Transceiver. The FC-30 includes a cooling fan to ensure thermal stability of the critical matching elements within its compact case.


The FC-30 Automatic Antenna Tuner responds to control commands from the FT-897 Transceiver, providing microprocessor-based impedance matching on the 160 through 6 meter Amateur bands. On the HF and 50 MHz bands the impedance matching range is from 16.5Ω to 150Ω (up to 3:1 SWR). Accordingly, the FC-30 should not be expected to match "long wire" type antennas unless you have taken specific design steps to ensure that the impedance presented to the FC-30 is within these specifications.

Please refer to the FT-897 Operating Manual for operating instructions.

Rear Panel Information

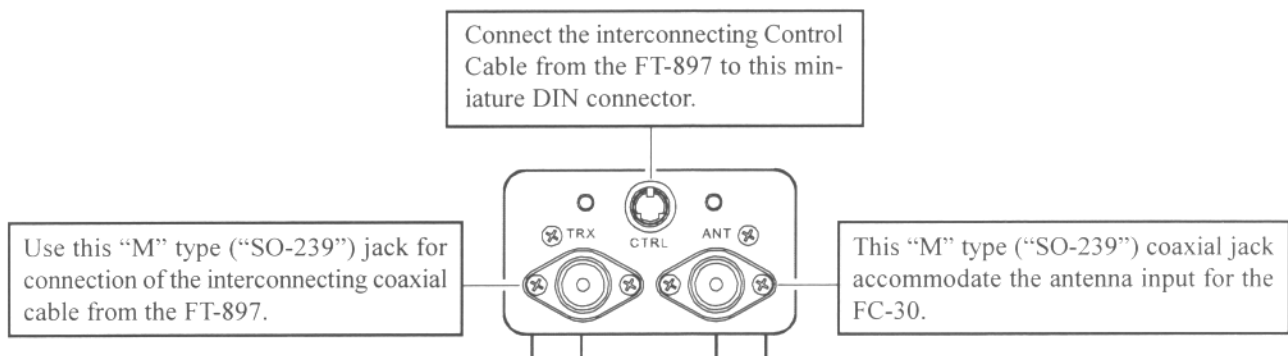

Interconnections to FT-897

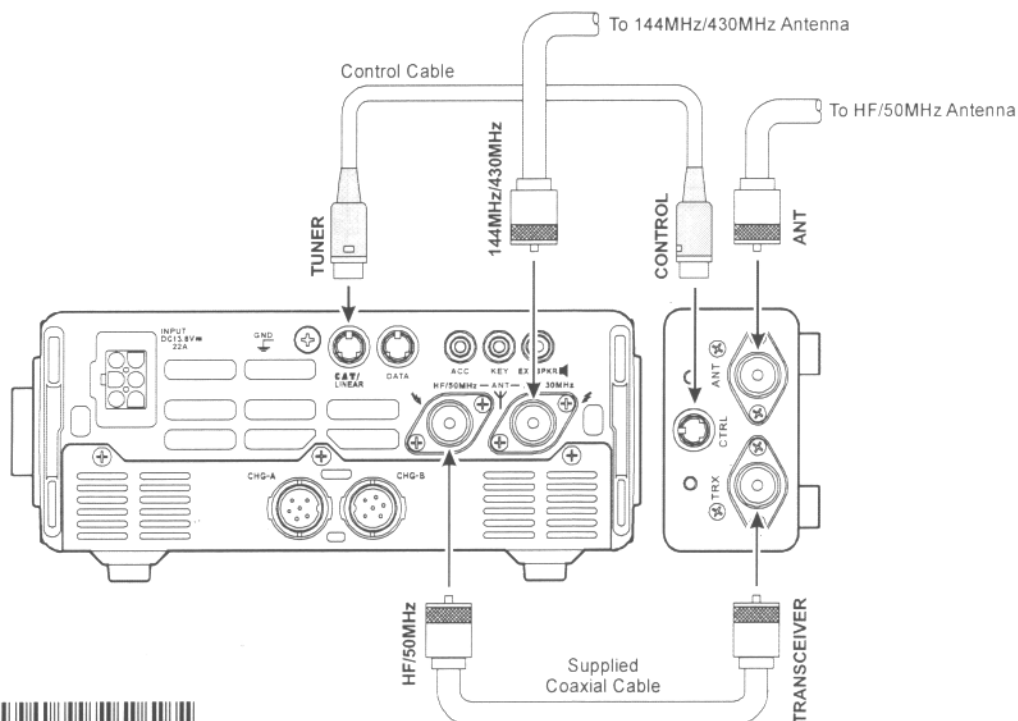

0210a-BK

日本語の説明は裏面に記載してあります。

Various setting


By changing the configuration of an internal DIP switch, you may change the RF signal path (to enable the FC-30 both on receive and transmit), and you may also clear all the tuner's memories.

A) By default, the FC-30 is only engaged in the transmit mode. To activate the tuner circuit while receiving.


1. Turn the FT-897 **POWER** switch **OFF**.
2. Remove the 6 screws affixing the case of the FC-30, then remove the case.
3. Turn the 8th switch of S1003 to "on."
4. Replace the case, using the 6 screws removed in step (2) above.

B) Memory clear

1. Turn the FT-897 **POWER** switch **OFF**.
2. Remove the 6 screws affixing the case of the FC-30, then remove the case.
3. Turn the 4th switch of S1003 to "on."
4. Turn the FT-897 **POWER** switch **ON**.
5. LED0 will glow green, then disappear, after a short time.
6. Return the 4th switch of S1003 to "off."
7. Turn the FT-897 **POWER** switch **OFF**.
8. Replace the case, using the 6 screws removed in step (2) above.

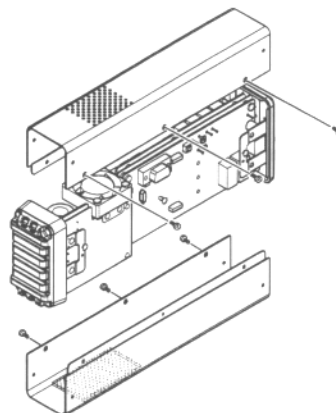

⚠ The bottom case is the case half that has a sponge affixed to the ventilation screen. If the case parts are reversed, the sponge can touch the fan blades, disabling the fan and allowing the FC-30's control circuitry to overheat.

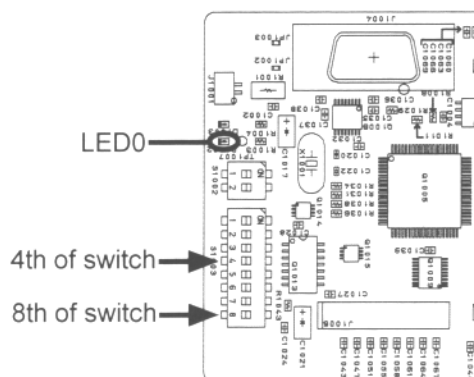

Cautions

○ Please note the default positions of the internal DIP switch components. All switches, except for the 4th and 8th switches of S1003, are for factory setup use only, and they should not be touched. If you accidentally set a switch to the wrong position, please refer to the table below to correct the situation.

S1002

No.	Switch
1	OFF
2	OFF

S1003

No.	Switch	No.	Switch
1	OFF	5	ON
2	OFF	6	ON
3	OFF	7	OFF
4	OFF	8	OFF

- Only connect cables to the FC-30 after switching the transceiver off.
- If the FC-30 doesn't tune even though you have pushed the TUNER switch of FT-897, it may be because the antenna or its coaxial cable have a serious problem (very high or low impedance due to "open" or "short"). Please check the antenna and coax if this happens.
- Do not place any objects next to the ventilator ducts on the FC-30, especially those in the front.

Specifications

FREQUENCY RANGE: 1.8 ~ 30 MHz, 50 ~ 54 MHz

INPUT IMPEDANCE: 50Ω

MAXIMUM POWER: 100 Watts

MATCHED SWR: 1.5:1 or less

TUNE-UP POWER: 4 W ~ 60 W

TUNE-UP TIME: 5 seconds or less

IMPEDANCE MATCHING RANGE:

1.8 ~ 30 MHz, 50 ~ 54 MHz: 16.5Ω ~ 150Ω

IMPEDANCE MATCHING MEMORIES: 100 channels

INPUT VOLTAGE REQUIREMENT: 13.8V ±15% (supplied from transceiver)

OPERATING TEMPERATURE RANGE: 14°F ~ 122°F (−10°C ~ +50°C)

CASE SIZE (WHD): 3.1" x 1.8" x 10.2" (80 x 45 x 260 mm)

WEIGHT: 1 kg (2.2 lb.)

Specifications subject to change without notice of obligation.

Supplied Accessories

Coaxial Cable (0.5 m)	1
Control Cable (0.5 m)	1
Mounting Screw Assy.	1

VERTEX STANDARD CO., LTD.

4-8-8 Nakameguro, Meguro-Ku, Tokyo 153-8644, Japan

VERTEX STANDARD

US Headquarters

10900 Walker Street, Cypress, CA 90630, U.S.A.

International Division

8350 N.W. 52nd Terrace, Suite 201, Miami, FL 33166, U.S.A.

YAESU EUROPE B.V.

P.O. Box 75525, 1118 ZN Schiphol, The Netherlands


YAESU UK LTD.

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.


VERTEX STANDARD HK LTD.

Unit 5, 20/F., Seaview Centre, 139-141 Hoi Bun Road,
Kwun Tong, Kowloon, Hong Kong

Coil Unit Circuit Diagram

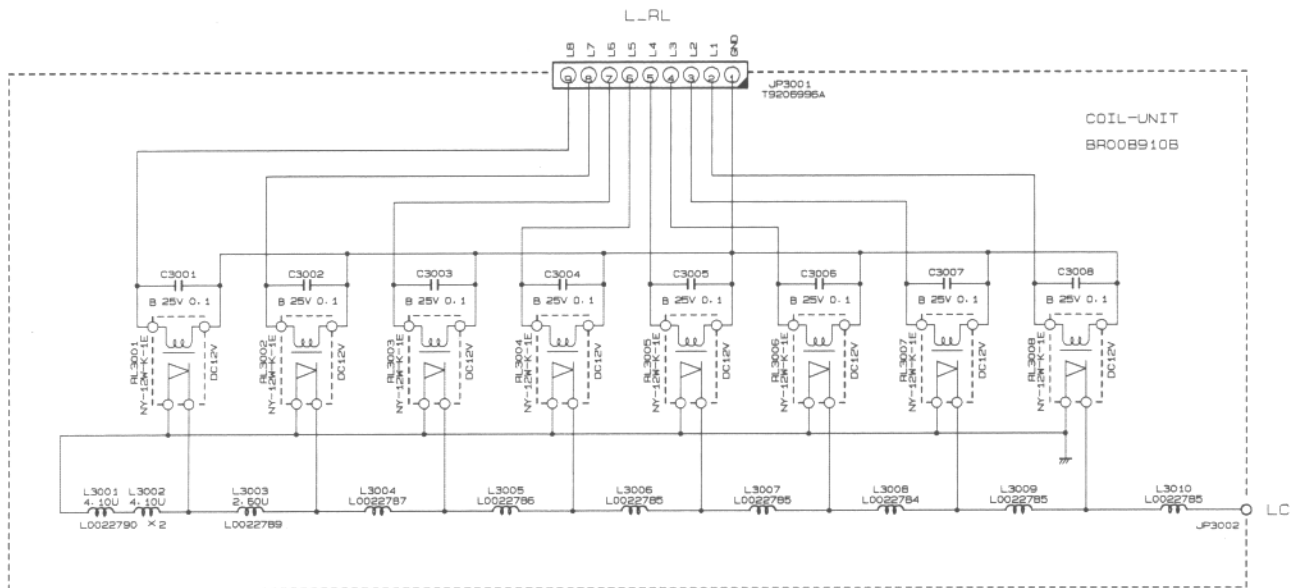

Capacitor Unit Circuit Diagram

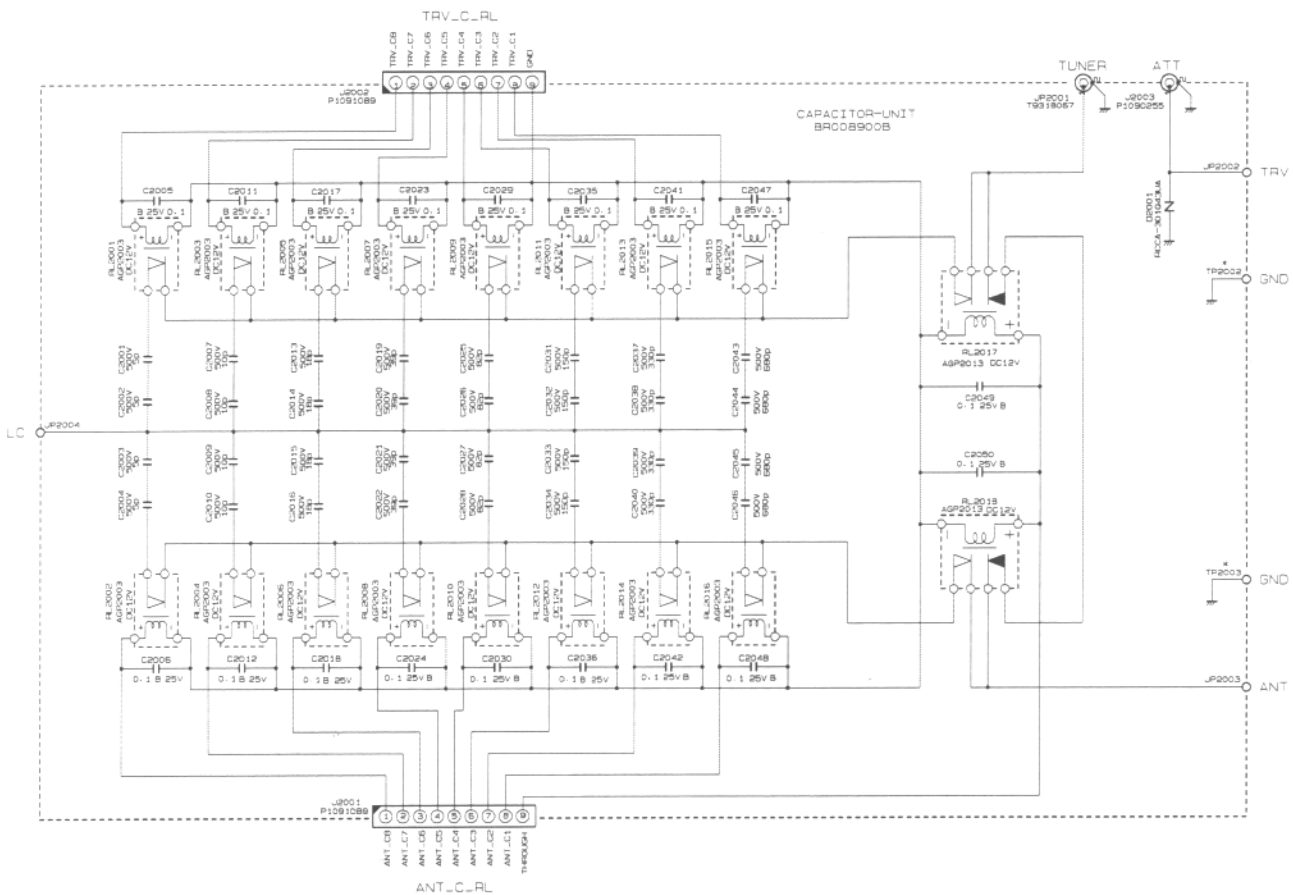


78-7



Installation of the “FC-30”

Parts List




Screws (M3 x 6B) 	2
Screws (M3 x 6B) 	6
Mounting Plate A	1
Mounting Plate B	1
Mounting Plate C	1

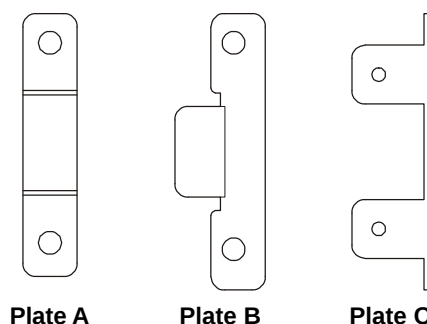

Installation

1. Turn the transceiver's power off, and disconnect all cables from the transceiver.
2. Screw the mounting plate “A” to the **FC-30** using the supplied screws (figure 1).
3. Remove the four rubber lugs and its four screws (figure 2), then screw the mounting plate “B” and “C” so that its holes on the **FT-897** using the supplied screws (figure 3).
4. To install the **FC-30**, position the **FC-30** so that the mounting plate “A” on the side fit into the mounting plate “B” on the FT-897 (figure 3), then screw the mounting plate “C” (on the **FT-897**) to the **FC-30** using the supplied screws (figure 1).

 **Do not install the supplied FC-30 Mounting Screws if you are not installing the FC-30! Also, do not use an improper screw for mounting the FC-30! An improper screw may cause a "short circuit" to the internal circuitry, causing serious damage!**

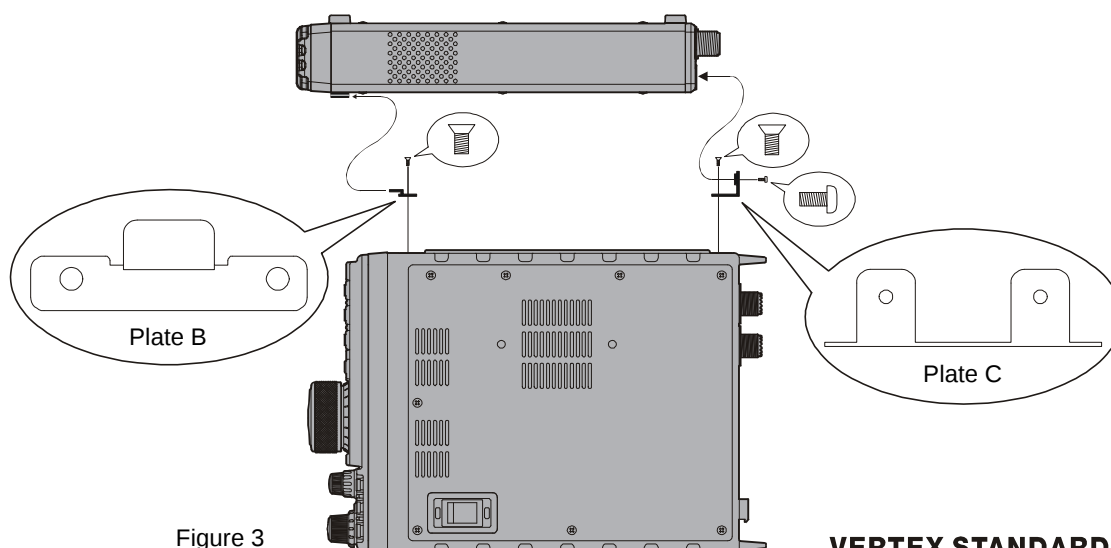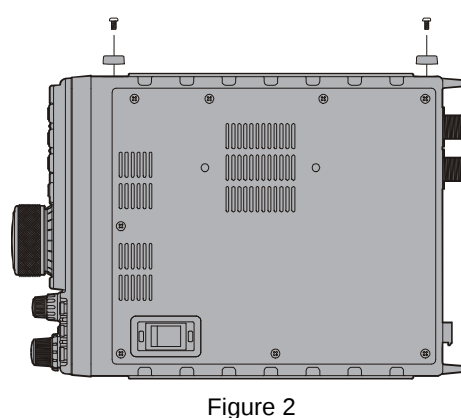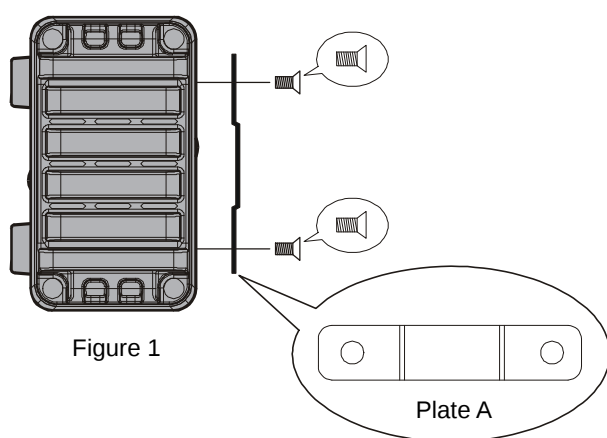

VERTEX STANDARD CO., LTD.