

By Wi-Ex°

zBoost® YX550 DataBlast™ Series User Guide

Models:

- YX550 VLTE-AWS
- YX550 ALTE-AWS



zBoost products have a 30-day money back guarantee when purchased directly from Wi-Ex®. If product is purchased from a reseller or third party, the purchaser is subject to the policies of the third party.

1 Year Manufacturer Warranty. Register at www.Wi-Ex.com

zBOOST® SOHO DATABLAST USER GUIDE

About zBoost® from Wi-Ex®

Wi-Ex, **the leader** in cell phone signal boosters manufactures zBoost, the award-winning line of cell phone signal boosters that enhance the performance of your cell phone, smartphone and wireless data card.

Patented technologies protect the carrier network.

1-year manufacturer warranty - register your product at www.Wi-Ex.com

zBoost products have more awards, more sales and more locations than all other signal boosters...COMBINED.

FCC Information

FCC ID: SO4YX550-AWS-VLTE SO4YX550-AWS-ALTE

Warning: Changes or modifications to this device not expressly approved by Wi-Ex® could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element (antenna) shall be installed such that a minimum separation distance of 20cm (8in) is maintained from all persons. Additionally, the device must not be used above 10 m above ground.

Industry Canada Regulations IC ID: 5544A-YX550AWSVLT 5544A-YX550AWSALT

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

RF Exposure: The manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.

Cet appareillage numérique de la classe [B] répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Le fabricant nominale de la puissance de sortie de ce matériel est simple transporteur. Pour les situations lorsque plusieurs signauxporteurs sont présents, l'évaluation devrait être réduite de 3.5 dB, en particulier lorsque le signal de sortie est ré-émise et peut provoquer des interférences adjacentes à la bande utilisateurs. Ce pouvoir est de la réduction par le biais de la sortie d'alimentation ou la réduction de gain et non par un atténuateur à la sortie du dispositif. Please note: This unit has been approved for use in Canada under RSS 131, however, consent for the use of this device to improve cellular or PCS coverage, must be obtained through your cellular or PCS provider, prior to placing the unit in operation. Please refer to the Industry Canada document CPC 2-1-05, Section 6.1 available or viewable at: http://www.ic.gc.ca/epic/site/smt-qst.nsf/en/sf08942e.html

Safety and Product Warranty Information

Copyright Notice

This manual is copyrighted. All rights reserved. This manual, whole or in part, may not be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form for distribution. This manual whole or in part, may not be modified without prior consent, in writing, from Wireless Extenders.

Copyright © 2012 by Wireless Extenders, Inc.

Trademarks

Wireless Extenders, Wi-Ex, the Wi-Ex logo, zBoost, the zBoost logo and Extending Cell Zones are registered trademarks of Wireless Extenders, Inc.

Safety Guidelines

In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element (antenna) shall be positioned such that a minimum separation distance of 8 inches (20cm) is maintained between the radiating element and the user and/or general population.

Limited Liability

In no event shall Wireless Extenders be liable for any direct, indirect, special, punitive, incidental, exemplary or consequential damages, or any damages, whether in an action under contract, negligence, or any other theory, arising out of or in connection with the set up of, use of, inability to use, or performance of the information, services, products, and materials available from this manual. These limitations shall apply notwithstanding any failure of essential purpose of any limited remedy. Because some jurisdictions do not allow limitations on how long an implied warranty last, or the exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you.

ii

For full warranty guidelines, see page 13.



Note

Changes or modifications not expressly approved by Wi-Ex® could void the user's authority to operate this equipment and/or void the product warranty.

Package Contents: zBoost SOHO DataBlast

Before you begin, make sure all of the following parts came with your zBoost SOHO DataBlast

Literature Contents:

① Set-up overview for zBoost SOHO DataBlast (User Guide online only)

SETUP OVERVIEW

Product Contents:

- ② zBoost Base Unit
- 3 Base Unit Antenna
- ④ Power Supply
- ⑤ RG-59 (mini) Coax Cable 50 feet
- Signal Antenna
- Signal Antenna Mounting Hardware





Optional zBoost Accessories

The following accessories are available to improve signal reception and provide increased coverage in your home or office. Please see our website for complete selection.

To order, call 1-800-871-1612 or visit, www.Wi-ExStore.com

Ded#	Description
Part #	Description
CANT-041	Wide Band Directional Signal Antenna, 700 - 2200 MHz (8 - 10.5 dBi)
<u>YX012</u>	Outside Grounding Kit
<u>YX030-15W</u>	15 ft. Signal Antenna coax extension, low-loss RG-6
<u>YX030-35W</u>	35 ft. Signal Antenna coax extension cable, low-loss RG-6
<u>YX030-50W</u>	50 ft. RG-6 cable
<u>YX031-100W</u>	100 ft. RG-11 cable
<u>YX030-08W</u>	8" flat window entry cable

iv

Table of Contents

FCC Information
Industry Canada Regulations
Safety and Product Warranty Information
Copyright Notice
Trademarks
Safety Guidelines
Limited Liability
Package Contents: zBoost SOHO DataBlasti
Optional zBoost Accessoriesi
Table of Contents
Overview
Why Indoor Signals Can Be Weak
Preparing to Set Up Your zBoost Product
Tools Needed
Check for Signal Strength
IMPORTANT: Before Installing, Note These Important Factors in Determining Performance
Additional Cable Requirements
Grounding the Signal Antenna
Securing Cable with a Drip Loop
Power Requirements
Setting Up Your zBoost Signal Booster
Placement of the Signal Antenna
Antenna Bracket Assembly
Positioning the Base Unit
Running the Coaxial Cable from the Signal Antenna to the Base Unit.
Connect the zBoost Base Unit to Power
Confirm That Your zBoost is Working Properly
Improving Your Coverage Area
zBoost Base Unit Light Indicators1
Technical Specifications
Frequently Asked Questions1
Warranty Information 1

Overview

Thank you for choosing zBoost. You will now be able to use your cell phone INSIDE your home or office. Gone are the days when you had to go to the window upstairs or walk outside to use your cell phone. Like a skylight that brings sunlight into your home, zBoost DataBlast transports and amplifies the outdoor 4G data signal into your home or office.

By following the easy instructions in this user guide, you will be Extending Cell Zones™ into your home or office.

Why Indoor Signals Can Be Weak

There are several obstacles that can contribute to the poor reception you receive in your home or office:

1. Location of the Cell Phone Tower in Relation to Your Home/Office


While cell phone providers have tried to place cell phone towers to provide the best overall coverage, local ordinances and terrain features can impose restrictions on where these towers can be placed, thus, limiting the signal strength available at your location.

2. Obstructions Caused by Buildings, Terrain and Trees

Cell phone signals can be completely blocked or reflected by buildings, walls, trees, hills and other terrain features resulting in low signal strength.

3. Energy Efficient Windows

These new windows can also affect signal penetration into the house.

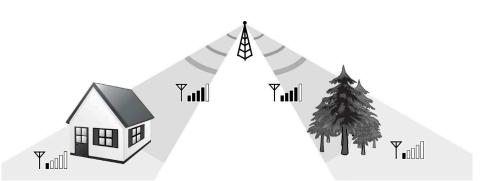

2

Preparing to Set Up Your zBoost Product

Tools Needed

The following tools are needed to set up zBoost:

- #2 Phillips screwdriver
- Cellular phone operating in the band supported by your zBoost unit
- Drill (may be required for outdoor or attic antenna placement)

Check for Signal Strength

Before placing a zBoost in your home, make sure that you have fast/reliable data speeds on the outside of your home, in the attic, at roof level or wherever you plan to place the Signal Antenna. zBoost can only bring signal into your home when it reaches the Signal Antenna. If there is no signal, zBoost will not work for you.

If a weak signal is available at ground level, check the signal strength in your attic or at roof level location where the signal will likely be stronger and where the Signal Antenna can be placed for best performance.

If you have reliable, fast data speeds outside your home, then zBoost can bring the signal into your home

If only one signal bar is displayed on your cell phone outside, indoor coverage will be limited to one small room. We recommend placing the Signal Antenna outside and/or purchasing a Wi-Ex upgrade Signal Antenna for increased coverage (see page iv).



Note




Cell phone signal bars are approximate and vary from phone to phone. The number of bars can fluctuate widely, depending on the location of the phone, the position or angle of the phone, weather, etc. Most cell phone signal meters update every 6 to 10 seconds. An increase of only one bar typically indicates a 4x to 10x signal increase.

3

IMPORTANT: Before Installing, Note These Important Factors in Determining Performance

- At least 15 <u>vertical</u> feet is needed between the Signal Antenna (receives the outside signal) and the Base Unit Antenna (rebroadcasts the signal indoors). Separation less than 15 vertical feet will result in decreased performance.
 - If the antennas are too close together, the light on the Base Unit will flash RED, indicating a problem see the Base Unit Light Indicators section (page 10). To capture the best signal, place the Signal Antenna as high as possible.
- 2. Position the Signal Antenna vertically and keep it at least 3 feet above any metal.

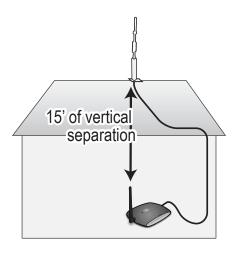

Additional Cable Requirements

If the distance between the Signal Antenna and the Base Unit exceeds 50 feet, extension cables are available on our website or at many home improvement and electronic stores. The included cable is RG59-mini. For better performance, you may replace it with RG-6 cable for satellite TV.

The total cable length should not exceed 65 feet unless upgraded cable and/or upgraded Signal Antenna (see page iv) is used. A longer cable is helpful only if it allows you to place the Signal Antenna in a location where you measure stronger signal.

Cable	Recommended Length
RG-59 mini (provided)	Up to 50 feet
RG-6	Up to 65 feet
RG-11	Up to 120 feet


Grounding the Signal Antenna

If the Signal Antenna is placed outdoors, it must be properly grounded. (See page iv for a recommended grounding kit).

The setup must be in accordance with Article 810 of the National Electric Code (NEC). A listed antenna discharge unit must be provided for the lead-in coaxial cable per NEC article 8.10.20 or the shield of the coaxial cable must be permanently and effectively grounded in accordance with NEC article 8.10.21. Please consult a professional installer or electrician for more information

Securing Cable with a Drip Loop

If the Signal Antenna is placed outdoors, create a drip loop with the coaxial cable at the point where the cable enters the building through an outside wall. This can be done by twisting and securing the cable into a loop (no less than 4" across) near the entry point. This will help prevent moisture from gathering at entry point and leaking into the building. Consult a professional installer for more information.

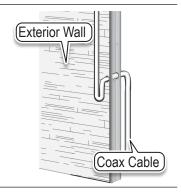

Power Requirements

The Base Unit can be plugged into a standard 2 or 3 prong 110 VAC receptacle using the included power supply. The power supply consumes less than 10W (less than 0.2A). For more information on power consumption, see "Technical Specifications" on page 11.

Warning



The zBoost SOHO DataBlast base unit MUST only be used with the provided power adaptor. Use of other power adaptors will void the warranty and may damage the unit. Use of other equipment is not FCC approved.

5


Setting Up Your zBoost Signal Booster

Placement of the Signal Antenna

Choosing the best location for the Signal Antenna provides the best performance and the largest area of improved signal. Determine the location that provides the strongest signal (generally found on the roof) using the signal strength indicator on your cell phone.

In the area of best signal, identify the best location for attachment of the mounting bracket – such as an attic cross or main beam and place the Signal Antenna at or near that location. Important: Assemble the Signal Antenna mounting bracket as shown below.


Keep the Signal Antenna at least 3 feet above any metal such as wiring, A/C ducts, metal siding, truss plates, etc. When connecting the cable to the antenna, run the cable straight down from the antenna. Avoid draping the coax near the antenna.

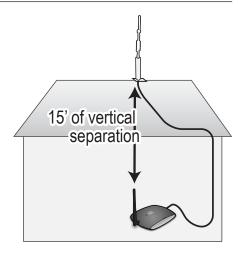



Note

Avoid placing the Signal Antenna near metal such as wiring, A/C ducts, metal siding, truss plates, etc. When connecting the cable to the antenna, run the cable straight down from the antenna. Avoid draping the coax near the antenna.

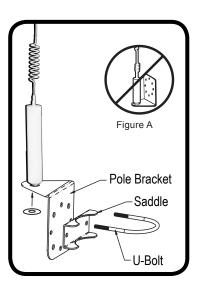

Antenna Bracket Assembly

6


IMPORTANT: Incorrectly mounting the Signal Antenna to the mounting bracket (see figure A) will impede performance. Ensure that the Signal Antenna is properly positioned in the mounting bracket as pictured.

To mount antenna to a pole: Attach bottom of antenna to pole bracket as pictured. Use U-Bolt to secure bracket to pole and fasten.

To mount antenna to a flat surface: Attach bottom of antenna to pole bracket as pictured. Secure bracket to desired surface using provided screws. Use of the Saddle and U-Bolt are not necessary for this option.

Positioning the Base Unit

Assemble the Base Unit and Base Unit Antenna and position the antenna vertically. This Base Unit uses an omnidirectional antenna that delivers signal in a circular pattern around the antenna. Place the Base Unit in desired location where you want to create a Cell Zone™ For the widest possible signal area, it is recommended that you position the Base Unit near the middle of a room. The Base Unit can be placed on a flat surface (e.g., a bookshelf, desk, end table, etc.) and performs best when located at least 4 feet above the floor or approximately the height of a cell phone when it is typically in use (avoid placing the Base Unit on the floor).

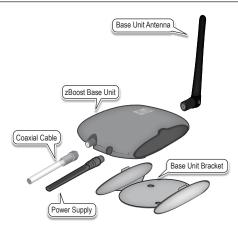


zBoost Base Unit Assembly

Keep the Base Unit at least 2 feet away

from other cords, metal objects or other wireless devices such as wireless routers or wireless access points. The zBoost DataBlast performs best when there are no obstructions between the zBoost Base Unit and your mobile device.

Note: The Base Unit can be easily mounted on a wall by first removing the Silver bracket from the Base Unit (see "zBoost Base Unit Assembly" above) and using 2 mounting screws (not provided) to affix to wall - keeping the antenna vertical.

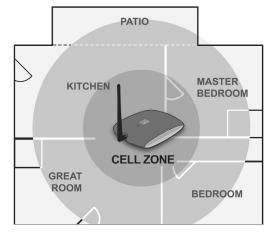

Remember, the zBoost DataBlast requires at least 15 feet of vertical separation between the Base Unit and the Signal Antenna. Generally, increasing this distance (up to 40 feet) will increase the performance and decreasing the distance will limit zBoost performance.

Running the Coaxial Cable from the Signal Antenna to the Base Unit.

Use the provided 50 feet of RG-59 coax cable to connect the Signal Antenna and the Base Unit. Run the cable along a descending pipe or through a wall that leads closest to the location of the Base Unit

To run the cable from exterior to interior through a window, an 8 inch window-entry cable is available for purchase (Part: <u>YX030-08W</u>). Should you need additional cable length, 15 foot, RG-6 extensions (Part: <u>YX030-15W</u>) are available at www.Wi-Ex.com.


Please note: the maximum recommended length for RG-6 is 65. For lengths above 65 feet, upgrade to RG-11. Maximum recommended length for RG-11 is 120 feet.

NOTE: Refrain from securing cable or drilling holes until the system has been tested.

Connect the zBoost Base Unit to Power

Connect the zBoost Base Unit to the provided power supply and plug into a power outlet.

Upon initial power up, a solid GREEN light should appear indicating normal conditions. If a RED light appears, adjustments may be needed to optimize performance. If you find the increased signal coverage is acceptable, however, no additional adjustments are needed. See Base Unit Light Indicator section (page 10) for more information.

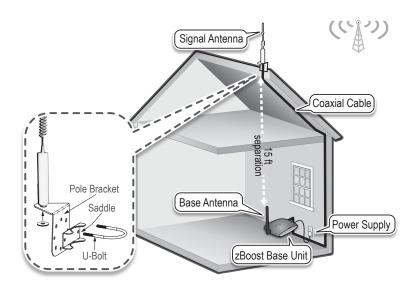

Confirm That Your zBoost is Working Properly

- Unplug the Base Unit power cord.
- 2. Turn off your cell phone.
- 3. Plug the power cord into the Base Unit.
- 4. Hold your cell phone about 5 feet from the Base Unit and then turn it on. Wait up to 1 minute for the cell phone to register the signal coming from the Base Unit.
- 5. If the signal meter shows improvement, your zBoost unit is working properly.

When your zBoost system is in place and fully connected, walk throughout your home or office and verify that you have fast, reliable data speeds. If the signal strength has improved, your zBoost is working. Remember, coverage varies based on outdoor signal level, building construction, and antenna placement. Coverage in adjoining rooms will be reduced by walls and building materials.

Improving Your Coverage Area

Should you desire to improve coverage, you may:

- Relocate the Signal Antenna in order to capture a better signal –higher is usually better.
- Increase the distance between the Base Unit Antenna and the Signal Antenna.
- Purchase an upgrade antenna available at www.Wi-Ex.com

NOTE: The zBoost YX550 requires at least 15 feet of vertical separation between the Base Unit and the Signal Antenna. Generally, increasing this distance (up to 40 feet) will increase the performance and decreasing the distance will limit zBoost performance.

Keep the Base Unit off the floor and at least 2 feet away from other cords, metal objects or other wireless devices such as wireless routers or wireless access points. The zBoost DataBlast performs best when there are no obstructions between the zBoost Base Unit and your mobile device.

Note



Cell phone signal bars are approximate and vary from phone to phone. The number of bars can fluctuate widely, depending on the location of the phone, the position or angle of the phone, weather, etc. Most cell phone signal meters update every 6 to 10 seconds. An increase of only one bar typically indicates a 4x to 10x signal increase.

8 9

zBoost Base Unit Light Indicators

At Initial Power Up Only

Solid GREEN	Normal condition at power up.	
Slowly Alternating RED and GREEN	zBoost is working, but at reduced performance and coverage due to "non-ideal" setup.	
	Solution: Increase the distance between antenna and amplifier to achieve maximum performance and coverage.	
Fast Flashing RED	Indicates insufficient distance between the antenna and the amplifier. The amplifier is operating at significantly reduced coverage.	
	Solution: Increase space between base unit and antenna.	
Solid RED	System is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation.	
	Solutions: ① Move away from receiving antenna with your cell phone. ② Move antenna away from other devices	
Fast Alternating RED and GREEN followed by no light	The amplifier is disabled.	
Tollowed by Ho light	Solution: Unplug your system and re-power.	

After Initial Power Up

Solid GREEN	Normal condition
Solid RED	System is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation.
	Solution: Unplug your system. Re-orient your Signal Antenna and/or Base Unit to reduce the excessive signal source. Plug your system back in. If still solid red, call customer support 1-800-871-1612.

Technical Specifications

Product Specifications for zBoost YX550 SOHO DataBlast Series

	Specifications for VLTE Band	Specifications for ALTE Band	Specifications for AWS Band	
Frequency	Uplink: 776 to 787MHz Downlink: 746 to 757MHz	Uplink: 704 to 716MHz Downlink: 734 to 746MHz	Uplink: 1710 to 1755MHz Downlink: 2110 to 2155MHz	
Band supported	13	17	4	
Networks	LTE (Verizon)	LTE (AT&T)	AWS	
Output Power	+20dBm in UL and +13dBm in DL	+20dBm in UL and +13dBm in DL	+20dBm in UL and +10dBm in DL	
General Specifications for all zBoost DataBlast Models				
System Gain		60dB		
Power Consumption – Power Supply Current		3W standby; 7W max signal - 2.0A Max		
Wall Supply Input ; Voltage		100-240VAC, 50-60 Hz; 5.0VDC		
Input and Output Impedance		TNC Connector: 50ohm; F Connector:75 ohm		
System Certifications		FCC Parts 15 & 27, Industry Canada		
Base Unit Size and Weight		5" x 7" x 1.25" – 9 oz.		
Operating Conditions		Indoor Use Only (40° - 105° F)		
Coverage (open areas)		Up to 2500 square feet		

This product uses patented technology to protect the carrier network

This product is covered by patent US 7,706,744. Other U.S. and foreign patents pending.

Frequently Asked Questions

What can I expect my cell phone signal range and strength to be inside my home or office?

The closer you are to the base, the stronger the signal. This will vary with different conditions. Some of the conditions that will affect the improved data coverage area are signal strength outdoors, the type of building materials in the home, the placement of the unit and the antenna's proximity to cellular towers.

You can expect that your indoor coverage will be improved. You will experience faster, more reliable data where you didn't before. The degree of improvement will depend upon many factors. The intent of zBoost products are to bring outside coverage inside. Just as the signal bars move up and down when outside, the boosted signal will fluctuate in a similar fashion.

Is a cellular phone signal booster the same as a wireless router; will it help my WiFi signal?

The Wi-Ex® unit will not help your WiFi service. The WiFi in your home or office operates on a different frequency.

Why isn't my cell phone indicating more signal with more bars?

You may not always observe more bars on your signal meter because of the signal spreading out from the antenna. If your phone has a dB meter, 3dB is a significant increase of 2x, 6dB is 4x, and 10dB is 10x. On a four bar phone, one "bar" equals about 10dB.

The increase in signal you will see depends upon:

- The level of signal at the Signal Antenna (outdoor)
- The care of the antenna placement (two feet away from metal, adequate antenna separation [15 vertical feet of separation is recommended])
- The signal already present inside (related to building losses)
- The distance of your phone/device from the Base Unit (signal spreads or diminishes rapidly with distance.)

There are usually several mobile devices in use at one time in my home, will your product boost all of our signals simultaneously?

The zBoost SOHO DataBlast is designed to cover multiple signals simultaneously and will allow multiple users to operate at the same time.

Does the zBoost work if you have no bars?

No, if no signal is present outdoors zBoost products will not work for you. Also, keep in mind if your best signal is 1 bar at the Signal Antenna, your coverage will be limited to a small room. You could improve that with an upgraded antenna (See page iv).

Warranty Information

Limited 1 Year Warranty

Register your product at www.Wi-Ex.com

Wi-Ex® warrants every Wi-Ex® product to be free from defects in material and workmanship under normal use for the warranty period of one year.

Who Is Covered?

You must have proof of purchase to receive warranty service. A sales receipt or other documentation showing the product purchased and the purchase date is considered proof of purchase. This limited warranty extends only to the original consumer purchaser or any person receiving the product as a gift from the original consumer purchaser and to no other purchaser or transferee. This warranty does NOT extend to commercial users.

What is Covered?

Warranty coverage begins the day you purchase the product. For one year from the original date, the Wi-Ex® Cell Phone Signal Booster will be repaired or replaced with a new, repaired, refurbished or comparable product (whichever is deemed necessary by Wi-Ex®) if it becomes defective or inoperative. The exchange will be made without charge to you for parts and labor. You will be responsible for the cost of shipping to the location designated by Wi-Ex®.

All products, including replacement products, are covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

What is Excluded?

Your warranty does NOT cover:

- Labor charges for set up of the unit.
- Product replacement because of misuse, accident, lightning damage, unauthorized repair or other cause not within the control of Wi-Ex®.
- Incidental or consequential damages resulting from the product. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.
- Any modifications or other changes to the product, including but not limited to software or hardware modifications in any way other than as expressly authorized by Wi-Ex® will void this limited warranty.
- Product that has been modified or adapted to enable it to operate in any country other than
 the country for which it was designed, manufactured, approved and/or authorized, or repair
 of products damaged by these modifications.

7BOOST® SOHO DATABLAST USER GUIDE

Make sure you keep...

Please keep your sales receipt or other document showing proof of purchase. Also, keep the original box and packing material in case you need to return your product.

Before requesting repair service...

Make sure you have at least 15 feet of vertical separation between Signal Antenna and Base Unit and that the Signal Antenna is at least 3 feet above metal.

If red light is on, system is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation. Please unplug your system. Re-orient your Signal Antenna and/or Base Unit to reduce the excessive signal source. Plug your system back in. If still solid red, call customer support 1-800-871-1612.

To get warranty service...

Warranty service will be provided by Wi-Ex®. If you believe you need service for your unit, contact Wi-Ex® at 1-800-871-1612 or support@wi-ex.com. A representative will go through a diagnostic checklist with you. If it is determined that the product needs to be returned for service or exchanged, you will receive a return merchandise authorization (RMA) number. The representative will give you complete shipping details. Do not return products to Wi-Ex® without a Return Authorization Number (RMA).

Reminder

Record the model and serial number found on the production	duct below:
Model #:	
Serial #:	
Purchase Date:	